


SECTION LC

LC

ENGINE LUBRICATION SYSTEM	LC- 2
ENGINE LUBRICATION SYSTEM — For Turbocharged Models	LC- 6
ENGINE COOLING SYSTEM	LC- 7
ENGINE COOLING SYSTEM — For Turbocharged Models	LC-13
SERVICE DATA AND SPECIFICATIONS (S.D.S)	LC-15
SPECIAL SERVICE TOOLS	LC-17

ENGINE LUBRICATION SYSTEM

Lubrication Circuit

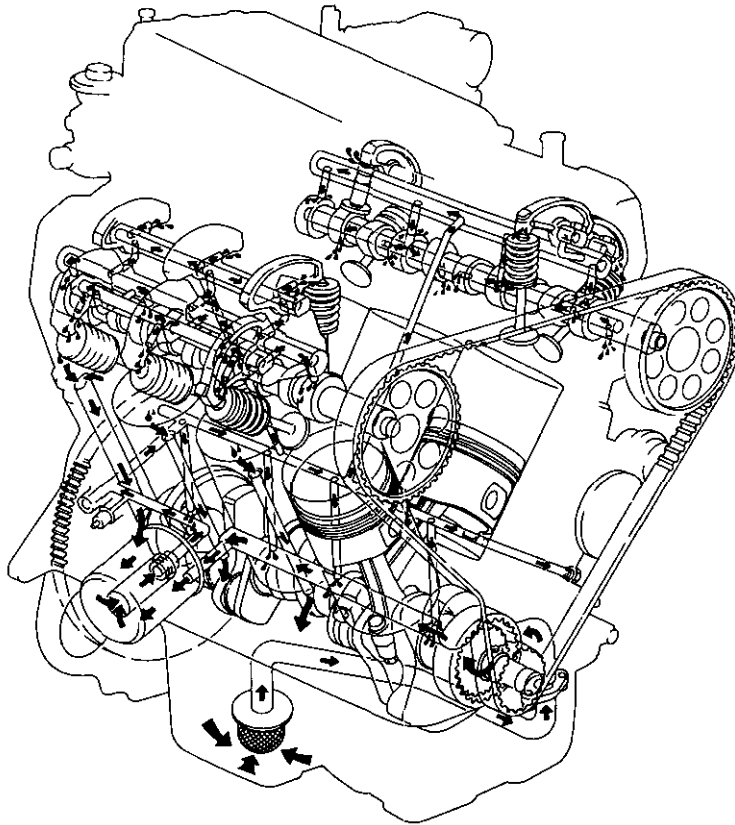

Note


← Oil passage

← Oil gallery in cylinder block *2

--- By-pass passage

*1 Additional lubrication circuit for turbocharged model

*2 Additional oil cooler for turbo A/T model

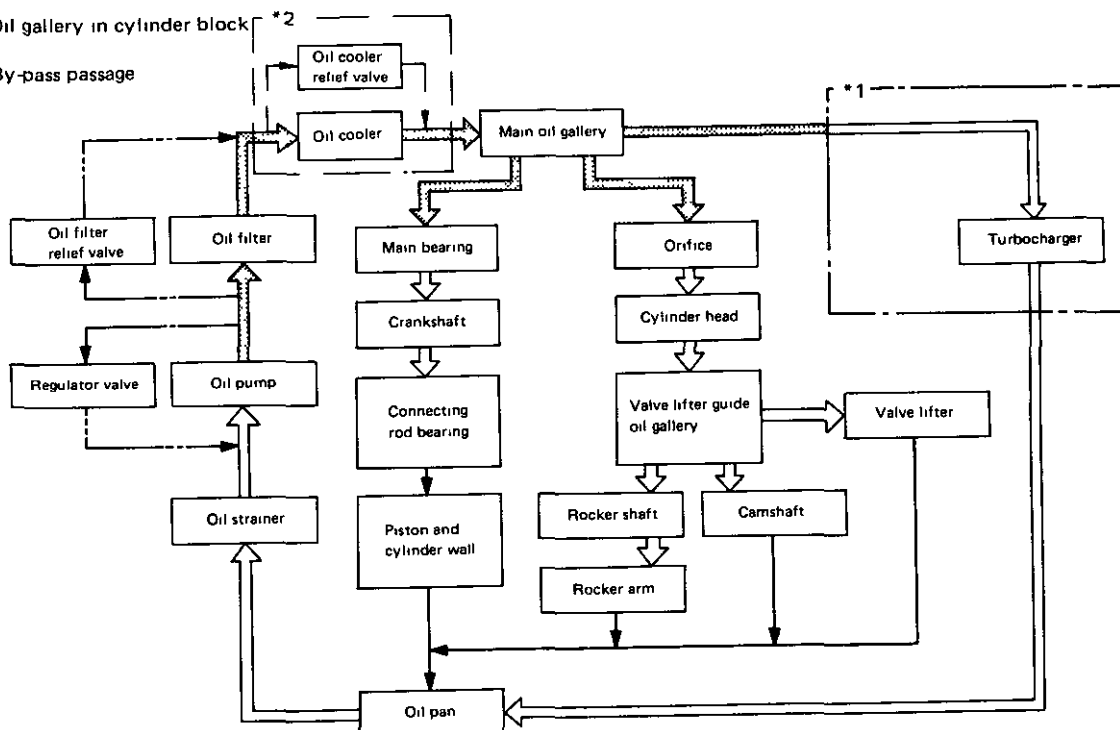


SLC729

ENGINE LUBRICATION SYSTEM

Oil Pressure Check (On-vehicle service)

Be careful not to burn yourself, as the engine and oil may be hot.

- 1 Warm up engine.
- 2 Stop engine and remove oil pressure switch

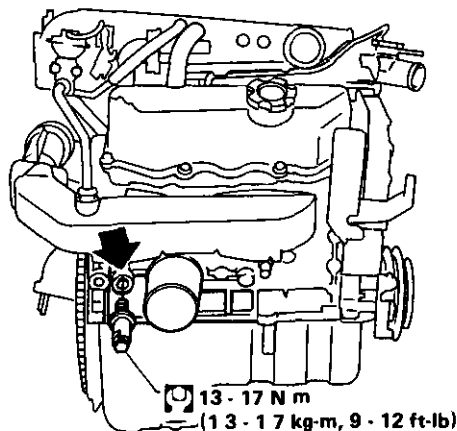


SLC545

- 3 Install pressure gauge with sealant.
- 4 Start engine and check oil pressure with engine running under no-load

Engine rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
1,200	196 (2, 28)
2,000	294 (3, 43)
4,000	392 (4, 57)

Oil pressure at idling should be more than 78 kPa (0.8 kg/cm², 11 psi).

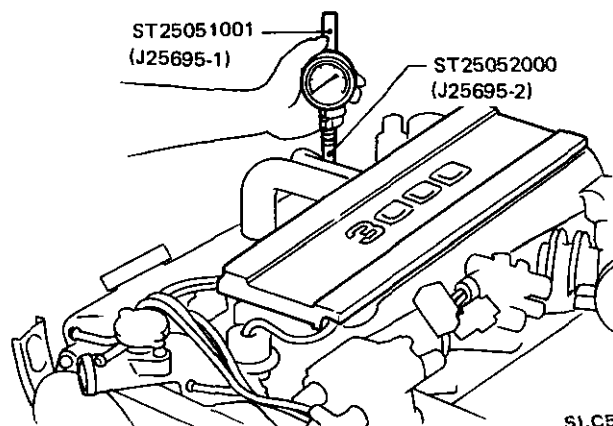

SLC546

5. Install oil pressure switch.

☐ : 13 - 17 N·m (1.3 - 1.7 kg-m, 9 - 12 ft-lb)

The above table shows data tested when SAE 10W-30 oil is used and oil temperature is between 77 and 83°C (171 and 181°F). Slight difference will be found because of oil viscosity or oil temperature. If difference is extreme, check oil passage and oil pump for oil leaks.


ENGINE LUBRICATION SYSTEM

Oil Pump Disassembly and Assembly


1. Drain oil
2. Remove oil pan
In case of on-vehicle service, refer to Oil Pan for removal in section EM
3. Remove oil pump assembly

When installing oil pump, apply engine oil to inner and outer gear.

Be sure that O-ring is properly fitted on.

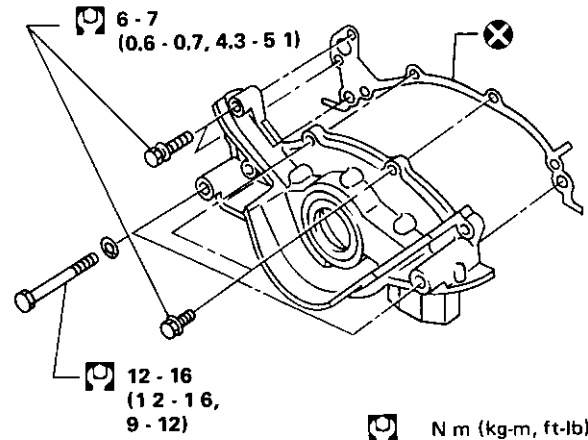

SLC936

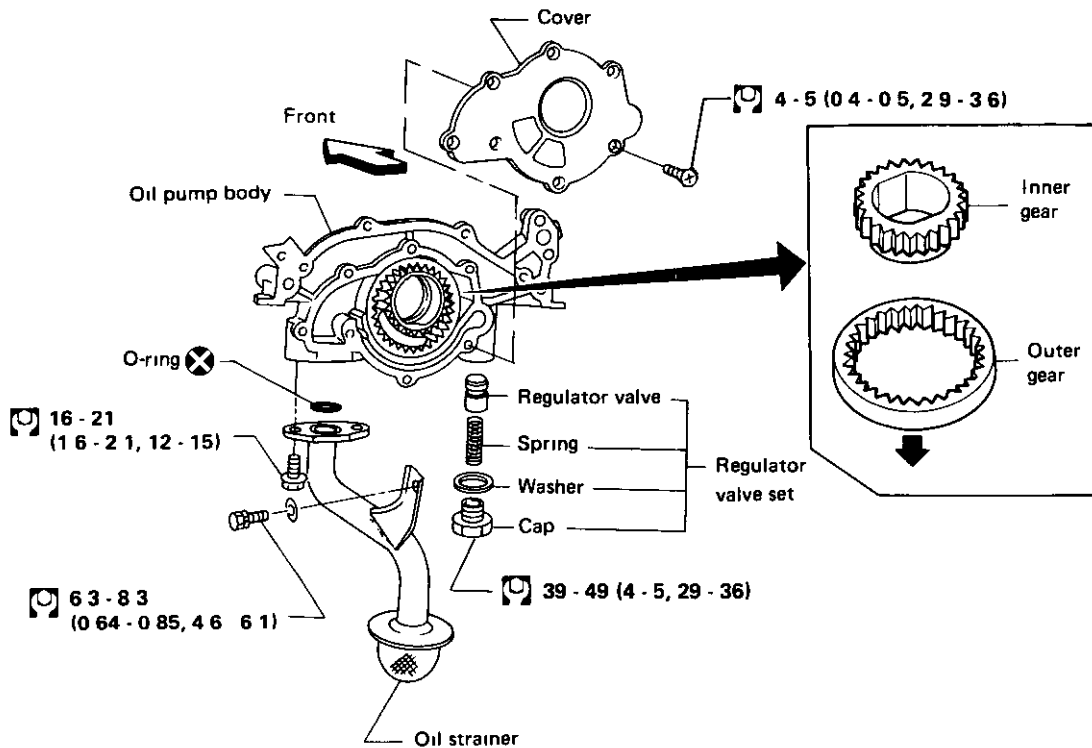

N m (kg-m, ft-lb)


SLC759

ENGINE LUBRICATION SYSTEM

Oil Pump Inspection


- 1 Visually inspect components for wear and damage
- 2 Check oil pressure regulator valve sliding surface and valve spring

If damaged, replace as a valve set.

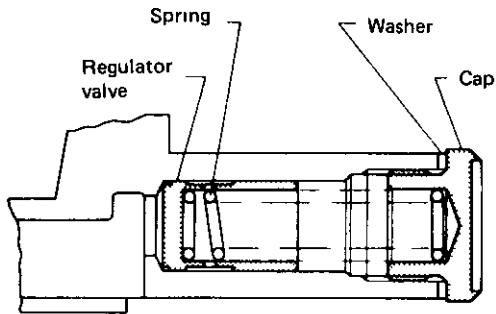


SLC295

3. Using a feeler gauge, check the following clearance.

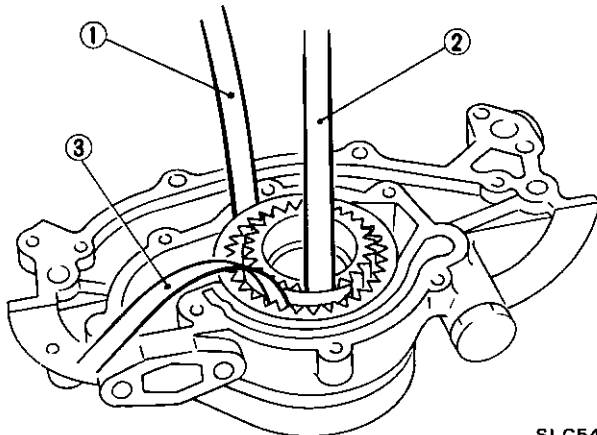

SLC549

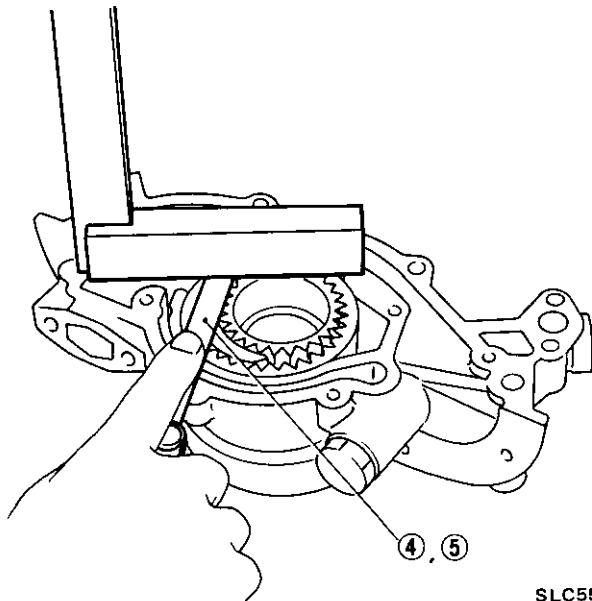

SLC550

If excessive wear is found, replace gear set or entire oil pump assembly.


Standard clearance:

Unit mm (in)

Body to outer gear clearance ①	0.11 - 0.20 (0.0043 - 0.0079)
Inner gear to crescent clearance ②	0.12 - 0.23 (0.0047 - 0.0091)
Outer gear to crescent clearance ③	0.21 - 0.32 (0.0083 - 0.0126)
Housing to inner gear clearance ④	0.05 - 0.09 (0.0020 - 0.0035)
Housing to outer gear clearance ⑤	0.05 - 0.11 (0.0020 - 0.0043)

Oil Pressure Relief Valve Inspection

Inspect for smooth operation by pushing ball.

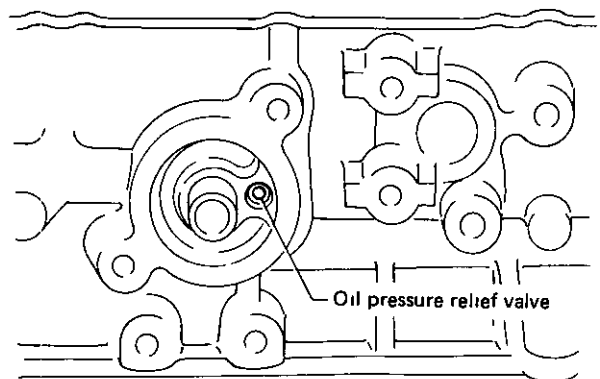

SLC551


Replace as a valve assembly, when replacing

ENGINE LUBRICATION SYSTEM — For Turbocharged Models

Removal and Installation

OIL DELIVERY SYSTEM

After installation, run engine for a few minutes and check for leaks.

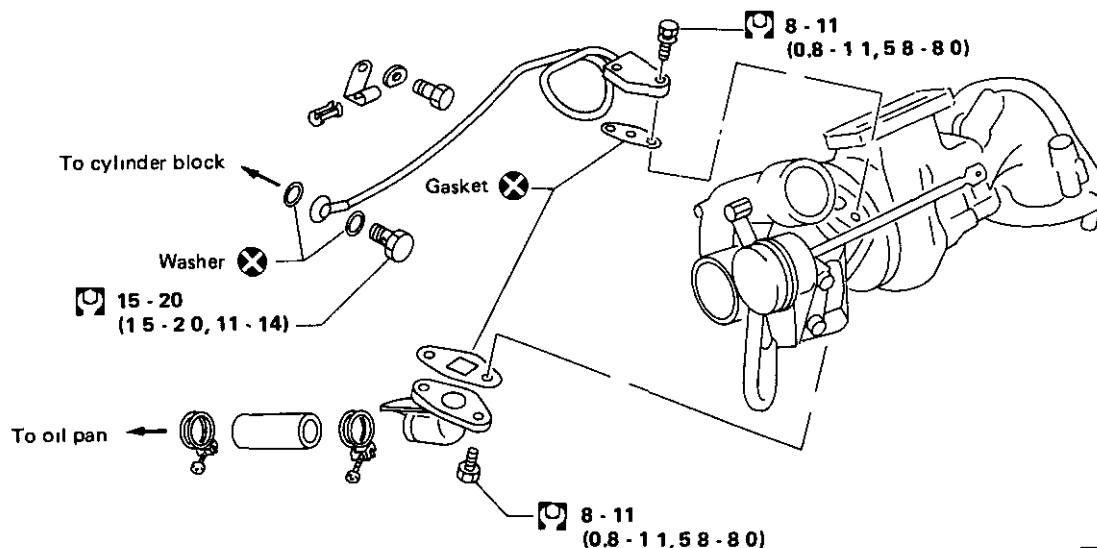


N m (kg-m, ft-lb)

SLC983

ENGINE OIL COOLER (A/T models)

Be careful not to burn yourself as engine oil is hot.

After installation, run engine for a few minutes and check for oil leaks.

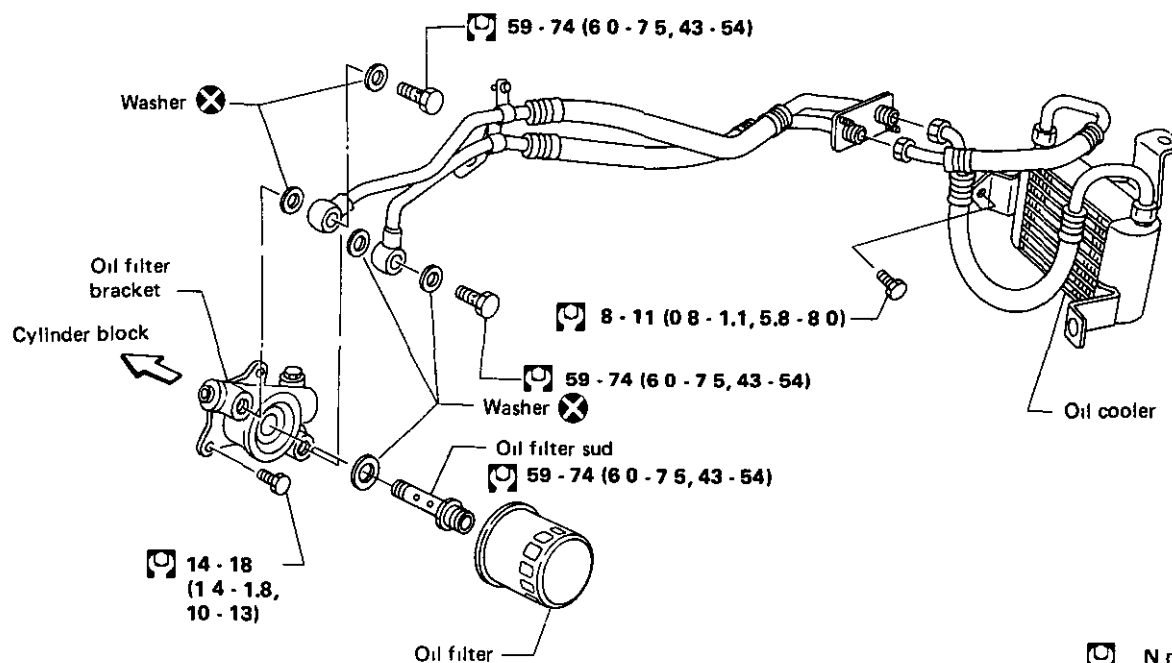

N m (kg-m, ft-lb)

SLC984

ENGINE COOLING SYSTEM


Cooling Circuit

To avoid danger of being scalded, never attempt to drain coolant when engine is hot.

If it is necessary to remove radiator cap when radiator is hot, turn cap slowly counterclockwise to the first stop. After all pressure in the cooling system is released, turn cap past the stop and remove it.

Always replace with new gasket and O-ring.

Refer to MA section for changing engine coolant.

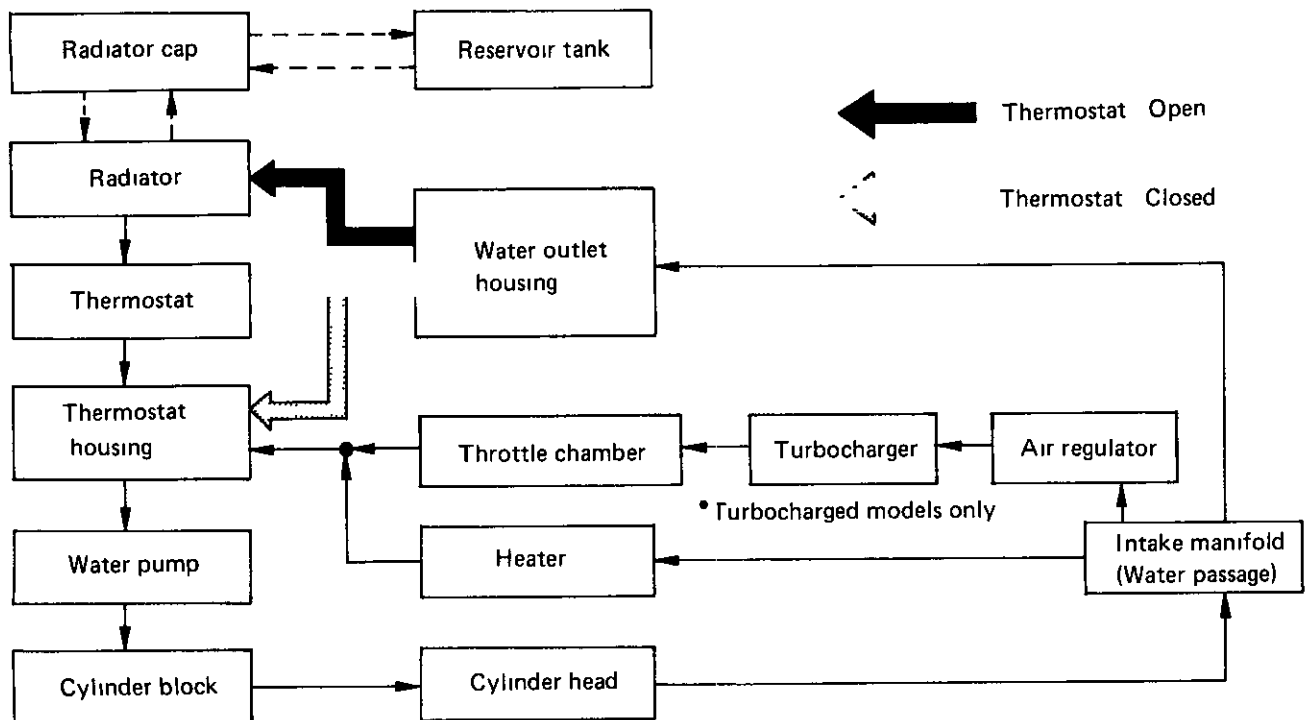

SLC728

ENGINE COOLING SYSTEM

Checking Cooling System

WARNING:

Never remove the radiator cap when the engine is hot; serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap and carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape and then turn the cap all the way off.

CHECKING COOLING SYSTEM HOSES


Check hoses for proper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

CHECKING COOLING SYSTEM FOR LEAKS

Apply pressure to the cooling system by means of a tester to check for leakage

Testing pressure:

157 kPa (1.6 kg/cm² , 23 psi)

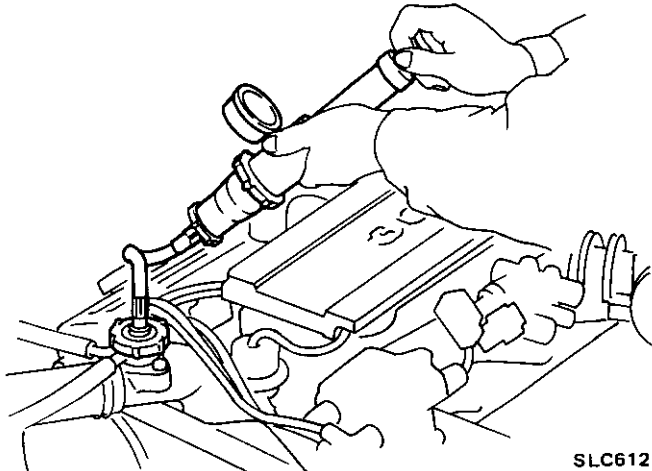


CHECKING RADIATOR CAP

Apply pressure to radiator cap by means of a cap tester to see if it is satisfactory.


Radiator cap relief pressure:

78 - 98 kPa (0.8 - 1.0 kg/cm² , 11 - 14 psi)

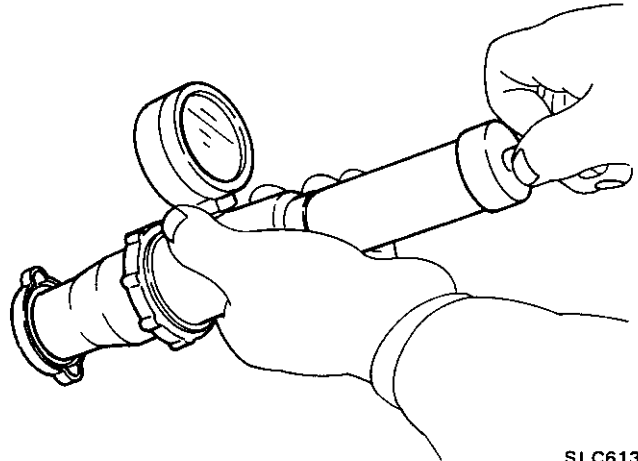

ENGINE COOLING SYSTEM

Water Pump Removal and Installation (On-vehicle service)

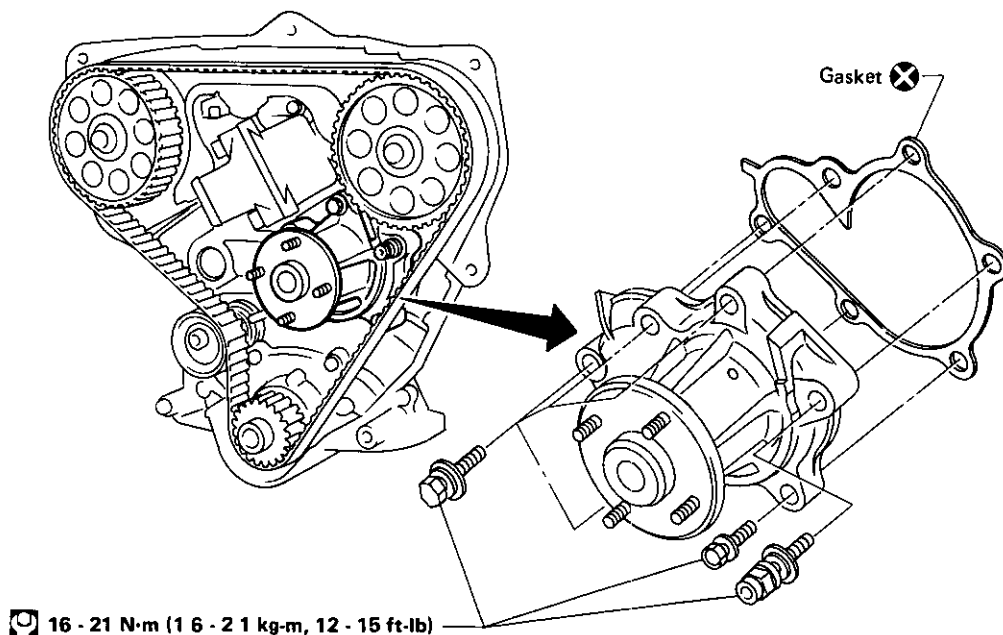


Water pump can not be disassembled and should be replaced as a unit.

To avoid deforming timing cover, make sure there is adequate clearance between cover and hose clamp. After installing water pump, connect hose and clamp securely, then check for leaks using cap tester.

SLC938

Drain coolant from drain plugs on both sides of cylinder block, and radiator.

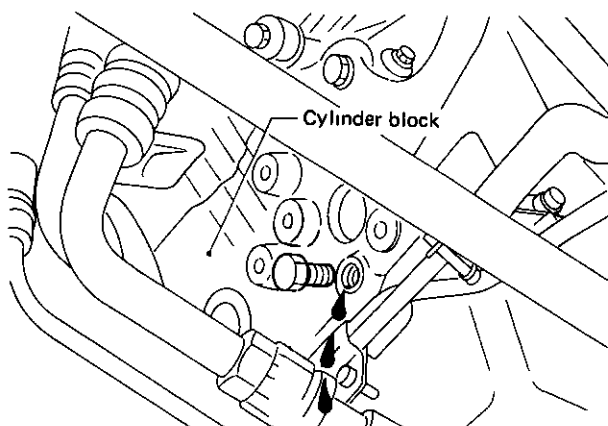


SLC815

CAUTION:

When removing water pump assembly, be careful not to get coolant on timing belt.

Water Pump Inspection


Check for excessive end play and rough operation

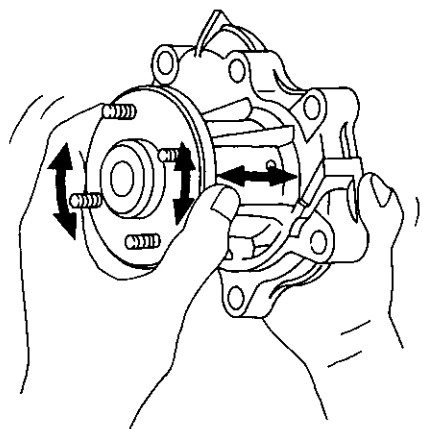

SLC738

ENGINE COOLING SYSTEM

Thermostat Description (Bottom by-pass coolant flow)

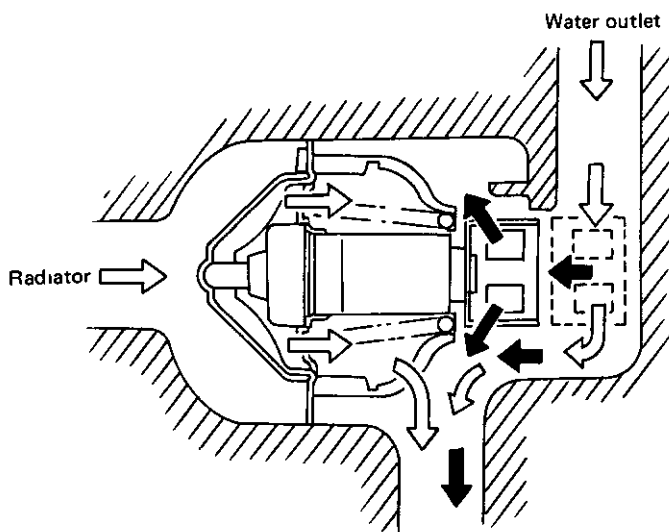

SLC565

Thermostat	Coolant flow out through water outlet
→ Open	A little
→ Close	Much


Thermostat Removal and Installation

CAUTION:

Drain coolant from drain cocks on cylinder block side and radiator.

Remove radiator shroud, cooling fan and water suction pipe securing bolt, then remove thermostat.

After installation, run engine for a few minutes, and check for leaks.

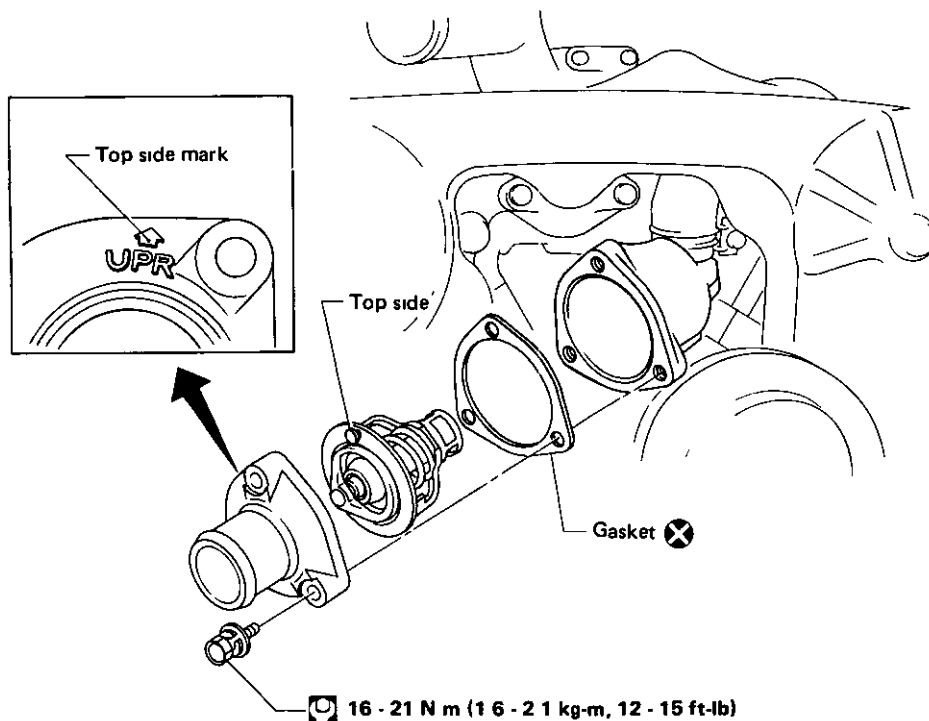


SLC939

ENGINE COOLING SYSTEM

Thermostat Inspection

1. Check for valve seating condition at ordinary temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.

	Standard
Valve opening temperature °C (°F)	76.5 (170)
Maximum valve lift mm/°C (in/°F)	10/90 (0.39/194)

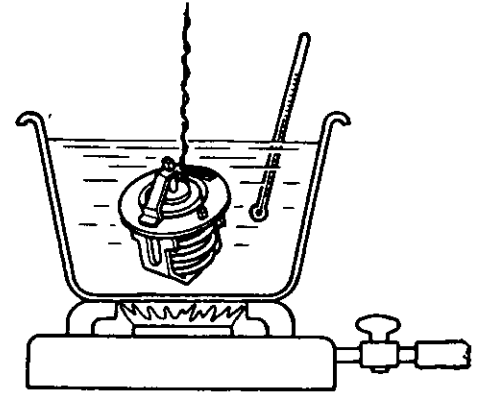


SLC343

3. Then check if valve closes at 5°C (9°F) below valve opening temperature.

Radiator Removal and Installation

Before removing radiator, remove front bumper assembly.


When filling radiator with coolant, refer to MA section.

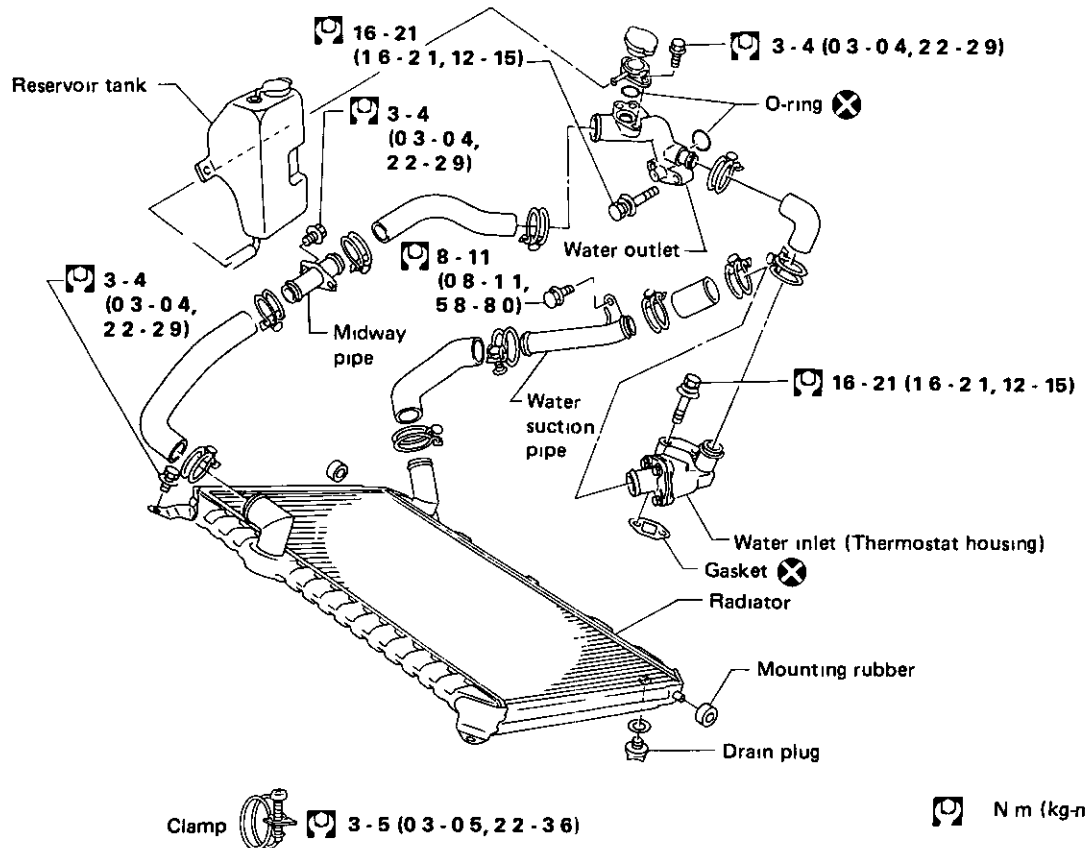

SLC985

ENGINE COOLING SYSTEM

Cooling Fan Disassembly and Assembly

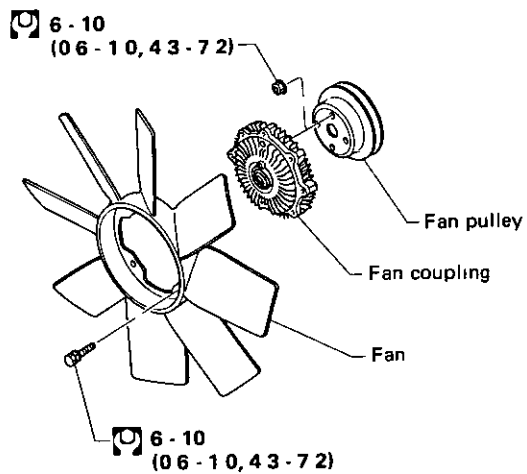


N m (kg-m, ft-lb)

SLC558

Cooling Fan Inspection



Check fan coupling for oil leakage or bent bimetal

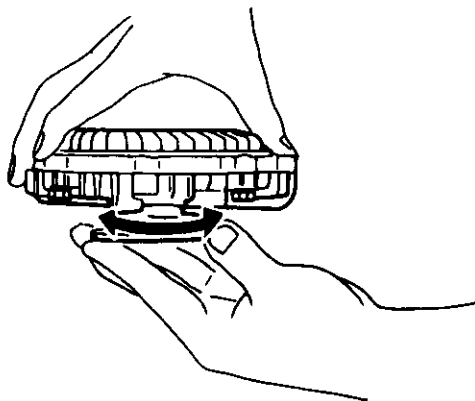

SLC072

ENGINE COOLING SYSTEM—For Turbocharged Models

Electric Cooling Fan Removal and Installation

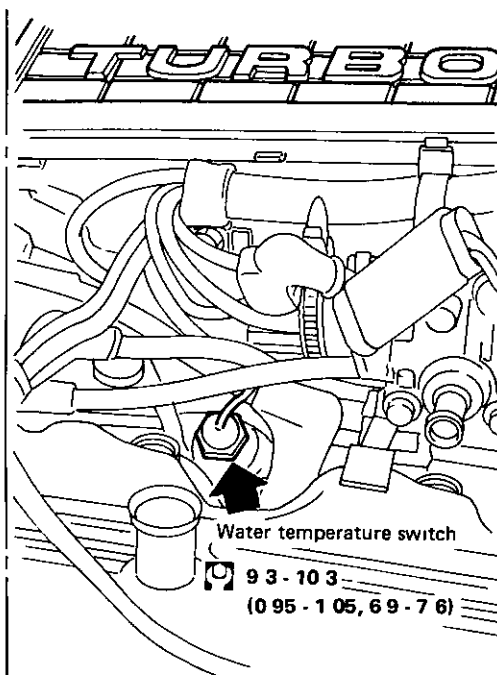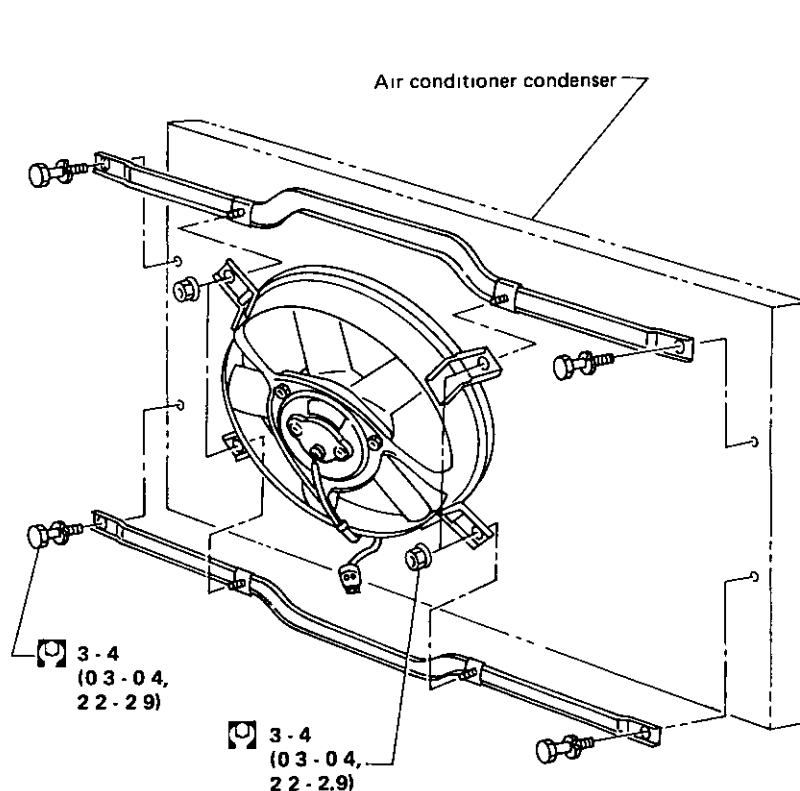

N m (kg-m, ft-lb)


SLC559

Water Temperature Switch Inspection

Check water temperature switch for proper operation

Operating temperature:

OFF → ON 100°C (212°F)

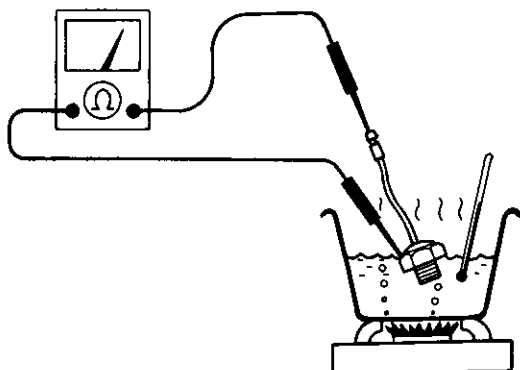


SEF738B

ENGINE COOLING SYSTEM—For Turbocharged Models

Coolant Delivery System Removal and Installation

After installation, run engine for a few minutes and check for leaks.

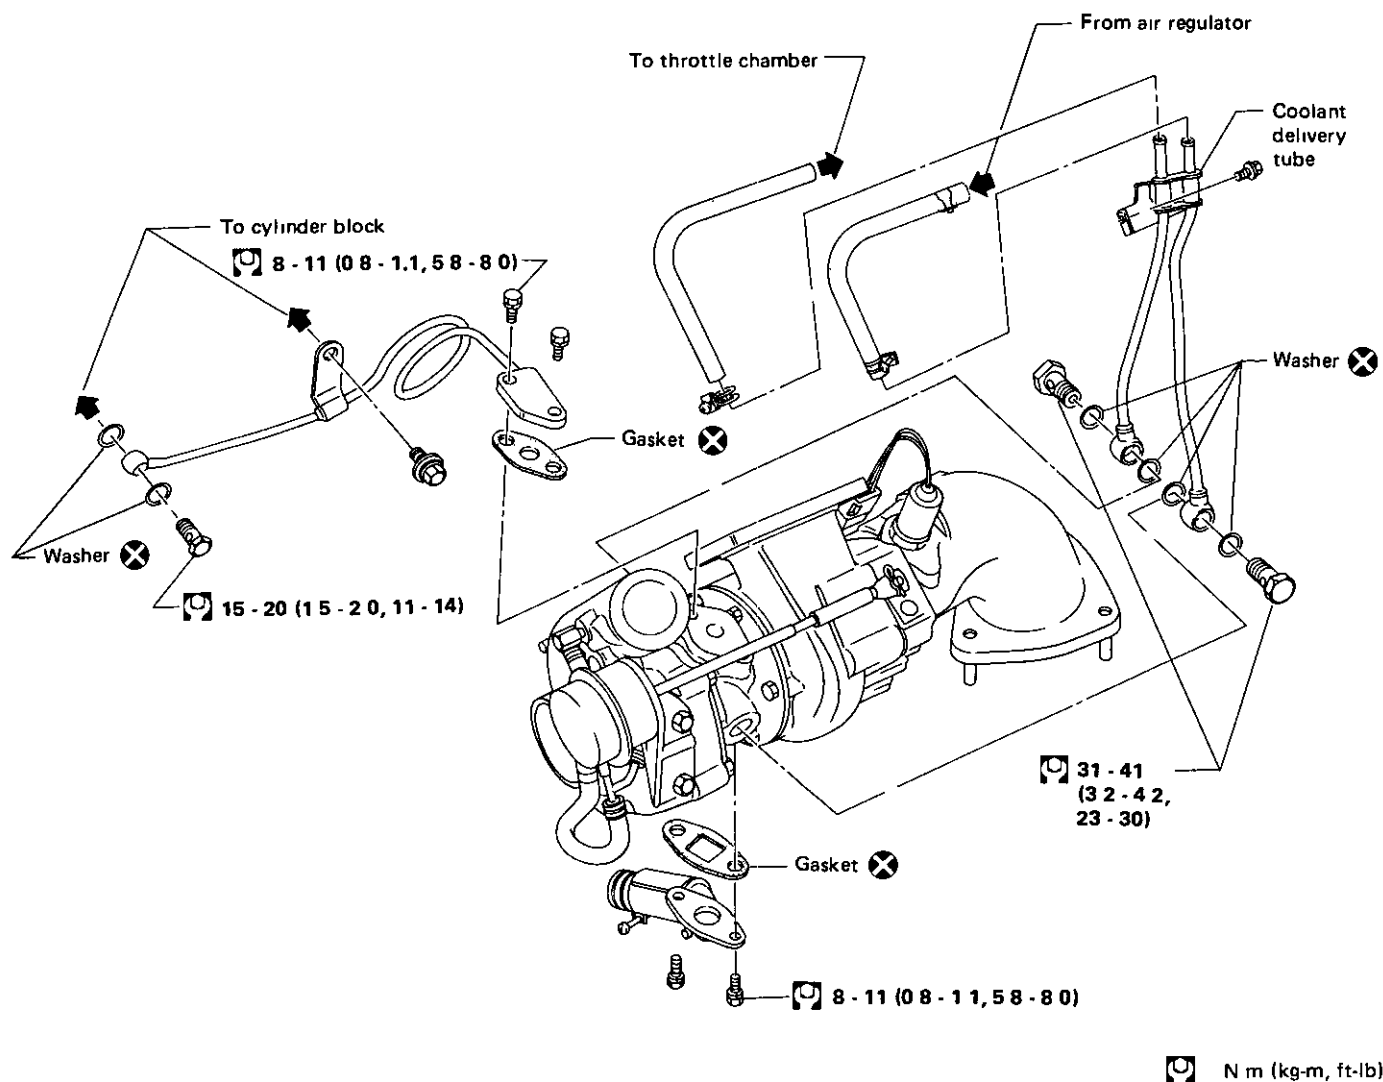

SLC986


SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Engine Lubrication System

Oil pressure check

Engine rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed	78 (0.8, 11)
1,200	196 (2, 28)
2,000	294 (3, 43)
4,000	392 (4, 57)

Oil pump

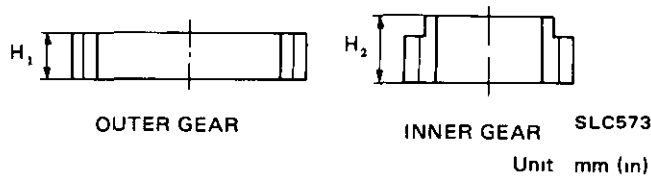

Height	H ₁	H ₂
Except turbo model	12.5 (0.492)	18.5 (0.728)
Turbo model	15.5 (0.610)	21.5 (0.846)

Unit mm (in)

Body to outer gear clearance ①	0.11 - 0.20 (0.0043 - 0.0079)
Inner gear to crescent clearance ②	0.12 - 0.23 (0.0047 - 0.0091)
Outer gear to crescent clearance ③	0.21 - 0.32 (0.0083 - 0.0126)
Housing to inner gear clearance ④	0.05 - 0.09 (0.0020 - 0.0035)
Housing to outer gear clearance ⑤	0.05 - 0.11 (0.0020 - 0.0043)

Oil pressure regulator valve

Opening pressure	373 - 412
kPa (kg/cm ² , psi)/rpm	(3.8 - 4.2, 54 - 60)/2,000

Tightening torque

Unit	N·m	kg·m	ft·lb
Oil pump securing bolt			
M6	6 - 7	0.6 - 0.7	4.3 - 5.1
M3	12 - 16	1.2 - 1.6	9 - 12
Oil pump cover screw	4 - 5	0.4 - 0.5	2.9 - 3.6
Regulator valve cap bolt	39 - 49	4 - 5	29 - 36
Oil strainer bolt			
M6	6.3 - 8.3	0.64 - 0.85	4.6 - 6.1
M8	16 - 21	1.6 - 2.1	12 - 15
Oil pressure switch	13 - 17	1.3 - 1.7	9 - 12
Turbocharger			
Oil inlet tube to cylinder block	15 - 20	1.5 - 2.0	11 - 14
Oil inlet tube to turbocharger	8 - 11	0.8 - 1.1	5.8 - 8.0
Oil outlet pipe to turbocharger	8 - 11	0.8 - 1.1	5.8 - 8.0
Engine oil cooler			
Oil filter bracket to cylinder block	14 - 18	1.4 - 1.8	10 - 13
Oil filter stud	59 - 74	6.0 - 7.5	43 - 54
Oil cooler tube to oil filter bracket	59 - 74	6.0 - 7.5	43 - 54
Oil cooler	8 - 11	0.8 - 1.1	5.8 - 8.0

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Engine Cooling System

Radiator

	Unit	kPa (kg/cm ² , psi)
Cap relief pressure		78 - 98 (0.8 - 1.0, 11 - 14)
Leakage test pressure		157 (1.6 - 23)

Thermostat

	Standard
Valve opening temperature °C (°F)	76.5 (170)
Maximum valve lift mm/°C (in/°F)	10/90 (0.39/194)




Temperature switch (Turbocharged model)

Operating temperature		
OFF → ON	°C (°F)	100 (212)

Tightening torque

Unit	N·m	kg·m	ft·lb
Water pump securing bolt	16 - 21	1.6 - 2.1	12 - 15
Thermostat housing securing bolt	16 - 21	1.6 - 2.1	12 - 15
Water inlet securing bolt	16 - 21	1.6 - 2.1	12 - 15
Water outlet securing bolt	16 - 21	1.6 - 2.1	12 - 15
Coolant filler housing bolt	3 - 4	0.3 - 0.4	2.2 - 2.9
Radiator securing bolt	3 - 4	0.3 - 0.4	2.2 - 2.9
Radiator hose clamp	3 - 5	0.3 - 0.5	2.2 - 3.6
Midway pipe to body securing bolt	3 - 4	0.3 - 0.4	2.2 - 2.9
Water suction pipe securing bolt	8 - 11	0.8 - 1.1	5.8 - 8.0
Cooling fan securing bolt	6 - 10	0.6 - 1.0	4.3 - 7.2
Fan coupling securing bolt	6 - 10	0.6 - 1.0	4.3 - 7.2
Electric cooling fan securing bolt and nut	3 - 4	0.3 - 0.4	2.2 - 2.9
Water temperature switch	9.3 - 10.3	0.95 - 1.05	6.9 - 7.6
Coolant delivery tube	31 - 41	3.2 - 4.2	23 - 30

SPECIAL SERVICE TOOLS

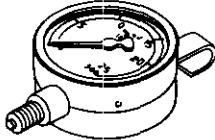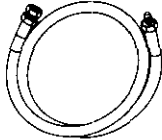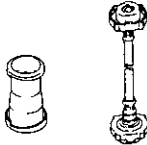Tool number (Kent-Moore No)	Tool name
ST25051001 (J25695-1)	Oil pressure gauge 
ST25052000 (J25695-2)	Hose 
EG17650301 (-)	Radiator cap tester adapter 

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Courtesy Nissan grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Courtesy Nissan and its structure and organization, all graphics and coding are considered intellectual property of Courtesy Nissan. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Courtesy Nissan for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Courtesy Nissan makes no warranty as to its use or performance. COURTESY NISSAN DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COURTESY NISSAN BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
(800)527-1909

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Texas, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Courtesy Nissan.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.