 
 
 



1994 NISSAN 300ZX ECES WIRING DIAGRAM

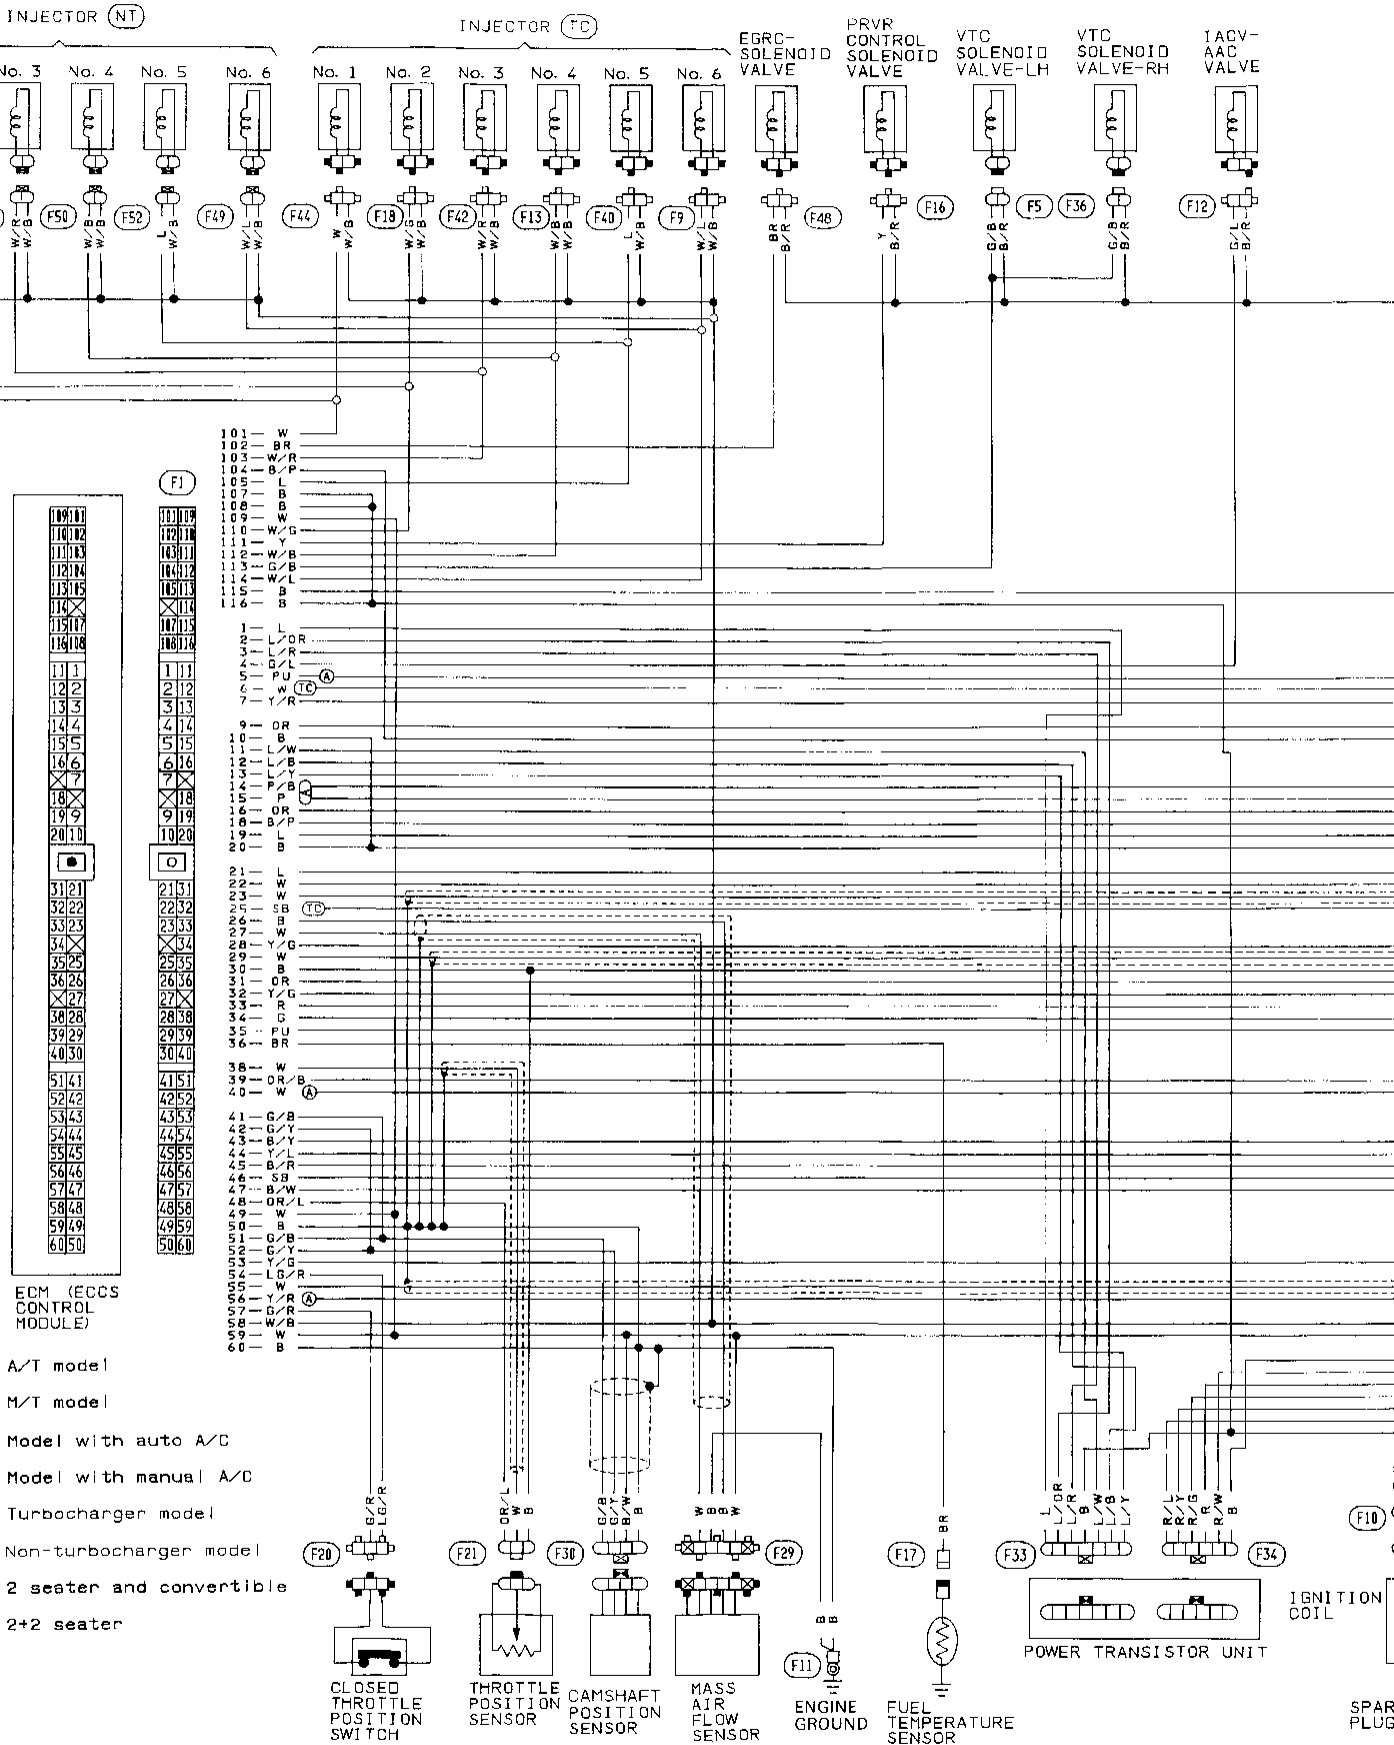

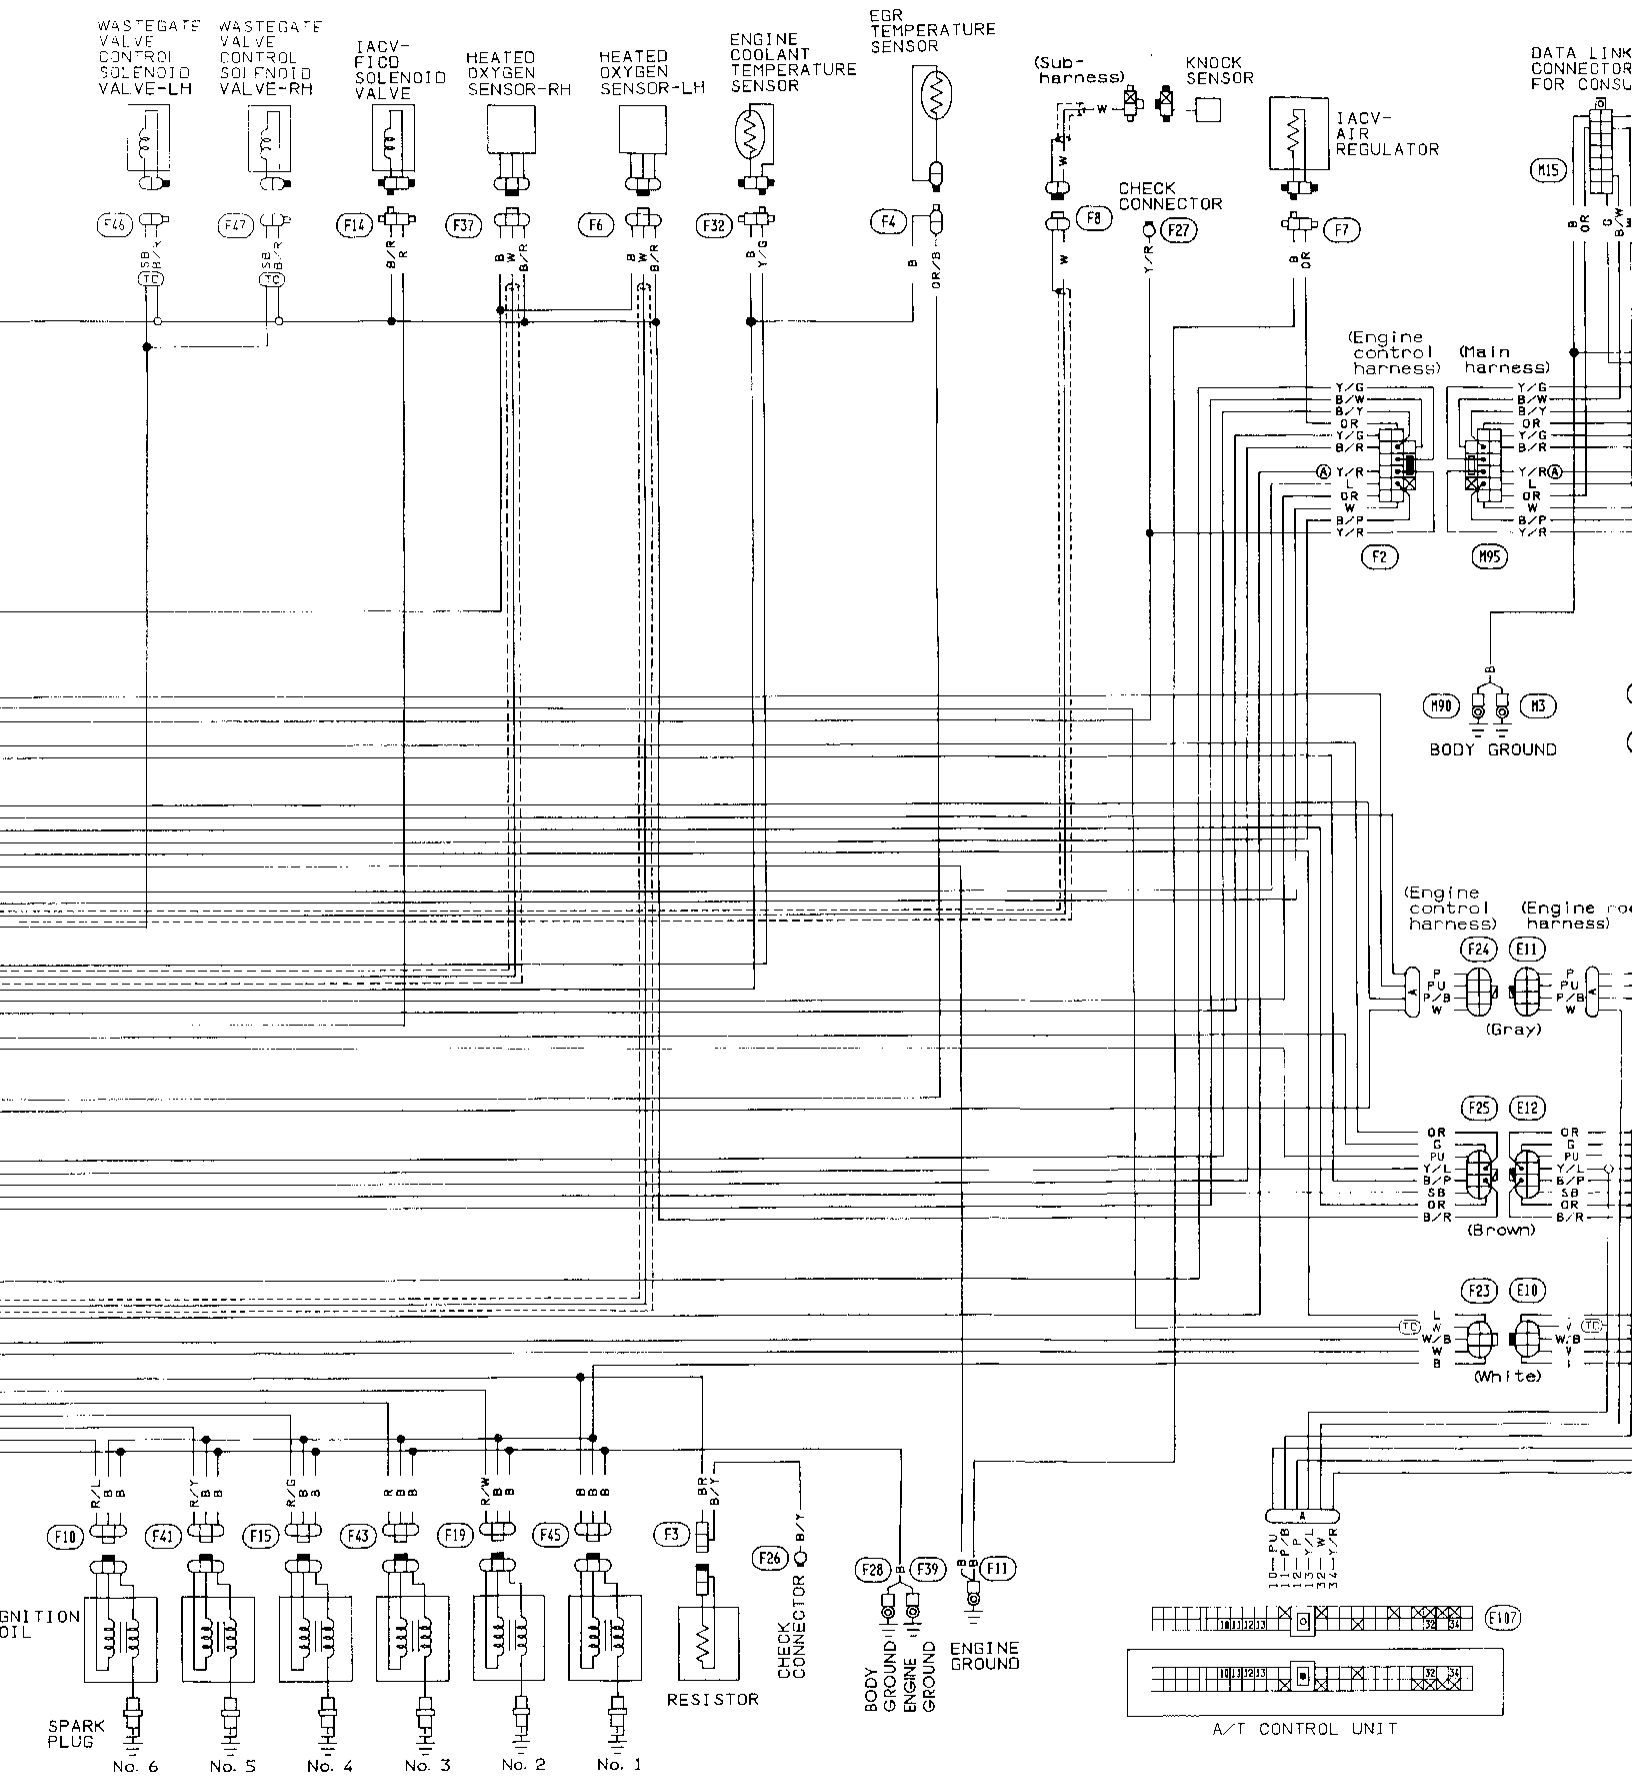

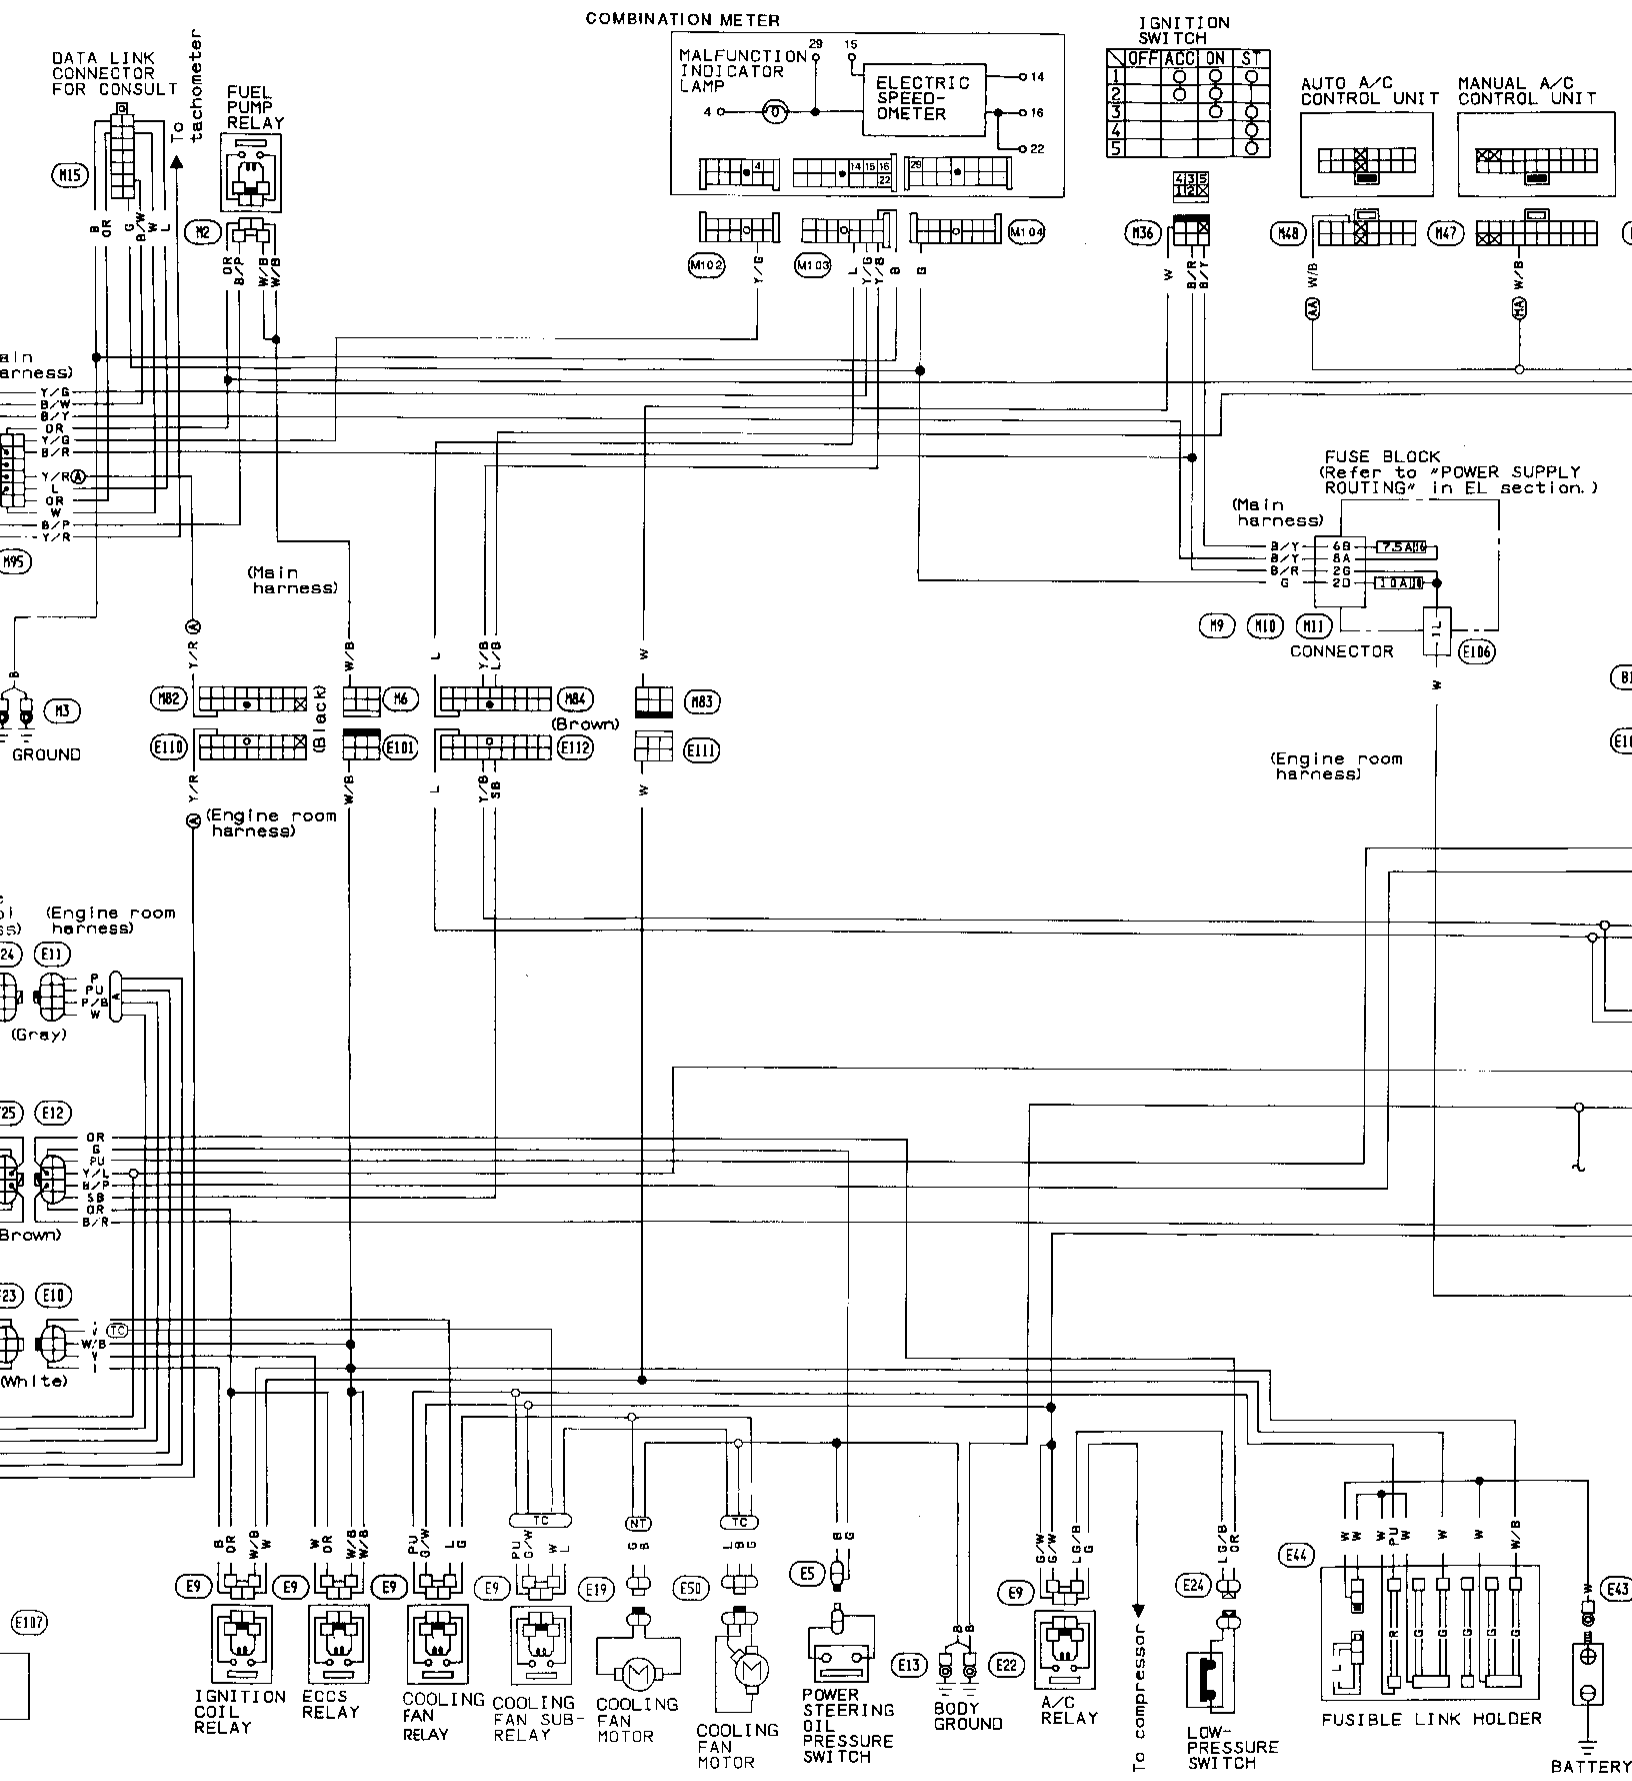

 
COMBINATION METER

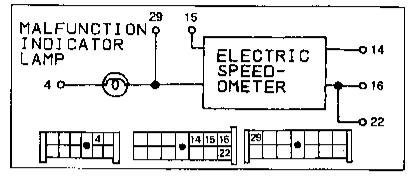


IGNITION SWITCH

	OFF	ACC	ON	ST
1	○	○	○	○
2	○	○	○	○
3	○	○	○	○
4	○	○	○	○
5	○	○	○	○















 
AUTO A/C CONTROL UNIT MANUAL A/C CONTROL UNIT

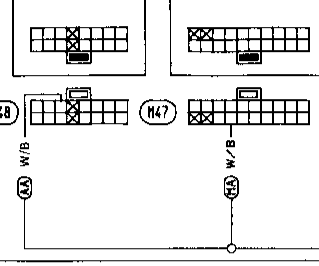

 
FUSE BLOCK
(Refer to "POWER SUPPLY ROUTING" in EL section.)

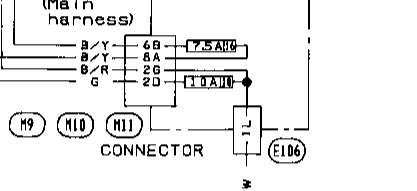




DATA LINK CONNECTOR FOR CONSULT

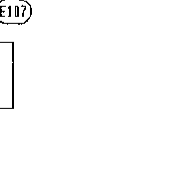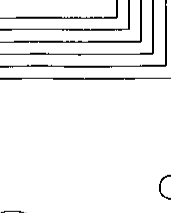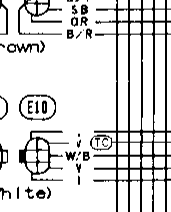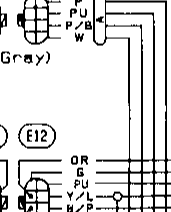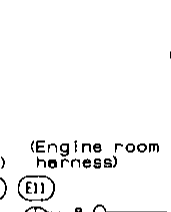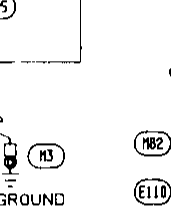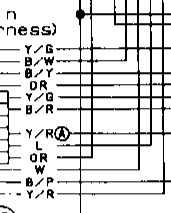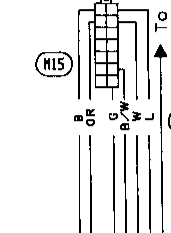               


BATTERY

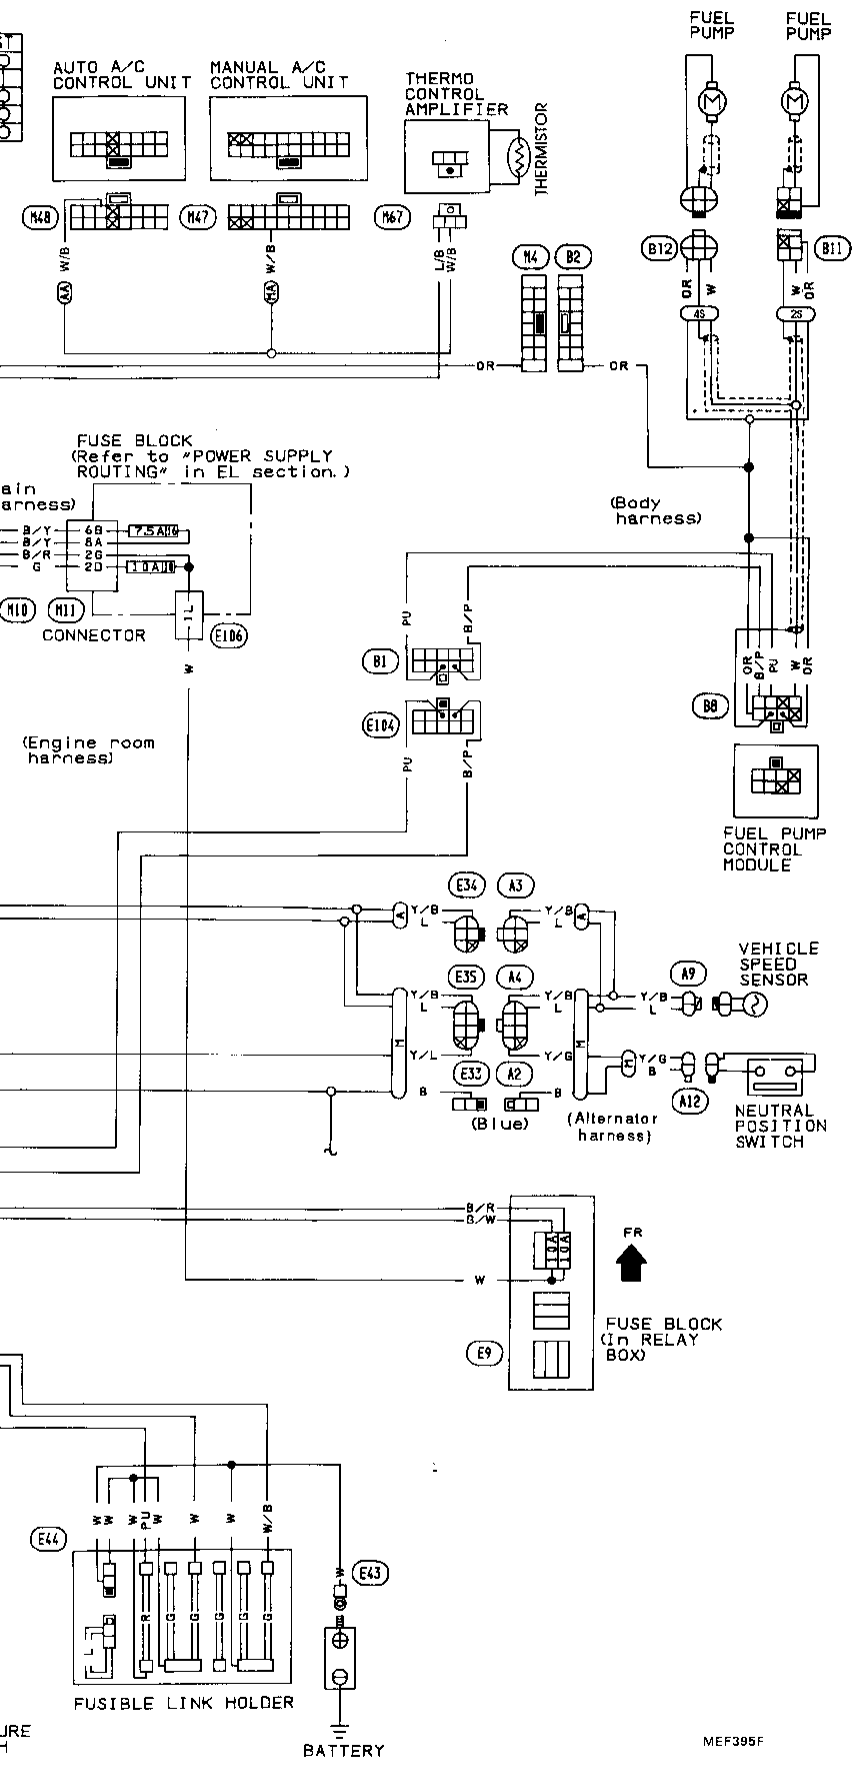 


1994 NISSAN 300ZX CIRCUIT DIAGRAM

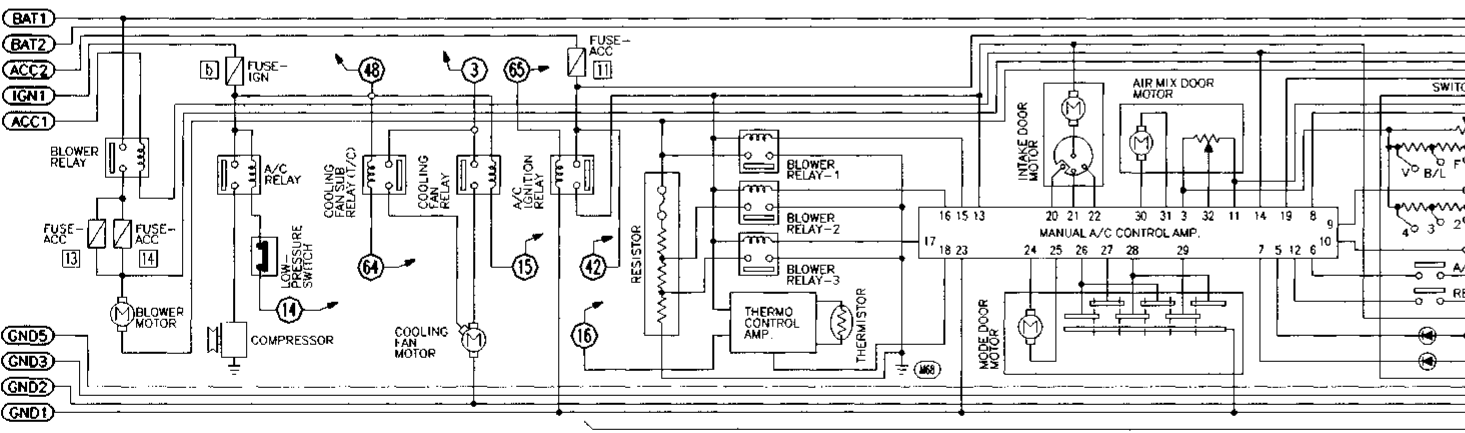 
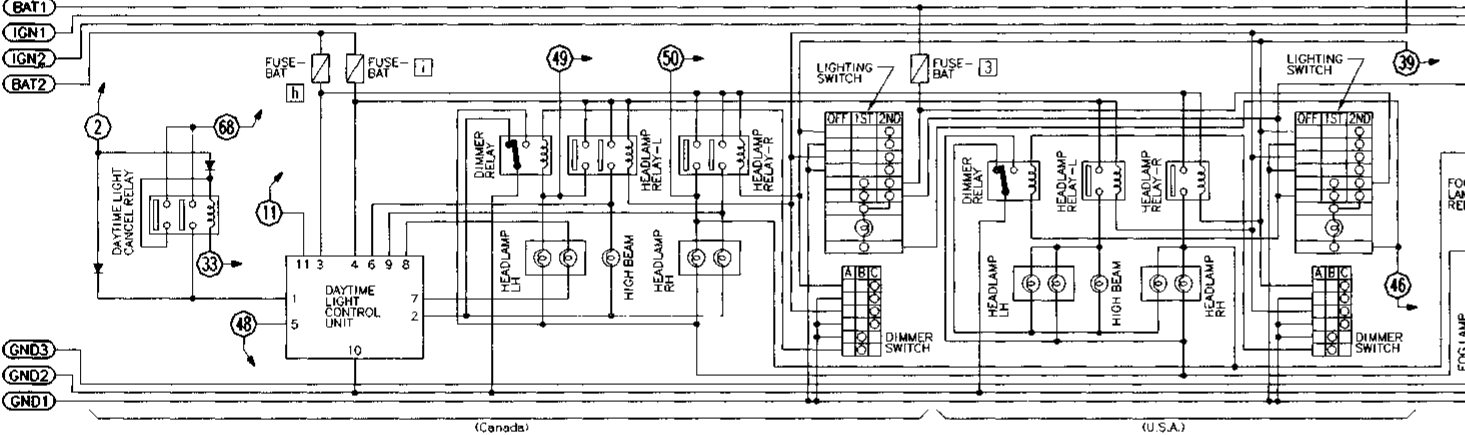 
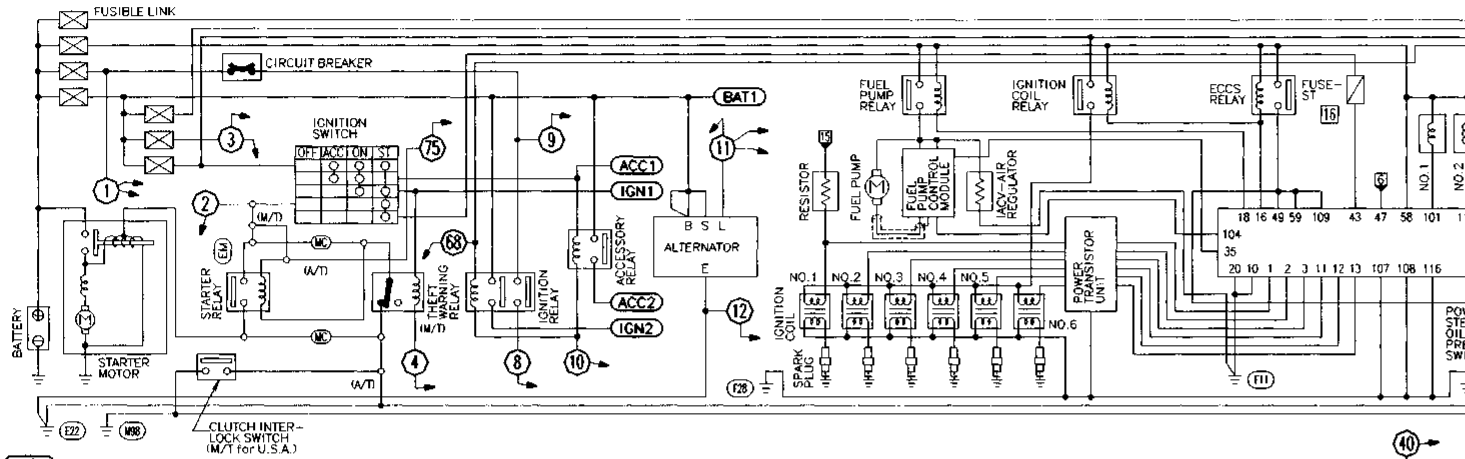 





- | | | | | | | | | | | | | | | | | |
|---|----|----|----|----|----|----|----|---|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | | | | | |
| 2 | 33 | 68 | 48 | 11 | 14 | 48 | 64 | 3 | 65 | 15 | 16 | 42 | 50 | 46 | 39 | 40 |

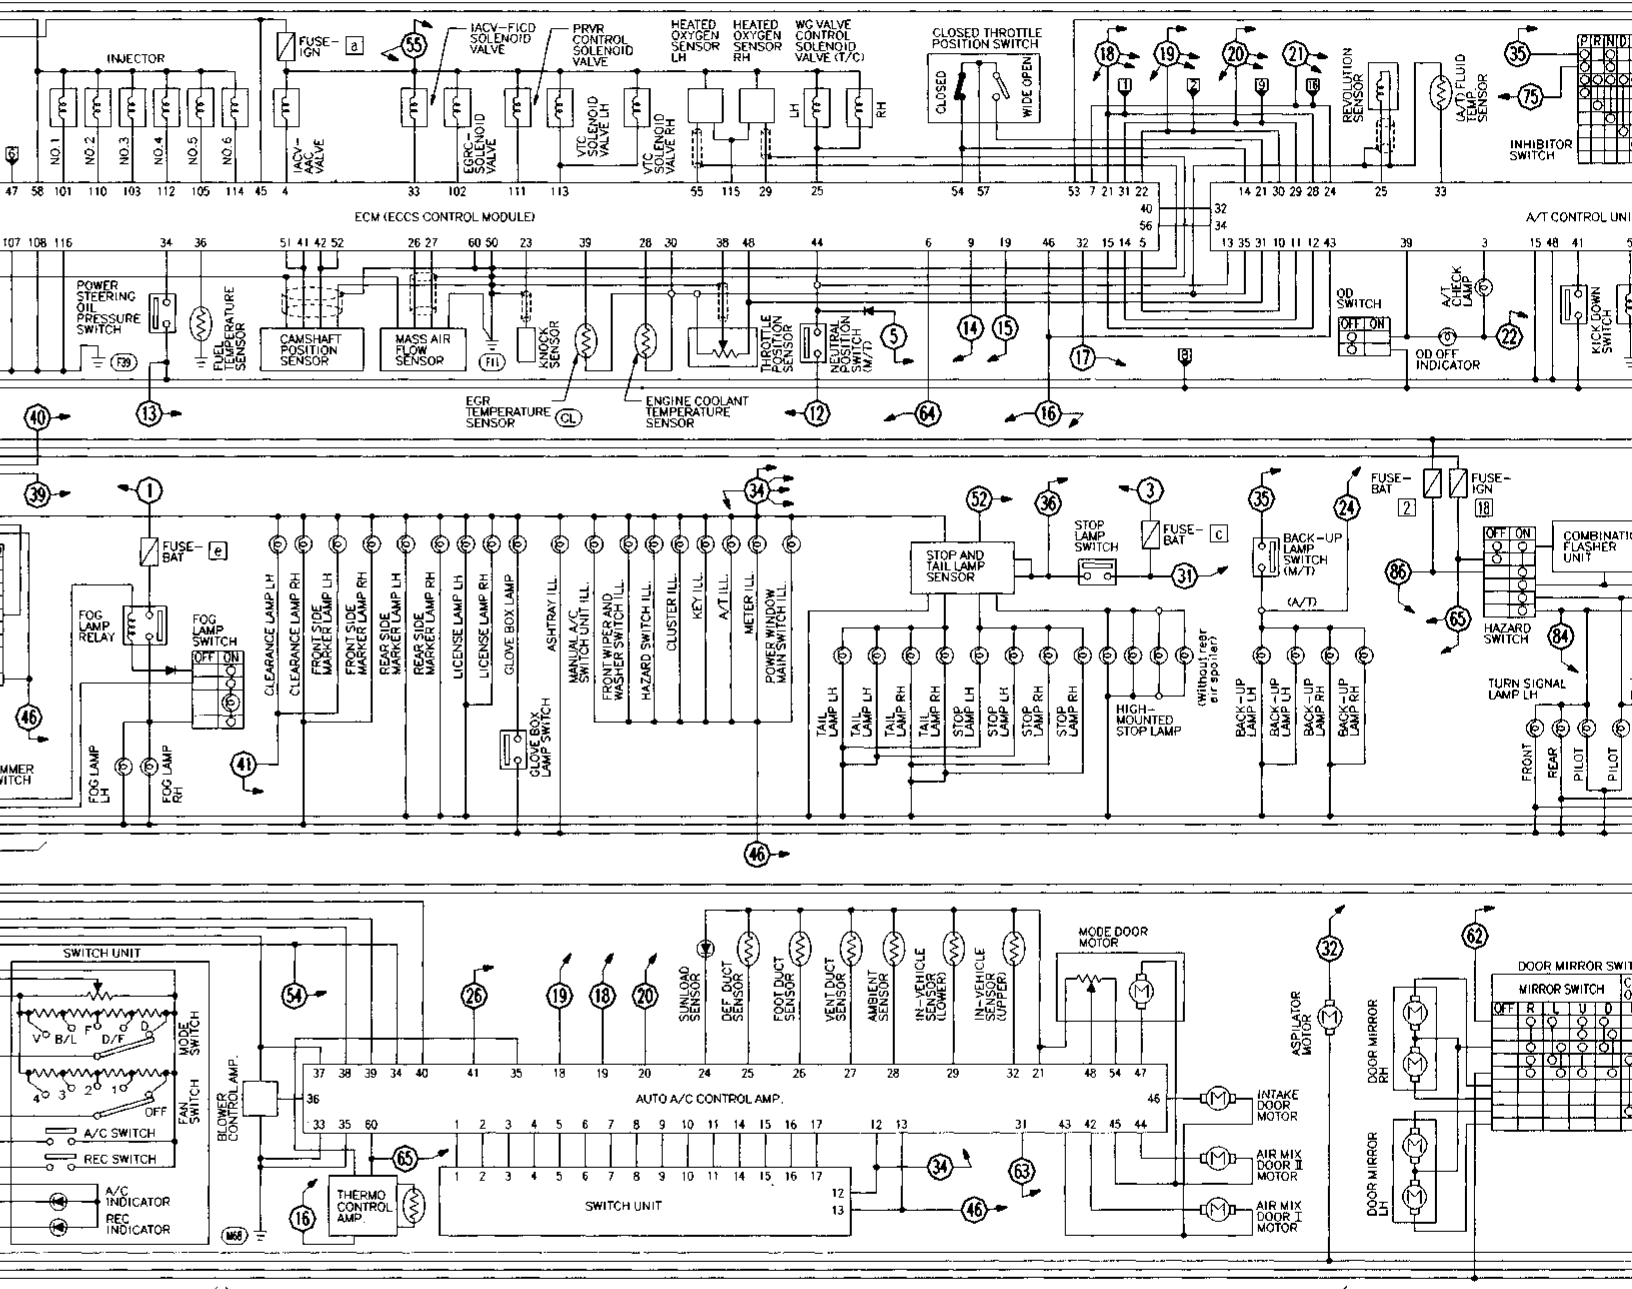 


Auto A/C model

 

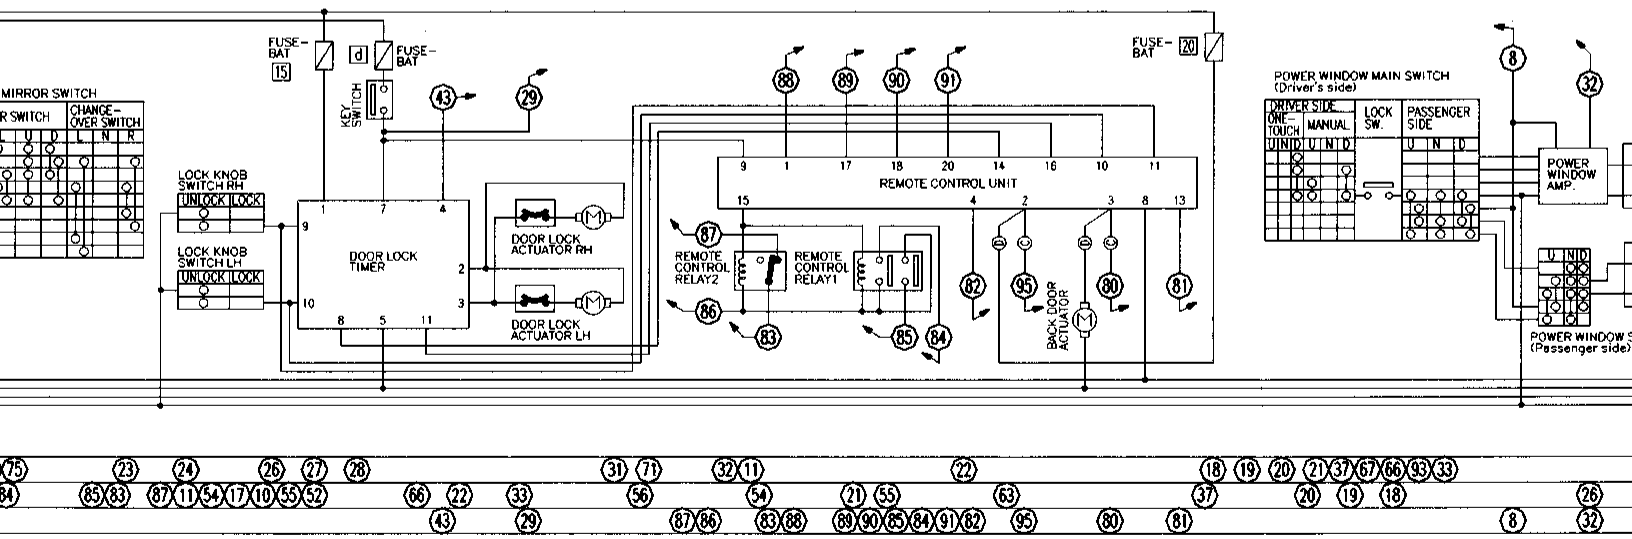 
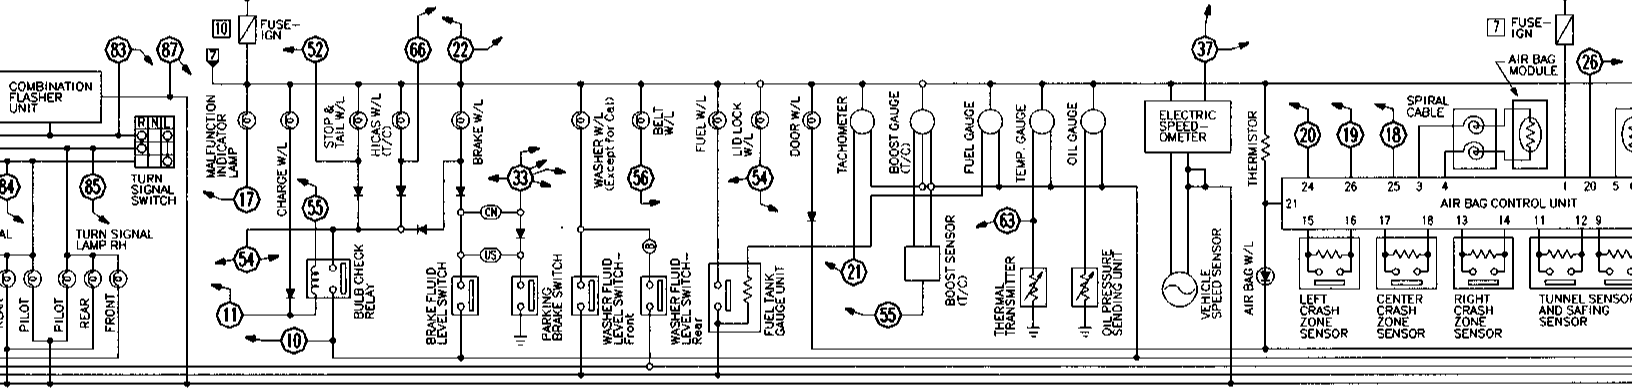 
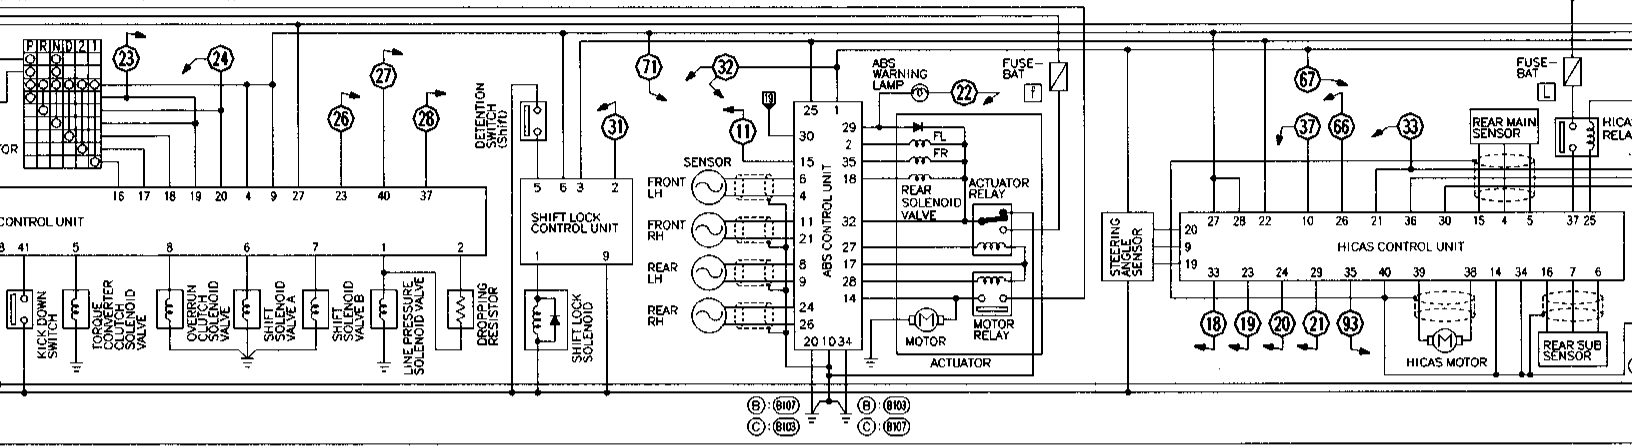 


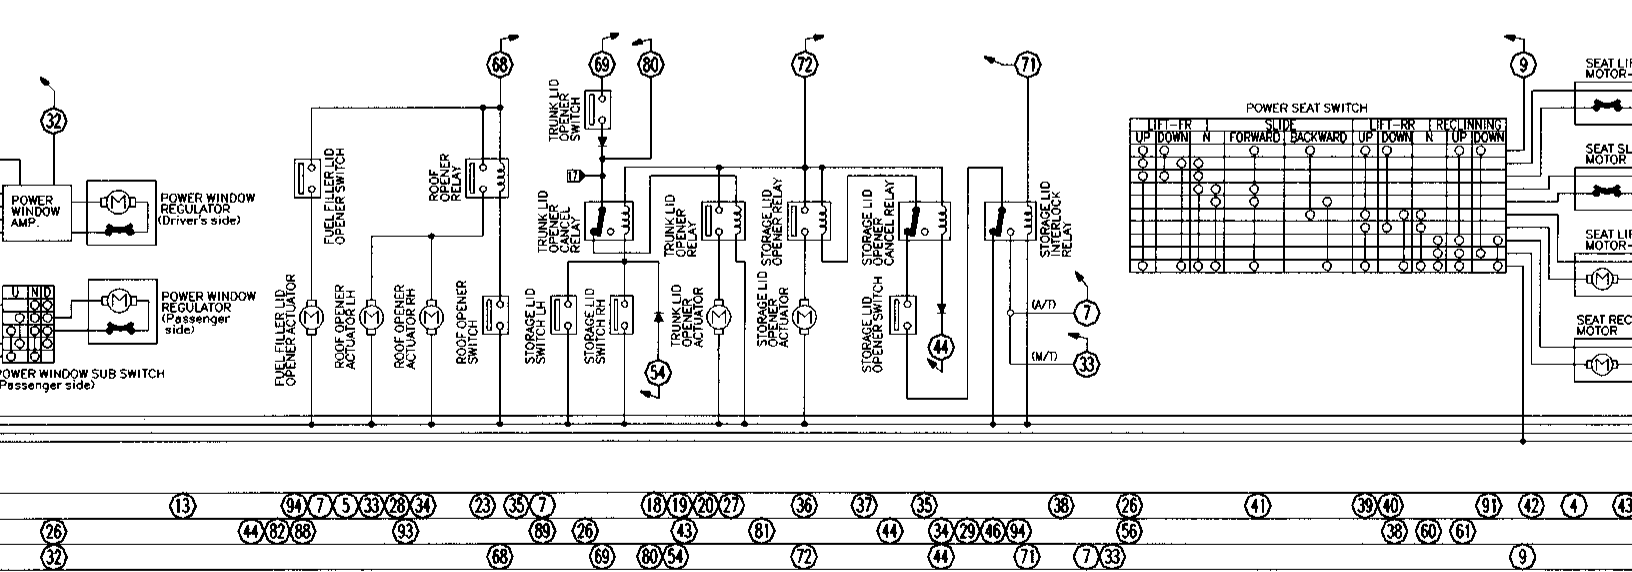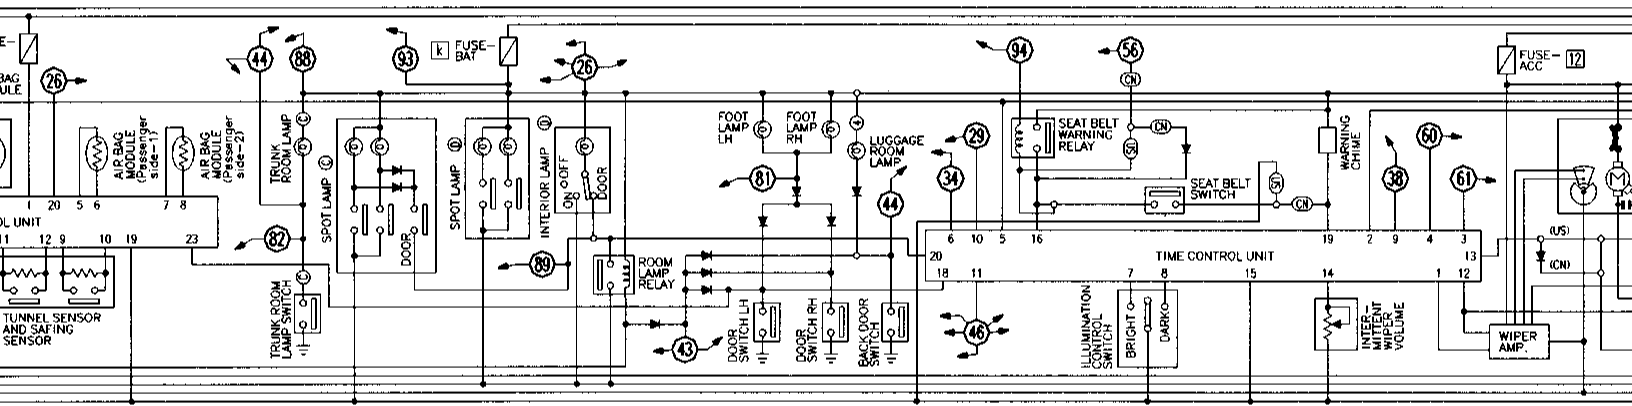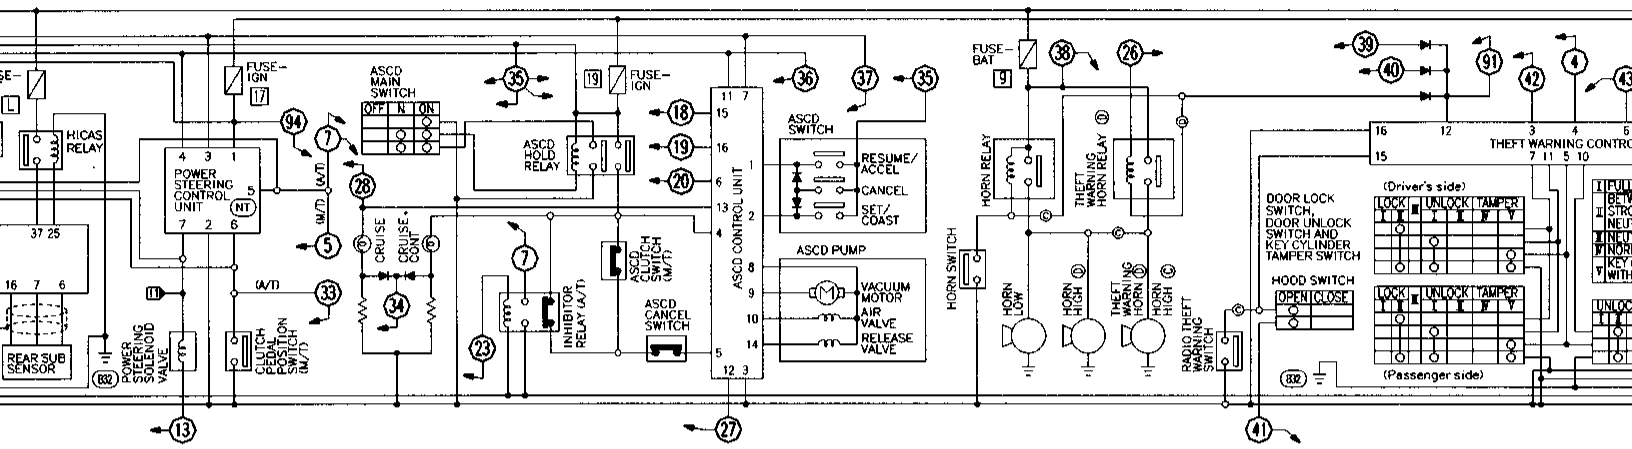   


 
- 26
- 13
- 44
- 82
- 88
- 33
- 7
- 23
- 35
- 7
- 18
- 19
- 20
- 27
- 36
- 37
- 35
- 34
- 29
- 46
- 94
- 38
- 26
- 41
- 39
- 40
- 91
- 42
- 4
- 43
- 32
- 88
- 33
- 68
- 89
- 26
- 69
- 80
- 54
- 43
- 81
- 72
- 44
- 34
- 29
- 46
- 94
- 71
- 7
- 33
- 9

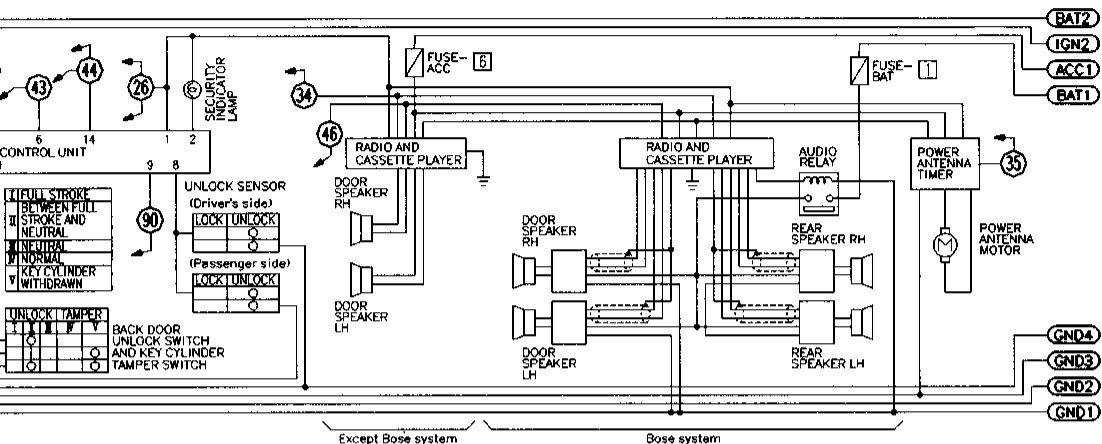

   - (A/T) : A/T model
- (M/T) : M/T model
- (MC) : M/T model for Canada
- (EM) : Except (MC)
- (US) : For U.S.A.
- (CN) : For Canada
- (B) : 2 seater model
- (4) : 2+2 seater model
- (TC) : Turbocharger
- (NT) : Non-turbocharger
- (CL) : For California
- (C) : Convertible model
- (D) : Except convertible model

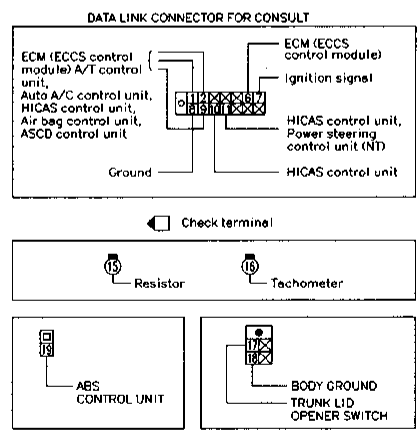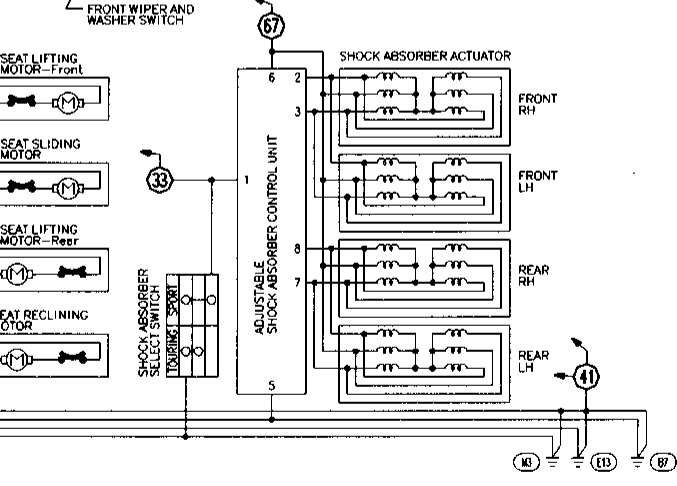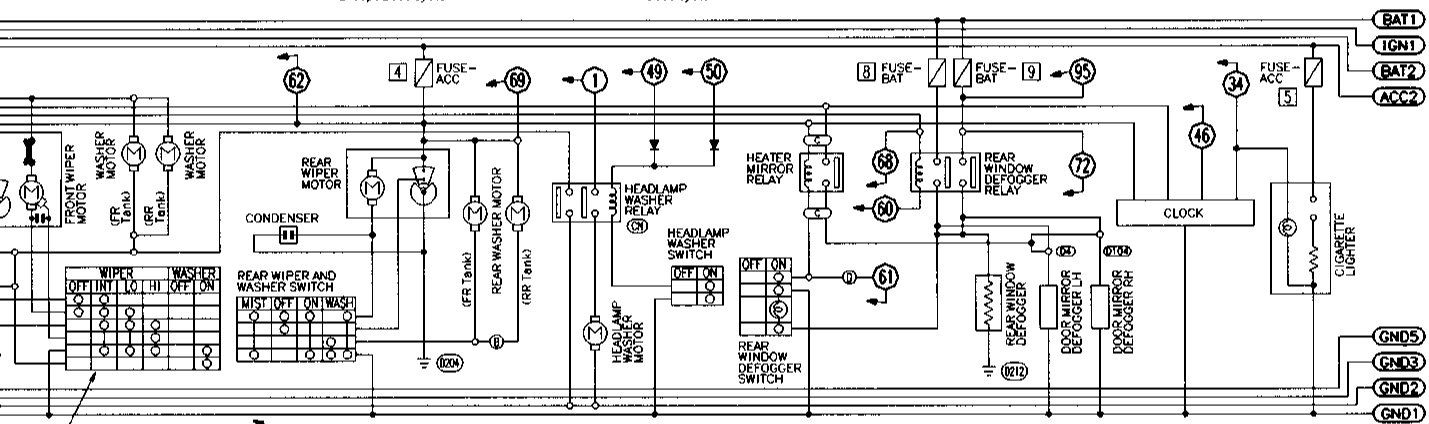

1	2	3	4	5	6	7
20A	10A	10A	10A	10A	10A	10A
8	9	10	11	12	13	14
20A	20A	10A	7.5A	20A	15A	15A
15	16	17	18	19	20	21
10A	7.5A	15A	10A	10A	7.5A	15A

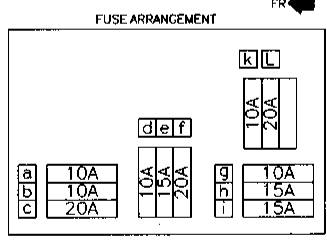  

MEL836C