

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EF &  
EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

BF

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system).....	BR-20
ABS actuator .....	BR-22
ABS circuit diagram.....	BR-31
ABS component parts and connector locations.....	BR-27
ABS hydraulic circuit.....	BR-20
ABS self-diagnosis.....	BR-24
ABS system components.....	BR-20
ABS trouble diagnoses.....	BR-23
ABS wheel sensors.....	BR-22
ABS wiring diagram.....	BR-21
A/C air flow .....	HA-12
A/C circuit diagram (auto A/C).....	HA-95
A/C circuit diagram (manual A/C) .....	HA-51
A/C component layout .....	HA-11
A/C compressor clutch removal and installation .....	HA-28
A/C compressor mounting.....	HA-24
A/C compressor precaution .....	HA-7
A/C compressor special service tool.....	HA-15
A/C control linkage adjustment (auto A/C) .....	HA-121
A/C control linkage adjustment (man- ual A/C).....	HA-71
A/C control operation (auto A/C) .....	HA-10
A/C control operation (manual A/C).....	HA-9
A/C diagnostic work flow (auto A/C).....	HA-31
A/C diagnostic work flow (manual A/C) .....	HA-30
A/C harness layout (auto A/C) .....	HA-93
A/C harness layout (manual A/C).....	HA-49
A/C HFC134a (R134a) system identification .....	HA-3
A/C HFC134a (R134a) system introduction.....	HA-3
A/C HFC134a (R134a) system precaution.....	HA-5
A/C HFC134a (R134a) system service procedure.....	HA-20
A/C HFC134a (R134a) system service tools.....	HA-16
A/C HFC134a system service equip- ment precaution.....	HA-18
A/C lubrication oil.....	HA-26
A/C operational check .....	HA-32
A/C performance chart .....	HA-36
A/C performance test diagnoses .....	HA-38
A/C relay .....	HA-70
A/C self-dfiagnoses (auto A/C).....	HA-77
A/C service data specification.....	HA-132
A/C switch .....	HA-70
A/C symptom chart (auto A/C).....	HA-75
A/C symptom chart (manual A/C).....	HA-44
A/C trouble diagnoses (auto A/C).....	HA-73

A/C trouble diagnoses (manual A/C) .....	HA-43
A/C wiring diagram (auto A/C) .....	HA-96
A/C wiring diagram (manual A/C) .....	HA-52
Acceleration cut control .....	EF&EC-26
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Activated carbon canister .....	EF&EC-19
Activated carbon canister inspection .....	EF&EC-190
Air bag .....	BF-69
Air bag caution labels.....	BF-71
Air bag precautions .....	GI-2
Air bag removal and installation.....	BF-75
Air bag scrapping.....	BF-80
Air bag system trouble diagnoses .....	BF-83
Air bleeding for brake system .....	BR-3
Air cleaner filter replacement .....	MA-12
Air mix door control linkage adjust- ment (auto A/C) .....	HA-122
Air mix. door motor.....	HA-123
Air mix. door motor.....	HA-125
Air mix. door motor control linkage adjustment (manual A/C).....	HA-72
Air spoiler (Rear).....	BF-60
Alternator .....	EL-19
Ambient sensor .....	HA-119
Angular tightening application.....	EM-2
ASCD (automatic speed control device) .....	EL-78
AT control unit.....	AT-74
AT fluid temperature sensor.....	AT-79
AT removal and installation.....	AT-100
AT self-diagnoses.....	AT-38
AT trouble diagnoses.....	AT-11
Audio .....	EL-72
Automatic amplifier.....	HA-125
Automatic transmission fluid.....	MA-8
Automatic transmission fluid replacement .....	MA-16
Automatic transmission number .....	GI-19
Auxiliary air control (AAC).....	EF&EC-17
Axle housing (rear).....	RA-9

## B

Back door.....	BF-7
Back door window .....	BF-59
Back-up lamp .....	EL-33
Back-up lamp switch (MT).....	MT-7
Ball joint front axle.....	FA-17
Battery.....	EL-12
Baulk ring (MT).....	MT-8
Belt inspection (drive belt) .....	MA-9
Blower motor.....	HA-69
Blower relay.....	HA-70
Blower resistor.....	HA-69

# ALPHABETICAL INDEX

Body alignment.....	BF-62
Boost gauge.....	EL-41
Brake booster.....	BR-9
Brake fluid.....	MA-8
Brake fluid change.....	BR-3
Brake fluid level.....	MA-17
Brake fluid level and line check.....	BR-3
Brake hydraulic line.....	BR-4
Brake inspection.....	MA-17
Brake lines and cables inspection.....	MA-17
Brake master cylinder.....	BR-7
Brake pedal.....	BR-5

C

Camshaft inspection.....	EM-26
Camshaft position sensor (CMPS).....	EF&EC-13
Camshaft position sensor inspection.....	EF&EC-180
Center bearing assembly (propeller shaft).....	PD-9
Center bearing disassembly (propeller shaft).....	PD-9
Charging system.....	EL-18
Cigarette lighter.....	EL-68
Clearance lamp.....	EL-32
Clock.....	EL-68
Clutch cover.....	CL-13
Clutch disc.....	CL-13
Clutch fluid.....	MA-8
Clutch fluid level.....	MA-15
Clutch master cylinder.....	CL-8
Clutch operating cylinder.....	CL-9
Clutch pedal.....	CL-6
Clutch pedal free play.....	CL-6
Clutch pedal height.....	CL-6
Clutch release bearing.....	CL-11
Clutch withdrawal lever.....	CL-11
Coil spring (front).....	FA-14
Coil spring (rear).....	RA-17
Combination lamp (rear) removal and installation.....	BF-42
Combination meter.....	EL-40
Combination switch.....	EL-22
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-28
Compressor mounting.....	HA-24
Compressor precaution.....	HA-7
Compressor special service tool.....	HA-15
Connecting rod.....	EM-45
Connecting rod bearing clearance.....	EM-49
Connecting rod bushing clearance.....	EM-50
Consult for ECCS.....	EF&EC-53
CONSULT general information.....	GI-15
Control lever (MT).....	MT-10
Control valve (AT).....	AT-125

Converter housing installation.....	AT-100
Convertible roof.....	BF-47
Coolant.....	MA-8
Coolant replacement.....	MA-10
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-11
Cooling fan control.....	EF&EC-29
Cooling fan control system.....	LC-12
Cooling fan relay inspection.....	EF&EC-186
Counter gear (MT).....	MT-8
Coupling sleeve (MT).....	MT-8
Crankshaft assembly.....	EM-51
Crankshaft bearing clearance.....	EM-47
Crankshaft inspection.....	EM-47
Cylinder block.....	EM-43
Cylinder block boring.....	EM-46
Cylinder head.....	EM-23
Cylinder head bolt tightening.....	EM-33

D

Data link connector for Consult.....	EF&EC-18
Daytime light system.....	EL-26
Differential carrier assembly.....	PD-29
Differential carrier disassembly.....	PD-14
Differential gear oil.....	MA-8
Differential gear oil replacement.....	MA-16
Dimensions.....	GI-20
Direct ignition system.....	EF&EC-33
Door adjustment (front).....	BF-10
Door mirror.....	BF-60
Drive plate runout.....	EM-50
Drive shaft (rear).....	RA-12
Dropping resistor (AT).....	AT-79
Dual pressure switch.....	HA-70

E

ECCS basic inspection.....	EF&EC-65
ECCS circuit diagram.....	EF&EC-12
ECCS component parts location.....	EF&EC-5
ECCS fail-safe system.....	EF&EC-31
ECCS on-board diagnostic system.....	EF&EC-46
ECCS relay inspection.....	EF&EC-186
ECCS system diagram and chart.....	EF&EC-7
ECCS trouble diagnoses.....	EF&EC-40
ECCS wiring diagram.....	Foldout page
ECM input/output signal inspection...	EF&EC-175
EGR canister control solenoid valve inspection.....	EF&EC-182
EGR canister control solenoid valve inspection.....	EF&EC-186
EGR control (EGRC) - solenoid valve.....	EF&EC-18
EGR temperature sensor.....	EF&EC-19

# ALPHABETICAL INDEX

EGR temperature sensor inspection .....	EF&EC-183
EGR valve inspection .....	EF&EC-182
Electrical units location .....	EL-122
Electronic ignition (EI) system .....	EF&EC-22
Engine control module (ECM) .....	EF&EC-13
Engine coolant temperature sensor (ECTS) .....	EF&EC-14
Engine coolant temperature sensor inspection .....	EF&EC-180
Engine oil .....	MA-8
Engine oil filter replacement .....	MA-13
Engine oil precautions .....	GI-5
Engine oil replacement .....	MA-12
Engine outer component parts .....	EM-6
Engine removal .....	EM-40
Engine serial number .....	GI-19
Evaporative emission system .....	EF&EC-190
Exhaust gas recirculation (EGR) system .....	EF&EC-25
Exhaust gas recirculation (EGR) valve .....	EF&EC-17
Exhaust system .....	FE-5
Exhaust system inspection .....	MA-15
Exterior .....	BF-36
Exterior lamp .....	EL-32

## F

Fan switch .....	HA-69
Final drive disassembly .....	PD-14
Final drive pre-inspection .....	PD-14
Final drive removal and installation .....	PD-10
Fluid temperature sensor (AT) .....	AT-79
Flywheel runout .....	EM-50
Fog lamp, front .....	EL-34
Foot lamp .....	EL-38
Fork rod (MT) .....	MT-10
Forward clutch .....	AT-144
Front axle .....	FA-9
Front bumper .....	BF-5
Front disc brake .....	BR-11
Front suspension .....	FA-13
Fuel check valve inspection .....	EF&EC-191
Fuel damper .....	EF&EC-16
Fuel filter .....	EF&EC-18
Fuel filler lid .....	BF-7
Fuel filter replacement .....	MA-12
Fuel gauge .....	EL-41
Fuel injector .....	EF&EC-15
Fuel line inspection .....	MA-11
Fuel precautions .....	GI-6
Fuel pressure check .....	EF&EC-188
Fuel pressure regulator .....	EF&EC-15
Fuel pressure regulator control .....	EF&EC-26
Fuel pressure release .....	EF&EC-188
Fuel pump .....	EF&EC-15

Fuel pump control .....	EF&EC-24
Fuel pump inspection .....	EF&EC-181
Fuel system .....	FE-3
Fuel tank vacuum relief valve inspection .....	EF&EC-191
Fuel temperature sensor .....	EF&EC-19
Fuel temperature sensor inspection ..	EF&EC-187
Fuse .....	EL-11
Fusible link .....	EL-11

## G

Gears (MT) .....	MT-8
------------------	------

## H

Harness connector .....	EL-4
Harness layout .....	EL-126
Headlamp .....	EL-26
Headlamp washer .....	EL-65
Heated oxygen sensor (H02S) .....	EF&EC-15
Heated oxygen sensor heater inspection .....	EF&EC-183
Heated oxygen sensor monitor .....	EF&EC-52
Heater mirror .....	EL-69
Height (Dimensions) .....	GI-20
HFC134a (R134a) system identification .....	HA-3
HFC134a (R134a) system introduction .....	HA-3
HFC134a (R134a) system precaution .....	HA-5
HFC134a (R134a) system service procedure .....	HA-20
HFC134a (R134a) system service tools .....	HA-16
HFC134a system service equipment precaution .....	HA-18
HICAS - See Super HICAS .....	ST-37
High clutch .....	AT-142
Hood adjustment .....	BF-5
Horn .....	EL-68
How to follow flow chart in trouble diagnoses .....	GI-12
How to read wiring diagrams .....	GI-9
How to use this manual .....	GI-7
Hydraulic lash adjuster inspection .....	EM-30

## I

IACV - air regulator inspection .....	EF&EC-185
IACV - FICD solenoid valve inspection .....	EF&EC-185
IACV-AAC valve inspection .....	EF&EC-184
Identification plate .....	GI-19

# ALPHABETICAL INDEX

Idle air adjusting (IAA) unit..... EF&EC-16  
 Idle air control (IAC) system..... EF&EC-23  
 Idle air control valve (IACV) - air  
   regulator..... EF&EC-16  
 Idle mixture ratio inspection..... EF&EC-35  
 Idle speed inspection..... EF&EC-35  
 Ignition coil inspection..... EF&EC-181  
 Ignition coil relay inspection..... EF&EC-186  
 Ignition timing inspection..... EF&EC-35  
 Illumination..... EL-37  
 In vehicle sensor..... HA-119  
 Inhibitor switch..... AT-78  
 Inhibitor switch inspection..... EF&EC-186  
 Injection removal and installation..... EF&EC-189  
 Injector inspection..... EF&EC-185  
 Instrument panel..... BF-27  
 Intake door control linkage adjust-  
   ment (auto A/C)..... HA-122  
 Intake door control linkage adjust-  
   ment(manual A/C)..... HA-72  
 Interior..... BF-29  
 Interior lamp..... EL-37

## J

Jacking points..... GI-21

## K

Knock sensor (KS)..... EF&EC-17  
 Knock sensor inspection..... EF&EC-185

## L

Length (Dimensions)..... GI-20  
 Lifting points..... GI-22  
 Line pressure solenoid valve..... AT-79  
 Line pressure test (AT)..... AT-82  
 Liquid gasket application..... EM-2  
 Low and reverse brake..... AT-148  
 Lower ball joint (rear susp.)..... RA-17  
 Lubrication circuit (engine)..... LC-4  
 Lubrication oil A/C..... HA-26  
 Lubrication-locks, hinges and hood  
   latches..... MA-19  
 Luggage room lamp..... EL-38

## M

Magnet clutch..... HA-28  
 Main drive gear (MT)..... MT-8  
 Mainshaft (MT)..... MT-8  
 Maintenance..... MA-1

Maintenance (engine)..... MA-9  
 Maintenance general..... MA-3  
 Maintenance periodic..... MA-5  
 Maintenance schedule (1)..... MA-6  
 Maintenance schedule (2)..... MA-7  
 Manual transmission number..... GI-19  
 Manual transmission oil..... MA-8  
 Manual transmission oil  
   replacement..... MA-15  
 Mass air flow sensor (MAFS)..... EF&EC-13  
 Mass air flow sensor inspection..... EF&EC-180  
 Master cylinder (brake)..... BR-7  
 Master cylinder (clutch)..... CL-8  
 Meter and gauges..... EL-40  
 Mode door control linkage adjust-  
   ment (auto A/C)..... HA-121  
 Mode door control linkage adjust-  
   ment (manual A/C)..... HA-71  
 Model variation..... GI-16  
 Molding..... BF-36  
 MT overhaul..... MT-7  
 MT removal and installation..... MT-6  
 Multi link/lower ball joint (rear)..... RA-17  
 Multi purpose grease..... MA-8  
 Multi-remote control system..... BF-16  
 Multiport fuel injection (MFI) system... EF&EC-20  
 Multiport fuel injection precautions..... GI-4

## N

Neutral position switch (MT)..... MT-7  
 Neutral position switch inspection.... EF&EC-186

## O

Oil cooler (engine)..... LC-7  
 Oil pan (engine)..... EM-10  
 Oil pressure (engine)..... LC-5  
 Oil pressure relief valve (engine)..... LC-7  
 Oil pump (AT)..... AT-121  
 Oil pump (engine)..... LC-5  
 Oil pump regulator valve (engine)..... LC-7  
 Oil seal replacement (engine)..... EM-19  
 Oil seal replacement (front of final  
   drive)..... PD-10  
 Oil seal replacement (side of final  
   drive)..... PD-10  
 Operating cylinder (clutch)..... CL-9  
 Overrun clutch..... AT-144  
 Overrun clutch solenoid valve..... AT-79  
 Oversize piston..... EM-46

# ALPHABETICAL INDEX

## P

Parking brake control .....	BR-17
Parking drum brake .....	BR-18
PCV (positive crankcase ventilation) inspection .....	EF&EC-192
Pilot bushing replacement .....	EM-52
Pinion bearing preload diff. (R200V) .....	PD-19
Pinion gear height diff. (R200V) .....	PD-19
Pinion gear height diff. (R230V) .....	PD-25
Piston assembly .....	EM-50
Piston pin inspection .....	EM-44
Piston ring inspection .....	EM-45
Piston to bore clearance .....	EM-46
Power antenna .....	EL-72
Power door lock .....	BF-13
Power seat .....	BF-54
Power steering (twin orifice) trouble diagnoses .....	ST-28
Power steering fluid .....	MA-8
Power steering fluid level .....	MA-18
Power steering fluid level .....	ST-6
Power steering gear .....	ST-12
Power steering hydraulic pressure .....	ST-8
Power steering oil pressure switch .....	EF&EC-17
Power steering oil pressure switch inspection .....	EF&EC-186
Power steering oil pump .....	ST-23
Power steering system (twin orifice) .....	ST-26
Power steering system bleeding .....	ST-7
Power supply routing .....	EL-8
Power transistor & ignition coil .....	EF&EC-16
Power transistor inspection .....	EF&EC-181
Power window .....	BF-11
Precautions (General) .....	GI-2
Pressure test (AT) .....	AT-82
Propeller shaft .....	PD-6
Propeller shaft on vehicle service .....	PD-7
Propeller shaft vibration .....	PD-7
PRVR control solenoid valve .....	EF&EC-18

## R

Rack retainer adjustment .....	ST-6
Radiator .....	LC-12
Rear axle .....	RA-9
Rear axle housing ball joint (super HICAS) .....	RA-20
Rear bumper .....	BF-7
Rear disc brake .....	BR-14
Rear side window .....	BF-58
Rear suspension .....	RA-16
Rear window defogger .....	EL-69
Refrigerant connection precaution .....	HA-6
Refrigerant general precaution .....	HA-5
Refrigerant lines .....	HA-22

Refrigeration cycle .....	HA-14
Release bearing (clutch) .....	CL-11
Reverse clutch .....	AT-138
Reverse gear (MT) .....	MT-8
Reverse idler shaft (MT) .....	MT-8
Revolution sensor (AT) .....	AT-78
Road wheel size .....	GI-20

## S

SAE J1930 terminology list .....	GI-25
Seat (front) .....	BF-54
Seat (rear) .....	BF-55
Seat belt inspection .....	MA-19
Self-diagnostic results .....	EF&EC-49
Shift control (MT) .....	MT-10
Shift fork (MT) .....	MT-10
Shift lock system .....	AT-88
Shift schedule .....	AT-32
Shift solenoid valve (AT) .....	AT-79
Shock absorber (adjustable, front) .....	FA-19
Shock absorber (adjustable, rear) .....	RA-19
Shock absorber (front) .....	FA-14
Shock absorber (rear) .....	RA-17
Side bearing preload diff. (R200V) .....	PD-18
Side bearing preload diff. (R230V) .....	PD-24
SMJ (super multiple junction) .....	Foldout page
Soft/Hard closed throttle position (CTP) switch .....	EF&EC-14
Spark plug replacement .....	MA-13
Speedometer .....	EL-41
Spot lamp .....	EL-38
Spring (Wheelarch) height .....	FA-5
Stabilizer bar (front) .....	FA-18
Stabilizer bar (rear) .....	RA-18
Stall test (AT) .....	AT-80
Standardized relay .....	EL-5
Starter .....	EL-16
Starting system .....	EL-15
Steering angle sensor .....	ST-44
Steering gear and linkage inspection .....	MA-18
Steering knuckle .....	FA-9
Steering linkage .....	ST-12
Steering wheel and column .....	ST-9
Steering wheel play .....	ST-5
Steering wheel turning force .....	ST-7
Stop lamp .....	EL-32
Striking rod (MT) .....	MT-10
Sunload sensor .....	HA-120
Super HICAS system .....	ST-37
Super HICAS system trouble diagnoses .....	ST-45
Supplemental restraint system .....	BF-69
Synchronizer (MT) .....	MT-8

# ALPHABETICAL INDEX

## T

T-bar roof.....	BF-45
Tachometer.....	EL-41
Tail lamp.....	EL-32
Tension rod (front).....	FA-18
Theft warning system.....	EL-99
Thermo control amp.....	HA-71
Thermostat.....	LC-10
Third link (front susp.).....	FA-15
Three way catalyst precautions.....	GI-4
Throttle bodies.....	EM-21
Throttle position sensor (TPS).....	EF&EC-14
Throttle position sensor inspection and adjustment.....	EF&EC-183
Throttle position switch inspection....	EF&EC-183
Tightening torque of standard bolts.....	GI-24
Time control system.....	EL-49
Timing belt.....	EM-12
Tire rotation.....	MA-17
Tire size.....	GI-20
Tooth contact diff.....	PD-28
Torque converter clutch solenoid valve.....	AT-79
Torque converter installation.....	AT-100
Tow truck towing.....	GI-22
Towing points.....	GI-23
Transmission case (MT).....	MT-7
Transverse link (front).....	FA-17
Tread-FR & RR (Dimensions).....	GI-20
Trim - back door.....	BF-33
Trim - door.....	BF-29
Trim - luggage compartment.....	BF-35
Trim - roof.....	BF-34
Trim - side and floor.....	BF-29
Trunk lid.....	BF-9
Turbocharger.....	EM-34
Turbocharger intercooler.....	EM-39
Turbocharger precautions.....	GI-4

## U

Upper link (front susp.).....	FA-15
-------------------------------	-------

## V

Vacuum hose (brake system).....	BR-10
---------------------------------	-------

Vacuum hose drawing (ECCS).....	EF&EC-10
Valve guide inspection.....	EM-27
Valve seat inspection.....	EM-29
Valve spring inspection.....	EM-30
Valve timing control (VTC).....	EF&EC-27
Valve timing control solenoid valve....	EF&EC-19
Vapor lines inspection.....	MA-14
Vehicle identification number.....	GI-18
Vehicle speed sensor (VSS).....	EF&EC-17
Vehicle speed sensor inspection.....	EF&EC-181
Viscosity number (SAE).....	MA-8
VTC solenoid valve inspection.....	EF&EC-186

## W

Warning chime.....	EL-47
Warning lamps.....	EL-45
Washer, front.....	EL-63
Washer, rear.....	EL-64
Water cock control rod adjustment (auto A/C).....	HA-122
Water cock control rod adjustment (manual A/C).....	HA-72
Water pump.....	LC-9
Water temperature gauge.....	EL-41
Weatherstrip.....	BF-36
Wheel alignment (front).....	FA-7
Wheel alignment (rear super HICAS).....	RA-20
Wheel alignment (rear).....	RA-5
Wheel balance.....	MA-16
Wheel bearing (front axle).....	FA-7
Wheel bearing (rear).....	RA-5
Wheel hub (front).....	FA-9
Wheel hub (rear).....	RA-9
Wheel sensors (ABS).....	BR-22
Wheelbase (Dimensions).....	GI-20
Width (Dimensions).....	GI-20
Windshield and windows.....	BF-57
Wiper and washer.....	EL-63
Wiper, front.....	EL-63
Wiper, rear.....	EL-64
Withdrawal lever (clutch).....	CL-11

GI

MA

EM

LC

EF &  
EC

FE

CL

WT

AT

PD

FA

RA

BR

ST

BF

HA

EL

IDX