

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LG

EF &
EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system)	BR-21
ABS actuator	BR-23
ABS circuit diagram	BR-31
ABS component parts and connector locations.....	BR-28
ABS hydraulic circuit	BR-21
ABS self-diagnosis	BR-25
ABS system components	BR-21
ABS trouble diagnoses	BR-24
ABS wheel sensors	BR-23
ABS wiring diagram	BR-22
A/C air flow	HA-13
A/C circuit diagram (auto A/C)	HA-90
A/C circuit diagram (manual A/C)	HA-38
A/C component layout.....	HA-12
A/C compressor clutch removal and installation.....	HA-131
A/C compressor mounting	HA-129
A/C compressor precaution	HA-6
A/C compressor special service tool	HA-6
A/C control linkage adjustment (auto A/C).....	HA-114
A/C control linkage adjustment (manual A/C).....	HA-56
A/C control operation (auto A/C).....	HA-61
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (auto A/C)	HA-64
A/C diagnostic work flow (manual A/C)	HA-17
A/C harness layout (auto A/C)	HA-86
A/C harness layout (manual A/C)	HA-34
A/C HFC134a (R134a) system identification.....	HA-2
A/C HFC134a (R134a) system introduction	HA-2
A/C HFC134a (R134a) system precaution.....	HA-4
A/C HFC134a (R134a) system service procedure.....	HA-123
A/C HFC134a (R134a) system service tools	HA-7
A/C HFC134a system service equipment precaution.....	HA-9
A/C lubricant (R134a)	HA-125
A/C operational check (auto A/C)	HA-65
A/C operational check (manual A/C)	HA-18
A/C performance chart.....	HA-28
A/C performance test diagnoses	HA-26
A/C relay	HA-55
A/C self-df diagnoses (auto A/C)	HA-69
A/C service data specification.....	HA-133
A/C switch	HA-55
A/C symptom chart (auto A/C).....	HA-68
A/C symptom chart (manual A/C)	HA-20
A/C trouble diagnoses (auto A/C)	HA-62
A/C trouble diagnoses (manual A/C)	HA-16
A/C wiring diagram (auto A/C)	HA-88
A/C wiring diagram (manual A/C)	HA-36

Accelerator control system	FE-2
Accelerator wire adjustment	FE-2
Activated carbon canister	EF & EC-19
Activated carbon canister inspection	EF & EC-191
Air bag.....	RS-5
Air bag disposal	RS-14
Air bag module	RS-10
Air bag precautions	GI-2
Air bag removal and installation	RS-10
Air bleeding for brake system	BR-4
Air conditioner cut control	EF & EC-26
Air mix door control linkage adjustment (auto A/C).....	HA-115
Air mix door control linkage adjustment (manual A/C).....	HA-57
Air mix. door motor (auto A/C)	HA-116
Air mix. door motor (manual A/C)	HA-58
Air spoiler, rear - See Rear air spoiler.....	BT-41
Alternator	EL-19
Ambient sensor.....	HA-112
Angular tightening application	EM-2
Antenna.....	EL-81
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device)	EL-99
AT control unit	AT-74
AT fluid temperature sensor	AT-79
AT removal and installation	AT-100
AT self-diagnoses	AT-38
AT trouble diagnoses.....	AT-11
Audio.....	EL-81
Audio and A/C control removal and installation - See Instrument panel	BT-11
Automatic amplifier.....	HA-116
Automatic transmission fluid.....	MA-8
Automatic transmission fluid replacement.....	MA-17
Automatic transmission number.....	GI-30
Auxiliary air control (AAC)	EF & EC-16
Axle housing (rear).....	RA-9

B

Back door trim	BT-18
Back door window	BT-40
Back window.....	BT-38
Back-up lamp.....	EL-33
Back-up lamp switch (MT)	MT-7
Ball joint front axle	FA-17
Battery.....	EL-12
Baulk ring (MT)	MT-8
Blower motor	HA-54
Blower relay	HA-55
Blower resistor	HA-54
Body alignment	BT-42
Boost gauge.....	EL-41
Boost pressure sensor.....	EF & EC-19
Boost pressure sensor inspection	EF & EC-188
Brake booster.....	BR-10
Brake fluid.....	MA-8

ALPHABETICAL INDEX

Brake fluid change BR-4
 Brake fluid level MA-18
 Brake fluid level and line check BR-4
 Brake hydraulic line BR-5
 Brake inspection MA-18
 Brake lines and cables inspection MA-18
 Brake master cylinder BR-8
 Brake pedal BR-6
 Bumper, front - See Front bumper BT-5
 Bumper, rear - See Rear bumper BT-7

C

Camshaft inspection EM-26
 Camshaft position sensor (CMPS) EF & EC-13
 Camshaft position sensor inspection EF & EC-181
 Center bearing assembly (propeller shaft) PD-9
 Center bearing disassembly (propeller shaft) PD-9
 Charging system EL-18
 Cigarette lighter EL-77
 Clearance lamp EL-32
 Clock EL-77
 Closed throttle position switch inspection EF & EC-185
 Clutch cover CL-14
 Clutch disc CL-14
 Clutch fluid MA-8
 Clutch fluid level MA-16
 Clutch master cylinder CL-8
 Clutch operating cylinder CL-9
 Clutch pedal CL-6
 Clutch pedal free play CL-6
 Clutch pedal height CL-6
 Clutch release bearing CL-12
 Clutch withdrawal lever CL-12
 Coil spring (front) FA-14
 Coil spring (rear) RA-17
 Combination lamp, rear, removal and installation BT-20
 Combination meter EL-40
 Combination meter removal and installation - See Instrument panel BT-11
 Combination switch EL-22
 Compression pressure EM-9
 Compressor clutch removal and installation HA-131
 Compressor mounting HA-129
 Compressor precaution HA-6
 Compressor special service tool HA-6
 Connecting rod EM-45
 Connecting rod bearing clearance EM-49
 Connecting rod bushing clearance EM-50
 Console box - See Instrument panel BT-11
 Consult for ECCS EF & EC-54
 Consult general information GI-26
 Control lever (MT) MT-10
 Control valve (AT) AT-125

Converter housing installation AT-100
 Convertible roof BT-31
 Coolant MA-8
 Cooling circuit (engine) LC-8
 Cooling fan LC-11
 Cooling fan control EF & EC-29
 Cooling fan control system LC-12
 Cooling fan motor inspection EF & EC-183
 Cooling fan relay inspection EF & EC-187
 Counter gear (MT) MT-8
 Coupling sleeve (MT) MT-8
 Crankshaft assembly EM-51
 Crankshaft bearing clearance EM-47
 Crankshaft inspection EM-47
 Cylinder block EM-43
 Cylinder block boring EM-46
 Cylinder head EM-23
 Cylinder head bolt tightening EM-33

D

Data link connector for Consult EF & EC-18
 Daytime light system EL-26
 Differential carrier assembly PD-29
 Differential carrier disassembly PD-14
 Differential gear oil MA-8
 Differential gear oil replacement MA-17
 Dimensions GI-31
 Direct ignition system EF & EC-33
 Door glass BT-10
 Door lock BT-10
 Door mirror BT-41
 Door trim BT-17
 Door, front - See Front door BT-10
 Drive plate runout EM-50
 Drive shaft (rear) RA-12
 Dropping resistor (AT) AT-79
 Dual pressure switch HA-55

E

ECCS basic inspection EF & EC-64
 ECCS circuit diagram EF & EC-12
 ECCS fail-safe system EF & EC-31
 ECCS on-board diagnostic system EF & EC-47
 ECCS relay inspection EF & EC-187
 ECCS system diagram and chart EF & EC-5, 7
 ECCS trouble diagnoses EF & EC-41
 ECM input/output signal inspection EF & EC-176
 EGR control (EGRC) - solenoid valve EF & EC-18
 EGR temperature sensor EF & EC-19
 EGR temperature sensor inspection EF & EC-184
 EGR valve inspection EF & EC-183
 EGRC valve and canister control solenoid valve inspection EF & EC-183, 187
 Electrical units location EL-144

ALPHABETICAL INDEX

Electronic ignition (EI) system EF & EC-22
 Engine compartment..... BT-42
 Engine control module (ECM) EF & EC-13
 Engine coolant temperature sensor
 (ECTS) EF & EC-13
 Engine coolant temperature sensor
 inspection EF & EC-181
 Engine oil MA-8
 Engine oil precautions..... GI-5
 Engine outer component parts EM-6
 Engine removal..... EM-40
 Engine room - See Engine
 compartment BT-42
 Engine serial number GI-30
 Evaporative emission system EF & EC-191
 Exhaust gas recirculation (EGR)
 system EF & EC-25
 Exhaust gas recirculation (EGR)
 valve EF & EC-17
 Exhaust system FE-5
 Exhaust system inspection MA-16
 Exterior..... BT-20
 Exterior lamp..... EL-32

F

Fan control amp. HA-119
 Fan switch HA-54
 Final drive disassembly..... PD-14
 Final drive pre-inspection..... PD-14
 Final drive removal and installation PD-10
 Finisher, interior - See Trim BT-13
 Finisher, trunk lid - See Trunk lid
 finisher..... BT-16
 Floor trim..... BT-13
 Fluid temperature sensor (AT) AT-79
 Flywheel runout EM-50
 Fog lamp, front EL-34
 Foot lamp..... EL-38
 Fork rod (MT) MT-10
 Forward clutch..... AT-144
 Front axle FA-9
 Front bumper BT-5
 Front disc brake BR-12
 Front door BT-10
 Front fog lamp EL-34
 Front passenger air bag..... RS-11
 Front seat..... BT-36
 Front seat belt RS-3
 Front suspension FA-13
 Front washer..... EL-63
 Front wiper..... EL-63
 Fuel check valve inspection EF & EC-192
 Fuel damper..... EF & EC-15
 Fuel filter EF & EC-18
 Fuel gauge..... EL-41
 Fuel injector EF & EC-14
 Fuel lid opener, electric EL-74
 Fuel precautions..... GI-6
 Fuel pressure check EF & EC-189

Fuel pressure regulator EF & EC-15
 Fuel pressure regulator control EF & EC-26
 Fuel pressure release EF & EC-189
 Fuel pump..... EF & EC-15
 Fuel pump control EF & EC-24
 Fuel pump inspection EF & EC-182
 Fuel system FE-3
 Fuel tank vacuum relief valve
 inspection EF & EC-192
 Fuel temperature sensor EF & EC-19
 Fuel temperature sensor inspection .. EF & EC-188
 Fuse EL-11
 Fusible link EL-11

G

Garage jack and safety stand GI-32
 Gauges EL-40
 Gears (MT)..... MT-8
 Glass..... BT-10
 Grille - See Exterior BT-20

H

Harness connector..... EL-4
 Harness layout..... EL-148
 Hazard warning lamp..... EL-35
 Headlamp..... EL-26
 Headlamp washer..... EL-65
 Headlining - See Roof trim BT-19
 Heated oxygen sensor (HO2S) EF & EC-15
 Heated oxygen sensor heater
 inspection EF & EC-184
 Heated oxygen sensor monitor EF & EC-53
 Heater mirror..... EL-78
 Height (Dimensions)..... GI-31
 HFC134a (R134a) system identification HA-2
 HFC134a (R134a) system introduction HA-2
 HFC134a (R134a) system precaution HA-4
 HFC134a (R134a) system service
 procedure..... HA-123
 HFC134a (R134a) system service tools..... HA-7
 HFC134a system service equipment
 precaution..... HA-9
 HICAS - See Super HICAS ST-37
 High clutch..... AT-142
 Hood BT-5
 Horn EL-77
 How to follow flow chart in trouble
 diagnoses GI-23
 How to perform efficient diagnosis for
 an electrical incident..... GI-12
 How to read wiring diagrams GI-9
 How to use this manual GI-7
 Hydraulic lash adjuster inspection..... EM-30

ALPHABETICAL INDEX

I

IACV - air regulator inspection EF & EC-186
 IACV - FICD solenoid valve
 inspection EF & EC-186
 IACV-AAC valve inspection EF & EC-185
 Idle air adjusting (IAA) unit EF & EC-16
 Idle air control (IAC) system EF & EC-23
 Idle air control valve (IACV) - air
 regulator EF & EC-16
 Idle mixture ratio inspection EF & EC-35
 Idle speed inspection EF & EC-35
 Ignition coil inspection EF & EC-182
 Ignition coil relay inspection EF & EC-187
 Ignition timing inspection EF & EC-35
 Illumination EL-37
 In vehicle sensor HA-112
 Inhibitor switch AT-78
 Inhibitor switch inspection EF & EC-187
 Injector inspection EF & EC-186
 Injector removal and installation EF & EC-190
 Instrument panel BT-11
 Intake door control linkage adjustment
 (auto A/C) HA-115
 Intake door control linkage adjustment
 (manual A/C) HA-57
 Intake door motor (auto A/C) HA-117
 Intake door motor (manual A/C) HA-59
 Interior BT-13
 Interior lamp EL-37

J

Jacking points GI-32

K

Knock sensor (KS) EF & EC-17
 Knock sensor inspection EF & EC-186

L

Length (Dimensions) GI-31
 Line pressure solenoid valve AT-79
 Line pressure test (AT) AT-82
 Liquid gasket application EM-2
 Location of electrical units EL-144
 Lock, door - See Door lock BT-10
 Low and reverse brake AT-148
 Lower ball joint (rear susp.) RA-18
 Lubricant (R134a) A/C HA-125
 Lubrication circuit (engine) LC-4
 Lubrication locks, hinges and hood
 latches MA-21
 Luggage compartment trim BT-13

Luggage room lamp EL-38

M

Magnet clutch HA-131
 Main drive gear (MT) MT-8
 Mainshaft (MT) MT-8
 Maintenance general MA-3
 Maintenance periodic MA-5
 Maintenance schedule (1) MA-6
 Maintenance schedule (2) MA-7
 Manual transmission number GI-30
 Manual transmission oil MA-8
 Manual transmission oil replacement MA-16
 Mass air flow sensor (MAFS) EF & EC-13
 Mass air flow sensor inspection EF & EC-181
 Master cylinder (brake) BR-8
 Master cylinder (clutch) CL-8
 Meter EL-40
 Mirror, door - See Door mirror BT-41
 Mirror, out side - See Out side mirror BT-41
 Mode door control linkage adjustment
 (auto A/C) HA-114
 Mode door control linkage adjustment
 (manual A/C) HA-56
 Mode door motor (auto A/C) HA-117
 Mode door motor (manual A/C) HA-59
 Model variation GI-27
 Molding - See Exterior BT-20
 MT overhaul MT-7
 MT removal and installation MT-6
 Multi link/lower ball joint (rear) RA-18
 Multi purpose grease MA-8
 Multi-remote control system EL-88
 Multiport fuel injection (MFI) system EF & EC-20
 Multiport fuel injection precautions GI-4

N

Neutral position switch inspection EF & EC-187

O

Oil cooler (engine) LC-7
 Oil pan (engine) EM-10
 Oil pressure (engine) LC-5
 Oil pressure relief valve (engine) LC-7
 Oil pump (AT) AT-121
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-19
 Oil seal replacement (front of final
 drive) PD-10
 Oil seal replacement (side of final
 drive) PD-10
 Operating cylinder (clutch) CL-9
 Out side mirror BT-41

ALPHABETICAL INDEX

Overrun clutch.....	AT-144
Overrun clutch solenoid valve.....	AT-79
Oversize piston.....	EM-46

P

Parking brake control.....	BR-18
Parking drum brake.....	BR-19
PCV (positive crankcase ventilation) inspection.....	EF & EC-193
Pilot bushing replacement.....	EM-53
Pinion bearing preload diff.....	PD-19
Pinion gear height diff.....	PD-19, 25
Piston assembly.....	EM-51
Piston pin inspection.....	EM-44
Piston ring inspection.....	EM-45
Piston to bore clearance.....	EM-46
Power antenna.....	EL-81
Power door lock.....	EL-70
Power door mirror.....	EL-73
Power seat.....	EL-87
Power steering (twin orifice) trouble diagnoses.....	ST-28
Power steering fluid.....	MA-8
Power steering fluid level.....	MA-19, ST-6
Power steering gear.....	ST-12
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EF & EC-17
Power steering oil pressure switch inspection.....	EF & EC-187
Power steering oil pump.....	ST-23
Power steering system (twin orifice).....	ST-26
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-8
Power transistor & ignition coil.....	EF & EC-16
Power transistor inspection.....	EF & EC-182
Power window.....	EL-68
Precautions (General).....	GI-2
Pressure test (AT).....	AT-82
Propeller shaft.....	PD-6
Propeller shaft on vehicle service.....	PD-7
Propeller shaft vibration.....	PD-7
PRVR control solenoid valve.....	EF & EC-18
PRVR control solenoid valve inspection.....	EF & EC-183

R

Rack retainer adjustment.....	ST-6
Radiator.....	LC-12
Radio.....	EL-81
Rear air spoiler.....	BT-41
Rear axle.....	RA-9
Rear axle housing ball joint (super HICAS).....	RA-22
Rear bumper.....	BT-7
Rear combination lamp removal and installation.....	BT-20

Rear disc brake.....	BR-15
Rear seat.....	BT-36
Rear seat belt.....	RS-4
Rear suspension.....	RA-16
Rear washer.....	EL-64
Rear window.....	BT-38
Rear window defogger.....	EL-78
Rear wiper.....	EL-64
Refrigerant connection precaution.....	HA-5
Refrigerant general precaution.....	HA-4
Refrigerant lines.....	HA-127
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-12
Reverse clutch.....	AT-138
Reverse gear (MT).....	MT-8
Reverse idler shaft (MT).....	MT-8
Revolution sensor (AT).....	AT-78
Road wheel size.....	GI-31
Roof trim.....	BT-19

S

SAE J1930 terminology list.....	GI-36
Seal - See Exterior.....	BT-20
Seat belt inspection.....	MA-21
Seat belt, front - See Front seat belt.....	RS-3
Seat belt, rear - See Rear seat belt.....	RS-4
Seat, front - See Front seat.....	BT-36
Seat, rear - See Rear seat.....	BT-36
Self-diagnostic results.....	EF & EC-50
Shift control (MT).....	MT-10
Shift fork (MT).....	MT-10
Shift lock system.....	AT-88
Shift schedule.....	AT-32
Shift solenoid valve (AT).....	AT-79
Shock absorber (adjustable, front).....	FA-19
Shock absorber (adjustable, rear).....	RA-20
Shock absorber (front).....	FA-14
Shock absorber (rear).....	RA-17
Side bearing preload diff.....	PD-18, 24
Side trim.....	BT-13
Side window.....	BT-39
Speedometer.....	EL-41
Spiral cable.....	RS-10
Spot lamp.....	EL-38
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses.....	RS-18
SRS Wiring diagram.....	RS-19
Stabilizer bar (front).....	FA-18
Stabilizer bar (rear).....	RA-18
Stall test (AT).....	AT-80
Standardized relay.....	EL-5
Starter.....	EL-16
Starting system.....	EL-15
Steering angle sensor.....	ST-44
Steering gear and linkage inspection.....	MA-19
Steering knuckle.....	FA-9
Steering linkage.....	ST-12

ALPHABETICAL INDEX

Steering wheel and column ST-9
 Steering wheel play ST-5
 Steering wheel turning force ST-7
 Stop lamp EL-32
 Striking rod (MT) MT-10
 Sunload sensor HA-113
 Super HICAS system ST-37
 Super HICAS system trouble
 diagnoses ST-45
 Supplemental Restraint System RS-5
 Symbols and abbreviations GI-7
 Synchronizer (MT) MT-8

T

T-bar roof BT-29
 Tachometer EL-41
 Tail lamp EL-32
 Tension rod (front) FA-18
 Theft warning system EL-119
 Thermo control amp HA-56
 Thermostat LC-10
 Third link (front susp.) FA-15
 Three way catalyst precautions GI-4
 Throttle bodies EM-21
 Throttle position sensor (TPS) EF & EC-14
 Throttle position sensor inspection EF & EC-184
 Throttle position switch inspection EF & EC-184
 Tightening torque of standard bolts GI-35
 Time control system EL-49
 Timing belt EM-12
 Tire rotation MA-18
 Tire size GI-31
 Tooth contact diff. PD-28
 Torque converter clutch solenoid valve AT-79
 Torque converter installation AT-100
 Tow truck towing GI-33
 Towing points GI-33
 Transmission case (MT) MT-7
 Transverse link (front) FA-17
 Tread-FR&RR (Dimensions) GI-31
 Trim BT-13
 Trunk lid BT-7
 Trunk lid finisher BT-16
 Trunk lid opener - See Trunk lid BT-7
 Trunk lid opener, electric EL-74
 Trunk lid trim BT-16
 Trunk room trim BT-16
 Turbocharger EM-34
 Turbocharger intercooler EM-39
 Turbocharger precautions GI-4
 Turn signal lamp EL-35
 Two-pole lift GI-33

U

Under body BT-44

Upper link (front susp.) FA-15

V

Vacuum hose (brake system) BR-11
 Vacuum hose drawing (ECCS) EF & EC-10
 Valve guide inspection EM-27
 Valve seat inspection EM-29
 Valve spring inspection EM-30
 Valve timing control (VTC) EF & EC-27
 Valve timing control solenoid valve EF & EC-19
 Vehicle identification number GI-29
 Vehicle speed sensor (VSS) EF & EC-17
 Vehicle speed sensor inspection EF & EC-182
 Viscosity number (SAE) MA-8
 VTC solenoid valve inspection EF & EC-187

W

Warning chime EL-47
 Warning lamps EL-45
 Washer, front EL-63
 Washer, rear EL-64
 Wastegate Valve Control Solenoid
 Valve EF & EC-18
 Wastegate valve control solenoid valve
 inspection EF & EC-183
 Water cock control rod adjustment
 (auto A/C) HA-115
 Water cock control rod adjustment
 (manual A/C) HA-57
 Water pump LC-9
 Water temperature gauge EL-41
 Weatherstrip - See Exterior BT-20
 Wheel alignment (front) FA-7
 Wheel alignment (rear super HICAS) RA-21
 Wheel alignment (rear) RA-5
 Wheel balance MA-18
 Wheel bearing (front axle) FA-7
 Wheel bearing (rear) RA-5
 Wheel hub (front) FA-9
 Wheel hub (rear) RA-9
 Wheel sensors (ABS) BR-23
 Wheel size GI-31
 Wheelbase (Dimensions) GI-31
 Wide open & closed throttle position
 (CTP) switch EF & EC-14
 Width (Dimensions) GI-31
 Window, back - See Back window BT-38
 Window, back door - See Back door
 window BT-40
 Window, door BT-10
 Window, rear - See Rear window BT-38
 Window, side BT-39
 Windshield BT-38
 Windshield washer EL-63
 Windshield wiper EL-63
 Wiper and washer EL-63

ALPHABETICAL INDEX

Wiper, front EL-63
Wiper, rear EL-64
Withdrawal lever (clutch) CL-12