

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-26
 ABS actuator BR-28
 ABS circuit diagram BR-41
 ABS component parts and connector
 locations BR-38
 ABS control unit BR-38
 ABS hydraulic circuit BR-27
 ABS self-diagnosis BR-35
 ABS system components BR-26
 ABS trouble diagnoses BR-34
 ABS wheel sensors BR-28
 ABS wiring diagram BR-29
 A/C air flow HA-13
 A/C circuit diagram (auto A/C) HA-94
 A/C circuit diagram (manual A/C) HA-36
 A/C component layout HA-12
 A/C compressor clutch removal and
 installation HA-146
 A/C compressor mounting HA-144
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment
 (auto A/C) HA-127
 A/C control linkage adjustment
 (manual A/C) HA-62
 A/C control operation (auto A/C) HA-67
 A/C control operation (manual A/C) HA-15
 A/C diagnostic work flow (auto A/C) HA-70
 A/C diagnostic work flow (manual A/C) HA-17
 A/C harness layout (auto A/C) HA-92
 A/C harness layout (manual A/C) HA-34
 A/C HFC134a (R134a) system
 identification HA-2
 A/C HFC134a (R134a) system
 introduction HA-2
 A/C HFC134a (R134a) system
 precaution HA-4
 A/C HFC134a (R134a) system service
 procedure HA-136
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service equip-
 ment precaution HA-9
 A/C lubricant (R134a) HA-138
 A/C operational check (auto A/C) HA-71
 A/C operational check (manual A/C) HA-18
 A/C performance chart HA-28
 A/C performance test diagnoses HA-26
 A/C relay HA-61
 A/C self-diagnoses (auto A/C) HA-75
 A/C service data specification HA-148
 A/C switch HA-61
 A/C symptom chart (auto A/C) HA-74
 A/C symptom chart (manual A/C) HA-20
 A/C trouble diagnoses (auto A/C) HA-68
 A/C trouble diagnoses (manual A/C) HA-16
 A/C wiring diagram (auto A/C) HA-95

A/C wiring diagram (manual A/C) HA-37
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Air bag RS-5
 Air bag disposal RS-14
 Air bag module RS-10
 Air bag precautions GI-2
 Air bag removal and installation RS-10
 Air bleeding for brake system BR-5
 Air cleaner filter replacement MA-13
 Air conditioner cut control EC-22
 Air flow meter - See Mass air flow
 sensor EC-108
 Air mix door control linkage adjustment
 (auto A/C) HA-128
 Air mix door control linkage adjustment
 (manual A/C) HA-63
 Air mix. door motor (auto A/C) HA-129
 Air mix. door motor (manual A/C) HA-64
 Air spoiler, rear - See Rear air spoiler BT-41
 Alternator EL-36
 Ambient sensor HA-125
 Angular tightening application EM-2
 Antenna - See Power antenna EL-183
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control device) EL-211
 AT control DTC:P0600 EC-241
 AT control unit AT-101
 AT diagnosis communication line EC-293
 AT fluid temperature sensor AT-106
 AT removal and installation AT-127
 AT self-diagnoses AT-43
 AT shift lock system AT-116
 AT trouble diagnoses AT-13
 Audio EL-177
 Audio and A/C control removal and
 installation - See Instrument panel BT-11
 Automatic amplifier HA-129
 Automatic transmission fluid
 replacement MA-18
 Automatic transmission number GI-37
 Auxiliary air control (AAC) EC-237
 Axle housing (rear) RA-9

B

Back door trim BT-18
 Back door window BT-40
 Back window BT-38
 Back-up lamp EL-67
 Back-up lamp switch (MT) MT-4
 Ball joint front axle FA-18
 Battery EL-26
 Baulk ring (MT) MT-7
 Belt inspection (drive belt) MA-10
 Blower motor HA-60
 Blower relay HA-61
 Blower resistor HA-60
 Board-on lift GI-39
 Body alignment BT-42

ALPHABETICAL INDEX

Boost gauge..... EL-92
 Boost pressure sensor..... EC-254
 Brake control valve (Proportioning valve)..... BR-8
 Brake fluid change..... BR-4
 Brake fluid level..... MA-20
 Brake fluid level and line check..... BR-4
 Brake hydraulic line..... BR-6
 Brake inspection..... MA-20
 Brake lines and cables inspection..... MA-20
 Brake master cylinder..... BR-11
 Brake pedal..... BR-9
 Bumper, front - See Front bumper..... BT-5
 Bumper, rear - See Rear bumper..... BT-7

C

Camshaft inspection..... EM-26
 Camshaft position sensor (CMPS)..... EC-206
 Camshaft position sensor inspection..... EC-210
 Center bearing assembly (propeller shaft)..... PD-9
 Center bearing disassembly (propeller shaft)..... PD-9
 Charging system..... EL-34
 Chassis and body maintenance..... MA-17
 Cigarette lighter..... EL-170
 Clearance lamp..... EL-62
 Clock..... EL-170
 Closed loop control..... EC-132
 Clutch cover..... CL-13
 Clutch disc..... CL-13
 Clutch fluid level..... MA-17
 Clutch master cylinder..... CL-7
 Clutch operating cylinder..... CL-8
 Clutch pedal..... CL-5
 Clutch pedal free play..... CL-5
 Clutch pedal height..... CL-5
 Clutch release bearing..... CL-11
 Clutch withdrawal lever..... CL-11
 Coil spring (front)..... FA-15
 Coil spring (rear)..... RA-17
 Combination lamp, rear, removal and installation..... BT-20
 Combination meter..... EL-92
 Combination meter removal and installation - See Instrument panel..... BT-11
 Combination switch..... EL-39
 Compression pressure..... EM-9
 Compressor clutch removal and installation..... HA-146
 Compressor mounting..... HA-144
 Compressor precaution..... HA-6
 Compressor special service tool..... HA-6
 Connecting rod..... EM-47
 Connecting rod bearing clearance..... EM-51
 Connecting rod bushing clearance..... EM-52
 Console box - See Instrument panel..... BT-11
 CONSULT for ECCS..... EC-49
 CONSULT general information..... GI-33

Control lever (MT)..... MT-9
 Control valve (AT)..... AT-152
 Converter housing installation..... AT-127
 Convertible roof..... BT-31
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-8
 Cooling fan..... LC-11
 Cooling fan control..... EC-296
 Counter gear (MT)..... MT-7
 Coupling sleeve (MT)..... MT-7
 Crank angle sensor - See Camshaft position sensor..... EC-206
 Crankshaft assembly..... EM-53
 Crankshaft bearing clearance..... EM-49
 Crankshaft inspection..... EM-49
 Crankshaft position sensor (OBD) chipping..... EC-275
 Crankshaft position sensor (OBD) DTC0802, P0335..... EC-202
 Crankshaft position sensor (OBD) DTC0802, P0335 inspection..... EC-205
 Cruise control - See ASCD..... EL-211
 Cylinder block..... EM-45
 Cylinder block boring..... EM-48
 Cylinder head..... EM-23
 Cylinder head bolt tightening..... EM-33

D

Daytime light system..... EL-51
 Detonation sensor - See Knock sensor..... EC-199
 Diagnostic trouble code (DTC) chart..... EC-70
 Diagnostic trouble code (DTC) for ECCS OBD system..... EC-37
 Differential carrier assembly (except FF)..... PD-29
 Differential carrier disassembly (except FF)..... PD-14
 Differential gear oil replacement..... MA-19
 Dimensions..... GI-38
 Direct ignition system..... EC-28
 Distributor ignition (DI) system..... EC-21
 Door glass..... BT-10
 Door lock..... BT-10
 Door mirror..... BT-41
 Door trim..... BT-17
 Door, front - See Front door..... BT-10
 Drive plate runout..... EM-52
 Drive shaft (rear)..... RA-12
 Dropping resistor (AT)..... AT-107
 Dual pressure switch..... HA-61

E

ECCS basic inspection..... EC-67
 ECCS circuit diagram..... EC-8
 ECCS component parts location..... EC-12
 ECCS on board diagnostic system..... EC-37

ALPHABETICAL INDEX

ECCS system diagram and chart EC-10
 ECCS trouble diagnoses..... EC-63
 ECM input/output signal inspection EC-95
 EGR control (EGRC) - solenoid valve EC-279
 EGR temperature sensor EC-283
 EGR temperature sensor inspection..... EC-287
 EGR valve inspection..... EC-219
 Electrical unit..... Foldout page
 Electrical units location EL-270
 Electronic ignition system EC-21
 Engine compartment..... BT-42
 Engine control module (ECM)..... EC-244
 Engine coolant temperature sensor
 (ECTS)..... EC-118
 Engine coolant temperature sensor
 (ECTS) P0115, DTC0103 EC-118
 Engine coolant temperature sensor
 (ECTS) P0115, DTC0103 inspection EC-121
 Engine coolant temperature sensor
 (ECTS) P0125, DTC0908..... EC-127
 Engine coolant temperature sensor
 (ECTS) P0125, DTC0908 inspection EC-131
 Engine oil filter replacement MA-14
 Engine oil precautions..... GI-5
 Engine oil replacement..... MA-13
 Engine outer component parts EM-6
 Engine removal..... EM-41
 Engine room - See Engine
 compartment BT-42
 Engine serial number GI-37
 EVAP canister EC-23
 EVAP canister inspection EC-23
 EVAP canister purge control solenoid
 valve EC-223
 EVAP canister purge control valve
 inspection..... EC-232
 EVAP vapor lines inspection..... MA-16
 Evaporative emission (EVAP) system..... EC-23
 Exhaust gas recirculation (EGR)
 system..... EC-211
 Exhaust system FE-5
 Exhaust system inspection MA-17
 Exterior..... BT-20
 Exterior lamp..... EL-62

F

Fan control amp. HA-132
 Fan switch HA-60
 Final drive disassembly (except FF)..... PD-14
 Final drive pre-inspection (except FF)..... PD-14
 Final drive removal and installation
 (except FF) PD-10
 Finisher, interior - See Trim BT-13
 Finisher, trunk lid - See Trunk lid
 finisher..... BT-16
 Floor trim..... BT-13
 Fluid temperature sensor (AT) AT-106
 Fluids MA-8
 Flywheel runout EM-52

Fog lamp, front EL-68
 Foot lamp..... EL-86
 Fork rod (MT) MT-9
 Forward clutch..... AT-171
 Freeze frame data..... EC-39
 Front axle..... FA-10
 Front bumper BT-5
 Front disc brake BR-15
 Front door BT-10
 Front fog lamp EL-68
 Front heated oxygen sensor (HO2S)
 (Left bank) EC-150
 Front heated oxygen sensor (HO2S)
 (Right bank) EC-133
 Front heated oxygen sensor (HO2S)..... EC-133
 Front heated oxygen sensor (HO2S)
 monitor..... EC-40
 Front heated oxygen sensor heater
 (Left bank) EC-155
 Front heated oxygen sensor heater
 (Right bank) EC-138
 Front passenger air bag RS-11
 Front seat..... BT-36
 Front seat belt RS-3
 Front suspension FA-14
 Front washer EL-131
 Front wiper EL-131
 Fuel check valve inspection..... EC-24
 Fuel cut control (at no load & high
 engine speed)..... EC-22
 Fuel filter replacement MA-13
 Fuel gauge EL-92
 Fuel injection system (Left bank)..... EC-179, 185
 Fuel injection system (Right bank) EC-167, 173
 Fuel lid opener, electric EL-160
 Fuel line inspection MA-12
 Fuel precautions GI-6
 Fuel pressure check..... EC-26
 Fuel pressure regulator control..... EC-325
 Fuel pressure release EC-26
 Fuel pump control EC-316
 Fuel pump control module EC-260
 Fuel pump inspection EC-320
 Fuel pump relay inspection EC-320
 Fuel system FE-3
 Fuel tank vacuum relief valve
 inspection..... EC-24
 Fuse EL-21
 Fuse block..... Foldout page
 Fusible link..... EL-21

G

Garage jack and safety stand GI-40
 Gauges EL-92
 Gears (MT) MT-7
 Generic scan tool (GST) EC-61
 Glass BT-10
 Grease MA-8
 Grille - See Exterior BT-20

ALPHABETICAL INDEX

Ground distribution EL-22

H

Harness connector EL-5
 Harness layout EL-274
 Hazard warning lamp EL-73
 Headlamp EL-44
 Headlamp washer EL-139
 Headlining - See Roof trim BT-19
 Heated oxygen sensor (HO2S) (Front)
 (Left bank) EC-150
 Heated oxygen sensor (HO2S) (Front)
 (Right bank) EC-133
 Heated oxygen sensor (HO2S) (front) EC-133
 Heated oxygen sensor (HO2S) heater
 (rear) EC-145, 162
 Heated oxygen sensor (rear) EC-141, 158
 Heated oxygen sensor heater
 (Front)(Left bank) EC-155
 Heated oxygen sensor heater
 (Front)(Right bank) EC-138
 Height (Dimensions) GI-38
 HFC134a (R134a) system identification HA-2
 HFC134a (R134a) system introduction HA-2
 HFC134a (R134a) system precaution HA-4
 HFC134a (R134a) system service
 procedure HA-136
 HFC134a (R134a) system service tools HA-7
 HFC134a system service equipment
 precaution HA-9
 HICAS - See Super HICAS ST-40
 High clutch AT-169
 Hood BT-5
 Horn EL-170
 How to erase DTC for ECCS OBD
 system EC-37
 How to follow flow chart in trouble
 diagnoses GI-30
 How to perform efficient diagnosis for
 an electrical incident GI-19
 How to read wiring diagrams GI-9
 How to use this manual GI-7
 Hydraulic lash adjuster inspection EM-30

I

IACV - air regulator inspection EC-324
 IACV - FICD solenoid valve inspection EC-336
 IACV-AAC valve inspection EC-240
 IACV-FICD solenoid valve EC-333
 Identification plate GI-37
 Idle air control valve (IACV) - air
 regulator EC-322
 Idle air control valve (IACV) EC-237
 Idle mixture ratio inspection EC-30
 Idle speed inspection EC-30
 Ignition timing inspection EC-30

Illumination EL-81
 In vehicle sensor HA-125
 Inhibitor switch AT-105
 Injector inspection EC-313
 Injector removal and installation EC-27
 Instrument panel BT-11
 Intake air temperature sensor EC-113
 Intake air temperature sensor
 inspection EC-117
 Intake door control linkage adjustment
 (auto A/C) HA-128
 Intake door control linkage adjustment
 (manual A/C) HA-63
 Intake door motor (auto A/C) HA-130
 Intake door motor (manual A/C) HA-65
 Interior BT-13
 Interior lamp EL-81

J

Jacking points GI-40
 Junction box (J/B) Foldout page

K

Kickdown switch AT-106
 Knock sensor (KS) EC-199
 Knock sensor (KS) inspection EC-201

L

Length (Dimensions) GI-38
 Line pressure solenoid valve AT-107
 Line pressure test (AT) AT-110
 Liquid gasket application EM-2
 Location of electrical units EL-270
 Lock, door - See Door lock BT-10
 Low and reverse brake AT-175
 Lower ball joint (rear susp.) RA-18
 Lubricant (R134a) A/C HA-138
 Lubricants MA-8
 Lubrication circuit (engine) LC-4
 Lubrication-locks, hinges and hood
 latches MA-22
 Luggage compartment trim BT-13
 Luggage room lamp EL-86

M

Magnet clutch HA-146
 Main drive gear (MT) MT-7
 Mainshaft (MT) MT-7
 Maintenance (engine) MA-10
 Maintenance general MA-3
 Maintenance periodic MA-5

ALPHABETICAL INDEX

Maintenance schedule (1)	MA-6
Maintenance schedule (2)	MA-7
Malfunction indicator lamp (MIL)	EC-39
Manual transmission number	GI-37
Manual transmission oil replacement	MA-17
Mass air flow sensor (MAFS)	EC-108
Mass air flow sensor inspection	EC-112
Master cylinder (brake)	BR-11
Master cylinder (clutch)	CL-7
Meter	EL-92
MIL & Data link connectors circuit	EC-337
Mirror defogger	EL-172
Mirror, door - See Door mirror	BT-41
Mirror, out side - See Out side mirror	BT-41
Misfire	EC-194
Mode door control linkage adjustment (manual A/C)	HA-62
Mode door control linkage adjustmen- t(auto A/C)	HA-127
Mode door motor (auto A/C)	HA-130
Mode door motor (manual A/C)	HA-65
Model variation	GI-34
Molding - See Exterior	BT-20
MT overhaul	MT-6
MT removal and installation	MT-5
Multi link/lower ball joint (rear)	RA-18
Multi-remote control system	EL-194
Multiport fuel injection (MFI) system	EC-18
Multiport fuel injection precautions	GI-4

N

Neutral position switch (MT)	MT-4
------------------------------------	------

O

Oil change (capacity)	MA-8
Oil cooler (engine)	LC-7
Oil pan (engine)	EM-10
Oil pressure (engine)	LC-5
Oil pressure relief valve (engine)	LC-7
Oil pump (AT)	AT-148
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine)	EM-19
Oil seal replacement (front of final drive)	PD-10
Oil seal replacement (side of final drive)	PD-10
Operating cylinder (clutch)	CL-8
Out side mirror	BT-41
Overdrive control switch	AT-104
Overrun clutch	AT-171
Overrun clutch solenoid valve	AT-107
Oversize piston	EM-48

P

Park/Neutral position switch	EC-246
Parking brake control	BR-23
Parking drum brake	BR-24
PCV (positive crankcase ventilation) inspection	EC-25
Pilot bushing replacement	EM-55
Pinion bearing preload diff. (except FF)	PD-19
Pinion gear height diff. (except FF)	PD-19, 25
Piston assembly	EM-53
Piston pin inspection	EM-46
Piston ring inspection	EM-47
Piston to bore clearance	EM-48
Power antenna	EL-183
Power door lock	EL-150
Power door mirror	EL-158
Power seat	EL-190
Power steering (twin orifice) trouble diagnoses	ST-31
Power steering fluid level	MA-21, ST-6
Power steering gear	ST-13
Power steering hydraulic pressure	ST-8
Power steering oil pressure switch	EC-330
Power steering oil pressure switch inspection	EC-332
Power steering oil pump	ST-24
Power steering system (twin orifice)	ST-27
Power steering system bleeding	ST-7
Power supply routing	EL-10
Power transistor & ignition coil	EC-266
Power window	EL-143
Precautions (General)	GI-2
Pressure plate - See Clutch cover	CL-14
Pressure test (AT)	AT-110
Propeller shaft	PD-6
Propeller shaft on vehicle service	PD-7
Propeller shaft vibration	PD-7

R

Rack retainer adjustment	ST-6
Radiator	LC-12
Radio - See Audio	EL-177
Rear air spoiler	BT-41
Rear axle	RA-9
Rear axle housing ball joint (super HICAS)	RA-22
Rear bumper	BT-7
Rear combination lamp removal and installation	BT-20
Rear disc brake	BR-19
Rear heated oxygen sensor (HO2S) ..	EC-158, 141
Rear heated oxygen sensor (HO2S) heater	EC-145, 162, 163
Rear seat	BT-36
Rear seat belt	RS-4
Rear suspension	RA-16

ALPHABETICAL INDEX

Rear washer EL-137
 Rear window BT-38
 Rear window defogger..... EL-172
 Rear wiper EL-137
 Refrigerant connection precaution HA-5
 Refrigerant general precaution HA-4
 Refrigerant lines HA-140
 Refrigeration cycle..... HA-11
 Release bearing (clutch)..... CL-11
 Reverse clutch..... AT-165
 Reverse gear (MT)..... MT-7
 Reverse idler shaft (MT)..... MT-7
 Reverse lamp switch (MT) - See
 Back-up lamp switch (MT)..... MT-4
 Revolution sensor (AT)..... AT-105
 Road wheel size..... GI-38
 Roof trim BT-19

S

SAE J1930 terminology list GI-44
 Seal - See Exterior BT-20
 Seat belt inspection MA-22
 Seat belt, front - See Front seat belt RS-3
 Seat belt, rear - See Rear seat belt RS-4
 Seat, front - See Front seat..... BT-36
 Seat, rear - See Rear seat..... BT-36
 Self-diagnostic results EC-40
 Shift control (MT) MT-9
 Shift fork (MT) MT-9
 Shift lock system AT-116
 Shift schedule..... AT-33
 Shift solenoid valve (AT) AT-107
 Shock absorber (adjustable, front) FA-20
 Shock absorber (adjustable, rear)..... RA-20
 Shock absorber (front)..... FA-15
 Shock absorber (rear)..... RA-17
 Side bearing preload diff. (except FF).... PD-18, 24
 Side trim..... BT-13
 Side window - See Rear side window..... BT-39
 Spark plug replacement..... MA-15
 Speedometer EL-92
 Spiral cable RS-10
 Spot lamp..... EL-86
 Spring (Wheelarch) height..... FA-5
 SRS - See Supplemental Restraint
 System..... RS-5
 SRS Trouble diagnoses RS-18
 SRS Wiring diagram RS-19
 Stabilizer bar (front) FA-19
 Stabilizer bar (rear) RA-19
 Stall test (AT)..... AT-108
 Standardized relay..... EL-6
 Starter EL-32
 Starting system EL-29
 Steering angle sensor..... ST-47
 Steering gear and linkage inspection..... MA-20
 Steering gear oil level..... MA-21
 Steering knuckle FA-10
 Steering linkage ST-13

Steering wheel and column ST-9
 Steering wheel play ST-5
 Steering wheel turning force..... ST-7
 Stop lamp..... EL-62
 Striking rod (MT) MT-9
 Sunload sensor HA-126
 Super HICAS linkage inspection MA-21
 Super HICAS system..... ST-40
 Super HICAS system trouble
 diagnoses..... ST-48
 Supplemental Restraint System..... RS-5
 Symbols and abbreviations..... GI-8
 Synchronizer (MT)..... MT-7

T

T-bar roof BT-29
 Tachometer EL-92
 Tail lamp..... EL-62
 Tension rod (front) FA-19
 Theft warning system EL-240
 Thermo control amp HA-62
 Thermostat..... LC-10
 Third link (front susp.)..... FA-16
 Three way catalyst EC-220
 Three way catalyst function (Left bank)..... EC-220
 Three way catalyst function
 (Right bank)..... EC-220
 Three way catalyst precautions GI-4
 Throttle bodies EM-21
 Throttle position sensor (TPS) EC-122
 Throttle position sensor adjustment..... EC-67
 Throttle position sensor inspection EC-126
 Throttle position switch..... AT-106
 Throwout bearing - See Clutch release
 bearing CL-11
 Tie-rod..... ST-21
 Tie-rod ball joints ST-17
 Tightening torque of standard bolts GI-43
 Time control system EL-111
 Timing belt EM-12
 Tire rotation..... MA-19
 Tire size GI-38
 Tooth contact diff. (except FF) PD-28
 Torque converter clutch solenoid valve..... AT-107
 Torque converter installation AT-127
 Tow truck towing..... GI-41
 Towing point GI-42
 Transmission case (MT)..... MT-6
 Transmission serial number GI-37
 Transverse link (front)..... FA-18
 Tread-FR&RR (Dimensions) GI-38
 Trim BT-13
 Trunk lid BT-7
 Trunk lid finisher BT-16
 Trunk lid opener - See Trunk lid..... BT-7
 Trunk lid opener, electric EL-161
 Trunk lid trim BT-16
 Trunk room lamp..... EL-86
 Trunk room trim BT-16

ALPHABETICAL INDEX

Turbocharger.....	EM-35
Turbocharger charge air cooler	EM-40
Turbocharger precautions	GI-4
Turn signal lamp	EL-73
Two trip detection logic	EC-37
Two-pole lift	GI-41

U

Under body	BT-44
Upper link (front susp.)	FA-16

V

Vacuum hose (brake system)	BR-14
Vacuum hose drawing (ECCS)	EC-15
Valve guide inspection	EM-27
Valve seat inspection	EM-29
Valve spring inspection	EM-30
Vehicle identification number	GI-36
Vehicle speed sensor (VSS)	EC-233
Viscosity number (SAE)	MA-8

W

Warning chime	EL-99
Warning lamps	EL-99
Washer, front.....	EL-131
Washer, rear	EL-137
Wastegate Valve Control Solenoid Valve	EC-250

Water cock control rod adjustment (auto A/C)	HA-128
Water cock control rod adjustment (manual A/C).....	HA-63
Water pump	LC-9
Water temperature gauge.....	EL-92
Weatherstrip - See Exterior	BT-20
Wheel alignment (front)	FA-8
Wheel alignment (rear super HICAS)	RA-21
Wheel alignment (rear)	RA-5
Wheel balance	MA-19
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-5
Wheel hub (front).....	FA-10
Wheel hub (rear)	RA-9
Wheel sensors (ABS).....	BR-28
Wheel size.....	GI-38
Wheelarch height.....	FA-5
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position (CTP) switch	EC-122
Width (Dimensions)	GI-38
Window, back - See Back window	BT-38
Window, back door - See Back door window	BT-40
Window, door.....	BT-10
Window, rear - See Rear window	BT-38
Window, side - See Rear side window.....	BT-39
Windshield	BT-38
Windshield washer - See Front washer	EL-131
Windshield wiper - See Front wiper	EL-131
Wiper and washer.....	EL-131
Wiper, front	EL-131
Wiper, rear	EL-137
Withdrawal lever (clutch)	CL-11