

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-39
A	
A/C component layout	ATC-23
A/C compressor mounting	ATC-130
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-15
A/C controller	ATC-107
A/C diagnostic work flow (auto A/C)	ATC-96
A/C evaporator	ATC-143
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-128
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-24
A/C lubrication oil	ATC-149
A/C operational check	ATC-57
A/C self-diagnoses (auto A/C)	ATC-49 , ATC-96
A/C service data specification	ATC-149
A/C trouble diagnoses (auto A/C)	ATC-36
A/C, A - Wiring diagram	ATC-42
A/T fluid checking	AT-12 , AT-50
A/T fluid replacement	AT-12
A/T fluid temperature sensor	AT-134
A/T IND - Wiring diagram	DI-77
A/T self-diagnoses	AT-97
A/T shift lock system	AT-230
A/T shift lock system - Wiring diagram	AT-231
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-100
A/T Wiring diagram AT - FTS	AT-135
A/T Wiring diagram AT - MMSW	AT-169
A/T Wiring diagram AT - NONDTC	AT-184
A/T Wiring diagram AT - PNP/SW	AT-107
A/T Wiring diagram AT - POWER	AT-124
A/T Wiring diagram AT - STSIG	AT-103
A/T Wiring diagram AT - VSS A/T	AT-112
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-540 , EC-547 , EC-561
Accelerator pedal released position learning	EC-42
Air bag	SRS-3
Air bag disposal	SRS-46
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-15
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-157 , EC-165
Air mix. door motor	ATC-68 , ATC-122
Ambient sensor	ATC-97 , ATC-109
Angular tightening application	EM-4
Antenna	AV-34
APPS1 - Wiring diagram	EC-542
APPS2 - Wiring diagram	EC-549
APPS3 - Wiring diagram	EC-563
ASC/BS - Wiring diagram	EC-509
ASC/SW - Wiring diagram	EC-502
ASCBOF - Wiring diagram	EC-601
ASCD	EC-635
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-617
Ashtray illumination	LT-115
AT indicator lamp	DI-77
Audio	AV-5
AUDIO - Wiring diagram	AV-9
Auto air conditioner - Wiring diagram	ATC-42
Auto amp	ATC-108
Auto anti-dazzling inside mirror	GW-52
Automatic amplifier	ATC-59 , ATC-108
Automatic transmission fluid replacement	MA-25
Axle	MA-30
Axle housing (rear)	RAX-8
B	
BACK/L - Wiring diagram	LT-92
Back-up lamp	LT-92
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-15 , SC-23
BCM (Body control module)	BCS-3
Blower motor	ATC-75 , ATC-115
Blower unit	ATC-113
Bose speaker amp.	AV-5
Brake booster	BR-17
Brake fluid change	BR-9
Brake fluid level	MA-28
Brake fluid level and line check	BR-9
Brake hydraulic line	BR-11
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-13
Brake pedal	BR-6
Brake switch	EC-534
BRK/SW - Wiring diagram	EC-535
Bulb specifications	LT-142
Bumper, front	EI-14
Bumper, rear	EI-17
C	
Camshaft	EM-65
Camshaft inspection	EM-67
Camshaft position sensor (PHASE)	EC-299
CAN - Wiring diagram	EC-136 , LAN-9 , LAN-36
CAN (Controller Area Network)	LAN-4 , LAN-8 , LAN-35
CAN communication ...	EC-29 , EC-135 , AT-30 , AT-99 , LT-8 , LT-59 , LT-96 , LT-132 , WW-9 , LAN-4 , LAN-8 , LAN-35

ALPHABETICAL INDEX

Canister-See EVAP canister [EC-624](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-22](#)
 CHIME - Wiring diagram [DI-84](#)
 Circuit breaker [PG-16](#)
 Clock [DI-99](#)
 CLOCK - Wiring diagram [DI-99](#)
 Closed loop control [EC-26](#)
 Clutch cover [CL-15](#)
 Clutch disc [CL-15](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-52](#)
 Combination lamp, rear, removal and installation
[LT-110](#)
 Combination meter [DI-4](#)
 Combination switch [LT-75](#)
 Component Location (auto A/C) [ATC-39](#)
 Compression pressure [EM-79](#)
 Compressor special service tool [ATC-15](#)
 Condenser ... [ATC-138](#), [ATC-141](#), [ATC-142](#), [ATC-143](#),
[ATC-144](#)
 CONSULT for TCS [BRC-19](#)
 Control units (terminal arrangement) [PG-67](#)
 Control valve (A/T) [AT-34](#)
 Controller Area Network (CAN) [LAN-4](#), [LAN-8](#), [LAN-35](#)
 Converter housing installation [AT-264](#)
 COOL/F - Wiring diagram [EC-467](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan motor [EC-475](#)
 Cowl top [EI-20](#)
 Cowl top cover [EI-20](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-633](#)
 Crankshaft position sensor (POS) [EC-293](#)
 Crash zone sensor [SRS-42](#)
 Cylinder head [EM-79](#)

D

D/LOCK - Wiring diagram [BL-22](#)
 Daytime light system [LT-29](#)
 Daytime running light - See Daytime light system [LT-29](#)
 Diagnosis sensor unit [SRS-45](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Differential carrier assembly [RFD-12](#)
 Differential carrier disassembly [RFD-16](#)
 Differential gear oil replacement [MA-26](#)
 Direct clutch solenoid valve [AT-156](#), [AT-158](#)
 Display and amp.assembly [ATC-59](#)
 Door glass [GW-49](#)
 Door glass Fitting Adjustment(Front) [GW-51](#)
 Door lock [BL-79](#)

Door mirror [GW-74](#)
 Door trim [EI-27](#)
 Door, front [BL-75](#), [GW-49](#)
 Drive belt [EM-13](#)
 Drive belt inspection [MA-13](#)
 Drive pinion diff. inspection [RFD-15](#)
 Drive pinion height [RFD-21](#), [RFD-24](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-35](#)
 DTRL - Wiring diagram [LT-34](#)
 Duct and grilles [ATC-124](#)

E

ECM power supply [EC-128](#), [EC-395](#)
 ECM/PW - Wiring diagram [EC-396](#)
 ECTS - Wiring diagram [EC-179](#)
 Electric throttle control actuator [EC-406](#), [EC-408](#)
 Electrical load signal circuit [EC-599](#)
 Electrical unit [PG-67](#)
 Electrical units location [PG-60](#)
 Electronic ignition (EI) system [EC-27](#)
 Engine control module (ECM) [EC-392](#)
 Engine control system diagram and chart [EC-22](#)
 Engine coolant [CO-8](#)
 Engine coolant temperature sensor (ECTS) ... [EC-177](#),
[EC-189](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-19](#)
 Engine oil precautions [GI-7](#)
 Engine removal [EM-90](#)
 ETC1 - Wiring diagram [EC-409](#)
 ETC2 - Wiring diagram [EC-417](#)
 ETC3 - Wiring diagram [EC-421](#)
 EVAP canister [EC-624](#)
 EVAP canister purge volume control solenoid valve
[EC-326](#), [EC-485](#)
 EVAP canister vent control valve [EC-333](#), [EC-493](#)
 EVAP control system (small leak) diagnosis .. [EC-317](#),
[EC-357](#)
 EVAP control system pressure sensor [EC-340](#),
[EC-343](#), [EC-349](#)
 EVAP control system purge flow monitoring diagnosis
[EC-312](#)
 EVAP vapor lines inspection [MA-21](#)
 Evaporative emission (EVAP) system [EC-621](#)
 Evaporator [ATC-143](#)
 Exhaust manifold [EM-23](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-22](#)
 Expansion valve [ATC-144](#)

F

F/LID - Wiring diagram [BL-43](#)
 F/PUMP - Wiring diagram [EC-588](#)
 Final drive disassembly [RFD-16](#)
 Final drive pre-inspection [RFD-15](#)
 Final drive removal and installation [RFD-10](#)

ALPHABETICAL INDEX

Floor trim [EI-33](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-134](#)
 Fluorescent leak detector [ATC-145](#)
 Flywheel (clutch) [CL-15](#)
 Flywheel runout(QR) [EM-119](#)
 Front axle [FAX-4](#)
 Front brake solenoid valve [AT-152, AT-154](#)
 Front bumper [EI-14](#)
 Front door [BL-75, GW-49](#)
 Front passenger air bag [SRS-39](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2, SRS-3, SRS-44](#)
 Front side air bag [SRS-40](#)
 Front suspension [FSU-5](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTTS - Wiring diagram [EC-268, EC-272](#)
 Fuel cut control (at no load high engine speed) . [EC-28](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-4](#)
 Fuel level sensor [EC-375, EC-377, EC-379](#)
 Fuel lid opener, electric [BL-42](#)
 Fuel line inspection [FL-3, MA-17](#)
 Fuel precautions [GI-5](#)
 Fuel pressure check [EC-44](#)
 Fuel pressure release [EC-44](#)
 Fuel pump [EC-587](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-3](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-266, EC-271](#)
 Fuel tank vacuum relief valve [EC-624](#)
 FUELB1 - Wiring diagram [EC-252, EC-260](#)
 FUELB2 - Wiring diagram [EC-253, EC-261](#)
 Fuse [PG-16](#)
 Fuse and fusible link box [PG-74](#)
 Fusible link [PG-16](#)

G

Gauges [DI-4](#)
 Glass [GW-11, GW-49](#)
 GPS antenna [AV-39](#)
 Ground distribution [PG-26](#)

H

H/LAMP - Wiring diagram [LT-10](#)
 Harness connector [PG-65](#)
 Harness layout [PG-38](#)
 Hazard warning lamp [LT-57](#)
 Headlining - See Roof trim [EI-34](#)
 Heated oxygen sensor 1 (bank 1) [EC-197, EC-207, EC-220, EC-425, EC-431](#)
 Heated oxygen sensor 1 (bank 2) [EC-197, EC-207, EC-220, EC-425, EC-431](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-141](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-141](#)

Heated oxygen sensor 2 (bank 1) [EC-230, EC-239, EC-437, EC-448](#)
 Heated oxygen sensor 2 (bank 2) [EC-230, EC-239, EC-437, EC-448](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-149](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-149](#)
 Heated seat [SE-55](#)
 Heater and cooling unit (Heater core) [ATC-117](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-128](#)
 HFC134a (R134a) system service tools [ATC-16](#)
 HFC134a system service equipment precaution [ATC-12](#)
 High & low reverse clutch solenoid valve [AT-160, AT-162](#)
 Hood [BL-12](#)
 Hood lock system [BL-14](#)
 Horn [WW-33](#)
 HORN - Wiring diagram [WW-33](#)
 HSEAT - Wiring diagram [SE-57](#)

I

IATS - Wiring diagram [EC-174](#)
 Idle air volume learning [EC-42](#)
 Idle mixture ratio [EC-31](#)
 Idle speed [EC-31](#)
 Idle speed control (ISC) [EC-383, EC-385](#)
 Ignition coil [EC-569](#)
 Ignition control system [EC-569](#)
 Ignition timing [EC-31](#)
 IGNSYS - Wiring diagram [EC-570](#)
 ILL - Wiring diagram [LT-134](#)
 Illumination [LT-131](#)
 In vehicle sensor [ATC-99, ATC-110](#)
 INJECT - Wiring diagram [EC-582](#)
 Injector [EC-581](#)
 Input clutch solenoid valve [AT-148, AT-150](#)
 INT/L - Wiring diagram [LT-112](#)
 Intake air temperature sensor [EC-172, EC-192](#)
 Intake door control linkage adjustment [ATC-74](#)
 Intake door motor [ATC-72, ATC-116](#)
 Intake manifold [EM-21](#)
 Intake manifold collector [EM-17](#)
 Intake sensor [ATC-105, ATC-112](#)
 Intake valve timing control (Bank 1) [EC-138](#)
 Intake valve timing control (Bank 2) [EC-138](#)
 Intake valve timing control solenoid valve (Bank 1) [EC-399](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-399](#)
 Integrated homelink transmitter [BL-138](#)
 Interior lamp [LT-116](#)
 IPDM (Intelligent power distribution module engine room) [PG-17](#)
 IVCB1 - Wiring diagram [EC-400](#)
 IVCB2 - Wiring diagram [EC-402](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

A
B
C
D
E
F
G
H
I
J
K
L
IDX

O

O2H1B1 - Wiring diagram [EC-143](#)
O2H1B2 - Wiring diagram [EC-145](#)
O2H2B1 - Wiring diagram [EC-151](#)
O2H2B2 - Wiring diagram [EC-153](#)
O2S1B1 - Wiring diagram .. [EC-199](#), [EC-210](#), [EC-223](#)
O2S1B2 - Wiring diagram .. [EC-201](#), [EC-212](#), [EC-225](#)
O2S2B1 - Wiring diagram .. [EC-232](#), [EC-242](#), [EC-440](#),

[EC-451](#)
O2S2B2 - Wiring diagram .. [EC-234](#), [EC-244](#), [EC-442](#),
[EC-453](#)

Oil cooler (engine)	LU-10
Oil filter	LU-9
Oil pan (engine)	EM-26
Oil pressure (engine)	LU-7
Oil pump (engine)	LU-12
Oil pump regulator valve (engine)	LU-12
Oil seal replacement (front of final drive)	RFD-6
Oil seal replacement (side of final drive)	RFD-8
Operating cylinder (clutch)	CL-11
ORVR (On-board Refueling Vapor Recovery) .	EC-628
Out side mirror	GW-74
Overheat	EC-463

P

P/ISCKT - Wiring diagram	WW-31
Park/Neutral position switch	EC-526
Park/neutral position switch (A/T)	AT-106
Parking brake control	PB-3
Parking lamp	LT-95
PCV (positive crankcase ventilation)	EC-633
PGC/V - Wiring diagram	EC-328 , EC-487
PHSB1 - Wiring diagram	EC-300
PHSB2 - Wiring diagram	EC-302
Pinion bearing preload diff.	RFD-30
Pinion gear height diff.	RFD-24
PNP/SW - Wiring diagram	EC-528
POS - Wiring diagram	EC-294
POWER - Wiring diagram	PG-5
Power door lock	BL-18
Power seat	SE-12
Power socket	WW-31
Power steering fluid level	PS-6 , MA-30
Power steering gear	PS-17
Power steering oil pump	PS-29
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-13
PRE/SE - Wiring diagram	EC-345 , EC-351
Precations for Leak detection dye	ATC-14
Precautions (General)	GI-4
Pressure plate - See Clutch cover	CL-15
Pressure switch 1	AT-154 , AT-174
Pressure switch 2	AT-166
Pressure switch 3	AT-150 , AT-176
Pressure switch 5	AT-158 , AT-178
Pressure switch 6	AT-162 , AT-180

N

NATS - Wiring diagram [BL-122](#)
 NAVI - Wiring diagram [AV-53](#)
 Navigation system [AV-38](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVIS (Nissan vehicle immobilizer system) [BL-119](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

ALPHABETICAL INDEX

Pressure test (A/T)	AT-51
Propeller shaft	PR-5
Propeller shaft on vehicle service	PR-5
Propeller shaft vibration	PR-5
PS/SEN - Wiring diagram	EC-388

R

Radiator	CO-11
Radio - See Audio	AV-5
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-110
Rear cover packing replacement diff.	RFD-31
Rear suspension	RSU-5
Refrigerant connection precaution	ATC-6
Refrigerant discharging evacuating charging	ATC-128
Refrigerant general precaution	ATC-6
Refrigerant lines	ATC-128
Refrigerant pressure sensor	EC-594 , ATC-85 , ATC-142
Refrigeration cycle	ATC-19
Release bearing (clutch)	CL-13
Remote keyless entry system	BL-50
Removal and installation (A/T)	AT-263
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12
Revolution sensor (A/T)	AT-110
Ring gear diff. inspection	RFD-15
Rocker cover	EM-39
Room lamp - See Interior lamp	LT-116
ROOM/L - Wiring diagram	LT-120
RP/SEN - Wiring diagram	EC-595

S

Seat belt inspection	SB-5
Seat belt pre-tensioner disposal	SRS-46
Seat belt, front	SB-4
SEN/PW - Wiring diagram	EC-481
SHIFT - Wiring diagram	AT-231
Shift lock system	AT-230
Shift schedule	AT-328
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-43
Side bearing preload diff.	RFD-23
Side flange installation diff.	RFD-9
SMJ (super multiple junction)	PG-69
Spark plug replacement	MA-20
Specification value	EC-123
Speedometer	DI-4
Spiral cable	SRS-37
SRS - See Supplemental Restraint System	SRS-5
SRS Trouble diagnoses	SRS-7
Stabilizer bar (rear)	RSU-16
Stall test (A/T)	AT-50
Standardized relay	PG-71

START - Wiring diagram	SC-12
Starter	SC-10
Starting system	SC-10
Steering gear and linkage inspection	MA-29
Steering linkage	PS-17
Steering wheel and column	PS-8 , PS-10
Steering wheel turning force	PS-8
Stop lamp	LT-89
Stop lamp switch	EC-534
STOP/L - Wiring diagram	LT-89
Sunload sensor	ATC-102 , ATC-111
Supplemental Restraint System	SRS-5
Suspension	MA-30
Symbols and abbreviations	GI-10 , GI-23

T

Tachometer	DI-4
Tail lamp	LT-95
TAIL/L - Wiring diagram	LT-98
TCM circuit diagram	AT-49
TCM inspection table	AT-84
TCS - Wiring diagram	BRC-14
Thermostat	CO-23
Three way catalyst	EM-23
Three way catalyst function (Bank 1)	EC-307
Three way catalyst function (Bank 2)	EC-307
Three way catalyst precautions	GI-5
Throttle body	EM-20
Throttle control motor	EC-420
Throttle control motor relay	EC-415
Throttle position sensor (TPS)	EC-182 , EC-275 , EC-476 , EC-478 , EC-554
Throwout bearing - See Clutch release bearing	CL-13
Thrust washer selection diff.	RFD-22
Tie-rod	PS-17
Timing chain	EM-49
Tire rotation	WT-7 , MA-27
Tooth contact diff.	RFD-27
Torque converter installation	AT-264
Torque convertor clutch solenoid valve	AT-117 , AT-119
TPS1 - Wiring diagram	EC-277
TPS2 - Wiring diagram	EC-184
TPS3 - Wiring diagram	EC-556
Transverse link (front)	FSU-13
Triple meter	DI-34
TRNSCV - Wiring diagram	BL-138
Trouble diagnoses	GI-11
Trunk lid	BL-81
Turbine revolution sensor	AT-139
Turbocharger precautions	GI-6
TURN - Wiring diagram	LT-61
Turn signal lamp	LT-57

U

Unified meter and A/C amp.	DI-58
Upper link (front susp.)	FSU-14

ALPHABETICAL INDEX

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-23
Valve clearance	EM-72
Valve guide	EM-84
Valve lifter	EM-69
Valve seat	EM-86
Valve spring	EM-88
Vanity mirror lamp	LT-111
Vehicle security (theft warning) system	BL-96
Vehicle speed sensor (VSS)	EC-381
VEHSEC - Wiring diagram	BL-101
VENT/V - Wiring diagram	EC-335 , EC-495

W

WARN - Wiring diagram	DI-67
Warning chime	DI-81
Warning lamps	DI-66
Washer, front	WW-4
Water pump	CO-19
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-6 , MA-26
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-6
Wheel sensors (TCS)	BRC-42
Window, door	GW-49
Windshield	GW-11
WIPER - Wiring diagram	WW-11
Wiper, front	WW-4
Wiring Diagram (Cell code) list	PG-57
Wiring diagrams	GI-15
Withdrawal lever (clutch)	CL-13

A
B
C
D
E
F
G
H
I
J
K
L

IDX