

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

# ALPHABETICAL INDEX

## Numerics

3METER - Wiring diagram ..... [DI-32](#)

## A

A/C component layout ..... [ATC-23](#)  
A/C compressor mounting ..... [ATC-130](#)  
A/C compressor precaution ..... [ATC-12](#)  
A/C compressor special service tool ..... [ATC-15](#)  
A/C controller ..... [ATC-107](#)  
A/C diagnostic work flow (auto A/C) ..... [ATC-96](#)  
A/C evaporator ..... [ATC-143](#)  
A/C HFC134a (R134a) system precaution ..... [ATC-5](#)  
A/C HFC134a (R134a) system service procedure ..... [ATC-128](#)  
A/C HFC134a (R134a) system service tools ... [ATC-16](#)  
A/C HFC134a system service equipment precaution ... [ATC-12](#)  
A/C lubricant (R134a) ..... [ATC-24](#)  
A/C lubrication oil ..... [ATC-149](#)  
A/C operational check ..... [ATC-57](#)  
A/C self-diagnoses (auto A/C) ..... [ATC-49](#), [ATC-96](#)  
A/C service data specification ..... [ATC-149](#)  
A/C trouble diagnoses (auto A/C) ..... [ATC-36](#)  
A/C, A - Wiring diagram ..... [ATC-42](#)  
A/T fluid checking ..... [AT-12](#), [AT-53](#), [MA-22](#)  
A/T fluid replacement ..... [AT-12](#), [MA-24](#)  
A/T fluid temperature sensor ..... [AT-139](#)  
A/T IND - Wiring diagram ..... [DI-75](#)  
A/T self-diagnoses ..... [AT-105](#)  
A/T shift lock system ..... [AT-239](#)  
A/T shift lock system - Wiring diagram ..... [AT-240](#)  
A/T trouble diagnoses ..... [AT-43](#)  
A/T Wiring diagram AT - CAN ..... [AT-110](#)  
A/T Wiring diagram AT - FTS ..... [AT-140](#)  
A/T Wiring diagram AT - MAIN ..... [AT-186](#)  
A/T Wiring diagram AT - MMSW ..... [AT-174](#)  
A/T Wiring diagram AT - NONDTC ..... [AT-193](#)  
A/T Wiring diagram AT - PNP/SW ..... [AT-118](#)  
A/T Wiring diagram AT - STSIG ..... [AT-113](#)  
A/T Wiring diagram AT - VSS A/T ..... [AT-123](#)  
Accelerator control system ..... [ACC-3](#)  
Accelerator pedal position (APP) sensor ..... [EC-655](#), [EC-663](#), [EC-679](#)  
Accelerator pedal released position learning ..... [EC-91](#)  
AF1B1-Wiring diagram ..... [EC-529](#), [EC-538](#), [EC-547](#), [EC-557](#), [EC-568](#), [EC-578](#), [EC-590](#)  
AF1B2-Wiring diagram ..... [EC-531](#), [EC-540](#), [EC-549](#), [EC-559](#), [EC-570](#), [EC-580](#), [EC-592](#)  
AF1HB1-Wiring diagram ..... [EC-434](#)  
AF1HB2-Wiring diagram ..... [EC-436](#)  
Air bag ..... [SRS-3](#)  
Air bag precautions ..... [SRS-3](#)  
Air bleeding (hydraulic clutch) ..... [CL-7](#)  
Air bleeding for brake system ..... [BR-10](#)  
Air cleaner and air duct ..... [EM-15](#)  
Air cleaner filter replacement ..... [MA-18](#)  
Air conditioner cut control ..... [EC-28](#)

Air flow meter - See Mass air flow sensor ..... [EC-204](#), [EC-213](#)  
Air fuel ratio sensor 1 ..... [EC-527](#), [EC-536](#), [EC-545](#), [EC-555](#), [EC-565](#), [EC-575](#), [EC-587](#)  
Air fuel ratio sensor 1 heater ..... [EC-433](#)  
Air mix. door motor ..... [ATC-68](#), [ATC-122](#)  
Air spoiler, rear ..... [EI-30](#)  
Ambient sensor ..... [ATC-97](#), [ATC-109](#)  
Angular tightening application ..... [EM-4](#)  
Antenna ..... [AV-45](#)  
APPS1 - Wiring diagram ..... [EC-657](#)  
APPS2 - Wiring diagram ..... [EC-665](#)  
APPS3 - Wiring diagram ..... [EC-681](#)  
ASC/BS - Wiring diagram ..... [EC-626](#), [EC-628](#)  
ASC/SW - Wiring diagram ..... [EC-618](#)  
ASCBOF - Wiring diagram ..... [EC-724](#), [EC-726](#)  
ASCD ..... [EC-29](#)  
ASCD (automatic speed control device) ..... [ACS-2](#)  
ASCD brake switch ..... [EC-624](#), [EC-723](#)  
ASCD indicator lamp ..... [EC-738](#)  
ASCD steering switch ..... [EC-616](#)  
ASCIND - Wiring diagram ..... [EC-739](#)  
Ashtray illumination ..... [LT-213](#)  
AT indicator lamp ..... [DI-75](#)  
Audio ..... [AV-6](#)  
AUDIO - Wiring diagram ..... [AV-11](#)  
Auto air conditioner - Wiring diagram ..... [ATC-42](#)  
Auto amp ..... [ATC-108](#)  
Auto anti-dazzling inside mirror ..... [GW-55](#)  
Automatic amplifier ..... [ATC-59](#), [ATC-108](#)  
Axle ..... [MA-29](#)  
Axle housing (rear) ..... [RAX-8](#)

## B

Back Door ..... [BL-109](#), [BL-110](#)  
Back door ..... [BL-109](#), [BL-110](#)  
Back door opener - See Back door ..... [BL-114](#)  
BACK/L - Wiring diagram ..... [LT-182](#)  
Back-up lamp ..... [LT-182](#)  
Back-up lamp switch (M/T) ..... [MT-11](#)  
Basic inspection ..... [EC-72](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-7](#), [SC-15](#), [SC-23](#)  
BCM (Body control module) ..... [BCS-3](#)  
Blower motor ..... [ATC-74](#), [ATC-115](#)  
Blower unit ..... [ATC-113](#)  
Bose speaker amp. .... [AV-6](#), [AV-7](#)  
Brake booster ..... [BR-22](#)  
Brake fluid change ..... [BR-9](#)  
Brake fluid level ..... [MA-27](#)  
Brake fluid level and line check ..... [BR-9](#)  
Brake hydraulic line ..... [BR-11](#)  
Brake inspection ..... [MA-27](#)  
Brake lines and cables inspection ..... [MA-27](#)  
Brake master cylinder ..... [BR-14](#)  
Brake pedal ..... [BR-6](#)  
Brake switch ..... [EC-650](#)

# ALPHABETICAL INDEX

BRK/SW - Wiring diagram ..... [EC-651](#)  
 Bulb specifications ..... [LT-253](#)  
 Bumper, front ..... [EI-14](#)  
 Bumper, rear ..... [EI-17](#)

## C

Camshaft ..... [EM-101](#)  
 Camshaft inspection ..... [EM-103](#)  
 Camshaft position sensor (PHASE) ..... [EC-329](#)  
 CAN - Wiring diagram ..... [EC-177](#), [LAN-31](#), [LAN-55](#),  
[LAN-76](#), [LAN-97](#), [LAN-119](#)  
 CAN (Controller Area Network) ..... [LAN-21](#), [LAN-30](#),  
[LAN-54](#), [LAN-75](#), [LAN-96](#), [LAN-118](#)  
 CAN communication . [EC-31](#), [EC-176](#), [AT-31](#), [AT-109](#),  
[WT-12](#), [LT-9](#), [LT-40](#), [LT-149](#), [LT-189](#), [LT-241](#), [WW-9](#),  
[LAN-21](#), [LAN-30](#), [LAN-54](#), [LAN-75](#), [LAN-96](#), [LAN-118](#)  
 CHARGE - Wiring diagram ..... [SC-22](#)  
 Charging system ..... [SC-21](#)  
 Chassis and body maintenance ..... [MA-22](#)  
 CHIME - Wiring diagram ..... [DI-83](#)  
 Circuit breaker ..... [PG-16](#)  
 Closed loop control ..... [EC-25](#)  
 Clutch cover ..... [CL-15](#)  
 Clutch disc ..... [CL-15](#)  
 Clutch master cylinder ..... [CL-8](#)  
 Clutch operating cylinder ..... [CL-11](#)  
 Clutch pedal ..... [CL-5](#)  
 Clutch release bearing ..... [CL-13](#)  
 Clutch release mechanism ..... [CL-13](#)  
 Clutch withdrawal lever ..... [CL-13](#)  
 Coil spring (front) ..... [FSU-10](#)  
 Collision diagnosis ..... [SRS-51](#)  
 Combination lamp, front, removal and installation .....  
[LT-64](#), [LT-144](#)  
 Combination lamp, rear, removal and installation .....  
[LT-209](#)  
 Combination meter ..... [DI-4](#)  
 Combination meter removal and installation - See  
 Instrument panel ..... [IP-11](#)  
 Combination switch ..... [LT-171](#)  
 Component Location (auto A/C) ..... [ATC-39](#)  
 Compression pressure ..... [EM-119](#)  
 Compressor special service tool ..... [ATC-15](#)  
 Condenser ... [ATC-138](#), [ATC-141](#), [ATC-142](#), [ATC-143](#),  
[ATC-144](#)  
 Console box - See Instrument panel ..... [IP-10](#)  
 CONSULT for VDC ..... [BRC-109](#)  
 Control units (terminal arrangement) ..... [PG-82](#)  
 Control valve (A/T) ..... [AT-37](#)  
 Controller Area Network (CAN) ..... [LAN-21](#), [LAN-30](#),  
[LAN-54](#), [LAN-75](#), [LAN-96](#), [LAN-118](#)  
 Converter housing installation ..... [AT-274](#)  
 COOL/F - Wiring diagram ..... [EC-509](#)  
 Cooling circuit (engine) ..... [CO-8](#)  
 Cooling fan ..... [CO-21](#)  
 Cooling fan motor ..... [EC-517](#)  
 Cowl top ..... [EI-20](#)  
 Cowl top cover ..... [EI-20](#)

Crankcase ventilation system - See Positive crankcase  
 ventilation ..... [EC-44](#)  
 Crankshaft position sensor (POS) ..... [EC-321](#)  
 Crash zone sensor ..... [SRS-47](#)  
 Cylinder head ..... [EM-119](#)

## D

D/LOCK - Wiring diagram ..... [BL-26](#)  
 Daytime light system ..... [LT-67](#), [LT-108](#)  
 Daytime running light - See Daytime light system .....  
[LT-67](#), [LT-108](#)  
 DEF - Wiring diagram ..... [GW-61](#), [GW-65](#)  
 Diagnosis sensor unit ..... [SRS-50](#)  
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),  
[EC-48](#)  
 Diagnostic trouble code (DTC) inspection priority chart  
[EC-102](#)  
 Differential gear oil replacement ..... [MA-24](#)  
 Direct clutch solenoid valve ..... [AT-161](#), [AT-163](#)  
 Display and amp.assembly ..... [ATC-59](#)  
 Door glass ..... [GW-52](#)  
 Door glass Fitting Adjustment(Front) ..... [GW-54](#)  
 Door lock ..... [BL-107](#)  
 Door mirror ..... [GW-85](#)  
 Door trim ..... [EI-33](#)  
 Door, front ..... [BL-101](#), [BL-102](#), [GW-52](#)  
 Drive belt ..... [EM-13](#)  
 Drive shaft (rear) ..... [RAX-10](#)  
 Driver air bag ..... [SRS-40](#)  
 DTRL - Wiring diagram ..... [LT-73](#), [LT-113](#)  
 Duct and grilles ..... [ATC-124](#)

## E

ECM power supply ..... [EC-167](#), [EC-440](#)  
 ECM/PW - Wiring diagram ..... [EC-441](#)  
 ECTS - Wiring diagram ..... [EC-229](#)  
 Electric throttle control actuator ..... [EC-461](#), [EC-463](#)  
 Electrical load signal circuit ..... [EC-722](#)  
 Electrical unit ..... [PG-82](#)  
 Electrical units location ..... [PG-74](#)  
 Electronic ignition (EI) system ..... [EC-26](#)  
 Engine control circuit diagram ..... [EC-122](#)  
 Engine control component parts location ..... [EC-109](#),  
[EC-115](#)  
 Engine control module (ECM) ..... [EC-430](#)  
 Engine control system diagram ..... [EC-22](#), [EC-23](#)  
 Engine coolant ..... [CO-10](#)  
 Engine coolant temperature sensor (ECTS) ... [EC-227](#),  
[EC-241](#)  
 Engine fail-safe system ..... [EC-104](#)  
 Engine oil ..... [LU-8](#)  
 Engine oil filter replacement ..... [MA-19](#)  
 Engine oil precautions ..... [GI-7](#)  
 Engine removal ..... [EM-131](#)  
 ETC1 - Wiring diagram ..... [EC-464](#)  
 ETC2 - Wiring diagram ..... [EC-472](#)  
 ETC3 - Wiring diagram ..... [EC-476](#)

## ALPHABETICAL INDEX

EVAP canister ..... [EC-35](#)  
 EVAP canister purge volume control solenoid valve ....  
[EC-358](#), [EC-599](#)  
 EVAP canister vent control valve ..... [EC-365](#), [EC-607](#)  
 EVAP control system (small leak) diagnosis ... [EC-350](#)  
 EVAP control system pressure sensor ..... [EC-374](#),  
[EC-377](#), [EC-386](#)  
 EVAP control system purge flow monitoring diagnosis  
[EC-345](#)  
 EVAP vapor lines inspection ..... [MA-21](#)  
 Evaporative emission (EVAP) system ..... [EC-32](#)  
 Evaporator ..... [ATC-143](#)  
 EVCB1 - Wiring diagram ..... [EC-198](#)  
 EVCB2 - Wiring diagram ..... [EC-200](#)  
 EVCSB1 - Wiring diagram ..... [EC-445](#)  
 EVCSB2 - Wiring diagram ..... [EC-447](#)  
 Exhaust manifold ..... [EM-24](#)  
 Exhaust system ..... [EX-3](#)  
 Exhaust system inspection ..... [EX-3](#), [MA-22](#)  
 Exhaust valve timing control (Bank 1) ..... [EC-184](#)  
 Exhaust valve timing control (Bank 2) ..... [EC-184](#)  
 Exhaust valve timing control learning ..... [EC-90](#)  
 Exhaust valve timing control magnet retarder (Bank 1)  
[EC-197](#)  
 Exhaust valve timing control magnet retarder (Bank 2)  
[EC-197](#)  
 Exhaust valve timing control position sensor (Bank 1) .  
[EC-444](#)  
 Exhaust valve timing control position sensor (Bank 2) .  
[EC-444](#)  
 Expansion valve ..... [ATC-144](#)

### F

F/LID - Wiring diagram ..... [BL-54](#)  
 F/PUMP - Wiring diagram ..... [EC-710](#)  
 Final drive pre-inspection ..... [RFD-17](#), [RFD-37](#)  
 Floor trim ..... [EI-43](#)  
 Flow charts ..... [GI-27](#)  
 Fluid temperature sensor (A/T) ..... [AT-139](#)  
 Fluorescent leak detector ..... [ATC-145](#)  
 Flywheel (clutch) ..... [CL-15](#)  
 Flywheel runout(QR) ..... [EM-166](#)  
 Freeze frame data ..... [EC-52](#)  
 Front axle ..... [FAX-4](#)  
 Front brake solenoid valve ..... [AT-157](#), [AT-159](#)  
 Front bumper ..... [EI-14](#)  
 Front combination lamp removal and installation [LT-64](#),  
[LT-144](#)  
 Front door ..... [BL-101](#), [BL-102](#), [GW-52](#)  
 Front passenger air bag ..... [SRS-44](#)  
 Front seat belt ..... [SB-4](#)  
 Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-49](#)  
 Front suspension ..... [FSU-5](#)  
 Front washer ..... [WW-4](#)  
 Front wiper ..... [WW-4](#)  
 FTTS - Wiring diagram ..... [EC-291](#), [EC-295](#)  
 Fuel cut control (at no load high engine speed) . [EC-27](#)  
 Fuel filter replacement ..... [FL-4](#)

Fuel gauge ..... [DI-4](#)  
 Fuel injection system (Bank 1) ..... [EC-270](#), [EC-280](#)  
 Fuel injection system (Bank 2) ..... [EC-270](#), [EC-280](#)  
 Fuel injector ..... [EC-701](#)  
 Fuel level sensor ..... [EC-413](#), [EC-415](#), [EC-417](#)  
 Fuel lid opener, electric ..... [BL-53](#)  
 Fuel line inspection ..... [FL-3](#), [MA-18](#)  
 Fuel precautions ..... [GI-5](#)  
 Fuel pressure check ..... [EC-94](#)  
 Fuel pressure release ..... [EC-94](#)  
 Fuel pump ..... [EC-709](#)  
 Fuel pump and gauge ..... [FL-4](#)  
 Fuel system ..... [FL-3](#)  
 Fuel tank ..... [FL-10](#)  
 Fuel tank temperature sensor ..... [EC-289](#), [EC-294](#)  
 Fuel tank vacuum relief valve ..... [EC-35](#)  
 FUEL B1 - Wiring diagram ..... [EC-272](#), [EC-282](#)  
 FUEL B2 - Wiring diagram ..... [EC-273](#), [EC-283](#)  
 Fuse ..... [PG-16](#)  
 Fuse and fusible link box ..... [PG-89](#)  
 Fusible link ..... [PG-16](#)

### G

Gauges ..... [DI-4](#)  
 Generic scan tool (GST) ..... [EC-148](#)  
 Glass ..... [GW-11](#), [GW-52](#)  
 Ground distribution ..... [PG-30](#)

### H

H/LAMP - Wiring diagram ..... [LT-11](#), [LT-42](#)  
 Harness connector ..... [PG-80](#)  
 Harness layout ..... [PG-46](#)  
 Hazard warning lamp ..... [LT-147](#)  
 Headlamp ..... [LT-7](#), [LT-38](#)  
 Headlamp removal and installation ..... [LT-64](#), [LT-144](#)  
 Headlining - See Roof trim ..... [EI-44](#), [EI-45](#)  
 Heated oxygen sensor 2 (bank 1) .... [EC-250](#), [EC-259](#),  
[EC-480](#), [EC-491](#)  
 Heated oxygen sensor 2 (bank 2) .... [EC-250](#), [EC-259](#),  
[EC-480](#), [EC-491](#)  
 Heated oxygen sensor 2 heater (bank 1) ..... [EC-189](#)  
 Heated oxygen sensor 2 heater (bank 2) ..... [EC-189](#)  
 Heated seat ..... [SE-57](#)  
 Heater and cooling unit (Heater core) ..... [ATC-117](#)  
 HFC134a (R134a) system precaution ..... [ATC-5](#)  
 HFC134a (R134a) system service procedure [ATC-128](#)  
 HFC134a (R134a) system service tools ..... [ATC-16](#)  
 HFC134a system service equipment precaution .....  
[ATC-12](#)  
 High & low reverse clutch solenoid valve ..... [AT-165](#),  
[AT-167](#)  
 Hood ..... [BL-13](#)  
 Hood lock system ..... [BL-16](#)  
 Horn ..... [WW-56](#)  
 HORN - Wiring diagram ..... [WW-56](#)  
 How to erase DTC for OBD system ..... [EC-61](#)

# ALPHABETICAL INDEX

## I

|                                                                |                                                   |
|----------------------------------------------------------------|---------------------------------------------------|
| IATS - Wiring diagram .....                                    | <a href="#">EC-223</a>                            |
| Idle air volume learning .....                                 | <a href="#">EC-92</a>                             |
| Idle mixture ratio .....                                       | <a href="#">EC-78</a>                             |
| Idle speed .....                                               | <a href="#">EC-77</a>                             |
| Idle speed control (ISC) .....                                 | <a href="#">EC-421</a> , <a href="#">EC-423</a>   |
| Ignition coil .....                                            | <a href="#">EM-34</a> , <a href="#">EC-688</a>    |
| Ignition control system .....                                  | <a href="#">EC-688</a>                            |
| Ignition timing .....                                          | <a href="#">EC-77</a>                             |
| IGNSYS - Wiring diagram .....                                  | <a href="#">EC-689</a>                            |
| ILL - Wiring diagram .....                                     | <a href="#">LT-244</a>                            |
| Illumination .....                                             | <a href="#">LT-240</a>                            |
| In vehicle sensor .....                                        | <a href="#">ATC-99</a> , <a href="#">ATC-110</a>  |
| INJECT - Wiring diagram .....                                  | <a href="#">EC-702</a>                            |
| Injector .....                                                 | <a href="#">EC-701</a>                            |
| Input clutch solenoid valve .....                              | <a href="#">AT-153</a> , <a href="#">AT-155</a>   |
| Instrument panel .....                                         | <a href="#">IP-10</a>                             |
| Intake air temperature sensor .....                            | <a href="#">EC-221</a> , <a href="#">EC-245</a>   |
| Intake door control linkage adjustment .....                   | <a href="#">ATC-73</a>                            |
| Intake door motor .....                                        | <a href="#">ATC-71</a> , <a href="#">ATC-116</a>  |
| Intake manifold .....                                          | <a href="#">EM-22</a>                             |
| Intake manifold collector .....                                | <a href="#">EM-17</a>                             |
| Intake sensor .....                                            | <a href="#">ATC-105</a> , <a href="#">ATC-112</a> |
| Intake valve timing control (Bank 1) .....                     | <a href="#">EC-179</a>                            |
| Intake valve timing control (Bank 2) .....                     | <a href="#">EC-179</a>                            |
| Intake valve timing control solenoid valve (Bank 1) .....      | <a href="#">EC-454</a>                            |
| Intake valve timing control solenoid valve (Bank 2) .....      | <a href="#">EC-454</a>                            |
| Integrated homelink transmitter .....                          | <a href="#">BL-183</a>                            |
| Interior .....                                                 | <a href="#">EI-35</a>                             |
| Interior lamp .....                                            | <a href="#">LT-214</a>                            |
| IPDM (Intelligent power distribution module engine room) ..... | <a href="#">PG-17</a>                             |
| IVCB1 - Wiring diagram .....                                   | <a href="#">EC-455</a>                            |
| IVCB2 - Wiring diagram .....                                   | <a href="#">EC-457</a>                            |
| IVIS (Infiniti vehicle immobilizer system) precautions ...     | <a href="#">GI-3</a>                              |

## K

|                               |                        |
|-------------------------------|------------------------|
| KEYLES - Wiring diagram ..... | <a href="#">BL-69</a>  |
| Knock sensor (KS) .....       | <a href="#">EC-316</a> |
| KS - Wiring diagram .....     | <a href="#">EC-317</a> |

## L

|                                        |                                                 |
|----------------------------------------|-------------------------------------------------|
| LAN system circuit .....               | <a href="#">ATC-61</a>                          |
| License lamp .....                     | <a href="#">LT-187</a>                          |
| Line pressure solenoid valve .....     | <a href="#">AT-132</a>                          |
| Line pressure test (A/T) .....         | <a href="#">AT-54</a>                           |
| Liquid gasket application .....        | <a href="#">LU-2</a> , <a href="#">CO-2</a>     |
| Location of electrical units .....     | <a href="#">PG-74</a>                           |
| Lock, door .....                       | <a href="#">BL-107</a>                          |
| Low coast brake solenoid valve .....   | <a href="#">AT-169</a> , <a href="#">AT-171</a> |
| Low tire pressure warning system ..... | <a href="#">WT-10</a>                           |
| Lubricant (R134a) A/C .....            | <a href="#">ATC-6</a> , <a href="#">ATC-24</a>  |
| Lubrication circuit (engine) .....     | <a href="#">LU-4</a>                            |

|                           |                         |
|---------------------------|-------------------------|
| Lubrication oil A/C ..... | <a href="#">ATC-149</a> |
|---------------------------|-------------------------|

## M

|                                             |                                                  |
|---------------------------------------------|--------------------------------------------------|
| M/ANT - Wiring diagram .....                | <a href="#">AV-46</a>                            |
| M/T major overhaul .....                    | <a href="#">MT-26</a>                            |
| M/T oil replacement .....                   | <a href="#">MT-9</a>                             |
| M/T removal and installation .....          | <a href="#">MT-18</a>                            |
| MAFS - Wiring diagram .....                 | <a href="#">EC-207</a> , <a href="#">EC-215</a>  |
| Magnet clutch .....                         | <a href="#">ATC-79</a>                           |
| MAIN - Wiring diagram .....                 | <a href="#">EC-167</a>                           |
| Maintenance (engine) .....                  | <a href="#">MA-14</a>                            |
| Major overhaul (Final drive) .....          | <a href="#">RFD-16</a>                           |
| Malfunction indicator lamp (MIL) .....      | <a href="#">EC-63</a>                            |
| Manual transmission oil replacement .....   | <a href="#">MA-22</a>                            |
| Mass air flow sensor (MAFS) .....           | <a href="#">EC-204</a> , <a href="#">EC-213</a>  |
| Master cylinder (clutch) .....              | <a href="#">CL-8</a>                             |
| Meter .....                                 | <a href="#">DI-4</a>                             |
| METER - Wiring diagram .....                | <a href="#">DI-9</a>                             |
| MIL data link connectors circuit .....      | <a href="#">EC-741</a>                           |
| MIL/DL - Wiring diagram .....               | <a href="#">EC-741</a>                           |
| MIRROR - Wiring diagram .....               | <a href="#">GW-84</a>                            |
| Mirror, door .....                          | <a href="#">GW-85</a>                            |
| Mirror, out side .....                      | <a href="#">GW-85</a>                            |
| Misfire .....                               | <a href="#">EC-306</a>                           |
| Mode door control linkage adjustment .....  | <a href="#">ATC-67</a>                           |
| Mode door motor .....                       | <a href="#">ATC-65</a> , <a href="#">ATC-121</a> |
| Molding - See Exterior .....                | <a href="#">EI-22</a> , <a href="#">EI-26</a>    |
| Multiport fuel injection (MFI) system ..... | <a href="#">EC-24</a>                            |
| Multiport fuel injection precautions .....  | <a href="#">GI-6</a>                             |

## N

|                                                      |                        |
|------------------------------------------------------|------------------------|
| NATS - Wiring diagram .....                          | <a href="#">BL-167</a> |
| NAVI - Wiring diagram .....                          | <a href="#">AV-65</a>  |
| Navigation system .....                              | <a href="#">AV-49</a>  |
| NVH troubleshooting (BR) .....                       | <a href="#">BR-5</a>   |
| NVH troubleshooting (Final drive) .....              | <a href="#">RFD-7</a>  |
| NVH troubleshooting (Propeller shaft) .....          | <a href="#">PR-4</a>   |
| NVIS (Nissan vehicle immobilizer system) .....       | <a href="#">BL-164</a> |
| NVIS (Nissan vehicle immobilizer system) precautions | <a href="#">GI-3</a>   |

## O

|                                                   |                                                                                                   |
|---------------------------------------------------|---------------------------------------------------------------------------------------------------|
| O2H2B1 - Wiring diagram .....                     | <a href="#">EC-191</a>                                                                            |
| O2H2B2 - Wiring diagram .....                     | <a href="#">EC-193</a>                                                                            |
| O2S2B1 - Wiring diagram ..                        | <a href="#">EC-252</a> , <a href="#">EC-262</a> , <a href="#">EC-483</a> , <a href="#">EC-494</a> |
| O2S2B2 - Wiring diagram ..                        | <a href="#">EC-254</a> , <a href="#">EC-264</a> , <a href="#">EC-485</a> , <a href="#">EC-496</a> |
| Oil cooler (engine) .....                         | <a href="#">LU-12</a>                                                                             |
| Oil filter .....                                  | <a href="#">LU-11</a>                                                                             |
| Oil pressure (engine) .....                       | <a href="#">LU-9</a>                                                                              |
| Oil pump (engine) .....                           | <a href="#">LU-14</a>                                                                             |
| Oil pump regulator valve (engine) .....           | <a href="#">LU-14</a>                                                                             |
| Oil seal replacement (front of final drive) ..... | <a href="#">RFD-10</a>                                                                            |
| Oil seal replacement (side of final drive) .....  | <a href="#">RFD-12</a>                                                                            |
| On board diagnostic system .....                  | <a href="#">EC-47</a>                                                                             |

## ALPHABETICAL INDEX

Operating cylinder (clutch) ..... [CL-11](#)  
 ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)  
 Out side mirror ..... [GW-85](#)  
 Overheat ..... [EC-505](#)

### P

P/SCKT - Wiring diagram ..... [WW-54](#)  
 Park/Neutral position switch ..... [EC-642](#)  
 Park/neutral position switch (A/T) ..... [AT-117](#)  
 Parking brake control ..... [PB-3](#)  
 Parking lamp ..... [LT-187](#)  
 PCV (positive crankcase ventilation) ..... [EC-44](#)  
 PGC/V - Wiring diagram ..... [EC-360](#), [EC-601](#)  
 PHSB1 - Wiring diagram ..... [EC-331](#)  
 PHSB2 - Wiring diagram ..... [EC-333](#)  
 PNP/SW - Wiring diagram ..... [EC-644](#), [EC-646](#)  
 POS - Wiring diagram ..... [EC-323](#)  
 POWER - Wiring diagram ..... [PG-5](#)  
 Power door lock ..... [BL-21](#)  
 Power socket ..... [WW-54](#)  
 Power steering fluid level ..... [PS-6](#), [MA-29](#)  
 Power steering gear ..... [PS-17](#)  
 Power steering oil pump ..... [PS-29](#)  
 Power steering pressure (PSP) sensor ..... [EC-425](#)  
 Power steering system bleeding ..... [PS-6](#)  
 Power supply routing ..... [PG-4](#)  
 Power window ..... [GW-18](#)  
 PRE/SE - Wiring diagram .. [EC-379](#), [EC-381](#), [EC-388](#),  
[EC-390](#)  
 Precations for Leak detection dye ..... [ATC-14](#)  
 Precautions (General) ..... [GI-4](#)  
 Pressure plate - See Clutch cover ..... [CL-15](#)  
 Pressure switch 1 ..... [AT-159](#), [AT-178](#)  
 Pressure switch 2 ..... [AT-171](#)  
 Pressure switch 3 ..... [AT-155](#), [AT-180](#)  
 Pressure switch 5 ..... [AT-163](#), [AT-182](#)  
 Pressure switch 6 ..... [AT-167](#), [AT-184](#)  
 Pressure test (A/T) ..... [AT-54](#)  
 Propeller shaft ..... [PR-5](#)  
 Propeller shaft on vehicle service ..... [PR-5](#)  
 Propeller shaft vibration ..... [PR-5](#)  
 PS/SEN - Wiring diagram ..... [EC-426](#)

### R

Radiator ..... [CO-13](#)  
 Radio - See Audio ..... [AV-6](#)  
 Rear axle ..... [RAX-6](#)  
 Rear bumper ..... [EI-17](#)  
 Rear combination lamp removal and installation .....  
[LT-209](#)  
 Rear suspension ..... [RSU-5](#)  
 Rear washer ..... [WW-38](#)  
 Rear window defogger ..... [GW-57](#)  
 Rear wiper ..... [WW-38](#)  
 Refrigerant connection precaution ..... [ATC-6](#)  
 Refrigerant discharging evacuating charging [ATC-128](#)  
 Refrigerant general precaution ..... [ATC-6](#)

Refrigerant lines ..... [ATC-128](#)  
 Refrigerant pressure sensor ..... [EC-716](#), [ATC-85](#),  
[ATC-142](#)  
 Refrigeration cycle ..... [ATC-19](#)  
 Release bearing (clutch) ..... [CL-13](#)  
 Remote keyless entry system ..... [BL-62](#)  
 Removal and installation (A/T) ..... [AT-272](#)  
 Reverse lamp switch (M/T) - See Back-up lamp switch  
 (M/T) ..... [MT-11](#)  
 Revolution sensor (A/T) ..... [AT-121](#)  
 Rocker cover ..... [EM-43](#)  
 Room lamp - See Interior lamp ..... [LT-214](#)  
 ROOM/L - Wiring diagram ..... [LT-219](#)  
 RP/SEN - Wiring diagram ..... [EC-717](#)

### S

SAE J1979 - Service \$01 - 09 ..... [EC-47](#)  
 SEAT - Wiring diagram ..... [SE-12](#)  
 Seat belt inspection ..... [SB-8](#)  
 Seat belt, front ..... [SB-4](#)  
 Self-diagnostic results ..... [EC-66](#)  
 SEN/PW - Wiring diagram ..... [EC-523](#)  
 SHIFT - Wiring diagram ..... [AT-240](#)  
 Shift lock system ..... [AT-239](#)  
 Shift schedule ..... [AT-341](#)  
 Shock absorber (front) ..... [FSU-10](#)  
 Shock absorber (rear) ..... [RSU-9](#)  
 Side air bag (satellite) sensor ..... [SRS-48](#)  
 Side trim ..... [EI-35](#)  
 SMJ (super multiple junction) ..... [PG-84](#)  
 Spark plug ..... [EM-35](#)  
 Spark plug replacement ..... [MA-20](#)  
 Specification value ..... [EC-156](#)  
 Speedometer ..... [DI-4](#)  
 Spiral cable ..... [SRS-42](#)  
 SRS - See Supplemental Restraint System .... [SRS-5](#)  
 SRS - Wiring diagram ..... [SRS-11](#)  
 SRS Trouble diagnoses ..... [SRS-7](#)  
 Stabilizer bar (rear) ..... [RSU-16](#)  
 Stall test (A/T) ..... [AT-53](#)  
 Standardized relay ..... [PG-86](#)  
 START - Wiring diagram ..... [SC-12](#)  
 Starter ..... [SC-10](#)  
 Starting system ..... [SC-10](#)  
 Steering gear and linkage inspection ..... [MA-28](#)  
 Steering linkage ..... [PS-17](#)  
 Steering wheel and column ..... [PS-8](#), [PS-10](#)  
 Steering wheel turning force ..... [PS-8](#)  
 Stop lamp ..... [LT-177](#)  
 Stop lamp switch ..... [EC-650](#)  
 STOP/L - Wiring diagram ..... [LT-178](#)  
 Sunload sensor ..... [ATC-102](#), [ATC-111](#)  
 Supplemental Restraint System ..... [SRS-5](#)  
 Supplemental restraint system - Wiring diagram .....  
[SRS-11](#)  
 Suspension ..... [MA-29](#)  
 Symbols and abbreviations ..... [GI-10](#), [GI-23](#)  
 Symptom matrix chart ..... [EC-105](#)

# ALPHABETICAL INDEX

System readiness test (SRT) code ..... [EC-53](#)

## T

Tachometer ..... [DI-4](#)  
 Tail lamp ..... [LT-187](#)  
 TAIL/L - Wiring diagram ..... [LT-191](#)  
 TCM circuit diagram ..... [AT-52](#)  
 TCM inspection table ..... [AT-91](#)  
 Three way catalyst ..... [EM-24](#)  
 Three way catalyst function (Bank 1) ..... [EC-339](#)  
 Three way catalyst function (Bank 2) ..... [EC-339](#)  
 Three way catalyst precautions ..... [GI-5](#)  
 Throttle body ..... [EM-21](#)  
 Throttle control motor ..... [EC-475](#)  
 Throttle control motor relay ..... [EC-470](#)  
 Throttle position sensor (TPS) ..... [EC-233](#), [EC-298](#),  
[EC-518](#), [EC-520](#), [EC-671](#)  
 Throttle valve closed position learning ..... [EC-91](#)  
 Throwout bearing - See Clutch release bearing [CL-13](#)  
 Tie-rod ..... [PS-17](#)  
 Timing chain ..... [EM-58](#)  
 Tire rotation ..... [WT-8](#), [MA-27](#)  
 Torque converter installation ..... [AT-273](#), [AT-274](#)  
 Torque convertor clutch solenoid valve [AT-128](#), [AT-130](#)  
 TPS1 - Wiring diagram ..... [EC-300](#)  
 TPS2 - Wiring diagram ..... [EC-235](#)  
 TPS3 - Wiring diagram ..... [EC-673](#)  
 Transverse link (front) ..... [FSU-13](#)  
 Triple meter ..... [DI-27](#)  
 TRNSCV - Wiring diagram ..... [BL-183](#)  
 Trouble diagnoses ..... [GI-11](#)  
 Trunk lid ..... [BL-116](#)  
 Turbine revolution sensor ..... [AT-144](#)  
 TURN - Wiring diagram ..... [LT-152](#)  
 Turn signal lamp ..... [LT-147](#)  
 Two trip detection logic ..... [EC-47](#)  
 Tyre pressure monitoring system - trouble diagnoses ..  
[WT-13](#)  
 Tyre pressure monitoring system - wiring diagram .....  
[WT-14](#)

## U

Unified meter and A/C amp. .... [DI-49](#)  
 Upper link (front susp.) ..... [FSU-14](#)

## V

Vacuum hose (brake system) ..... [BR-24](#)  
 Vacuum hose drawing (Engine control) ..... [EC-121](#)  
 Valve clearance ..... [EM-112](#)  
 Valve guide ..... [EM-127](#)  
 Valve lifter ..... [EM-105](#)  
 Valve seat ..... [EM-129](#)  
 Valve spring ..... [EM-130](#)  
 Vanity mirror lamp ..... [LT-210](#)  
 VDC -Wiring diagram ..... [BRC-99](#)  
 Vehicle security (theft warning) system ..... [BL-134](#)

Vehicle speed sensor (VSS) ..... [EC-419](#)  
 VEHSEC - Wiring diagram ..... [BL-139](#)  
 VENT/V - Wiring diagram .. [EC-367](#), [EC-369](#), [EC-609](#),  
[EC-611](#)  
 VIN registration ..... [EC-90](#)

## W

WARN - Wiring diagram ..... [DI-64](#)  
 Warning chime ..... [DI-79](#)  
 Warning lamps ..... [DI-63](#)  
 Washer, front ..... [WW-4](#)  
 Washer, rear ..... [WW-38](#)  
 Water pump ..... [CO-23](#)  
 Water temperature gauge ..... [DI-4](#)  
 Wheel alignment (front) ..... [FSU-6](#)  
 Wheel alignment (rear) ..... [RSU-5](#)  
 Wheel balance ..... [WT-7](#), [MA-25](#)  
 Wheel bearing (front) ..... [FAX-4](#)  
 Wheel bearing (rear) ..... [RAX-6](#)  
 Wheel hub (front) ..... [FAX-4](#)  
 Wheel hub (rear) ..... [RAX-6](#)  
 Wheel sensor (VDC) ..... [BRC-144](#)  
 Wheel sensors (ABS) ..... [BRC-38](#)  
 Wheel sensors (TCS) ..... [BRC-83](#)  
 WINDOW - Wiring diagram ..... [GW-23](#)  
 Window, door ..... [GW-52](#)  
 Windshield ..... [GW-11](#)  
 WIP/R - Wiring diagram ..... [WW-40](#)  
 WIPER - Wiring diagram ..... [WW-11](#)  
 Wiper, front ..... [WW-4](#)  
 Wiper, rear ..... [WW-38](#)  
 Wiring Diagram (Cell code) list ..... [PG-71](#)  
 Wiring diagrams ..... [GI-15](#)  
 Withdrawal lever (clutch) ..... [CL-13](#)  
 WT-T/WARN - Wiring diagram ..... [WT-14](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX