

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-31
A	
A/C component layout	ATC-20
A/C compressor mounting	ATC-125
A/C compressor special service tool	ATC-15
A/C controller	ATC-102
A/C diagnostic work flow (auto A/C)	ATC-91
A/C evaporator	ATC-135
A/C HFC134a (R134a) system service procedure	ATC-123
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C lubricant (R134a)	ATC-21
A/C lubrication oil	ATC-142
A/C operational check	ATC-53
A/C self-diagnoses (auto A/C)	ATC-45 , ATC-91
A/C service data specification	ATC-142
A/C trouble diagnoses (auto A/C)	ATC-33
A/C, A - Wiring diagram	ATC-38
A/T fluid checking	AT-12 , AT-49 , MA-20
A/T fluid replacement	AT-12 , MA-22
A/T fluid temperature sensor	AT-134
A/T IND - Wiring diagram	DI-68
A/T self-diagnoses	AT-92
A/T shift lock system	AT-207
A/T shift lock system - Wiring diagram	AT-208
A/T trouble diagnoses	AT-40
ABS - Wiring diagram	BRC-14
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-633 , EC-641 , EC-650
Accelerator pedal released position learning	EC-77
AF1B1-Wiring diagram	EC-250 , EC-259 , EC-268 , EC-277 , EC-661
AF1B2-Wiring diagram	EC-252 , EC-261 , EC-270 , EC-279 , EC-663
AF1HB1-Wiring diagram	EC-166
AF1HB2-Wiring diagram	EC-168
Air bag	SRS-3
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-11
Air cleaner and air duct	EM-15
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-197 , EC-208
Air fuel ratio sensor 1	EC-248 , EC-257 , EC-266 , EC-275 , EC-659
Air fuel ratio sensor 1 heater	EC-165
Air mix. door motor	ATC-63 , ATC-117
Air spoiler, rear	EI-30
Ambient sensor	ATC-92 , ATC-104
Angular tightening application	EM-4
APPS1 - Wiring diagram	EC-635
APPS2 - Wiring diagram	EC-643
APPS3 - Wiring diagram	EC-652
ASC/BS - Wiring diagram	EC-612 , EC-614
ASC/SW - Wiring diagram	EC-604
ASCBOF - Wiring diagram	EC-672 , EC-674
ASCD	EC-30
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-610 , EC-671
ASCD indicator lamp	EC-681
ASCD steering switch	EC-602
ASCIND - Wiring diagram	EC-682
AT indicator lamp	DI-67
Audio	AV-5
AUDIO - Wiring diagram	AV-10
Auto air conditioner - Wiring diagram	ATC-38
Auto amp	ATC-103
Auto anti-dazzling inside mirror	GW-54
Automatic amplifier	ATC-54 , ATC-103
Axle	MA-27
Axle housing (rear)	RAX-8
B	
Back Door	BL-100
Back door	BL-100
Back door opener - See Back door	BL-105
BACK/L - Wiring diagram	LT-98
Back-up lamp	LT-98
Back-up lamp switch (M/T)	MT-11
Basic inspection	EC-71
Battery	SC-4
Battery/Starting/Charging System Tester	SC-7 , SC-13 , SC-22
BCM (Body control module)	BCS-3
Blower motor	ATC-69 , ATC-110
Blower unit	ATC-108
Bose speaker amp.	AV-5 , AV-6
Brake booster	BR-23
Brake fluid change	BR-10
Brake fluid level	MA-25
Brake fluid level and line check	BR-10
Brake hydraulic line	BR-12
Brake inspection	MA-25
Brake lines and cables inspection	MA-25
Brake master cylinder	BR-15
Brake pedal	BR-7
Brake switch	EC-628
BRK/SW - Wiring diagram	EC-629
Bulb specifications	LT-172
Bumper, front	EI-14
Bumper, rear	EI-17
C	
Camshaft	EM-72
Camshaft inspection	EM-74
Camshaft position sensor (PHASE)	EC-394
CAN	DI-91
CAN - Wiring diagram	EC-152 , AT-95
CAN communication	EC-32 , EC-151 , EC-154 , AT-30 ,

ALPHABETICAL INDEX

AT-94, LT-7, LT-67, LT-105, LT-158, WW-9	
CHARGE - Wiring diagram	SC-21
Charging system	SC-20
Chassis and body maintenance	MA-20
CHIME - Wiring diagram	DI-74
Circuit breaker	PG-15
Closed loop control	EC-26
Clutch cover	CL-16
Clutch disc	CL-16
Clutch master cylinder	CL-8
Clutch pedal	CL-5
Coil spring (front)	FSU-10
Collision diagnosis	SRS-53
Combination lamp, rear, removal and installation	LT-127
Combination meter	DI-4
Combination meter removal and installation - See	
Instrument panel	IP-11
Combination switch	LT-86
Component Location (auto A/C)	ATC-35
Compression pressure	EM-89
Compressor special service tool	ATC-15
Condenser	ATC-131, ATC-135, ATC-137
Console box - See Instrument panel	IP-10
CONSULT for ABS	BRC-19
CONSULT for TCS	BRC-52
CONSULT for VDC	BRC-96
Control units (terminal arrangement)	PG-79
Control valve (A/T)	AT-35
Converter housing installation	AT-244
COOL/F - Wiring diagram	EC-547
Cooling circuit (engine)	CO-8
Cooling fan	CO-21
Cooling fan motor	EC-556
Cowl top	EI-20
Cowl top cover	EI-20
Crankcase ventilation system - See Positive crankcase	
ventilation	EC-44
Crankshaft position sensor (POS)	EC-386
Crash zone sensor	SRS-48
Cylinder head	EM-89

D

D/LOCK - Wiring diagram	BL-26
Daytime light system	LT-32
Daytime running light - See Daytime light system	LT-32
DEF - Wiring diagram	GW-60, GW-64
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system .	EC-8, EC-48
Diagnostic trouble code (DTC) inspection priority chart	EC-87
Differential gear oil replacement	MA-23
Direct clutch solenoid valve	AT-149
Display and amp.assembly	ATC-54
Door glass	GW-51
Door glass Fitting Adjustment(Front)	GW-53
Door lock	BL-98

Door mirror	GW-81
Door trim	EI-33
Door, front	BL-93, BL-94, GW-51
Drive belt	EM-12
Drive shaft (rear)	RAX-10
Driver air bag	SRS-40
DTRL - Wiring diagram	LT-38
Duct and grilles	ATC-119

E

ECM power supply	EC-142, EC-508
ECM/PW - Wiring diagram	EC-509
ECTS - Wiring diagram	EC-225, EC-357
Electric throttle control actuator	EC-561, EC-580
Electrical load signal circuit	EC-684
Electrical unit	PG-79
Electrical units location	PG-70
Electronic ignition (EI) system	EC-27
Engine control circuit diagram	EC-101
Engine control component parts location	EC-94
Engine control module (ECM)	EC-512
Engine control system diagram	EC-24
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ...	EC-223, EC-239, EC-352, EC-356
Engine fail-safe system	EC-89
Engine oil	LU-6
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine removal	EM-101
ETC1 - Wiring diagram	EC-562
ETC2 - Wiring diagram	EC-594
ETC3 - Wiring diagram	EC-572
EVAP canister	EC-36
EVAP canister purge volume control solenoid valve	EC-423, EC-431
EVAP canister vent control valve	EC-437, EC-444
EVAP control system (small leak) diagnosis ...	EC-416
EVAP control system pressure sensor	EC-450, EC-456, EC-465
EVAP control system purge flow monitoring diagnosis	EC-411
EVAP vapor lines inspection	MA-19
Evaporative emission (EVAP) system	EC-33
Evaporator	ATC-135
EVCB1 - Wiring diagram	EC-191
EVCB2 - Wiring diagram	EC-193
EVCSB1 - Wiring diagram	EC-530
EVCSB2 - Wiring diagram	EC-532
Exhaust system	EX-3
Exhaust system inspection	EX-3, MA-20
Exhaust valve timing control (Bank 1)	EC-160
Exhaust valve timing control (Bank 2)	EC-160
Exhaust valve timing control learning	EC-76
Exhaust valve timing control magnet retarder (Bank 1)	EC-190
Exhaust valve timing control magnet retarder (Bank 2)	EC-190

ALPHABETICAL INDEX

Exhaust valve timing control position sensor (Bank 1) .
[EC-528](#)
Exhaust valve timing control position sensor (Bank 2) .
[EC-528](#)
Expansion valve [ATC-137](#)

F

F/LID - Wiring diagram [BL-53](#)
F/PUMP - Wiring diagram [EC-692](#)
Final drive pre-inspection [RFD-20](#), [RFD-40](#)
Floor trim [EI-43](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-134](#)
Fluorescent leak detector [ATC-138](#)
Flywheel (clutch) [CL-16](#)
Flywheel runout [EM-134](#)
Freeze frame data [EC-53](#)
Front axle [FAX-4](#)
Front brake solenoid valve [AT-147](#)
Front bumper [EI-14](#)
Front door [BL-93](#), [BL-94](#), [GW-51](#)
Front passenger air bag [SRS-44](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-50](#)
Front suspension [FSU-5](#)
FTS - Wiring diagram [AT-135](#)
FTTS - Wiring diagram [EC-345](#), [EC-349](#)
Fuel cut control (at no load high engine speed) . [EC-28](#)
Fuel filter replacement [FL-4](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-324](#), [EC-334](#)
Fuel injection system (Bank 2) [EC-324](#), [EC-334](#)
Fuel injector [EC-686](#)
Fuel level sensor [EC-490](#), [EC-492](#), [EC-494](#)
Fuel lid opener, electric [BL-52](#)
Fuel line inspection [FL-3](#), [MA-16](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-80](#)
Fuel pressure release [EC-79](#)
Fuel pump [EC-691](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-344](#), [EC-348](#)
Fuel tank vacuum relief valve [EC-36](#)
FUELB1 - Wiring diagram [EC-326](#), [EC-336](#)
FUELB2 - Wiring diagram [EC-328](#), [EC-338](#)
Fuse [PG-15](#)
Fuse and fusible link box [PG-86](#)
Fusible link [PG-15](#)

G

Gauges [DI-4](#)
Generic scan tool (GST) [EC-125](#)
Glass [GW-11](#), [GW-51](#)
Ground distribution [PG-27](#)

H

H/LAMP - Wiring diagram [LT-9](#)
H/PHON - Wiring diagram [AV-100](#)
Harness connector [PG-76](#)
Harness layout [PG-41](#)
Headlamp [LT-5](#)
Headlining - See Roof trim [EI-44](#), [EI-46](#)
Heated oxygen sensor 2 (bank 1) [EC-287](#), [EC-298](#),
[EC-313](#)
Heated oxygen sensor 2 (bank 2) [EC-287](#), [EC-298](#),
[EC-313](#)
Heated oxygen sensor 2 heater (bank 1) [EC-173](#)
Heated oxygen sensor 2 heater (bank 2) [EC-173](#)
Heated seat [SE-59](#)
Heater and cooling unit (Heater core) [ATC-112](#)
HFC134a (R134a) system service procedure [ATC-123](#)
HFC134a (R134a) system service tools [ATC-16](#)
High and low reverse clutch solenoid valve [AT-151](#)
Hood [BL-13](#)
Hood lock system [BL-16](#)
Horn [WW-53](#)
HORN - Wiring diagram [WW-53](#)
How to erase DTC for OBD system [EC-61](#)

I

IATS - Wiring diagram [EC-219](#)
Idle air volume learning [EC-77](#)
Idle speed [EC-76](#)
Idle speed control (ISC) [EC-498](#), [EC-500](#)
Ignition coil [EM-31](#), [EC-698](#)
Ignition control system [EC-698](#)
Ignition timing [EC-76](#)
IGNSYS - Wiring diagram [EC-699](#)
ILL - Wiring diagram [LT-161](#)
In vehicle sensor [ATC-94](#), [ATC-105](#)
INJECT - Wiring diagram [EC-687](#)
Input clutch solenoid valve [AT-145](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-218](#), [EC-243](#)
Intake door control linkage adjustment [ATC-68](#)
Intake door motor [ATC-66](#), [ATC-111](#)
Intake manifold [EM-20](#)
Intake manifold collector [EM-17](#)
Intake sensor [ATC-100](#), [ATC-107](#)
Intake valve timing control (Bank 1) [EC-156](#)
Intake valve timing control (Bank 2) [EC-156](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-183](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-183](#)
Integrated homelink transmitter [BL-167](#)
Interior [EI-35](#)
Interior lamp [LT-128](#)
IPDM (Intelligent power distribution module engine
room) [PG-16](#)
IVCB1 - Wiring diagram [EC-184](#)
IVCB2 - Wiring diagram [EC-186](#)

ALPHABETICAL INDEX

K

KEYLES - Wiring diagram	BL-65
Knock sensor (KS)	EC-379
KS - Wiring diagram	EC-380

L

LAN system circuit	ATC-56
Line pressure solenoid valve	AT-129
Line pressure test (A/T)	AT-50
Liquid gasket application	LU-2 , CO-2
Location of electrical units	PG-70
Lock, door	BL-98
Low coast brake solenoid valve	AT-153 , AT-155
Low tire pressure warning system	WT-10
Lubricant (R134a) A/C	ATC-21
Lubrication circuit (engine)	LU-4
Lubrication oil A/C	ATC-142

M

M/ANT - Wiring diagram	AV-53
M/T major overhaul	MT-22
M/T oil replacement	MT-9
M/T removal and installation	MT-18
MAFS - Wiring diagram	EC-200 , EC-210
Magnet clutch	ATC-74
MAIN - Wiring diagram	EC-142 , AT-162
Maintenance (engine)	MA-13
Major overhaul (Final drive)	RFD-19
Malfunction indicator lamp (MIL)	EC-62
Manual transmission oil replacement	MA-20
Mass air flow sensor (MAFS)	EC-197 , EC-208
Master cylinder (clutch)	CL-8
Meter	DI-4
MIL data link connectors circuit	EC-716
MIL/DL - Wiring diagram	EC-716
MIRROR - Wiring diagram	GW-80
Mirror, door	GW-81
Mirror, out side	GW-81
Misfire	EC-371
MMSW - Wiring diagram	AT-158
Mode door control linkage adjustment	ATC-62
Mode door motor	ATC-60 , ATC-116
Molding - See Exterior	EI-22 , EI-26
Multiport fuel injection (MFI) system	EC-25
Multiport fuel injection precautions	GI-6

N

NATS - Wiring diagram	BL-153
NAVI - Wiring diagram	AV-63
Navigation system	AV-57
NONDTC - Wiring diagram	AT-169
NVH troubleshooting (BR)	BR-6
NVH troubleshooting (Final drive)	RFD-7
NVH troubleshooting (Propeller shaft)	PR-4
NVH troubleshooting (WT)	WT-5

NVIS (Nissan vehicle immobilizer system)	BL-150
--	------------------------

O

O2H2B1 - Wiring diagram	EC-175
O2H2B2 - Wiring diagram	EC-177
O2S2B1 - Wiring diagram ...	EC-289 , EC-301 , EC-315
O2S2B2 - Wiring diagram ...	EC-291 , EC-303 , EC-317
Oil filter	LU-9
Oil pressure (engine)	LU-7
Oil pump (engine)	LU-10
Oil pump regulator valve (engine)	LU-10
Oil seal replacement (front of final drive)	RFD-10
Oil seal replacement (side of final drive)	RFD-15
On board diagnostic system	EC-47
ORVR (On-board Refueling Vapor Recovery) ...	EC-39
Out side mirror	GW-81
Overheat	EC-543

P

P/SCKT - Wiring diagram	WW-51
Park/Neutral position switch	EC-520
Park/neutral position switch (A/T)	AT-102
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-44
PGC/V - Wiring diagram	EC-425 , EC-433
PHSB1 - Wiring diagram	EC-397
PHSB2 - Wiring diagram	EC-399
PNP/SW - Wiring diagram ...	EC-522 , EC-524 , AT-103
POS - Wiring diagram	EC-388
POWER - Wiring diagram	PG-5
Power door lock	BL-21
Power socket	WW-51
Power steering fluid level	PS-6 , MA-27
Power steering gear	PS-17
Power steering oil pump	PS-28
Power steering pressure (PSP) sensor	EC-502
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-18
PRE/SE - Wiring diagram	EC-458 , EC-467
Precautions (General)	GI-3
Pressure plate - See Clutch cover	CL-16
Pressure switch 2	AT-155
Pressure test (A/T)	AT-50
Propeller shaft	PR-5
Propeller shaft on vehicle service	PR-5
Propeller shaft vibration	PR-5
PS/SEN - Wiring diagram	EC-503

R

Radiator	CO-13
Radio - See Audio	AV-5
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-127

ALPHABETICAL INDEX

Rear suspension [RSU-5](#)
Rear washer [WW-36](#)
Rear window defogger [GW-56](#)
Refrigerant discharging evacuating charging [ATC-123](#)
Refrigerant lines [ATC-123](#)
Refrigerant pressure sensor [EC-710](#), [ATC-80](#),
[ATC-135](#)
Refrigeration cycle [ATC-19](#)
Remote keyless entry system [BL-59](#)
Removal and installation (A/T) [AT-242](#)
Reverse lamp switch (M/T) - See Back-up lamp switch
(M/T) [MT-11](#)
Revolution sensor (A/T) [AT-108](#)
Rocker cover [EM-40](#)
Room lamp - See Interior lamp [LT-128](#)
ROOM/L - Wiring diagram [LT-133](#)
RP/SEN - Wiring diagram [EC-711](#)

S

SAE J1979 - Service \$01 - 09 [EC-47](#)
SEAT - Wiring diagram [SE-12](#)
Seat belt inspection [SB-8](#)
Seat belt, front [SB-4](#)
Self-diagnostic results [EC-64](#)
SEN/PW - Wiring diagram [EC-515](#)
SHIFT - Wiring diagram [AT-208](#)
Shift lock system [AT-207](#)
Shift schedule [AT-311](#)
Shock absorber (front) [FSU-10](#)
Shock absorber (rear) [RSU-9](#)
Side air bag (satellite) sensor [SRS-49](#)
Side trim [EI-35](#)
SMJ (super multiple junction) [PG-81](#)
Spark plug replacement [MA-18](#)
Specification value [EC-132](#)
Speedometer [DI-4](#)
Spiral cable [SRS-42](#)
SRS - See Supplemental Restraint System [SRS-5](#)
SRS - Wiring diagram [SRS-13](#)
SRS Trouble diagnoses [SRS-9](#)
Stabilizer bar (rear) [RSU-16](#)
Stall test (A/T) [AT-49](#)
Standardized relay [PG-83](#)
START - Wiring diagram [SC-10](#)
Starter [SC-8](#)
Starting system [SC-8](#)
Steering gear and linkage inspection [MA-26](#)
Steering linkage [PS-17](#)
Steering wheel and column [PS-7](#), [PS-10](#)
Steering wheel turning force [PS-7](#)
Stop lamp [LT-95](#)
Stop lamp switch [EC-628](#)
STOP/L - Wiring diagram [LT-95](#)
STSIG - Wiring diagram [AT-98](#)
Sunload sensor [ATC-97](#), [ATC-106](#)
Supplemental Restraint System [SRS-5](#)
Supplemental restraint system - Wiring diagram
[SRS-13](#)

Suspension [MA-27](#)
Symbols and abbreviations [GI-11](#), [GI-23](#)
Symptom matrix chart [EC-90](#)
System readiness test (SRT) code [EC-53](#)

T

Tachometer [DI-4](#)
TAIL/L - Wiring diagram [LT-107](#)
TCM circuit diagram [AT-48](#)
TCM inspection table [AT-83](#)
TCS - Wiring diagram [BRC-47](#)
Telephone [AV-100](#)
Three way catalyst [EM-22](#)
Three way catalyst function (Bank 1) [EC-406](#)
Three way catalyst function (Bank 2) [EC-406](#)
Three way catalyst precautions [GI-5](#)
Throttle body [EM-19](#)
Throttle control motor [EC-571](#)
Throttle control motor relay [EC-592](#)
Throttle position sensor (TPS) [EC-229](#), [EC-361](#),
[EC-557](#), [EC-559](#), [EC-582](#)
Throttle valve closed position learning [EC-77](#)
Tie-rod [PS-17](#)
Timing chain [EM-53](#)
Tire rotation [WT-8](#), [MA-25](#)
Torque converter installation [AT-244](#)
Torque convertor clutch solenoid valve [AT-125](#), [AT-127](#)
TPS2 - Wiring diagram [EC-231](#), [EC-363](#)
TPS3 - Wiring diagram [EC-584](#)
Transverse link (front) [FSU-13](#)
Triple meter [DI-26](#)
TRNSCV - Wiring diagram [BL-167](#)
Trouble diagnoses [GI-12](#)
Trunk lid [BL-107](#)
TURN - Wiring diagram [LT-69](#)
Two trip detection logic [EC-47](#)

U

Unified meter and A/C amp. [DI-44](#)
Upper link (front susp.) [FSU-14](#)

V

Vacuum hose (brake system) [BR-25](#)
Vacuum hose drawing (Engine control) [EC-100](#)
Valve clearance [EM-80](#)
Valve guide [EM-97](#)
Valve lifter [EM-76](#)
Valve seat [EM-99](#)
Valve spring [EM-100](#)
VDC -Wiring diagram [BRC-87](#)
Vehicle security (theft warning) system [BL-125](#)
Vehicle speed sensor (VSS) [EC-496](#), [EC-627](#)
VEHSEC - Wiring diagram [BL-130](#)
VENT/V - Wiring diagram [EC-439](#), [EC-446](#)
VIN registration [EC-76](#)
VSS A/T - Wiring diagram [AT-110](#)

ALPHABETICAL INDEX

W

WARN - Wiring diagram	DI-58
Warning chime	DI-71
Warning lamps	DI-56
Water pump	CO-23
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7 , MA-23
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-6
Wheel sensor (VDC)	BRC-128
Wheel sensors (ABS)	BRC-34
Wheel sensors (TCS)	BRC-73
WINDOW - Wiring diagram	GW-23
Window, door	GW-51
Windshield	GW-11
WIP/R - Wiring diagram	WW-38
WIPER - Wiring diagram	WW-11
Wiper and washer	WW-4
Wiring Diagram (Cell code) list	PG-67
WT-T/WARN - Wiring diagram	WT-16

A

B

C

D

E

F

G

H

I

J

K

L

IDX