

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

# ALPHABETICAL INDEX

## A

A/C air flow ..... [ATC-31](#)  
A/C component layout ..... [ATC-21](#)  
A/C compressor clutch removal and installation .....  
[ATC-153](#)  
A/C compressor mounting ..... [ATC-152](#)  
A/C compressor precaution ..... [ATC-13](#)  
A/C compressor special service tool ..... [ATC-16](#)  
A/C control operation (auto A/C) ..... [ATC-28](#)  
A/C diagnostic work flow (auto A/C) ..... [ATC-113](#)  
A/C evaporator ..... [ATC-164](#)  
A/C HFC134a (R134a) system precaution ..... [ATC-6](#)  
A/C HFC134a (R134a) system service procedure .....  
[ATC-149](#)  
A/C HFC134a (R134a) system service tools ... [ATC-16](#)  
A/C HFC134a system service equipment precaution ...  
[ATC-13](#)  
A/C lubricant (R134a) ..... [ATC-22](#)  
A/C lubrication oil ..... [ATC-170](#)  
A/C operational check ..... [ATC-76](#)  
A/C self-diagnoses (auto A/C) ..... [ATC-68](#), [ATC-113](#)  
A/C service data specification ..... [ATC-170](#)  
A/C system description (auto A/C) ..... [ATC-25](#)  
A/C trouble diagnoses (auto A/C) ..... [ATC-55](#)  
A/C, A - Wiring diagram ..... [ATC-61](#)  
ABS - Wiring diagram ..... [BRC-36](#)  
Accelerator control system ..... [ACC-2](#)  
Accelerator pedal position (APP) sensor ..... [EC-569](#),  
[EC-575](#), [EC-589](#)  
Accelerator pedal released position learning .... [EC-63](#)  
Air bag ..... [SRS-3](#)  
Air bag disposal ..... [SRS-50](#)  
Air bag precautions ..... [SRS-3](#), [AP-2](#)  
Air bleeding for brake system ..... [BR-12](#)  
Air cleaner and air duct ..... [EM-14](#)  
Air cleaner filter replacement ..... [MA-17](#)  
Air conditioner cut control ..... [EC-29](#)  
Air flow meter - See Mass air flow sensor ..... [EC-183](#),  
[EC-191](#)  
Air mix. door motor ..... [ATC-87](#), [ATC-143](#)  
Ambient sensor ..... [ATC-115](#), [ATC-128](#)  
Angular tightening application ..... [EM-3](#)  
APPS1 - Wiring diagram ..... [EC-571](#)  
APPS2 - Wiring diagram ..... [EC-577](#)  
APPS3 - Wiring diagram ..... [EC-591](#)  
ASC/BS - Wiring diagram ..... [EC-541](#)  
ASC/SW - Wiring diagram ..... [EC-534](#)  
ASCBOF - Wiring diagram ..... [EC-641](#)  
ASCD ..... [EC-666](#)  
ASCD (automatic speed control device) ..... [ACS-2](#)  
ASCIND - Wiring diagram ..... [EC-648](#)  
AUDIO - Wiring diagram ..... [AV-12](#)  
Auto air conditioner - Wiring diagram ..... [ATC-61](#)  
Auto amp ..... [ATC-127](#)  
Auto anti-dazzling inside mirror ..... [GW-63](#), [GW-64](#)  
Automatic amplifier ..... [ATC-66](#), [ATC-78](#), [ATC-127](#)  
Automatic transmission fluid replacement ..... [MA-24](#)  
AV and NAVI control unit ..... [AV-115](#)

AV communication line ..... [AV-95](#), [AV-161](#)  
AWD - Wiring diagram ..... [TF-45](#)  
Axle ..... [MA-29](#)

## B

Back Door ..... [BL-136](#), [BL-137](#)  
Back door ..... [BL-136](#), [BL-137](#)  
Back door opener - See Back door ..... [BL-141](#)  
BACK/L - Wiring diagram ..... [LT-268](#)  
Back-up lamp ..... [LT-268](#)  
Battery ..... [SC-4](#)  
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#),  
[SC-20](#)  
Blower motor ..... [ATC-93](#), [ATC-135](#)  
Blower unit ..... [ATC-133](#)  
Board computer ..... [AV-63](#)  
Bose speaker amp. .... [AV-8](#)  
Brake booster ..... [BR-22](#)  
Brake fluid change ..... [BR-11](#)  
Brake fluid level ..... [MA-27](#)  
Brake fluid level and line check ..... [BR-11](#)  
Brake hydraulic line ..... [BR-13](#)  
Brake inspection ..... [MA-27](#)  
Brake lines and cables inspection ..... [MA-27](#)  
Brake master cylinder ..... [BR-15](#)  
Brake pedal ..... [BR-6](#)  
Brake switch ..... [EC-564](#)  
BRK/SW - Wiring diagram ..... [EC-565](#)  
Bulb specifications ..... [LT-364](#)  
Bumper, front ..... [EI-14](#)  
Bumper, rear ..... [EI-17](#)

## C

Camshaft ..... [EM-70](#)  
Camshaft inspection ..... [EM-72](#)  
Camshaft position sensor (PHASE) ..... [EC-328](#)  
CAN - Wiring diagram ..... [EC-160](#), [LAN-36](#), [LAN-65](#),  
[LAN-96](#), [LAN-125](#), [LAN-159](#), [LAN-190](#), [LAN-226](#),  
[LAN-260](#), [LAN-295](#), [LAN-326](#), [LAN-358](#), [LAN-389](#),  
[LAN-425](#), [LAN-457](#), [LAN-494](#), [LAN-529](#), [LAN-566](#),  
[LAN-597](#), [LAN-630](#), [LAN-661](#), [LAN-697](#), [LAN-730](#),  
[LAN-767](#), [LAN-803](#), [LAN-840](#), [LAN-873](#), [LAN-908](#),  
[LAN-941](#), [LAN-978](#), [LAN-1013](#), [LAN-1052](#), [LAN-1089](#)  
CAN (Controller Area Network) . [WT-10](#), [BL-26](#), [BL-80](#),  
[GW-67](#), [SE-18](#), [LAN-12](#), [LAN-34](#), [LAN-63](#), [LAN-94](#),  
[LAN-123](#), [LAN-157](#), [LAN-188](#), [LAN-224](#), [LAN-258](#),  
[LAN-293](#), [LAN-324](#), [LAN-356](#), [LAN-387](#), [LAN-423](#),  
[LAN-455](#), [LAN-492](#), [LAN-527](#), [LAN-564](#), [LAN-595](#),  
[LAN-628](#), [LAN-659](#), [LAN-695](#), [LAN-728](#), [LAN-765](#),  
[LAN-801](#), [LAN-838](#), [LAN-871](#), [LAN-906](#), [LAN-939](#),  
[LAN-976](#), [LAN-1011](#), [LAN-1050](#), [LAN-1087](#)  
CAN communication [EC-30](#), [EC-159](#), [CVT-20](#), [CVT-30](#),  
[CVT-76](#), [TF-33](#), [TF-63](#), [WT-10](#), [BRC-9](#), [BRC-56](#),  
[BRC-76](#), [BL-26](#), [BL-80](#), [GW-67](#), [SE-18](#), [LAN-12](#),  
[LAN-34](#), [LAN-63](#), [LAN-94](#), [LAN-123](#), [LAN-157](#),  
[LAN-188](#), [LAN-224](#), [LAN-258](#), [LAN-293](#), [LAN-324](#),  
[LAN-356](#), [LAN-387](#), [LAN-423](#), [LAN-455](#), [LAN-492](#),

# ALPHABETICAL INDEX

[LAN-527](#), [LAN-564](#), [LAN-595](#), [LAN-628](#), [LAN-659](#),  
[LAN-695](#), [LAN-728](#), [LAN-765](#), [LAN-801](#), [LAN-838](#),  
[LAN-871](#), [LAN-906](#), [LAN-939](#), [LAN-976](#), [LAN-1011](#),  
[LAN-1050](#), [LAN-1087](#)  
 Canister-See EVAP canister ..... [EC-655](#)  
 CHARGE - Wiring diagram ..... [SC-19](#)  
 Charging system ..... [SC-18](#)  
 Chassis and body maintenance ..... [MA-22](#)  
 CHIME - Wiring diagram ..... [DI-100](#)  
 CIGAR - Wiring diagram ..... [WW-75](#)  
 Circuit breaker ..... [PG-15](#)  
 Closed loop control ..... [EC-26](#)  
 Collision diagnosis ..... [SRS-57](#)  
 Combination lamp, front, removal and installation .....  
[LT-101](#)  
 Combination lamp, rear, removal and installation .....  
[LT-304](#)  
 Combination meter ..... [DI-4](#)  
 Combination meter removal and installation - See  
 Instrument panel ..... [IP-11](#)  
 Combination switch ..... [LT-251](#)  
 COMM - Wiring diagram ..... [AV-95](#), [AV-161](#)  
 Component Location (auto A/C) ..... [ATC-58](#)  
 Compression pressure ..... [EM-84](#)  
 Compressor clutch removal and installation .. [ATC-153](#)  
 Compressor special service tool ..... [ATC-16](#)  
 Condenser ..... [ATC-163](#)  
 Console box - See Instrument panel ..... [IP-10](#)  
 Console box lamp ..... [LT-363](#)  
 Control units (terminal arrangement) ..... [PG-82](#)  
 Control valve (CVT) ..... [CVT-44](#)  
 Controller Area Network (CAN) [WT-10](#), [BL-26](#), [BL-80](#),  
[GW-67](#), [SE-18](#), [LAN-12](#), [LAN-34](#), [LAN-63](#), [LAN-94](#),  
[LAN-123](#), [LAN-157](#), [LAN-188](#), [LAN-224](#), [LAN-258](#),  
[LAN-293](#), [LAN-324](#), [LAN-356](#), [LAN-387](#), [LAN-423](#),  
[LAN-455](#), [LAN-492](#), [LAN-527](#), [LAN-564](#), [LAN-595](#),  
[LAN-628](#), [LAN-659](#), [LAN-695](#), [LAN-728](#), [LAN-765](#),  
[LAN-801](#), [LAN-838](#), [LAN-871](#), [LAN-906](#), [LAN-939](#),  
[LAN-976](#), [LAN-1011](#), [LAN-1050](#), [LAN-1087](#)  
 Converter housing installation ..... [CVT-203](#)  
 COOL/F - Wiring diagram ..... [EC-499](#)  
 Coolant replacementVQ35DE ..... [CO-8](#), [MA-15](#)  
 Cooling circuit (engine) ..... [CO-7](#)  
 Cooling fan motor ..... [EC-507](#)  
 Cowl top ..... [EI-21](#)  
 Cowl top cover ..... [EI-21](#)  
 Crankcase ventilation system - See Positive crankcase  
 ventilation ..... [EC-664](#)  
 Crankshaft position sensor (POS) ..... [EC-322](#)  
 Crash zone sensor ..... [SRS-46](#)  
 CVT air breather hose ..... [CVT-190](#)  
 CVT control system ..... [CVT-17](#)  
 CVT cross-sectional view ..... [CVT-16](#)  
 CVT Electrical parts location ..... [CVT-54](#)  
 CVT fluid checking ..... [CVT-14](#), [CVT-56](#), [MA-22](#)  
 CVT fluid cooler valve ..... [CVT-193](#)  
 CVT fluid replacement ..... [CVT-15](#), [MA-23](#)  
 CVT fluid temperature sensor ..... [CVT-90](#)  
 CVT hydraulic control system ..... [CVT-18](#)

CVT indicator ..... [DI-72](#)  
 CVT self-diagnoses ..... [CVT-70](#), [CVT-75](#)  
 CVT shift lock system ..... [CVT-184](#)  
 CVT shift lock system - Wiring diagram ..... [CVT-185](#)  
 CVT trouble diagnoses ..... [CVT-49](#)  
 CVTIND - Wiring diagram ..... [DI-72](#)  
 Cylinder head ..... [EM-84](#)

## D

Daytime light system ..... [LT-103](#)  
 Daytime running light - See Daytime light system .....  
[LT-103](#)  
 Diagnosis sensor unit ..... [SRS-49](#)  
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)  
 Diagnostic trouble code (DTC) inspection priority chart  
[CVT-49](#)  
 Differential side oil seal ..... [CVT-191](#)  
 Display and amp.assembly ..... [ATC-66](#), [ATC-78](#)  
 Door glass ..... [GW-58](#), [GW-61](#)  
 Door glass Fitting Adjustment(Front) ..... [GW-60](#)  
 Door glass Fitting Adjustment(Rear) ..... [GW-62](#)  
 Door lock ..... [BL-129](#)  
 Door mirror ..... [GW-112](#)  
 Door trim ..... [EI-30](#)  
 Door, front ..... [BL-125](#), [GW-58](#)  
 Door, rear ..... [BL-125](#), [GW-61](#)  
 Drive belt ..... [EM-11](#)  
 Drive shaft ..... [MA-29](#)  
 Drive shaft (rear) ..... [RAX-7](#)  
 Driver air bag ..... [SRS-36](#)  
 DTRL - Wiring diagram ..... [LT-128](#)  
 Duct and grilles ..... [ATC-145](#)

## E

ECM power supply ..... [EC-152](#), [EC-425](#)  
 ECM/PW - Wiring diagram ..... [EC-426](#)  
 ECTS - Wiring diagram ..... [EC-205](#)  
 Electric sunroof ..... [RF-10](#)  
 Electric throttle control actuator ..... [EC-436](#), [EC-438](#)  
 Electrical load signal circuit ..... [EC-639](#)  
 Electrical unit ..... [PG-82](#)  
 Electrical units location ..... [PG-75](#)  
 Electronic ignition (EI) system ..... [EC-27](#)  
 EMNT - Wiring diagram ..... [EC-630](#)  
 Engine control module (ECM) ..... [EC-422](#)  
 Engine control system diagram and chart ..... [EC-22](#)  
 Engine coolant ..... [CO-8](#)  
 Engine coolant temperature sensor (ECTS) .. [EC-203](#),  
[EC-215](#)  
 Engine mounting control (Front) ..... [EC-629](#)  
 Engine oil ..... [LU-6](#)  
 Engine oil filter replacement ..... [MA-19](#)  
 Engine oil precautions ..... [GI-7](#)  
 Engine removal ..... [EM-95](#)  
 ETC1 - Wiring diagram ..... [EC-439](#)  
 ETC2 - Wiring diagram ..... [EC-446](#)  
 ETC3 - Wiring diagram ..... [EC-450](#)

# ALPHABETICAL INDEX

EVAP canister ..... [EC-655](#)  
 EVAP canister purge volume control solenoid valve ....  
[EC-356](#), [EC-517](#)  
 EVAP canister vent control valve ..... [EC-363](#), [EC-525](#)  
 EVAP control system (small leak) diagnosis .. [EC-346](#),  
[EC-387](#)  
 EVAP control system pressure sensor ..... [EC-370](#),  
[EC-373](#), [EC-379](#)  
 EVAP control system purge flow monitoring diagnosis  
[EC-341](#)  
 EVAP vapor lines inspection ..... [MA-21](#)  
 Evaporative emission (EVAP) system ..... [EC-652](#)  
 Evaporator ..... [ATC-164](#)  
 Exhaust manifold ..... [EM-22](#)  
 Exhaust system ..... [EX-3](#)  
 Exhaust system inspection ..... [EX-3](#), [MA-22](#)  
 Expansion valve ..... [ATC-165](#)

## F

F/FOG - Wiring diagram ..... [LT-204](#)  
 F/PUMP - Wiring diagram ..... [EC-624](#)  
 Floor trim ..... [EI-34](#)  
 Flow charts ..... [GI-26](#)  
 Fluid temperature sensor (CVT) ..... [CVT-90](#)  
 Fluorescent leak detector ..... [ATC-166](#)  
 Fog lamp, front ..... [LT-181](#)  
 Front axle ..... [FAX-5](#)  
 Front bumper ..... [EI-14](#)  
 Front combination lamp removal and installation .....  
[LT-101](#)  
 Front disc brake ..... [BR-27](#)  
 Front door ..... [BL-125](#), [BL-129](#), [GW-58](#)  
 Front fog lamp ..... [LT-181](#)  
 Front passenger air bag ..... [SRS-40](#)  
 Front seat ..... [SE-122](#)  
 Front seat belt ..... [SB-4](#)  
 Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-48](#)  
 Front side air bag ..... [SRS-42](#)  
 Front suspension ..... [FSU-5](#)  
 FTTS - Wiring diagram ..... [EC-297](#), [EC-301](#)  
 Fuel cut control (at no load high engine speed) . [EC-29](#)  
 Fuel gauge ..... [DI-4](#)  
 Fuel injector and fuel tube ..... [EM-38](#)  
 Fuel level sensor ..... [EC-405](#), [EC-407](#), [EC-409](#)  
 Fuel line inspection ..... [FL-3](#), [MA-17](#)  
 Fuel precautions ..... [GI-5](#)  
 Fuel pressure check ..... [EC-66](#)  
 Fuel pressure release ..... [EC-66](#)  
 Fuel pump ..... [EC-623](#)  
 Fuel pump and gauge ..... [FL-5](#)  
 Fuel system ..... [FL-3](#)  
 Fuel tank ..... [FL-9](#)  
 Fuel tank temperature sensor ..... [EC-295](#), [EC-300](#)  
 Fuel tank vacuum relief valve ..... [EC-655](#)  
 FUELB1 - Wiring diagram ..... [EC-280](#), [EC-289](#)  
 FUELB2 - Wiring diagram ..... [EC-281](#), [EC-290](#)  
 Fuse ..... [PG-15](#)  
 Fuse and fusible link box ..... [PG-88](#)

Fusible link ..... [PG-15](#)

## G

Gauges ..... [DI-4](#)  
 Glass ..... [GW-11](#), [GW-58](#), [GW-61](#)  
 Glove box lamp ..... [LT-363](#)  
 GPS antenna ..... [AV-114](#)  
 Grille - See Exterior ..... [EI-20](#)  
 Ground distribution ..... [PG-47](#)

## H

H/AIM - Wiring diagram ..... [LT-178](#)  
 H/LAMP - Wiring diagram ..... [LT-34](#), [LT-83](#)  
 Harness connector ..... [PG-79](#)  
 Harness layout ..... [PG-56](#)  
 Hazard warning lamp ..... [LT-213](#)  
 Headlamp aiming control ..... [LT-178](#)  
 Headlamp leveler - See Headlamp aiming control .....  
[LT-178](#)  
 Headlamp removal and installation ..... [LT-101](#)  
 Headlining - See Roof trim ..... [EI-36](#)  
 Heated oxygen sensor 1 (bank 1) .... [EC-223](#), [EC-233](#),  
[EC-246](#), [EC-454](#), [EC-460](#)  
 Heated oxygen sensor 1 (bank 2) .... [EC-223](#), [EC-233](#),  
[EC-246](#), [EC-454](#), [EC-460](#)  
 Heated oxygen sensor 1 heater (bank 1) ..... [EC-165](#)  
 Heated oxygen sensor 1 heater (bank 2) ..... [EC-165](#)  
 Heated oxygen sensor 2 (bank 1) .... [EC-256](#), [EC-266](#),  
[EC-467](#), [EC-479](#)  
 Heated oxygen sensor 2 (bank 2) .... [EC-256](#), [EC-266](#),  
[EC-467](#), [EC-479](#)  
 Heated oxygen sensor 2 heater (bank 1) ..... [EC-174](#)  
 Heated oxygen sensor 2 heater (bank 2) ..... [EC-174](#)  
 Heated seat ..... [SE-117](#)  
 Heater and cooling unit (Heater core) ..... [ATC-138](#)  
 HFC134a (R134a) system precaution ..... [ATC-6](#)  
 HFC134a (R134a) system service procedure [ATC-149](#)  
 HFC134a (R134a) system service tools ..... [ATC-16](#)  
 HFC134a system service equipment precaution .....  
[ATC-13](#)  
 Hood ..... [BL-13](#)  
 Horn ..... [WW-73](#)  
 HORN - Wiring diagram ..... [WW-73](#)  
 HSEAT - Wiring diagram ..... [SE-119](#)

## I

IATS - Wiring diagram ..... [EC-200](#)  
 Idle air volume learning ..... [EC-64](#)  
 Idle mixture ratio ..... [EC-53](#)  
 Idle speed ..... [EC-53](#)  
 Idle speed control (ISC) ..... [EC-413](#), [EC-415](#)  
 Ignition coil ..... [EM-35](#), [EC-596](#)  
 Ignition control system ..... [EC-596](#)  
 Ignition key hole illumination ..... [LT-331](#)  
 Ignition timing ..... [EC-53](#)  
 IGNSYS - Wiring diagram ..... [EC-597](#)

# ALPHABETICAL INDEX

Illumination control ..... [LT-363](#)  
 In vehicle sensor ..... [ATC-118](#), [ATC-129](#)  
 INF/D - Wiring diagram ..... [AV-90](#)  
 INJECT - Wiring diagram ..... [EC-618](#)  
 Injector ..... [EC-617](#)  
 Input/Output signal of TCM ..... [CVT-40](#)  
 Instrument panel ..... [IP-10](#)  
 Intake air temperature sensor ..... [EC-198](#), [EC-218](#)  
 Intake door control linkage adjustment ..... [ATC-92](#)  
 Intake door motor ..... [ATC-90](#), [ATC-136](#)  
 Intake manifold ..... [EM-20](#)  
 Intake manifold collector ..... [EM-16](#)  
 Intake sensor ..... [ATC-124](#), [ATC-131](#)  
 Intake valve timing control (Bank 1) ..... [EC-162](#)  
 Intake valve timing control (Bank 2) ..... [EC-162](#)  
 Intake valve timing control solenoid valve (Bank 1) .....  
[EC-429](#)  
 Intake valve timing control solenoid valve (Bank 2) .....  
[EC-429](#)  
 Integrated homelink transmitter ..... [BL-205](#)  
 Interior ..... [EI-32](#)  
 Interior lamp ..... [LT-309](#)  
 IPDM (Intelligent power distribution module engine  
 room) ..... [PG-16](#)  
 IVCB1 - Wiring diagram ..... [EC-430](#)  
 IVCB2 - Wiring diagram ..... [EC-432](#)  
 IVIS (Infiniti vehicle immobilizer system) precautions ...  
[GI-3](#)

## J

Joint connector (J/C) ..... [PG-81](#)

## K

Knock sensor (KS) ..... [EC-317](#)  
 KS - Wiring diagram ..... [EC-318](#)

## L

LAN system circuit ..... [ATC-81](#)  
 Line pressure and secondary pressure control ..... [CVT-40](#)  
 Line pressure solenoid valve ..... [CVT-120](#)  
 Liquid gasket application ..... [LU-2](#), [CO-2](#)  
 Location of electrical units ..... [PG-75](#)  
 Lock-up and select control ..... [CVT-42](#)  
 Low tire pressure warning system ..... [WT-8](#)  
 Lubricant (R134a) A/C ..... [ATC-7](#), [ATC-22](#)  
 Lubrication circuit (engine) ..... [LU-4](#)  
 Lubrication oil A/C ..... [ATC-170](#)

## M

MAFS - Wiring diagram ..... [EC-186](#), [EC-193](#)  
 Magnet clutch ..... [ATC-98](#), [ATC-153](#)  
 MAIN - Wiring diagram ..... [EC-152](#)  
 Maintenance (engine) ..... [MA-13](#)  
 Major overhaul (Transfer) ..... [TF-18](#)  
 Mass air flow sensor (MAFS) ..... [EC-183](#), [EC-191](#)

Master cylinder (brake) ..... [BR-15](#)  
 Meter ..... [DI-4](#)  
 METER - Wiring diagram ..... [DI-10](#)  
 MIL data link connectors circuit ..... [EC-650](#)  
 MIL/DL - Wiring diagram ..... [EC-650](#)  
 Mirror, door ..... [GW-112](#)  
 Mirror, out side ..... [GW-112](#)  
 Misfire ..... [EC-311](#)  
 Mode door control linkage adjustment ..... [ATC-86](#)  
 Mode door motor ..... [ATC-84](#), [ATC-142](#)  
 Molding - See Exterior ..... [EI-23](#), [EI-26](#), [EI-28](#)  
 Multiport fuel injection (MFI) system ..... [EC-25](#)  
 Multiport fuel injection precautions ..... [GI-6](#)

## N

NATS - Wiring diagram ..... [BL-190](#)  
 NAVI - Wiring diagram ..... [AV-153](#)  
 Navigation system ..... [AV-113](#)  
 Nissan torque demand (NTD) control system ... [EC-28](#)  
 NVH troubleshooting (BR) ..... [BR-5](#)  
 NVH troubleshooting (Transfer) ..... [TF-8](#)  
 NVIS (Nissan vehicle immobilizer system) ..... [BL-187](#)  
 NVIS (Nissan vehicle immobilizer system) precautions  
[GI-3](#)

## O

O2H1B1 - Wiring diagram ..... [EC-167](#)  
 O2H1B2 - Wiring diagram ..... [EC-169](#)  
 O2H2B1 - Wiring diagram ..... [EC-176](#)  
 O2H2B2 - Wiring diagram ..... [EC-178](#)  
 O2S1B1 - Wiring diagram ... [EC-225](#), [EC-236](#), [EC-249](#)  
 O2S1B2 - Wiring diagram ... [EC-227](#), [EC-238](#), [EC-251](#)  
 O2S2B1 - Wiring diagram .. [EC-258](#), [EC-269](#), [EC-470](#),  
[EC-482](#)  
 O2S2B2 - Wiring diagram .. [EC-260](#), [EC-271](#), [EC-472](#),  
[EC-484](#)  
 Oil cooler (engine) ..... [LU-10](#)  
 Oil filter ..... [LU-9](#)  
 Oil pan (engine) ..... [EM-26](#)  
 Oil pressure (engine) ..... [LU-6](#)  
 Oil pump (engine) ..... [LU-12](#)  
 Oil pump regulator valve (engine) ..... [LU-12](#)  
 Oil seal replacement (front of final drive) ..... [RFD-7](#)  
 ORVR (On-board Refueling Vapor Recovery) . [EC-659](#)  
 Out side mirror ..... [GW-112](#)  
 Overheat ..... [EC-495](#)

## P

P/SCKT - Wiring diagram ..... [WW-71](#)  
 Park/Neutral position switch ..... [EC-550](#)  
 Park/neutral position switch (CVT) ..... [CVT-85](#)  
 Parking brake control ..... [PB-3](#)  
 PCV (positive crankcase ventilation) ..... [EC-664](#)  
 Personal lamp ..... [LT-307](#), [LT-330](#)  
 PGC/V - Wiring diagram ..... [EC-358](#), [EC-519](#)  
 PHSB1 - Wiring diagram ..... [EC-329](#)



# ALPHABETICAL INDEX

|                                          |                                                 |
|------------------------------------------|-------------------------------------------------|
| PHSB2 - Wiring diagram .....             | <a href="#">EC-331</a>                          |
| PNP/SW - Wiring diagram .....            | <a href="#">EC-552</a>                          |
| POS - Wiring diagram .....               | <a href="#">EC-323</a>                          |
| POWER - Wiring diagram .....             | <a href="#">PG-4</a>                            |
| Power seat .....                         | <a href="#">SE-112</a>                          |
| Power socket .....                       | <a href="#">WW-71</a>                           |
| Power steering fluid level .....         | <a href="#">PS-6</a> , <a href="#">MA-28</a>    |
| Power steering gear .....                | <a href="#">PS-14</a>                           |
| Power steering hydraulic pressure .....  | <a href="#">PS-28</a>                           |
| Power steering oil pump .....            | <a href="#">PS-28</a>                           |
| Power steering system bleeding .....     | <a href="#">PS-6</a>                            |
| Power supply routing .....               | <a href="#">PG-3</a>                            |
| Power window .....                       | <a href="#">GW-17</a>                           |
| PRE/SE - Wiring diagram .....            | <a href="#">EC-375</a> , <a href="#">EC-381</a> |
| Precautions for Leak detection dye ..... | <a href="#">ATC-15</a>                          |
| Precautions (General) .....              | <a href="#">GI-4</a>                            |
| Pressure test (CVT) .....                | <a href="#">CVT-57</a>                          |
| Propeller shaft .....                    | <a href="#">PR-4</a>                            |
| Propeller shaft on vehicle service ..... | <a href="#">PR-4</a>                            |
| PS/SEN - Wiring diagram .....            | <a href="#">EC-418</a>                          |

## R

|                                                      |                                                                            |
|------------------------------------------------------|----------------------------------------------------------------------------|
| Radiator .....                                       | <a href="#">CO-12</a>                                                      |
| Rear axle .....                                      | <a href="#">RAX-5</a>                                                      |
| Rear bumper .....                                    | <a href="#">EI-17</a>                                                      |
| Rear combination lamp removal and installation ..... | <a href="#">LT-304</a>                                                     |
| Rear disc brake .....                                | <a href="#">BR-33</a>                                                      |
| Rear door .....                                      | <a href="#">BL-125</a> , <a href="#">GW-61</a>                             |
| Rear seat .....                                      | <a href="#">SE-129</a>                                                     |
| Rear seat belt .....                                 | <a href="#">SB-6</a>                                                       |
| Rear suspension .....                                | <a href="#">RSU-5</a>                                                      |
| Rear washer .....                                    | <a href="#">WW-53</a>                                                      |
| Rear window defogger .....                           | <a href="#">GW-65</a>                                                      |
| Refrigerant connection precaution .....              | <a href="#">ATC-8</a>                                                      |
| Refrigerant discharging evacuating charging .....    | <a href="#">ATC-149</a>                                                    |
| Refrigerant general precaution .....                 | <a href="#">ATC-7</a>                                                      |
| Refrigerant lines .....                              | <a href="#">ATC-149</a>                                                    |
| Refrigerant pressure sensor .....                    | <a href="#">EC-634</a> , <a href="#">ATC-103</a> , <a href="#">ATC-164</a> |
| Refrigeration cycle .....                            | <a href="#">ATC-20</a>                                                     |
| Removal and installation (Transfer) .....            | <a href="#">TF-12</a>                                                      |
| Rocker cover .....                                   | <a href="#">EM-43</a>                                                      |
| Room lamp - See Interior lamp .....                  | <a href="#">LT-309</a>                                                     |
| ROOM/L - Wiring diagram .....                        | <a href="#">LT-314</a>                                                     |
| RP/SEN - Wiring diagram .....                        | <a href="#">EC-635</a>                                                     |

## S

|                                        |                        |
|----------------------------------------|------------------------|
| Seal - See Exterior .....              | <a href="#">EI-25</a>  |
| SEAT - Wiring diagram .....            | <a href="#">SE-114</a> |
| Seat belt inspection .....             | <a href="#">SB-7</a>   |
| Seat belt pre-tensioner disposal ..... | <a href="#">SRS-50</a> |
| Seat belt, front .....                 | <a href="#">SB-4</a>   |
| Seat belt, rear .....                  | <a href="#">SB-6</a>   |
| Seat, front .....                      | <a href="#">SE-122</a> |
| Seat, rear .....                       | <a href="#">SE-129</a> |
| Self-diagnosis (Transfer) .....        | <a href="#">TF-53</a>  |

|                                               |                                                   |
|-----------------------------------------------|---------------------------------------------------|
| SEN/PW - Wiring diagram .....                 | <a href="#">EC-513</a>                            |
| SHIFT - Wiring diagram .....                  | <a href="#">CVT-185</a>                           |
| Shift control .....                           | <a href="#">CVT-41</a>                            |
| Shift control system .....                    | <a href="#">CVT-182</a>                           |
| Shift schedule .....                          | <a href="#">CVT-62</a>                            |
| Side air bag (satellite) sensor .....         | <a href="#">SRS-47</a>                            |
| Side curtain air bag .....                    | <a href="#">SRS-44</a>                            |
| Side trim .....                               | <a href="#">EI-32</a>                             |
| SMJ (super multiple junction) .....           | <a href="#">PG-84</a>                             |
| Spark plug .....                              | <a href="#">EM-36</a>                             |
| Spark plug replacement .....                  | <a href="#">MA-20</a>                             |
| Specification value .....                     | <a href="#">EC-147</a>                            |
| Speedometer .....                             | <a href="#">DI-4</a>                              |
| Spiral cable .....                            | <a href="#">SRS-38</a>                            |
| Spot lamp .....                               | <a href="#">LT-330</a>                            |
| SROOF - Wiring diagram .....                  | <a href="#">RF-13</a>                             |
| SRS - See Supplemental Restraint System ..... | <a href="#">SRS-5</a>                             |
| SRS Trouble diagnoses .....                   | <a href="#">SRS-7</a>                             |
| Stabilizer bar (rear) .....                   | <a href="#">RSU-16</a>                            |
| Stall Test .....                              | <a href="#">CVT-56</a>                            |
| Standardized relay .....                      | <a href="#">PG-85</a>                             |
| START - Wiring diagram .....                  | <a href="#">SC-11</a>                             |
| Starter .....                                 | <a href="#">SC-10</a>                             |
| Starting system .....                         | <a href="#">SC-10</a>                             |
| Steering gear and linkage inspection .....    | <a href="#">MA-28</a>                             |
| Steering linkage .....                        | <a href="#">PS-14</a>                             |
| Steering wheel and column .....               | <a href="#">PS-8</a> , <a href="#">PS-10</a>      |
| Steering wheel turning force .....            | <a href="#">PS-8</a>                              |
| Step lamp .....                               | <a href="#">LT-267</a>                            |
| Stop lamp .....                               | <a href="#">LT-265</a>                            |
| Stop lamp switch .....                        | <a href="#">EC-564</a>                            |
| STOP/L - Wiring diagram .....                 | <a href="#">LT-265</a>                            |
| Sun roof, electric .....                      | <a href="#">RF-10</a>                             |
| Sunload sensor .....                          | <a href="#">ATC-121</a> , <a href="#">ATC-130</a> |
| Sunroof .....                                 | <a href="#">RF-10</a> , <a href="#">RF-36</a>     |
| Supplemental Restraint System .....           | <a href="#">SRS-5</a>                             |
| Suspension .....                              | <a href="#">MA-29</a>                             |
| Symbols and abbreviations .....               | <a href="#">GI-9</a> , <a href="#">GI-22</a>      |

## T

|                                              |                                                                                                                            |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Tachometer .....                             | <a href="#">DI-4</a>                                                                                                       |
| TCM circuit diagram .....                    | <a href="#">CVT-55</a>                                                                                                     |
| TCM function .....                           | <a href="#">CVT-19</a>                                                                                                     |
| TCM inspection table .....                   | <a href="#">CVT-63</a>                                                                                                     |
| Three way catalyst .....                     | <a href="#">EM-22</a>                                                                                                      |
| Three way catalyst function (Bank 1) .....   | <a href="#">EC-336</a>                                                                                                     |
| Three way catalyst function (Bank 2) .....   | <a href="#">EC-336</a>                                                                                                     |
| Three way catalyst precautions .....         | <a href="#">GI-5</a>                                                                                                       |
| Throttle body .....                          | <a href="#">EM-19</a>                                                                                                      |
| Throttle control motor .....                 | <a href="#">EC-449</a>                                                                                                     |
| Throttle control motor relay .....           | <a href="#">EC-444</a>                                                                                                     |
| Throttle position sensor (TPS) .....         | <a href="#">EC-208</a> , <a href="#">EC-304</a> , <a href="#">EC-508</a> , <a href="#">EC-510</a> , <a href="#">EC-582</a> |
| Tie-rod .....                                | <a href="#">PS-14</a>                                                                                                      |
| Timing chain .....                           | <a href="#">EM-54</a>                                                                                                      |
| Tire rotation .....                          | <a href="#">MA-26</a>                                                                                                      |
| Torque converter installation .....          | <a href="#">CVT-203</a>                                                                                                    |
| Torque convertor clutch solenoid valve ..... | <a href="#">CVT-112</a>                                                                                                    |

# ALPHABETICAL INDEX

## CVT-117

|                                                        |                        |
|--------------------------------------------------------|------------------------|
| TPS1 - Wiring diagram .....                            | <a href="#">EC-306</a> |
| TPS2 - Wiring diagram .....                            | <a href="#">EC-210</a> |
| TPS3 - Wiring diagram .....                            | <a href="#">EC-584</a> |
| Transfer control unit inspection table .....           | <a href="#">TF-51</a>  |
| Transverse link (front) .....                          | <a href="#">FSU-12</a> |
| TRNSCV - Wiring diagram .....                          | <a href="#">BL-205</a> |
| Trouble diagnoses .....                                | <a href="#">GI-10</a>  |
| TURN - Wiring diagram .....                            | <a href="#">LT-238</a> |
| Turn signal lamp .....                                 | <a href="#">LT-213</a> |
| Tyre pressure monitoring system - trouble diagnoses .. |                        |
| <a href="#">WT-31</a>                                  |                        |
| Tyre pressure monitoring system - wiring diagram ..... |                        |
| <a href="#">WT-32</a>                                  |                        |

## U

|                                 |                       |
|---------------------------------|-----------------------|
| Unified meter and A/C amp. .... | <a href="#">DI-32</a> |
|---------------------------------|-----------------------|

## V

|                                                 |                                                                          |
|-------------------------------------------------|--------------------------------------------------------------------------|
| Vacuum hose (brake system) .....                | <a href="#">BR-25</a>                                                    |
| Vacuum hose drawing (Engine control) .....      | <a href="#">EC-23</a>                                                    |
| Valve clearance .....                           | <a href="#">EM-77</a>                                                    |
| Valve guide .....                               | <a href="#">EM-89</a>                                                    |
| Valve lifter .....                              | <a href="#">EM-74</a>                                                    |
| Valve seat .....                                | <a href="#">EM-91</a>                                                    |
| Valve spring .....                              | <a href="#">EM-93</a>                                                    |
| Vanity mirror lamp .....                        | <a href="#">LT-305</a>                                                   |
| Variable induction air control system (VIAS) .. | <a href="#">EC-559</a> ,<br><a href="#">EC-608</a>                       |
| VDC -Wiring diagram .....                       | <a href="#">BRC-103</a>                                                  |
| Vehicle security (theft warning) system .....   | <a href="#">BL-142</a>                                                   |
| Vehicle speed sensor (VSS) .....                | <a href="#">EC-411</a> , <a href="#">EC-555</a> , <a href="#">EC-557</a> |
| VEHSEC - Wiring diagram .....                   | <a href="#">BL-168</a>                                                   |
| VENT/V - Wiring diagram .....                   | <a href="#">EC-365</a> , <a href="#">EC-527</a>                          |
| VIAS - Wiring diagram .....                     | <a href="#">EC-610</a>                                                   |
| VIAS/V - Wiring diagram .....                   | <a href="#">EC-560</a>                                                   |

## W

|                               |                                               |
|-------------------------------|-----------------------------------------------|
| WARN - Wiring diagram .....   | <a href="#">DI-62</a>                         |
| Warning chime .....           | <a href="#">DI-76</a>                         |
| Warning lamps .....           | <a href="#">DI-61</a>                         |
| Water pump .....              | <a href="#">CO-20</a>                         |
| Water temperature gauge ..... | <a href="#">DI-4</a>                          |
| Wheel alignment (front) ..... | <a href="#">FSU-5</a>                         |
| Wheel alignment (rear) .....  | <a href="#">RSU-5</a>                         |
| Wheel balance .....           | <a href="#">WT-6</a> , <a href="#">MA-25</a>  |
| Wheel bearing (front) .....   | <a href="#">FAX-5</a>                         |
| Wheel bearing (rear) .....    | <a href="#">RAX-5</a>                         |
| Wheel hub (front) .....       | <a href="#">FAX-5</a>                         |
| Wheel hub (rear) .....        | <a href="#">RAX-5</a>                         |
| Wheel sensor (VDC) .....      | <a href="#">BRC-146</a>                       |
| Wheel sensors (ABS) .....     | <a href="#">BRC-64</a>                        |
| WINDOW - Wiring diagram ..... | <a href="#">GW-23</a>                         |
| Window, door .....            | <a href="#">GW-58</a> , <a href="#">GW-61</a> |
| Windshield .....              | <a href="#">GW-11</a>                         |
| WIP/R - Wiring diagram .....  | <a href="#">WW-55</a>                         |

|                                       |                         |
|---------------------------------------|-------------------------|
| WIPER - Wiring diagram .....          | <a href="#">WW-33</a>   |
| Wiper and washer .....                | <a href="#">WW-4</a>    |
| Wiring diagram - CVT - CAN .....      | <a href="#">CVT-77</a>  |
| Wiring diagram - CVT - FTS .....      | <a href="#">CVT-91</a>  |
| Wiring diagram - CVT - L/USSV .....   | <a href="#">CVT-164</a> |
| Wiring diagram - CVT - LPSV .....     | <a href="#">CVT-121</a> |
| Wiring diagram - CVT - NONDTC .....   | <a href="#">CVT-178</a> |
| Wiring diagram - CVT - PNP/SW .....   | <a href="#">CVT-86</a>  |
| Wiring diagram - CVT - POWER .....    | <a href="#">CVT-151</a> |
| Wiring diagram - CVT - PRIPS .....    | <a href="#">CVT-144</a> |
| Wiring diagram - CVT - PRSCVT .....   | <a href="#">CVT-97</a>  |
| Wiring diagram - CVT - SECPS .....    | <a href="#">CVT-136</a> |
| Wiring diagram - CVT - SECPSV .....   | <a href="#">CVT-132</a> |
| Wiring diagram - CVT - SESCOVT .....  | <a href="#">CVT-103</a> |
| Wiring diagram - CVT - SPSW .....     | <a href="#">CVT-176</a> |
| Wiring diagram - CVT - STM .....      | <a href="#">CVT-170</a> |
| Wiring diagram - CVT - STSIG .....    | <a href="#">CVT-80</a>  |
| Wiring diagram - CVT - TCV .....      | <a href="#">CVT-113</a> |
| Wiring Diagram (Cell code) list ..... | <a href="#">PG-72</a>   |
| Wiring diagrams .....                 | <a href="#">GI-14</a>   |
| WT-T/WARN - Wiring diagram .....      | <a href="#">WT-32</a>   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX