

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

A

A/C air flow [ATC-32](#)
A/C component layout [ATC-21](#)
A/C compressor clutch removal and installation
[ATC-136](#)
A/C compressor mounting [ATC-135](#)
A/C compressor precaution [ATC-13](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-29](#)
A/C diagnostic work flow (auto A/C) [ATC-95](#)
A/C evaporator [ATC-147](#)
A/C HFC134a (R134a) system precaution [ATC-6](#)
A/C HFC134a (R134a) system service procedure
[ATC-132](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-13](#)
A/C lubricant (R134a) [ATC-22](#)
A/C lubrication oil [ATC-153](#)
A/C operational check [ATC-56](#)
A/C self-diagnoses (auto A/C) [ATC-48](#), [ATC-95](#)
A/C service data specification [ATC-153](#)
A/C system description (auto A/C) [ATC-25](#)
A/C trouble diagnoses (auto A/C) [ATC-35](#)
A/C, A - Wiring diagram [ATC-41](#)
ABS - Wiring diagram [BRC-15](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-614](#),
[EC-620](#), [EC-634](#)
Accelerator pedal released position learning [EC-89](#)
AF1B1-Wiring diagram [EC-485](#), [EC-495](#), [EC-505](#),
[EC-516](#), [EC-528](#), [EC-539](#), [EC-552](#)
AF1B2-Wiring diagram [EC-487](#), [EC-497](#), [EC-507](#),
[EC-518](#), [EC-530](#), [EC-541](#), [EC-554](#)
AF1HB1-Wiring diagram [EC-402](#)
AF1HB2-Wiring diagram [EC-404](#)
Air bag [SRS-3](#)
Air bag precautions [SRS-3](#), [AP-2](#)
Air bleeding for brake system [BR-12](#)
Air cleaner and air duct [EM-16](#)
Air cleaner filter replacement [MA-16](#)
Air conditioner cut control [EC-27](#)
Air flow meter - See Mass air flow sensor [EC-183](#),
[EC-192](#)
Air fuel ratio sensor 1 [EC-483](#), [EC-493](#), [EC-503](#),
[EC-514](#), [EC-525](#), [EC-536](#), [EC-549](#)
Air fuel ratio sensor 1 heater [EC-400](#)
Air mix. door motor [ATC-68](#), [ATC-125](#)
Ambient sensor [ATC-97](#), [ATC-110](#)
Angular tightening application [EM-4](#)
APPS1 - Wiring diagram [EC-616](#)
APPS2 - Wiring diagram [EC-622](#)
APPS3 - Wiring diagram [EC-636](#)
ASC/BS - Wiring diagram [EC-586](#)
ASC/SW - Wiring diagram [EC-579](#)
ASCBOF - Wiring diagram [EC-689](#)
ASCD [EC-28](#)
ASCD (automatic speed control device) [ACS-2](#)

ASCIND - Wiring diagram [EC-696](#)
AUDIO - Wiring diagram [AV-13](#)
Auto air conditioner - Wiring diagram [ATC-41](#)
Auto amp [ATC-109](#)
Auto anti-dazzling inside mirror [GW-73](#), [GW-74](#)
Automatic amplifier [ATC-46](#), [ATC-58](#), [ATC-109](#)
Automatic transmission fluid replacement [MA-22](#)
AV communication line [AV-85](#), [AV-135](#)
AWD - Wiring diagram [TF-18](#)
AWD control unit inspection table [TF-23](#)
Axle [MA-27](#)

B

Back Door [BL-180](#), [BL-181](#)
Back door [BL-180](#), [BL-181](#)
Back door opener - See Back door [BL-186](#)
BACK/L - Wiring diagram [LT-151](#)
Back-up lamp [LT-151](#)
Basic inspection [EC-70](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-11](#),
[SC-19](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-74](#), [ATC-117](#)
Blower unit [ATC-114](#)
Boring/horning cylinder block [EM-136](#)
Bose speaker amp. [AV-7](#)
Brake booster [BR-22](#)
Brake fluid change [BR-11](#)
Brake fluid level [MA-25](#)
Brake fluid level and line check [BR-11](#)
Brake hydraulic line [BR-13](#)
Brake inspection [MA-25](#)
Brake lines and cables inspection [MA-25](#)
Brake master cylinder [BR-15](#)
Brake pedal [BR-6](#)
Brake switch [EC-609](#)
BRK/SW - Wiring diagram [EC-610](#)
Bulb specifications [LT-219](#)
Bumper, front [EI-14](#)
Bumper, rear [EI-17](#)

C

Camshaft [EM-79](#)
Camshaft inspection [EM-81](#)
Camshaft position sensor (PHASE) [EC-304](#)
CAN - Wiring diagram [EC-168](#), [LAN-45](#), [LAN-75](#),
[LAN-111](#), [LAN-147](#), [LAN-187](#), [LAN-227](#), [LAN-260](#),
[LAN-340](#), [LAN-384](#)
CAN (Controller Area Network) ... [WT-9](#), [BL-27](#), [BL-63](#),
[BL-102](#), [GW-78](#), [RF-13](#), [SE-18](#)
CAN communication [EC-30](#), [EC-167](#), [CVT-24](#), [CVT-74](#),
[TF-14](#), [TF-36](#), [WT-9](#), [BRC-35](#), [BL-27](#), [BL-63](#), [BL-102](#),
[GW-78](#), [RF-13](#), [SE-18](#)
Canister-See EVAP canister [EC-34](#)
CHARGE - Wiring diagram [SC-18](#)
Charging system [SC-17](#)

ALPHABETICAL INDEX

Chassis and body maintenance [MA-20](#)
 CHIME - Wiring diagram [DI-64](#)
 Circuit breaker [PG-16](#)
 Closed loop control [EC-24](#)
 Collision diagnosis [SRS-48](#)
 Combination lamp, front, removal and installation
[LT-67](#)
 Combination lamp, rear, removal and installation
[LT-170](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 COMM - Wiring diagram [AV-85](#), [AV-135](#)
 COMPAS - Wiring diagram [DI-40](#)
 Compass [DI-38](#)
 Component Location (auto A/C) [ATC-38](#)
 Compression pressure [EM-95](#)
 Compressor clutch removal and installation .. [ATC-136](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-146](#)
 Connecting rod [EM-133](#)
 Connecting rod bearing clearance [EM-137](#)
 Connecting rod bushing clearance [EM-133](#)
 Console box - See Instrument panel [IP-10](#)
 Console box lamp [LT-218](#)
 CONSULT-II for engine [EC-126](#)
 CONSULT-II Reference value (CVT) [CVT-61](#)
 Control units (terminal arrangement) [PG-65](#)
 Control valve (CVT) [CVT-28](#)
 Controller Area Network (CAN) .. [WT-9](#), [BL-27](#), [BL-63](#),
[BL-102](#), [GW-78](#), [RF-13](#), [SE-18](#)
 COOL/F - Wiring diagram [EC-467](#)
 Coolant replacement [MA-13](#)
 Coolant replacementVQ35DE [CO-9](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-20](#)
 Cooling fan motor [EC-473](#)
 Cowl top [EI-21](#)
 Cowl top cover [EI-21](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-43](#)
 Crankshaft [EM-137](#)
 Crankshaft position sensor (POS) [EC-297](#)
 Crash zone sensor [SRS-44](#)
 CVT air breather hose [CVT-225](#)
 CVT control system [CVT-21](#)
 CVT cross-sectional view [CVT-20](#)
 CVT Electrical parts location [CVT-39](#), [CVT-40](#)
 CVT fluid checking [CVT-15](#), [CVT-42](#), [MA-20](#)
 CVT fluid cooler cleaning [CVT-17](#)
 CVT fluid cooler valve [CVT-228](#)
 CVT fluid replacement [CVT-16](#), [MA-21](#)
 CVT fluid temperature sensor [CVT-91](#)
 CVT hydraulic control system [CVT-22](#)
 CVT indicator [DI-54](#)
 CVT self-diagnoses [CVT-67](#), [CVT-73](#)
 CVT shift lock system [CVT-216](#)
 CVT shift lock system - Wiring diagram [CVT-217](#),
[CVT-219](#)

CVT trouble diagnoses [CVT-33](#)
 CVTIND - Wiring diagram [DI-54](#)
 Cylinder block [EM-113](#)
 Cylinder head [EM-95](#)
 Cylinder head bolt tightening [EM-98](#)

D

Daytime light system [LT-69](#)
 Daytime running light - See Daytime light system [LT-69](#)
 Diagnosis sensor unit [SRS-47](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),
[EC-47](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-100](#), [CVT-33](#)
 Differentil side oil seal [CVT-226](#)
 Display and amp.assembly [ATC-46](#), [ATC-58](#)
 Door glass [GW-67](#), [GW-70](#)
 Door glass Fitting Adjustment(Front) [GW-69](#)
 Door glass Fitting Adjustment(Rear) [GW-72](#)
 Door lock [BL-174](#)
 Door mirror [GW-101](#)
 Door trim [EI-30](#)
 Door, front [BL-170](#), [GW-67](#)
 Door, rear [BL-170](#), [GW-70](#)
 Drive belt [EM-13](#)
 Drive shaft [MA-27](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-36](#)
 DTC work support [EC-129](#)
 DTRL - Wiring diagram [LT-73](#)
 Duct and grilles [ATC-127](#)

E

ECM input/output signal [EC-116](#)
 ECM power supply [EC-158](#), [EC-409](#)
 ECM/PW - Wiring diagram [EC-410](#)
 ECTS - Wiring diagram [EC-207](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EM-21](#), [EC-420](#),
[EC-422](#)
 Electrical load signal circuit [EC-686](#)
 Electrical unit [PG-65](#)
 Electrical units location [PG-59](#)
 Electronic ignition (EI) system [EC-25](#)
 EMNT - Wiring diagram [EC-677](#)
 Engine control circuit diagram [EC-114](#)
 Engine control component parts location [EC-107](#)
 Engine control module (ECM) [EC-116](#), [EC-397](#)
 Engine control system diagram [EC-22](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) .. [EC-205](#),
[EC-217](#)
 Engine fail-safe system [EC-102](#)
 Engine mounting control (Front) [EC-676](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)

ALPHABETICAL INDEX

Engine oil replacement [MA-17](#)
Engine removal [EM-107](#)
ETC1 - Wiring diagram [EC-423](#)
ETC2 - Wiring diagram [EC-430](#)
ETC3 - Wiring diagram [EC-434](#)
EVAP canister [EC-34](#)
EVAP canister purge volume control solenoid valve
[EC-332](#), [EC-562](#)
EVAP canister vent control valve [EC-339](#), [EC-570](#)
EVAP control system (small leak) diagnosis .. [EC-324](#),
[EC-363](#)
EVAP control system pressure sensor [EC-346](#),
[EC-349](#), [EC-355](#)
EVAP control system purge flow monitoring diagnosis
[EC-319](#)
EVAP vapor lines inspection [MA-19](#)
Evaporative emission (EVAP) system [EC-31](#)
Evaporator [ATC-147](#)
Exhaust manifold [EM-25](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-20](#)
Expansion valve [ATC-148](#)

F

F/FOG - Wiring diagram [LT-112](#)
F/PUMP - Wiring diagram [EC-671](#)
Floor trim [EI-34](#)
Flow charts [GI-27](#)
Fluid temperature sensor (CVT) [CVT-91](#)
Fluorescent leak detector [ATC-149](#)
Fog lamp, front [LT-110](#)
Freeze frame data [EC-52](#)
Front axle [FAX-5](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-67](#)
Front disc brake [BR-27](#)
Front door [BL-170](#), [BL-174](#), [GW-67](#)
Front fog lamp [LT-110](#)
Front passenger air bag [SRS-40](#)
Front seat [SE-104](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-46](#)
Front suspension [FSU-5](#)
FTTS - Wiring diagram [EC-267](#), [EC-272](#)
Fuel cut control (at no load high engine speed) . [EC-26](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-245](#), [EC-255](#)
Fuel injection system (Bank 2) [EC-245](#), [EC-255](#)
Fuel injector and fuel tube [EM-41](#)
Fuel level sensor [EC-380](#), [EC-382](#), [EC-384](#)
Fuel line inspection [FL-3](#), [MA-16](#)
Fuel precautions [GI-6](#)
Fuel pressure check [EC-92](#)
Fuel pressure release [EC-92](#)
Fuel pump [EC-670](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-9](#)

Fuel tank temperature sensor [EC-265](#), [EC-271](#)
Fuel tank vacuum relief valve [EC-34](#)
FUELB1 - Wiring diagram [EC-247](#), [EC-257](#)
FUELB2 - Wiring diagram [EC-248](#), [EC-258](#)
Fuse [PG-16](#)
Fuse and fusible link box [PG-71](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Generic scan tool (GST) [EC-139](#)
Glass [GW-11](#), [GW-67](#), [GW-70](#)
Glove box lamp [LT-218](#)
Grille - See Exterior [EI-20](#)
Ground distribution [PG-30](#)

H

H/AIM - Wiring diagram [LT-107](#)
H/LAMP - Wiring diagram [LT-10](#), [LT-43](#)
Harness connector [PG-63](#)
Harness layout [PG-39](#)
Hazard warning lamp [LT-123](#)
Headlamp aiming control [LT-107](#)
Headlamp leveler - See Headlamp aiming control
[LT-107](#)
Headlamp removal and installation [LT-67](#)
Headlining - See Roof trim [EI-36](#)
Heated oxygen sensor 2 (bank 1) [EC-225](#), [EC-234](#),
[EC-438](#), [EC-449](#)
Heated oxygen sensor 2 (bank 2) [EC-225](#), [EC-234](#),
[EC-438](#), [EC-449](#)
Heated oxygen sensor 2 heater (bank 1) [EC-174](#)
Heated oxygen sensor 2 heater (bank 2) [EC-174](#)
Heated seat [SE-99](#)
Heater and cooling unit (Heater core) [ATC-120](#)
HFC134a (R134a) system precaution [ATC-6](#)
HFC134a (R134a) system service procedure [ATC-132](#)
HFC134a (R134a) system service tools [ATC-17](#)
HFC134a system service equipment precaution
[ATC-13](#)
Hood [BL-13](#)
Horn [WW-57](#)
HORN - Wiring diagram [WW-57](#)
How to erase DTC [EC-60](#)
HSEAT - Wiring diagram [SE-101](#)

I

IATS - Wiring diagram [EC-202](#)
Idle air volume learning [EC-90](#)
Idle mixture ratio [EC-78](#)
Idle speed [EC-75](#), [EC-78](#)
Idle speed control (ISC) [EC-388](#), [EC-390](#)
Ignition coil [EM-38](#), [EC-641](#)
Ignition control system [EC-641](#)
Ignition key hole illumination [LT-208](#)
Ignition timing [EC-75](#), [EC-78](#)

ALPHABETICAL INDEX

IGNSYS - Wiring diagram [EC-642](#)
 Illumination control [LT-218](#)
 In vehicle sensor [ATC-100](#), [ATC-111](#)
 INF/D - Wiring diagram [AV-80](#)
 INJECT - Wiring diagram [EC-664](#)
 Injector [EC-663](#)
 Input/Output signal of TCM [CVT-24](#)
 Instrument panel [IP-10](#)
 Intake air temperature sensor [EC-200](#), [EC-220](#)
 Intake door control linkage adjustment [ATC-73](#)
 Intake door motor [ATC-71](#), [ATC-118](#)
 Intake manifold [EM-23](#)
 Intake manifold collector [EM-18](#)
 Intake sensor [ATC-106](#), [ATC-113](#)
 Intake valve timing control (Bank 1) [EC-170](#)
 Intake valve timing control (Bank 2) [EC-170](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-413](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-413](#)
 Integrated homelink transmitter [BL-257](#)
 Interior [EI-32](#)
 Interior lamp [LT-175](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-17](#)
 IVCB1 - Wiring diagram [EC-414](#)
 IVCB2 - Wiring diagram [EC-416](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-292](#)
 KS - Wiring diagram [EC-293](#)

L

LAN system circuit [ATC-61](#)
 Line pressure and secondary pressure control [CVT-25](#)
 Line pressure solenoid valve [CVT-119](#), [CVT-124](#)
 Liquid gasket application [EM-5](#), [LU-2](#)
 Location of electrical units [PG-59](#)
 Lock-up and select control [CVT-27](#)
 Lock-up select solenoid valve [CVT-169](#)
 Low tire pressure warning system [WT-7](#)
 Lubricant (R134a) A/C [ATC-22](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-153](#)

M

MAFS - Wiring diagram [EC-186](#), [EC-194](#)
 Magnet clutch [ATC-79](#), [ATC-136](#)
 MAIN - Wiring diagram [EC-158](#)
 Maintenance (engine) [MA-12](#)
 Major overhaul (Transfer) [TF-54](#)
 Malfunction indicator lamp (MIL) [EC-61](#)
 Mass air flow sensor (MAFS) [EC-183](#), [EC-192](#)
 Master cylinder (brake) [BR-15](#)

Meter [DI-4](#)
 METER - Wiring diagram [DI-10](#)
 MIL data link connectors circuit [EC-698](#)
 MIL/DL - Wiring diagram [EC-698](#)
 Mirror, door [GW-101](#)
 Mirror, out side [GW-101](#)
 Misfire [EC-283](#)
 Mode door control linkage adjustment [ATC-67](#)
 Mode door motor [ATC-65](#), [ATC-124](#)
 Molding - See Exterior [EI-23](#), [EI-26](#), [EI-28](#)
 Multiport fuel injection (MFI) system [EC-23](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-237](#)
 NAVI - Wiring diagram [AV-125](#)
 Navigation system [AV-104](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (EM) [EM-11](#)
 NVH troubleshooting (Transfer) [TF-9](#)
 NVIS (Nissan vehicle immobilizer system) [BL-234](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-176](#)
 O2H2B2 - Wiring diagram [EC-178](#)
 O2S2B1 - Wiring diagram .. [EC-227](#), [EC-237](#), [EC-441](#),
[EC-452](#)
 O2S2B2 - Wiring diagram .. [EC-229](#), [EC-239](#), [EC-443](#),
[EC-454](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-29](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (engine) [EM-92](#)
 Oil seal replacement (front of final drive) [RFD-9](#)
 On board diagnostic system [EC-62](#)
 ORVR (On-board Refueling Vapor Recovery) ... [EC-38](#)
 Out side mirror [GW-101](#)
 Overheat [EC-463](#)
 Oversize piston [EM-135](#)

P

P/SCKT - Wiring diagram [WW-55](#)
 Park/Neutral position switch [EC-595](#)
 Park/neutral position switch (CVT) [CVT-83](#)
 Parking brake control [PB-3](#)
 PCV (positive crankcase ventilation) [EC-43](#)
 Personal lamp [LT-173](#), [LT-207](#)
 PGC/V - Wiring diagram [EC-334](#), [EC-564](#)
 PHSB1 - Wiring diagram [EC-306](#)
 PHSB2 - Wiring diagram [EC-308](#)
 Piston assembly [EM-126](#)

ALPHABETICAL INDEX

Piston pin inspection	EM-131	Seat belt inspection	SB-6
Piston ring inspection	EM-132	Seat belt, front	SB-3
Piston to bore clearance	EM-135	Seat belt, rear	SB-5
PNP/SW - Wiring diagram	EC-597	Seat, front	SE-104
POS - Wiring diagram	EC-299	Seat, rear	SE-111
POWER - Wiring diagram	PG-4	Second position switch	CVT-181
Power seat	SE-93	Secondary pressure sensor	CVT-140
Power socket	WW-55	Secondary Speed Sensor	CVT-101
Power steering fluid level	PS-7 , MA-26	Self-diagnosis (Transfer)	TF-25
Power steering hydraulic pressure	PS-27	Self-diagnostic results	EC-130
Power steering oil pump	PS-27	SEN/PW - Wiring diagram	EC-479
Power steering pressure (PSP) sensor	EC-392	SHIFT - Wiring diagram	CVT-217 , CVT-219
Power steering system bleeding	PS-7	Shift control	CVT-25
Power supply routing	PG-3	Shift control system	CVT-211
Power window	GW-17	Shift schedule	CVT-57 , CVT-239
PRE/SE - Wiring diagram	EC-351 , EC-357	Side air bag (satellite) sensor	SRS-45
Precations for Leak detection dye	ATC-15	Side curtain air bag	SRS-42
Precautions (General)	GI-4	Side trim	EI-32
Pressure control solenoid valve A	CVT-119 , CVT-124	SMJ (super multiple junction)	PG-67
Pressure control solenoid valve B	CVT-127 , CVT-130	Spark plug	EM-39
Pressure test (CVT)	CVT-44	Spark plug replacement	MA-18
Primary pressure sensor	CVT-148	Specification value	EC-147
Primary Speed Sensor	CVT-96	Speedometer	DI-4
Propeller shaft	PR-4	Spiral cable	SRS-38
Propeller shaft on vehicle service	PR-4	Spot lamp	LT-207
PS/SEN - Wiring diagram	EC-393	SROOF - Wiring diagram	RF-14

R

Radiator	CO-13	SRS - See Supplemental Restraint System	SRS-5
Rear axle	RAX-5	SRS - Wiring diagram	SRS-11
Rear bumper	EI-17	SRS Trouble diagnoses	SRS-7
Rear combination lamp removal and installation	LT-170	Stabilizer bar (rear)	RSU-16
Rear disc brake	BR-33	Stall Test	CVT-42
Rear door	BL-170 , GW-70	Standardized relay	PG-68
Rear seat	SE-111	START - Wiring diagram	SC-10
Rear seat belt	SB-5	Starter	SC-9
Rear suspension	RSU-5	Starting system	SC-9
Rear washer	WW-38	Steering gear and linkage inspection	MA-26
Rear window defogger	GW-75	Steering wheel and column	PS-9 , PS-11
Refrigerant connection precaution	ATC-8	Steering wheel turning force	PS-9
Refrigerant discharging evacuating charging	ATC-132	Step lamp	LT-150
Refrigerant general precaution	ATC-7	Step motor	CVT-175 , CVT-179
Refrigerant lines	ATC-132	Stop lamp	LT-148
Refrigerant pressure sensor	EC-681 , ATC-84 , ATC-147	Stop lamp switch	EC-609
Refrigeration cycle	ATC-20	STOP/L - Wiring diagram	LT-148
Removal and installation (Transfer)	TF-52	Sun roof, electric	RF-10
Road test	CVT-46	Sunload sensor	ATC-103 , ATC-112
Rocker cover	EM-47	Sunroof	RF-10 , RF-40
Room lamp - See Interior lamp	LT-175	Supplemental Restraint System	SRS-5
ROOM/L - Wiring diagram	LT-182	Supplemental restraint system - Wiring diagram	SRS-11
RP/SEN - Wiring diagram	EC-682	Suspension	MA-27

S

SAE J1979 - Service \$01 - 09	EC-46
Seal - See Exterior	EI-25

T

Tachometer	DI-4
TCM circuit diagram	CVT-41
TCM function	CVT-23

ALPHABETICAL INDEX

TCM inspection table [CVT-58](#)
 Thermostat [CO-27](#)
 Three way catalyst [EM-25](#)
 Three way catalyst function (Bank 1) [EC-313](#)
 Three way catalyst function (Bank 2) [EC-313](#)
 Three way catalyst precautions [GI-6](#)
 Throttle control motor [EC-433](#)
 Throttle control motor relay [EC-428](#)
 Throttle position sensor (TPS) [EC-210](#), [EC-276](#),
[EC-474](#), [EC-476](#), [EC-627](#)
 Throttle valve closed position learning [EC-89](#)
 Timing chain [EM-60](#)
 Tire rotation [MA-24](#)
 TLID - Wiring diagram [BL-191](#), [BL-194](#)
 Top tether strap child restraint [SB-9](#)
 Torque converter installation [CVT-236](#)
 Torque convertor clutch solenoid valve [CVT-111](#),
[CVT-116](#)
 TPS1 - Wiring diagram [EC-278](#)
 TPS2 - Wiring diagram [EC-212](#)
 TPS3 - Wiring diagram [EC-629](#)
 Transverse link (front) [FSU-12](#)
 TRNSCV - Wiring diagram [BL-257](#)
 Trouble diagnoses [GI-11](#)
 Turbocharger [CO-2](#)
 TURN - Wiring diagram [LT-128](#)
 Turn signal lamp [LT-123](#)
 Two trip detection logic [EC-46](#)
 Tyre pressure monitoring system - trouble diagnoses ..
[WT-10](#)
 Tyre pressure monitoring system - wiring diagram
[WT-11](#)

U

Unified meter and A/C amp. [DI-28](#)

V

Vacuum hose drawing (Engine control) [EC-113](#)
 Valve clearance [EM-88](#)
 Valve guide [EM-102](#), [EM-103](#)
 Valve lifter [EM-83](#)
 Valve seat [EM-104](#)
 Valve spring [EM-105](#), [EM-106](#)
 Vanity mirror lamp [LT-171](#)
 Variable induction air control system (VIAS) .. [EC-604](#),
[EC-654](#)
 Vehicle security (theft warning) system [BL-205](#)
 Vehicle speed sensor (VSS) [EC-386](#), [EC-600](#), [EC-602](#)
 VEHSEC - Wiring diagram [BL-211](#), [BL-217](#)
 VENT/V - Wiring diagram [EC-341](#), [EC-572](#)
 VIAS - Wiring diagram [EC-656](#)
 VIAS/V - Wiring diagram [EC-605](#)
 VIN registration [EC-89](#)

W

WARN - Wiring diagram [DI-43](#)

Warning chime [DI-60](#)
 Warning lamps [DI-42](#)
 Water pump [CO-22](#)
 Water temperature gauge [DI-4](#)
 Wheel alignment (front) [FSU-5](#)
 Wheel alignment (rear) [RSU-5](#)
 Wheel balance [WT-5](#), [MA-23](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (front) [FAX-5](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel sensor (VDC) [BRC-105](#)
 Wheel sensors (ABS) [BRC-43](#)
 WINDOW - Wiring diagram [GW-23](#)
 Window, door [GW-67](#), [GW-70](#)
 Windshield [GW-11](#)
 WIP/R - Wiring diagram [WW-40](#)
 WIPER - Wiring diagram [WW-11](#)
 Wiper and washer [WW-4](#)
 Wiring diagram - CVT - CAN [CVT-75](#)
 Wiring diagram - CVT - FTS [CVT-92](#)
 Wiring diagram - CVT - L/USSV [CVT-170](#)
 Wiring diagram - CVT - LPSV [CVT-120](#)
 Wiring diagram - CVT - MMSW [CVT-136](#)
 Wiring diagram - CVT - NONDTC [CVT-186](#)
 Wiring diagram - CVT - PNP/SW [CVT-85](#)
 Wiring diagram - CVT - POWER [CVT-157](#)
 Wiring diagram - CVT - PRIPS [CVT-149](#)
 Wiring diagram - CVT - PRSCVT [CVT-97](#)
 Wiring diagram - CVT - SECPS [CVT-141](#)
 Wiring diagram - CVT - SECPSV [CVT-131](#)
 Wiring diagram - CVT - SESCVT [CVT-102](#)
 Wiring diagram - CVT - SPSW [CVT-182](#)
 Wiring diagram - CVT - STM [CVT-176](#)
 Wiring diagram - CVT - STSIG [CVT-78](#)
 Wiring diagram - CVT - TCV [CVT-112](#)
 Wiring Diagram (Cell code) list [PG-56](#)
 Wiring diagrams [GI-15](#)
 WT-T/WARN - Wiring diagram [WT-11](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX