

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

A

A/C air flow [ATC-32](#)
 A/C component layout [ATC-21](#)
 A/C compressor mounting [ATC-134](#)
 A/C compressor precaution [ATC-13](#)
 A/C compressor special service tool [ATC-16](#)
 A/C control operation (auto A/C) [ATC-29](#)
 A/C diagnostic work flow (auto A/C) [ATC-93](#)
 A/C evaporator [ATC-142](#)
 A/C HFC134a (R134a) system precaution [ATC-6](#)
 A/C HFC134a (R134a) system service procedure
[ATC-131](#)
 A/C HFC134a (R134a) system service tools ... [ATC-17](#)
 A/C HFC134a system service equipment precaution ...
[ATC-13](#)
 A/C lubricant (R134a) [ATC-22](#)
 A/C lubrication oil [ATC-148](#)
 A/C operational check [ATC-55](#)
 A/C self-diagnoses (auto A/C) [ATC-47](#), [ATC-93](#)
 A/C service data specification [ATC-148](#)
 A/C system description (auto A/C) [ATC-25](#)
 A/C trouble diagnoses (auto A/C) [ATC-35](#)
 A/C, A - Wiring diagram [ATC-40](#)
 ABS - Wiring diagram [BRC-15](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor [EC-571](#),
[EC-577](#), [EC-591](#)
 Accelerator pedal released position learning [EC-75](#)
 AF1B1-Wiring diagram [EC-232](#), [EC-242](#), [EC-252](#),
[EC-263](#), [EC-600](#)
 AF1B2-Wiring diagram [EC-234](#), [EC-244](#), [EC-254](#),
[EC-265](#), [EC-602](#)
 AF1HB1-Wiring diagram [EC-163](#)
 AF1HB2-Wiring diagram [EC-165](#)
 Air bag [SRS-3](#)
 Air bag precautions [SRS-3](#), [AP-2](#)
 Air bleeding for brake system [BR-11](#)
 Air cleaner and air duct [EM-16](#)
 Air cleaner filter replacement [MA-16](#)
 Air conditioner cut control [EC-26](#)
 Air flow meter - See Mass air flow sensor [EC-187](#),
[EC-196](#)
 Air fuel ratio sensor 1 [EC-229](#), [EC-240](#), [EC-250](#),
[EC-260](#), [EC-598](#)
 Air fuel ratio sensor 1 heater [EC-161](#)
 Air mix. door motor [ATC-66](#), [ATC-123](#)
 Ambient sensor [ATC-95](#), [ATC-108](#)
 Angular tightening application [EM-4](#)
 APPS1 - Wiring diagram [EC-573](#)
 APPS2 - Wiring diagram [EC-579](#)
 APPS3 - Wiring diagram [EC-593](#)
 ASC/BS - Wiring diagram [EC-529](#)
 ASC/SW - Wiring diagram [EC-522](#)
 ASCBOF - Wiring diagram [EC-611](#)
 ASCD [EC-27](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCIND - Wiring diagram [EC-618](#)
 AUDIO - Wiring diagram [AV-11](#)

Auto air conditioner - Wiring diagram [ATC-40](#)
 Auto amp [ATC-107](#)
 Auto anti-dazzling inside mirror [GW-73](#), [GW-74](#)
 Automatic amplifier [ATC-45](#), [ATC-57](#), [ATC-107](#)
 Automatic transmission fluid replacement [MA-23](#)
 AV communication line [AV-83](#), [AV-144](#)
 AWD - Wiring diagram [TF-18](#)
 AWD control unit inspection table [TF-23](#)
 Axle [MA-28](#)

B

Back Door [BL-182](#), [BL-183](#)
 Back door [BL-182](#), [BL-183](#)
 Back door opener - See Back door [BL-188](#)
 BACK/L - Wiring diagram [LT-161](#)
 Back-up lamp [LT-161](#)
 Basic inspection [EC-68](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-11](#),
[SC-19](#)
 BCM (Body control module) [BCS-3](#)
 Blower motor [ATC-72](#), [ATC-115](#)
 Blower unit [ATC-112](#)
 Boring/horning cylinder block [EM-137](#)
 Bose speaker amp. [AV-6](#)
 Brake booster [BR-20](#)
 Brake fluid change [BR-10](#)
 Brake fluid level [MA-26](#)
 Brake fluid level and line check [BR-10](#)
 Brake hydraulic line [BR-12](#)
 Brake inspection [MA-26](#)
 Brake lines and cables inspection [MA-26](#)
 Brake master cylinder [BR-14](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-547](#)
 BRK/SW - Wiring diagram [EC-548](#)
 Bulb specifications [LT-229](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-16](#)

C

Camshaft [EM-79](#)
 Camshaft inspection [EM-81](#)
 Camshaft position sensor (PHASE) [EC-371](#)
 CAN [DI-84](#)
 CAN - Wiring diagram [EC-153](#), [CVT-73](#), [LAN-27](#),
[LAN-45](#), [LAN-60](#), [LAN-78](#), [LAN-97](#), [LAN-114](#), [LAN-135](#)
 CAN (Controller Area Network) [BL-27](#), [BL-62](#), [BL-104](#),
[GW-77](#), [RF-13](#), [SE-18](#)
 CAN communication [EC-29](#), [EC-152](#), [EC-155](#), [CVT-24](#),
[CVT-72](#), [TF-14](#), [TF-36](#), [BRC-34](#), [BL-27](#), [BL-62](#), [BL-104](#),
[GW-77](#), [RF-13](#), [SE-18](#)
 Canister-See EVAP canister [EC-33](#)
 CHARGE - Wiring diagram [SC-18](#)
 Charging system [SC-17](#)
 Chassis and body maintenance [MA-21](#)
 CHIME - Wiring diagram [DI-63](#)

ALPHABETICAL INDEX

Circuit breaker [PG-16](#)
 Closed loop control [EC-23](#)
 Collision diagnosis [SRS-51](#)
 Combination lamp, front, removal and installation
[LT-62](#)
 Combination lamp, rear, removal and installation
[LT-181](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 COMM - Wiring diagram [AV-83](#), [AV-144](#)
 COMPAS - Wiring diagram [DI-86](#)
 Compass [DI-85](#)
 Component Location (auto A/C) [ATC-37](#)
 Compression pressure [EM-96](#)
 Compressor special service tool [ATC-16](#)
 Condenser [ATC-141](#)
 Connecting rod [EM-134](#)
 Connecting rod bearing clearance [EM-138](#)
 Connecting rod bushing clearance [EM-134](#)
 Console box - See Instrument panel [IP-10](#)
 Console box lamp [LT-228](#)
 CONSULT-II for engine [EC-112](#)
 CONSULT-II Reference value (CVT) [CVT-60](#)
 Control units (terminal arrangement) [PG-64](#)
 Control valve (CVT) [CVT-28](#)
 Controller Area Network (CAN) [BL-27](#), [BL-62](#), [BL-104](#),
[GW-77](#), [RF-13](#), [SE-18](#)
 COOL/F - Wiring diagram [EC-506](#)
 Coolant replacement [MA-14](#)
 Coolant replacement VQ35DE [CO-9](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-20](#)
 Cooling fan motor [EC-513](#)
 Cowl top [EI-20](#)
 Cowl top cover [EI-20](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-42](#)
 Crankshaft [EM-138](#)
 Crankshaft position sensor (POS) [EC-364](#)
 Crash zone sensor [SRS-47](#)
 CVT air breather hose [CVT-222](#)
 CVT control system [CVT-21](#)
 CVT cross-sectional view [CVT-20](#)
 CVT Electrical parts location [CVT-39](#), [CVT-40](#)
 CVT fluid checking [CVT-15](#), [CVT-42](#), [MA-21](#)
 CVT fluid cooler cleaning [CVT-17](#)
 CVT fluid cooler valve [CVT-225](#)
 CVT fluid replacement [CVT-16](#), [MA-22](#)
 CVT fluid temperature sensor [CVT-88](#)
 CVT hydraulic control system [CVT-22](#)
 CVT indicator [DI-52](#)
 CVT self-diagnoses [CVT-65](#), [CVT-71](#)
 CVT shift lock system [CVT-213](#)
 CVT trouble diagnoses [CVT-33](#)
 CVTIND - Wiring diagram [DI-52](#)
 Cylinder block [EM-114](#)
 Cylinder head [EM-96](#)
 Cylinder head bolt tightening [EM-99](#)

D

Daytime light system [LT-64](#)
 Daytime running light - See Daytime light system [LT-64](#)
 Diagnosis sensor unit [SRS-50](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),
[WT-3](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-86](#), [CVT-33](#)
 Differentil side oil seal [CVT-223](#)
 Display and amp.assembly [ATC-45](#), [ATC-57](#)
 Door glass [GW-67](#), [GW-70](#)
 Door glass Fitting Adjustment(Front) [GW-69](#)
 Door glass Fitting Adjustment(Rear) [GW-72](#)
 Door lock [BL-176](#)
 Door mirror [GW-100](#)
 Door trim [EI-30](#)
 Door, front [BL-172](#), [GW-67](#)
 Door, rear [BL-172](#), [GW-70](#)
 Drive belt [EM-13](#)
 Drive shaft [MA-28](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-39](#)
 DTC work support [EC-114](#)
 DTRL - Wiring diagram [LT-68](#)
 Duct and grilles [ATC-125](#)

E

ECM input/output signal [EC-102](#)
 ECM power supply [EC-143](#), [EC-482](#)
 ECM/PW - Wiring diagram [EC-483](#)
 ECTS - Wiring diagram [EC-211](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EM-21](#), [EC-558](#),
[EC-569](#)
 Electrical load signal circuit [EC-620](#)
 Electrical unit [PG-64](#)
 Electrical units location [PG-58](#)
 Electronic ignition (EI) system [EC-24](#)
 EMNT - Wiring diagram [EC-623](#)
 Engine control circuit diagram [EC-100](#)
 Engine control component parts location [EC-93](#)
 Engine control module (ECM) [EC-102](#), [EC-486](#)
 Engine control system diagram [EC-21](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) ... [EC-209](#),
[EC-221](#)
 Engine fail-safe system [EC-88](#)
 Engine mounting control (Front) [EC-622](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-18](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-108](#)
 ETC1 - Wiring diagram [EC-559](#)
 ETC2 - Wiring diagram [EC-554](#)
 ETC3 - Wiring diagram [EC-565](#)
 EVAP canister [EC-33](#)

ALPHABETICAL INDEX

EVAP canister purge volume control solenoid valve [EC-401](#), [EC-409](#)
 EVAP canister vent control valve [EC-416](#), [EC-423](#)
 EVAP control system (small leak) diagnosis .. [EC-392](#), [EC-447](#)
 EVAP control system pressure sensor [EC-430](#), [EC-433](#), [EC-439](#)
 EVAP control system purge flow monitoring diagnosis [EC-387](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-30](#)
 Evaporator [ATC-142](#)
 Exhaust manifold [EM-25](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-21](#)
 Expansion valve [ATC-143](#)

F

F/FOG - Wiring diagram [LT-103](#)
 F/PUMP - Wiring diagram [EC-635](#)
 Floor trim [EI-34](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (CVT) [CVT-88](#)
 Fluorescent leak detector [ATC-144](#)
 Fog lamp, front [LT-101](#)
 Freeze frame data [EC-51](#)
 Front axle [FAX-5](#)
 Front bumper [EI-14](#)
 Front combination lamp removal and installation [LT-62](#)
 Front disc brake [BR-25](#)
 Front door [BL-172](#), [BL-176](#), [GW-67](#)
 Front fog lamp [LT-101](#)
 Front passenger air bag [SRS-43](#)
 Front seat [SE-103](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-49](#)
 Front suspension [FSU-5](#)
 FTS - Wiring diagram [CVT-89](#)
 FTTS - Wiring diagram [EC-334](#), [EC-339](#)
 Fuel cut control (at no load high engine speed) . [EC-25](#)
 Fuel gauge [DI-4](#)
 Fuel injection system (Bank 1) [EC-308](#), [EC-320](#)
 Fuel injection system (Bank 2) [EC-308](#), [EC-320](#)
 Fuel injector and fuel tube [EM-41](#)
 Fuel level sensor [EC-465](#), [EC-467](#), [EC-469](#)
 Fuel line inspection [FL-3](#), [MA-16](#)
 Fuel precautions [GI-6](#)
 Fuel pressure check [EC-78](#)
 Fuel pressure release [EC-78](#)
 Fuel pump [EC-634](#)
 Fuel pump and gauge [FL-4](#)
 Fuel system [FL-3](#)
 Fuel tank [FL-10](#)
 Fuel tank temperature sensor [EC-332](#), [EC-338](#)
 Fuel tank vacuum relief valve [EC-33](#)
 FUELB1 - Wiring diagram [EC-310](#), [EC-322](#)
 FUELB2 - Wiring diagram [EC-312](#), [EC-324](#)
 Fuse [PG-16](#)

Fuse and fusible link box [PG-70](#)
 Fusible link [PG-16](#)

G

Gauges [DI-4](#)
 Generic scan tool (GST) [EC-124](#)
 Glass [GW-11](#), [GW-67](#), [GW-70](#)
 Glove box lamp [LT-228](#)
 Grille - See Exterior [EI-19](#)
 Ground distribution [PG-29](#)

H

H/AIM - Wiring diagram [LT-98](#)
 H/LAMP - Wiring diagram [LT-11](#), [LT-40](#)
 Harness connector [PG-62](#)
 Harness layout [PG-38](#)
 Hazard warning lamp [LT-114](#), [LT-153](#)
 Headlamp aiming control [LT-98](#)
 Headlamp leveler - See Headlamp aiming control [LT-98](#)
 Headlamp removal and installation [LT-62](#)
 Headlining - See Roof trim [EI-35](#)
 Heated oxygen sensor 2 (bank 1) [EC-273](#), [EC-284](#), [EC-297](#)
 Heated oxygen sensor 2 (bank 2) [EC-273](#), [EC-284](#), [EC-297](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-170](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-170](#)
 Heated seat [SE-98](#)
 Heater and cooling unit (Heater core) [ATC-118](#)
 HFC134a (R134a) system precaution [ATC-6](#)
 HFC134a (R134a) system service procedure [ATC-131](#)
 HFC134a (R134a) system service tools [ATC-17](#)
 HFC134a system service equipment precaution [ATC-13](#)
 Hood [BL-13](#)
 Horn [WW-56](#)
 HORN - Wiring diagram [WW-56](#)
 How to erase DTC [EC-58](#)
 HSEAT - Wiring diagram [SE-100](#)

I

IATS - Wiring diagram [EC-206](#)
 Idle air volume learning [EC-76](#)
 Idle speed [EC-73](#)
 Idle speed control (ISC) [EC-473](#), [EC-475](#)
 Ignition coil [EM-38](#), [EC-640](#)
 Ignition control system [EC-640](#)
 Ignition key hole illumination [LT-216](#)
 Ignition timing [EC-73](#)
 IGNSYS - Wiring diagram [EC-641](#)
 Illumination control [LT-228](#)
 In vehicle sensor [ATC-98](#), [ATC-109](#)
 INF/D - Wiring diagram [AV-74](#)
 INJECT - Wiring diagram [EC-628](#)
 Injector [EC-627](#)

ALPHABETICAL INDEX

Input/Output signal of TCM [CVT-24](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-204](#), [EC-224](#)
Intake door control linkage adjustment [ATC-71](#)
Intake door motor [ATC-69](#), [ATC-116](#)
Intake manifold [EM-23](#)
Intake manifold collector [EM-18](#)
Intake sensor [ATC-104](#), [ATC-111](#)
Intake valve timing control (Bank 1) [EC-157](#)
Intake valve timing control (Bank 2) [EC-157](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-179](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-179](#)
Integrated homelink transmitter [BL-259](#)
Interior [EI-32](#)
Interior lamp [LT-182](#)
IPDM (Intelligent power distribution module engine
room) [PG-17](#)
IVCB1 - Wiring diagram [EC-180](#)
IVCB2 - Wiring diagram [EC-182](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-359](#)
KS - Wiring diagram [EC-360](#)

L

L/USSV - Wiring diagram [CVT-167](#)
LAN system circuit [ATC-59](#)
Line pressure and secondary pressure control [CVT-25](#)
Line pressure solenoid valve [CVT-116](#), [CVT-121](#)
Liquid gasket application [EM-4](#), [LU-2](#)
Location of electrical units [PG-58](#)
Lock-up and select control [CVT-27](#)
Lock-up select solenoid valve [CVT-166](#)
Low tire pressure warning system [WT-8](#)
LPSV - Wiring diagram [CVT-117](#)
Lubricant (R134a) A/C [ATC-22](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-148](#)

M

MAFS - Wiring diagram [EC-190](#), [EC-198](#)
Magnet clutch [ATC-77](#)
MAIN - Wiring diagram [EC-143](#)
Maintenance (engine) [MA-12](#)
Major overhaul (Transfer) [TF-54](#)
Malfunction indicator lamp (MIL) [EC-59](#)
Mass air flow sensor (MAFS) [EC-187](#), [EC-196](#)
Master cylinder (brake) [BR-14](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-11](#)
MIL data link connectors circuit [EC-667](#)
MIL/DL - Wiring diagram [EC-667](#)

Mirror, door [GW-100](#)
Mirror, out side [GW-100](#)
Misfire [EC-350](#)
MMSW - Wiring diagram [CVT-133](#)
Mode door control linkage adjustment [ATC-65](#)
Mode door motor [ATC-63](#), [ATC-122](#)
Molding - See Exterior [EI-22](#), [EI-26](#), [EI-28](#)
Multiport fuel injection (MFI) system [EC-22](#)
Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-239](#)
NAVI - Wiring diagram [AV-134](#)
Navigation system [AV-125](#)
NONDTC - Wiring diagram [CVT-183](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (EM) [EM-11](#)
NVH troubleshooting (Transfer) [TF-9](#)
NVIS (Nissan vehicle immobilizer system) [BL-236](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-172](#)
O2H2B2 - Wiring diagram [EC-174](#)
O2S2B1 - Wiring diagram ... [EC-276](#), [EC-287](#), [EC-300](#)
O2S2B2 - Wiring diagram ... [EC-278](#), [EC-289](#), [EC-302](#)
Oil cooler (engine) [LU-10](#)
Oil filter [LU-9](#)
Oil pan (engine) [EM-29](#)
Oil pressure (engine) [LU-7](#)
Oil pump (engine) [LU-12](#)
Oil pump regulator valve (engine) [LU-12](#)
Oil seal replacement (engine) [EM-93](#)
Oil seal replacement (front of final drive) [RFD-9](#)
On board diagnostic system [EC-60](#)
ORVR (On-board Refueling Vapor Recovery) ... [EC-37](#)
Out side mirror [GW-100](#)
Overheat [EC-502](#)
Oversize piston [EM-136](#)

P

P/SCKT - Wiring diagram [WW-54](#)
Park/Neutral position switch [EC-494](#)
Park/neutral position switch (CVT) [CVT-81](#)
Parking brake control [PB-3](#)
PCV (positive crankcase ventilation) [EC-42](#)
Personal lamp [LT-214](#)
PGC/V - Wiring diagram [EC-403](#), [EC-411](#)
PHSB1 - Wiring diagram [EC-373](#)
PHSB2 - Wiring diagram [EC-375](#)
Piston assembly [EM-127](#)
Piston pin inspection [EM-132](#)
Piston ring inspection [EM-133](#)
Piston to bore clearance [EM-136](#)
PNP/SW - Wiring diagram [EC-496](#), [CVT-83](#)

ALPHABETICAL INDEX

POS - Wiring diagram [EC-366](#)
 POWER - Wiring diagram [CVT-154](#), [PG-4](#)
 Power seat [SE-92](#)
 Power socket [WW-54](#)
 Power steering fluid level [PS-6](#), [MA-27](#)
 Power steering oil pump [PS-29](#)
 Power steering pressure (PSP) sensor [EC-477](#)
 Power steering system bleeding [PS-7](#)
 Power supply routing [PG-3](#)
 Power window [GW-17](#)
 PRE/SE - Wiring diagram [EC-435](#), [EC-441](#)
 Precations for Leak detection dye [ATC-15](#)
 Precautions (General) [GI-4](#)
 Pressure control solenoid valve A [CVT-116](#), [CVT-121](#)
 Pressure control solenoid valve B [CVT-124](#), [CVT-127](#)
 Pressure test (CVT) [CVT-44](#)
 Primary pressure sensor [CVT-145](#)
 Primary Speed Sensor [CVT-93](#)
 PRIPS - Wiring diagram [CVT-146](#)
 Propeller shaft [PR-4](#)
 Propeller shaft on vehicle service [PR-4](#)
 PRSCVT - Wiring diagram [CVT-94](#)
 PS/SEN - Wiring diagram [EC-478](#)

R

Radiator [CO-13](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-16](#)
 Rear combination lamp removal and installation
[LT-181](#)
 Rear disc brake [BR-31](#)
 Rear door [BL-172](#), [GW-70](#)
 Rear seat [SE-109](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear washer [WW-37](#)
 Rear window defogger [GW-75](#)
 Refrigerant connection precaution [ATC-8](#)
 Refrigerant discharging evacuating charging [ATC-131](#)
 Refrigerant general precaution [ATC-7](#)
 Refrigerant lines [ATC-131](#)
 Refrigerant pressure sensor [EC-653](#), [ATC-82](#),
[ATC-142](#)
 Refrigeration cycle [ATC-20](#)
 Removal and installation (Transfer) [TF-52](#)
 Road test [CVT-46](#)
 Rocker cover [EM-47](#)
 Room lamp - See Interior lamp [LT-182](#)
 ROOM/L - Wiring diagram [LT-189](#)
 RP/SEN - Wiring diagram [EC-654](#)

S

SAE J1979 - Service \$01 - 09 [EC-45](#)
 Seal - See Exterior [EI-25](#)
 Seat belt inspection [SB-6](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)

Seat, front [SE-103](#)
 Seat, rear [SE-109](#)
 Second position switch [CVT-178](#)
 Secondary pressure sensor [CVT-137](#)
 Secondary Speed Sensor [CVT-98](#)
 SECPS - Wiring diagram [CVT-138](#)
 SECPSV - Wiring diagram [CVT-128](#)
 Self-diagnosis (Transfer) [TF-25](#)
 Self-diagnostic results [EC-115](#)
 SEN/PW - Wiring diagram [EC-490](#)
 SESCOVT - Wiring diagram [CVT-99](#)
 SHIFT - Wiring diagram [CVT-214](#), [CVT-216](#)
 Shift control [CVT-25](#)
 Shift control system [CVT-208](#)
 Shift schedule [CVT-56](#), [CVT-236](#)
 Side air bag (satellite) sensor [SRS-48](#)
 Side curtain air bag [SRS-45](#)
 Side trim [EI-32](#)
 SMJ (super multiple junction) [PG-66](#)
 Spark plug [EM-39](#)
 Spark plug replacement [MA-19](#)
 Specification value [EC-132](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-41](#)
 Spot lamp [LT-214](#)
 SPSW - Wiring diagram [CVT-179](#)
 SROOF - Wiring diagram [RF-14](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (rear) [RSU-16](#)
 Stall Test [CVT-42](#)
 Standardized relay [PG-67](#)
 START - Wiring diagram [SC-10](#)
 Starter [SC-9](#)
 Starting system [SC-9](#)
 Steering gear and linkage inspection [MA-27](#)
 Steering wheel and column [PS-8](#), [PS-11](#)
 Step motor [CVT-172](#), [CVT-176](#)
 STM - Wiring diagram [CVT-173](#)
 Stop lamp [LT-153](#)
 Stop lamp switch [EC-547](#)
 STOP/L - Wiring diagram [LT-156](#)
 STSIG - Wiring diagram [CVT-76](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-101](#), [ATC-110](#)
 Sunroof [RF-10](#), [RF-40](#)
 Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram
[SRS-12](#)
 Suspension [MA-28](#)
 Symbols and abbreviations [GI-10](#), [GI-23](#)
 Symptom matrix chart [EC-89](#)
 System readiness test (SRT) code [EC-51](#)

T

Tachometer [DI-4](#)
 TCM circuit diagram [CVT-41](#)

ALPHABETICAL INDEX

TCM function	CVT-23	Warning lamps	DI-38
TCM inspection table	CVT-57	Water pump	CO-22
TCV - Wiring diagram	CVT-109	Water temperature gauge	DI-4
Thermostat	CO-27	Wheel alignment (front)	FSU-5
Three way catalyst	EM-25	Wheel alignment (rear)	RSU-5
Three way catalyst function (Bank 1)	EC-381	Wheel balance	WT-54 , MA-24
Three way catalyst function (Bank 2)	EC-381	Wheel bearing (front)	FAX-5
Three way catalyst precautions	GI-6	Wheel bearing (rear)	RAX-5
Throttle control motor	EC-564	Wheel hub (front)	FAX-5
Throttle control motor relay	EC-552	Wheel hub (rear)	RAX-5
Throttle position sensor (TPS)	EC-214 , EC-343 , EC-514 , EC-516 , EC-584	Wheel sensor (VDC)	BRC-103
Throttle valve closed position learning	EC-76	Wheel sensors (ABS)	BRC-43
Timing chain	EM-60	WINDOW - Wiring diagram	GW-23
TLID - Wiring diagram	BL-193 , BL-196	Window, door	GW-67 , GW-70
Top tether strap child restraint	SB-9	Windshield	GW-11
Torque converter installation	CVT-233 , CVT-234	WIP/R - Wiring diagram	WW-39
Torque convertor clutch solenoid valve	CVT-108 , CVT-113	WIPER - Wiring diagram	WW-11
TPS1 - Wiring diagram	EC-345	Wiper and washer	WW-4
TPS2 - Wiring diagram	EC-216	Wiring Diagram (Cell code) list	PG-55
TPS3 - Wiring diagram	EC-586	Wiring diagrams	GI-15
Transverse link (front)	FSU-12	WT-T/WARN - Wiring diagram	WT-15
TRNSCV - Wiring diagram	BL-259		
Trouble diagnoses	GI-11		
Turbocharger	CO-2		
TURN - Wiring diagram	LT-119		
Turn signal lamp	LT-114 , LT-153		
Two trip detection logic	EC-45		
Tyre pressure monitoring system - trouble diagnoses ..	WT-11		

U

Unified meter and A/C amp.	DI-27
---------------------------------	-----------------------

V

Vacuum hose drawing (Engine control)	EC-99
Valve clearance	EM-88
Valve guide	EM-103 , EM-104
Valve lifter	EM-83
Valve seat	EM-105
Valve spring	EM-106 , EM-107
Variable induction air control system (VIAS) ..	EC-542 , EC-658
VDC -Wiring diagram	BRC-59
Vehicle security (theft warning) system	BL-207
Vehicle speed sensor (VSS)	EC-471 , EC-538 , EC-540
VEHSEC - Wiring diagram	BL-213 , BL-219
VENT/V - Wiring diagram	EC-418 , EC-425
VIAS - Wiring diagram	EC-660
VIAS/V - Wiring diagram	EC-543
VIN registration	EC-75

W

WARN - Wiring diagram	DI-40
Warning chime	DI-58