

ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT ..LAN-88, LAN-246,
LAN-294

A

A-BAG BRANCH LINE CIRCUIT LAN-89, LAN-153,
LAN-199, LAN-247, LAN-295

A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT SRC-143

A/C AUTO AMP. HAC-24, HAC-96, ST-9

A/C SWITCH ASSEMBLY HAC-95

ABBREVIATIONS GI-14

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) BRC-53, BRC-190, BRC-246,
BRC-405

ABS BRANCH LINE CIRCUIT ... LAN-94, LAN-158,
LAN-204, LAN-252, LAN-300

ABS WARNING LAMP BRC-172, BRC-382

ACCELERATOR CONTROL SYSTEM ACC-3

ACTION TEST BRC-292, CCS-75, DAS-150

ACTIVE GRILLE SHUTTER EXT-14, EXT-33

ACTIVE NOISE CONTROL MICROPHONE AV-136

ADAS CONTROL UNIT BRC-255, CCS-40, DAS-17,
DAS-84, DAS-113

ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL DLK-113,
PWC-32

ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) BRC-74, BRC-273

ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNIT DAS-39

ADDITIONAL SERVICE WHEN REPLACING
AROUND VIEW MONITOR CONTROL UNIT ..
AV-174

ADDITIONAL SERVICE WHEN REPLACING
AUTOMATIC BACK DOOR CONTROL UNIT...
DLK-115

ADDITIONAL SERVICE WHEN REPLACING AV
CONTROL UNIT AV-54

ADDITIONAL SERVICE WHEN REPLACING AWD
CONTROL UNIT DLN-35

ADDITIONAL SERVICE WHEN REPLACING BCM
DLK-114

ADDITIONAL SERVICE WHEN REPLACING CAN
GATEWAY LAN-125

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT PWC-33, SEC-73

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT (A/C AUTO AMP.) HAC-44

ADDITIONAL SERVICE WHEN REPLACING ECM
EC-153

ADDITIONAL SERVICE WHEN REPLACING HPCM
HBC-98

ADDITIONAL SERVICE WHEN REPLACING ICC
SENSOR BRC-274, CCS-65, DAS-149

ADDITIONAL SERVICE WHEN REPLACING LI-ION
BATTERY CONTROLLER HBB-61

ADDITIONAL SERVICE WHEN REPLACING TCM
TM-89

ADDITIONAL SERVICE WHEN REPLACING TCM
AND TRANSAXLE ASSEMBLY TM-93

ADDITIONAL SERVICE WHEN REPLACING
TRACTION MOTOR INVERTER TMS-50

ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY TM-91

ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION BRC-75, BRC-275

ADP BRANCH LINE CIRCUIT ... LAN-97, LAN-161,
LAN-207, LAN-255, LAN-303

ADP STEERING SWITCH ADP-137

ADP SYSTEM SYMPTOMS ADP-131

AIR BAG DIAGNOSIS SENSOR UNIT SR-29

AIR BREATHER DLN-115

AIR BREATHER HOSE TM-206

AIR CLEANER AND AIR DUCT EM-36

AIR CLEANER FILTER EM-31

ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/
BACK DOOR DO NOT OPEN WITH REQUEST
SWITCH DLK-237

AMBIENT SENSOR HAC-97

AMP ON SIGNAL CIRCUIT AV-96

ANTENNA AMP. AV-133

ANTI-PINCH FUNCTION DOES NOT OPERATE ..
PWC-63, RF-39

APPROACHING VEHICLE SOUND FOR
PEDESTRIANS (VSP) CONTROL UNIT VSP-17,
VSP-35

APPROACHING VEHICLE SOUND FOR
PEDESTRIANS (VSP) SYSTEM VSP-20

APPROACHING VEHICLE SOUND FOR
PEDESTRIANS (VSP) SYSTEM SYMPTOMS .
VSP-33

AROUND VIEW MONITOR CONTROL UNIT
AV-153, AV-203

AROUND VIEW MONITOR SYSTEM AV-158,
AV-202

AUTO LIGHT SYSTEM EXL-43, EXL-188

AUTO OPERATION DOES NOT OPERATE . RF-38

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY PWC-61

AUTOMATIC AIR CONDITIONING SYSTEM
HAC-30, HAC-88

AUTOMATIC BACK DOOR ANTI-PINCH
FUNCTION DOES NOT OPERATE DLK-263

AUTOMATIC BACK DOOR CLOSE SWITCH.....	
DLK-214, DLK-318	
AUTOMATIC BACK DOOR CONTROL MODULE ..	
DLK-315	
AUTOMATIC BACK DOOR CONTROL UNIT	DLK-55
AUTOMATIC BACK DOOR FUNCTIONS DO NOT CANCEL	DLK-262
AUTOMATIC BACK DOOR MAIN SWITCH	
DLK-216, DLK-316	
AUTOMATIC BACK DOOR OPERATION DOES NOT OPERATE	DLK-254
AUTOMATIC BACK DOOR SWITCH	DLK-218, DLK-317
AUTOMATIC BACK DOOR SYSTEM	DLK-98
AUTOMATIC BACK DOOR WARNING BUZZER....	
DLK-230	
AUTOMATIC BACK DOOR WARNING DOES NOT OPERATE.....	DLK-260
AUTOMATIC DRIVE POSITIONER CONTROL UNIT	
ADP-33, ADP-134	
AUTOMATIC DRIVE POSITIONER SYSTEM.....	
ADP-37	
AUTOMATIC SPEED CONTROL DEVICE (ASCD)	
CCS-150	
AUX IN JACK	AV-104, AV-124
AV BRANCH LINE CIRCUIT	LAN-85, LAN-150, LAN-196, LAN-243, LAN-291
AV CONTROL UNIT	AV-24, AV-118
AVM BRANCH LINE CIRCUIT ..	LAN-99, LAN-163, LAN-209, LAN-257, LAN-305
AWD CONTROL UNIT	DLN-23, DLN-59
AWD HIGH TEMP IS DISPLAYED ON INFORMATION DISPLAY	DLN-54
AWD SYSTEM.....	DLN-27

B

B TERMINAL CIRCUIT	CHG-23, STR-19
B0001, B0002 DRIVER AIRBAG MODULE	SRC-48
B0010, B0011 PASSENGER AIRBAG MODULE	
SRC-52	
B0020 SIDE AIRBAG MODULE LH	SRC-55
B0021 SIDE CURTAIN AIR BAG MODULE LH.....	
SRC-61	
B0028 SIDE AIRBAG MODULE RH.....	SRC-58
B0029 SIDE CURTAIN AIR BAG MODULE RH	
SRC-64	
B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH.....	SRC-70
B0092 REAR SIDE AIR BAG SATELLITE SENSOR LH.....	SRC-78
B0093 FRONT DOOR SATELLITE SENSOR LH....	
SRC-86	
B0094 CRASH ZONE SENSOR	SRC-67
B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	SRC-74

B0097 REAR SIDE AIR BAG SATELLITE SENSOR RH	SRC-82
B0098 FRONT DOOR SATELLITE SENSOR RH ...	
SRC-90	
B0099 SATELLITE SENSOR	SRC-94
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT.....	SRC-96
B00D5 PASSENGER AIR BAG OFF INDICATOR ..	
SRC-102	
B1404, B1405 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-130
B1406, B1407, B1408, B1409, B1410 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-132
B1414, B1416, B1417, B1420 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-134
B1427 CONFIG SETTING	SRC-129
B1428 SEAT BELT BUCKLE SWITCH LH	SRC-105
B1429 SEAT BELT BUCKLE SWITCH RH	SRC-108
B142A IGNITION VOLTAGE.....	SRC-126
B142X COLLISION DETECTION	SRC-136
B1430 SEAT BELT PRE-TENSIONER	SRC-111
B1431 SEAT BELT PRE-TENSIONER	SRC-114
B1433 LAP PRE-TENSIONER	SRC-117
B1434 KNEE AIR BAG MODULE LH	SRC-120
B1436 ACTIVE VENT	SRC-123
B14XX AIR BAG DIAGNOSIS SENSOR UNIT	
SRC-138	
B2098 IGNITION RELAY ON STUCK	PCS-31
B2099 IGNITION RELAY OFF STUCK	PCS-33
B210B STARTER CONTROL RELAY	SEC-82
B210C STARTER CONTROL RELAY	SEC-83
B210D STARTER RELAY	SEC-84
B210E STARTER RELAY	SEC-86
B210F TRANSMISSION RANGE SWITCH	SEC-88
B2110 TRANSMISSION RANGE SWITCH	SEC-91
B2112 SLIDING MOTOR	ADP-63
B2113 RECLINING MOTOR	ADP-65
B2116 TILT MOTOR	ADP-67
B2128 UART COMMUNICATION LINE	ADP-69
B2130 EEPROM	ADP-71
B2191, P1615 DIFFERENCE OF KEY	SEC-94
B2192 ID DISCORD, IMMU-ECM	SEC-95
B2193 CHAIN OF ECM-IMMU	SEC-97
B2195 ANTI-SCANNING	SEC-99
B2196 DONGLE UNIT	SEC-101
B2198 NATS ANTENNA AMP.....	SEC-103
B2205 VEHICLE SPEED	MWI-58
B2267 ENGINE SPEED	MWI-59
B2268 WATER TEMP	MWI-60
B2401 IGNITION POWER SUPPLY CIRCUIT	
DLK-122	
B2409 HALF LATCH SWITCH	DLK-123
B2416 TOUCH SENSOR RH	DLK-126
B2417 TOUCH SENSOR LH	DLK-129
B2419 OPEN SWITCH	DLK-132
B2420 CLOSE SWITCH	DLK-135

B2422 BACK DOOR STATE	DLK-138	B26FC KEY REGISTRATION	SEC-139
B2423 AUTOMATIC BACK DOOR MOTOR OPERATION TIME.....	DLK-141	B26FD SHIFT LOCK SOLENOID	DLK-163
B2426 ENCODER.....	DLK-143	B26FE HOOD SWITCH	DLK-166
B2427 ENCODER.....	DLK-146	B26FF REMOTE KEYLESS ENTRY RECEIVER ... DLK-169	
B2428 AUTOMATIC BACK DOOR CONTROL UNIT DLK-149		B2741 VSP CONTROL UNIT.....	VSP-31
B242A CLOSURE CONDITION.....	DLK-150	B2796 CONTROL COMMUNICATION	HAC-71
B2555 STOP LAMP	SEC-105	B27B0 A/C AUTO AMP.	HAC-73
B2556 PUSH-BUTTON IGNITION SWITCH..... SEC-108		BACK DOOR.....	DLK-288
B2557 VEHICLE SPEED	SEC-110	BACK DOOR CLOSURE MOTOR	DLK-229
B2560 STARTER CONTROL RELAY	SEC-112	BACK DOOR LOCK.....	DLK-302
B2562 LOW VOLTAGE	BCS-68	BACK DOOR OPENER SWITCH	DLK-206
B2578, B2579 IN-VEHICLE SENSOR	HAC-51	BACK DOOR OUTER FINISHER	EXT-54
B257B, B257C AMBIENT SENSOR	HAC-54	BACK DOOR REQUEST SWITCH	DLK-204
B2581, B2582 INTAKE SENSOR	HAC-57	BACK DOOR SWITCH.....	DLK-185
B259A ROOM LAMP FUSE.....	BCS-69	BACK DOOR TRIM.....	INT-33
B2600 CONFIG ERROR.....	LAN-129	BACK DOOR WARNING CHIME.....	DLK-312
B2601 SHIFT POSITION	SEC-113	BACK DOOR WINDOW GLASS.....	GW-28
B2602 SHIFT POSITION	SEC-116	BACK-UP LAMP.....	EXL-82, EXL-227
B2603 SHIFT POSITION	SEC-119	BACK-UP LAMP ASSEMBLY ...	EXL-148, EXL-291
B2604 SHIFT POSITION	SEC-123	BASIC INSPECTION.....	EC-164
B2605 SHIFT POSITION	SEC-126	BATTERY	PG-127, PG-136
B2608 STARTER RELAY	SEC-129	BATTERY CURRENT SENSOR	PG-141
B260A IGNITION RELAY.....	PCS-66	BATTERY TERMINAL WITH FUSIBLE LINK	PG-139
B260F ENGINE STATUS	SEC-131	BATTERY TRAY	PG-138
B2614 ACC RELAY CIRCUIT	PCS-68	BCM .	BCS-30, BCS-54, BCS-78, DEF-11, DLK-61, INL-13, WT-17
B2615 BLOWER RELAY CIRCUIT	PCS-70	BCM (BODY CONTROL MODULE).....	ADP-36, MWI-34, PCS-92, PWC-14, RF-12
B2616 IGNITION RELAY CIRCUIT.....	PCS-72	BCM BRANCH LINE CIRCUIT...LAN-93, LAN-157, LAN-203, LAN-251, LAN-299	
B2617 READY SIGNAL CIRCUIT.....	SEC-133	BCM, COMBINATION METER.....	WCS-18
B2618 BCM.....	PCS-74	BCM, IPDM E/REXL-28, EXL-174, PCS-49, WW-21	
B261A PUSH-BUTTON IGNITION SWITCH	PCS-76	BLIND SPOT WARNING INDICATOR	DAS-187
B261B REMOTE ENGINE START	DLK-153	BLOWER UNIT	VTL-13
B261E VEHICLE TYPE.....	SEC-134	BODY ALIGNMENT	BRM-46
B2621 INSIDE ANTENNA.....	DLK-154	BODY COMPONENT PARTS	BRM-14
B2622 INSIDE ANTENNA.....	DLK-157	BODY CONSTRUCTION	BRM-24
B2623 INSIDE ANTENNA.....	DLK-160	BODY EXTERIOR PAINT COLOR.....	BRM-2
B2626 OUTSIDE ANTENNA.....	DLK-174	BODY SEALING.....	BRM-21
B2627 OUTSIDE ANTENNA.....	DLK-177	BODY SIDE TRIM	INT-18
B2628 OUTSIDE ANTENNA.....	DLK-180	BOSE AMP.	AV-29
B2630, B2631 SUNLOAD SENSOR.....	HAC-60	BOSE SPEAKER AMP.....	AV-131
B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE)	HAC-63	BOTH DOORS MIRROR DEFOGGER DON'T OPERATE BUT REAR WINDOW DEFOGGER OPERATES	DEF-39
B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE)	HAC-65	BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON.....	EXL-129, EXL-272
B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR	HAC-67	BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON.....	EXL-126, EXL-269
B263D, B263E, B263F INTAKE DOOR MOTOR HAC-69		BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON.....	EXL-127, EXL-270
B26F1 IGNITION RELAY	PCS-79	BRAKE BOOSTER.....	BR-14, BR-30
B26F2 IGNITION RELAY	PCS-81	BRAKE CONTROL SYSTEM....	BRC-62, BRC-262
B26F3 STARTER CONTROL RELAY	SEC-136	BRAKE FLUID.....	BR-11
B26F4 STARTER CONTROL RELAY	SEC-137	BRAKE MASTER CYLINDER	BR-13, BR-27
B26F6 BCM.....	PCS-83		
B26F7 BCM.....	SEC-138		

BRAKE PEDAL BR-9, BR-19
 BRAKE PEDAL VIBRATION OR OPERATION
 SOUND OCCURS BRC-182, BRC-397
 BRAKE PIPING BR-21
 BRAKE STROKE SENSOR BRC-194, BRC-409
 BRAKE WARNING LAMP BRC-173, BRC-383

C

C10B7 YAW RATE SENSOR CCS-115
 C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-83, BRC-293
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-88, BRC-298
 C1109 POWER AND GROUND SYSTEM BRC-95,
 BRC-305
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT)..... BRC-97, BRC-307
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
 BRC-99, BRC-309
 C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
 SENSOR BRC-102, BRC-312
 C1115 WHEEL SENSOR..... BRC-104, BRC-314
 C1116 STOP LAMP SWITCH...BRC-111, BRC-321
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM..... BRC-117, BRC-327
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM..... BRC-119, BRC-329
 C1130 ENGINE SIGNAL BRC-121, BRC-331
 C1140 ACTUATOR RELAY SYSTEM..... BRC-123,
 BRC-333
 C1142 PRESS SENSOR..... BRC-125, BRC-335
 C1143 STEERING ANGLE SENSOR..... BRC-128,
 BRC-338, STC-21
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT BRC-132, BRC-342
 C1154 TRANSMISSION RANGE SWITCHBRC-134,
 BRC-344
 C1155 BRAKE FLUID LEVEL SWITCH ..BRC-136,
 BRC-346
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION..... BRC-140, BRC-350
 C1164, C1165 CV SYSTEM BRC-142, BRC-352
 C1166, C1167 SV SYSTEM BRC-144, BRC-354
 C1170 VARIANT CODING..... BRC-146, BRC-356
 C1197 VACUUM SENSOR..... BRC-148, BRC-358
 C1198 VACUUM SENSOR..... BRC-151, BRC-361
 C1199 BRAKE BOOSTER..... BRC-153, BRC-363
 C119B HPCM VACUUM SENSOR..... BRC-156,
 BRC-366
 C1201 AWD CONTROL UNIT DLN-37
 C1203 ABS ACTUATOR AND ELECTRIC UNIT
 (CONTROL UNIT) DLN-38
 C1204 AWD SOLENOID DLN-39
 C1205 AWD ACTUATOR RELAY DLN-42
 C1210 ECM DLN-44
 C1601 BATTERY POWER SUPPLY STC-22
 C1606 EPS MOTOR..... STC-25
 C1607, C1608 POWER STEERING CONTROL
 MODULE STC-26
 C160A HEAT PROTECTION..... STC-27
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSURE..... WT-31
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSOR WT-33
 C1716, C1717, C1718, C1719 TIRE PRESSURE
 SENSOR WT-37
 C1729 VEHICLE SPEED SIGNAL WT-39
 C1730, C1731, C1732, C1733 FLAT TIRE... WT-41
 C1734 CONTROL UNIT WT-43
 C1735 IGNITION SIGNAL WT-45
 C1761, C1762, C1763, C1764 TIRE PRESSURE
 SENSOR WT-47
 C1769 CONFIGURATION SETTING..... WT-49
 C1770, C1771, C1772, C1773 G SENSOR .WT-51
 C1A00 CONTROL UNIT CCS-81, DAS-42
 C1A01 POWER SUPPLY CIRCUIT 1, C1A02
 POWER SUPPLY CIRCUIT 2 CCS-82, DAS-43
 C1A03 VEHICLE SPEED SENSOR CCS-83,
 DAS-44
 C1A04 ABS/TCS/VDC SYSTEM CCS-85
 C1A05 BRAKE SW/STOP LAMP SW CCS-86
 C1A06 OPERATION SW CCS-91
 C1A07 CVT CCS-124
 C1A0C ADAS MESSAGE COUNTER FAILURE.....
 CCS-127
 C1A0D MRR CAN FAILURE CCS-128
 C1A12 LASER BEAM OFF CENTER..... CCS-94
 C1A13 STOP LAMP RELAY CCS-95, DAS-48
 C1A14 ECM..... CCS-97
 C1A15 GEAR POSITION CCS-99
 C1A16 RADAR BLOCKED OR STAINED CCS-101
 C1A17 ICC SENSOR CCS-103, DAS-55
 C1A18 RADAR AIMING INCMP CCS-104
 C1A1A HPCM..... DAS-46
 C1A21 UNIT HIGH TEMP CCS-105
 C1A24 NP RANGE CCS-106
 C1A26 ECD MODE MALFUNCTION CCS-108
 C1A27 ECD POWER SUPPLY CIRCUIT . CCS-110
 C1A34 COMMAND ERROR..... DAS-56
 C1A39 STEERING ANGLE SENSOR CCS-112
 C1A50 ADAS CONTROL UNIT CCS-114
 C1B50 SIDE RADAR MALFUNCTION..... DAS-152
 C1B51 BLIND SPOT WARNING INDICATOR
 SHORT CIRCUIT..... DAS-153
 C1B52 BLIND SPOT WARNING INDICATOR OPEN
 CIRCUIT DAS-155
 C1B53 SIDE RADAR RIGHT MALFUNCTION.....
 DAS-57
 C1B54 SIDE RADAR LEFT MALFUNCTIONDAS-58
 C1B55 RADAR BLOCKAGE DAS-157
 C1B5D FEB OPE COUNT LIMIT..... CCS-113

C1B63 STROKE SENSOR SIGNAL BRC-158, BRC-368	COMBINATION SWITCH OUTPUT CIRCUIT BCS-74
C1B64 STROKE SENSOR VOLTAGE.... BRC-161, BRC-371	COMBINATION SWITCH SYSTEM SYMPTOMS... BCS-76
C1B65 STROKE SENSOR UNFINISHED CALIBRATIONBRC-162, BRC-372	COMPRESSION PRESSURE..... EM-23
C1B66 STROKE SENSORBRC-163, BRC-373	COMPRESSOR HA-29
C1B67 TEMPERATURE SENSOR BRC-164, BRC-374	COMPRESSOR DOES NOT OPERATE.... HAC-93
CALIBRATION OF AUTOMATIC BACK DOOR POSITION INFORMATION DLK-117	CONDENSER DEF-45, HA-34
CALIBRATION OF DECEL G SENSOR ... BRC-77, BRC-277	CONDENSER PIPE ASSEMBLY HA-35
CALIBRATION OF G SENSOR HBC-100	CONFIGURATION DLK-118
CAMSHAFTEM-108	CONFIGURATION (ADAS CONTROL UNIT)DAS-40
CAMSHAFT VALVE CLEARANCEEM-20	CONFIGURATION (AROUND VIEW MONITOR CONTROL UNIT) AV-175
CAN COMMUNICATION CIRCUIT 1 LAN-106, LAN-169, LAN-216, LAN-263, LAN-312	CONFIGURATION (AV CONTROL UNIT).... AV-55
CAN COMMUNICATION CIRCUIT 2 LAN-108, LAN-171, LAN-218, LAN-265, LAN-314	CONFIGURATION (CAN GATEWAY) LAN-126
CAN GATEWAY LAN-121, LAN-132	CONFIGURATION (HVAC) HAC-45
CAN GATEWAY SYSTEM LAN-123	CONFIGURATION (LI-ION BATTERY CONTROLLER) HBB-62
CAN SYSTEM LAN-43	CONFIGURATION (TIRE PRESSURE MONITORING SYSTEM) WT-30
CAUTIONS AS TO HIGH VOLTAGE GI-29	CONFIGURATION [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)].. BRC-81, BRC-281
CENTER CONSOLE ASSEMBLY IP-19, IP-26	CONTROL CABLE TM-202
CENTER SPEAKER AV-85, AV-126	COOLER PIPE AND HOSE HA-31
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1) LAN-87, LAN-152, LAN-198, LAN-245, LAN-293	COOLING FAN CO-16, EC-559
CHARGE AIR COOLER EM-52	COOLING SYSTEM HBB-154
CHARGING SYSTEM CHG-9, CHG-28	CORROSION PROTECTION BRM-18
CHARGING SYSTEM PRELIMINARY INSPECTION CHG-20	COWL TOP EXT-35
CHASSIS AND BODY MAINTENANCE MA-29	CRASH ZONE SENSOR SR-25
CHECK ANTI-PINCH FUNCTION PWC-35	CVT CONTROL SYSTEM TM-68, TM-192
CHIME DOES NOT SOUND CCS-135, DAS-175	CVT FLUID TM-195
CLIMATE CONTROLLED SEAT BLOWER FILTER SE-98	CVT FLUID COOLER SYSTEM TM-219
CLIMATE CONTROLLED SEAT BLOWER MOTOR SE-93	CVT OIL WARMER TM-222
CLIMATE CONTROLLED SEAT CONTROL UNIT . SE-27	CVT POSITION TM-95
CLIMATE CONTROLLED SEAT SWITCH SE-82	CVT SHIFT LOCK SYSTEM TM-81
CLIMATE CONTROLLED SEAT SWITCH INDICATOR SE-96	CVT SHIFT SELECTOR TM-199
CLIMATE CONTROLLED SEAT SYSTEM .. SE-57, SE-116	CYLINDER BLOCK EM-134
CLUSTER LID A IP-21	CYLINDER HEAD EM-120
CLUSTER LID C IP-22	
CLUSTER LID D IP-23	
CLUTCH 1 ZERO POSITION LEARNING . HBC-99	
COLLISION DIAGNOSIS SR-5	
COMBINATION METER MWI-25, MWI-80, MWI-84	
COMBINATION SWITCH BCS-79	
COMBINATION SWITCH INPUT CIRCUIT.BCS-72	
	D
	DAYTIME RUNNING LIGHT RELAY CIRCUIT EXL-101, EXL-244
	DAYTIME RUNNING LIGHT SYSTEM EXL-36, EXL-181
	DC/DC CONVERTER HBB-164, HBC-74, HBC-329
	DEFOGGER SYSTEM SYMPTOMS DEF-36
	DIAGNOSIS AND REPAIR WORK FLOW ADP-53, BRC-71, BRC-271, CCS-63, DAS-146, DEF-21, DLK-110, DLN-32, DMS-16, EXL-92, EXL-237, HAC-39, HBB-58, HBC-95, MIR-7, MWI-53, PCS-60, SE-75, SEC-70, SRC-39, ST-12, STC-18, TM-86, TMS-47, WT-25
	DIAGNOSIS SENSOR UNIT SRC-19
	DIAGNOSIS SYSTEM (ADAS CONTROL UNIT) ... CCS-30, DAS-11, DAS-101

DIAGNOSIS SYSTEM (AIR BAG)	SRC-16	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ALL KEYS)	DLK-239
DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)	AV-151	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ONE KEY)	SEC-153
DIAGNOSIS SYSTEM (AUTOMATIC BACK DOOR CONTROL UNIT)	DLK-53	DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH AND INTELLIGENT KEY .	DLK-245
DIAGNOSIS SYSTEM (AV CONTROL UNIT)	AV-19	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY	DLK-244
DIAGNOSIS SYSTEM (AWD CONTROL UNIT)	DLN-21	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY (ONE KEY)	DLK-248
DIAGNOSIS SYSTEM (BCM)	BCS-15, DEF-8, DLK-46, EXL-19, EXL-165, INL-9, PCS-44, PWC-11, RF-9, SEC-18, WCS-15, WT-12, WW-14	DOOR KEY CYLINDER SWITCH	DLK-198, PWC-50
DIAGNOSIS SYSTEM (CAN GATEWAY)	LAN-120	DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	PWC-65
DIAGNOSIS SYSTEM (COMBINATION METER) ...	MWI-19, WCS-9	DOOR LOCK ACTUATOR	DLK-191
DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)	ADP-23	DOOR LOCK AND UNLOCK SWITCH	DLK-189
DIAGNOSIS SYSTEM (ECM)	EC-62	DOOR MIRROR	MIR-17
DIAGNOSIS SYSTEM (HPCM)	HBC-39	DOOR MIRROR ACTUATOR	MIR-21
DIAGNOSIS SYSTEM (HVAC)	HAC-21	DOOR MIRROR DEFOGGER LH	DEF-32
DIAGNOSIS SYSTEM (ICC SENSOR) ...	BRC-242, CCS-36, DAS-107	DOOR MIRROR DEFOGGER RH	DEF-34
DIAGNOSIS SYSTEM (IPDM E/R)	EXL-24, EXL-170, PCS-10, SEC-25, WW-17	DOOR MIRROR GLASS	MIR-19
DIAGNOSIS SYSTEM (LBC)	HBB-25	DOOR MIRROR MOTOR	ADP-126
DIAGNOSIS SYSTEM (POWER STEERING CONTROL MODULE)	STC-10	DOOR MIRROR REAR FINISHER	MIR-20
DIAGNOSIS SYSTEM (SIDE RADAR LH)	DAS-111	DOOR MIRROR REMOTE CONTROL SWITCH	ADP-90, MIR-9, MIR-23
DIAGNOSIS SYSTEM (SIDE RADAR RH)	DAS-112	DOOR MIRROR TURN SIGNAL LAMP ...	EXL-139, EXL-282
DIAGNOSIS SYSTEM (TCM)	TM-48	DOOR MOTOR	HAC-79, HAC-102
DIAGNOSIS SYSTEM (TIRE PRESSURE MONITORING SYSTEM)	WT-15	DOOR MOTOR COMMUNICATION CIRCUIT	HAC-81
DIAGNOSIS SYSTEM (TRACTION MOTOR INVERTER)	TMS-23	DOOR OUTSIDE LOWER MOLDING	EXT-49
DIAGNOSIS SYSTEM (VSP)	VSP-15	DOOR OUTSIDE MOLDING	EXT-47
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] ..	BRC-48, BRC-237	DOOR REQUEST SWITCH	DLK-202, DLK-308
DIAGNOSIS SYSTEM [BOSE AMP.(ACTIVE NOISE CONTROL SYSTEM)]	AV-23	DOOR SASH MOLDING	EXT-45
DIFFERENTIAL ASSEMBLY	DLN-125	DOOR SWITCH	DLK-183, DLK-307, RF-34
DIFFERENTIAL SIDE OIL SEAL	TM-214	DRIVE BELT	EM-28
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	LAN-90, LAN-154, LAN-200, LAN-248, LAN-296	DRIVE PINION	DLN-72, DLN-136
DLC BRANCH LINE CIRCUIT (HEV SYSTEM CAN CIRCUIT)	LAN-91, LAN-155, LAN-201, LAN-249, LAN-297	DRIVE PINION OIL SEAL	DLN-107
DOES NOT OPERATE	BRC-181, BRC-396	DRIVER AIR BAG MODULE	SR-12
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ALL I-KEY/REQ SW/PUSH SW)	DLK-241	DRIVER ASSISTANCE SYSTEM SYMPTOMS	BRC-388, DAS-173
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ONE I-KEY/REQ SW/ PUSH SW)	DLK-249	DRIVER ASSISTANCE SYSTEMS	DAS-24, DAS-131
		DRIVER SEAT CONTROL UNIT	ADP-26, ADP-133
		DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.	DEF-40
		DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-57
		DRIVING FORCE IS HUNTING	CCS-137
		DUCTS AND GRILLES	VTL-8

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE ...	WT-61
--	-------

ECM BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1) LAN-78, LAN-143, LAN-189, LAN-236, LAN-284

ECM BRANCH LINE CIRCUIT (HEV SYSTEM CAN CIRCUIT) LAN-79, LAN-144, LAN-190, LAN-237, LAN-285

ECM, IPDM E/R, BCM HAC-29, SEC-27

ECO MODE DMS-9

ECV (ELECTRICAL CONTROL VALVE) HAC-86

ELECTRIC CONTROLLED COUPLING .. DLN-110, DLN-121

ELECTRIC OIL PUMP TM-224

ELECTRIC WATER PUMP HCO-14

ELECTRIC WATER PUMP OPERATING NOISE IS AUDIBLE TMS-119

ELECTRICAL LOAD SIGNAL EC-561

ELECTRICAL UNITS LOCATION PG-5

ELECTROMAGNETIC NOISE IS AUDIBLE TMS-118

ELECTRONIC CONTROLLED ENGINE MOUNT .. EC-578

ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM STC-14

ENCODER PWC-45

ENGINE ASSEMBLY EM-81

ENGINE CAN NOT START SEC-149

ENGINE CONTROL SYSTEM EC-120

ENGINE CONTROL SYSTEM SYMPTOMS EC-589

ENGINE COOLANT CO-8

ENGINE COVER EM-35

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE SEC-150

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE (ONE KEY) SEC-152

ENGINE MAINTENANCE MA-15

ENGINE MOUNT EM-71

ENGINE MOUNT CONTROL MODULE EC-601

ENGINE OIL LU-7

ENGINE STAND SETTING EM-94

EPS/DAST 3 BRANCH LINE CIRCUIT LAN-82, LAN-147, LAN-193, LAN-240, LAN-288

EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1) LAN-83, LAN-148, LAN-194, LAN-241, LAN-289

EV/HEV BRANCH LINE CIRCUIT (HEV SYSTEM CAN CIRCUIT) LAN-84, LAN-149, LAN-195, LAN-242, LAN-290

EVAP CANISTER FL-19

EVAP CANISTER FILTER FL-21

EVAP CANISTER VENT CONTROL VALVE . FL-22

EVAP CONTROL SYSTEM PRESSURE SENSOR FL-23

EVAP LEAK CHECK EC-597

EVAPORATOR HA-41

EXCESSIVE OPERATION FREQUENCY BRC-177, BRC-392

EXHAUST MANIFOLD AND THREE WAY CATALYST EM-60

EXHAUST SYSTEM EX-4, EX-5

EXPANSION VALVE HA-42

EXTERIOR LIGHTING SYSTEM SYMPTOMS EXL-122, EXL-265

F

FENDER PROTECTOR EXT-37

FILAMENT DEF-43

FLOOR TRIM INT-24

FORWARD EMERGENCY BRAKING BRC-387

FREQUENTLY CANNOT DETECT THE VEHICLE AHEAD / DETECTION ZONE IS SHORT CCS-138, DAS-177

FRONT AND REAR WASHER MOTOR WW-58

FRONT BLOWER MOTOR HAC-82

FRONT BUMPER EXT-25

FRONT CAMERA AV-204

FRONT COIL SPRING AND STRUT FSU-10, FSU-19

FRONT COMBINATION LAMP EXL-135, EXL-151, EXL-278, EXL-294

FRONT DISC BRAKE BR-7, BR-15, BR-35, BR-45

FRONT DOOR DLK-280

FRONT DOOR FINISHER INT-15

FRONT DOOR GLASS GW-14

FRONT DOOR GLASS REGULATOR GW-16

FRONT DOOR LOCK DLK-296

FRONT DOOR SPEAKER AV-87, AV-128

FRONT DRIVE SHAFT FAX-7, FAX-20, FAX-26

FRONT DRIVE SHAFT BOOT FAX-11

FRONT FENDER DLK-278

FRONT FOG LAMP EXL-137, EXL-280

FRONT FOG LAMP AIMING ADJUSTMENT EXL-133, EXL-276

FRONT FOG LAMP CIRCUIT ... EXL-112, EXL-255

FRONT FOG LAMP SYSTEM EXL-52, EXL-197

FRONT GRILLE EXT-31

FRONT LOWER LINK RSU-14

FRONT PASSENGER AIR BAG MODULE ... SR-18

FRONT PASSENGER AIR BAG OFF INDICATOR. SR-45

FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE PWC-58

FRONT POWER WINDOW MOTOR GW-19

FRONT ROOM/MAP LAMP ASSEMBLY INL-57

FRONT SEAT SE-124, SE-150

FRONT SEAT BELT SB-8

FRONT SEAT BELT BUCKLE SWITCH SR-32

FRONT SIDE AIR BAG MODULE SR-24

FRONT SIDE MARKER LAMP CIRCUIT . EXL-106, EXL-249

FRONT SPOILER EXT-34

FRONT STABILIZER FSU-15

FRONT SUSPENSION ASSEMBLY FSU-6

FRONT SUSPENSION MEMBER..... FSU-18
 FRONT TWEETER..... AV-79, AV-127
 FRONT USB INTERFACE..... AV-102, AV-122
 FRONT WASHER NOZZLE AND TUBE WW-60
 FRONT WHEEL HUB..... FAX-6, FAX-8
 FRONT WIPER AND WASHER SYSTEM ..WW-22
 FRONT WIPER ARM WW-63
 FRONT WIPER BLADE..... WW-65
 FRONT WIPER DOES NOT OPERATE..... WW-54
 FRONT WIPER DRIVE ASSEMBLY WW-69
 FRONT WIPER MOTOR GROUND CIRCUIT.....
 WW-43
 FRONT WIPER MOTOR HI CIRCUIT WW-40
 FRONT WIPER MOTOR LO CIRCUIT..... WW-38
 FRONT WIPER STOP POSITION SIGNAL CIRCUIT
 WW-42
 FUEL FILLER LID OPENERDLK-305
 FUEL INJECTOR.....EC-563
 FUEL INJECTOR AND FUEL TUBE EM-38
 FUEL LEVEL SENSOR SIGNAL CIRCUIT MWI-65
 FUEL LEVEL SENSOR UNIT..... FL-24
 FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
 FUEL PUMP ASSEMBLY..... FL-5
 FUEL PRESSURE CHECKEC-167
 FUEL PUMPEC-566
 FUEL PUMP CONTROL MODULE (FPCM)EC-602
 FUEL SYSTEM..... FL-4
 FUEL TANKFL-11
 FUSE BLOCK - JUNCTION BOX (J/B) PG-122
 FUSE INSPECTION PG-131
 FUSE, FUSIBLE LINK AND RELAY BOX .. PG-123
 FUSIBLE LINK INSPECTION..... PG-135

G

GENERAL MAINTENANCE MA-6
 GENERATORCHG-29
 GLASS LIDRF-47
 GLOVE BOX ASSEMBLY AND HOUSING IP-25
 GLOVE BOX LAMP INL-60
 GPS ANTENNA..... AV-134
 GROUND..... PG-81

H

HALF LATCH SWITCH.....DLK-220
 HANDLING PRECAUTION BRC-236, CCS-27,
 DAS-99, HBB-23
 HANDLING PRECAUTIONS FOR PLASTICS
 BRM-6
 HARNESS PG-96
 HAZARD FUNCTIONDLK-213
 HAZARD SWITCH....EXL-120, EXL-142, EXL-263,
 EXL-285
 HEADLAMPEXL-29, EXL-175
 HEADLAMP (HI) CIRCUITEXL-96, EXL-240
 HEADLAMP (LO) CIRCUITEXL-98, EXL-242

HEADLAMP AIMING ADJUSTMENTEXL-130,
 EXL-273
 HEADLAMP FUNCTION SEC-140
 HEADLININGINT-25
 HEATED SEAT SYSTEM.....SE-42
 HEATED STEERING WHEELST-10
 HEATED STEERING WHEEL SWITCHST-41
 HEATED STEERING WHEEL SWITCH INDICATOR
 LAMPST-25
 HEATED STEERING WHEEL SYSTEMST-21
 HEATER CORE HA-40
 HEATING AND COOLING UNIT ASSEMBLYHA-38
 HEAVY TIGHT-CORNER BRAKING SYMPTOM
 OCCURS DLN-52
 HEV SYSTEM CAN CIRCUIT . LAN-112, LAN-175,
 LAN-222, LAN-269, LAN-318
 HIGH-MOUNTED STOP LAMP .EXL-145, EXL-288
 HOMELINK UNIVERSAL TRANSCEIVERDLK-108
 HOOD DLK-271
 HOOD LOCK DLK-293
 HOOD SWITCH..... DLK-232, SEC-141, SEC-159
 HORNHRN-3, HRN-7
 HORN FUNCTION.....SEC-143
 HOW TO ERASE PERMANENT DTC..... EC-175,
 HBB-64, HBC-105, TM-97, TMS-52
 HOW TO FOLLOW TROUBLE DIAGNOSES ..GI-6
 HOW TO READ WIRING DIAGRAMSGI-9
 HOW TO SELECT PISTON AND BEARINGEM-152
 HOW TO SET SRT CODE..... EC-169
 HOW TO USE THIS MANUALGI-3
 HOW TO USE THIS SECTION LAN-9, LAN-25,
 TM-6
 HPCM HBC-57, HBC-327
 HV BAT BRANCH LINE CIRCUIT LAN-105,
 LAN-168, LAN-215, LAN-262, LAN-311
 HVAC BRANCH LINE CIRCUIT LAN-86, LAN-151,
 LAN-197, LAN-244, LAN-292
 HYBRID CONTROL SYSTEM.... HBB-38, HBC-75,
 HBC-323
 HYDRAULIC LINEST-40
 HYDRAULIC PUMP ELECTRIC POWER
 STEERING WARNING LAMP STC-29
 HYDRAULIC PUMP ELECTRIC POWER
 STEERING WARNING LAMP DOES NOT
 TURN OFF STC-31
 HYDRAULIC PUMP ELECTRIC POWER
 STEERING WARNING LAMP DOES NOT
 TURN ON STC-30

I

ICC BRANCH LINE CIRCUIT (CAN
 COMMUNICATION CIRCUIT 2) LAN-95,
 LAN-159, LAN-205, LAN-253, LAN-301
 ICC SENSOR CCS-47, CCS-145, DAS-120,
 DAS-181
 ICC SENSOR ALIGNMENT BRC-285, CCS-68

ICC SENSOR INITIAL VERTICAL ALIGNMENT BRC-283, CCS-66	INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION..... SEC-28
ICC STEERING SWITCH CCS-147, DAS-183	INTELLIGENT KEY WARNING BUZZER DLK-208, DLK-311
ICC STEERING SWITCH (OTHER THAN MAIN SWITCH) DOES NOT FUNCTION CCS-133	INTERIOR LIGHTING SYSTEM SYMPTOMS INL-56
ICC SYSTEM CANNOT BE SET (MAIN SWITCH TURNS ON/OFF)..... CCS-131	INTERIOR ROOM LAMP INL-14
ICC SYSTEM DOES NOT CANCEL WHEN CVT SELECTOR LEVER SETS ON	INTERIOR ROOM LAMP CONTROL CIRCUIT INL-50
ID REGISTRATION CANNOT BE COMPLETED.... WT-63	INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT..... INL-48
ID REGISTRATION PROCEDURE WT-27	INTERMITTENT INCIDENT SRC-45
IDENTIFICATION INFORMATION GI-44	INV/MC BRANCH LINE CIRCUIT LAN-103, LAN-166, LAN-213, LAN-260, LAN-309
IDLE AIR VOLUME LEARNING..... EC-160	INVERTER COOLANT HCO-8
IDLE SPEED EC-595	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)... PCS-14, PCS-23, PCS-36, PG-126
IGNITION COIL, SPARK PLUG AND ROCKER COVER EM-44	IPDM-E BRANCH LINE CIRCUIT LAN-80, LAN-145, LAN-191, LAN-238, LAN-286
IGNITION SIGNAL EC-568	ITS COMMUNICATION CIRCUIT LAN-110, LAN-173, LAN-220, LAN-267, LAN-316
IGNITION TIMING..... EC-596	
ILLUMINATION INL-28	
ILLUMINATION CONTROL SWITCH INL-64, MWI-83	
IMMOBILIZER CONTROL MODULE..... SEC-157	
IN-CABIN MICROFILTER VTL-5	
IN-VEHICLE SENSOR..... HAC-98	
INSIDE KEY ANTENNA..... DLK-309	
INSIDE MIRROR..... MIR-5, MIR-16	
INSPECTION MODE GI-66, HBC-101	
INSTRUMENT LOWER PANEL LH IP-24	
INSTRUMENT PANEL ASSEMBLY IP-15	
INSTRUMENT PANEL TWEETER .. AV-82, AV-125	
INSUFFICIENT COOLING..... HAC-90	
INSUFFICIENT HEATING..... HAC-92	
INSULATION RESISTANCE HBB-150, HBC-320	
INTAKE MANIFOLD EM-48	
INTAKE SENSOR HAC-100	
INTEGRATED HOMELINK TRANSMITTER DLK-234	
INTEGRATED HOMELINK TRANSMITTER DOES NOT OPERATE..... DLK-264	
INTELLIGENT CRUISE CONTROL..... CCS-54	
INTELLIGENT CRUISE CONTROL SYSTEM SYMPTOMS..... CCS-129	
INTELLIGENT KEY DLK-210	
INTELLIGENT KEY BATTERY..... DLK-314	
INTELLIGENT KEY BUTTON OPERATION HAS POOR RANGE (ALL KEYS) DLK-246	
INTELLIGENT KEY BUTTON OPERATION HAS POOR RANGE (ONE KEY) DLK-253	
INTELLIGENT KEY SYSTEM DLK-76	
INTELLIGENT KEY SYSTEM ALL FUNCTIONS CANNOT OPERATE (ALL KEYS)..... DLK-242	
INTELLIGENT KEY SYSTEM ALL FUNCTIONS CANNOT OPERATE (ONE KEY)..... DLK-251	
INTELLIGENT KEY SYSTEM SYMPTOMS..... DLK-236, SEC-148	
	K
	KEY WARNING LAMP DLK-212
	KEYLESS POWER WINDOW DOWN DOES NOT OPERATE PWC-66
	L
	L TERMINAL CIRCUIT (OPEN) CHG-24
	L TERMINAL CIRCUIT (SHORT)..... CHG-26
	LASER BRANCH LINE CIRCUIT LAN-102, LAN-212, LAN-308
	LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM..... SB-16
	LED HEADLAMP EXL-100
	LED HEADLAMP OPERATION INSPECTION..... EXL-95
	LEFT KNEE AIR BAG MODULE SR-20
	LI-ION BATTERY HBB-159
	LI-ION BATTERY CONTROLLER (LBC).... HBB-31
	LICENSE PLATE LAMP EXL-146, EXL-289
	LICENSE PLATE LAMP CIRCUIT EXL-110, EXL-253
	LIFTING MOTOR (FRONT) ADP-118
	LIFTING MOTOR (REAR)..... ADP-120
	LIFTING POINT..... GI-39
	LIFTING SENSOR (FRONT)..... ADP-101
	LIFTING SENSOR (REAR)..... ADP-104
	LIFTING SWITCH (FRONT)..... ADP-79
	LIFTING SWITCH (REAR)..... ADP-81
	LIGHTING & TURN SIGNAL SWITCH.... EXL-141, EXL-284
	LIQUID TANK HA-36
	LOW TIRE PRESSURE WARNING LAMP .. WT-55
	LOW TIRE PRESSURE WARNING LAMP BLINKS WT-60

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON WT-58
 LOW TIRE PRESSURE WARNING LAMP STAYS ON WT-59
 LOWER JOINT ST-33
 LUGGAGE FLOOR TRIM..... INT-29
 LUGGAGE ROOM LAMP INL-62
 LUGGAGE ROOM LAMP CIRCUIT INL-52
 LUMBAR SUPPORT SYSTEM..... SE-37

M

M&A BRANCH LINE CIRCUIT .. LAN-92, LAN-156, LAN-202, LAN-250, LAN-298
 MAGNET CLUTCH..... HAC-85
 MAIN LINE BETWEEN 4WD AND DLC CIRCUIT .. LAN-70, LAN-229, LAN-276
 MAIN LINE BETWEEN ADP AND PWBD CIRCUIT LAN-72, LAN-138, LAN-183, LAN-231, LAN-278
 MAIN LINE BETWEEN AVM AND RDR-R CIRCUIT LAN-73, LAN-139, LAN-184, LAN-232, LAN-279
 MAIN LINE BETWEEN CGW AND ADP CIRCUIT . LAN-71, LAN-137, LAN-182, LAN-230, LAN-277
 MAIN LINE BETWEEN EPS/DAST 3 AND EV/HEV CIRCUIT LAN-66, LAN-134, LAN-179, LAN-226, LAN-273
 MAIN LINE BETWEEN EV/HEV AND DLC CIRCUIT LAN-77, LAN-142, LAN-188, LAN-235, LAN-283
 MAIN LINE BETWEEN EV/HEV AND HVAC CIRCUIT LAN-67, LAN-135, LAN-180, LAN-227, LAN-274
 MAIN LINE BETWEEN HVAC AND 4WD CIRCUIT LAN-68, LAN-228, LAN-275
 MAIN LINE BETWEEN HVAC AND DLC CIRCUIT. LAN-69, LAN-136, LAN-181
 MAIN LINE BETWEEN INV/MC AND EV/HEV CIRCUIT LAN-76, LAN-141, LAN-187, LAN-234, LAN-282
 MAIN LINE BETWEEN IPDM-E AND EPS/DAST 3 CIRCUIT LAN-65, LAN-133, LAN-178, LAN-225, LAN-272
 MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT LAN-75, LAN-186, LAN-281
 MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT LAN-74, LAN-140, LAN-185, LAN-233, LAN-280
 MAIN POWER SUPPLY AND GROUND CIRCUIT . TM-186
 MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH PWC-15, PWC-69
 MAIN SWITCH DOES NOT TURN ON, MAIN SWITCH DOES NOT TURN OFF CCS-130
 MALFUNCTION AREA CHART LAN-63
 MALFUNCTION INDICATOR LAMP EC-573
 METER BUZZER CIRCUIT DLK-211, WCS-30
 METER CONTROL SWITCH MWI-81

METER CONTROL SWITCH SIGNAL CIRCUIT MWI-63
 METER SYSTEM MWI-35
 MICROPHONE AV-135
 MICROPHONE SIGNAL CIRCUIT AV-97
 MIRROR SENSOR ADP-110
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR EC-163
 MOOD LAMP INL-63
 MOONROOF DOES NOT OPERATE PROPERLY . RF-36
 MOONROOF MOTOR ASSEMBLY ... RF-13, RF-51
 MOONROOF SWITCH RF-31, RF-62
 MOONROOF SYSTEM RF-15
 MOONROOF UNIT ASSEMBLY RF-53
 MOTOR SENSOR SE-112
 MULTI AV SYSTEM AV-105

N

NATS ANTENNA AMP. SEC-155
 NAVIGATION WITH BOSE AV-33
 NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SEC-44
 NOISE HA-19
 NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING BR-6, DLN-56, DLN-90, DLN-105, EM-26, FAX-5, FSU-5, RAX-5, RSU-4, ST-28, WT-64
 NORMAL OPERATING CONDITION ADP-132, AV-109, BCS-77, BRC-184, BRC-399, CCS-142, DAS-179, EC-594, EXL-125, EXL-268, VSP-34, WW-53

O

OCCUPANT CLASSIFICATION SYSTEM SR-33
 OIL HA-24
 OIL COOLER LU-12
 OIL FILTER LU-10
 OIL PAN TM-207
 OIL PAN (LOWER) EM-64
 OIL PAN (UPPER) AND OIL STRAINER ... EM-130
 OIL PUMP LU-14
 OIL SEAL EM-67
 ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-61, HBB-24, HBC-38, TM-47, TMS-22
 ON BOARD REFUELING VAPOR RECOVERY (ORVR) EC-584
 OPERATION BRC-234, CCS-21, DAS-98, HAC-19, HBC-37, MWI-18
 OPERATION INSPECTION HAC-42
 OPTICAL SENSOR .. EXL-117, EXL-140, EXL-260, EXL-283
 OUTPUT SPEED SENSOR TM-213
 OUTSIDE KEY ANTENNA DLK-310
 OVER FENDER EXT-39

P

P0011 IVT CONTROL	EC-207
P0014 EVT CONTROL	EC-210
P0030, P0031, P0032 A/F SENSOR 1 HEATER	EC-213
P0037, P0038 HO2S2 HEATER	EC-216
P0039 SC BYPASS VALVE.....	EC-219
P0075 IVT CONTROL SOLENOID VALVE	EC-224
P0078 EVT CONTROL SOLENOID VALVE	EC-228
P007A, P007E CHARGE AIR COOLER TEMPERATURE SENSOR.....	EC-231
P007B CHARGE AIR COOLER TEMPERATURE SENSOR.....	EC-234
P007D CHARGE AIR COOLER TEMPERATURE SENSOR.....	EC-238
P0087 FRP CONTROL SYSTEM	EC-241
P0088 FRP CONTROL SYSTEM	EC-244
P0090 FRP SYSTEM.....	EC-246
P0096 IAT SENSOR 2	EC-249
P0097, P0098 IAT SENSOR 2.....	EC-251
P0101 MAF SENSOR	EC-254
P0102, P0103 MAF SENSOR.....	EC-260
P0111 IAT SENSOR 1.....	EC-266
P0112, P0113 IAT SENSOR 1	EC-268
P0116 ECT SENSOR.....	EC-271
P0117, P0118 ECT SENSOR.....	EC-274
P011C IAT SENSOR	EC-277
P0122, P0123 TP SENSOR.....	EC-279
P0125 ECT SENSOR	EC-283
P0127 IAT SENSOR	EC-286
P0128 THERMOSTAT FUNCTION	EC-288
P0130 A/F SENSOR 1	EC-291
P0131 A/F SENSOR 1	EC-295
P0132 A/F SENSOR 1	EC-298
P0137 HO2S2	EC-301
P0138 HO2S2	EC-307
P0139 HO2S2	EC-314
P014C, P014D, P015A, P015B A/F SENSOR 1.....	EC-319
P0171 FUEL INJECTION SYSTEM FUNCTION	EC-324
P0172 FUEL INJECTION SYSTEM FUNCTION	EC-329
P0181 FTT SENSOR	EC-333
P0182, P0183 FTT SENSOR.....	EC-337
P0190, P0192, P0193 FRP SENSOR.....	EC-340
P0191 FRP SENSOR	EC-344
P0196 EOT SENSOR	EC-348
P0197, P0198 EOT SENSOR.....	EC-352
P0201, P0202, P0203, P0204 FUEL INJECTOR ...	EC-355
P0222, P0223 TP SENSOR.....	EC-358
P0235, P0237, P0238 SC BOOST SENSOREC-361	

P025A FUEL PUMP CONTROL MODULE (FPCM)	
EC-365	
P0300, P0301, P0302, P0303, P0304 MISFIRE.....	
EC-367	
P0327, P0328 KS	EC-374
P0335 CKP SENSOR (POS)	EC-377
P0340 CMP SENSOR (PHASE)	EC-381
P0420 THREE WAY CATALYST FUNCTION	EC-385
P0441 EVAP CONTROL SYSTEM	EC-390
P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-396
P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-401
P0447 EVAP CANISTER VENT CONTROL VALVE	
EC-405	
P0448 EVAP CANISTER VENT CONTROL VALVE	
EC-409	
P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-413
P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-417
P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-421
P0456 EVAP CONTROL SYSTEM	EC-425
P0460 FUEL LEVEL SENSOR	EC-431
P0461 FUEL LEVEL SENSOR	EC-433
P0462, P0463 FUEL LEVEL SENSOR	EC-435
P0500 VSS	EC-437
P0506 ISC SYSTEM	EC-440
P0507 ISC SYSTEM	EC-442
P050A, P050B, P050E COLD START CONTROL ..	
EC-444	
P0510 THROTTLE POSITION SENSOR.	HBC-128
P0520 EOP SENSOR	EC-447
P0524 ENGINE OIL PRESSURE.....	EC-451
P052A, P052B INTAKE VALVE TIMING CONTROL	
EC-455	
P0544, P0545 EXHAUST GAS TEMPERATURE SENSOR	EC-461
P0546, P2081 EXHAUST GAS TEMPERATURE SENSOR	EC-464
P059F ACTIVE GRILLE SHUTTER	EC-468
P0603, P062F ECM	EC-471
P0604 ECM	EC-473
P0605 ECM	EC-475
P0606 ECM	EC-477
P0607 ECM	EC-479
P060A ECM.....	EC-481
P060B ECM.....	EC-483
P0613 TCM	HBC-129
P0615 STARTER RELAY	HBC-131
P0616 STARTER RELAY	HBC-133
P0617 STARTER RELAY	HBC-135
P062F EEPROM	TM-108
P0643 SENSOR POWER SUPPLY	EC-485

P0701 TRANSMISSION CONTROL SYSTEM	HBC-137, TM-109
P0705 TRANSMISSION RANGE SENSOR A	TM-110
P0706 TRANSMISSION RANGE SENSOR A	TM-115
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-118
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-121
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-123
P0715 INPUT SPEED SENSOR A.....	TM-125
P0746 PRESSURE CONTROL SOLENOID A.....	TM-128
P0776 PRESSURE CONTROL SOLENOID B.....	TM-130
P0778 PRESSURE CONTROL SOLENOID B.....	TM-132
P0779 PRESSURE CONTROL SOLENOID B.....	TM-134
P0826 UP AND DOWN SHIFT SW	TM-136
P0841 TRANSMISSION FLUID PRESSURE SEN/ SW A	TM-139
P0847 TRANSMISSION FLUID PRESSURE SEN/ SW B	TM-141
P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B	TM-143
P084C TRANSMISSION FLUID PRESSURE SEN/ SW H	TM-145
P084D TRANSMISSION FLUID PRESSURE SEN/ SW H	TM-147
P0851, P0852 PARK/NEUTRAL SWITCH.....	HBC-138
P0863 TCM COMMUNICATION.....	TM-149
P0890 TCM	TM-150
P0962 PRESSURE CONTROL SOLENOID A.....	TM-152
P0963 PRESSURE CONTROL SOLENOID A.....	TM-154
P0965 PRESSURE CONTROL SOLENOID B.....	TM-156
P0966 PRESSURE CONTROL SOLENOID B.....	TM-158
P0967 PRESSURE CONTROL SOLENOID B.....	TM-160
P0A00 HIGH VOLTAGE COOLANT TEMPERATURE SENSOR	HBC-140
P0A01 MTR ELECTRO COOLANT TEMP SEN	TMS-53
P0A02, P0A03 HIGH VOLTAGE COOLANT TEMPERATURE SENSOR	HBC-143
P0A06, P0A07 ELECTRIC WATER PUMP.....	HBC-146
P0A08 DC/DC CONVERTER	HBC-149
P0A0A, P0A0C HV SYSTEM	HBC-153
P0A1B DRIVE MOTOR A CONTROL MODULE.....	TMS-55
P0A1D HPCM.....	HBC-156
P0A1F BATTERY ENERGY CONTROL MODULE .	HBB-65, HBC-158
P0A3F DRIVE MOTOR A POSITION SENSOR.....	TMS-57
P0A41 DRIVE MOTOR A POSITION SENSOR.....	TMS-60
P0A7E HYBRID BATTERY PACK OVER TEMPERATURE.....	HBB-66
P0A7F CELL CONTROLLER DIAGNOSIS	HBB-68
P0A84 HYBRID BAT PACK COOLING FAN 1.....	HBB-69
P0A85 HYBRID BAT PACK COOLING FAN 1.....	HBB-74
P0A8D 14VOLT POWER VOLTAGE	TMS-63
P0A93 HIGH VOLTAGE COOLANT TEMPERATURE SENSOR.....	HBC-160
P0A95 HIGH VOLTAGE FUSE ..	HBB-75, HBC-163
P0A9D HYBRID BATTERY TEMPERATURE SENSOR A	HBB-77
P0A9E HYBRID BATTERY TEMPERATURE SENSOR A	HBB-78
P0AA0 HYBRID BATTERY POSITIVE CONTACTOR	HBC-170
P0AA1 HYBRID BATTERY POSITIVE CONTACTOR	HBC-174
P0AA4 HYBRID BATTERY NEGATIVE CONTACTOR	HBC-177
P0AA6 HIGH VOLTAGE SYSTEM ISOLATION	HBC-181
P0AA7 HYBRID BATTERY VOLT INSULATION SENSOR	HBC-184
P0AA7 HYBRID BATTERY VOLTAGE ISOLATION SENSOR	HBB-79
P0AA9 HYBRID BATTERY VOLTAGE ISOLATION SENSOR	HBB-80
P0AAA HYBRID BATTERY VOLTAGE ISOLATION SENSOR	HBB-81
P0ABF HYBRID BATTERY PACK CURRENT SENSOR	HBB-82
P0AC0 HYBRID BATTERY PACK CURRENT SENSOR	HBB-84
P0AC1 HYBRID BATTERY PACK CURRENT SENSOR	HBB-85
P0AC2 HYBRID BATTERY PACK CURRENT SENSOR	HBB-86
P0AC7 HYBRID BATTERY TEMPERATURE SENSOR B	HBB-87
P0AC8 HYBRID BATTERY TEMPERATURE SENSOR B	HBB-88
P0ACC HYBRID BATTERY TEMPERATURE SENSOR C	HBB-89
P0ACD HYBRID BATTERY TEMPERATURE SENSOR C	HBB-90
P0ADB, P0ADC HYBRID BATTERY POSITIVE CONTACTOR	HBC-185

P0ADF, P0AE0 HYBRID BATTERY NEGATIVE CONTACTOR.....	HBC-188
P0AE2 HYBRID BATTERY PRE-CHARGE CONTACTOR.....	HBC-191
P0AE6, P0AE7 HYBRID BATTERY PRE-CHARGE CONTACTOR.....	HBC-195
P0AEA HYBRID BATTERY TEMPERATURE SENSOR D	HBB-91
P0AEB HYBRID BATTERY TEMPERATURE SENSOR D	HBB-92
P0AED DRIVE MOTOR INV TEMP SENSOR A	TMS-65
P0B35, P0B37 SDSW	HBC-198
P0BE9 D-MOTOR A PHASE V CURRENT SEN....	TMS-66
P0BEA D-MOTOR A PHASE V CURRENT SEN....	TMS-67
P0BED D-MOTOR A PHASE W CURRENT SEN ..	TMS-68
P0BEE D-MOTOR A PHASE W CURRENT SEN...	TMS-69
P0C05 DRIVE MOTOR A PHASE U-V-W..	TMS-70
P0C19 D-MOTOR A TORQUE DELIVERED	TMS-72
P0C6E HYBRID BATTERY TEMPERATURE SENSOR A/B	HBB-93
P0C70 HYBRID BATTERY TEMPERATURE SENSOR C/D	HBB-94
P0C79 DRIVE MOTOR A INVERTER VOLTAGE...	TMS-74
P1033, P1034, P1035, P1044, P1045 SC BYPASS VALVE POSITION SENSOR.....	EC-488
P1078 EVT CONTROL POSITION SENSOREC	EC-492
P1148 CLOSED LOOP CONTROL.....	EC-496
P1212 TCS COMMUNICATION LINE.....	HBC-202
P1217 ENGINE OVER TEMPERATURE....	EC-497
P1225 TP SENSOR	EC-501
P1226 TP SENSOR	EC-503
P1425 COLD START CONTROL.....	EC-505
P1451 PRESSURE SENSOR.....	EC-508
P1551, P1552 BATTERY CURRENT SENSOR	HBC-204
P1556, P1557 BATTERY TEMPERATURE SENSOR.....	HBC-207
P1564 ASCD STEERING SWITCH	HBC-210
P1572 BRAKE PEDAL POSITION SWITCH	HBC-216
P159F ACTIVE GRILLE SHUTTER.....	EC-511
P1610 LOCK MODE	SEC-75
P1611 ID DISCORD, IMMU-ECM	SEC-76
P1612 CHAIN OF ECM-IMMU.....	SEC-78
P1614 CHAIN OF IMMU-KEY.....	SEC-80
P1804 AWD CONTROL UNIT.....	DLN-45
P1805 BRAKE SWITCH	EC-513
P1805 STOP LAMP SWITCH.....	HBC-220
P181F INCOMPLETE CALIBRATION	DLN-46
P188E ELECTRIC OIL PUMP	TM-162
P1890 ELECTRIC OIL PUMP RELAY	TM-163
P1891 ELECTRIC OIL PUMP	TM-165
P1892 ELECTRIC OIL PUMP	TM-168
P2004 INTAKE MANIFOLD RUNNER CONTROL VALVE	EC-517
P2014, P2016, P2017, P2018 INTAKE MANIFOLD RUNNER CONTROL VALVE POSITION SENSOR	EC-520
P2080 EXHAUST GAS TEMPERATURE SENSOR	EC-524
P2096, P2097 A/F SENSOR 1.....	EC-527
P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-531
P2101 ELECTRIC THROTTLE CONTROL FUNCTION.....	EC-534
P2118 THROTTLE CONTROL MOTOR	EC-538
P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-540
P2122, P2123 APP SENSOR	HBC-223
P2127, P2128 APP SENSOR	HBC-227
P2135 TP SENSOR	EC-542
P2138 APP SENSOR.....	HBC-231
P219A AIR FUEL RATIO.....	EC-546
P2261 SC BYPASS VALVE CONTROL ACTUATOR	EC-552
P2610 ECM INTERNAL TIMER	EC-554
P2765 INPUT SPEED SENSOR B	TM-171
P2813 SELECT SOLENOID	TM-174
P2814 SELECT SOLENOID	TM-176
P2815 SELECT SOLENOID	TM-178
P281D PRESSURE CONTROL SOLENOID H.....	TM-180
P281E PRESSURE CONTROL SOLENOID H.....	TM-182
P2857, P2859 CLUTCH 1	HBC-235
P3030 CELL CONTROLLER LIN	HBB-95
P30D0 SOC RATIONALITY	HBB-97
P30EE CELL PROTECTION ON	HBB-98
P30EF INTERNAL RESISTANCE	HBB-99
P30F1 REGENERATION CONTROL.....	HBB-101
P30F2 DISCHARGE CONTROL.....	HBB-103
P30F4 TOTAL VOLTAGE SENSOR.....	HBB-105
P30F5 TOTAL VOLTAGE SENSOR.....	HBB-106
P30F6 TOTAL VOLTAGE SENSOR.....	HBB-108
P30F7 CELL CONT IC SLEEP DIAG.....	HBB-110
P30F8 SELF SHUT OFF POWER SUPPLY	HBB-111
P30F9 CONTROL MODULE	HBB-112
P30FA SENSOR POWER SUPPLY	HBB-113
P30FB SENSOR POWER SUPPLY	HBB-114
P30FC OVER CURRENT	HBB-115
P30FE 12V BATTERY VOLTAGE	HBB-117
P3109 12V POWER SUPPLY	HBC-237
P310A HPCM.....	HBC-238
P310F HYBRID SYS ACTIVATION ERROR.....	HBC-239
P3110 IGNITION RELAY	HBC-241

P3112 STOP LAMP SWITCH.....	HBC-243	P3245 DRIVE MOTOR A INVERTER.....	TMS-88
P3114 BRAKE PEDAL POSITION SWITCH	HBC-248	P3246 DRIVE MOTOR A INVERTER VOLTAGE	TMS-89
P3118 HYBRID BATTERY	HBC-252	P324A DRIVE MOTOR A INVERTER VOLTAGE....	TMS-91
P311D, P311E HIGH VOLTAGE SYSTEM	HBC-253	P324D DRIVE MOTOR A INVERTER IGBT	TMS-93
P3120 HIGH VOLTAGE SYSTEM	HBC-260	P3266 RESOLVER OFFSET	TMS-95
P3123, P3124 HV SYSTEM COOLING PUMP	HBC-262	P3267 RESOLVER OFFSET	TMS-96
P3125, P3126, P3127 ELECTRIC WATER PUMP..	HBC-265	P3268 RESOLVER SIGNAL	TMS-97
P3128 ELECTRIC WATER PUMP	HBC-268	P3269 DRIVE MOTOR A POSITION SENSOR	TMS-100
P3135 SLIGHT COLLISION DETECTION	HBC-270	P326C EEPROM	TMS-101
P3137, P3138 CAR CLASH	HBC-271	P326D RESOLVER OFFSET	TMS-102
P3139 AIR BAG SYSTEM	HBC-272	P326E - P3271 CELL CONTROLLER IC .	HBB-122
P314D, P314E, P314F, P3151 ENGINE SYSTEM..	HBC-273	P327A - P327D CELL CONT IC VOLTAGE2.....	HBB-124
P3157 SENSOR POWER SUPPLY	HBC-274	P3286 - P3289 CELL CONT IC VOLTAGE1.....	HBB-126
P3161, P3162 BRAKE VACUUM SENSOR	HBC-277	P3292 - P3295 CELL CONT IC COMM ERROR.....	HBB-128
P3167 BRAKE VACUUM SENSOR.....	HBC-280	P329E - P32A9 CELL CONT IC OPEN	HBB-130
P3176 MOTOR SYSTEM	HBC-283	P3300 TOTAL VOLTAGE OVER	HBB-132
P3177 MOTOR SYSTEM	HBC-284	P3301 CELL VOLTAGE OVER.....	HBB-134
P3178 MOTOR SYSTEM	HBC-285	P3373 TOTAL VOLTAGE OVER DISCHARGE	HBB-136
P3179 MOTOR SYSTEM	HBC-286	P3374 CELL VOLTAGE OVER DISCHARGE	HBB-138
P317A MOTOR SYSTEM.....	HBC-287	PANORAMIC ROOF GLASS.....	RF-49
P317B MOTOR SYSTEM.....	HBC-288	PARKING BRAKE CONTROL	PB-7
P317F HV BATTERY SYSTEM	HBC-289	PARKING BRAKE FRONT CABLE	PB-9
P3180 HV BATTERY SYSTEM	HBC-290	PARKING BRAKE REAR CABLE	PB-10
P3181 HV BATTERY SYSTEM	HBC-291	PARKING BRAKE SHOE	PB-6, PB-12
P3182 HV BATTERY SYSTEM	HBC-292	PARKING BRAKE SWITCH ...	BRC-168, BRC-378, PB-11
P3184 HV BATTERY SYSTEM	HBC-293	PARKING BRAKE SWITCH SIGNAL CIRCUIT	WCS-33
P3185 TRANSMISSION SYSTEM	HBC-294, TM-184	PARKING BRAKE SYSTEM	PB-4
P3186 TRANSMISSION SYSTEM	HBC-295	PARKING LAMP CIRCUIT	EXL-104, EXL-247
P3194 CAN ERROR.....	HBC-296	PARKING, LICENSE PLATE AND TAIL LAMPS	SYSTEM.....EXL-68, EXL-213
P31A5 CAN ERROR	EC-557, TMS-76	PARKING, LICENSE PLATE, SIDE MARKER AND	TAIL LAMPS ARE NOT TURNED ONEXL-128, EXL-271
P31A5 CAN ERROR HPCM.....	HBB-118	PASSENGER SIDE DOOR MIRROR DEFOGGER	DOES NOT OPERATE.DEF-41
P31A6 CAN ERROR	HBC-297, TMS-78	PERFORMANCE TEST.....	HA-27
P31A7 CAN ERROR	HBC-299	PERIODIC MAINTENANCE	MA-8
P31A7 CAN ERROR INV/MC.....	HBB-120	PERSONAL LAMP	INL-61
P31A8 CAN ERROR	HBC-301, TMS-80	PLUG	TM-223
P31A9 CAN ERROR	HBC-303, TMS-82	POSITIVE CRANKCASE VENTILATION ...	EC-599
P31AC CAN ERROR.....	HBC-305	POWER DISTRIBUTION SYSTEM	PCS-50
P31B1 CAN ERROR	HBC-306	POWER DOOR LOCK SYSTEM.....	DLK-62
P31EF DC/DC CONVERTER COMMUNICATION	LINE	POWER GENERATION VOLTAGE VARIABLE	CONTROL SYSTEM OPERATION
P31F0 DC/DC CONVERTER COMMUNICATION	LINE	INSPECTION.....	CHG-21
P31F1 DC/DC CONVERTER COMMUNICATION	LINE	POWER RETURN MOTOR	SE-110
P31FB, P31FD ASCD SYSTEM.....	HBC-314		
P31FE ADAS CONTROL UNIT	HBC-316		
P31FF ASCD VEHICLE SPEED SENSOR	HBC-318		
P323F D-MOTOR A PHASE W CURRENT SEN....	TMS-84		
P3243 D-MOTOR A PHASE V CURRENT SEN	TMS-85		
P3244 DRIVE MOTOR A INVERTER	TMS-86		

POWER RETURN SWITCH [SE-99](#), [SE-148](#)
POWER SEAT FOR PASSENGER SIDE [SE-33](#)
POWER SEAT SWITCH [ADP-136](#)
POWER SEAT SWITCH GROUND CIRCUIT
[ADP-95](#)
POWER SOCKET [PWO-5](#), [PWO-8](#)
POWER STEERING CONTROL MODULE [STC-11](#),
[STC-37](#)
POWER STEERING FLUID [ST-14](#), [ST-29](#)
POWER STEERING OIL PUMP [ST-18](#), [ST-39](#),
[ST-50](#)
POWER SUPPLY ROUTING CIRCUIT [PG-17](#)
POWER WINDOW AND DOOR LOCK/UNLOCK
SWITCH RH [PWC-17](#), [PWC-70](#)
POWER WINDOW LOCK SWITCH DOES NOT
FUNCTION [PWC-67](#)
POWER WINDOW MOTOR [PWC-40](#)
POWER WINDOW RETAINED POWER FUNCTION
DOES NOT OPERATE NORMALLY [PWC-64](#)
POWER WINDOW SERIAL LINK [PWC-52](#)
POWER WINDOW SWITCH DOES NOT
ILLUMINATE [PWC-68](#)
POWER WINDOW SYSTEM [PWC-19](#)
POWER WINDOWS DO NOT OPERATE WITH
POWER WINDOW MAIN SWITCH [PWC-56](#)
PRECAUTIONS [ACC-2](#), [ADP-4](#), [AV-5](#), [AV-137](#),
[BCS-3](#), [BR-3](#), [BRC-8](#), [BRC-195](#), [BRM-3](#), [CCS-5](#),
[CCS-149](#), [CHG-3](#), [CO-2](#), [DAS-5](#), [DAS-85](#),
[DEF-3](#), [DLK-8](#), [DLN-5](#), [DLN-85](#), [DLN-98](#), [DMS-2](#),
[EC-9](#), [EM-3](#), [EX-2](#), [EXL-6](#), [EXL-154](#), [EXT-3](#),
[FAX-2](#), [FL-2](#), [FSU-2](#), [GI-23](#), [GW-2](#), [HA-3](#),
[HAC-4](#), [HBB-5](#), [HBC-6](#), [HCO-2](#), [HRN-2](#), [INL-3](#),
[INT-3](#), [IP-2](#), [LAN-10](#), [LAN-26](#), [LAN-115](#), [LU-2](#),
[MA-3](#), [MIR-2](#), [MWI-3](#), [PB-2](#), [PCS-4](#), [PCS-38](#),
[PG-3](#), [PWC-4](#), [PWO-2](#), [RAX-2](#), [RF-3](#), [RSU-2](#),
[SB-2](#), [SE-4](#), [SEC-4](#), [SR-2](#), [SRC-4](#), [ST-3](#), [STC-3](#),
[STR-2](#), [TM-7](#), [TMS-4](#), [VSP-3](#), [VTL-3](#), [WCS-3](#),
[WT-3](#), [WW-3](#)
PRIMARY POSITION LIMIT SWITCH [SE-107](#)
PRIMARY SPEED SENSOR [TM-212](#)
PROCEDURE FOR TEMPORARILY DISABLING
THE IGNITION BATTERY SAVER SYSTEM
[PCS-63](#)
PUSH-BUTTON IGNITION SWITCH [PCS-85](#),
[PCS-93](#), [SEC-156](#)
PUSH-BUTTON IGNITION SWITCH DOES NOT
OPERATE [PCS-90](#)
PUSH-BUTTON IGNITION SWITCH
ILLUMINATION CIRCUIT [INL-54](#)
PUSH-BUTTON IGNITION SWITCH POSITION
INDICATOR DOES NOT ILLUMINATE. [PCS-91](#)
PWBD BRANCH LINE CIRCUIT [LAN-98](#), [LAN-162](#),
[LAN-208](#), [LAN-256](#), [LAN-304](#)

Q

QUARTER GLASS MOLDING [EXT-51](#)

QUARTER WINDOW GLASS [GW-25](#)

R

RADIATOR [CO-11](#), [CO-13](#)
RADIATOR CORE SUPPORT [DLK-276](#)
RADIUS ROD [RSU-13](#)
RDR-L BRANCH LINE CIRCUIT [LAN-101](#), [LAN-165](#),
[LAN-211](#), [LAN-259](#), [LAN-307](#)
RDR-R BRANCH LINE CIRCUIT [LAN-100](#), [LAN-164](#),
[LAN-210](#), [LAN-258](#), [LAN-306](#)
REAR BUMPER [EXT-28](#)
REAR CAMERA [AV-206](#)
REAR COMBINATION LAMP .. [EXL-143](#), [EXL-152](#),
[EXL-286](#), [EXL-295](#)
REAR DIFFERENTIAL GEAR OIL [DLN-106](#)
REAR DISC BRAKE... [BR-8](#), [BR-17](#), [BR-40](#), [BR-48](#)
REAR DOOR [DLK-284](#)
REAR DOOR FINISHER [INT-17](#)
REAR DOOR GLASS [GW-20](#)
REAR DOOR LOCK [DLK-299](#)
REAR DOOR REGULATOR [GW-22](#)
REAR DOOR SPEAKER [AV-90](#), [AV-129](#)
REAR DRIVE SHAFT [RAX-7](#), [RAX-11](#), [RAX-13](#)
REAR FINAL DRIVE ASSEMBLY [DLN-118](#)
REAR LH SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-59](#)
REAR LOWER LINK & COIL SPRING [RSU-9](#)
REAR POWER WINDOW MOTOR [GW-24](#)
REAR POWER WINDOW SWITCH [PWC-71](#)
REAR PROPELLER SHAFT [DLN-91](#), [DLN-92](#)
REAR REFLEX REFLECTOR... [EXL-150](#), [EXL-293](#)
REAR RH SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-60](#)
REAR SEATBACK POWER RETURN CONTROL
UNIT [SE-30](#)
REAR SHOCK ABSORBER [RSU-11](#), [RSU-24](#)
REAR SPOILER [EXT-52](#)
REAR STABILIZER [RSU-16](#)
REAR SUSPENSION ARM [RSU-18](#)
REAR SUSPENSION ASSEMBLY [RSU-5](#)
REAR SUSPENSION MEMBER [RSU-21](#)
REAR USB INTERFACE [AV-103](#), [AV-123](#)
REAR WASHER NOZZLE AND TUBE [WW-74](#)
REAR WHEEL ALIGNMENT INSPECTION. [RSU-6](#)
REAR WHEEL HUB [RAX-8](#)
REAR WINDOW DEFOGGER AND DOOR
MIRROR DEFOGGERS DO NOT OPERATE...
[DEF-37](#)
REAR WINDOW DEFOGGER DOES NOT
OPERATE BUT BOTH DOOR MIRROR
DEFOGGERS OPERATE [DEF-38](#)
REAR WINDOW DEFOGGER POWER SUPPLY
AND GROUND CIRCUIT [DEF-30](#)
REAR WINDOW DEFOGGER RELAY [DEF-28](#)
REAR WINDOW DEFOGGER SWITCH [DEF-24](#)

REAR WINDOW DEFOGGER SWITCH DOES NOT
 LIGHT, BUT REAR WINDOW DEFOGGER
 OPERATES DEF-42
 REAR WINDOW DEFOGGER SYSTEM ... DEF-12
 REAR WIPER AND WASHER SYSTEM.....WW-27
 REAR WIPER ARMWW-71
 REAR WIPER MOTOR.....WW-73
 REAR WIPER MOTOR CIRCUITWW-47
 REAR WIPER STOP POSITION SIGNAL CIRCUIT
 WW-49
 RECLINING MOTOR.....ADP-116
 RECLINING SENSOR.....ADP-99
 RECLINING SWITCHADP-77
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS.....GI-22
 RECOMMENDED FLUIDS AND LUBRICANTS
 MA-12
 REFRIGERANTHA-20
 REFRIGERANT PRESSURE SENSOR.....EC-574,
 HA-37, HAC-101
 REFRIGERATION SYSTEM SYMPTOMS ...HA-17
 REMOTE KEYLESS ENTRY RECEIVER DLK-200,
 DLK-313, SEC-158, WT-74
 REPAIRING HIGH STRENGTH STEELBRM-9
 REPAIRING MATERIALBRM-13
 REPLACEMENT OPERATIONSBRM-26
 RESERVOIR TANK CAPHCO-11
 RESOLVER OFFSETTMS-51
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLYRF-40
 RIGHT/LEFT SWITCHING SIGNAL CIRCUIT
 DAS-170
 RING GEAR SHAFTDLN-67
 ROOF RACKEXT-44
 ROOF SIDE MOLDINGEXT-43

S

S CONNECTOR CIRCUIT.....STR-20
 S TERMINAL CIRCUITCHG-27
 SATELLITE RADIO ANTENNAAV-132
 SATELLITE SENSOR.....SR-26
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
 WCS-31
 SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG
 INDCTR IS ON OR OFFSRC-144
 SEAT BELT PRE-TENSIONERSR-31
 SEAT BELT WARNING SYSTEM.....SRC-142
 SEAT CUSHION THERMAL ELECTRIC DEVICE...
 SE-89
 SEAT CUSHION THERMAL ELECTRIC DEVICE
 SENSORSE-91
 SEAT MEMORY INDICATOR.....ADP-129
 SEAT MEMORY SWITCHADP-87, ADP-135
 SEATBACK ANGLE LIMIT SWITCHSE-104
 SEATBACK POWER RETURN CONTROL UNIT ...
 SE-149

SEATBACK THERMAL ELECTRIC DEVICE SE-85
 SEATBACK THERMAL ELECTRIC DEVICE
 SENSORSE-87
 SECOND ROW HEATED SEAT SYSTEMSE-50
 SECOND ROW SEATSE-161
 SECOND ROW SEAT BELTSB-13
 SECOND ROW SEATBACK POWER RETURN
 SYSTEM.....SE-68
 SECOND ROW SEATSSE-139
 SECURITY INDICATOR LAMPSEC-146
 SENSOR POWER SUPPLY 2 CIRCUITEC-576
 SENSOR ROTOR.....BRC-189, BRC-404
 SERVICE DATA AND SPECIFICATIONS (SDS).....
 ACC-5, BR-51, CHG-31, CO-23, DLN-84,
 DLN-97, DLN-142, EC-603, EM-161, EXL-153,
 EXL-296, FAX-40, FL-26, FSU-23, HA-43,
 HBB-167, HCO-16, INL-65, LU-15, PB-15,
 PG-142, PWO-10, RAX-19, RSU-25, ST-51,
 TM-230, VTL-14, WT-75, WW-77
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT.....GI-48
 SHIFT LOCK SYSTEM.....TM-189
 SHIFT POSITION INDICATOR CIRCUIT ...TM-188
 SHIPPING MODE CANCEL OPERATION .BCS-64
 SIDE AIR SPOILER.....EXT-53
 SIDE CAMERAAV-205
 SIDE CAMERA FINISHERMIR-22
 SIDE CURTAIN AIR BAG MODULE.....SR-22
 SIDE OIL SEALDLN-108
 SIDE RADAR.....DAS-186
 SIDE RADAR LHDAS-127
 SIDE RADAR RH.....DAS-129
 SLIDING MOTORADP-114
 SLIDING SENSORADP-97
 SLIDING SWITCHADP-75
 SPARK PLUGEM-33
 SPINDLE MOTORDLK-227
 SPIRAL CABLESR-15
 SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
 DLK-265, EXT-19, GW-5, INT-9, IP-9, MIR-10,
 RF-41, SE-118
 SRS AIR BAG SYSTEMSRC-24
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFFSRC-141
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ONSRC-140
 STARTER MOTORSTR-22, STR-23
 STARTER MOTOR NOT ACTIVATED.....HBC-326
 STARTING SYSTEMSTR-5, STR-6, STR-21
 STEERING ANGLE SENSOR .BRC-193, BRC-408
 STEERING COLUMN.....ST-17, ST-27, ST-31
 STEERING COLUMN COVERS.....IP-18
 STEERING GEAR AND LINKAGE ...ST-19, ST-35,
 ST-42, ST-47
 STEERING KNUCKLEFSU-17
 STEERING SWITCHAV-100, MWI-69

STEERING SWITCHES..... AV-120
 STEERING WHEELST-15, ST-30
 STEERING WHEEL TURNING FORCE IS HEAVY
 OR LIGHTSTC-32
 STOP LAMP..... EXL-78, EXL-223
 STRG BRANCH LINE CIRCUIT LAN-96, LAN-160,
 LAN-206, LAN-254, LAN-302
 STROKE SENSOR CALIBRATION BRC-79,
 BRC-279
 STRUCTURE AND OPERATION DLN-15, DLN-89,
 DLN-104, EC-38, EM-13, TM-25, TMS-14
 SUB RADIATOR.....HCO-7, HCO-12
 SUBWOOFER.....AV-93, AV-130
 SUNLOAD SENSOR..... HAC-99
 SUNSHADE RF-59, RF-63
 SUNSHADE MOTOR ASSEMBLY RF-14, RF-60
 SUNSHADE SYSTEM DOES NOT OPERATE
 PROPERLY RF-37
 SUPERCHARGER..... EM-25, EM-54
 SUPERCHARGER BYPASS VALVE CLOSED
 POSITION LEARNING EC-157
 SYSTEM (AUTOMATIC BACK DOOR SYSTEM)...
 DLK-38
 SYSTEM (INTEGRATED HOMELINK
 TRANSMITTER) DLK-45
 SYSTEM (INTELLIGENT KEY SYSTEM)... DLK-24
 SYSTEM INITIALIZATIONPWC-34
 SYSTEM SETTING HAC-46
 SYSTEM SETTINGS CANNOT BE TURNED ON/
 OFF ON THE INTEGRAL SWITCH .. BRC-389,
 DAS-174

T

TAIL LAMP CIRCUIT EXL-108, EXL-251
 TCM TM-55, TM-204
 TCM BRANCH LINE CIRCUIT LAN-104, LAN-167,
 LAN-214, LAN-261, LAN-310
 TELESCOPIC MOTORADP-124
 TELESCOPIC SENSORADP-108
 TELESCOPIC SWITCHADP-85
 THE AMBIENT TEMPERATURE DISPLAY IS
 INCORRECT.....MWI-79
 THE BRAKING DISTANCE IS LONG BRC-180,
 BRC-395
 THE DOOR OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAYMWI-76
 THE ECO MODE INDICATOR DOES NOT TURN
 ON..... DMS-19
 THE FUEL GAUGE INDICATOR DOES NOT
 OPERATEMWI-71
 THE LIFTGATE OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAYMWI-77
 THE LIGHT REMINDER WARNING DOES NOT
 SOUNDWCS-35

THE LOW WASHER FLUID WARNING
 CONTINUES DISPLAYING, or DOES NOT
 DISPLAY MWI-75
 THE METER CONTROL SWITCH IS INOPERATIVE
 MWI-72
 THE OIL PRESSURE WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAYMWI-73
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES DISPLAYING, OR DOES NOT
 DISPLAY MWI-74
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES SOUNDING, OR DOES NOT
 SOUND WCS-37
 THE SEAT BELT WARNING CONTINUES
 SOUNDING, OR DOES NOT SOUND WCS-36
 THE STEERING SWITCHES ARE INOPERATIVE
 MWI-78
 THE SYSTEM DOES NOT DETECT THE VEHICLE
 AHEAD AT ALL CCS-140, DAS-178
 THERMOSTAT AND WATER OUTLET CO-21
 THIRD ROW SEATBACK POWER RETURN
 SYSTEM SE-117
 THROTTLE VALVE CLOSED POSITION
 LEARNING.....EC-156
 TIGHTENING TORQUE OF STANDARD BOLTS...
 GI-19
 TILT & TELESCOPIC SWITCH GROUND CIRCUIT
 ADP-96
 TILT MOTOR..... ADP-122
 TILT SENSOR ADP-106
 TILT SWITCH ADP-83
 TIMING CHAIN..... EM-97
 TIRE PRESSURE MONITORING SYSTEM WT-18
 TIRE PRESSURE SENSOR WT-70
 TIRE SIZE INCORRECT IS DISPLAYED ON
 INFORMATION DISPLAYDLN-55
 TOP TETHER STRAP CHILD RESTRAINT .SB-17
 TORSION DAMPER..... EM-95
 TOUCH SENSORDLK-222
 TOW TRUCK TOWING GI-41
 TPMS WT-56
 TRACTION MOTOR INSULATION RESISTANCE
 CHECK.....TMS-115
 TRACTION MOTOR INVERTER TMS-32, TMS-39,
 TMS-120
 TRACTION MOTOR INVERTER INSULATION
 RESISTANCE CHECK.....TMS-116
 TRANSAXLE ASSEMBLY TM-226
 TRANSFER ASSEMBLYDLN-61
 TRANSFER CASEDLN-80
 TRANSFER COVERDLN-63
 TRANSFER COVER OIL SEALDLN-60
 TRANSFER OILDLN-57
 TRANSVERSE LINK.....FSU-13
 TRIP RESET SWITCH..... MWI-82
 TROUBLE DIAGNOSISLAN-13

TROUBLE DIAGNOSIS - SPECIFICATION VALUE
[EC-181](#)
 TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM.....[EXL-58](#), [EXL-203](#)
 TURN SIGNAL LAMP CIRCUIT [EXL-114](#), [EXL-257](#)

U

U0073 COMMUNICATION BUS A OFF [TM-98](#)
 U0100 ECM [HBC-117](#)
 U0100 LOST COMMUNICATION (ECM A).. [TM-99](#)
 U0100 LOST COMMUNICATION ECM... [HBB-140](#),
[TMS-103](#)
 U0101 CAN COMM CIRCUIT[EC-194](#)
 U0101 LOST COMMUNICATION TCM... [HBB-142](#),
[TMS-105](#)
 U0101 TCM [HBC-120](#)
 U0104 ADAS CAN 1..... [DAS-159](#)
 U0107 ADAS [HBC-122](#)
 U0110 DRIVE MOTOR CONTROL MODULE
[HBC-123](#)
 U0110 LOST COMMUNICATION (DRIVE MOTOR
 A)..... [TM-100](#)
 U0110 LOST COMMUNICATION INV/MC [HBB-144](#)
 U0111 BATTERY ENERGY CONTROL MODULE ..
[HBC-125](#)
 U0111 LOST COMMUNICATION LBC [TMS-107](#)
 U0121 VDC CAN 2.....[CCS-116](#), [DAS-59](#)
 U0126 STRG SEN CAN 1 [CCS-117](#)
 U0155 LOST COMMUNICATION (IPC) [TM-101](#)
 U0164 LOST COMMUNICATION (HVAC).. [TM-102](#)
 U0235 ICC SENSOR CAN 1 [DAS-61](#)
 U0284 ACTIVE GRILLE SHUTTER[EC-196](#)
 U0293 HYBRID POWERTRAIN CONTROL
 MODULE[EC-199](#)
 U0293 LOST COMMUNICATION (HPCM). [TM-103](#)
 U0293 LOST COMMUNICATION HCM... [TMS-109](#)
 U0293 LOST COMMUNICATION HPCM . [HBB-146](#)
 U0300 CAN COMMUNICATION DATA [TM-104](#)
 U0401 ECM CAN 1 [CCS-118](#)
 U0402 TCM CAN 1..... [DAS-62](#)
 U0405 ADAS CAN 2..... [DAS-161](#)
 U0415 VDC CAN 1[CCS-119](#), [DAS-64](#)
 U0415 VEHICLE SPEED SIG [BCS-67](#)
 U0428 STEERING ANGLE SENSOR [AV-182](#)
 U0428 STRG SEN CAN 2 [CCS-120](#)
 U0433 DIST SEN CAN CIRC 2 [DAS-66](#)
 U1000 CAN COMM CIRCUIT [ADP-61](#), [AV-57](#),
[AV-184](#), [BCS-65](#), [BRC-165](#), [BRC-375](#), [CCS-121](#),
[DAS-67](#), [DAS-163](#), [DLK-120](#), [DLN-47](#), [HAC-49](#),
[HBB-148](#), [HBC-127](#), [LAN-127](#), [MWI-56](#), [PCS-28](#),
[PCS-64](#), [SRC-46](#), [STC-28](#), [TM-106](#), [TMS-111](#),
[VSP-29](#), [WT-53](#)
 U1001 CAN COMM CIRCUIT[EC-201](#)
 U1002 SYSTEM COMM (CAN)[BRC-166](#), [BRC-376](#)
 U1003 CAN COMM CIRCUIT[EC-202](#)

U1010 CONTROL UNIT (CAN) [ADP-62](#), [AV-59](#),
[AV-185](#), [BCS-66](#), [CCS-122](#), [DAS-166](#), [DLK-121](#),
[DLN-48](#), [HAC-50](#), [LAN-128](#), [MWI-57](#), [PCS-30](#),
[PCS-65](#), [SRC-47](#), [VSP-30](#), [WT-54](#)
 U1040 ENG COMM CIRCUIT [EC-203](#)
 U1044 ENG COMM CIRCUIT [EC-205](#)
 U1117 LOST COMMUNICATION (ABS)..... [TM-107](#)
 U111A REAR CAMERA IMAGE SIGNAL CIRCUIT.
[AV-186](#)
 U111B SIDE CAMERA RH IMAGE SIGNAL
 CIRCUIT[AV-188](#)
 U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT
[AV-190](#)
 U111D SIDE CAMERA LH IMAGE SIGNAL
 CIRCUIT[AV-192](#)
 U121F AV CONTROL UNIT [AV-60](#)
 U1231 BOSE AMP.....[AV-61](#)
 U1232 STEERING ANGLE SENSOR [AV-62](#), [AV-194](#)
 U1244 GPS ANTENNA CONN.....[AV-63](#)
 U1258 SATELLITE RADIO ANTENNA[AV-64](#)
 U1263 USB.....[AV-66](#)
 U1267 METER CONN[AV-67](#)
 U12AA CONFIGURATION ERROR[AV-69](#)
 U12B7 USB CONN.....[AV-70](#)
 U12BE RADIO ANTENNA CONN[AV-71](#)
 U1300 AV COMM CIRCUIT[AV-73](#)
 U1302 CAMERA POWER VOLT [AV-195](#)
 U1304 CAMERA IMAGE CALIBRATION[AV-199](#)
 U1305 CONFIG UNFINISH[AV-200](#)
 U1310 CONTROL UNIT (AV) [AV-75](#)
 U1321 CONFIG UNFINISH [HBB-149](#), [TMS-112](#)
 U1321 CONFIGURATION [DAS-69](#)
 U1503 SIDE RDR L CAN 2 [DAS-70](#)
 U1504 SIDE RDR L CAN 1 [DAS-72](#)
 U1505 SIDE RDR R CAN 2 [DAS-74](#)
 U1506 SIDE RDR R CAN 1 [DAS-76](#)
 U1507 LOST COMM(SIDE RDR R) [DAS-78](#)
 U1508 LOST COMM(SIDE RDR L)..... [DAS-79](#)
 U151E HPCM CAN CIRCUIT 1 [DAS-81](#)
 U153A CVT MESSAGE COUNTER FAILURE
[CCS-125](#)
 U153B CVT CHECK SUM FAILURE[CCS-126](#)
 U300A IGNITION SWITCH..... [TMS-113](#)
 UNBALANCE STEERING WHEEL TURNING
 FORCE (TORQUE VARIATION) [STC-35](#)
 UNBALANCE STEERING WHEEL TURNING
 FORCE AND RETURN BETWEEN RIGHT AND
 LEFT [STC-34](#)
 UNDER COVER [EXT-41](#)
 UNEXPECTED BRAKE PEDAL REACTION.....
[BRC-179](#), [BRC-394](#)
 UNIT CHARACTERISTICS WRITING [DLN-36](#)
 UNLOCK SENSOR..... [DLK-196](#)

V

VACUUM LINES [BR-32](#)

VACUUM TANK.....	BR-34
VALVE TIMING ADJUSTMENT	EC-158
VANITY LAMP	INL-59
VDC OFF INDICATOR LAMP ..	BRC-176, BRC-386
VDC OFF SWITCH	BRC-170, BRC-192, BRC-380, BRC-407
VDC WARNING LAMP.....	BRC-175, BRC-385
VEHICLE DOES NOT ENTER AWD MODE	DLN-53
VEHICLE JERKS DURING	BRC-183, BRC-398
VEHICLE SECURITY SYSTEM.....	SEC-55
VENTILATION SYSTEM	VTL-6
VIN REGISTRATION	EC-155
VSP BRANCH LINE CIRCUIT ...	LAN-81, LAN-146, LAN-192, LAN-239, LAN-287

W

WARNING BUZZER.....	DAS-185
WARNING BUZZER CIRCUIT	DAS-171
WARNING CHIME SYSTEM.....	WCS-19
WARNING CHIME SYSTEM SYMPTOMS	WCS-34
WASHER FLUID LEVEL SWITCH.....	WW-59
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-68
WASHER MOTOR CIRCUIT.....	WW-44
WASHER SWITCH	WW-45
WASHER TANK	WW-56
WATER HOSE	TM-216, TMS-129
WATER PUMP	CO-18
WHEEL	WT-65
WHEEL ALIGNMENT	FSU-7
WHEEL AND TIRE.....	WT-66, WT-69
WHEEL HUB.....	RAX-6
WHEEL SENSOR	BRC-185, BRC-400
WIND DEFLECTOR.....	RF-61
WINDSHIELD GLASS.....	GW-11
WIPER AND WASHER FUSE.....	WW-37
WIPER AND WASHER SWITCH	WW-70
WIPER AND WASHER SYSTEM SYMPTOMS	WW-50