

ELECTRIC COMPONENT LOCATION QUICK REFERENCE LIST

1998-99 FORESTER

RELAYS

- A/C RELAY - Engine compartment in main fuse box.
- BLOWER MOTOR RELAY - Under dash above left kick panel.
- FOG LIGHT RELAY - Engine compartment in main fuse box.
- FUEL PUMP RELAY - Under dash above left kick panel.
- HEADLIGHT RELAY - Under hood in main fuse box.
- HORN RELAY - Under hood in main fuse box.
- IGNITION RELAY - Under dash above left kick panel, left of fuse box.
- MAIN COOLANT FAN RELAY - Engine compartment in main fuse box.
- MAIN RELAY - Under dash above left kick panel.
- MULTIPLE (ACCESSORY) POWER SOCKET RELAY - Under center console.
- POWER MIRROR HEATER RELAY - Under dash above right kick panel.
- POWER WINDOW RELAY - Under dash above left kick panel, left of fuse box.
- REAR DEFOGGER RELAY - Under dash in fuse box.
- REAR WIPER RELAY - Behind right rear cargo area trim panel, taillight area.
- SEAT HEATER REAR POWER OUTLET RELAY - Under dash above left kick panel, left of fuse box.
- STARTER INTERLOCK RELAY/MT MODELS - Under dash on bulkhead panel left of steering column.
- SUB COOLANT FAN RELAY (WITH A/C) - Engine compartment in main fuse box.
- TAIL LIGHT AND ILLUMINATION LIGHT RELAY - Under dash in fuse box.
- WIPER DE-ICER RELAY - Under dash above right kick panel.

CONTROL MODULES

- A/T SHIFT LOCK CONTROL MODULE - Under dash on bulkhead panel left of steering column.
- ABS 5.3 I MODULE - Engine compartment behind right headlight.
- CRUISE CONTROL MODULE - Left of steering column behind fuse box.
- DOOR LOCK TIMER MODULE - Behind dash above fuse box.
- ECM MODULE - Under carpet passenger foot well area.
- ILLUMINATION CONTROL MODULE - Under dash above right kick panel.
- INTERMITTENT WIPER CONTROL MODULE - Incorporated in combination switch steering column.
- KEYLESS SECURITY SYSTEM CONTROL MODULE - Under dash left of steering column.
- SEAT BELT KEY WARNING MODULE - Under dash right of steering column.
- SRS MODULE - Center dash area below audio unit.
- TCM MODULE - Under dash left of steering column.
- TURN SIGNAL / HAZZARD MODULE - Under dash on bulkhead panel left of steering column.
- WIPER DE-ICER TIMER - Under dash above right kick panel.

DIODES

- DOOR WARNING LIGHT DIODE - Incorporated in combination meter.
- LUGGAGE ROOM LIGHT DIODE - Right rear taillight area.

SENSORS

- ABS G SENSOR - Under center console.
- FUEL TANK PRESSURE SENSOR - Behind right rear cargo area trim panel, rear wheel well area.

RESISTORS

- A/T DROPPING RESISTOR - Engine compartment, right front strut tower area.
- BLOWER MOTOR RESISTOR - Behind glove box mounted in A/C evaporator.

SOLENOIDS

- A/T SHIFT LOCK KEY LOCK SOLENOID - Incorporated in ignition switch.
- A/T SHIFT LOCK SOLENOID - Mounted to shifter assembly.

SWITCHES

- A/T SHIFT LOCK KEY WARNING SWITCH - Incorporated in ignition switch.
- A/T SHIFT LOCK PARK POSITION SWITCH - Mounted to shifter assembly.
- EVAPORATOR THERMOSWITCH - Behind glove box mounted in A/C evaporator.
- PARK BRAKE SWITCH - Attached to park brake lever bracket under center console.
- REVERSE LIGHT SWITCH / MT MODELS - Mounted in the transfer case.

MISCELLANEOUS ELECTRICAL COMPONENTS

- FWD FUSE HOLDER - Engine compartment in main fuse box.
- OBD II SERVICE CONNECTOR - Below steering column mounted through lower dash panel.
- POWER MIRROR HEATER CONDENSER - Behind glove box above evaporator.
- POWER WINDOW CIRCUIT BREAKER - Under dash on bulkhead panel left of steering column.
- SEAT BELT WARNING CHIME - Incorporated in seat belt key warning module.
- TRAILER WIRE HARNESS CONNECTOR - Under right rear lower tailgate opening trim panel, above spare tire.
- RADIO NOISE FILTER - Under dash left of steering column.