


24. Switch Back Gate Handle


A: REMOVAL

- 1) Remove switch back gate. <Ref. to EB-18, RE-MOVAL, Switch Back Gate.>
- 2) Remove switch back gate inner cover.

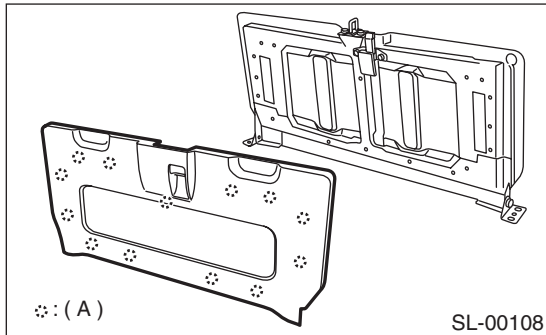

(A) Clip

- 3) Remove bolts and detach switch back gate handle.

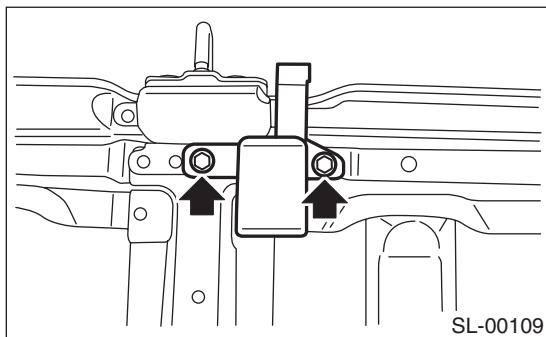

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

After installing, make sure that switch back gate operates smoothly.

C: INSPECTION

Make sure that lever operates smoothly.