



26. Tail Gate Outer Handle

A: REMOVAL


- 1) Remove tail gate tray. <Ref. to EI-56, REMOVAL, Tail Gate Tray.>
- 2) Remove tail gate cover.

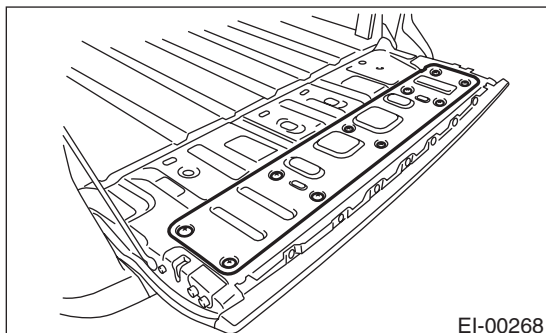

- 3) Remove rod clamp. Remove nuts and detach lock handle.

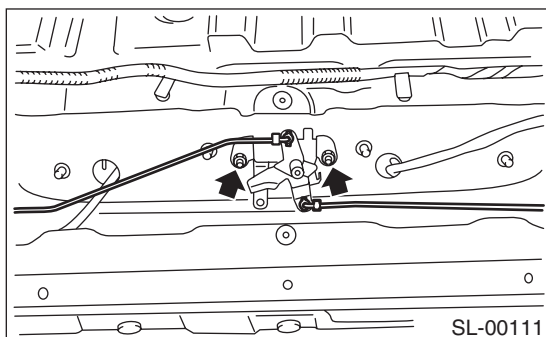

- 4) Remove tail gate outer handle.

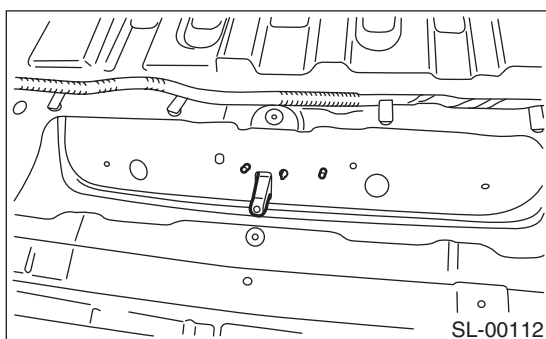

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft·lb)

NOTE:

After installing, make sure that outer handle works properly.

C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.