


## 6. Front Outer Handle

### A: REMOVAL

- 1) Remove the front door latch assembly. <Ref. to SL-34, REMOVAL, Front Door Latch Assembly.>
- 2) Remove the two bolts. Remove the front outer handle (A).

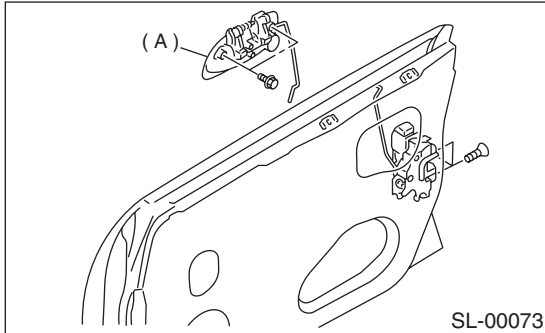

### CAUTION:

Do not use excessive force to remove the door panel. This will deform it.

### B: INSTALLATION

Install in the reverse order of removal.

### NOTE:

Make sure the outer handle works properly after installation.

### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.