

BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

51. Bulkhead Wiring Harness (In Engine Room)

A: LOCATION


1. NON-TURBO ENGINE MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B4	4	Gray	B-2		AT dropping resistor
B6	2	Brown	B-2		ABS front sensor RH
B7	6	Black	B-2		Cruise control actuator
B8	5	Gray	B-4		Front wiper motor
B10	2	Brown	A-3		A/C pressure switch
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	Black	B-4	T3	
B14	1	Black	B-4		Starter (Magnet)
B15	2	Brown	B-4		ABS front sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B17	3	Black	B-2		Vehicle speed sensor (MT)
B18	4	Black	B-3		Front oxygen (A/F) sensor
B19	4	★	B-3		Rear oxygen sensor cord
B20	6	★	B-2	E1	Engine wiring harness
B21	20	Gray	B-3	E2	
B22	16	Brown	B-3	E3	
B24	2	Gray	B-3	T1	Back-up light switch (MT)
B25	2	Brown	B-3	T2	Neutral position switch (MT)
B204	1	Black	B-2		Security horn

★: Non-colored

BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

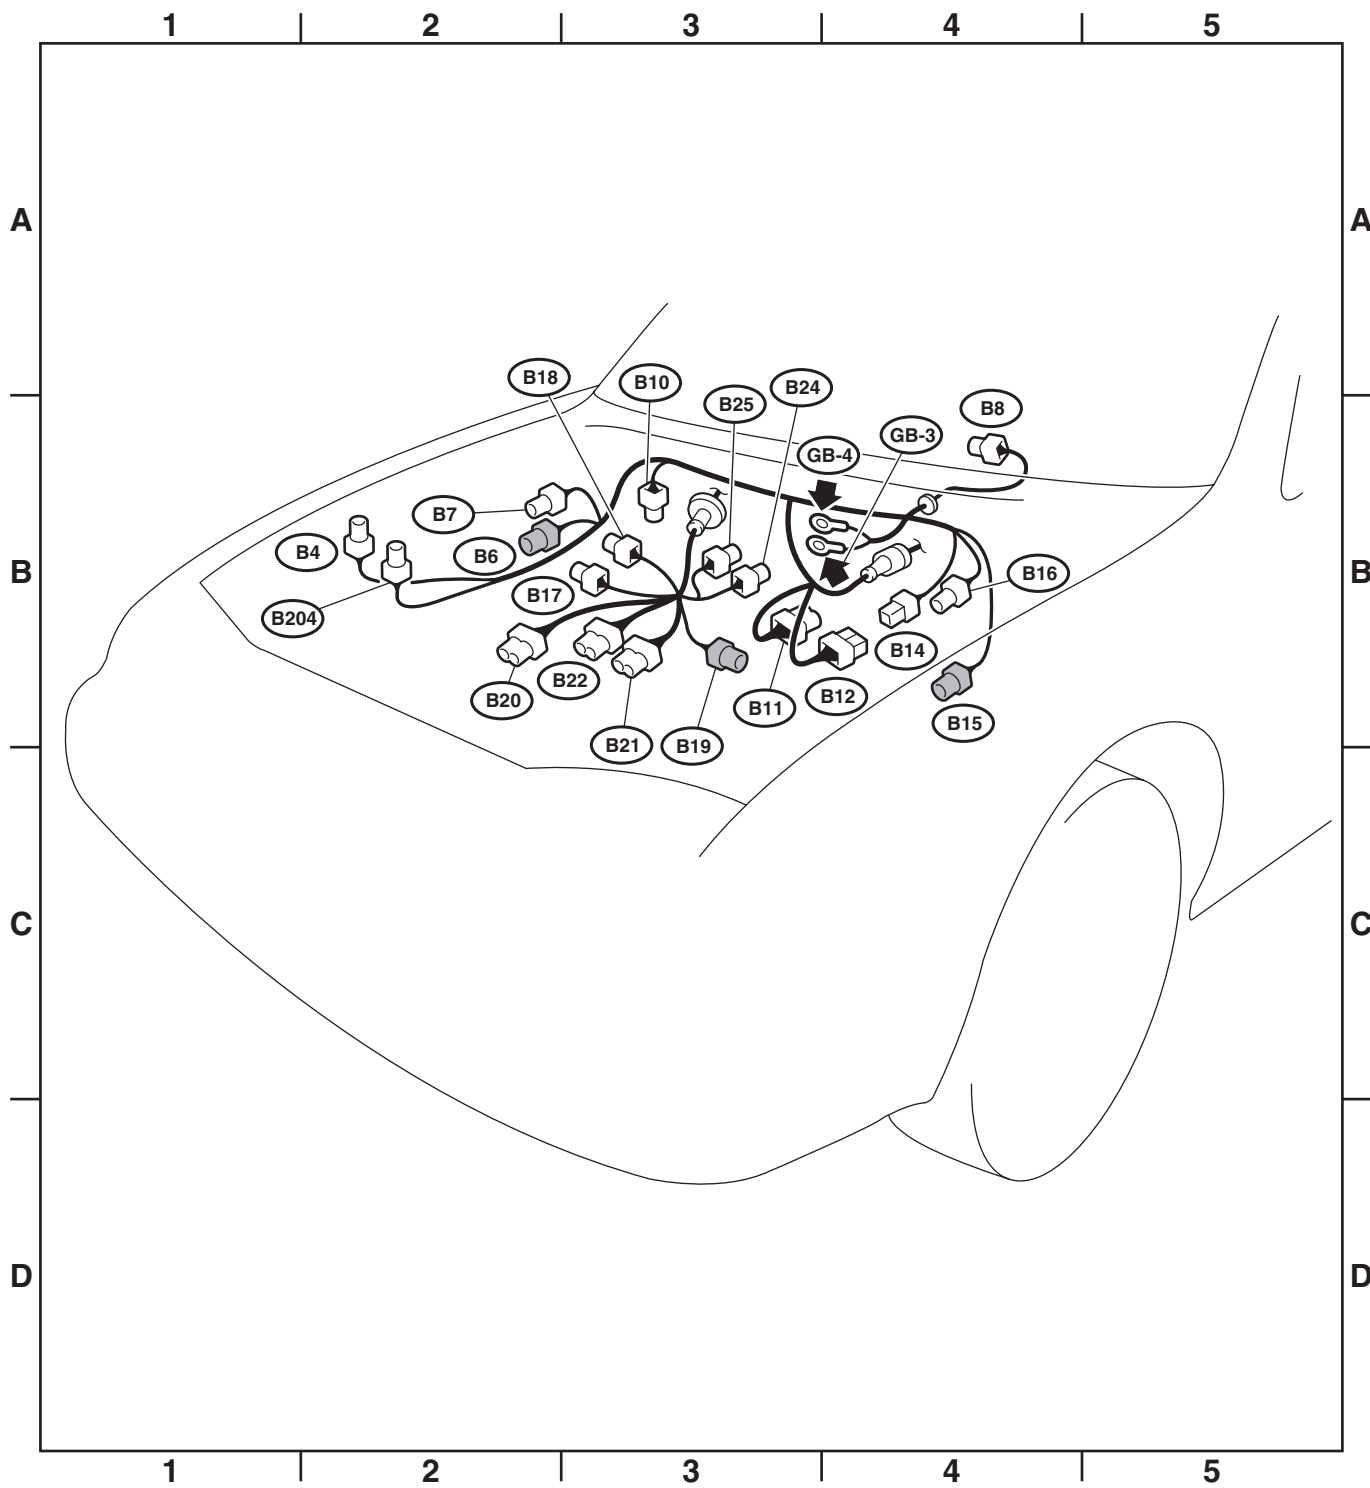

WI-05867

BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM


2. TURBO ENGINE MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	★	B-2		Mass air flow meter
B6	2	Brown	B-2		ABS front sensor RH
B8	5	Gray	B-4		Front wiper motor
B10	4	★	A-3		A/C pressure switch
B11	20	★	B-3	T4	Transmission (AT)
B12	12	Black	B-4	T3	
B14	1	Black	B-4		Starter (Magnet)
B15	2	Brown	B-4		ABS front sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B17	4	★	B-2		Vehicle speed sensor (MT)
B18	4	★	B-4		Front oxygen (A/F) sensor
B19	4	★	B-3		Rear oxygen sensor cord
B20	10	★	B-2	E1	Engine wiring harness
B25	4	Gray	B-3	T2	Neutral position switch (MT)
B127	2	★	B-2		Wast gate solenoid
B204	1	Black	B-2		Security horn
B279	2	★	B-2		Exhaust gas temperature sensor
B317	4	★	B-2	E56	Engine wiring harness

★: Non-colored

BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

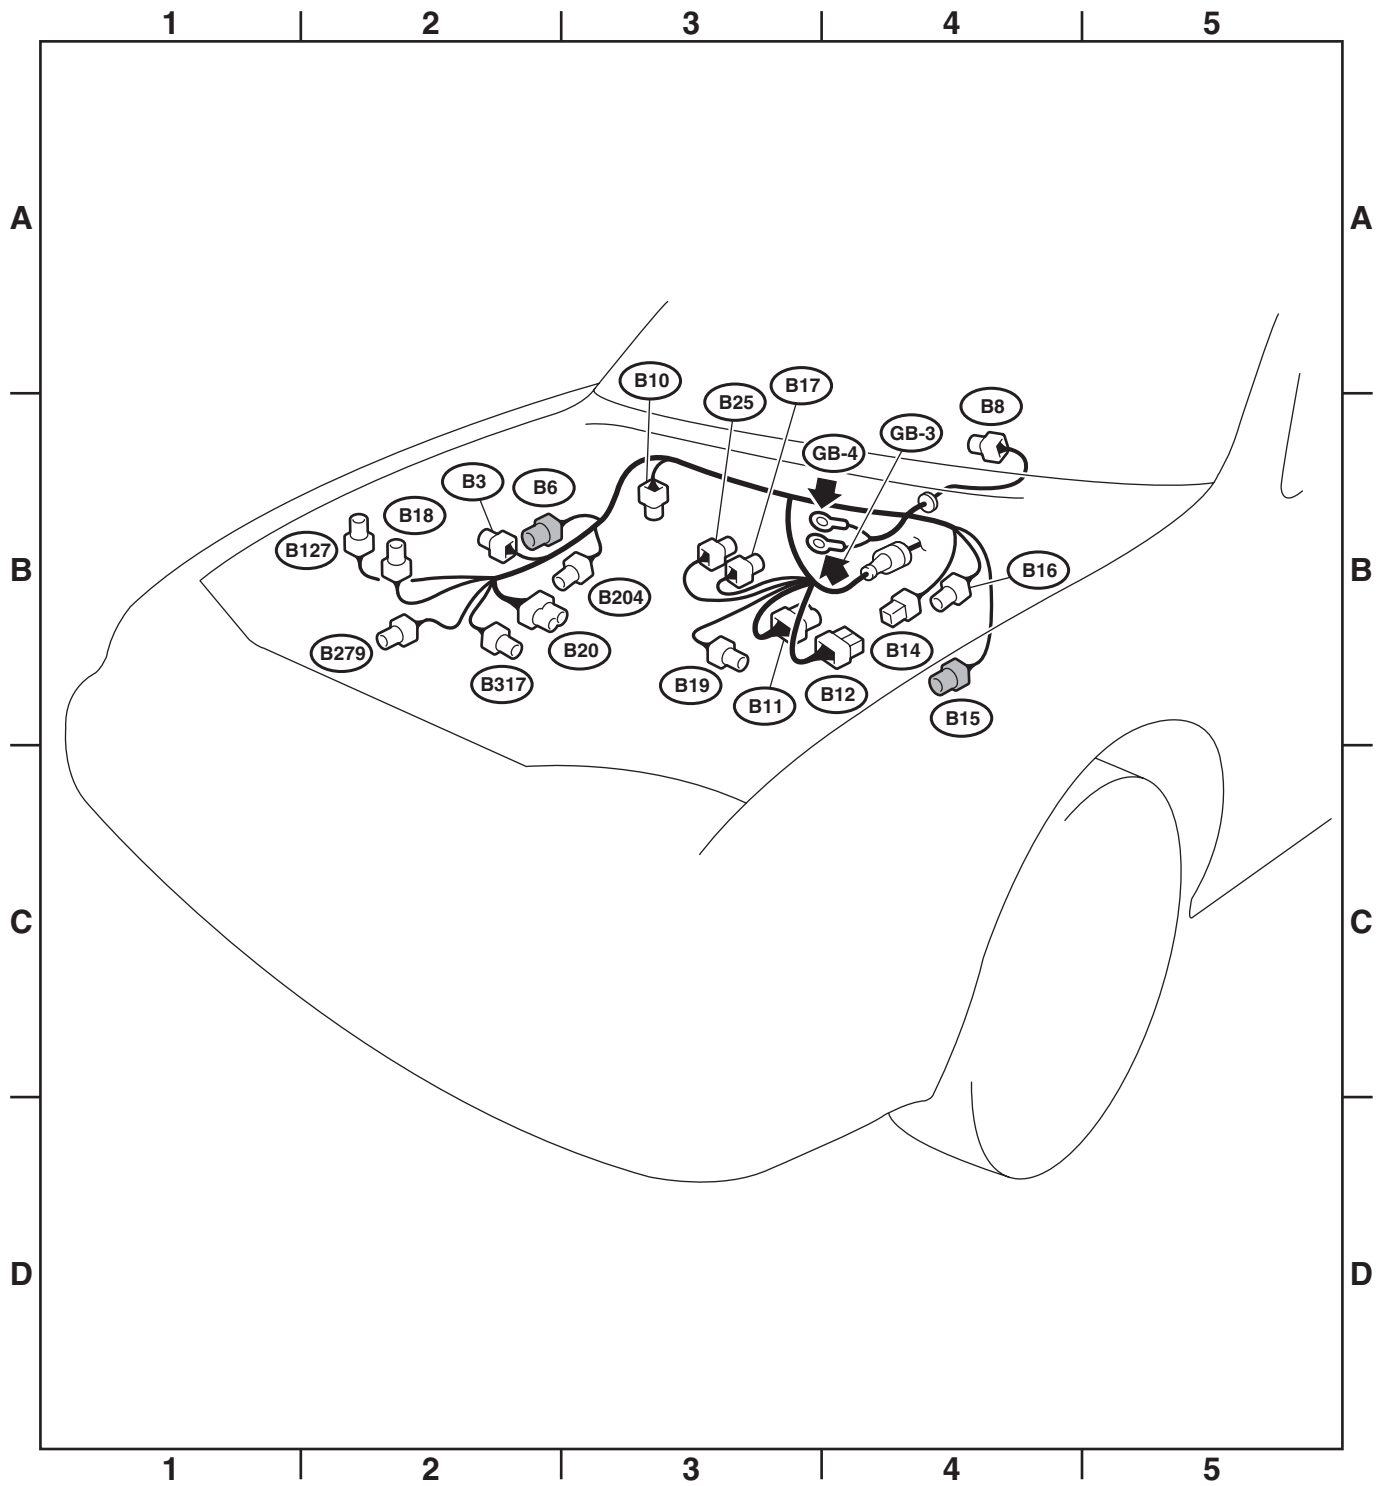

WI-05868