

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	7
3. Rear Window Defogger System	8
4. Windshield Wiper Deicer System	9
5. Remote Control Mirror System	10
6. Front Door Glass	11
7. Front Regulator and Motor Assembly	16
8. Rear Door Glass	17
9. Rear Regulator and Motor Assembly	19
10. Windshield Glass	20
11. Rear Window Glass	23
12. Roof Window Glass	24
13. Inner Rearview Mirror	25
14. Power Window Control Switch	26
15. Rear Window Defogger Switch	29
16. Rear Window Defogger	30
17. Outer Mirror Assembly	31
18. Outer Mirror	32
19. Remote Control Mirror Switch	33
20. Wiper Deicer	34
21. Wiper Deicer Switch	35


GENERAL DESCRIPTION

GLASS/WINDOWS/MIRRORS

1. General Description

A: COMPONENT

1. FIXED GLASS

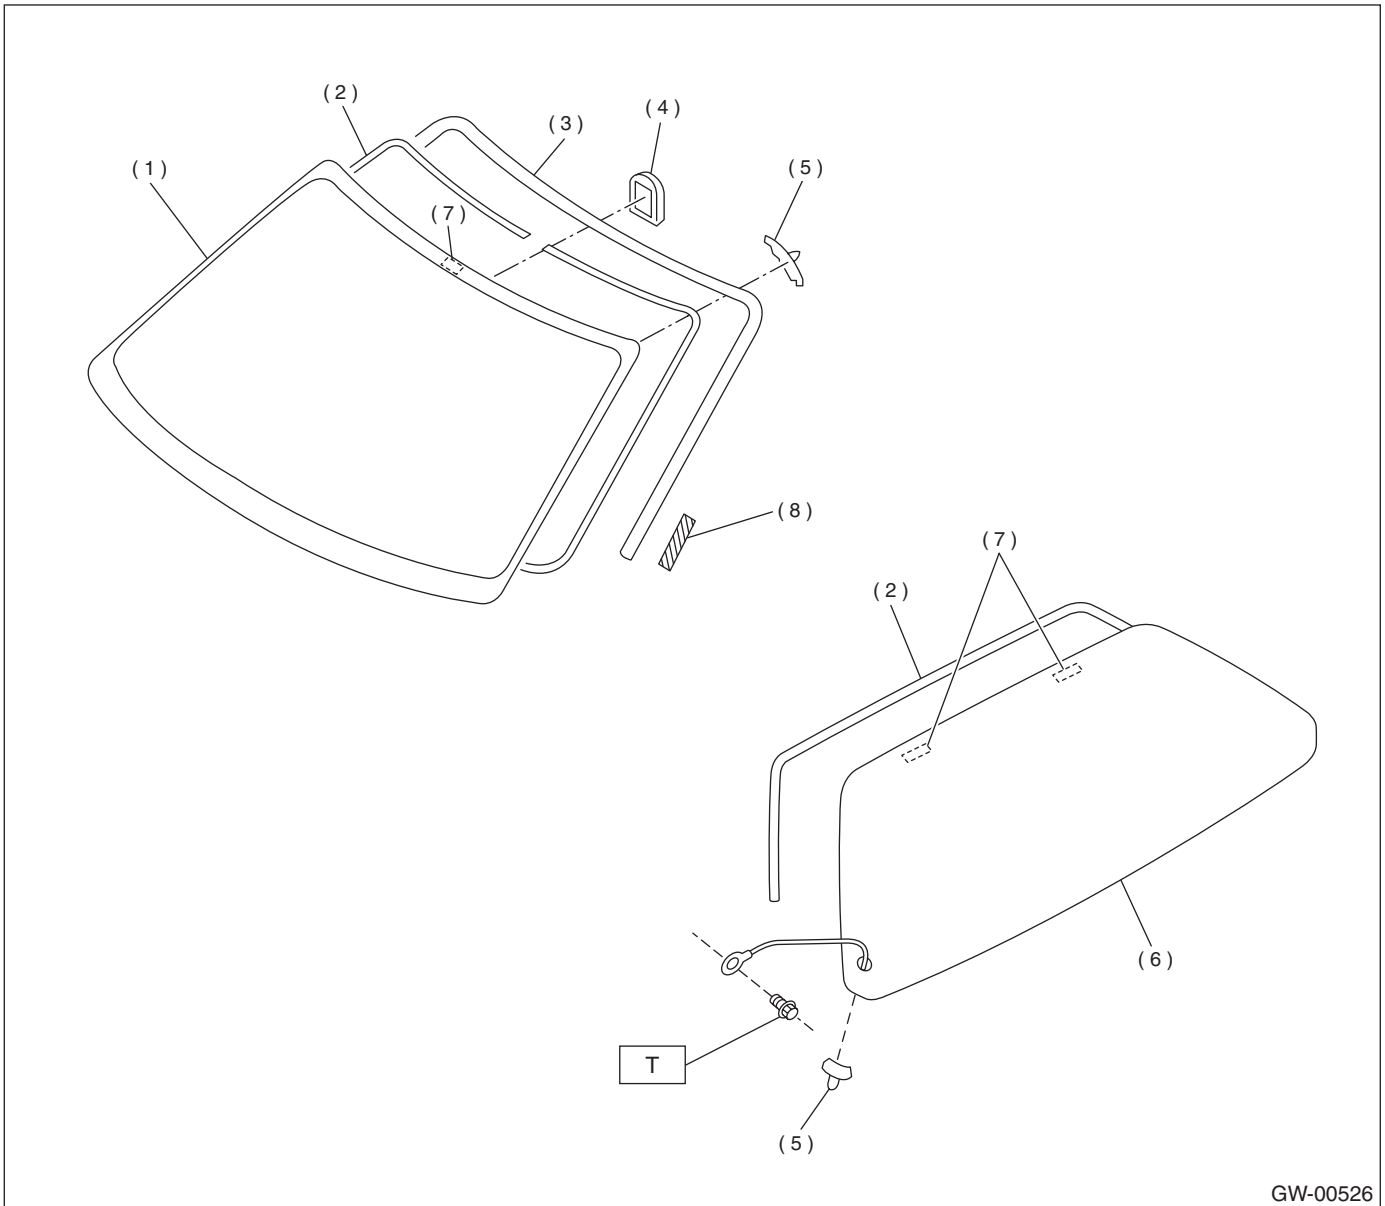


- (1) Windshield glass
- (2) Dam rubber
- (3) Molding
- (4) Rearview mirror mount

- (5) Locate pin
- (6) Rear window glass
- (7) Fastener
- (8) Seal

Tightening torque: N-m (kgf-m, ft-lb)

T: 13.0 (1.3, 9.6)

2. FRONT DOOR GLASS

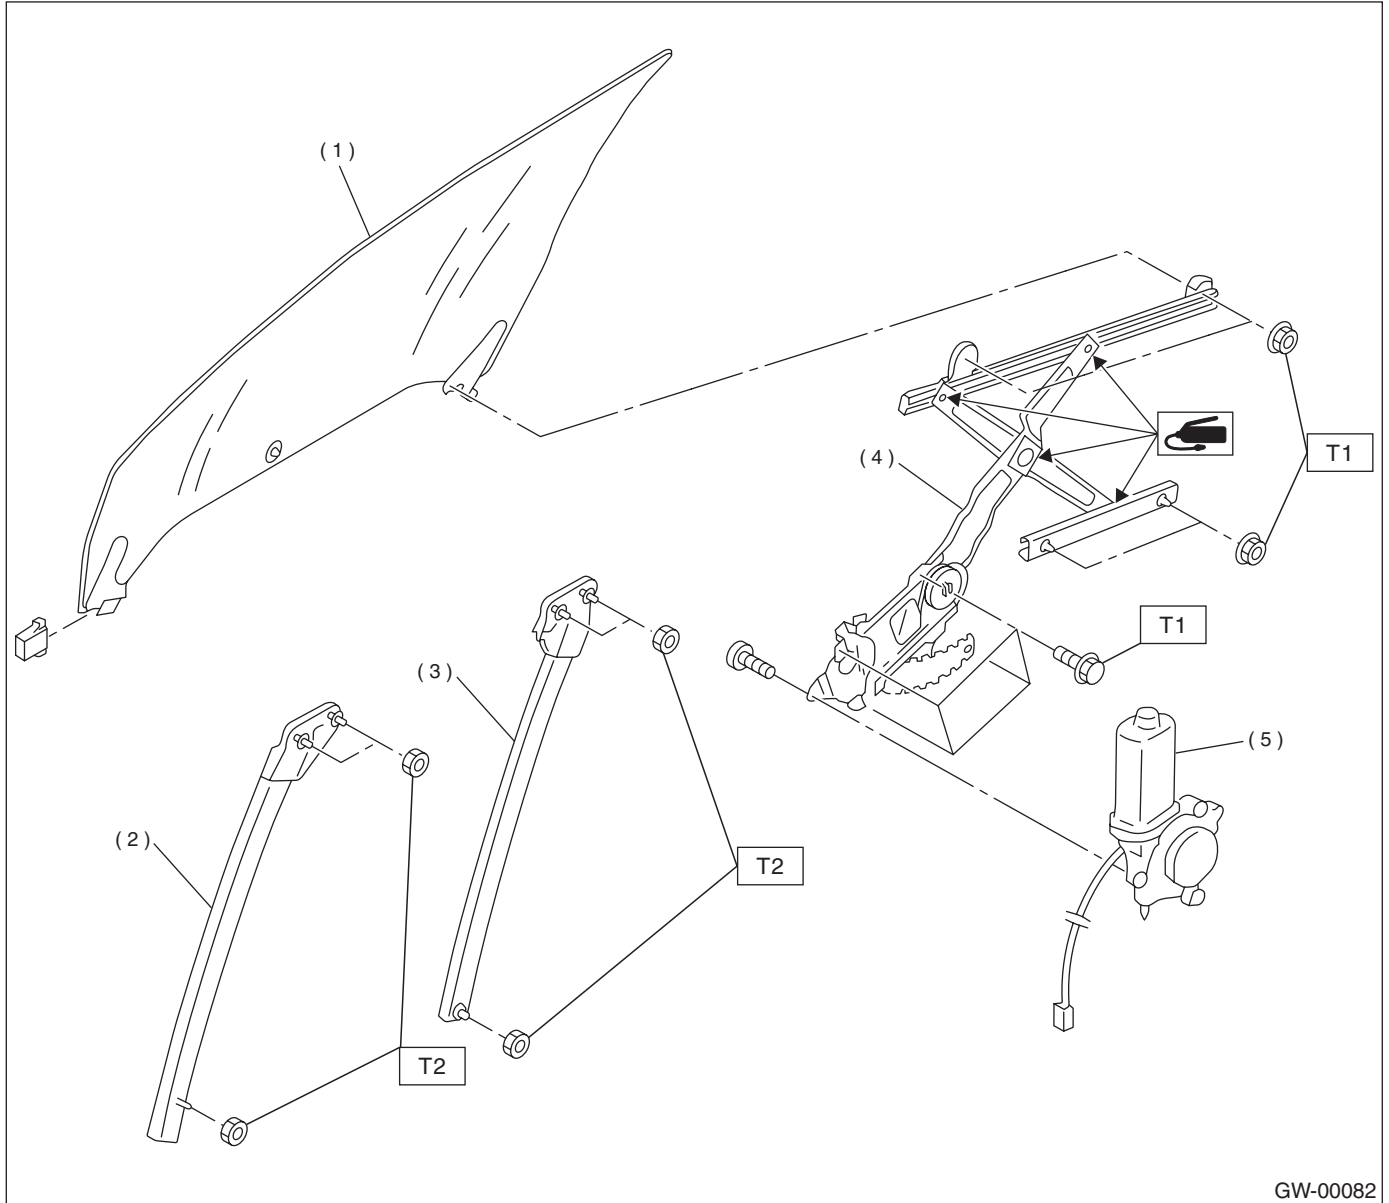

- (1) Glass
- (2) Door sash (Front)
- (3) Door sash (Rear)
- (4) Regulator ASSY

- (5) Motor ASSY

Tightening torque: N-m (kgf-m, ft-lb)


T1: 7.35 (0.75, 5.4)

T2: 14 (1.4, 10.1)

GENERAL DESCRIPTION

GLASS/WINDOWS/MIRRORS

3. REAR DOOR GLASS

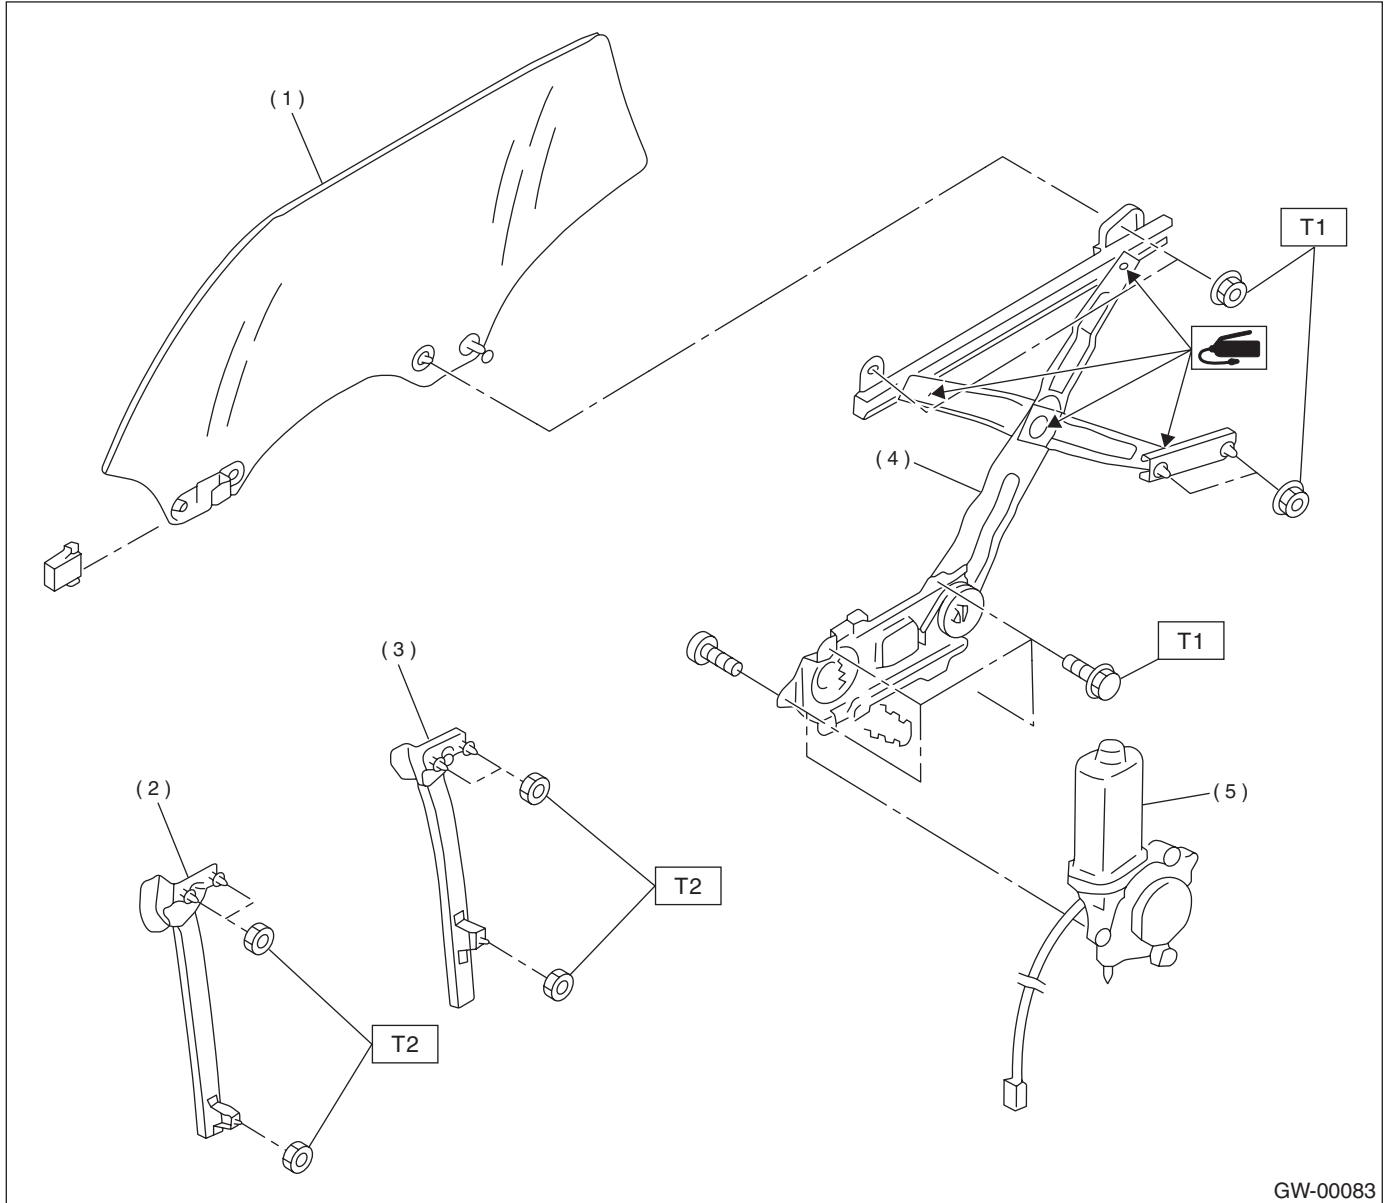

- (1) Glass
- (2) Door sash (Front)
- (3) Door sash (Rear)
- (4) Regulator ASSY


- (5) Motor ASSY

Tightening torque: N-m (kgf-m, ft-lb)

T1: 7.35 (0.75, 5.4)

T2: 14 (1.4, 10.1)

4. MIRRORS

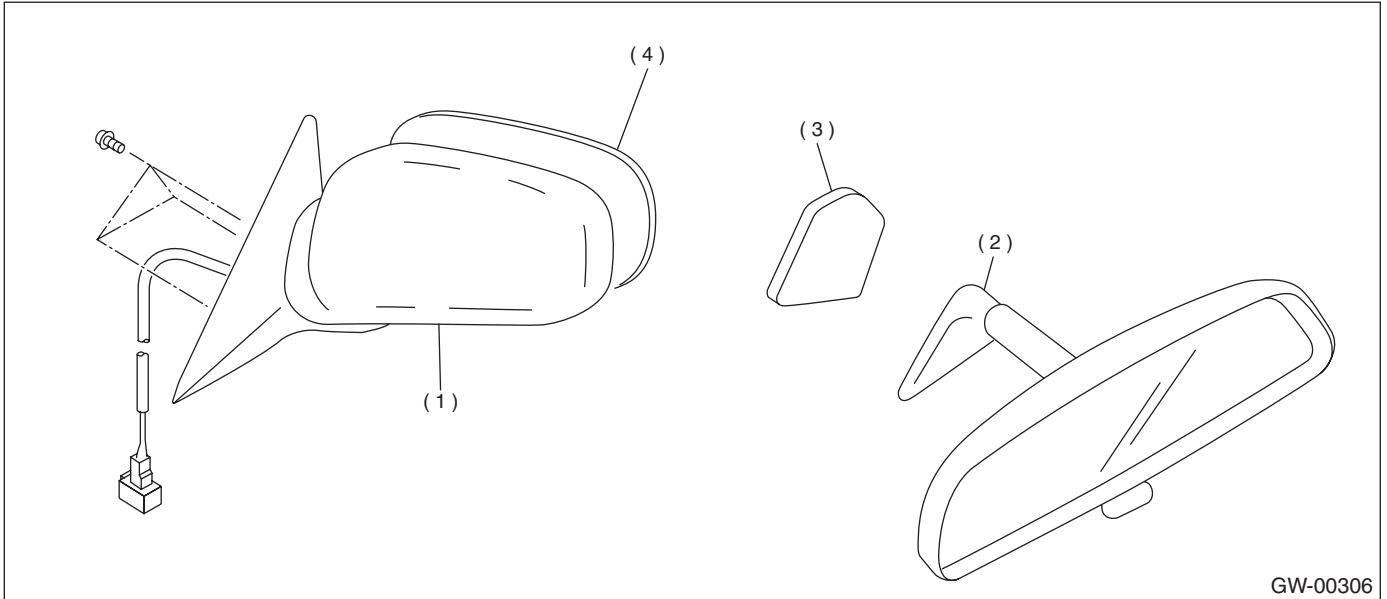

- (1) Outer mirror
- (2) Inner rearview mirror

- (3) Mount
- (4) Mirror

GENERAL DESCRIPTION



GLASS/WINDOWS/MIRRORS

B: CAUTION

- When electrical connectors are disconnected, always conduct an operational check after connecting them again.
- Avoid impact and damage to the glass.

C: PREPARATION TOOL

1. SPECIAL TOOLS

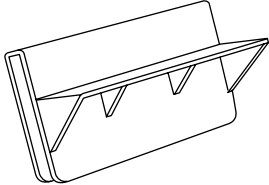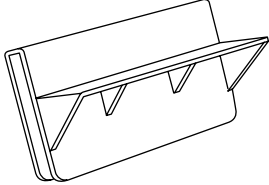ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST61299AE000	61299AE000	SPACER	Used for adjusting position of upper edge of front door glass. [For glass thickness 5 mm (0.197 in)]
 ST61299AE010	61299AE010	SPACER	Used for adjusting position of upper edge of rear door glass. [For glass thickness 4 mm (0.157 in)]

2. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for checking voltage and continuity.
Piano Wire	Used for window glass removal.
Windshield Knife	Used for window glass removal.

2. Power Window System

A: SCHEMATIC

<Ref. to WI-148, Power Window System.>

B: INSPECTION

Symptom	Repair order
All power windows does not operate.	(1) Fuse (SBF-6) (F/B No. 18) (2) Power window circuit breaker (3) Power window relay (4) Wiring harness
One window does not operate.	(1) Power window main switch (2) Power window sub switch (3) Power window motor (4) Wiring harness
"Window Lock" does not operate.	(1) Power window main switch

REAR WINDOW DEFOGGER SYSTEM

GLASS/WINDOWS/MIRRORS

3. Rear Window Defogger System

A: SCHEMATIC

<Ref. to WI-155, SCHEMATIC, Rear Window Defogger System.>

B: INSPECTION

Symptom	Repair order
Rear window defogger does not operate.	(1) Fuse (M/B No. 1) (2) Rear defogger relay (3) Defogger switch (4) Rear defogger condenser (5) Defogger wire (6) Wiring harness

4. Windshield Wiper Deicer System

A: SCHEMATIC

<Ref. to WI-169, Wiper Deicer System.>

B: INSPECTION

Symptom	Repair order
Wiper deicer does not operate.	(1) Fuse (F/B No. 18, 19) (2) Wiper deicer relay (3) Wiper deicer switch (4) Wiring harness

REMOTE CONTROL MIRROR SYSTEM

GLASS/WINDOWS/MIRRORS

5. Remote Control Mirror System

A: SCHEMATIC

<Ref. to WI-156, Remote Controlled Rearview Mirror System.>


B: INSPECTION

Symptom	Repair order
All function does not operate.	(1) Fuse (F/B No. 4) (2) Mirror switch (3) Wiring harness
One side of the mirror motor does not operate.	(1) Mirror switch (2) Mirror motor (3) Wiring harness
Mirror heater does not operate.	(1) Mirror switch (2) Mirror heater (3) Wiring harness


6. Front Door Glass

A: REMOVAL


- 1) Remove door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Remove sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Remove outer weatherstrip.
- 4) Remove inner stabilizer.

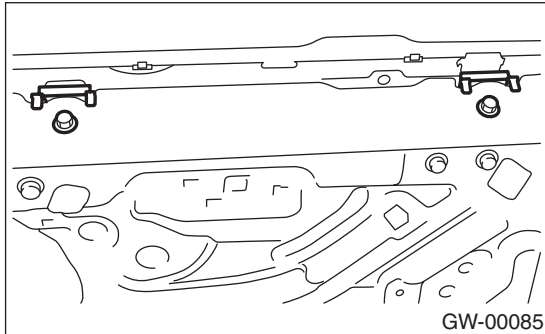


- 5) Remove outer mirror. <Ref. to GW-31, REMOVAL, Outer Mirror Assembly.>
- 6) Remove gusset.

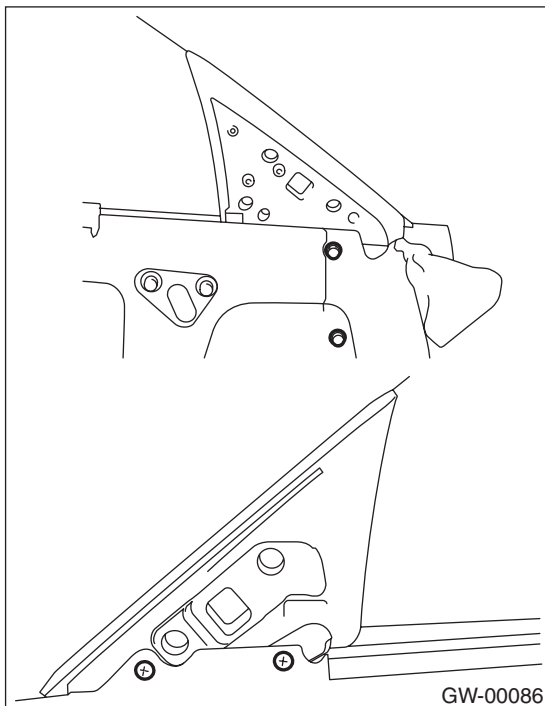

- 7) Operate the power window switch to move glass to the position shown in the figure, and then remove the two nuts from service holes.

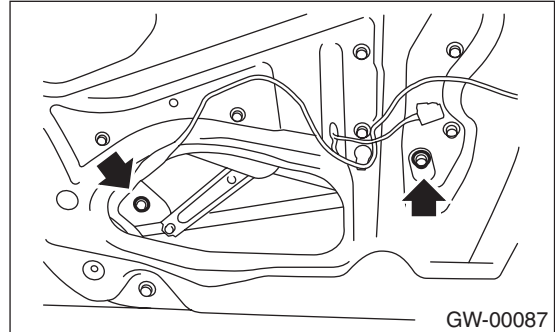

- 8) Take out glass from above of door panel.

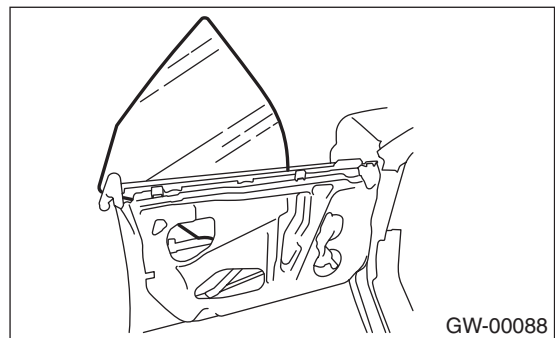

CAUTION:

- Do not turn regulator in the closing direction after removal of the glass. Otherwise gear may be disengaged.
- Avoid impact and damage to the glass.

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Make sure that glass stay is placed securely in sash.

- 2) Adjust front door glass. <Ref. to GW-12, ADJUSTMENT, Front Door Glass.>

Tightening torque:

Refer to **COMPONENT** in *General Description*. <Ref. to EB-4, **FRONT DOOR PANEL, COMPONENT, General Description**.>and <Ref. to GW-3, **FRONT DOOR GLASS, COMPONENT, General Description**.>

FRONT DOOR GLASS

GLASS/WINDOWS/MIRRORS

C: ADJUSTMENT


NOTE:

Before adjustment, ensure that all adjusting bolts of stabilizer, upper stopper, and sash are loose and door glass is raised so that it is in contact with weatherstrip.

1) Temporarily tighten one adjusting bolt on one side of rear sash at the midpoint of slotted hole in the inner panel.



2) Temporarily tighten regulator B-channel in a position slightly lower than midpoint of slotted hole.

3) Lower door glass 10 to 15 mm (0.39 to 0.59 in) from fully closed position. While applying outward pressure of 45 ± 5 N (4.59 ± 0.51 kgf, 10.1 ± 1.1 lb) (F) to upper edge of glass above midpoint of two outer stabilizers, press inner stabilizer at 10 ± 5 N (1.02 ± 0.51 kgf, 2.2 ± 1.1 lb) until it just touches the glass, then secure it.

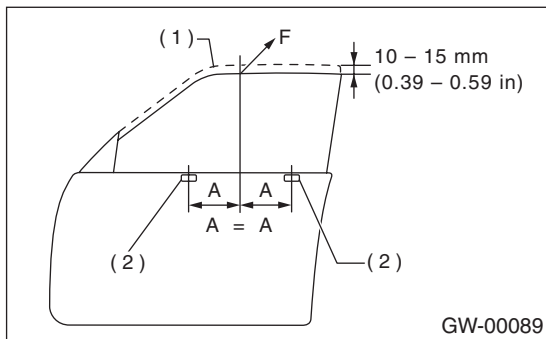


- (1) Full close
- (2) Stabilizer

4) For adjustment of clearance between front and rear glasses, loosen nuts (A), and move glass sash back and forth until clearance becomes the value shown.

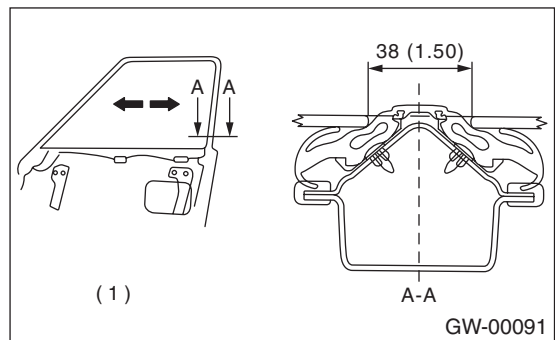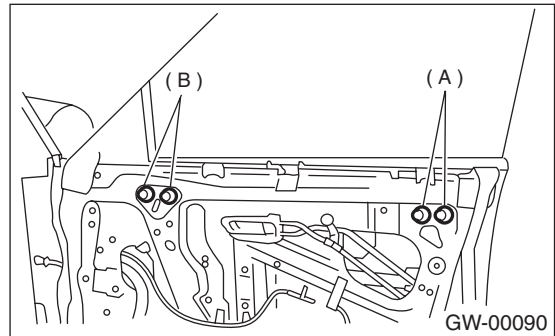


(1) Unit: mm (in)

5) For adjustment of upper and lower ends of center pillar, loosen adjusting nut (A) of B-channel (B).

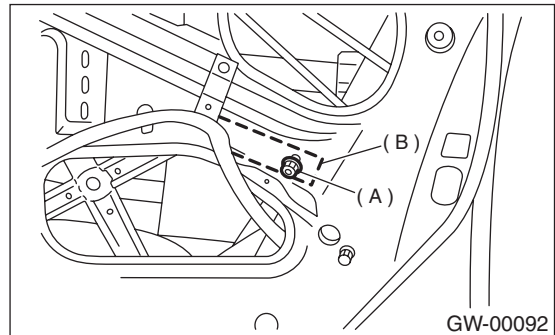


FRONT DOOR GLASS

6) Adjust so that upper and lower ends of center pillar are the same size.

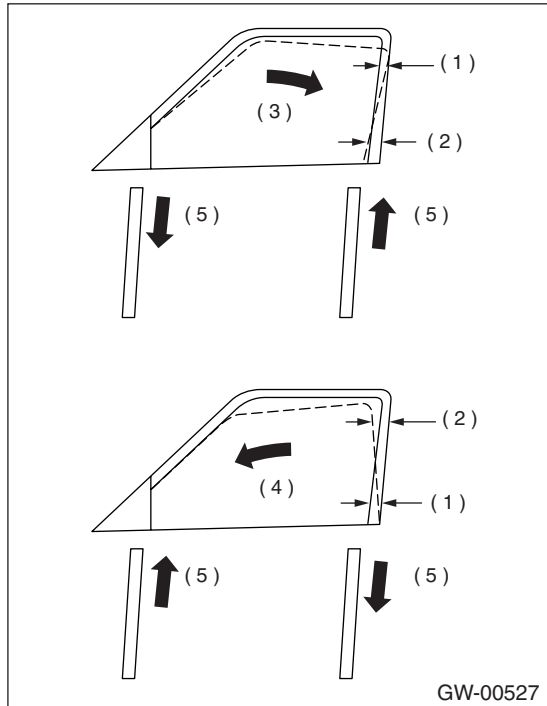

- (1) Narrow
- (2) Wide
- (3) Glass tilts too far rearward
- (4) Glass tilts too far forward
- (5) Stopper adjustment direction

7) After adjusting the clearance between center pillar, up and down the glass several times to check glass contact to stopper when glass is fully closed. Adjust it to contact the front and rear stopper simultaneously.

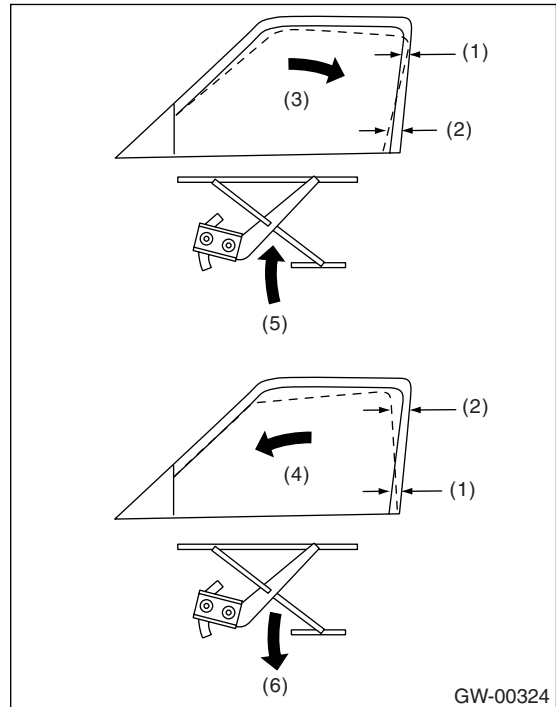


- (1) Narrow
- (2) Wide
- (3) When the stopper of door sash (rear) contacts first
- (4) When the stopper of door sash (front) contacts first
- (5) Raise B channel
- (6) Lower B channel

FRONT DOOR GLASS

GLASS/WINDOWS/MIRRORS

8) For glass stroke adjustment, install ST to glass, close door, raise glass until positional relationship between glass and weatherstrip becomes the value shown in the figure. And secure the glass so that the upper stopper correctly touches the glass holder.

ST 61299AE000 SPACER [Glass thickness: 5 mm (0.197 in) for front door glass]

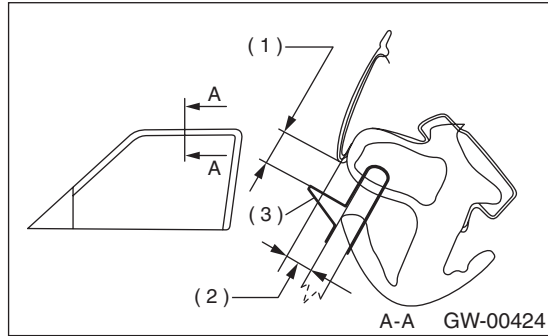

- (1) 3.2 - 4.8 mm (0.126 - 0.189 in)
- (2) 6 mm (0.24 in)
- (3) ST


9) After stabilizer adjustment, carry out degree of adhesion adjustment. First, visually ensure positional relationship between retainer & molding and glass of the roof side, and then begin with rear sash adjustment. Install the ST to glass and adjust two adjusting bolts alternately step by step to obtain dimensions shown below (cross-section A).

NOTE:

If two nuts are loosened at the same time, sash moves back and forth. Therefore, when one nut is adjusted, secure the other.

10) Make the same adjustment of two adjusting bolts of rear sash.


ST 61299AE000 SPACER [Glass thickness: 5 mm (0.197 in) for front door glass]

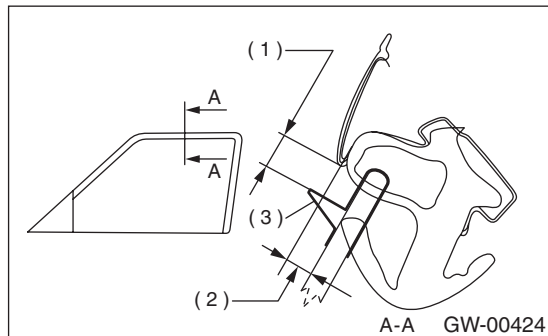

- (1) 3.2 - 4.8 mm (0.126 - 0.189 in)
- (2) 6 mm (0.24 in)
- (3) ST

CAUTION:

Do not tilt sash bracket to inner panel during adjustment. Otherwise smooth regulator operation cannot be achieved.

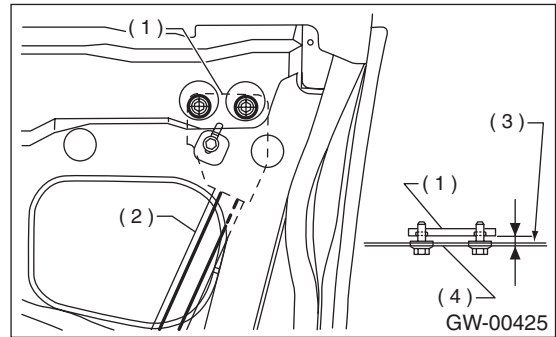

- (1) Sash bracket
- (2) Rear sash
- (3) Adjust a line parallel
- (4) Inner panel

11) Make adjustment of front sash in the same manner as that of rear sash.


NOTE:

Although front and rear sashes must, as a rule, be adjusted in the same manner, in some door installation, the adjustment in a different manner may be required. However, adjustment of one sash to the maximum amount and the other to the minimum amount is not permitted. Such adjustment may result in application of excessive load to regulator.

12) After adjustments, tighten nuts.

13) After adjustment of glass, if there is a gap between outer lip of gusset and glass surface, adjust the gap with adjusting bolt (A) in lower fitting part of gusset to prevent generation of wind noise.

14) During adjustments, loosen other three clamping bolts.

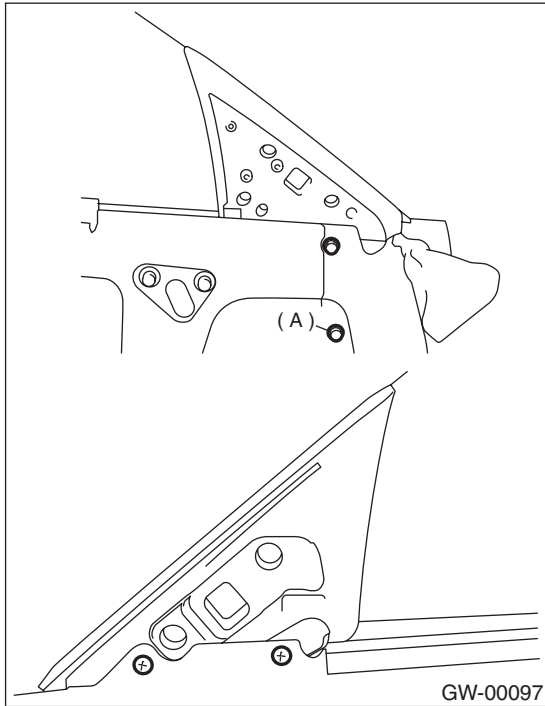

15) After adjustment, tighten bolts and nuts.

FRONT REGULATOR AND MOTOR ASSEMBLY


GLASS/WINDOWS/MIRRORS

7. Front Regulator and Motor Assembly


A: REMOVAL

- 1) Remove door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Remove sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Remove inner remote. <Ref. to SL-31, REMOVAL, Front Inner Remote.>
- 4) Remove door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
- 5) Disconnect electrical connector of regulator motor.
- 6) Loosen four bolts and two nuts to pull out regulator assembly.

- 2) Change polarity of battery connections to terminals to ensure that motor rotates in reverse direction.

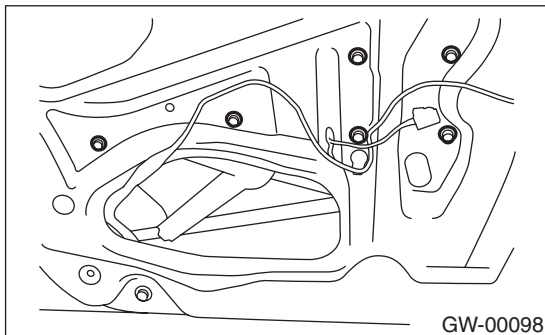

- 7) Loosen screws to remove motor assembly.

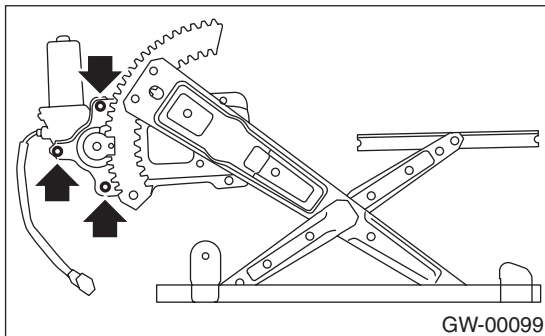

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust front door glass. <Ref. to GW-12, Adjustment.>

Tightening torque:

Refer to COMPONENT in General Description. <Ref. to EB-4, FRONT DOOR PANEL, COMPONENT, General Description.> and <Ref. to GW-3, FRONT DOOR GLASS, COMPONENT, General Description.>


C: INSPECTION

- 1) Make sure that power window motor rotates properly when battery voltage is applied to terminals of motor connector.


8. Rear Door Glass

A: REMOVAL


- 1) Remove door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove stabilizer.

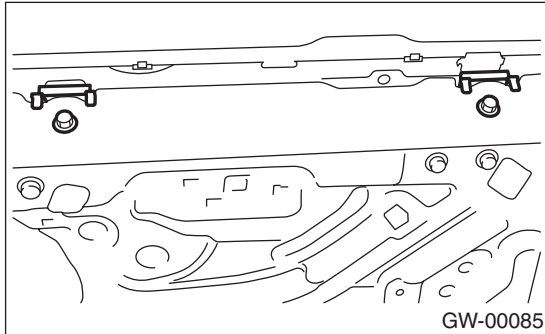

- 4) Operate power window switch to move glass as shown in the figure, and remove two nuts.

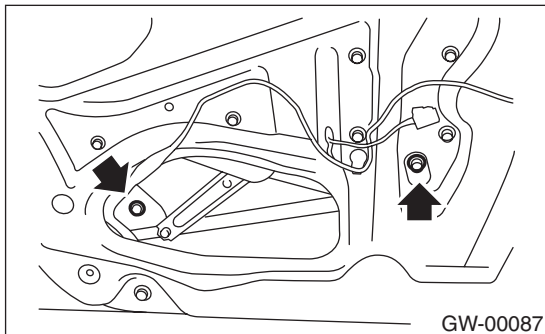

- 5) Loosen two screws to remove weatherstrip.

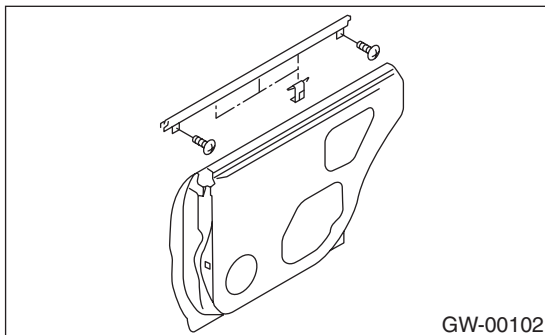

- 6) Pull out glass.

CAUTION:

Avoid impact and damage to the glass.

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Make sure that glass stay is placed securely in sash.

- 2) Adjust rear door glass. <Ref. to GW-17, ADJUSTMENT, Rear Door Glass.>

Tightening torque:


Refer to COMPONENT in General Description. <Ref. to EB-5, REAR DOOR PANEL, COMPONENT, General Description.> and <Ref. to GW-4, REAR DOOR GLASS, COMPONENT, General Description.>

C: ADJUSTMENT

NOTE:

Rear door glass, as a rule, should be adjusted in the same manner as front glass, although they are different in dimension. Special notes for rear glass are given below.

- 1) Adjust glass position using the following dimensions as a guide line.

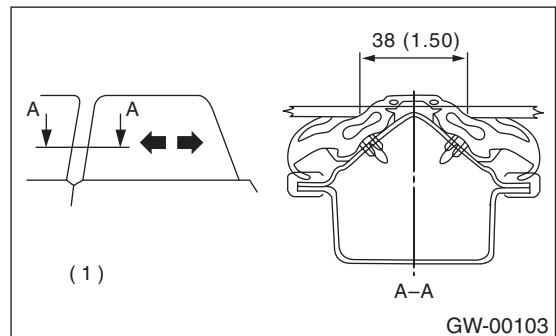

(1) Unit: mm (in)

CAUTION:


- If dimensions are smaller than the given dimensions, glass may get caught in weatherstrip during lifting/lowering operation. In the worst case, it may cause glass not to be opened fully.
- After adjustment, move glass up and down to check whether it is caught.

- 2) Install ST to glass and adjust degree of adhesion of glass until it becomes the following value.

REAR DOOR GLASS

GLASS/WINDOWS/MIRRORS

ST 61299AE010 SPACER [Glass thickness: 4 mm (0.157 in) for rear door glass]

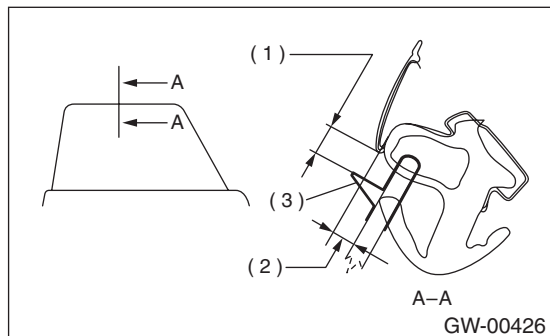

(1) 3.2 - 4.8 mm (0.126 - 0.189 in)

(2) 6 mm (0.24 in)

(3) ST


NOTE:

- If degree of adhesion of rear glass is higher than necessary, glass may get caught in weatherstrip of center pillar corner, resulting in early wear of weatherstrip. Be careful when adjusting.
- After adjustment, move glass up and down to check whether it is caught.


9. Rear Regulator and Motor Assembly

A: REMOVAL


- 1) Remove door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove door glass. <Ref. to GW-17, REMOVAL, Rear Door Glass.>
- 4) Secure bolts using screwdriver to remove front sash adjusting nut.

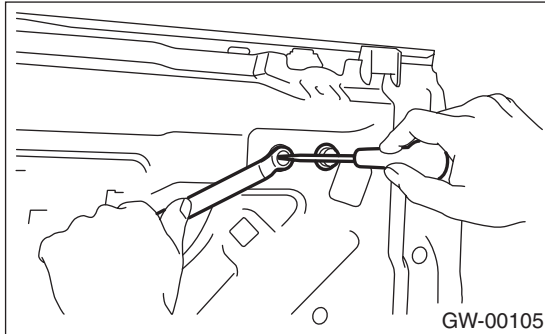

- 5) Remove front sash.
- 6) Disconnect electrical connector regulator motor.
- 7) Loosen four bolts and two nuts to remove regulator assembly.

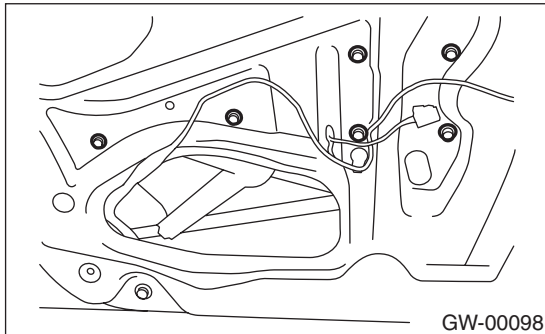

- 8) Loosen screws to remove motor assembly.

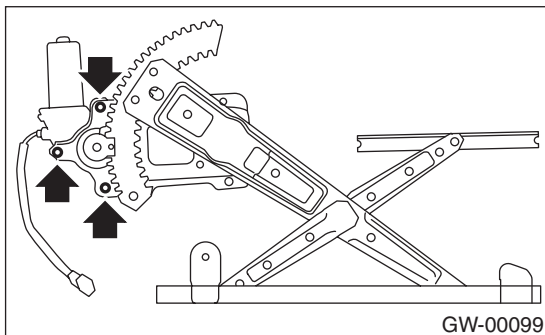

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust rear door glass. <Ref. to GW-17, ADJUSTMENT, Rear Door Glass.>

Tightening torque:

Refer to COMPONENT in General Description. <Ref. to EB-5, REAR DOOR PANEL, COMPONENT, General Description.> and <Ref. to GW-4, REAR DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Make sure that power window motor rotates properly when battery voltage is applied to terminals of motor connector.
- 2) Change polarity of battery connections to terminals to ensure that motor rotates in reverse direction.

10. Windshield Glass


A: REMOVAL

1. USING WINDSHIELD KNIFE

- 1) Remove cowl panel. <Ref. to EI-29, REMOVAL, Cowl Panel.>
- 2) Remove front molding.
- 3) Tape body side of the circumference of windshield glass for protection.
- 4) Apply sufficient amount of soapy water to adhesive layer.
- 5) Insert windshield knife into the adhesive layer.
- 6) While holding the knife edge and windshield glass edge at a right angle, move windshield knife in parallel to windshield glass edge along face and edge of windshield glass to cut the adhesive layer.

CAUTION:


- Do not twist windshield knife.
- Cutting of adhesive layer shall be started with wider gap between windshield glass and body.

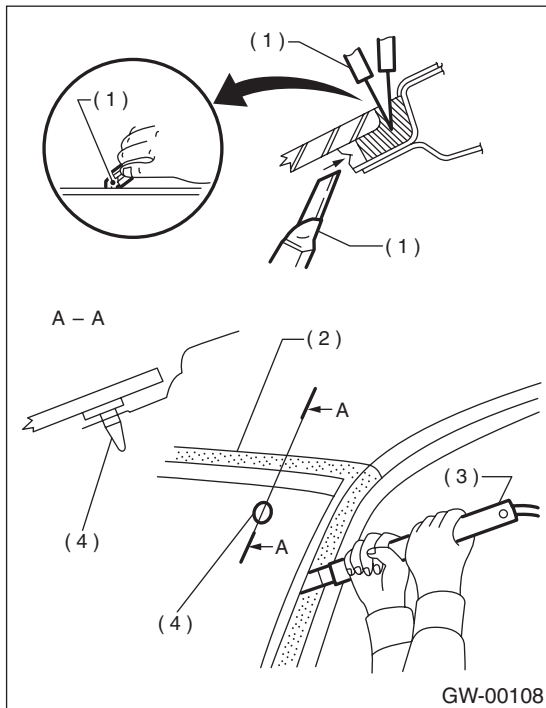

- (1) Putty knife
- (2) Protective tape
- (3) Windshield knife
- (4) Locating pin

NOTE:


Because locating pins are bonded to the corners of glass, use piano wire to cut the pin.

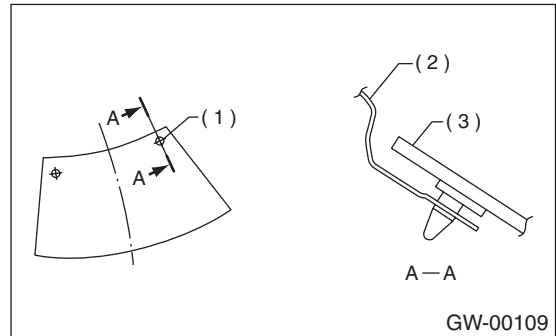

- (1) Locating pin
- (2) Body panel
- (3) Glass

2. USING PIANO WIRE

- 1) Remove cowl panel. <Ref. to EI-29, REMOVAL, Cowl Panel.>
- 2) Remove front molding.
- 3) Tape the body side of the circumference of windshield glass for protection.
- 4) Make a hole in adhesive layer using drill or knife.
- 5) Pass piano wire through the hole, and attach securely both the wire ends to pieces of wood.

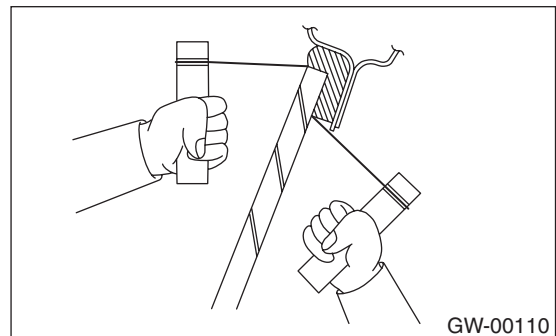

- 6) Pull the wire ends alternately to cut off the adhesive layer.

CAUTION:


- Do not tightly pull the piano wire against the windshield glass edge.
- Be careful not to damage interior and exterior parts.
- When removal is made with area close to instrument panel, place a protection plate over it. Pay particular attention to the removal.
- Do not cross piano wires. Otherwise they may be cut.

B: INSTALLATION

- 1) Clean external circumference of windshield glass with alcohol or white gasoline.
- 2) Remove adhesive layer on the body using cutter knife to obtain smooth face 2 mm (0.08 in) thick.


CAUTION:

Be careful not to damage the body and paint surface.

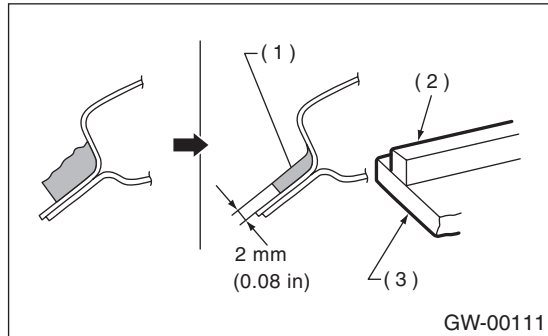


- (1) Adhesive
- (2) Dam rubber
- (3) Glass

- 3) Clean body with alcohol or white gasoline to remove thoroughly chips, dusts, and dirt from body face.
- 4) Place glass on body.
- 5) Adjust glass position to make uniform clearance between body and glass in four corners.
- 6) Place locating pins (A) and body on glass.

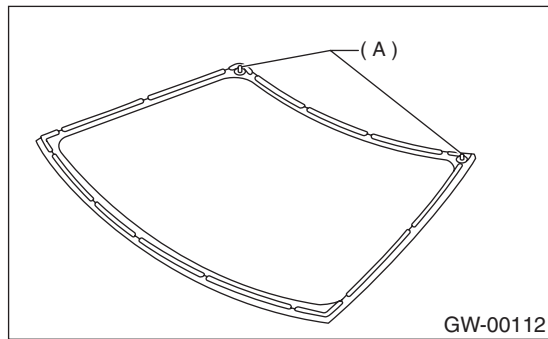

- 7) Remove glass from body.


- 8) Fit molding mark (B) to notch (A) of ceramic print.

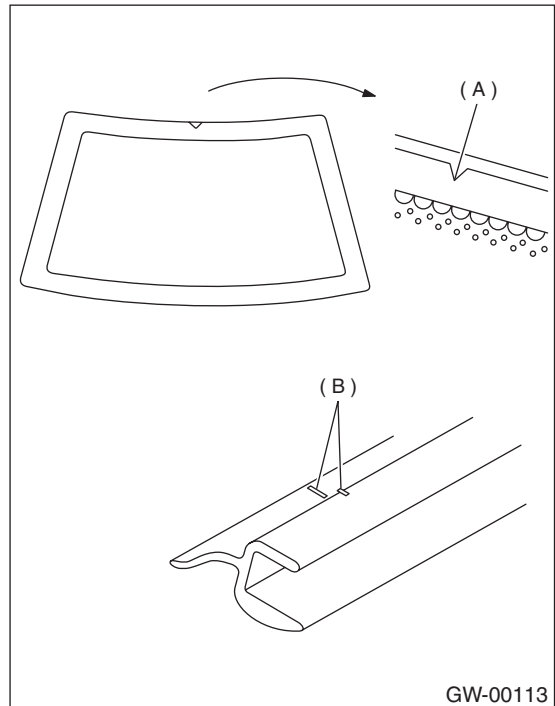

- 9) Apply primer to adhesive layer (A) of glass (B) using sponge.
- 10) Apply primer to adhesive layer (A) of body (C).

CAUTION:


- Primer once attached to the painted surface of the body and internal trim is hard to wipe off. Mask the circumference of such areas.
- Let primer dry for about ten minutes before installing the glass.
- Do not touch surface coated with primer.

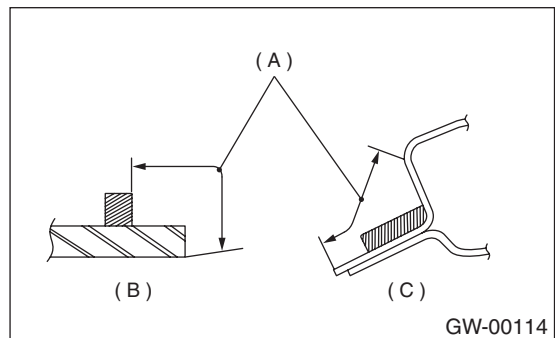

WINDSHIELD GLASS


GLASS/WINDOWS/MIRRORS

11) Cut off cartridge nozzle tip and set it in sealant gun as shown.

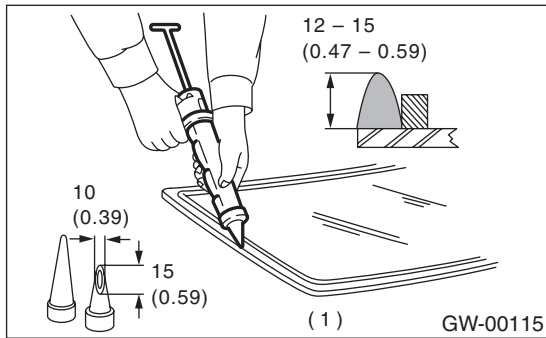

12) Apply adhesive to glass end surface as shown.

13) Fit locating pins using suction rubber cup to install windshield glass.

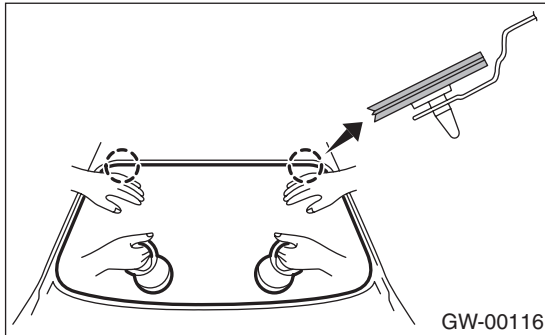

14) Lightly press windshield glass for tight fit.

15) Make adhesive surface flush using spatula.

CAUTION:

- When door is opened/closed after glass is bonded, always lower door glass and then open/close it carefully.
- Move vehicle slowly.

16) After completion of all work, allow vehicle to stand for about 24 hours.

NOTE:

For minimum drying time and time the vehicle must be left standing before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

17) After curing of adhesive, pour water on external surface of vehicle to check that there are no water leaks.

CAUTION:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

18) Install cowl panel. <Ref. to EI-29, INSTALLATION, Cowl Panel.>


11.Rear Window Glass

A: REMOVAL

- 1) Disconnect electrical connectors from rear de-fogger terminals.
- 2) Remove glass in the same procedure as for windshield glass. <Ref. to GW-20, REMOVAL, Windshield Glass.>

B: INSTALLATION

- 1) Bond dam rubber and locating pin.

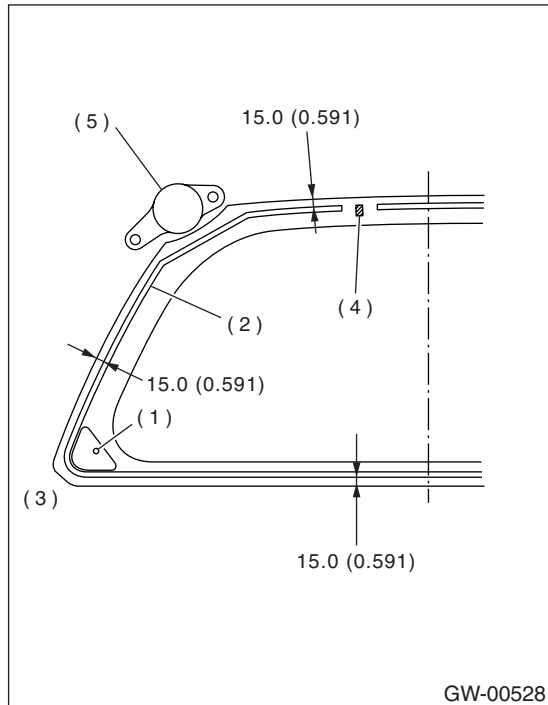

- (1) Locating pin
- (2) Dam rubber
- (3) Unit: mm (in)
- (4) Fastener
- (5) Luggage pipe bracket

- 2) Install glass in the same procedure as for windshield glass. <Ref. to GW-21, INSTALLATION, Windshield Glass.>
- 3) Connect rear defogger terminals.

CAUTION:

- When door is opened/closed after glass is bonded, always lower door glass and then open/close door carefully.
- Move vehicle slowly.

- 4) After completion of all work, allow vehicle to stand for about 24 hours.

NOTE:

For minimum drying time and time the vehicle must be left standing before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

- 5) After curing of adhesive, pour water on external surface of vehicle to check that there are no water leaks.

CAUTION:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

12.Roof Window Glass

A: REMOVAL

<Ref. to SR-5, REMOVAL, Sunroof Lid.>

B: INSTALLATION

<Ref. to SR-5, INSTALLATION, Sunroof Lid.>


C: ADJUSTMENT

<Ref. to SR-5, ADJUSTMENT, Sunroof Lid.>

13.Inner Rearview Mirror

A: REMOVAL

Loosen TORX screw (A) and remove the inner rearview mirror.

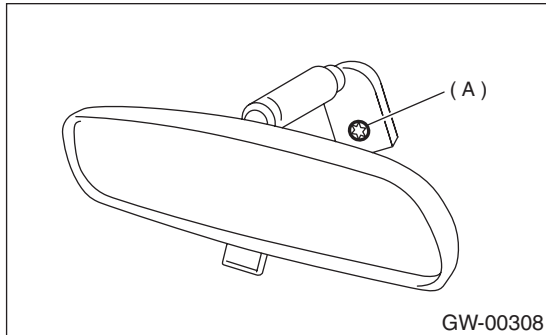

(1) TORX screw

CAUTION:

Be careful not to damage the mirror surface.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Do not let mirror be damaged.

POWER WINDOW CONTROL SWITCH


GLASS/WINDOWS/MIRRORS

14. Power Window Control Switch


A: REMOVAL

1. MAIN SWITCH

1) Remove two hooks (A) of switch panel to remove power window main switch.

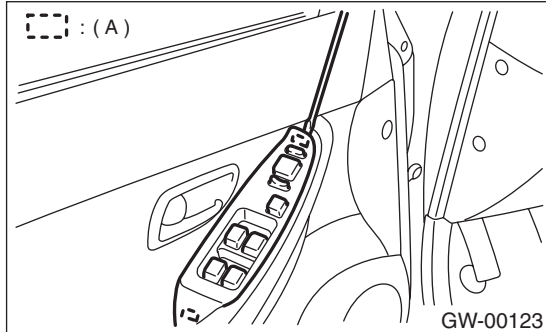


2) Disconnect electrical connectors from power window main switch and mirror switch.

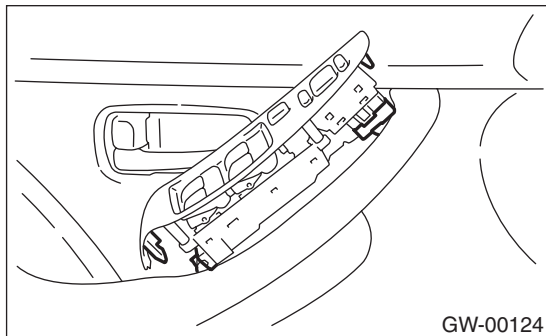

2. SUB-SWITCH

Remove two hooks (A) of switch panel to remove power window sub-switch and disconnect electrical connector.

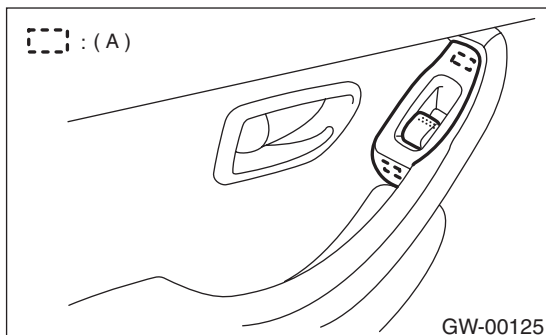

B: INSTALLATION

1. MAIN SWITCH

Install in the reverse order of removal.


2. SUB-SWITCH

Install in the reverse order of removal.

C: INSPECTION

1. MAIN SWITCH

Measure switch resistance.

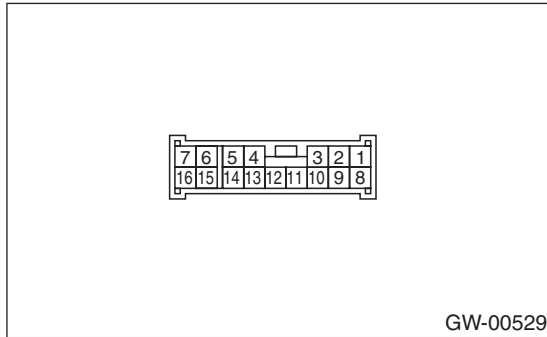

Driver's switch:

Switch position	Terminal No.	Standard
UP	3 and 9, 7 and 1	Less than 1 Ω
OFF	3 and 7 and 1	Less than 1 Ω
DOWN	7 and 9, 3 and 1	Less than 1 Ω
AUTO DOWN	7 and 9, 3 and 1	Less than 1 Ω

Front passenger's switch:

Switch position	Terminal No.	Standard
UP	9 and 5, 1 and 4	Less than 1 Ω
OFF	1 and 5 and 4	Less than 1 Ω
DOWN	9 and 4, 1 and 5	Less than 1 Ω

Rear left switch:

Switch position	Terminal No.	Standard
UP	9 and 13, 1 and 8	Less than 1 Ω
OFF	1 and 13 and 8	Less than 1 Ω
DOWN	9 and 8, 1 and 13	Less than 1 Ω

Rear right switch:

Switch position	Terminal No.	Standard
UP	9 and 16, 1 and 14	Less than 1 Ω
OFF	1 and 16 and 14	Less than 1 Ω
DOWN	9 and 14, 1 and 16	Less than 1 Ω


If defective, replace the main switch.

POWER WINDOW CONTROL SWITCH

GLASS/WINDOWS/MIRRORS

2. SUB-SWITCH

Measure switch resistance.

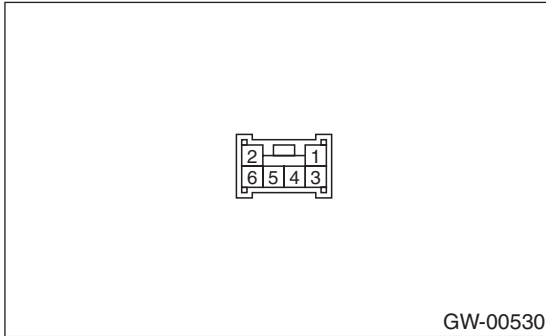

Front passenger's door switch and rear door switch:

Switch position	Terminal No.	Standard
UP	5 and 1, 6 and 2	Less than 1 Ω
OFF	4 and 1, 6 and 2	Less than 1 Ω
DOWN	5 and 2, 4 and 1	Less than 1 Ω

If defective, replace the sub-switch.

REAR WINDOW DEFOGGER SWITCH

GLASS/WINDOWS/MIRRORS

15.Rear Window Defogger Switch

A: REMOVAL

<Ref. to AC-28, REMOVAL, Control Unit.>

B: INSTALLATION

<Ref. to AC-28, INSTALLATION, Control Unit.>

C: INSPECTION

Check continuity between connectors at the back of heater control unit.

Switch position	Terminal No.	Standard
OFF	—	More than 1 M Ω
OFF	(i17) 14 and (i17) 10	Less than 1 Ω

REAR WINDOW DEFOGGER

GLASS/WINDOWS/MIRRORS


16.Rear Window Defogger

A: INSPECTION

CAUTION:

When wiping stain on glass off with cloth, use a dry and soft cloth and move it in the direction of the heat wire extension to avoid damage to the heat wire.


- 1) Turn ignition switch to ON.
- 2) Turn defogger switch to ON.
- 3) Wrap tips of tester pins with aluminum foil to avoid damage to heat wire.

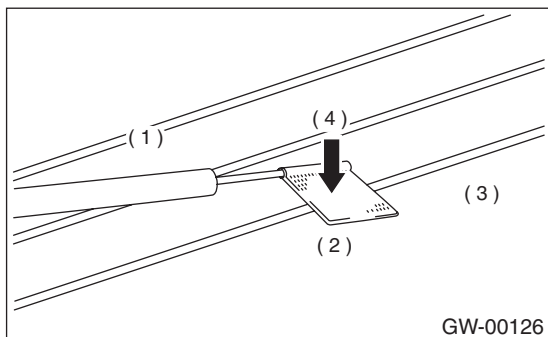

- (1) Tester probe
- (2) Tin foil
- (3) Heat wire
- (4) PRESS

- 4) Measure voltage at wire center (A) with DC voltmeter.

Standard voltage:
Approx. 6 volts

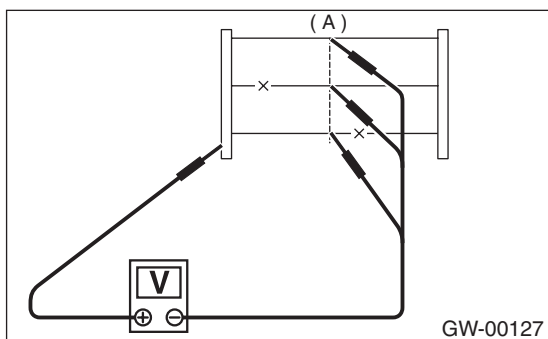

Voltage	Criteria
Approx. 6 V	OK
Approx. 12 V or 0 V	Broken


NOTE:

- If the measured value is 12 volts, heat wire is open between wire center and positive (+) end.
- If zero volt, heat wire is open between wire center and ground.

- 5) Apply positive lead of voltmeter to positive terminal of voltmeter, and then move negative lead along the wire up to the negative terminal end. If voltage changes from zero to several volts during movement of lead, heat wire is open at the voltage change point.

B: REPAIR

- 1) Clean broken portion with alcohol or white gasoline.
- 2) Mask both side of wire with thin film.
- 3) Apply conductive silver composition (DUPONT No. 4817) to broken portion.

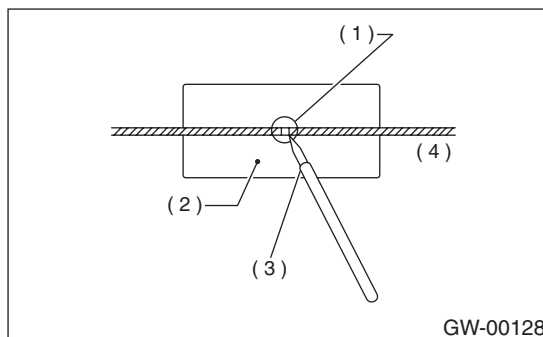


- (1) Broken portion
- (2) Masking thin film
- (3) Conductive silver composition
- (4) Broken wire

- 4) After repair, check wire.


17. Outer Mirror Assembly

A: REMOVAL

- 1) Remove door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Pull off sealing cover to disconnect outer mirror harness connector.

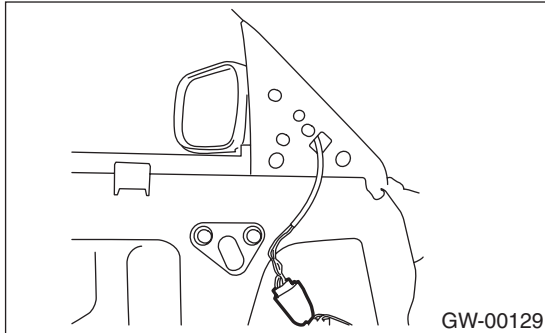

- 3) Remove screws to remove outer mirror assembly.

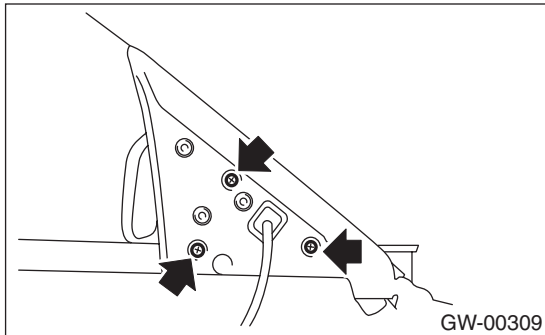

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check to ensure that outer mirror moves properly when battery voltage is applied to outer mirror harness connector terminals.


Switch position	Terminal No.
OFF	—
UP	1 (+) and 3 (-)
DOWN	3 (+) and 1 (-)
LEFT	2 (+) and 3 (-)
RIGHT	3 (+) and 2 (-)

If defective, replace the outer mirror.

18. Outer Mirror

A: REPLACEMENT

- 1) Remove the outer mirror assembly. <Ref. to GW-31, REMOVAL, Outer Mirror Assembly.>
- 2) Warm the area around the mirror holder (A) with a hair drier until the edges of the mirror holder become soft (about 2 or 3 minutes with a 1,000 W drier.)
- 3) Use a flat-bladed screwdriver without sharp edges to lift the mirror out of the mirror holder (A). (Also remove the connector from the back of mirrors with heaters.)

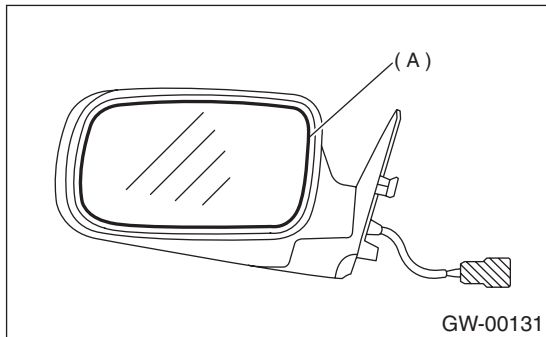

- 4) Warm the area around the mirror holder (A) with a hair drier until the edges of the mirror holder (A) become soft (about 2 or 3 minutes with a 1,000 W drier.)
- 5) With heater models, connect the connector on the back of mirror.
- 6) Remove the backing of the new two-sided tape, and push the mirror in to install it.


CAUTION:

Unless the mirror holder is warmed sufficiently, the mirror holder edges may be damaged or the mirror cracked.


19. Remote Control Mirror Switch

A: REMOVAL

1) Remove power window main switch panel.

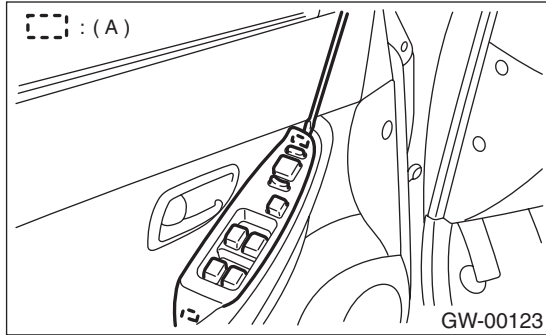

2) Remove four hook (A) to remove remote control mirror switch.

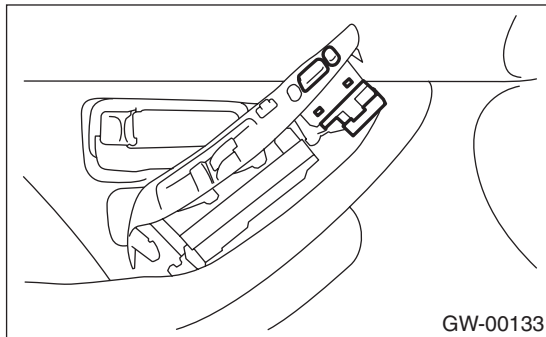


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Move remote control mirror switch to each position and check continuity between terminals.

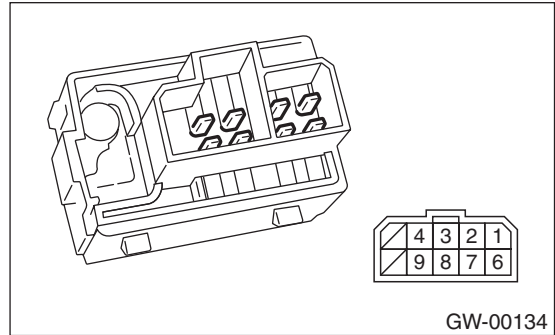

Change over switch left position:

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
UP	7 and 4, 2 and 1	Less than 1 Ω
DOWN	7 and 2, 4 and 1	Less than 1 Ω
LEFT	9 and 4, 2 and 1	Less than 1 Ω
RIGHT	9 and 2, 4 and 1	Less than 1 Ω

Change over switch right position:

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
UP	6 and 4, 2 and 1	Less than 1 Ω
DOWN	6 and 2, 4 and 1	Less than 1 Ω
LEFT	8 and 4, 2 and 1	Less than 1 Ω
RIGHT	8 and 2, 4 and 1	Less than 1 Ω

If defective, replace the switch.

20. Wiper Deicer

A: INSPECTION

Refer to INSPECTION under Rear Window Defogger. <Ref. to GW-30, INSPECTION, Rear Window Defogger.>


B: REPAIR

Refer to REPAIR under Rear Window Defogger. <Ref. to GW-30, REPAIR, Rear Window Defogger.>

21. Wiper Deicer Switch

A: REMOVAL

Remove driver side switch panel, and then remove wiper deicer switch.

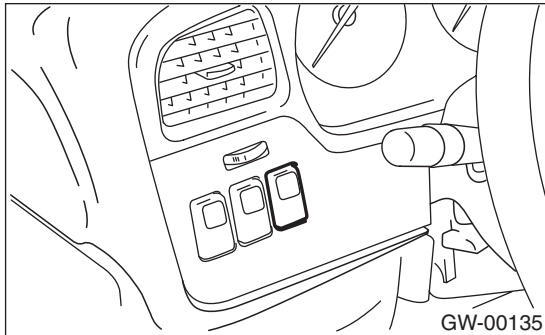


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Move wiper deicer switch to each position and check continuity between terminals.

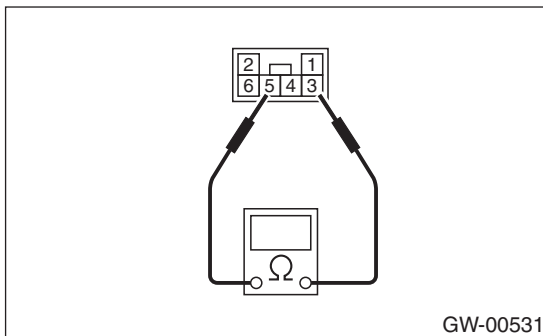

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
ON	3 and 5	Less than 1 Ω

If defective, replace the switch.

WIPER DEICER SWITCH

GLASS/WINDOWS/MIRRORS

MEMO: