


SEAT BELT SYSTEM

SB

	Page
1. General Description	2
2. Inspection Locations After a Collision	5
3. Front Seat Belt	6
4. Rear Seat Belt.....	8



2. REAR SEAT BELT

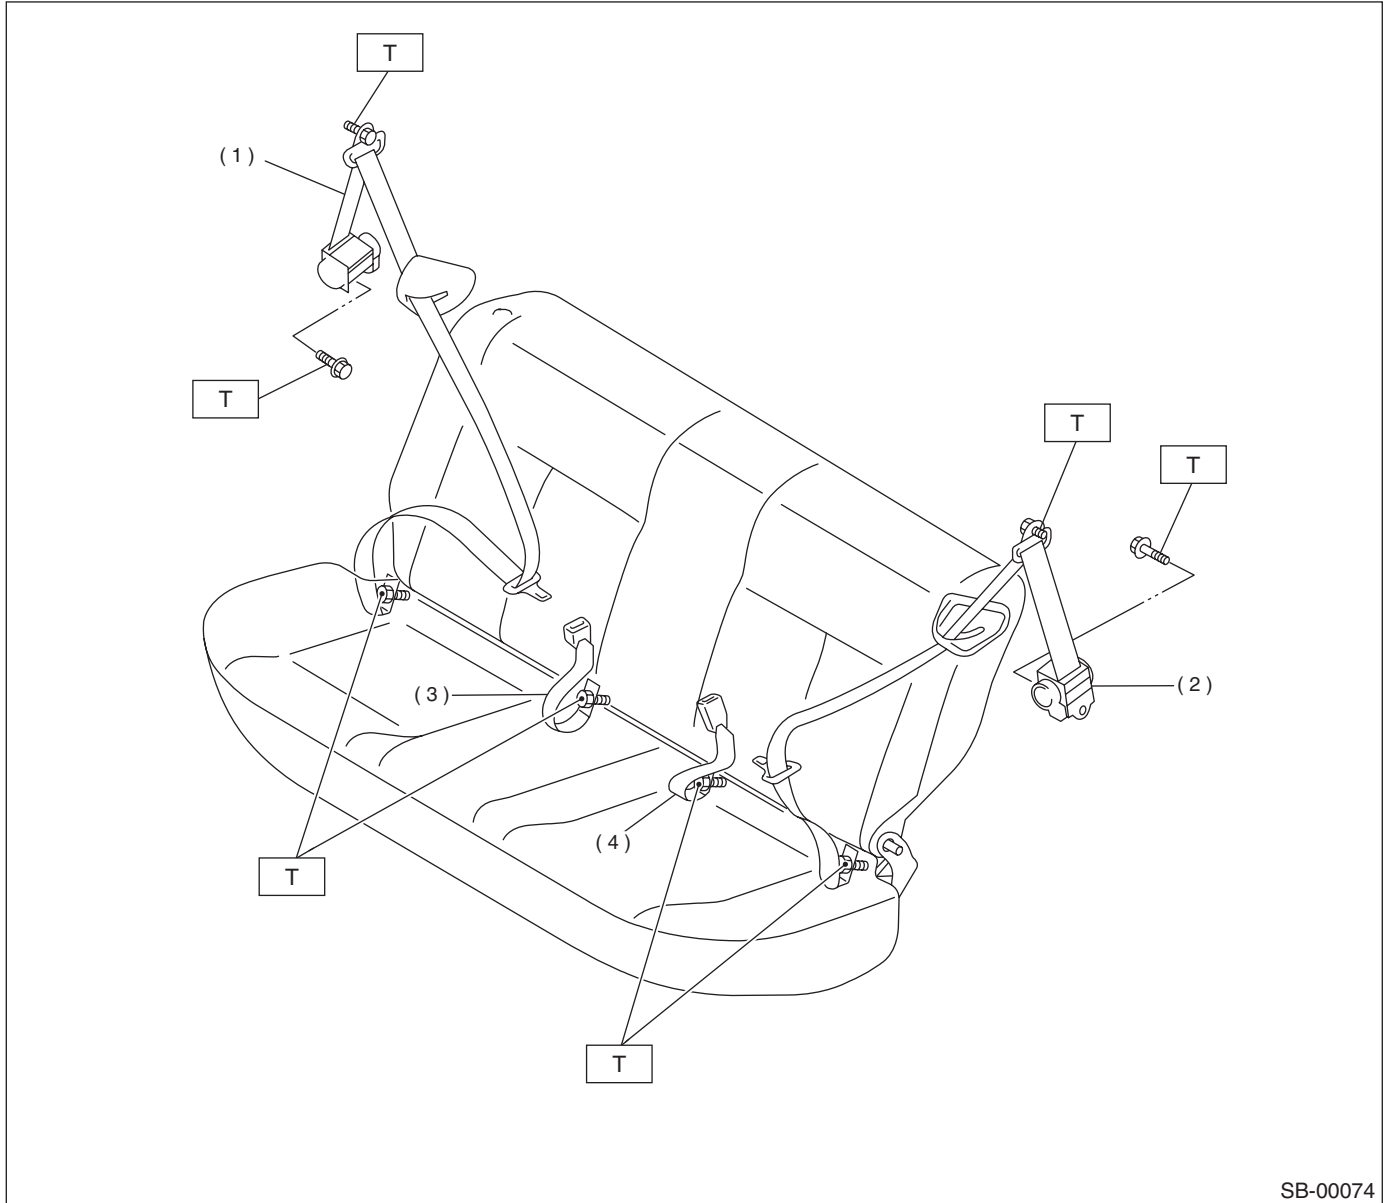

SB-00074

- (1) Outer seat belt RH
- (2) Outer seat belt LH

- (3) Inner seat belt RH
- (4) Inner seat belt LH

Tightening torque: N·m (kgf·m, ft·lb)

T: 30 (3.1, 22)

GENERAL DESCRIPTION

SEAT BELT SYSTEM

B: CAUTION

- Before starting, turn the ignition switch OFF, disconnect the battery ground cable and wait for 20 seconds or more.
- The pretension system has a backup power source. The pretensioner might deploy if you do not wait for 20 seconds or more before starting
- Do not drop or apply any impact to the pretensioner.
- If oil, grease, or water gets on the pretensioner, wipe it off immediately with a dry cloth.
- Do not expose the pretensioner to high temperature or flame.
- Do not allow current to flow through or voltage to reach the pretensioner. Do not use a circuit tester to check resistance of the pretensioner.
- Do not disassemble or attempt to repair the pretensioner. If it is dented, cracked, or deformed, replace it with a new one.
- Do not use the airbag or pretensioner parts from other vehicles. Always replace parts with new parts
- When handling a seat belt with a deployed pretensioner, wear gloves and goggles. Wash your hands afterwards.
- Do not re-use a seat belt with a deployed pretensioner again.
- If the material gets in your eyes or on your skin during deployment, wash it away with clean water, and then consult a doctor.

2. Inspection Locations After a Collision

A: INSPECTION

Check for the following, and then replace with new parts if necessary.

- Center pillar lower garnish is discolored or cracked.
- Wire harness and/or connector is damaged.

FRONT SEAT BELT



SEAT BELT SYSTEM

3. Front Seat Belt


A: REMOVAL

1. OUTER BELT (FRONT)


- 1) Fold backrest all the way forward, and then move front seat all the way forward.
- 2) Turn ignition switch OFF, disconnect ground cable from battery, and wait for more than 20 seconds before starting work.
- 3) Remove center pillar lower trim. <Ref. to EI-42, REMOVAL, Lower Inner Trim.>
- 4) Remove webbing guide.

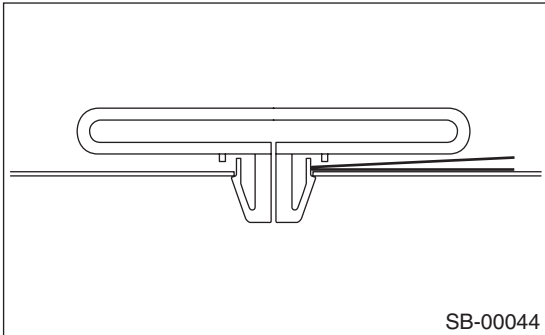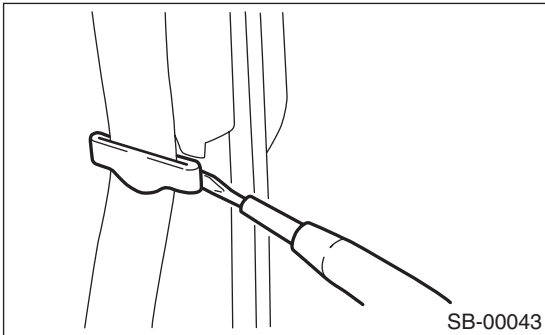

- 5) Remove anchor cover. Loosen shoulder anchor bolt, and then detach shoulder anchor from center pillar.

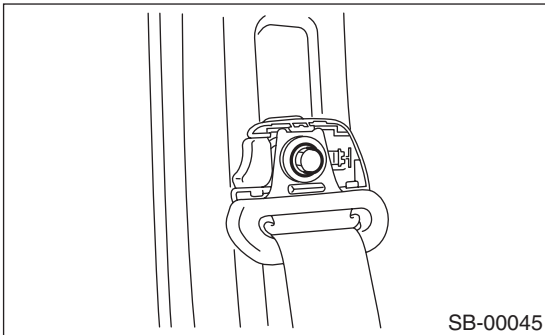

- 6) Turn over the floor mat to remove bolt.

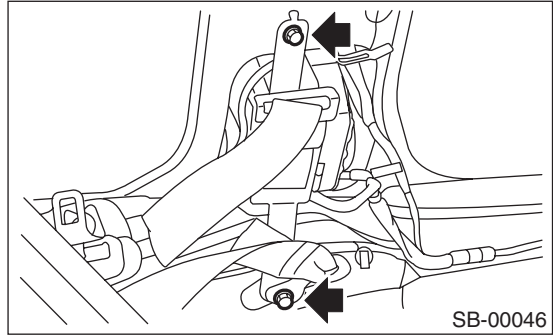


- 7) Disconnect yellow connector of pretensioner harness, and remove outer belt (front).

CAUTION:

- Do not drop or apply any impact to pretensioner.
- Pretensioner and bracket should be treated as an assembly. Do not attempt to disassemble it.

2. INNER BELT (FRONT)

- 1) Disconnect connector.
- 2) Remove anchor bolt, and then detach inner belt.

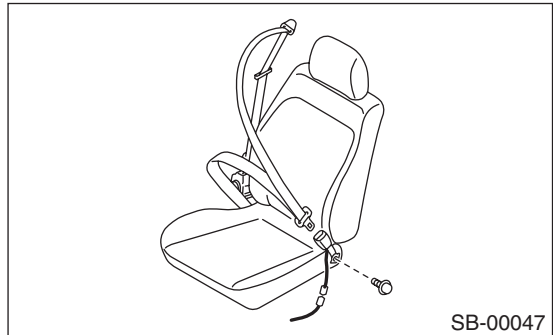

B: INSTALLATION**1. OUTER BELT (FRONT)**

Install in the reverse order of removal.

CAUTION:

- The parts on left and right are not identical. Before installation, make sure that the correct part is used.
- Be careful not to twist belts during installation.

2. INNER BELT (FRONT)

Install in the reverse order of removal.

Tightening torque:

Refer to COMPONENT in General Description, <Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>.

C: INSPECTION**1. OUTER BELT (FRONT)**

Check for the following, and replace with new parts if necessary.

- Pretensioner is cracked or deformed.
- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

2. INNER BELT (FRONT)

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

REAR SEAT BELT


SEAT BELT SYSTEM

4. Rear Seat Belt


A: REMOVAL

1. OUTER BELT

- 1) Remove rear pillar trim. <Ref. to EI-52, REMOVAL, Rear Pillar Trim.>
- 2) Remove lower anchor bolt.

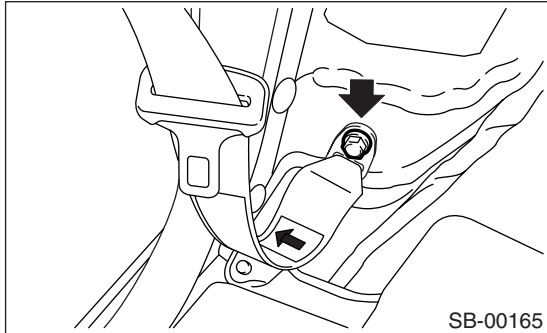


- 3) Remove webbing guide bolts, and then detach outer belt side.

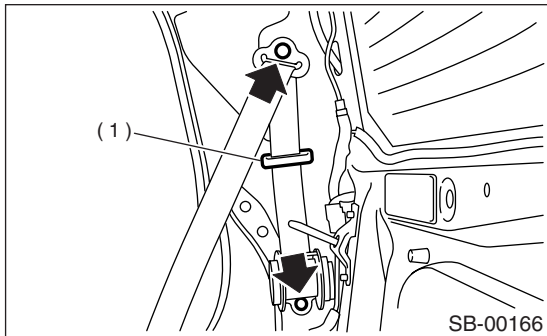

- (1) Webbing guide

2. INNER BELT


- 1) Pull up rear cushion.
- 2) Remove bolts, and then detach inner belt.

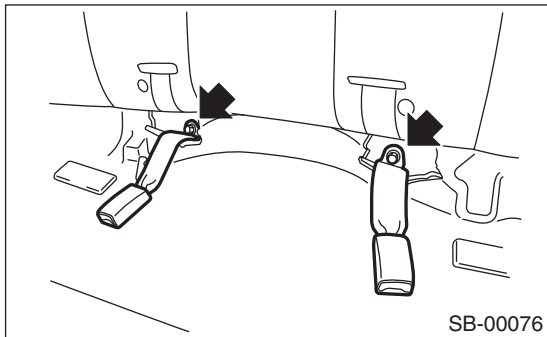

B: INSTALLATION


1. OUTER BELT

- 1) Install webbing guide and bolts.

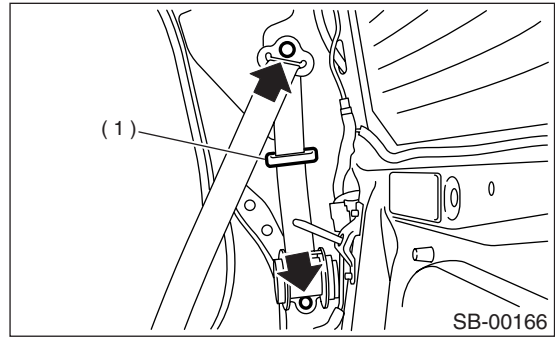


- (1) Webbing guide

- 2) Twist seat belt in the direction indicated by the arrow on the seat belt label.

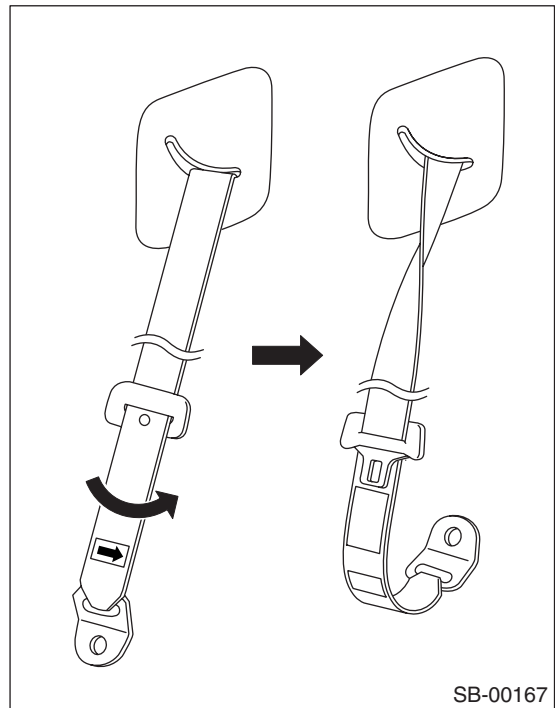

- 3) Install lower anchor bolt.

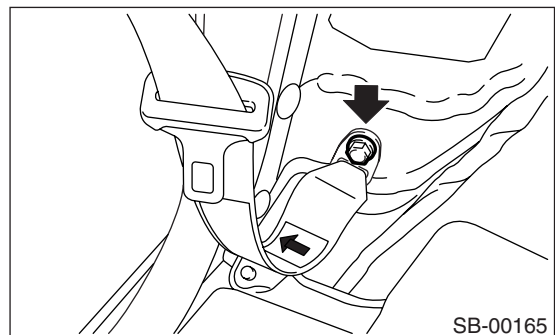

CAUTION:

After installation, make sure that seat belts are smoothly extended and wound.

2. INNER BELT

Install in the reverse order of removal.

CAUTION:

During installation, make sure that seat belts are not twisted.

C: INSPECTION

1. OUTER BELT

Check for the following, and replace with new parts if necessary.

- Outer belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

2. INNER BELT

Check for the following, and replace with new parts if necessary.

- Inner belt is deformed or damaged.
- Seat belt buckle is engaged improperly.

REAR SEAT BELT

SEAT BELT SYSTEM

MEMO: