


9. Parking Brake Cable

A: REPLACEMENT

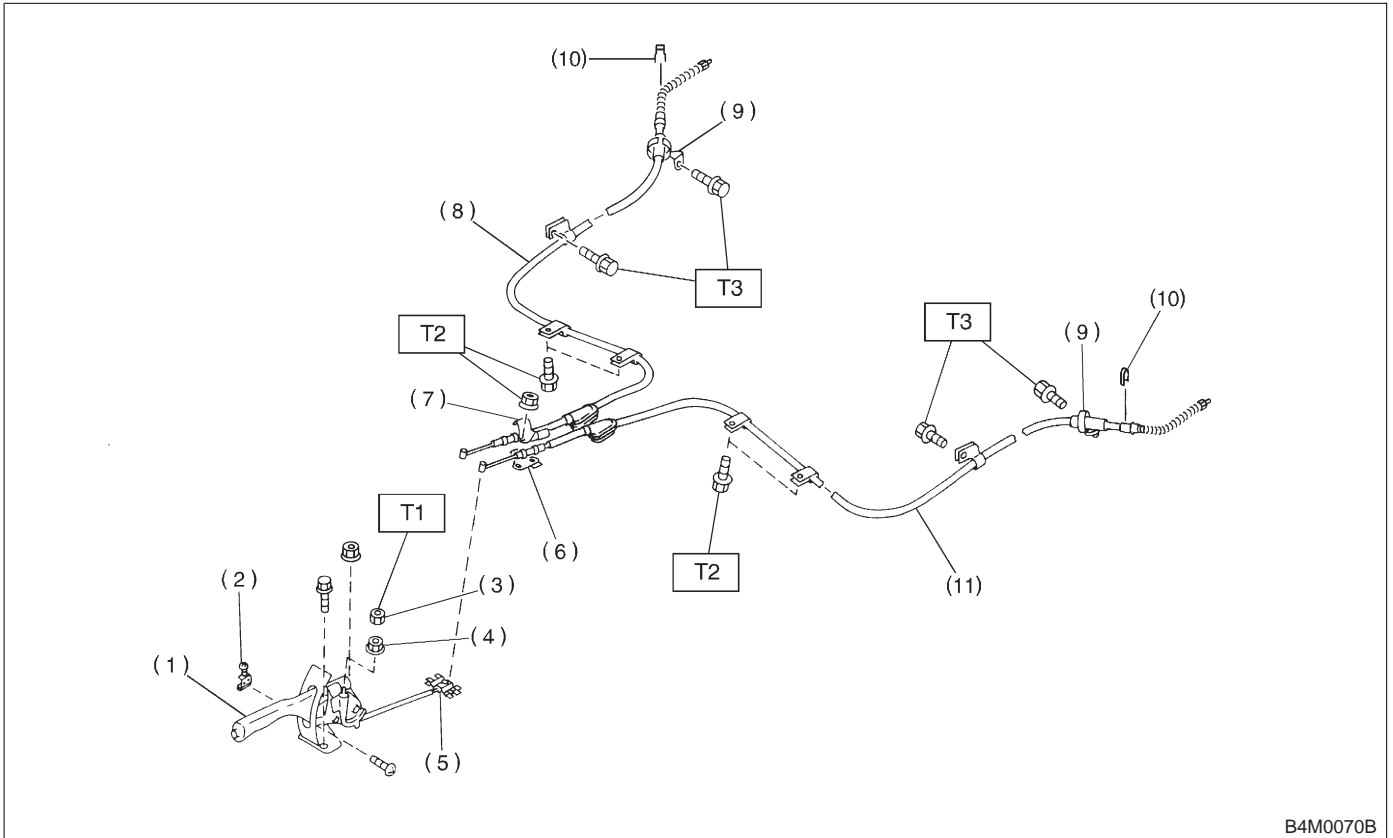

B4M0070B

- | | |
|--------------------------|---|
| (1) Parking brake lever | (7) Clamp |
| (2) Parking brake switch | (8) Parking brake cable RH |
| (3) Lock nut | (9) Cable guide |
| (4) Adjusting nut | (10) Clamp (Rear disc brake model only) |
| (5) Equalizer | (11) Parking brake cable LH |
| (6) Bracket | |

Tightening torque: N-m (kg-m, ft-lb)


T1: 5.9±1.5 (0.60±0.15, 4.3±1.1)

T2: 18±5 (1.8±0.5, 13.0±3.6)


T3: 32±10 (3.3±1.0, 24±7)

- 1) Lift-up vehicle.
- 2) Remove rear tires and wheels.
- 3) Remove rear cushion.
- 4) Remove console box from front floor.
- 5) Loosen parking cable adjusting nut and console bracket.
- 6) Remove parking brake lever.

- 7) Unbend parking brake lever pawls and remove cable.

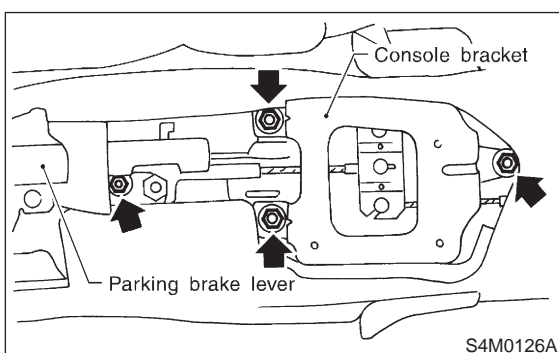


S4M0126A

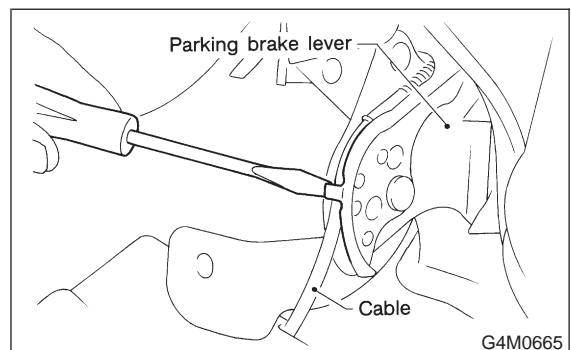


G4M0665


- 8) Roll up floor mat and remove clamps.

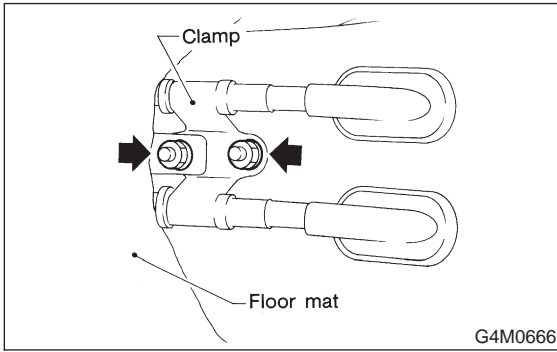

- 9) Remove equalizer cover.
10) Remove inner cable end from equalizer.

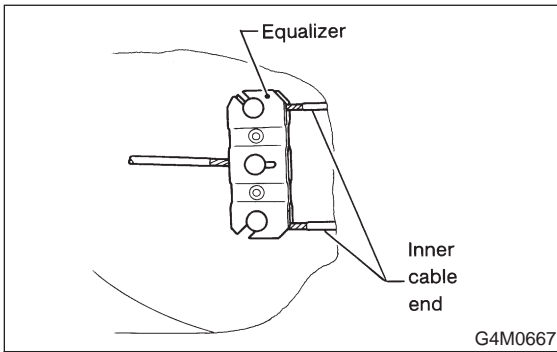

- 11) Pull out parking brake cable from rear brake.
<Ref. to 4-4 [W4A0].>
12) Pull out clamp from rear brake.
13) Remove bolt and bracket from trailing link bracket.
14) Remove bolt and clamp from rear floor.

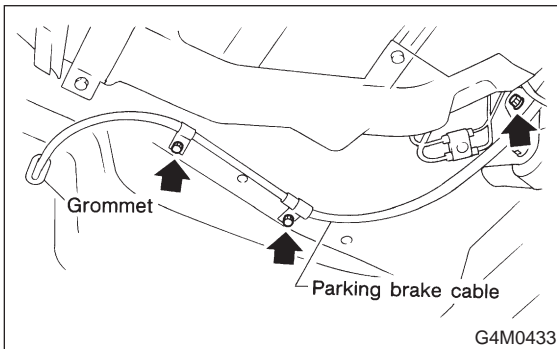

- 15) Detach grommet from rear floor.
16) Remove cable assembly from cabin by forcibly pulling it backward.
17) Detach parking brake cable from cable guide at rear trailing link.
18) Install (new) parking brake assembly in the reverse order of removal.

NOTE:

- Be sure to pass cable through cable guide inside the tunnel.
- Be sure to adjust the lever stroke. <Ref. to 4-4 [W8B1].>

10. Air Bleeding

A: GENERAL RULES FOR EFFECTIVE BLEEDING

- 1) Start with the brakes (wheels) connecting to the secondary chamber of the master cylinder.
- 2) The time interval between two brake pedal operations (from the time when the pedal is released to the time when it is depressed another time) shall be approximately 3 seconds.
- 3) The air bleeder on each brake shall be released for 1 to 2 seconds.

B: BLEEDING PROCEDURE

CAUTION:

- The FMVSS No. 116, fresh DOT3 or 4 brake fluid must be used.
- Cover bleeder with waste cloth, when loosening it, to prevent brake fluid from being splashed over surrounding parts.
- Avoid mixing different brands of brake fluid to prevent degrading the quality of the fluid.
- Be careful not to allow dirt or dust to get into the reservoir tank.

NOTE:

- During bleeding operation, keep the brake reserve tank filled with brake fluid to eliminate entry of air.
 - Brake pedal operating must be very slow.
 - For convenience and safety, it is advisable to have two men working.
- 1) Make sure that there is no leak from joints and connections of the brake system.