



OIL FLOW CONTROL SOLENOID VALVE RH

B137

1	2	3	4	5	6	7			
8	9	10	11	12	13	14	15	16	17
18	19	20	21	22	23	24	25		
26	27	28	29	30	31				

F60 LHD

B22 RHD

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20

E38

1	2
---	---

F45

1	2	3	4	5	6	7	8	9			
10	11	12	13	14	15	16	17	18	19	20	21
22	23	24	25	26	27	28	29	30	31	32	