


Electrical Component Location


OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

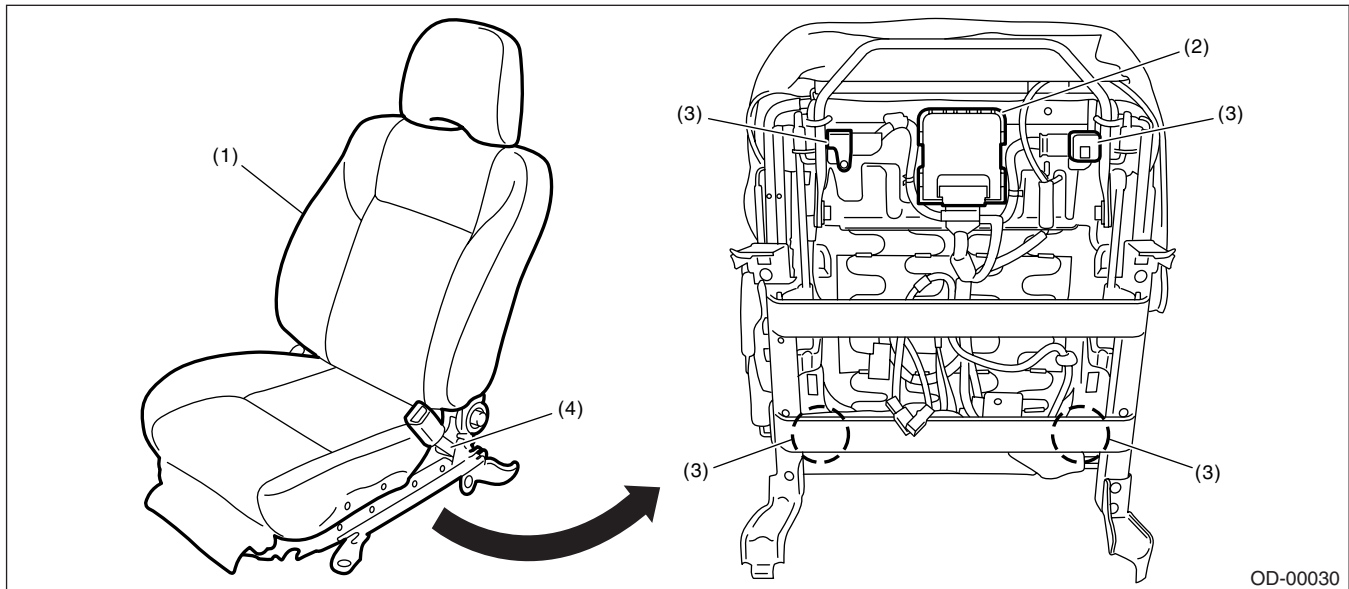

- (1) Passenger's seat (3) Load cell sensor (4) Buckle switch (Passenger's seat)
(2) Occupant detection control module

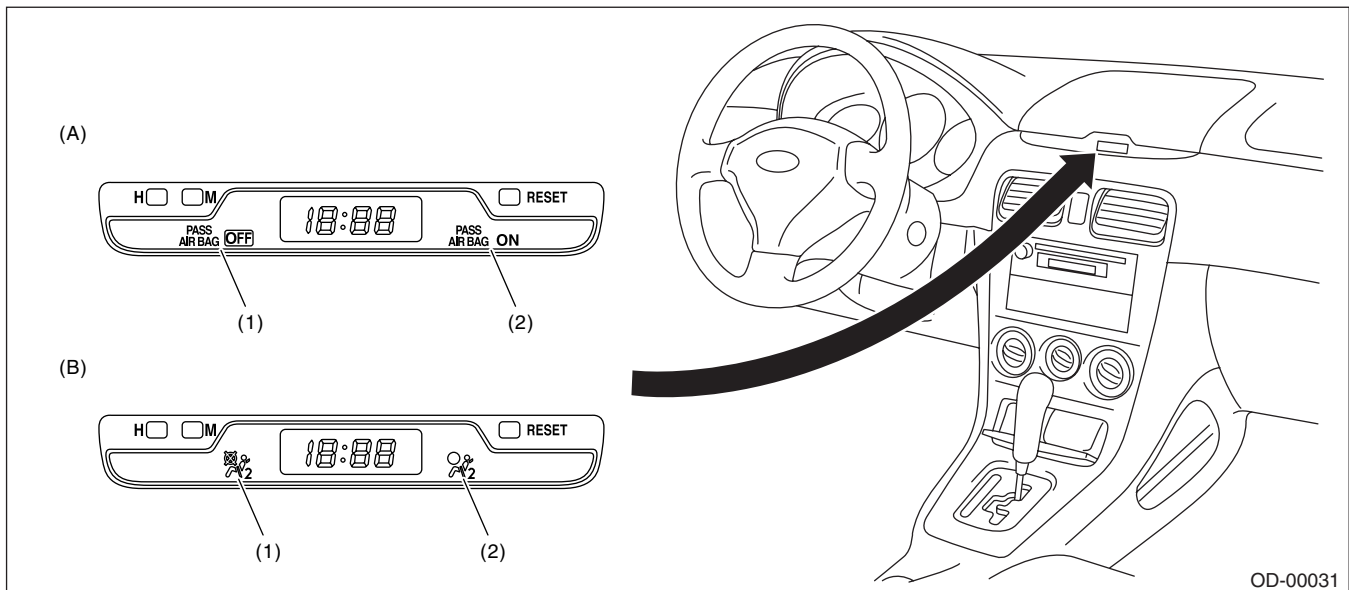

- (1) Passenger's airbag OFF indicator light (2) Passenger's airbag ON indicator light (A) For U.S. model
(B) For Canada model