



## 7. Front Door Latch and Door Lock Actuator Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-33, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-29, REMOVAL, Front Inner Remote.>
- 5) Remove the two bolts and one nut to remove the guide rail.

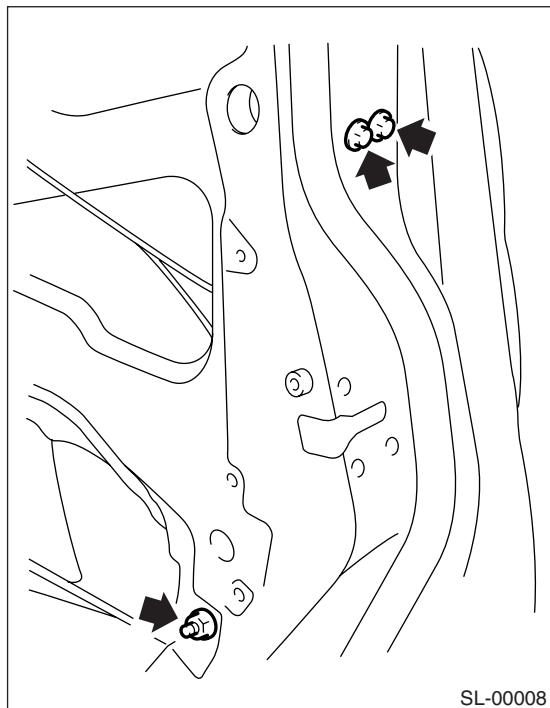

- 6) Remove the three screws and one bolt.

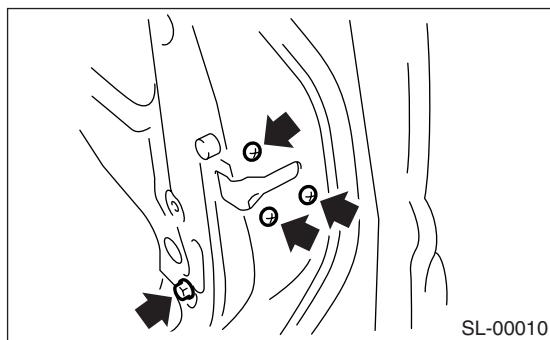

- 7) Remove the front door latch assembly, and disconnect the connector.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

*Door latch mounting screw*

$6.5 \text{ N}\cdot\text{m} (0.66 \text{ kgf-m}, 4.8 \text{ ft-lb})$

*Door lock actuator mounting bolt*

$7.5 \text{ N}\cdot\text{m} (0.76 \text{ kgf-m}, 5.5 \text{ ft-lb})$

#### NOTE:

Make sure the lock works properly after installation.

### C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable move smoothly.