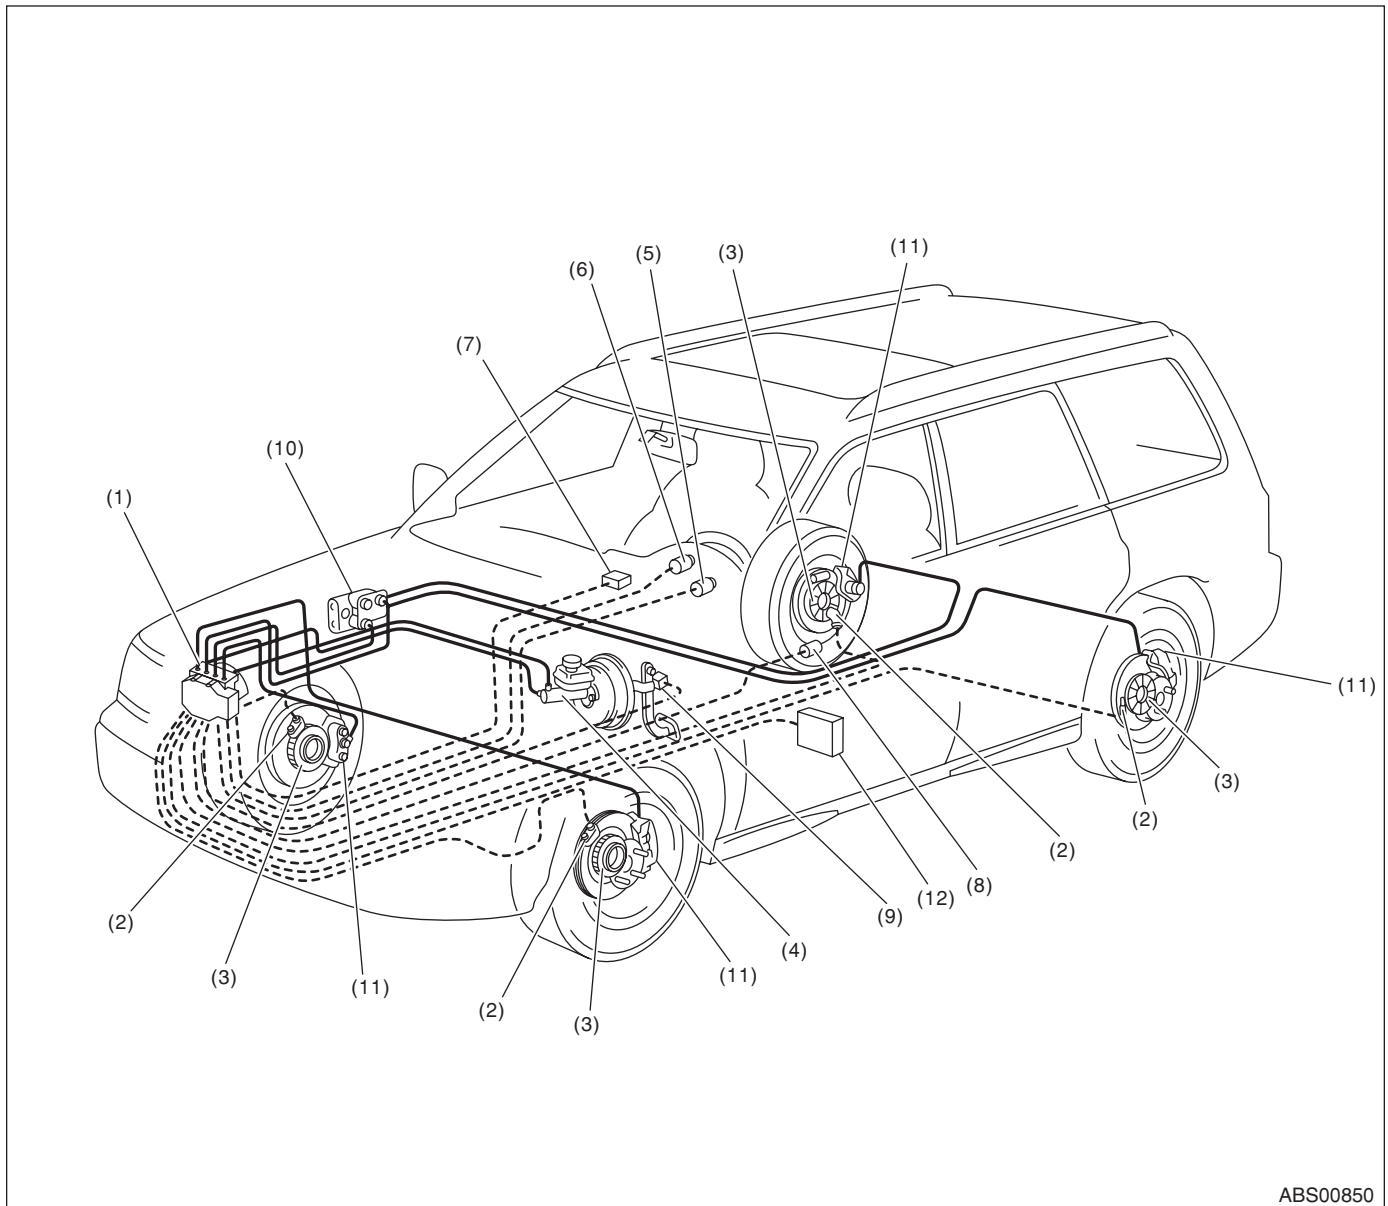


Electrical Component Location

ABS (DIAGNOSTICS)

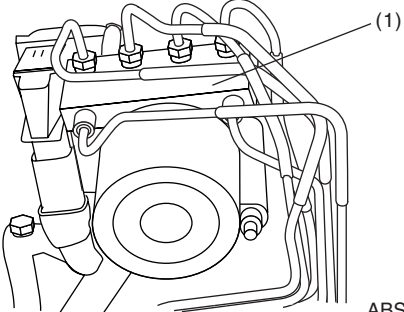
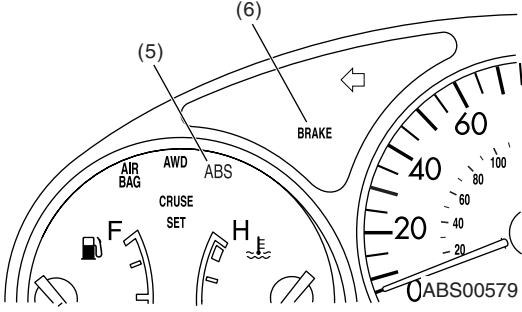
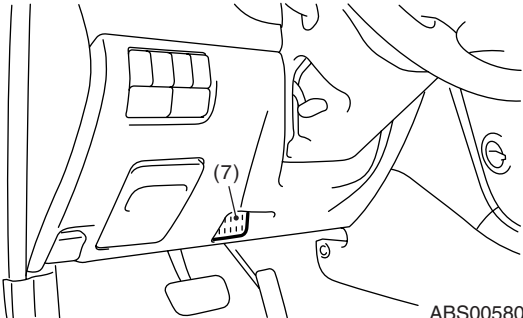
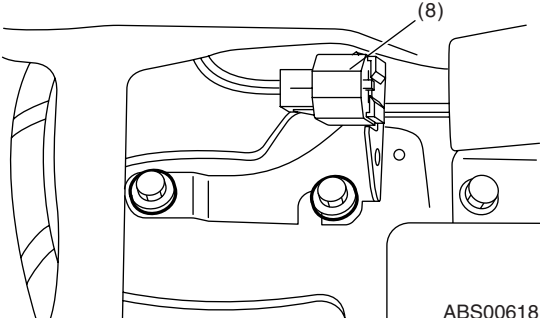
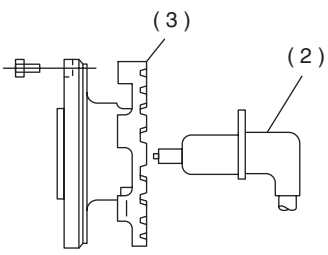
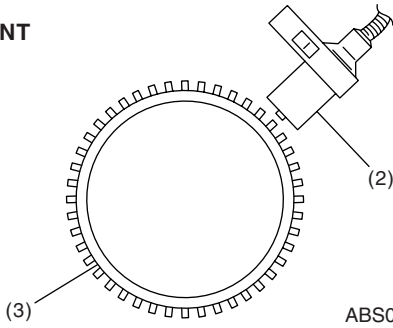
4. Electrical Component Location

A: LOCATION



ABS00850

- | | | |
|---|---|--|
| (1) ABS control module and hydraulic control unit (ABSCM&H/U) | (5) ABS warning light | (9) Stop light switch |
| (2) ABS wheel speed sensor | (6) Brake warning light (EBD warning light) | (10) Proportioning valve (Model without EBD) |
| (3) Tone wheel | (7) Data link connector | (11) Caliper body |
| (4) Master cylinder | (8) G sensor | (12) Transmission control module (AT model only) |

 ABS00551	 ABS00579
 ABS00580	 ABS00618
REAR  ABS00019	FRONT  ABS00028