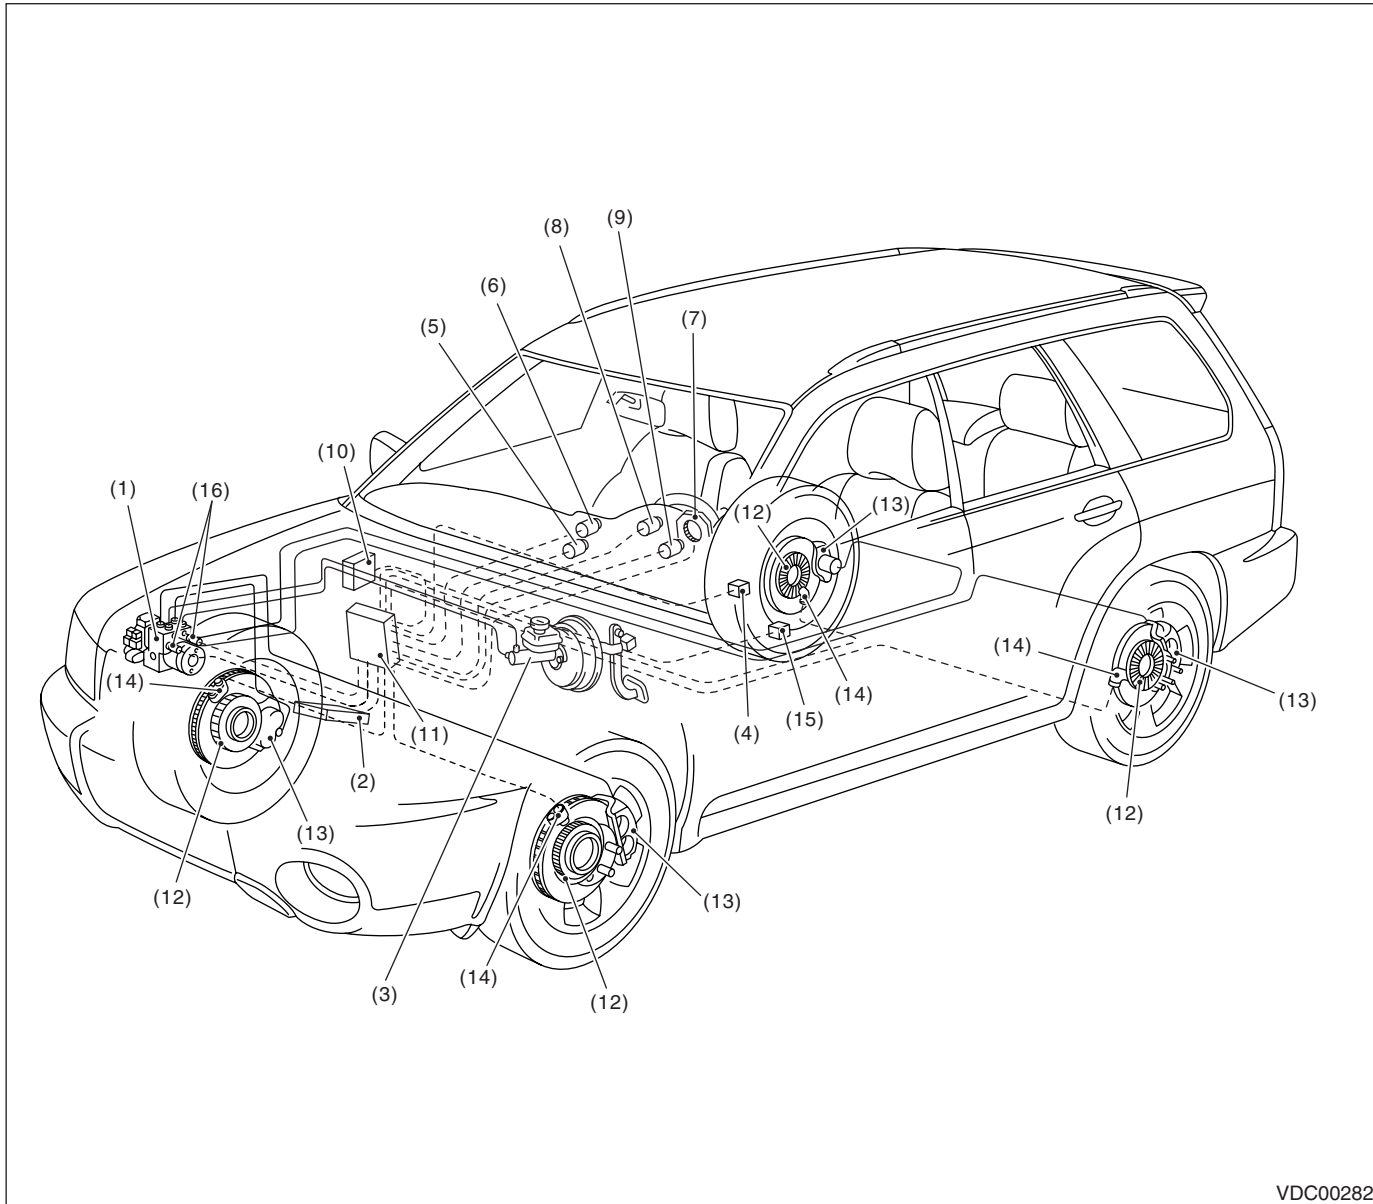


# Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## 4. Electrical Component Location

### A: LOCATION

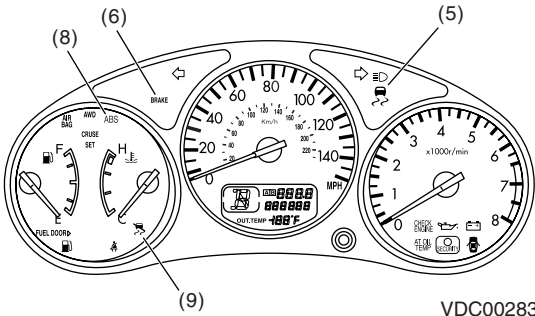
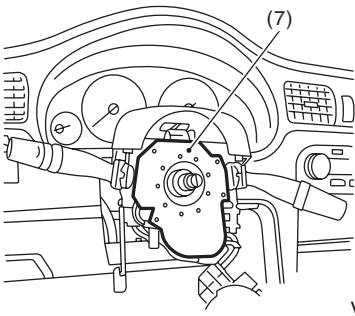
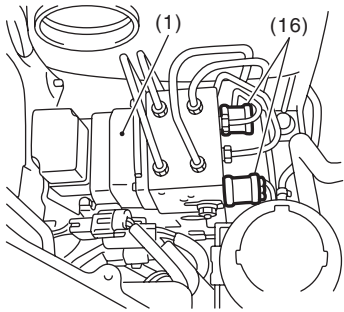
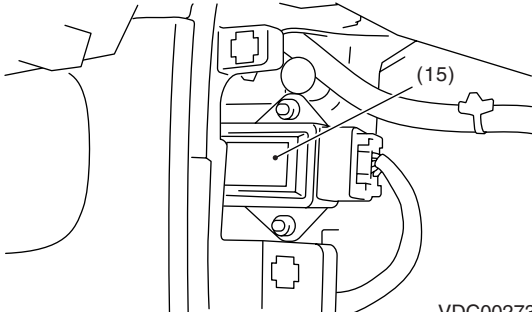
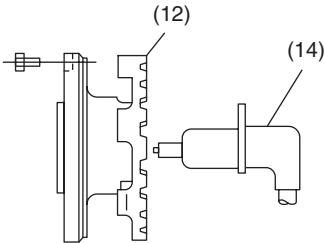
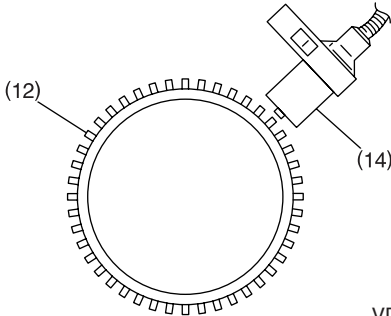


VDC00282

- |                                             |                                               |                                  |
|---------------------------------------------|-----------------------------------------------|----------------------------------|
| (1) VDC hydraulic control module (VDCH/M)   | (7) Steering angle sensor                     | (11) VDC control module (VDCCM)  |
| (2) Engine control module (ECM)             | (8) ABS warning light                         | (12) Tone wheel                  |
| (3) Master cylinder                         | (9) VDC warning light/VDC OFF indicator light | (13) Wheel cylinder              |
| (4) VDC OFF switch                          | (10) Transmission control module (TCM)        | (14) ABS wheel speed sensor      |
| (5) VDC indicator light                     |                                               | (15) Yaw rate & lateral G sensor |
| (6) Brake warning light (EBD warning light) |                                               | (16) Pressure sensor             |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

|                                                                                                                |                                                                                                     |
|----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
|  <p>VDC00283</p>              |  <p>VDC00009</p>  |
|  <p>VDC00004</p>              |  <p>VDC00273</p>  |
| <p>REAR</p>  <p>VDC00167</p> |  <p>VDC00008</p> |