

### 10. Front Tone Wheel

#### A: NOTE

The front tone wheel is built into the front drive shaft. For removal, installation and inspection, refer to the "DS" section.

<Ref. to DS-30, Front Drive Shaft.>