


12.VDC OFF Switch


A: REMOVAL

1) Disconnect the ground cable from battery.

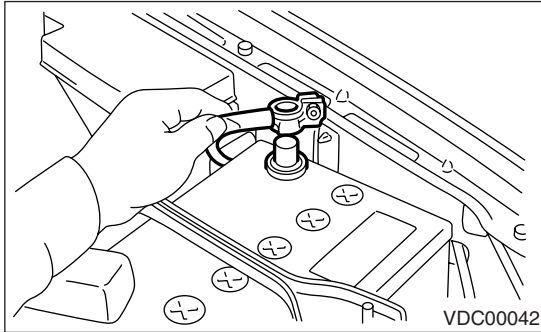

2) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>


3) Disconnect the VDC OFF switch connector, push outside, and press the VDC OFF switch.

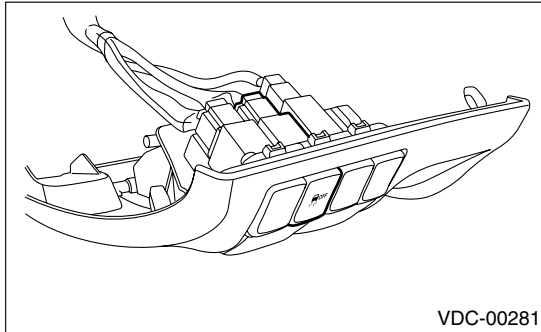

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

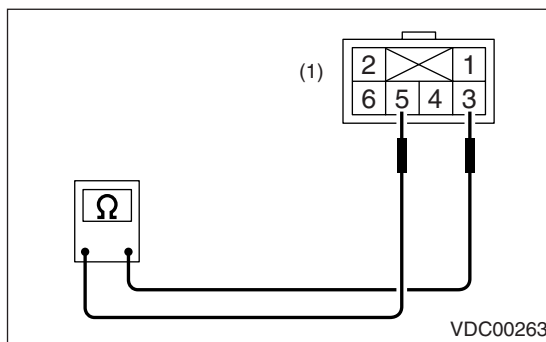

(1) VDC OFF switch side

Inspect the resistance between VDC OFF switch terminals.

Switch position	Tester connection	Standard
OFF	3 — 5	1 M Ω or more
ON	3 — 5	Less than 1 Ω

If NG, replace the VDC OFF switch.

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	8
4. Electrical Component Location	10
5. Control Module I/O Signal	12
6. VDCCM Connector Cover	18
7. Subaru Select Monitor	19
8. Read Diagnostic Trouble Code (DTC)	23
9. Inspection Mode	24
10. Clear Memory Mode	25
11. Warning Light Illumination Pattern	26
12. List of Diagnostic Trouble Code (DTC)	28
13. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	32
14. General Diagnostic Table	129