


5. Crankshaft Position Sensor


A: REMOVAL

1) Disconnect the ground cable from battery.

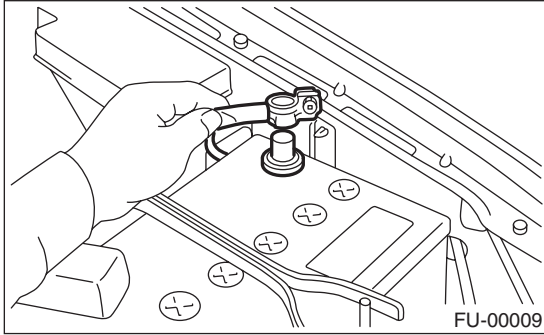


2) Remove the generator. <Ref. to SC(H4SO)-13, REMOVAL, Generator.>

3) Remove the bolt which installs crankshaft position sensor to cylinder block.

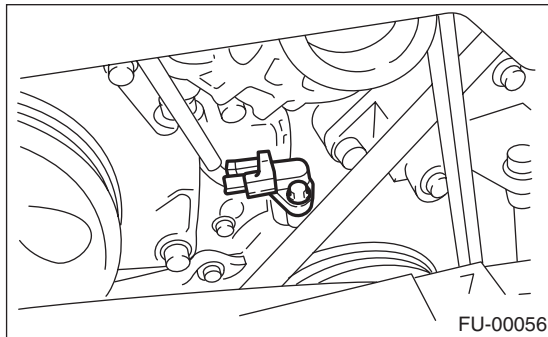

4) Remove the crankshaft position sensor, and then disconnect the connector from it.

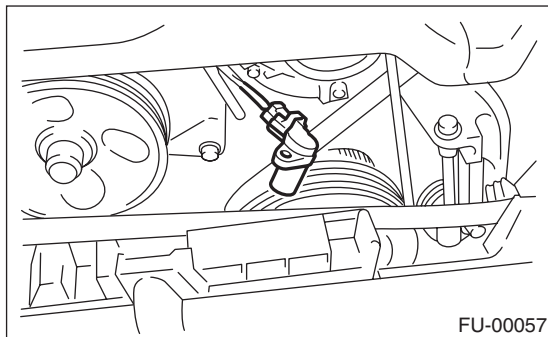

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

T: 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

