


Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


5. Purge Control Solenoid Valve

A: REMOVAL

- 1) Disconnect the ground cable from battery.

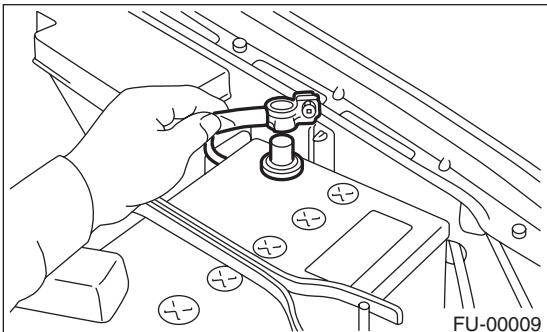

- 2) Disconnect the connector and hoses from purge control solenoid valve.
- 3) Loosen the bolt and remove the purge control solenoid valve from the intake manifold.

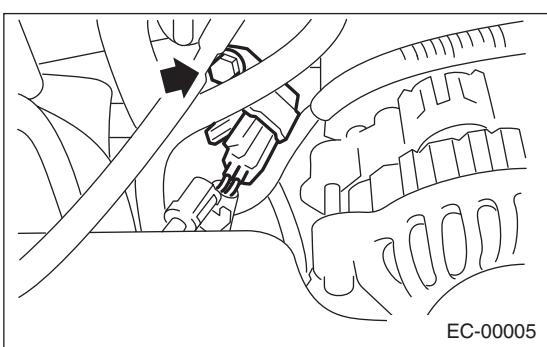


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

19 N·m (1.9 kgf·m, 13.7 ft-lb)

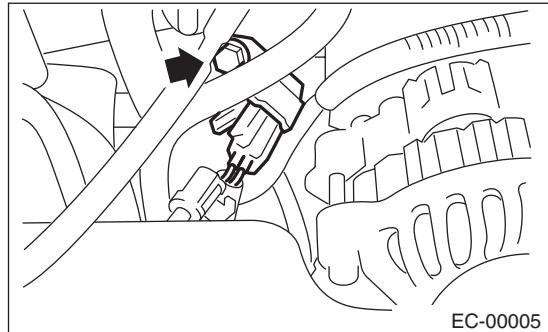

NOTE:

Connect the evaporation hose as shown in the figure.

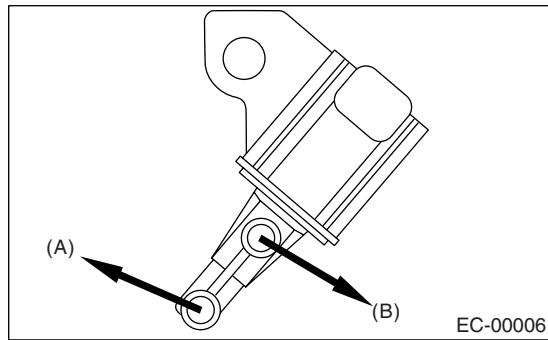

(A) To purge valve

(B) To intake manifold

C: INSPECTION

Make sure the hoses are not cracked or loose.