



## 8. Mass Air Flow and Intake Air Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

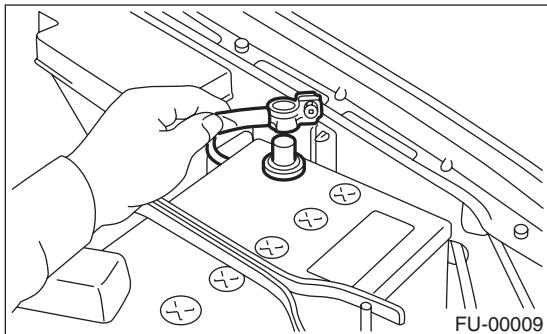

- 2) Disconnect the connector from mass air flow and intake air temperature sensor.
- 3) Remove the mass air flow and intake air temperature sensor.

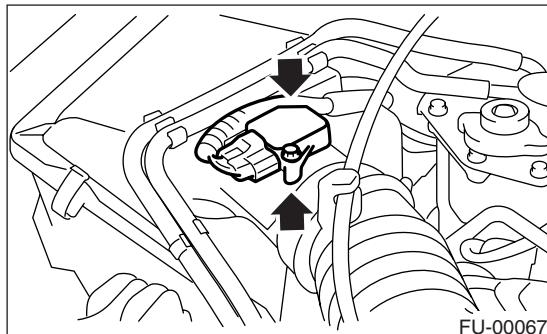

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**1.7 N·m (0.17 kgf·m, 1.3 ft-lb)**