


Manifold Absolute Pressure Sensor

FUEL INJECTION (FUEL SYSTEMS)


9. Manifold Absolute Pressure Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.

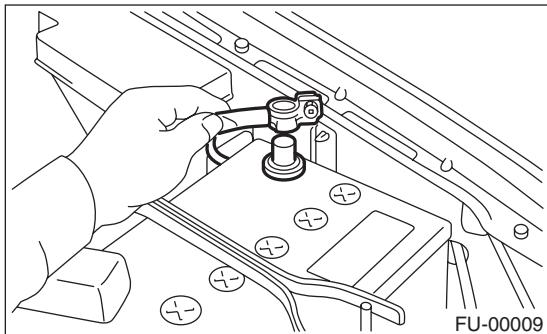

- 2) Remove the collector cover.
- 3) Disconnect the connector from manifold absolute pressure sensor.

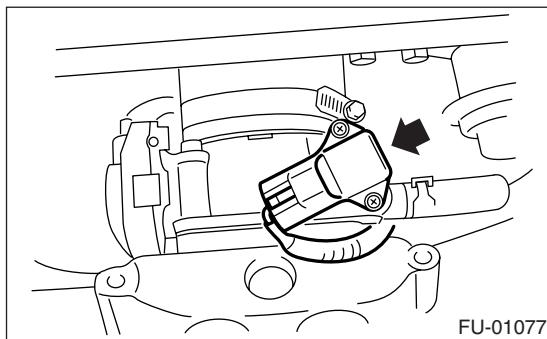

- 4) Remove the manifold absolute pressure sensor from throttle body.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Replace the O-ring of manifold pressure sensor with new one.

Tightening torque:

1.6 N·m (0.16 kgf·m, 1.2 ft-lb)