

## 23. Air Breather Hose


### A: REMOVAL

1) Remove the air intake chamber. (Non-turbo model)  
<Ref. to IN(H4SO)-6, REMOVAL, Air Intake Chamber.>

2) Remove the intercooler. (Turbo model)  
<Ref. to IN(H4DOTC)-10, REMOVAL, Intercooler.>


3) Disconnect the air breather hose.

- Non-turbo model

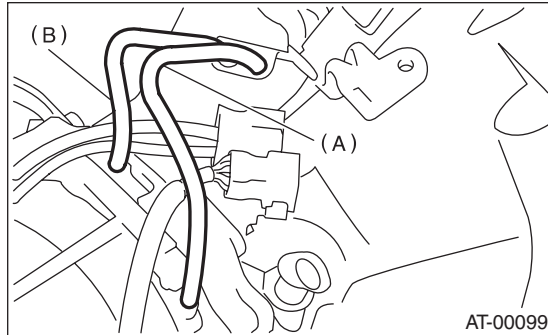

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

- Turbo model

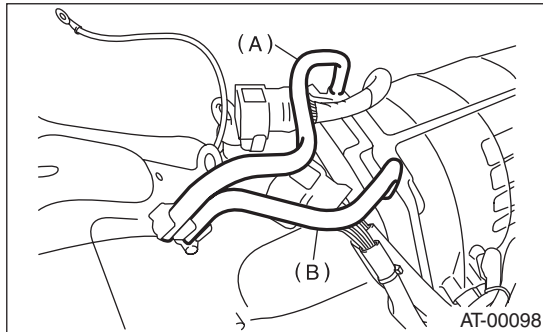


- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

### B: INSTALLATION


1) Install the air breather hose.

- Non-turbo model

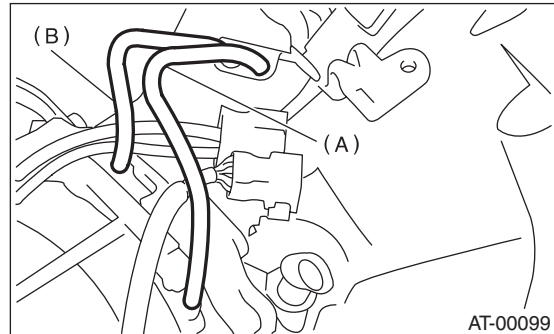

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

- Turbo model

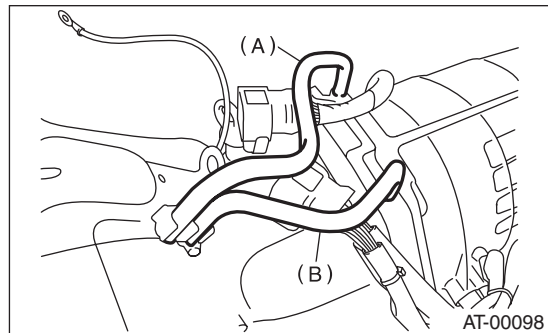

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

2) Install the air intake chamber. (Non-turbo model)  
<Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Chamber.>

3) Install the intercooler. (Turbo model)  
<Ref. to IN(H4DOTC)-10, INSTALLATION, Intercooler.>

### C: INSPECTION

Make sure the hose is not cracked or clogged.