


Electrical Component Location

AUTOMATIC TRANSMISSION (DIAGNOSTICS)


4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE

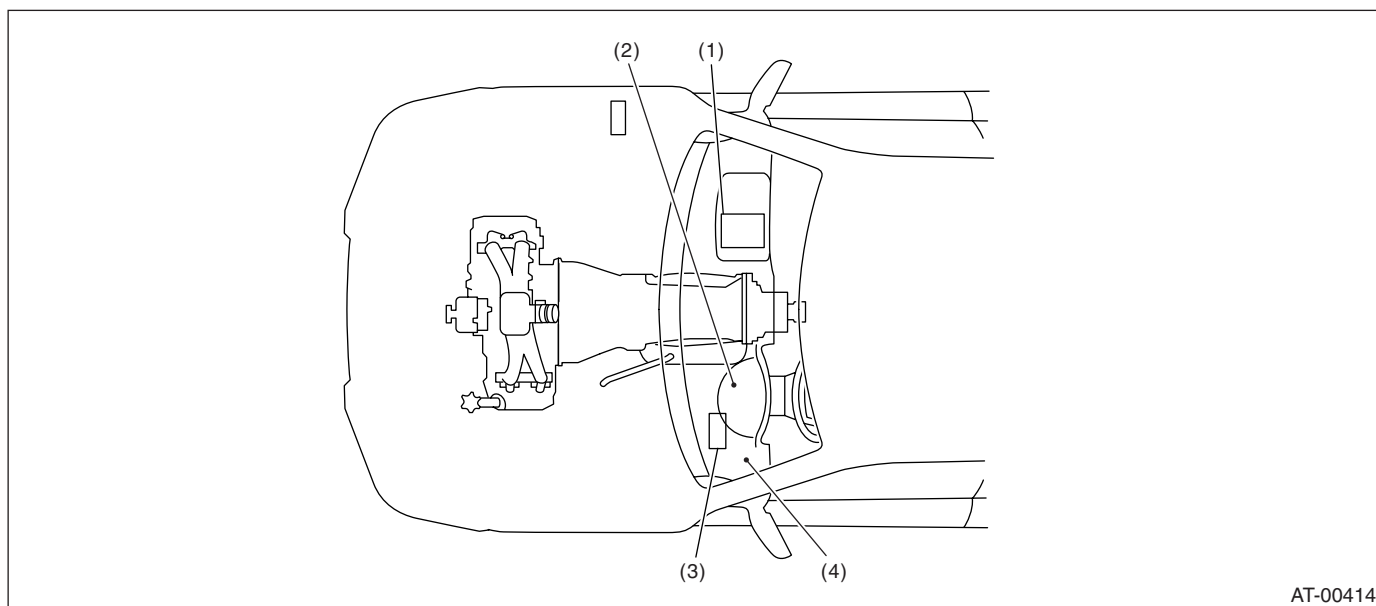


- | | | |
|---|---------------------------------------|-------------------------|
| (1) Engine control module (ECM) | (3) Transmission control module (TCM) | (4) Data link connector |
| (2) AT OIL TEMP warning light (AT diagnostic indicator light) | | |

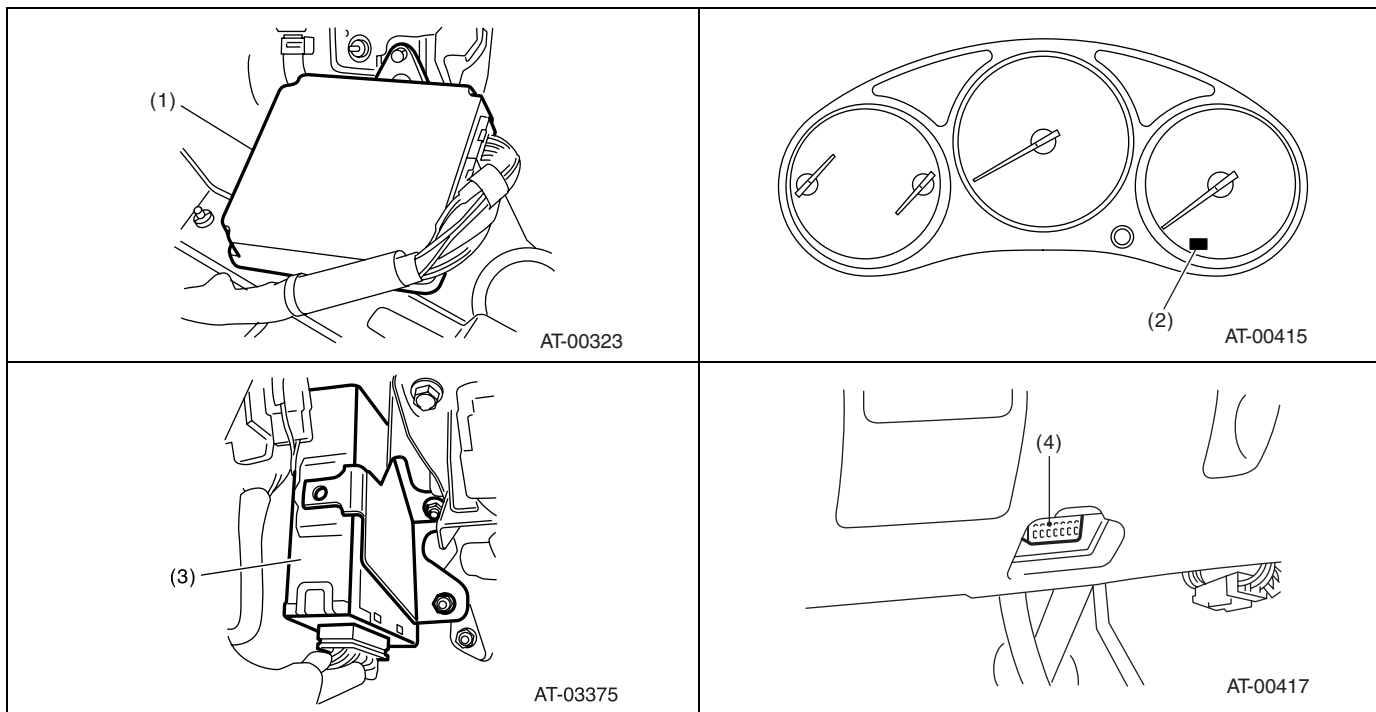

Electrical Component Location

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

2. SENSOR

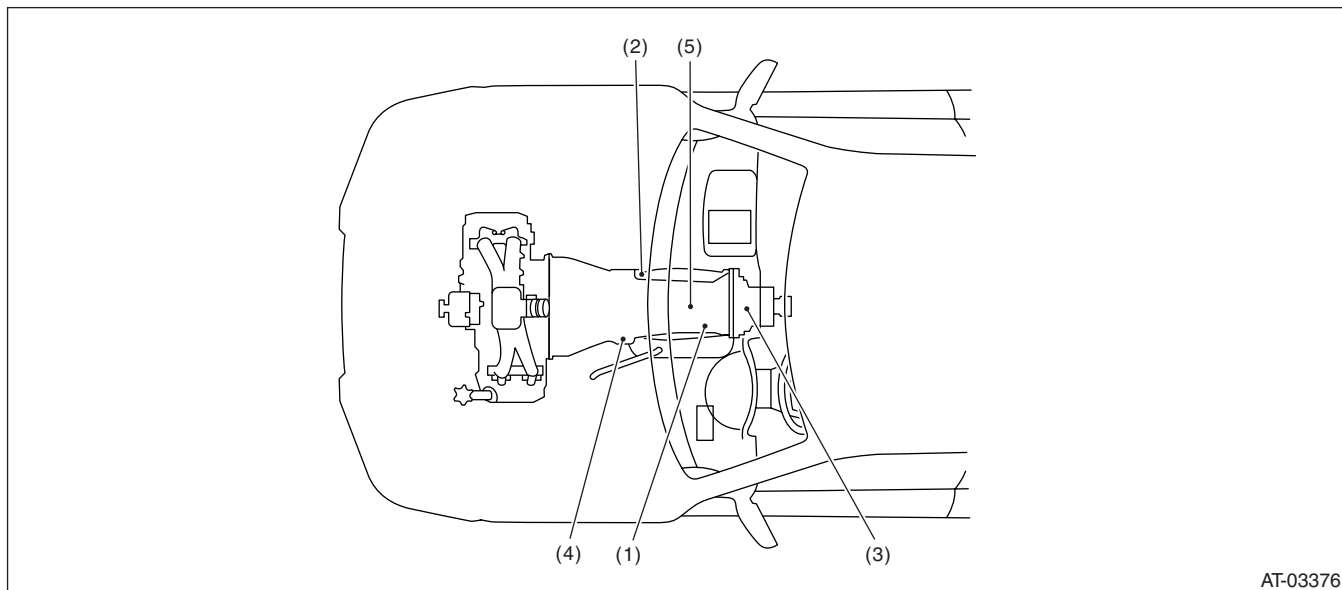

(1) Front vehicle speed sensor

(2) Inhibitor switch





(3) Rear vehicle speed sensor

(4) Torque converter turbine speed sensor

(5) ATF temperature sensor

Electrical Component Location


AUTOMATIC TRANSMISSION (DIAGNOSTICS)

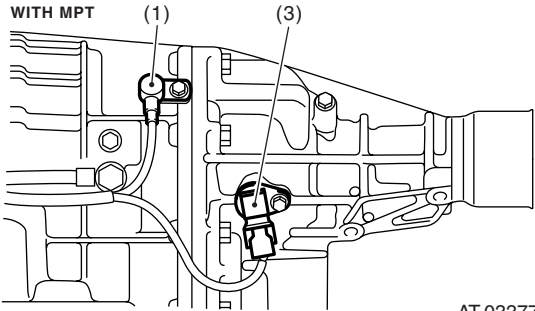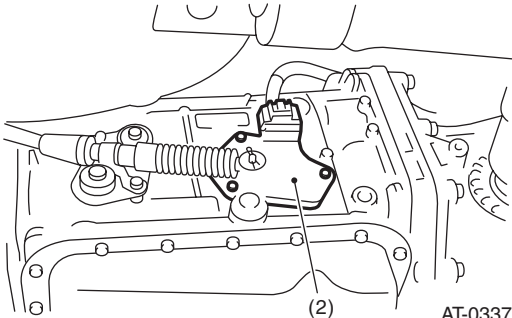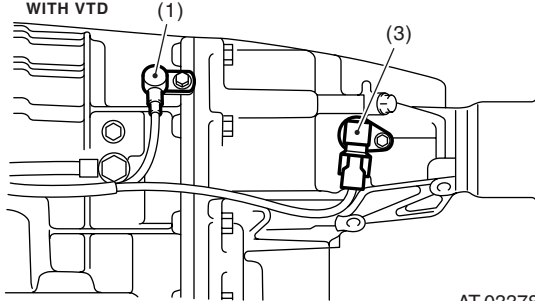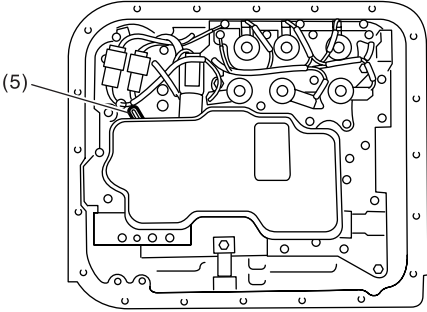MODEL WITH MPT  AT-03377	 AT-03379
MODEL WITH VTD  AT-03378	 AT-03380
 AT-03381	SUBARU.

Electrical Component Location

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

3. SOLENOID

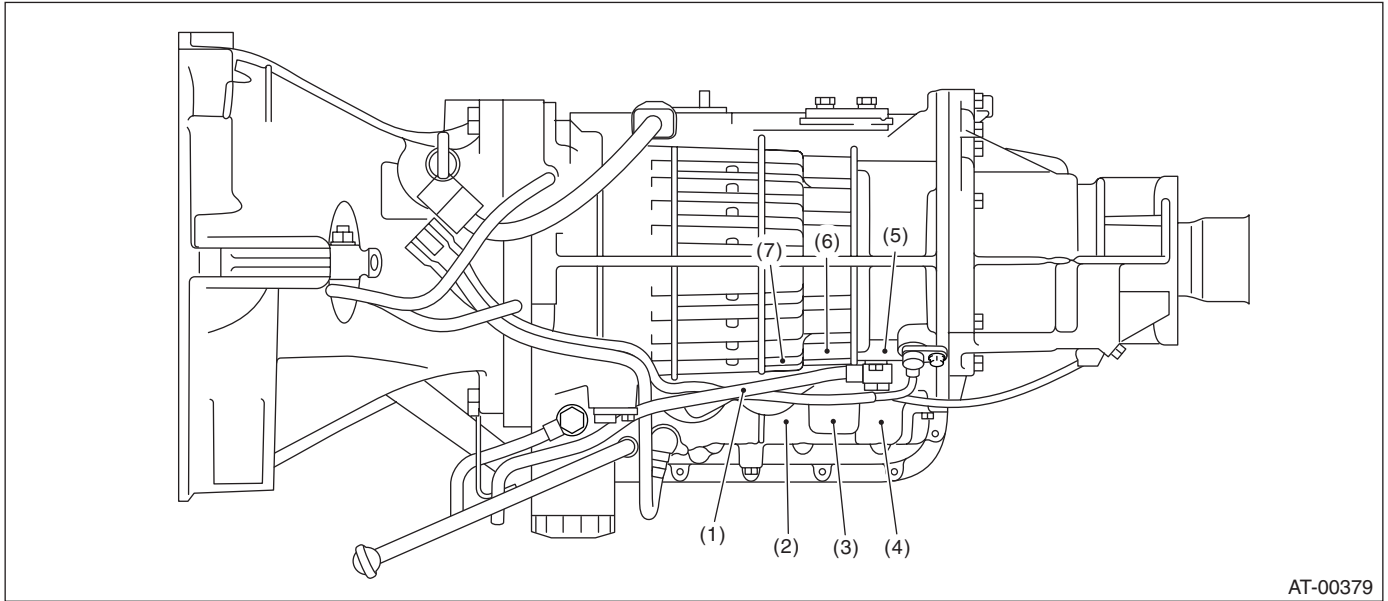

- | | | |
|-----------------------------------|---------------------------------|----------------------------|
| (1) Line pressure linear solenoid | (4) Low & reverse duty solenoid | (6) Transfer duty solenoid |
| (2) High clutch duty solenoid | (5) Low clutch duty solenoid | (7) Lock-up duty solenoid |
| (3) 2-4 brake duty solenoid | | |

