


Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


17. Relay and Fuse

A: LOCATION

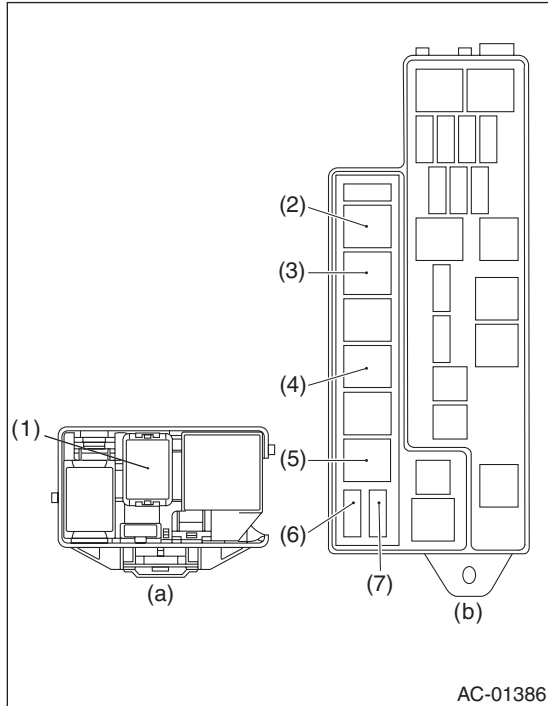

- (a) Relay holder (Turbo model)
- (b) Main fuse box
- (1) A/C relay (Turbo model)
- (2) Main fan relay
- (3) Sub fan relay
- (4) A/C relay (Non-turbo model)
- (5) Fan mode relay
- (6) Main fan 30A fuse
- (7) Sub fan 30A fuse

B: INSPECTION

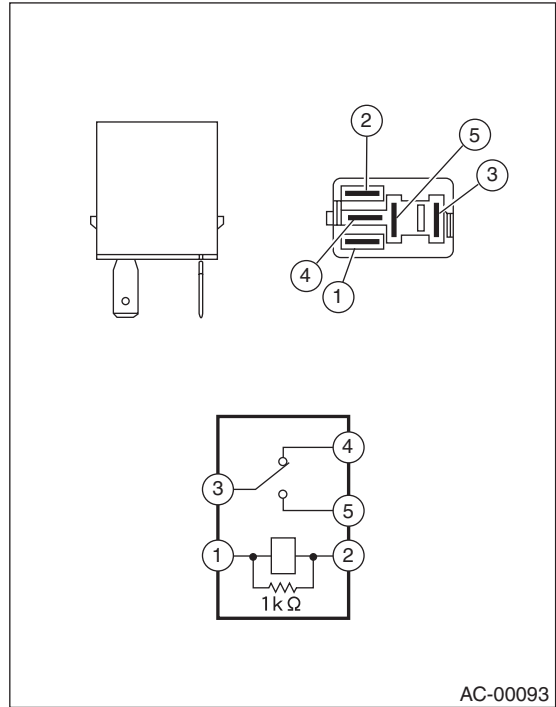

- (1) — (2): Continuity exists.
 - (3) — (4): Continuity exists.
 - (3) — (5): Continuity does not exist.
- While applying battery voltage to the terminal between (1) and (2), check continuity between (3) and (5).
If no continuity exists, replace the relay with a new part.