

Inspection Mode

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

9. Inspection Mode

A: OPERATION

Reproduce the malfunction occurrence condition as much as possible.

Drive the vehicle for ten minutes or more.

NOTE:

While driving normally, check that the vehicle does not veer to the left or right from the straight-ahead direction.