


10. Rear Wiper Arm


A: REMOVAL

- 1) Pull up the cover - rear wiper arm.
- 2) Remove the nut, and remove the arm assembly - rear wiper.

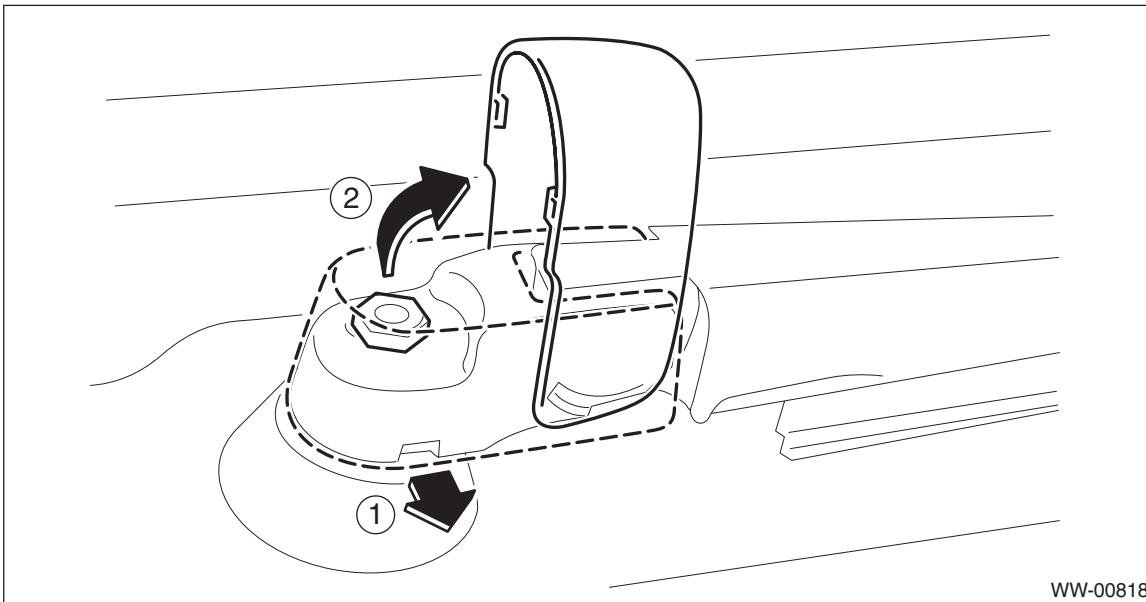

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade assembly - rear wiper with the marking on the glass, and then tighten the nut to the specified torque.

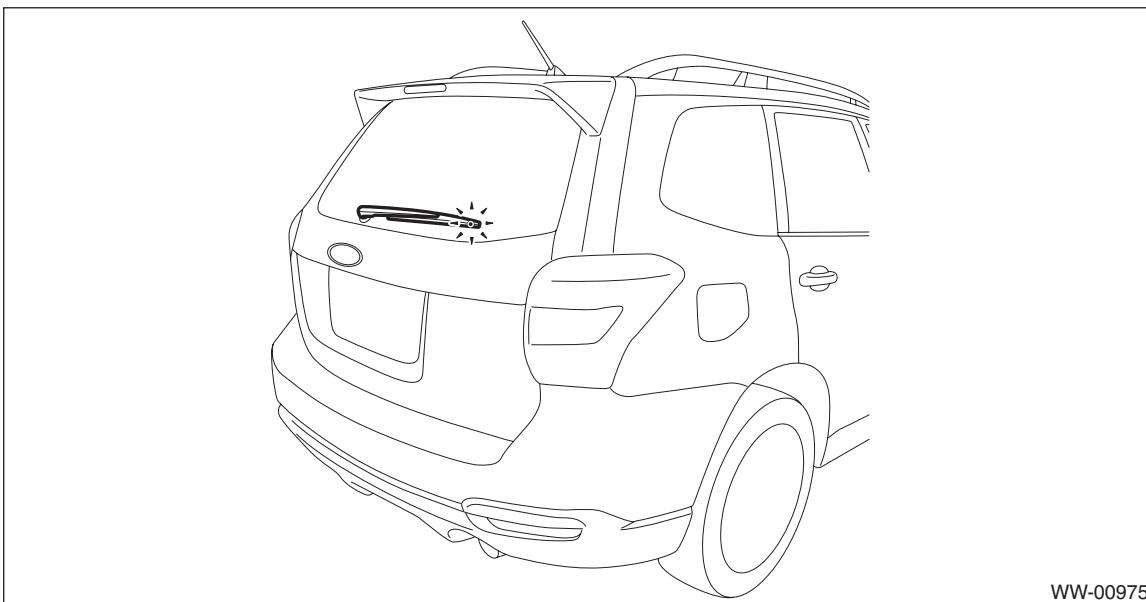

Tightening torque:

8 N·m (0.82 kgf·m, 5.9 ft-lb)


- 4) Operate the wiper to check whether the wiper blade aligns with the point mark. If not, perform installation over again.

Rear Wiper Arm

WIPER AND WASHER SYSTEMS

C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade assembly - rear wipe with the marking on the glass.

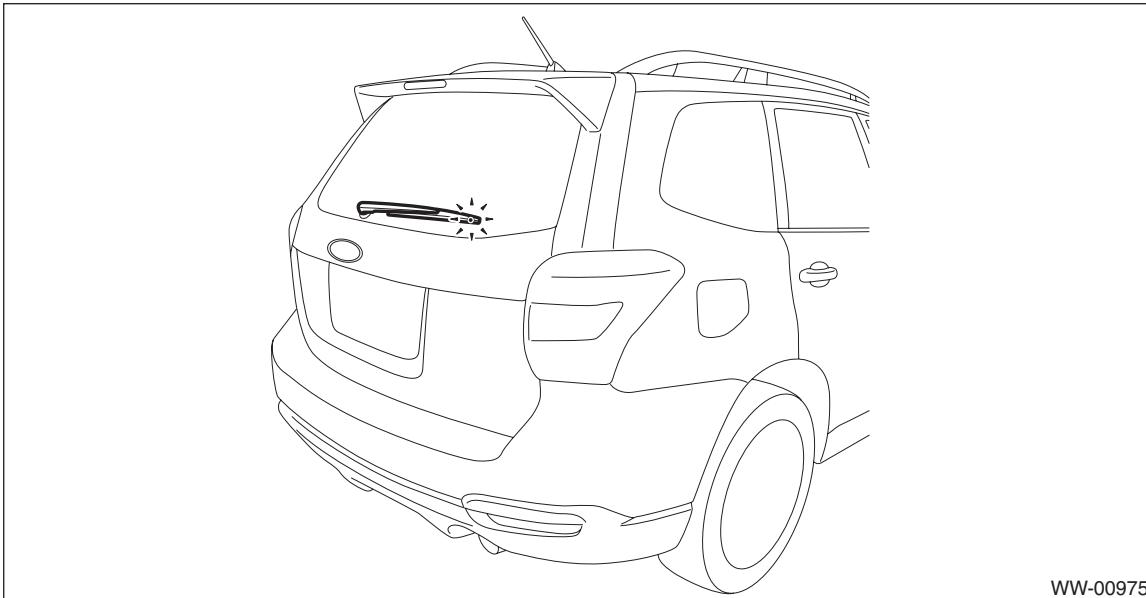

- 3) If the wiper blade is not aligned with the point mark, perform the removal of the rear wiper to align with the marking. <Ref. to WW-39, REMOVAL, Rear Wiper Arm.>