

**SUBARU**

## GENUINE PARTS INSTALLATION INSTRUCTIONS


PART NUMBER: H001SFL020

DESCRIPTION: RES FOB TRANSCEIVER  
REPLACEMENT KIT

### 1 KIT CONTENTS



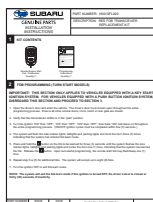

Remote Engine Start  
Fob / Transceiver  
Quantity=1



Programming  
Instructions  
Quantity=1

### 2 FOB PROGRAMMING (TURN START MODELS)

**IMPORTANT! THIS SECTION ONLY APPLIES TO VEHICLES EQUIPPED WITH A KEY START IGNITION SYSTEM. FOR VEHICLES EQUIPPED WITH A PUSH BUTTON IGNITION SYSTEM, DISREGARD THIS SECTION AND PROCEED TO SECTION 3.**

1. Open the driver's door and enter the vehicle. The driver's door must remain open throughout the entire programming process. Ensure all other vehicle doors, trunk, hatch or rear gate are closed.
2. Verify that the transmission shifter is in the "park" position.
3. Turn the ignition "ON" then "OFF", "ON" then "OFF", "ON" then "OFF", then back "ON" and leave on throughout the entire programming process. (ON/OFF ignition cycles must be completed within five (5) seconds.)
4. The system will flash the side marker lights, taillights and parking lights and honk the horn three (3) times indicating that the system has entered fob learn mode.
5. Press and hold the  button on the fob to be learned for three (3) seconds until the system flashes the side marker lights, taillights and parking lights and honks the horn one (1) time, indicating that the system has learned the fob. Release the  button. Upon successful programming, the remote start fob may flash/beep one (1) time.
6. Repeat step five (5) for additional fobs. The system will accept up to eight (8) fobs.
7. Turn the ignition OFF to exit fob learn mode.

**NOTE: The system will exit the fob learn mode if the ignition is turned OFF, the driver's door is closed or thirty (30) seconds of inactivity.**

PART NUMBER  
H001SFL020

ISSUE  
00



DATE  
13 Oct 2016

SUBARU OF AMERICA

1 OF 2

### 3 FOB PROGRAMMING (PUSH START MODELS)

**IMPORTANT! THIS SECTION ONLY APPLIES TO VEHICLES EQUIPPED WITH A PUSH BUTTON IGNITION SYSTEM. FOR VEHICLES EQUIPPED WITH A KEY START IGNITION SYSTEM, DISREGARD THIS SECTION AND RETURN TO SECTION 2.**

1. Open the driver's door and enter the vehicle. The driver's door must remain open throughout the entire programming process. Ensure all other vehicle doors, trunk, hatch or rear gate are closed.
2. Verify that the transmission shifter is in the "park" position.
3. Turn the ignition "ON" then "OFF", "ON" then "OFF", "ON" then "OFF", then back "ON" and leave on throughout the entire programming process. *(Turn ON the ignition by pressing the Engine Start/Stop button on the dashboard two (2) times with an Access Key inside the vehicle. Do not press the brake pedal or the engine will start.)* (ON/OFF ignition cycles must be completed within twenty (20) seconds.)
4. The system will flash the side marker lights, taillights and parking lights and honk the horn three (3) times indicating that the system has entered fob learn mode.
5. Press and hold the  button on the fob to be learned for three (3) seconds until the system flashes the side marker lights, taillights and parking lights and honks the horn one (1) time, indicating that the system has learned the fob. Release the  button. Upon successful programming, the remote start fob may flash/beep one (1) time.
6. Repeat step five (5) for additional fobs. The system will accept up to eight (8) fobs.
7. Turn the ignition OFF to exit fob learn mode.

**NOTE: The system will exit the fob learn mode if the ignition is turned OFF, the driver's door is closed or thirty (30) seconds of inactivity.**