


4. Passenger's Airbag Module


S802308

A: CAUTION S802308A03


- The airbag module must not be disassembled. The airbag module cannot be used again once inflated.

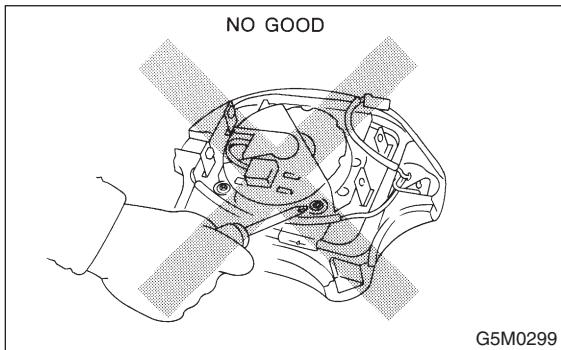


- When removing and installing the airbag module, the operator should stand, as much as possible, on the side of the airbag module.

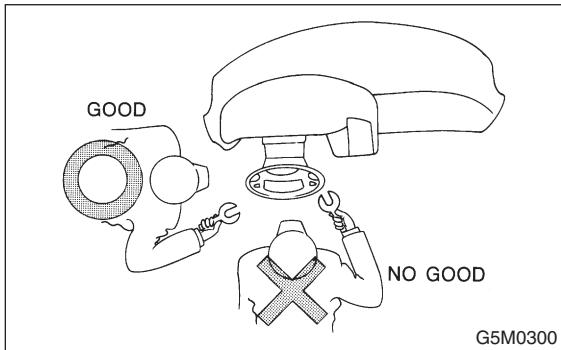

- After removal, the airbag module should be kept away from heat and light sources, and stored on a clean, flat surface to prevent from any damage to its lower structure.

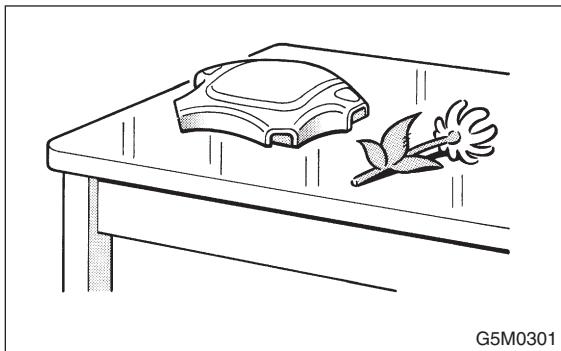


- Do not check airbag module continuity with airbag removed from the vehicle body.

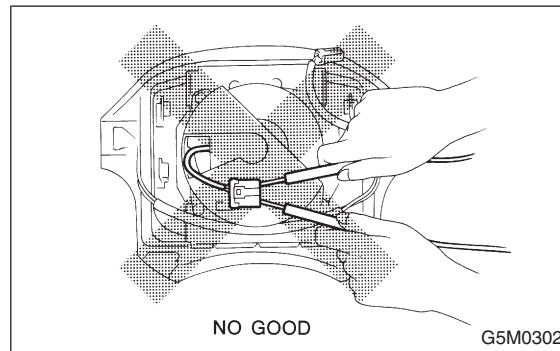

- Replace airbag module with a new one, should any of the following conditions develop:
 - Pad surface is scratched or cracked.
 - Connector harness is damaged.
 - Inflator side structure of module is cracked or deformed.
 - Module is excessively stained with water, oil, etc.
 - Module was accidentally dropped.


- When storing a removed airbag module, be sure to place it in parallel with floor with the pad facing up. Do not place it against a wall, or place anything on the pad; otherwise, a dangerous condition may be created if the module malfunctions.

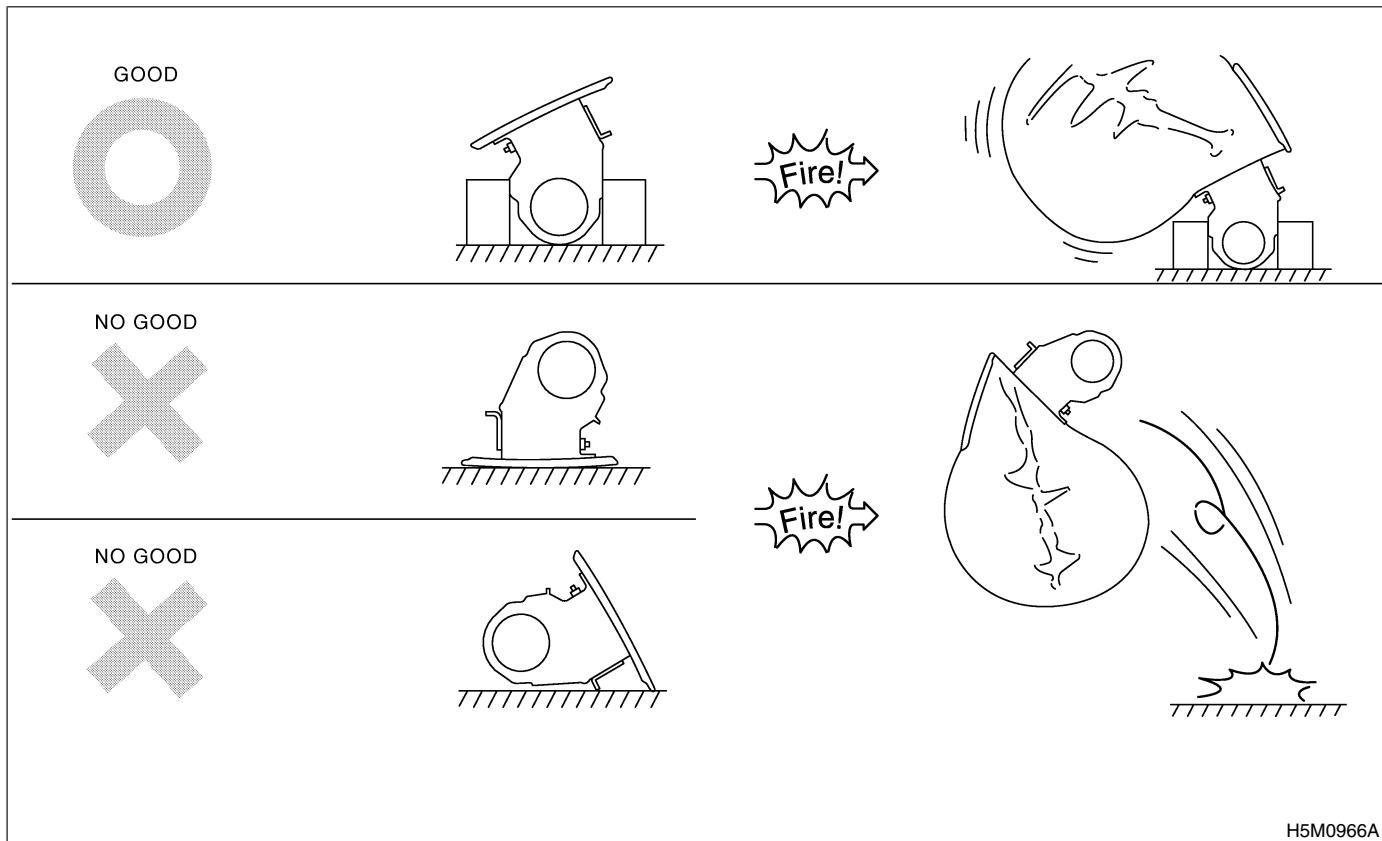

H5M0966A


B: REMOVAL S802308A18

- Turn ignition switch off.
- Disconnect ground cable from battery and wait for at least 20 seconds before starting work.
- Remove glove box. <Ref. to EI-23 REMOVAL, Glove Box.>
- Disconnect airbag connector.

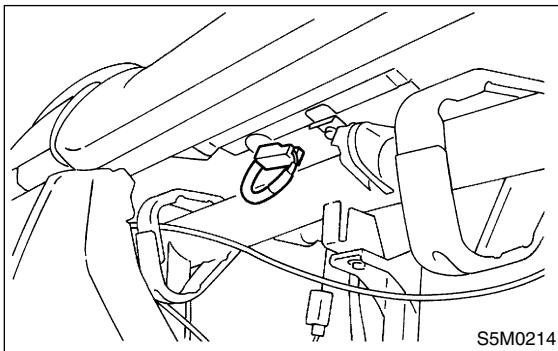

S5M0214

- Remove seven bolts and then carefully remove airbag module.

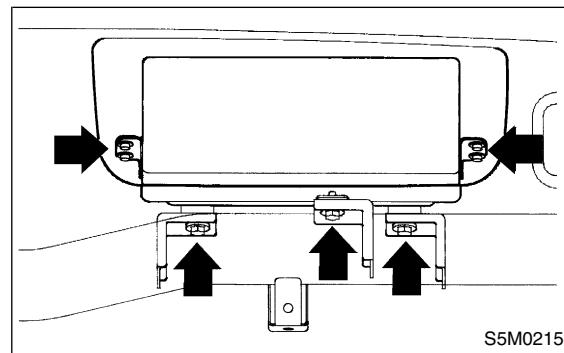

S5M0215

- Refer to "CAUTION:" for handling of a removed airbag module. <Ref. to AB-10 CAUTION, Passenger's Airbag Module.>

C: INSTALLATION S802308A11

Install in the reverse order of removal.

CAUTION:

Do not allow harness and connectors to interfere or get caught with other parts.