

TRANSFER CASE

GENERAL DESCRIPTION Sht to you by Eris Studios

1. General Description

A: NOTE

For general description, refer to "4AT", "5MT" or "6MT" section. 4AT model: <Ref. to 4AT-2, General Description.> 5MT model: <Ref. to 5MT-2, General Description.> 6MT model: <Ref. to 6MT-2, General Description.>

You TRANSFER CASE FOR RESALE

2. Transfer Case and Extension (MT)

A: NOTE

For removal, installation and inspection work, refer to "5MT" or "6MT" section. 5MT model: <Ref. to 5MT-39, Transfer Case and Extension Case Assembly.> 6MT model: <Ref. to 6MT-47, Extension Case.>

3. Transfer Clutch and Extension (4AT)

A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-79, Transfer Clutch.>, <Ref. to 4AT-75, Extension Case.>

4. Oil Seal

A: NOTE

For removal, installation and inspection work, refer to "4AT", "5MT" or "6MT" section. 4AT model: <Ref. to 4AT-44, Extension Case Oil Seal.> 5MT model: <Ref. to 5MT-34, Oil Seal.> 6MT model: <Ref. to 6MT-31, Oil Seal.>

OIL SEAL

Brought to you TRANSFER CASE NOT FOR RESALE

5. Transfer Drive Gear (MT)

A: NOTE

For removal, installation and inspection work, refer to "5MT" or "6MT" section. 5MT model: <Ref. to 5MT-43, Transfer Drive Gear.> 6MT model: <Ref. to 6MT-56, Transfer Drive Gear.>

6. Transfer Driven Gear (MT)

A: NOTE

For removal, installation and inspection work, refer to "5MT" or "6MT" section. 5MT model: <Ref. to 5MT-45, Transfer Driven Gear.> 6MT model: <Ref. to 6MT-58, Transfer Driven Gear.>

7. Reduction Drive Gear (4AT without VTD)

A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-89, Reduction Drive Gear.>

For RESALE

8. Reduction Drive Gear (4AT with VTD)

A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-89, Reduction Drive Gear.>

9. Reduction Driven Gear (4AT without VTD)

A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-87, Reduction Driven Gear.>

A ...

D) TRANSFER CASE FOR RESALE

10.Reduction Driven Gear (4AT with VTD)

A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-87, Reduction Driven Gear.> CENTER DIFFERENTIAL and the second se

11.Center Differential

A: NOTE

For removal, installation and inspection work, refer to "4AT", "5MT" or "6MT" section. 4AT model: <Ref. to 4AT-91, Center Differential Carrier.> 5MT model: <Ref. to 5MT-47, Center Differential.> 6MT model: <Ref. to 6MT-60, Center Differential.>

You TRANSFER CASE FOR RESALE

12.Transfer Clutch Pressure Test

A: NOTE

For inspection work, refer to "4AT" section. <Ref. to 4AT-35, Transfer Clutch Pressure Test.>

13. Transfer Duty Solenoid and **Valve Body**

A: NOTE

For removal, installation and inspection work, refer to "4AT" section. <Ref. to 4AT-61, Shift Solenoids, Duty Solenoids and ATF Temperature Sensor.>