

9. Fuel Filter

A: REPLACEMENT

For fuel filter replacement procedure, refer to FU section. <Ref. to FU(H4SO)-71, Fuel Filter.>

B: INSPECTION

If the filter is clogged, or if the replacement interval has been reached, replace it.