


22. Keyless Buzzer


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the clips, and turn over the front side of the mud guard - front.

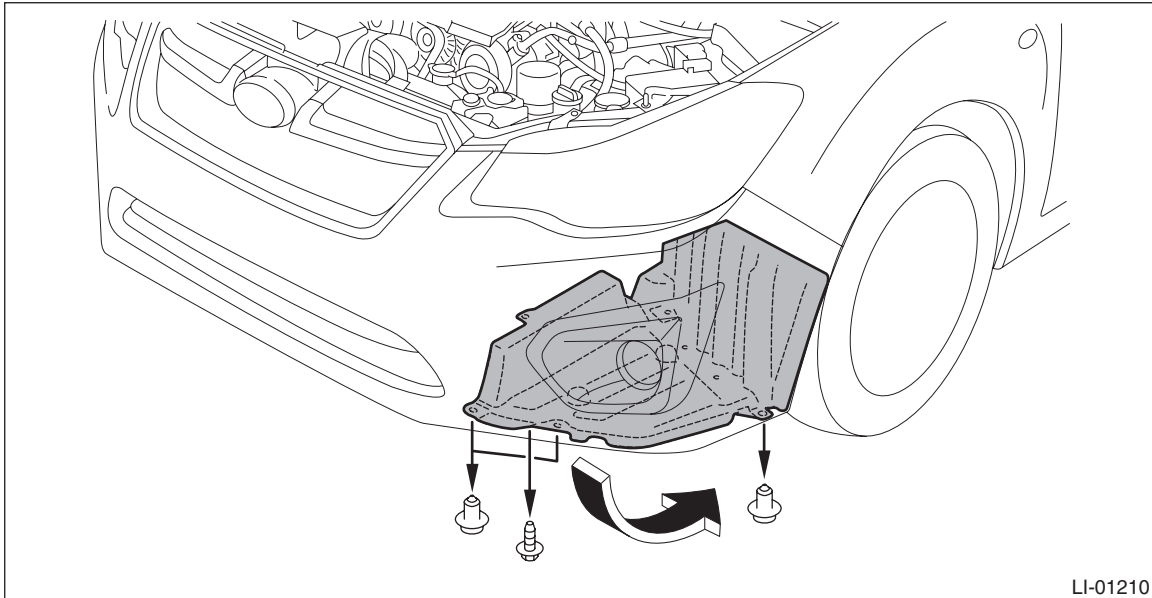

LI-01210

- 4) Remove the keyless buzzer.
 - (1) Disconnect the connector.
 - (2) Remove the clip and detach the keyless buzzer.

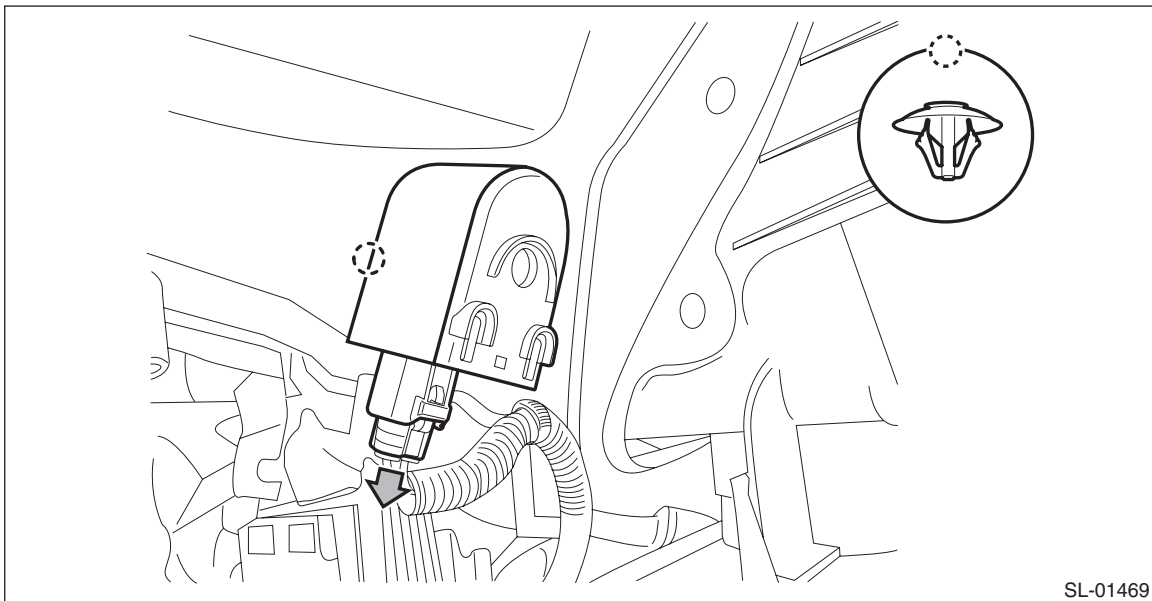

SL-01469

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to BC(diag)-15, OPERATION, User Customizing.>

If the buzzer does not sound, replace the keyless buzzer.