

9. User Customizing

A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Integ. unit mode}.
- 3) On «Integ. unit mode failure diag.» display, select {Work Support}.
- 4) On «Work Support» display, select {Unit customizing}.
- 5) Change the setting with UP/DOWN key and set with the [OK] key.

List of User Customizing item

| Data | Initial setting value | Customize setting | Remarks |
|-----------------------------------|-----------------------|-------------------|--|
| Off delay time | 30s | OFF | Room light off delay time can be selected. |
| | | 10 Sec | |
| | | 20 Sec | |
| | | 30s | |
| Auto Light Sensitivity Adjustment | Normal | Dull | Slow response |
| | | Normal | Standard |
| | | Sensitive | Quick response |
| | | Very sensitive | Fairly quick response |
| Power rear gate setting | — (*1) | ON | Fixed at OFF because this is not applicable. |
| | | OFF | |
| Back auto rear wiper setting | — (*1) | ON | Fixed at OFF because this is not applicable. |
| | | OFF | |
| TPMS Setting | — (*1) | TPMS | Set to "ON" for model with TPMS. |
| | | No TPMS | |
| Rr defogger op. mode | Normal | Normal | Automatically stops in 15 minutes after switch is turned to ON. |
| | | Continuous | Repeats active condition for 15 minutes and inactive condition for 2 minutes until switch is turned to OFF. |
| Security Alarm Setup | ON | ON | Security alarm (hazard, horn or siren) in active condition |
| | | OFF | Security alarm in inactive condition |
| Impact Sensor Setup | OFF | ON | Workable when Impact Sensor Setup is set to "ON". Impact sensor function becomes activated. |
| | | OFF | Impact sensor in inactive condition (Set to "OFF" in models without sensors.) |
| Alarm delay setup | ON | | After the keyless lock operation, the alarm monitor starts after the following delay time has passed. |
| | | ON | Delay time is 30 seconds. |
| | | OFF | Delay time is 0 seconds. |
| Lockout prevention | ON | ON | key lockout prevention function is activated. (The function does not operate if safety knob is locked by hand.) |
| | | OFF | Key lockout prevention function is deactivated. |
| Impact sensor (OP) | OFF | ON | Vehicle is controlled in impact sensor equipped mode. (Make sure to set to "OFF" for models without the impact sensor. When "ON", hazard, horn or siren become activated by keyless lock (alarm monitor start).) |
| | | OFF | Vehicle is controlled in no impact sensor mode. |
| Buzzer sounding setting | ON | ON | When lock/unlock is selected by keyless entry system operation, buzzer operates. |
| | | OFF | When lock/unlock is selected by keyless entry system operation, buzzer does not operate. |

User Customizing

BODY CONTROL SYSTEM (DIAGNOSTICS)

| Data | Initial setting value | Customize setting | Remarks |
|--|-----------------------|-------------------|--|
| Abnormal warning lamp flashing setting | ON | ON | When lock/unlock is selected by keyless entry system operation, hazard blinks. |
| | | OFF | When lock/unlock is selected by keyless entry system operation, hazard does not interlock. |
| Passive Alarm | OFF | ON | |
| | | OFF | |
| Door open warning | ON | ON | |
| | | OFF | |
| Dome Light Alarm Setting | OFF | ON | Room light illuminates interlocking with alarm. |
| | | OFF | Room light does not illuminate interlocking with alarm. |
| Auto A/C ECU Setting | — | ON | Diagnoses with auto A/C CM. |
| | | OFF | Diagnoses without auto A/C CM. |
| wiperdeicer | — | ON | Wiper deicer control is performed. |
| | | OFF | Wiper deicer control is not performed. |
| Illumination Control On/Off | ON | ON | |
| | | OFF | |
| Sedan/Wagon Setting | — | Sedan | Body control is performed by Sedan. |
| | | Wagon | Body control is performed by Wagon. |
| MT/AT Setting | — | MT | Body control is performed by MT. |
| | | AT | Body control is performed by AT. |
| 6MT Setting | — | 6MT | Body control is performed by 6MT. |
| | | Other than 6MT | Body control is performed by other than 6MT. |
| Illumination Sensor Setting | — (*1) | ON | Set to "ON" for model with auto light. |
| | | OFF | |
| Factory initial setting | Market | Market | Customize setting is reset when mode is switched from Market to Factory. |
| | | Factory | |

*1: Customization item according to the actual vehicle equipment

6) After setting, make sure that the setting changed in the {Current Data Display & Save} is same as vehicle equipment.

CAUTION:

- the above settings must match the actual vehicle equipment.
- Do not change settings except for setting above while setting the functions.
- Be sure not to change Factory initial setting except when installing a new body integrated unit.

NOTE:

For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".