

FUEL INJECTION (FUEL SYSTEMS)(H4DOTC)

1. SUBARU SPECIAL TOOL


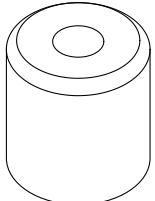 
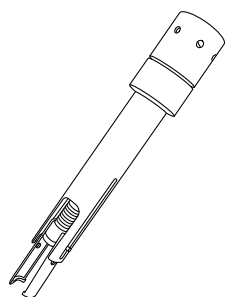 
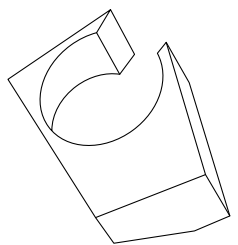 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18271AA030	18271AA030	GUIDE	Used for installing the fuel injector seal.
 ST18271AA040	18271AA040	ADJUSTER	Used for installing the fuel injector seal.
 ST18356AA010	18356AA010	INJECTOR REMOVER	Used for removing the fuel injector.
 ST18362AA060	18362AA060	ADAPTER R	Used for removing the fuel injector #1.

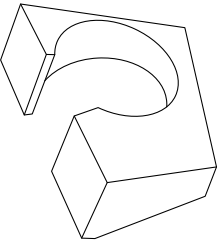 
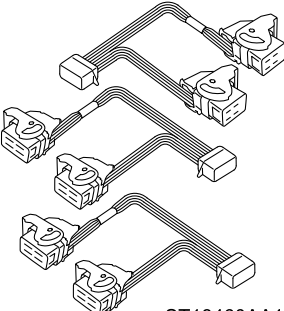 
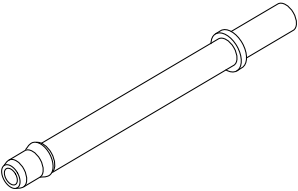 
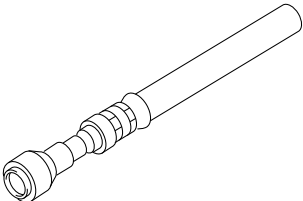 
 
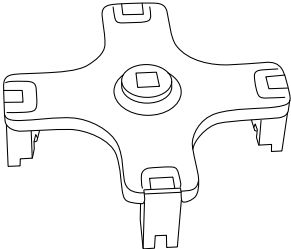 

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p data-bbox="305 516 444 541">ST18362AA070</p>	18362AA070	ADAPTER L	Used for removing the fuel injector #2.
 <p data-bbox="305 890 444 915">ST18460AA190</p>	18460AA190	CHECK BOARD	Used for measuring voltage and resistance of ECM terminals.
 <p data-bbox="305 1262 444 1287">ST18471AA000</p>	18471AA000	FUEL PIPE ADAPTER	Used for draining fuel.
 <p data-bbox="305 1640 444 1665">ST42075AG690</p>	42075AG690	FUEL HOSE	<p data-bbox="954 1318 1252 1350">Used for draining fuel.</p> <div data-bbox="954 1352 1474 1472" style="border: 1px solid black; padding: 5px;"> <p data-bbox="959 1360 1398 1472">Note: This is the SUBARU genuine part.</p> </div>

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p data-bbox="305 510 443 531">ST42099AE000</p>	42099AE000	QUICK CONNECTOR RELEASE	Used for removing the quick connector on the fuel hose.
 <p data-bbox="305 888 443 909">ST42099FL000</p>	42099FL000	ST FUEL PUMP	Used for removing and installing fuel pump and fuel sub level sensor.
 <p data-bbox="358 1262 440 1283">STSSM4</p>	—	SUBARU SELECT MONITOR 4	<p data-bbox="954 940 1451 1010">Used for setting of each function and troubleshooting for electrical system.</p> <p data-bbox="954 1024 1036 1052">Note:</p> <ul data-bbox="976 1066 1458 1291" style="list-style-type: none"> <li data-bbox="976 1066 1341 1171">• For detailed operation procedures, refer to “Help” of application. <li data-bbox="976 1186 1458 1291">• Used together with interface for Subaru Select Monitor (such as DST-i and DST-010).