


4. Schematic

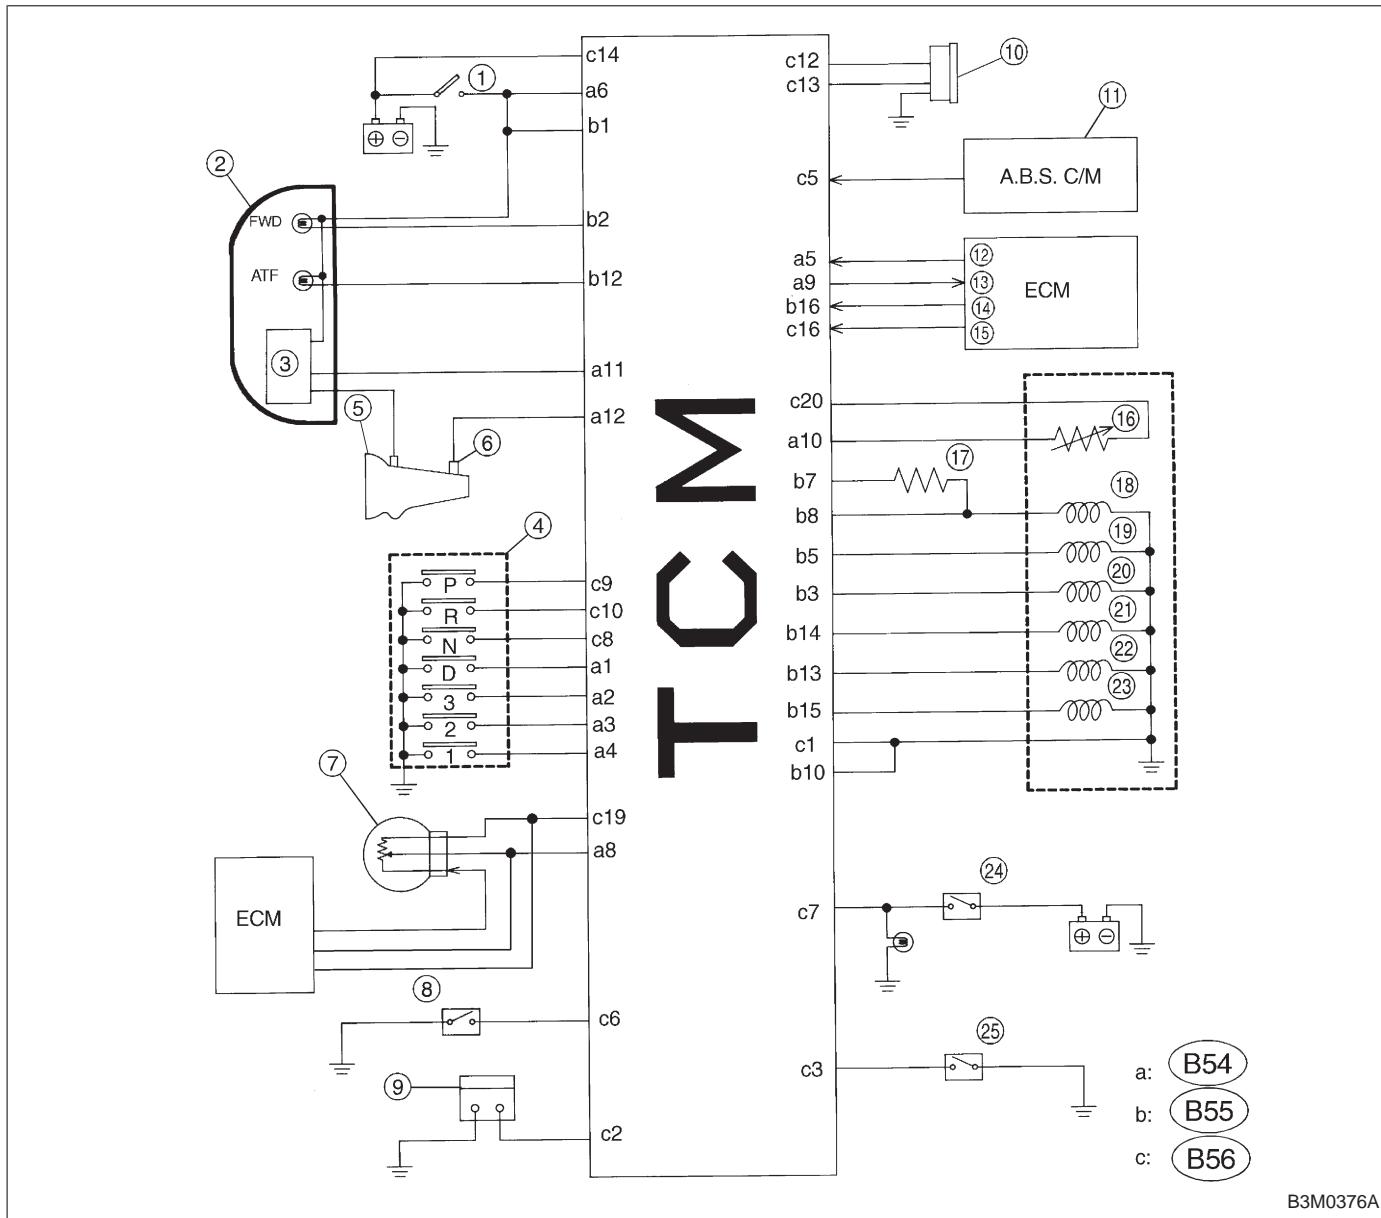

- ① Ignition switch
- ② Combination meter
- ③ Speedometer circuit
- ④ Inhibitor switch
- ⑤ Vehicle speed sensor 2
- ⑥ Vehicle speed sensor 1
- ⑦ Throttle position sensor
- ⑧ Diagnosis switch
- ⑨ FWD switch (AWD)

- ⑩ Data link connector
- ⑪ ABS control module
- ⑫ Engine speed signal
- ⑬ Torque control signal
- ⑭ Torque control cut signal
- ⑮ Mass air flow signal
- ⑯ ATF temperature sensor
- ⑰ Dropping resistor

- ⑱ Duty solenoid A
- ⑲ Duty solenoid B
- ⑳ Duty solenoid C (AWD)
- ㉑ Shift solenoid 1
- ㉒ Shift solenoid 2
- ㉓ Shift solenoid 3
- ㉔ Brake switch
- ㉕ Cruise set switch

B3M0376A