

# FOREWORD

---

Foreword

## 1. Foreword SA01674

### A: FOREWORD SA01674G21

These manuals are used when performing maintenance, repair, or diagnosis of the Subaru Legacy.

Applied model: BE\*\*\*\*\* and BH\*\*\*\*\* from 2000MY.

The additional manuals below are also available:  
Pub. No. G0853ZE

The manuals contain the latest information at the time of publication. Changes in specifications, methods, etc. may be made without notice.

# HOW TO USE THIS MANUALS

How to Use This Manuals

## 1. How to Use This Manuals SA02675

### A: HOW TO USE THIS MANUALS

SA02675F69

#### 1. STRUCTURE SA02675F6901

Each section consists of SCT that are broken down into SC that are divided into sections for each component. The specification, maintenance and other information for the components are included, and diagnosis information has also been added where necessary.

#### 2. INDEX SA02675F6902

The first page has an index with tabs. And at the end of each section is an alphabetical index.

#### 3. COMPONENTS SA02675F6903

For each component, a composition drawing is included.

#### 4. SPECIFICATIONS SA02675F6904

If necessary, specifications are also included

#### 5. INSPECTION SA02675F6905

Inspections are included to be carried out before and after maintenance.

#### 6. MAINTENANCE SA02675F6906

Maintenance instructions are provided for each component. When multiple components comprise one process, refer to the instructions for that process for each component.

#### 7. DIAGNOSIS SA02675F6907

Tables showing a step-by-step process make it easy to conduct diagnosis.

#### 8. CAUTION, WARNING, NOTE SA02675F6908

“CAUTION” is used to indicate points that must be followed to protect the person doing the work and people in the area from injury.

“WARNING” is used to indicate points that must be followed to protect the vehicle or parts from damage or from secondary physical injury.

“NOTE” is used to indicate additional information that can improve the efficiency of doing a process.

#### 9. SI UNITS SA02675F6909

Measurements in these manuals are according to the SI units. Metric and yard/pound measurements are also included.

# LEGACY

## Specifications

### 1. Legacy SA08704

#### A: DIMENSIONS SA08704G28

Model	Sedan		Station WAGON		
	AWD		AWD		
			BRIGHTON	L	GT
Overall length	mm (in)	4,685 (184.4)	4,760 (187.4)		
Overall width	mm (in)	1,745 (68.7)	1,745 (68.7)		
Overall height	mm (in)	1,415 (55.7)	1,435 (56.5)		
Compartment	Leg room	Front Max.	mm (in)	1,101 (43.3)	1,101 (43.3)
		Rear Min.	mm (in)	868 (34.2)	871 (34.3)
	Head room	Front	mm (in)	987 (38.9), 967 (38.1)*1	1,020 (40.2), 977 (38.5)*1
		Rear	mm (in)	930 (36.6)	994 (39.1), 945 (37.2)*1
	Shoulder room	Front	mm (in)	1,368 (53.9)	1,368 (53.9)
		Rear	mm (in)	1,362 (53.6)	1,362 (53.6)
Wheelbase		mm (in)	2,650 (104.3)	2,650 (104.3)	
Tread	Front	mm (in)	1,460 (57.5)	1,460 (57.5)	
	Rear	mm (in)	1,460 (57.5)	1,455 (57.3)	
Minimum road clearance	M.L.V.W.	mm (in)	115 (4.5)	120 (4.7)	125 (4.9)
	C.W.	mm (in)	155 (6.1)	160 (6.3)	

\*1: with sun roof

#### B: ENGINE SA08704G29

Model	Sedan/Station Wagon				
Engine type	Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine				
Valve arrangement	Overhead camshaft type				
Bore × Stroke	mm (in)	99.5 × 79.0 (3.917 × 3.110)			
Displacement	cm <sup>3</sup> (cu in)	2,457 (149.9)			
Compression ratio	10.0				
Firing order	1 — 3 — 2 — 4				
Idle speed at Park/Neutral position	rpm	650 (MT), 700 (AT)			
Maximum output	kW (HP)/rpm	123 (165)/5,600			
Maximum torque	N·m (kgf·m, ft-lb)/rpm	226 (23.0, 166)/3,600			

#### C: ELECTRICAL SA08704G30

Model	Sedan/Station Wagon		
Ignition timing at idling speed	BTDC/rpm	10°±10°/650 (MT), 10°±10°/700 (AT)	
Spark plug	Type and manufacturer	CHAMPION: RC10YC4 (Standard) NGK: BKR6E-11 CHAMPION: RC8YC4 NIPPONDENSO: K20PR-U11	
Alternator	12V — 90A		
Battery	Reserve capacity min	90 (MT), 110 (AT)	
	Cold cranking amperes amp.	430 (MT), 490 (AT)	

**D: TRANSMISSION**

SA08704G31

Model		Sedan/Station Wagon	
		AWD	
Transmission type		5MT*1	4AT*2
Clutch type		DSPD	TCC
Gear ratio	1st	3.454	2.785*3, 3.027*4
	2nd	2.062	1.545*3, 1.619*4
	3rd	1.448	1.000
	4th	1.088	0.694
	5th	0.780	—
	Reverse	3.333	2.272
Reduction gear (Front drive)	1st reduction	Type of gear	—
		Gear ratio	—
	Final reduction	Type of gear	Hypoid
		Gear ratio	3.900*3, 4.111*4
Reduction gear (Rear drive)	Transfer reduc- tion	Type of gear	Helical
		Gear ratio	1.000
	Final reduction	Type of gear	Hypoid
		Gear ratio	4.111
			4.111*3, 4.444*4

5MT\*1: 5-forward speeds with synchromesh and 1-reverse – with center differential and viscous coupling

4AT\*2: Electronically controlled fully-automatic, 4-forward speeds and 1-reverse – with hydraulically controlled transfer clutch

\*3: L

\*4: GT

DSPD: Dry Single Plate Diaphragm

TCC: Torque Converter Clutch

**E: STEERING**

SA08704G32

Type	Rack and Pinion
Turns, lock to lock	3.2
Minimum turning circle m (ft)	Curb to curb: 10.8 (35.4), Wall to wall: 11.4 (37.4)

**F: SUSPENSION**

SA08704G33

Front	Macpherson strut type, Independent, Coil spring
Rear	Multi-link type, Independent, Coil spring

**G: BRAKE**

SA08704G34

Model	with ABS
Service brake system	Dual circuit hydraulic with vacuum suspended power unit
Front	Ventilated disc brake
Rear	Disc brake
Parking brake	Mechanical on rear brakes

**H: TIRE**

SA08704G35

Model	15 inch wheel	16 inch wheel
Size	P195/60R15 87H	P205/60R15 90H
Type	Steel belted radial, Tubeless	

# LEGACY

## Specifications

### I: CAPACITY

SA08704G36

Model	AWD		
	5MT	4AT	
Fuel tank	ℓ (US gal, Imp gal)		64 (16.9, 14.1)
Engine oil	Upper level	ℓ (US qt, Imp qt)	
	Lower level	ℓ (US qt, Imp qt)	
Transmission gear oil	ℓ (US qt, Imp qt)		3.5 (3.7, 3.1)
Automatic transmission fluid	ℓ (US qt, Imp qt)		—
AT differential gear oil	ℓ (US qt, Imp qt)		—
AWD rear differential gear oil	ℓ (US qt, Imp qt)		0.8 (0.8, 0.7)
Power steering fluid	ℓ (US qt, Imp qt)		0.7 (0.7, 0.6)
Engine coolant	ℓ (US qt, Imp qt)		6.8 (7.2, 6.0)
			6.7 (7.1, 5.9)

### J: WEIGHT

SA08704G37

#### 1. U.S. SPEC. VEHICLE

SA08704G3701

Model	Sedan			
	AWD			
	L		GT	
	5MT*2	4AT*2	5MT*3	4AT*3
Curb weight (C.W.)	Front	kgf (lb)	810 (1,785)	837 (1,845)
	Rear	kgf (lb)	642 (1,415)	644 (1,420)
	Total	kgf (lb)	1,451 (3,200)	1,481 (3,265)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)	1,007 (2,220)	
	Rear	kgf (lb)	989 (2,180)	
	Total	kgf (lb)	1,995 (4,400)	

\*1: Includes the weights of A/C.

\*2: Includes the weights of P/W, P/D, A/C and C/C.

\*3: Includes the weights of P/W, P/D, A/C, C/C and Rear spoiler.

Model	Station WAGON			
	AWD			
	BRIGHTON			
	5MT*1		4AT*1	
Curb weight (C.W.)	Front	kgf (lb)	794 (1,750)	819 (1,805)
	Rear	kgf (lb)	667 (1,470)	671 (1,480)
	Total	kgf (lb)	1,460 (3,220)	1,490 (3,285)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)	961 (2,120)	
	Rear	kgf (lb)	1,016 (2,240)	
	Total	kgf (lb)	1,977 (4,360)	

Model	Station WAGON			
	AWD			
	L		GT	
	5MT*2	4AT*2	5MT*3	4AT*3
Curb weight (C.W.)	Front	kgf (lb)	803 (1,770)	828 (1,825)
	Rear	kgf (lb)	689 (1,520)	694 (1,530)
	Total	kgf (lb)	1,492 (3,290)	1,522 (3,355)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)	816 (1,800)	
	Rear	kgf (lb)	705 (1,555)	
	Total	kgf (lb)	841 (1,855)	

\*1: Includes the weight of A/C.

\*2: Includes the weights of P/W, P/D, A/C and C/C.

\*3: Includes the weights of P/W, P/D, A/C, C/C and S/R.

2. CANADA SPEC. VEHICLE SA08704G3702

Model	Sedan				
	AWD				
	L		GT		
	4AT*1		5MT*2	4AT*2	
Curb weight (C.W.)	Front	kgf (lb)	837 (1,845)	819 (1,805)	846 (1,865)
	Rear	kgf (lb)	644 (1,420)	651 (1,435)	653 (1,440)
	Total	kgf (lb)	1,481 (3,265)	1,469 (3,240)	1,499 (3,305)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)		1,007 (2,220)	
	Rear	kgf (lb)		989 (2,180)	
	Total	kgf (lb)		1,995 (4,400)	

Model	Station WAGON					
	AWD					
	BRIGHTON			L		GT
	5MT	4AT	5MT*1	4AT*1	4AT*2	
Curb weight (C.W.)	Front	kgf (lb)	778 (1,715)	803 (1,770)	803 (1,770)	828 (1,825)
	Rear	kgf (lb)	664 (1,465)	669 (1,475)	689 (1,520)	694 (1,530)
	Total	kgf (lb)	1,442 (3,180)	1,472 (3,245)	1,492 (3,290)	1,522 (3,355)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)	961 (2,120)		1,002 (2,210)	
	Rear	kgf (lb)	1,016 (2,240)		1,063 (2,345)	
	Total	kgf (lb)	1,977 (4,360)		2,066 (4,555)	

\*1: Includes the weights of P/W, P/D, A/C and C/C.

\*2: Includes the weights of P/W, P/D, A/C, C/C and S/R.

# OUTBACK

Specifications

## 2. OUTBACK SA08705

### A: DIMENSIONS SA08705G28

Model	Leg room	Sedan	Station Wagon		
		AWD	AWD		
		4AT	5MT	4AT	
Overall length		mm (in)	4,685 (184.4)	4,760 (187.4)	
Overall width		mm (in)	1,745 (68.7)	1,745 (68.7)	
Overall height		mm (in)	1,480 (58.3)	1,580 (62.2)	
Compartment	Front Max.	mm (in)	1,101 (43.3)	1,101 (43.3)	
		mm (in)	868 (34.2)	871 (34.3)	
	Head room	Front mm (in)	987 (38.9), 967 (38.1)*1	1,020 (40.2), 977 (38.5)*1	
		Rear mm (in)	930 (36.6)	994 (39.1), 945 (37.2)*1	
	Shoulder room	Front mm (in)	1,368 (53.9)	1,368 (53.9)	
		Rear mm (in)	1,362 (53.6)	1,362 (53.6)	
Wheelbase		mm (in)	2,650 (104.3)	2,650 (104.3)	
Tread	Front	mm (in)	1,470 (57.9)	1,470 (57.9)	
	Rear	mm (in)	1,465 (57.7)	1,465 (57.7)	
Minimum road clearance	M.L.V.W.	mm (in)	150 (5.9)	150 (5.9)	
	C.W.	mm (in)	185 (7.3)	185 (7.3)	

\*1: with sun roof

### B: ENGINE SA08705G29

Model	Sedan/Station Wagon	
Engine type	Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine	
Valve arrangement	Overhead camshaft type	
Bore × Stroke	mm (in)	
Displacement	cm <sup>3</sup> (cu in)	
Compression ratio	10.0	
Firing order	1 — 3 — 2 — 4	
Idle speed at Park/Neutral position	rpm	
Maximum output	kW (HP)/rpm	
Maximum torque	N·m (kgf·m, ft-lb)/rpm	

### C: ELECTRICAL SA08705G30

Model	Sedan/Station Wagon	
Ignition timing at idling speed	BTDC/rpm	
Spark plug	Type and manufacturer	
Alternator	12V — 90A	
Battery	Reserve capacity	min
	Cold cranking amperes	amp.

# OUTBACK

Specifications

## D: TRANSMISSION

SA08705G31

Model		Sedan/Station Wagon	
		AWD	
Transmission type		4AT	
Clutch type		TCC	
Gear ratio	1st	3.027	
	2nd	1.619	
	3rd	1.000	
	4th	0.694	
	5th	—	
	Reverse	2.272	
Reduction gear (Front drive)	1st reduction	Type of gear	Helical
		Gear ratio	1.000
	Final reduction	Type of gear	Hypoid
		Gear ratio	4.444
Reduction gear (Rear drive)	Transfer reduc- tion	Type of gear	—
		Gear ratio	—
	Final reduction	Type of gear	Hypoid
		Gear ratio	4.444

4AT: Electronically controlled fully-automatic, 4-forward speeds and 1-reverse – with hydraulically controlled transfer clutch

TCC: Torque Converter Clutch

## E: STEERING

SA08705G32

Type	Rack and Pinion	
Turns, lock to lock	3.4	
Minimum turning circle	m (ft)	Curb to curb: 11.2 (36.7), Wall to wall: 12.0 (39.4)

## F: SUSPENSION

SA08705G33

Front	Macpherson strut type, Independent, Coil spring
Rear	Multi-link type, Independent, Coil spring

## G: BRAKE

SA08705G34

Model	with ABS
Service brake system	Dual circuit hydraulic with vacuum suspended power unit
Front	Ventilated disc brake
Rear	Disc brakes
Parking brake	Mechanical on rear brakes

## H: TIRE

SA08705G35

Model	16 inch wheel
Size	P225/60R16 97H
Type	Steel belted radial, Tubeless

# OUTBACK

## Specifications

### I: CAPACITY SA08705G36

Model	Fuel tank	AWD	
		4AT	
	ℓ (US gal, Imp gal)	64 (16.9, 14.1)	
Engine oil	Upper level	4.0 (4.2, 3.5)	
	Lower level	3.0 (3.2, 2.6)	
Transmission gear oil	ℓ (US qt, Imp qt)	—	
Automatic transmission fluid	ℓ (US qt, Imp qt)	9.3 (9.8, 8.2)	
AT differential gear oil	ℓ (US qt, Imp qt)	1.2 (1.3, 1.1)	
AWD rear differential gear oil	ℓ (US qt, Imp qt)	0.8 (0.8, 0.7)	
Power steering fluid	ℓ (US qt, Imp qt)	0.7 (0.7, 0.6)	
Engine coolant	ℓ (US qt, Imp qt)	6.7 (7.1, 5.9)	

### J: WEIGHT SA08705G37

#### 1. U.S. SPEC. VEHICLE SA08705G3701

Model		Sedan	Wagon	
		AWD	AWD	
		4AT*1	5MT*2	4AT*2
Curb weight (C.W.)	Front	kgf (lb)	873 (1,925)	830 (1,830)
	Rear	kgf (lb)	664 (1,465)	694 (1,530)
	Total	kgf (lb)	1,537 (3,390)	1,524 (3,360)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)	1,007 (2,220)	1,002 (2,210)
	Rear	kgf (lb)	989 (2,180)	1,063 (2,345)
	Total	kgf (lb)	1,995 (4,400)	2,066 (4,555)

\*1: Includes the weights of P/W, P/D, A/C, C/C, Leather interior, Rear spoiler, Side A/B and S/R.

\*2: Includes the weights of P/W, P/D, A/C and C/C.

#### NOTE:

When following optional parts are installed, add the weight to the curb weight.

Weight of optional parts		Built-in child restraint (B/R)		
Front	kgf (lb)	0.4 (0.9)		
Rear	kgf (lb)	4.2 (9.3)		
Total	kgf (lb)	4.6 (10.1)		

#### 2. CANADA SPEC. VEHICLE SA08705G3702

Model		Sedan	Wagon	
		AWD	AWD	
		4AT*1	5MT*2	4AT*2
Curb weight (C.W.)	Front	kgf (lb)	873 (1,925)	832 (1,835)
	Rear	kgf (lb)	664 (1,465)	694 (1,530)
	Total	kgf (lb)	1,537 (3,390)	1,526 (3,365)
Gross vehicle weight (G.V.W.)	Front	kgf (lb)	1,007 (2,220)	1,002 (2,210)
	Rear	kgf (lb)	989 (2,180)	1,063 (2,345)
	Total	kgf (lb)	1,995 (4,400)	2,066 (4,555)

\*1: Includes the weights of P/W, P/D, A/C, C/C, Leather interior, Rear spoiler, Side A/B and S/R.

\*2: Includes the weights of P/W, P/D, A/C, C/C and C/W.

# PRECAUTION

## Precaution

### 1. Precaution SA04677

#### A: PRECAUTION SA04677F59

Please clearly understand and adhere to the following general precautions. They must be strictly followed to avoid minor or serious injury to the person doing the work or people in the area.

#### 1. ABS SA04677F5901

Handle the ABS as a total system. Do not disassemble or attempt to repair individual parts. Doing so could prevent the ABS system from operating when needed or cause it to operate incorrectly and result in injury.

#### 2. BRAKE FLUID SA04677F5902

If brake fluid gets in your eyes or on your skin, do the following:

- Wash out your eyes and seek immediate medical attention.
- Wash your skin with soap and then rinse thoroughly with water.

#### 3. ELECTRIC FAN SA04677F5903

The electric fan may rotate without warning, even when the engine is not on. Do not place your hand, cloth, tools, or other items near the fan at any time.

#### 4. ROAD TESTS SA04677F5904

Always conduct road tests in accordance with traffic rules and regulations to avoid bodily injury and interrupting traffic.

#### 5. AIRBAG SA04677F5905

To prevent bodily injury from unexpected deployment of air bags and unnecessary maintenance, follow the instructions in this manual when performing maintenance on air bag components or nearby, and air bag wiring harnesses or nearby.

To prevent unexpected deployment, perform one of the steps below and then wait at least ten seconds to discharge electricity before beginning work.

- Step 1: Turn the ignition switch OFF.
- Step 2: Remove the fuse for the air bag system.
- Step 3: Remove the negative battery terminal.

#### 6. AIRBAG DISPOSAL SA04677F5906

To prevent bodily injury from unexpected airbag deployment, do not dispose air bag modules in the same way as other refuse. Follow the special instructions for disposal in this manual. Follow all government regulations concerning disposal of refuse.

### 7. AIRBAG MODULE SA04677F5907

Adhere to the following when handing and storing the air bag module to prevent bodily injury from unexpected deployment:

- Do not hold harnesses or connectors to carry the module.
- Do not face the bag in the direction that it opens towards yourself or other people.
- Do not face the bag in the direction that it opens towards the floor or walls.

### 8. AIRBAG SPECIAL TOOLS SA04677F5908

To prevent unexpected deployment, only use special tools.

### 9. WINDOW SA04677F5909

Always wear safety glasses when working around any glass to prevent glass fragments from damaging your eyes.

### 10. WINDOW ADHESIVE SA04677F5910

Always use the specified urethane adhesive when attaching glass to prevent it from coming loose and falling, resulting in accidents and injury.

# NOTE

Note

---

## 1. Note SA03676

### A: NOTE SA03676A15

This is information that can improve efficiency of maintenance and assure sound work.

#### 1. FASTENER NOTICE SA03676A1501

Fasteners are used to prevent parts from damage and dislocation due to looseness. Fasteners must be tightened to the specified torque.

Do not apply paint, lubricant, rust retardant, or other substances to the surface around bolts, fasteners, etc. Doing so will make it difficult to obtain the correct torque and result in looseness and other problems.

#### 2. STATIC ELECTRICITY DAMAGE SA03676A1502

Do not touch the ECM, connectors, logic boards, and other such parts when there is a risk of static electricity. Always use a static electricity prevention cord or touch grounded metal before conducting work.

#### 3. IGNITION OFF BATTERY SA03676A1503

When removing the battery cables, always be sure to turn the ignition off to prevent electrical damage to the ECM from rush current.

#### 4. SERVICE PARTS SA03676A1504

Use authentic service parts for maximum performance and maintenance, when conducting repairs. Subaru/FHI will not be responsible for poor performance resulting from the use of parts not specified by a genuine dealer.


## NOTE

Note


### 5. LIFTS AND JACKS SA03676A1505

When using a lift or jack-ridged rack to raise a vehicle, always follow instructions concerning jack-up points and weight limits to prevent the vehicle from falling, which could result in injury. Be especially careful to make sure the vehicle is balanced before raising it.


#### Support locations

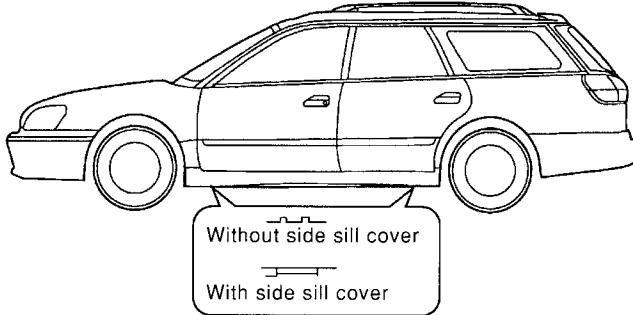


#### Pantograph jack

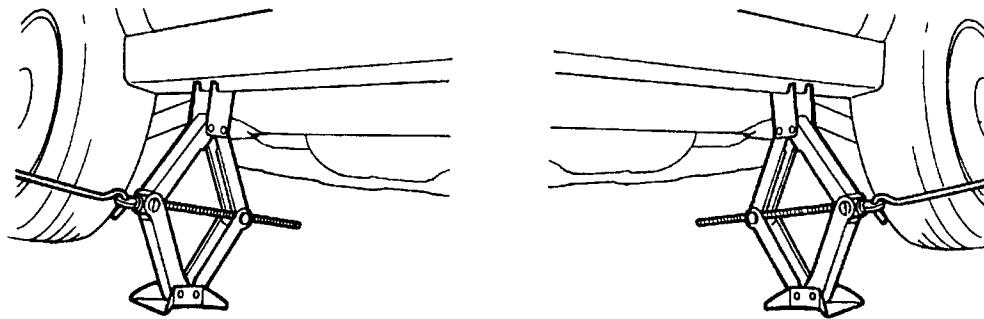

#### Lift

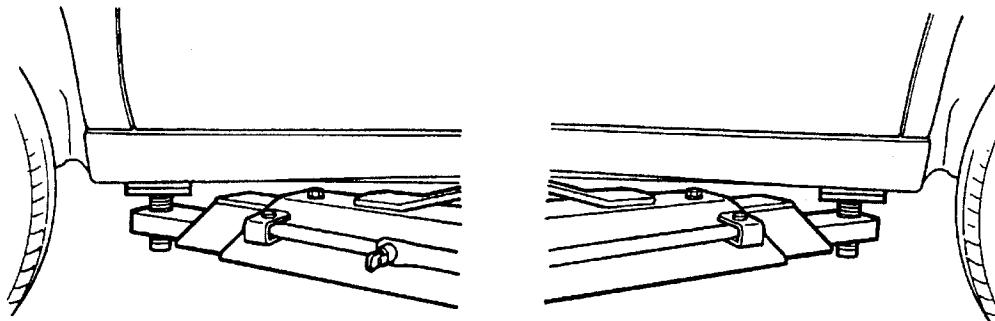

#### Safety stand


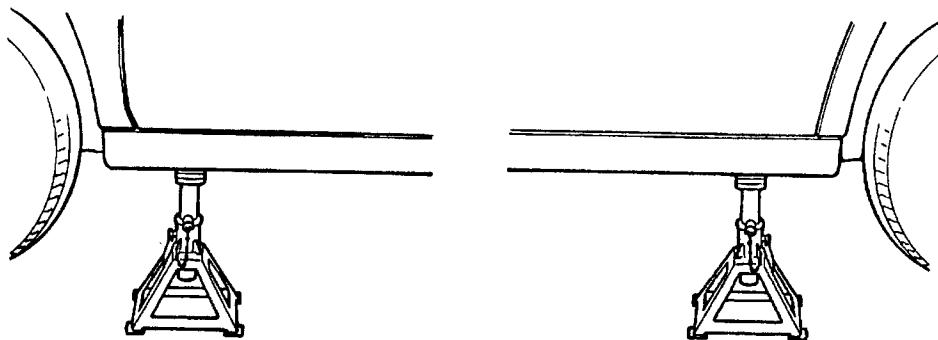


GI0100A

# NOTE



Note

**Front**

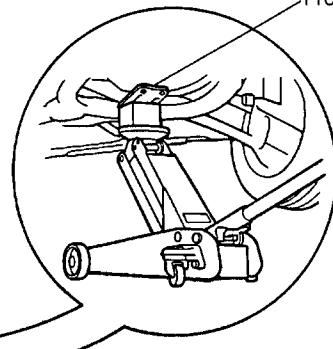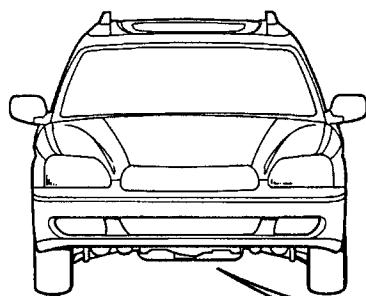

Front cross member

**Rear**

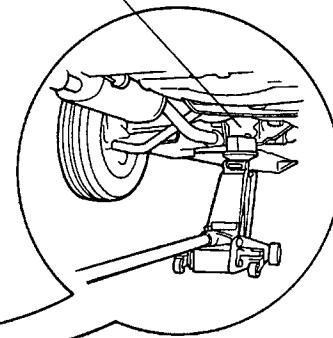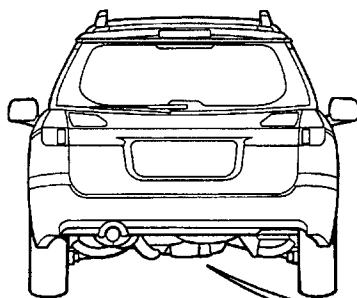

Rear differential gear


GI0101A

## NOTE


Note

### 6. TIE DOWNS SA03676A1506

Tie downs are used when transporting vehicles and when using the chassis dynamo. Attach tie downs only to the specified points on the vehicle.

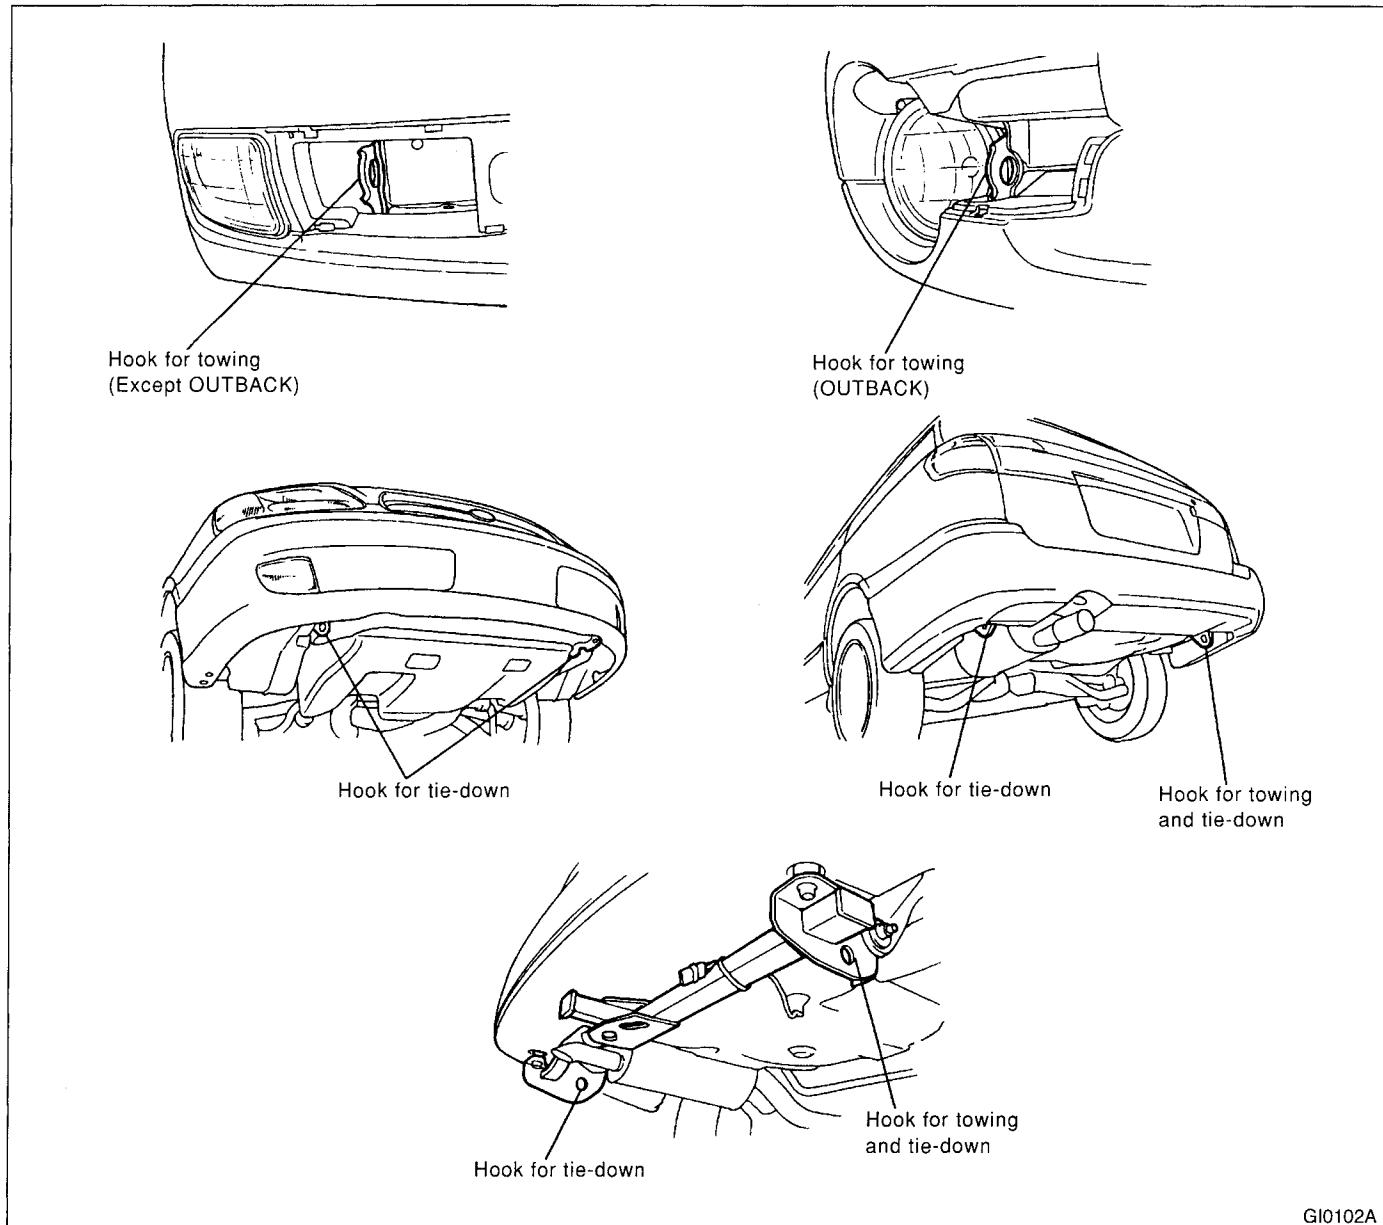

GI0102A

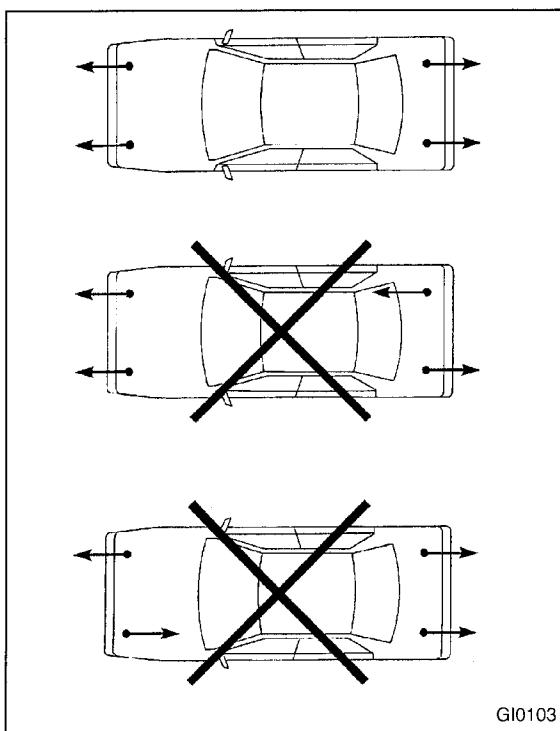**NOTE****7. TOWING** SA03676A1507

Avoid towing vehicles except when the vehicle cannot be driven. For vehicles with AWD, AT, or VTD, use a loader instead of towing. When towing other vehicles, to prevent excessive weight from damaging the hook or vehicle:


- Do not tow other vehicles with a front towing hook.
- Make sure the vehicle towing is heavier than the vehicle being towed.

**8. TRAINING** SA03676A1508

For information about training, contact a dealer or agent.

**9. GENERAL SCAN TOOL** SA03676A1509

Using general scan tools will greatly improve efficiency of repairing engine electronic controls. The Subaru Select Monitor can be used to diagnose the engine and also the ABS, the air conditioner, and other parts.

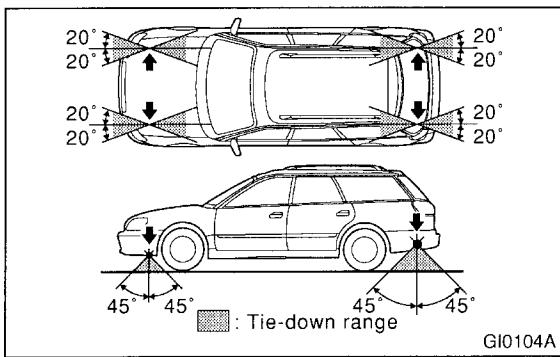

# IDENTIFICATION

## Identification

### 1. Identification

SA06679

#### A: IDENTIFICATION


SA06679F70

##### 1. IDENTIFICATION NUMBER AND LABEL LOCATIONS


SA06679F7001

The VIN (Vehicle Identification Numbers) is used to classify the vehicle.


Positioning of the plate label for identification

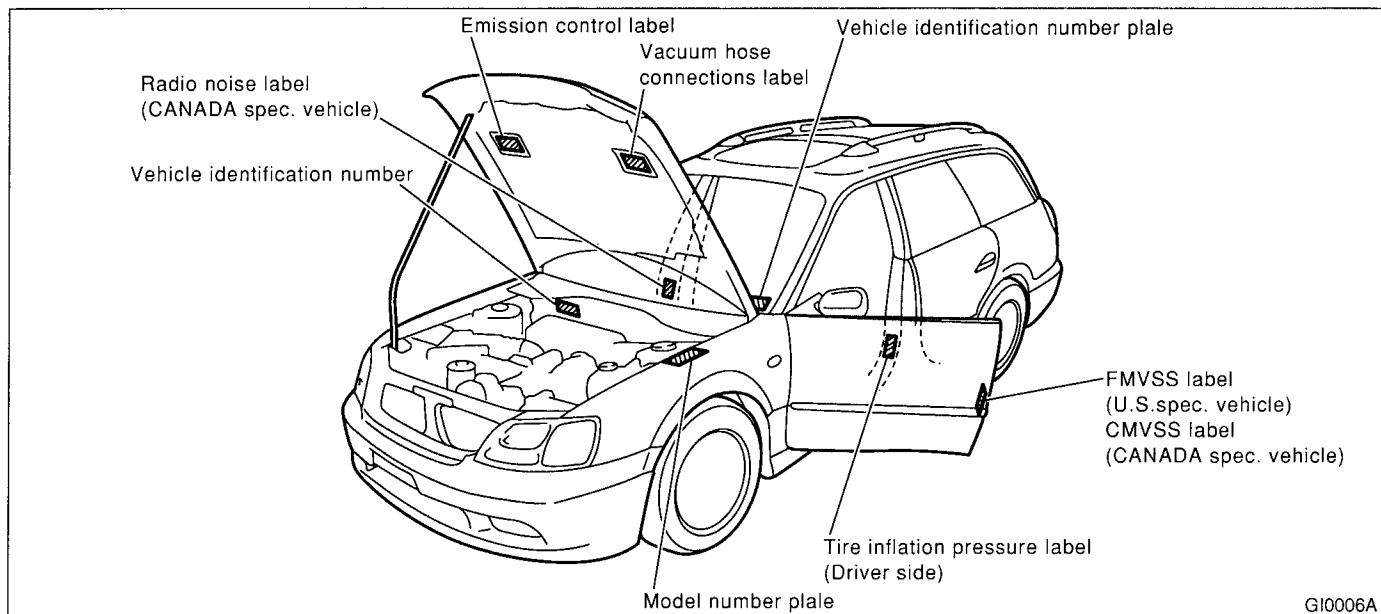


GI0006A

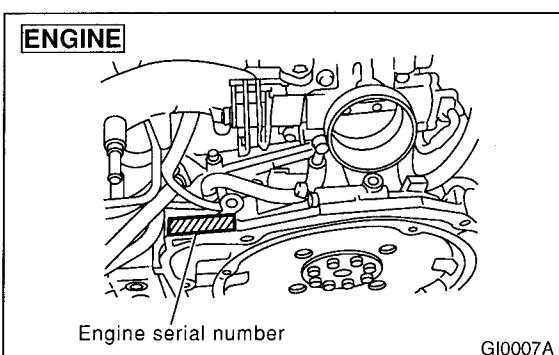

GI0007A

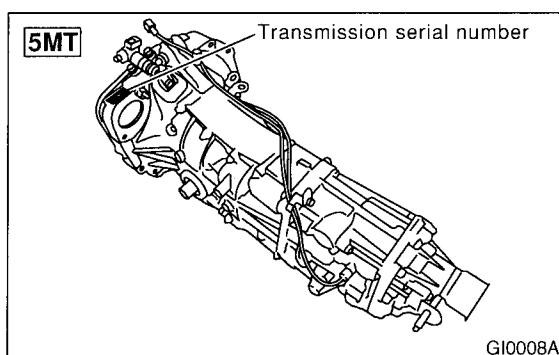


GI0008A

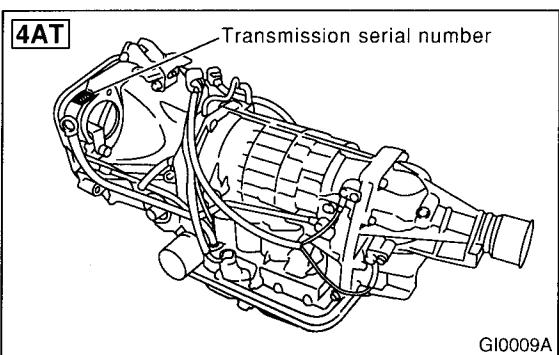


GI0009A

# IDENTIFICATION

Identification

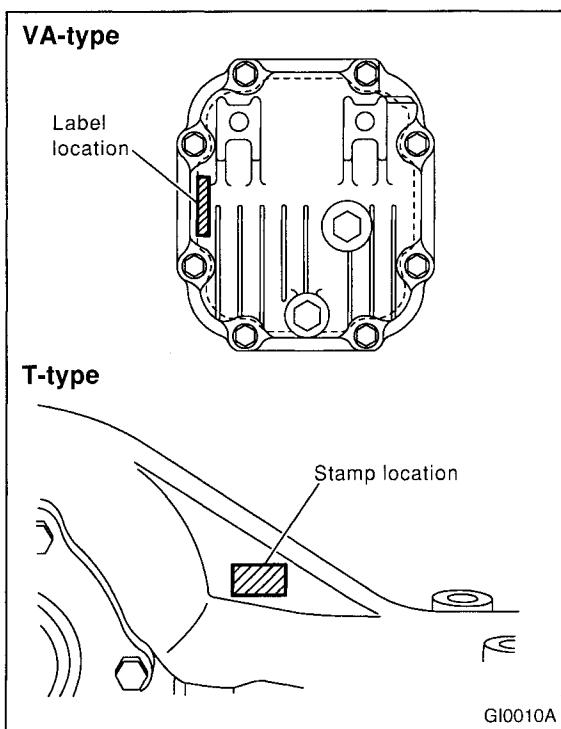

## Model number plate

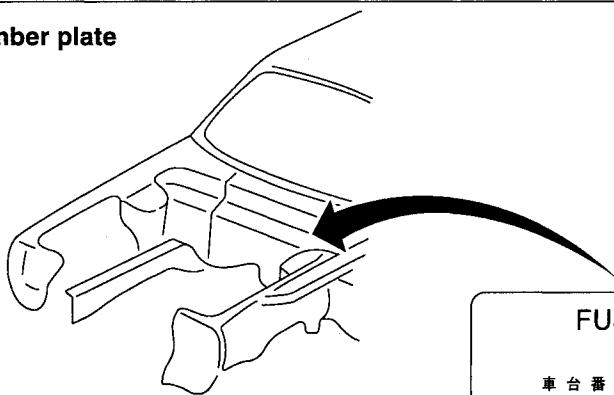

FUJI HEAVY INDUSTRIES LTD.	
車台番号 VIN	JF1BD4LG9RG002001
アブライトモデル applied model	BD4AL3G
トリムコード trim code	410
外装飾コード Color code	230
エンジン型式 engine type	EJ20ENMABA
ミッション型式 transmission type	TM752RGAAA
富士重工業株式会社	

GI0011A

# IDENTIFICATION

## Identification

### 2. MEANING OF V.I.N.

SA06679F7002

The meaning of the VIN is as follows:

#### • North America

14S3BE635X17200001[

The starting and ending brackets ( ) are stop marks.

Digits	Code	Meaning	Details
1 to 3	4S3	Manufacturer body area	Passenger car, SIA made, For US/Canada/Taiwan/Chile
4	B	Car line	Legacy/OUTBACK series
5	E	Body type	E: Sedan/OUTBACK Sedan H: Station Wagon/OUTBACK
6	6	Displacement	6: 2.5 L AWD 8: 3.0 L AWD
7	3	Grade	2: Brighton 3: L 4: GT 5: GT-LTD 6: OUTBACK 7: OUTBACK-cold weather 8: OUTBACK-LTD 9: OUTBACK-6 cylinders 0: OUTBACK-6 cylinders LL-bean
8	5	Restraint	5: Manual belts, dual airbag 6: Manual belts, dual airbag, side airbag
9	X	Check digit	
10	1	Model year	1: 2001MY 2: 2002MY
11	7	Transmission type	6: Full-time AWD 5-speed MT 7: Full-time AWD 4-speed AT
12 to 17	200001	Manufacture number	From 200001: Sedan/OUTBACK Sedan From 300001: Station Wagon From 600001: OUTBACK

# IDENTIFICATION

Identification

## 3. MODEL NUMBER PLATE SA06679F7003

The model number plate indicates: the applied model, the option code, the trim code, the engine type, the transmission type, and the exterior color code. This information is helpful when placing orders for parts.

**BE9BY3J**

Digits	Code	Meaning	Details
1	B	Series	B: Legacy/OUTBACK
2	E	Body style	E: Sedan/OUTBACK Sedan H: Station Wagon/OUTBACK
3	9	Engine displacement Drive system Suspension system	9: 2.5 L AWD E: 3.0 L AWD
4	B	Minor change	SIA made 2001MY (SIA made)
5	Y	Destination	K: Right-hand drive for general market L: Left-hand drive for general market Y: Left-hand drive for United States, Canada, and Taiwan
6	3	Grade	SIA made 1: Brighton 3: L 4: OUTBACK 5: GT 6: GT-LTD 9: OUTBACK Sedan-LTD A: OUTBACK-cold weather B: OUTBACK-LTD C: OUTBACK-6 cylinders D: OUTBACK-6 cylinders LL-bean
7	J	Transmission, fuel feed system	E: DOHC MPI 4-speed AT J: SOHC MPI center differential AWD R: SOHC MPI 4-speed AT

The engine and transmission type are as follows:

### • Engine

**EZ30DAXBBB**

Digits	Code	Meaning	Details
1 and 2	EZ	Engine type	EJ: 4 cylinders EZ: 6 cylinders
3 and 4	30	Displacement	20: 2.0 L 25: 2.5 L 30: 3.0 L
5	D	Fuel feed system	1: D-MPI SOHC-A phase-2 or-3 2: D-MPI SOHC-B phase-2 or-3 3: MPI SOHC phase-2 or-3 D: D-MPI DOHC 6 cylinders phase-3
6	A	Exhaust regulations	A: US Federal & California C: US California L: ADR (Australia) M: Germany N: Switzerland, Austria R: Europe
7	X	Transmission	W: AWD MT X: AWD AT
8 to 10	BBB	Detailed specifications	Used when ordering parts. See the parts catalog for details.

# IDENTIFICATION

## Identification

### ● Transmission

**TV1A4YCAAA**

Digits	Code	Meaning	Details
1	T	Transmission	T: Transmission
2	V	Transmission type	Y: Full-time AWD MT center differential V: Full-time AWD AT VTD Z: Full-time AWD AT MPT
3 and 4	1A	Classification	75: MT 1A: New AT
5	4	Series	4: 3rd Generation Legacy
6	A	Transmission specifications	V: Full-time AWD 5-speed MT with viscous coupling center differential single range X: Full-time AWD 5-speed MT with viscous coupling center differential dual range Z: Full-time AWD 4-speed AT with MPT Y: Full-time AWD 4-speed AT with VTD
7	C	Mounted body	C: US 2.5 L SOHC M: US 3.0 L DOHC R: General 2.0 L SOHC F: General 2.5 L SOHC P: General 3.0 L DOHC
8 to 10	AAA	Detailed specifications	Used when ordering parts. See the parts catalog for details.

### ● Rear differential 1

**VA1REF**

Digits	Code	Meaning	Details
1	V	For AWD	V: AED
2	A	Type	A: A type
3	1	Hypoid gear diameter	1: 152 dia. 2: 160 dia.
4	R	Installation position	R: Rear
5	E	Reduction gear ratio	E: 4.111 F: 4.444
6	F	Specification differences	F: Case A G: Case B H: Case B with cooling fin

### ● Rear differential 2

**T1**

Code	Reduction gear ratio	LSD
T1	3.900	No
T2	4.111	No
TP	4.444	No
BK	4.111	Viscous
BP	4.111	Viscous strengthened type
BL	4.444	Viscous strengthened type
CD	4.444	Viscous
VB	3.700	No

# RECOMMENDED MATERIALS

## Recommended Materials

---

### 1. Recommended Materials SA05678

#### A: RECOMMENDED MATERIALS

SA05678G22

##### 1. GENERAL SA05678G2201

To insure the best performance, always use the specified oil, gasoline, adhesive, sealant, etc. or that of equivalent quality.

##### 2. FUEL SA05678G2202

Always use a gasoline of the same or higher octane value than specified in the owner's manual. Ignoring the specifications below will result in damage or poor operation of the engine and fuel injection system. Use the specified gasoline to correct performance.

###### ● Unleaded gasoline

Use unleaded gasoline and not leaded gasoline on vehicles with catalytic converter installed to reduce air pollution. Using leaded gasoline will damage the catalytic converter.

###### ● Leaded gasoline

On vehicles without catalytic converter, use gasoline with an octane value of 90 ROM or higher.

###### ● Methanol

Use gasoline with a methanol content of 5% or less.

###### ● Ethanol

Use gasoline with an ethanol content of 10% or less.

###### ● MTBE

Use gasoline with an MTBE content of 15% or less.

###### ● California specifications

All Subaru vehicles are LEV, and thus can use California specification gasoline.

###### ● Reformulated gasoline

Reformulated gasoline may be used.


# RECOMMENDED MATERIALS

Recommended Materials

## 3. LUBRICANTS

SA05678G2203

Use either the lubricants in the table below or equivalent lubricants. See the table below to choose the correct SAE viscosity.

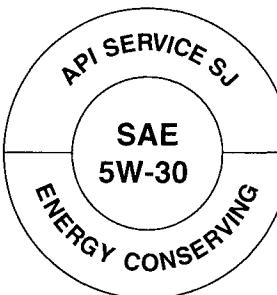Lubricant	Recommended			Alternative
	API Spec.	CCMC Spec.	ACEA Spec.	
Engine oil	SJ Grade "Energy conserving"    GI0001	G4 or G5	A1, A2 or A3	API: SH or SG
	  GI0002			
Manual transmission oil	GL-5	—	—	—
Front differential	GL-5	—	—	—
Rear differential	GL-5	—	—	—

SAE viscosity	SAE viscosity No. and applicable temperature SAE J300																										
Engine oil	<table border="1"> <thead> <tr> <th>(°C)</th> <th>-30</th> <th>-20</th> <th>-10</th> <th>0</th> <th>10</th> <th>20</th> <th>30</th> <th>40</th> </tr> </thead> <tbody> <tr> <th>(°F)</th> <td>-22</td> <td>-4</td> <td>14</td> <td>32</td> <td>50</td> <td>68</td> <td>86</td> <td>104</td> </tr> </tbody> </table>									(°C)	-30	-20	-10	0	10	20	30	40	(°F)	-22	-4	14	32	50	68	86	104
(°C)	-30	-20	-10	0	10	20	30	40																			
(°F)	-22	-4	14	32	50	68	86	104																			
	10W-30 or 10W-40																										
	5W-30 Recommend																										
	GI0003A																										

# RECOMMENDED MATERIALS

## Recommended Materials

SAE viscosity	SAE viscosity No. and applicable temperature SAE J300								
Manual transmission oil	(°C)	-30	-20	-10	0	10	20	30	40
	(°F)	-22	-4	14	32	50	68	86	104
90									
85W									
80W									
75W-90									
GI0004A									
Front differential	(°C)	-30	-20	-10	0	10	20	30	40
	(°F)	-22	-4	14	32	50	68	86	104
90									
85W									
80W									
80W-90									
GI0005A									

## 4. FLUID

SA05678G2204

Use the fluids specified in the table below. Do not mix two different kinds or makes of fluid.

Fluid	Recommended	Alternative	Remarks
Automatic transmission fluid	DEXRON III	—	
Power steering fluid	DEXRON III	—	
Brake fluid	FMVSS No. 116 DOT3	FMVSS No. 116 DOT4	
Clutch fluid	FMVSS No. 116 DOT3	FMVSS No. 116 DOT4	

## 5. COOLANT

SA05678G2205

Use genuine coolant to protect the engine. The table below shows the ratio of coolant to distilled water.

Coolant	Recommended	Item number	Alternative
Coolant	SUBARU coolant	000016218	None
Water for dilution	Distilled water	—	Tap water

## 6. REFRIGERANT

SA05678G2206

Standard air conditioners on Subaru vehicles use HFC134a refrigerant. Do not mix it with other refrigerants. Also, do not use any air compressor oil except for ZXL200PG.

Air conditioner	Recommended	Item number	Alternative
Refrigerant	HFC134a	—	None
Compressor oil	ZXL200PG	—	None

# RECOMMENDED MATERIALS

Recommended Materials

## 7. GREASE SA05678G2207

Use the grease and supplementary lubricants shown in the table below.

Grease	Application point	Recommended	Item number	Alternative
Supplementary lubricants	● O2 sensor ● Bolts, etc.	SUBARU CRC	004301003	—
Grease	MT main shaft	FX clutch grease	000040901	—
	Clutch master cylinder push rod	Slicolube G-40M	004404003	—
	● Steering shaft bearing ● Gear shift bush	SUNLIGHT2	003602010	—
	Steering gear box	Valiant grease M-2	003608001	—
	Disc brake	Niglube RX-2	003606000 or 725191040	—
	Drum brake	Molykote No. 7439	72519460	—
	● Brake pad ● Brake shoe	Molykote AS-880N	26298AC000	—
	Front axle SFJ	SSG-6003	28093TA000	—
	Rear axle BJ	Molykote No. 2	723223010	—
	Rear axle DOJ	VU-3A702	23223GA050	—
	● Control cable ● Throttle linkage ● Water pump ● Door latch ● Door striker	Slicolube G-30M	004404002	—

## 8. ADHESIVES SA05678G2210

Use the adhesives shown in the table below, or equivalent.

Adhesive	Application point	Recommended	Item number	Alternative
Adhesive	Windshield and body	Essex Chemical Crop's Urethane E	—	Sunstar 580
	Weatherstrip, rubber parts	Cemedine 5430L	—	3M's EC-1770 EC-1368
	Soft vinyl	Cemedine 540	—	3M's EC-776 EC-847 or EC-1022 (Spray type)
	Momentary sealant	Cemedine 3000	—	Armstrong's Eastman 910

## 9. SEAL MATERIAL SA05678G2209

Use seal material shown in the table below, or equivalent.

Seal material	Application point	Recommended	Item number	Alternative
	Engine case	Three Bond 1215	004403007	Dow Corning's No. 7038
	Transmission	Three Bond 1217B	K0877YA020	—
	Rear differential	Three Bond 1324	004403042	—
	Rear differential	Three Bond 1105	004403010	Dow Corning's No. 7038
	Weatherstrip	Starcalking B-33A	000018901	Butyl Rubber sealant
	Steering adjusting screw	Three Bond 1102	004403006	—
	SOHC cam cap	Three Bond 1280B	K0877YA018	—

# PRE-DELIVERY INSPECTION

## Pre-delivery Inspection

### 1. Pre-delivery Inspection

SA09719

#### A: GENERAL

SA09719G23

The purposes of the pre-delivery inspection (PDI) are as follows.

- Remove the additional parts used for ensuring the vehicle quality during transportation and restore the vehicle to its normal state.
- Check if the vehicle before delivery is in a normal state.
- Check for any damage or missing parts that may have taken place during transportation or storage.
- Make sure to provide a complete vehicle to the customer.

Because of the above reasons, all dealerships must always carry out the PDIs before delivering a vehicle.

In addition, all franchised shops and PDI centers must check the status of every vehicle received to identify who is responsible for any possible defects.

# PRE-DELIVERY INSPECTION

Pre-delivery Inspection

## B: PDI PROCEDURE

SA09719G50

Follow the procedures shown in the table below.

### Static Checks Just After Vehicle Receipt

Step	Check point
1. Appearance check	<ul style="list-style-type: none"> <li>(1) If the vehicle is covered with protective coating, visually check the vehicle body for damage and dents. If the protective coating has been removed, visually check the body paints for small areas of damage or stains.</li> <li>(2) Visually check the glass and light lenses for any damage and cracks or excessive gaps to the body sheet metal.</li> <li>(3) Visually check the plated parts for any damage.</li> </ul>
2. Tire check	<ul style="list-style-type: none"> <li>(1) Check the tires for damage, abnormal conditions, and dents on the wheels.</li> <li>(2) Check the tire air pressure.</li> </ul>
3. Check the doors for lock/unlock and open/close operations.	<ul style="list-style-type: none"> <li>(1) Using the key, check if the door can be locked and unlocked normally.</li> <li>(2) Open and close the all doors to see that there are no abnormal conditions.</li> </ul>
4. Power window operation check	<ul style="list-style-type: none"> <li>(1) Check the power window for correct operations.</li> </ul>
5. Operation check of trunk lock release lever	<ul style="list-style-type: none"> <li>(1) Operate the trunk lock release lever to check that the trunk opens normally.</li> </ul>
6. Operation check of rear gate lock release lever	<ul style="list-style-type: none"> <li>(1) Operate the rear gate lock release lever to check that the rear gate is unlocked normally.</li> </ul>
7. Operation check of fuel lid opener lock release lever	<ul style="list-style-type: none"> <li>(1) Operate the fuel lid opener to check that the fuel lid is unlocked normally.</li> </ul>
8. Accessory check	<p>Check the following accessories are provided:</p> <ul style="list-style-type: none"> <li>● Owner's manual</li> <li>● Warranty booklet</li> <li>● Service booklet</li> <li>● Spare key</li> <li>● Jack</li> <li>● Tool set</li> <li>● Spare tire</li> </ul>
9. Operation check of hood lock release system	<ul style="list-style-type: none"> <li>(1) Operate the hood lock release lever to check that the hood opens normally.</li> </ul>
10. Fuse installation	<ul style="list-style-type: none"> <li>(1) If the vehicle is about to be delivered to the customer, attach a room lamp fuse.</li> </ul>
11. Connection of air conditioner harness	<ul style="list-style-type: none"> <li>(1) If the vehicle is about to be delivered to the customer, connect the air conditioner harness.</li> </ul>
12. Battery	<ul style="list-style-type: none"> <li>(1) Check the battery for any abnormal conditions such as rust and trace of battery fluid leaks.</li> </ul>
13. Brake fluid	<ul style="list-style-type: none"> <li>(1) Check the fluid amount.</li> </ul>
14. Engine oil	<ul style="list-style-type: none"> <li>(1) Check the oil amount.</li> </ul>
15. Transmission fluid	<ul style="list-style-type: none"> <li>(1) Check the fluid amount.</li> <li>(2) For AT, check the front differential oil.</li> </ul>
16. AT front differential oil	<ul style="list-style-type: none"> <li>(1) Check the AT front differential oil amount.</li> </ul>
17. Coolant	<ul style="list-style-type: none"> <li>(1) Check the coolant amount.</li> </ul>
18. Clutch fluid	<ul style="list-style-type: none"> <li>(1) Check the clutch fluid amount.</li> </ul>
19. Window washer fluid	<ul style="list-style-type: none"> <li>(1) Check the window washer fluid amount.</li> </ul>
20. Hood latch check	<ul style="list-style-type: none"> <li>(1) Check that the hood is closed and latched securely.</li> </ul>
21. Keyless entry system	<ul style="list-style-type: none"> <li>(1) Check that the keyless entry system operates normally.</li> </ul>
22. Security system	<ul style="list-style-type: none"> <li>(1) Check that the security system operates normally.</li> </ul>
23. Seat	<ul style="list-style-type: none"> <li>(1) Check the seat surfaces for smears or dirt.</li> <li>(2) Check the seat installation conditions and functionality.</li> </ul>
24. Seat belt	<ul style="list-style-type: none"> <li>(1) Check the seat belt installation conditions and functionality.</li> </ul>
25. Child seat	<ul style="list-style-type: none"> <li>(1) Check that an instruction tag for handling a child seat is attached.</li> </ul>
26. Wheel alignment	<ul style="list-style-type: none"> <li>(1) Check that the wheel alignments are properly adjusted.</li> </ul>

# PRE-DELIVERY INSPECTION

## Pre-delivery Inspection

### Checks with the Engine Running

Step	Check point
1. Test mode connector	(1) Disconnect the test mode connector.
2. Operation check of shift lock system, key interlock, and starter interlock	(1) For a MT vehicle, check the starter interlock system operations. (2) For an AT vehicle, check the shift lock and key interlock system operations.
3. Starting condition	(1) Start the engine and check that the engine starts smoothly.
4. Exhaust system	(1) Check that the exhaust noise is normal and no leaks are found.
5. Indicator light	(1) Check that all the indicator lights operate normally.
6. Clock	(1) Check that the clock operate normally.
7. Radio	(1) Check that the radio system operates normally.
8. Cigarette lighter	(1) Check that the cigarette lighter operates normally.
9. Lighting system	(1) Check that the lighting systems operate normally.
10. Window washer	(1) Check that the window washer system operates normally.
11. Wiper	(1) Check that the wiper system operates normally.

### Dynamic Test with the Vehicle Running

Step	Check point
1. Brake test	(1) Check that the foot brake operates normally.
2. Parking brake	(1) Check that the parking brake operates normally.
3. AT shift control	(1) Check the AT shift patterns are correct.
4. Heater & ventilation	(1) Check that the heater & ventilation system operates normally.
5. Air conditioner	(1) Check that the air conditioner operates normally.
6. Cruise control	(1) Check that the cruise control system operates normally.

### Checks after Dynamic Test

Step	Check point
1. ATF level	(1) Check that the ATF level is normal.
2. Power steering fluid level	(1) Check that the power steering fluid level is normal.
3. Fluid leak check	(1) Check for fluid/oil leaks.
4. Water leak check	(1) Spray the vehicle with water and check for water leaks.
5. Appearance check 2	(1) Remove the protective coating (if any). (2) Check the body paints for damage and smears. (3) Check the plated parts for damage and rust.

# PRE-DELIVERY INSPECTION

Pre-delivery Inspection

## 1. APPEARANCE CHECK

SA09719G5001

- If the vehicle is covered with protective coating, visually check the vehicle body for damage and dents.
- If there is no protective coating, check the body paints for small areas of damage or stains and repair as necessary.
- Check the window glass, door glass, and lights for any cracks or damage and repair or replace the parts as necessary.
- Check the plated parts, such as the grilles and door knobs, for damage or loss of gloss and repair or replace the parts as necessary.

## 2. TIRE CHECK

SA09719G5002


- Check the tire outer faces for any damage.
- Check the tire air pressure by referring to the following table.

Tire size	Tire inflation pressure kPa (kg/cm <sup>2</sup> , psi)	
	Front	Rear
P195/60R15	230 (2.3, 33)	220 (2.2, 32)
P205/60R15	220 (2.2, 32)	210 (2.1, 30)
R205/55R16	220 (2.2, 32)	210 (2.1, 30)
P225/60R16	210 (2.1, 30)	200 (2.0, 29)

## 3. CHECK THE DOOR OPERATIONS, LOCK/UNLOCK AND OPEN/CLOSE, AS FOLLOWS.

SA09719G5003

Using the key, lock and unlock the door several times to check for normal operation. Open and close the door several times for smooth movement.

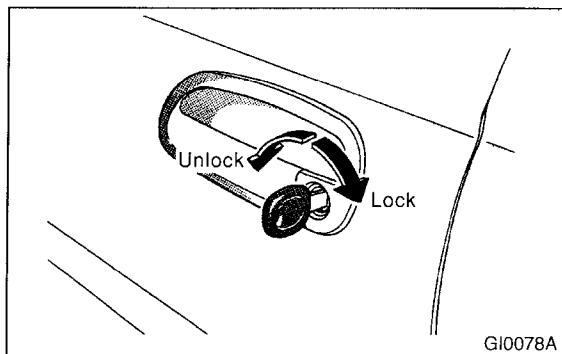

GI0078A


### • Vehicles with manual door locks:

Sit in the driver seat, close the door completely, and move the lock lever to the lock position. Then, pull the inside door handle to ensure the door will not open.

### • Vehicles with power door locks:

Sit in the driver seat, close the driver's door completely, and place the door lock knob (A) to the lock position. Then pull the all inside door handles (B) to ensure that the all doors will not open.

For other doors, place the lock levers to the lock positions and then pull the inside door handles to ensure that the doors will not open.

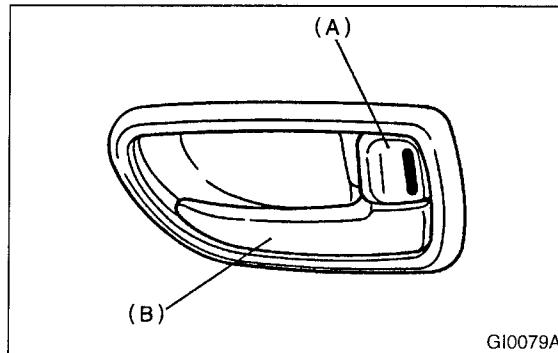

GI0079A

## 4. POWER WINDOW OPERATION CHECK

SA09719G5004

Manipulate the power window switches one by one to check that each of the power windows goes up and down with no abnormal noises.

## 5. OPERATION CHECK OF TRUNK LOCK RELEASE LEVER

SA09719G5005

Operate the trunk lock release lever and verify that the trunk lid opens.

## 6. OPERATION CHECK OF REAR GATE LOCK RELEASE LEVER

SA09719G5006

Operate the rear gate lock release lever and verify that the rear gate is unlocked and opened smoothly.

## 7. OPERATION CHECK OF FUEL LID OPENER LOCK RELEASE LEVER

SA09719G5007

Operate the fuel lid opener and verify that the fuel lid opens normally. Check that the filler cap is securely closed.



# PRE-DELIVERY INSPECTION

## Pre-delivery Inspection

### 8. ACCESSORY CHECK SA09719G5008



Check that the following accessories are provided in the luggage compartment or cargo area.

- Owner's manual
- Warranty booklet
- Service booklet
- Spare key
- Jack
- Tool set
- Spare tire

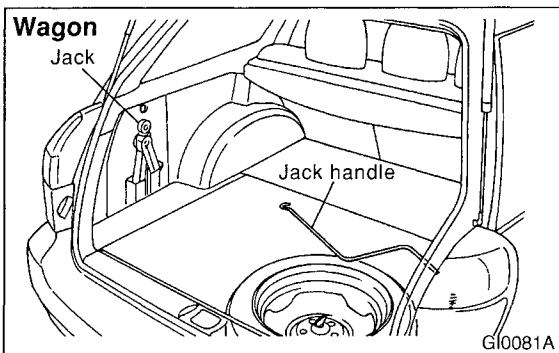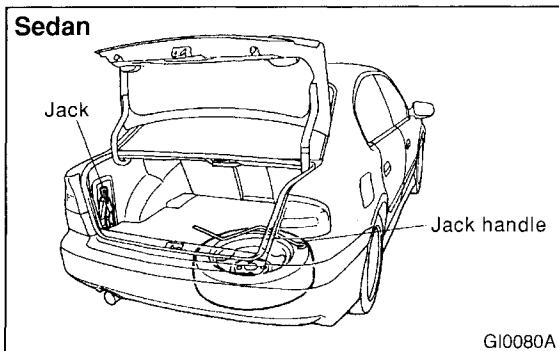


### 9. OPERATION CHECK OF HOOD LOCK RELEASE SYSTEM SA09719G5009

Unlatch and open the hood while checking that no abnormal conditions are found. Then, support the hood with the hood stay.

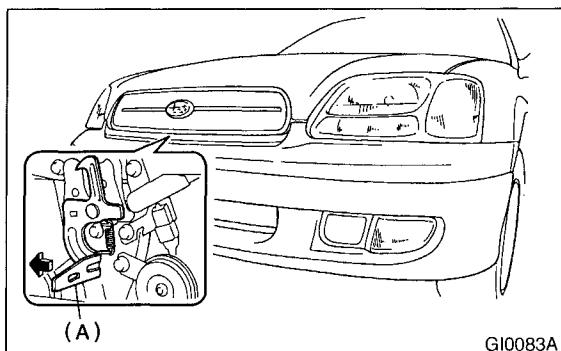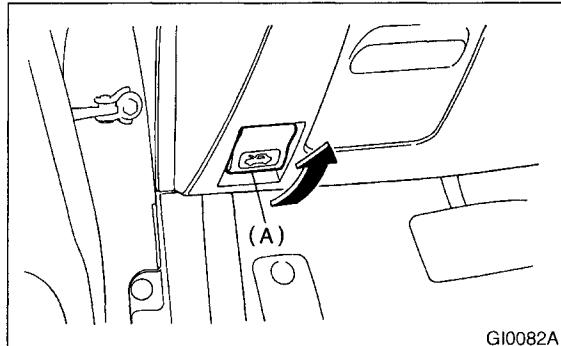


### 10. FUSE INSTALLATION SA09719G5010

A vehicle just delivered has no fuses for the room lamp circuit to prevent battery discharge. Attach a 15 A fuse as shown in the figure.

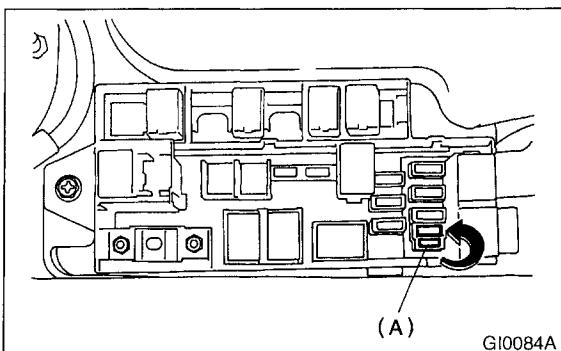


### 11. CONNECTION OF AIR CONDITIONER HARNESS SA09719G5011

A vehicle just delivered has its air conditioner harness disconnected to protect the air conditioner compressor. Connect the harness as shown in the figure.

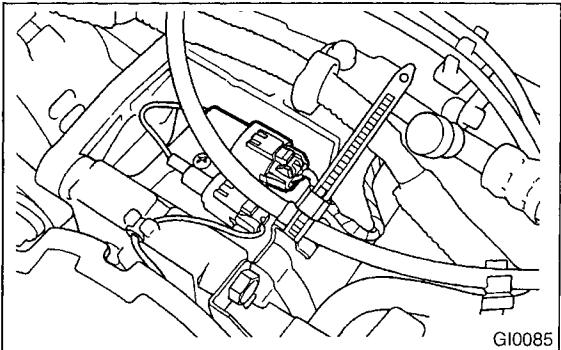

### 12. BATTERY SA09719G5012

Check the battery terminals to make sure that no rust or corosions due to fluid leaks are found. Check that the battery tent is securely tightened.

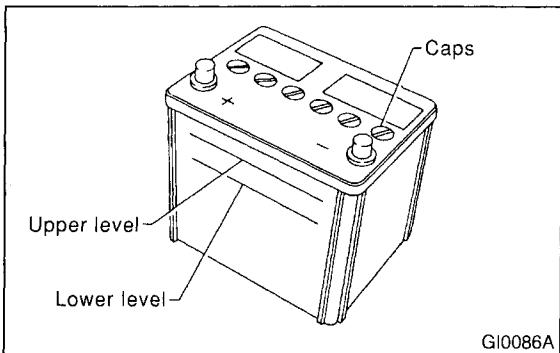


### 13. BRAKE FLUID SA09719G5013

Check the brake fluid amount. If the amount is insufficient, carry out a brake line test to identify brake fluid leaks and check the brake operation. After that, refill the brake fluid tank with the specified type of fluid.


### 14. ENGINE OIL SA09719G5014

Check the engine oil amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified engine oil.

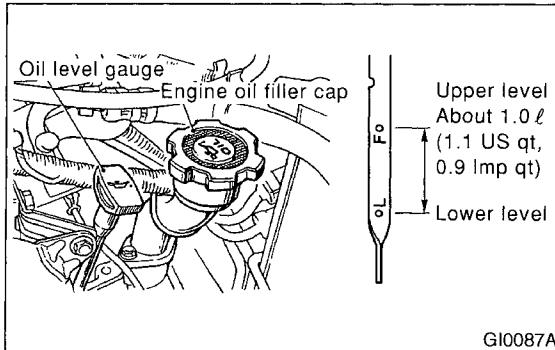


### 15. TRANSMISSION FLUID SA09719G5015

Check the transmission fluid amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified fluid.

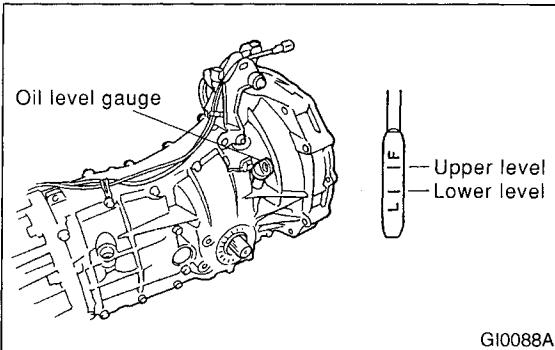

### 16. AT FRONT DIFFERENTIAL OIL SA09719G5016

Check the AT front differential oil amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified AT front differential oil.

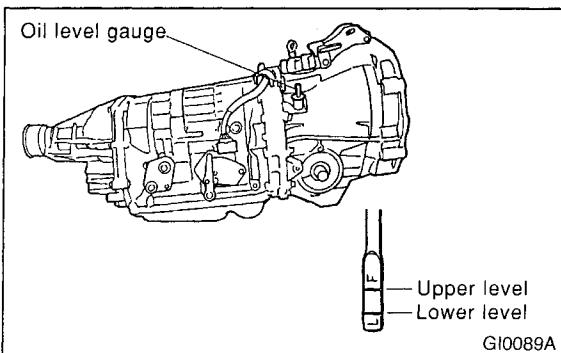

# PRE-DELIVERY INSPECTION


## Pre-delivery Inspection

### 17. COOLANT SA09719G5017

Check the coolant amount on the reservoir. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of coolant with the specified concentration.

### 18. CLUTCH FLUID SA09719G5018

Check the clutch fluid amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of the specified fluid.

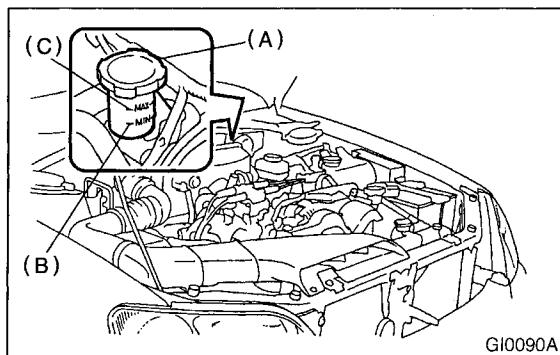

### 19. WINDOW WASHER FLUID SA09719G5019

Check the window washer fluid amount. If the amount is insufficient, check that no leaks are found. Then, add the necessary amount of washer fluid commercially available.


### 20. HOOD LATCH CHECK SA09719G5020

Retract the hood stay and close the hood. Check that the hood is securely latched.

### 21. KEYLESS ENTRY SYSTEM SA09719G5021


Check the keyless entry system operations as follows.

- Open all the door windows fully.
- Remove the key from the ignition switch and close all the doors including rear gate (wagon).
- Press the “LOCK/ARM” button on the transmitter momentarily once and check if all the doors are locked and the horn chirps once.

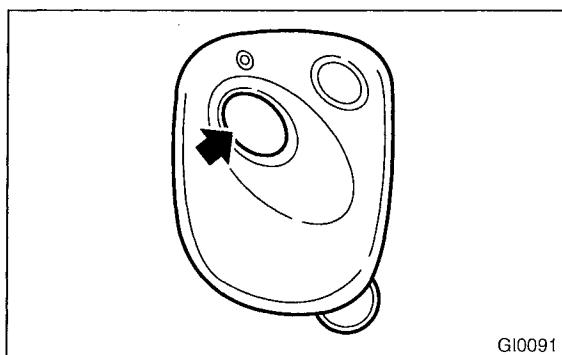

GI0091

- Press the “UNLOCK/DISARM” button on the transmitter momentarily once and check if the driver’s door is unlocked, the horn chirps twice and the dome light illuminates.

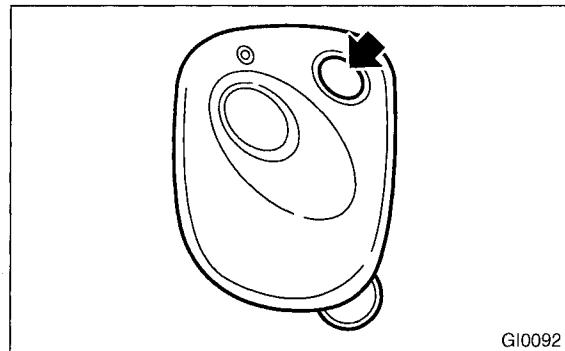


GI0092

- Press the “UNLOCK/DISARM” button on the transmitter momentarily once again and check if all the doors including the rear gate on wagon are unlocked.

- Press the “LOCK/ARM” button on the transmitter a little bit of time (approx. 1.5 sec.) and check if a panicking condition occurs; the horn sounds continuously. Also, check if that condition lasts for 30 seconds or until any button of the transmitter is pressed.

- Press the “LOCK/ARM” button on the transmitter momentarily once with one of the doors including the rear gate (wagon) open and check if the horn chirps three times to warn of a door ajar. Then, bring all doors including the rear gate (wagon) in closed condition and check if all the doors are locked and the horn chirps once.

- Press the “LOCK” side of the power door locking switch with any one of the doors including the rear gate (wagon) open. Then, bring all the doors including the rear gate (wagon) in the closed condition and check if all the doors are locked and the horn chirps once.

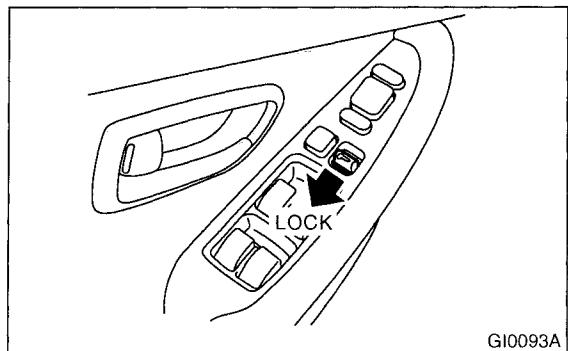


GI0093A

## 22. SECURITY SYSTEM SA09719G5022


Check the security system operations as follows.

- Open all the door windows fully.
- Remove the key from the ignition switch and close all the doors including rear gate (wagon).
- Press the “LOCK/ARM” button on the transmitter momentarily once and check if all the doors are locked, the horn chirps once, the parking lights flash once and the security indicator light flashes slowly to ensure that the security system has been brought into the arming state.

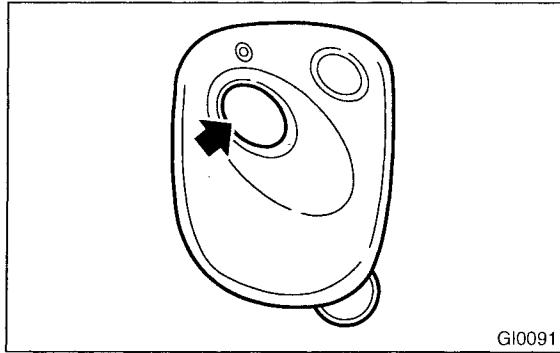

GI0091

- Press the “UNLOCK/DISARM” button on the transmitter momentarily once and check if the driver’s door is unlocked, the horn chirps twice, the parking lights flash twice, the dome light illuminates and the security indicator light goes off to ensure that the system has been brought into the disarming state.

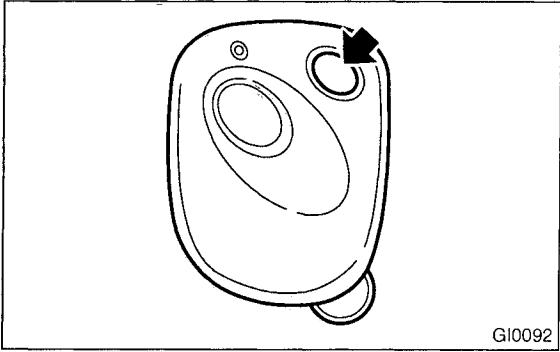


GI0092

- Press the “UNLOCK/DISARM” button on the transmitter momentarily once again and check if all the doors including the rear gate on wagon are unlocked.
- Press the “LOCK/ARM” button on the transmitter a little bit of time (approx. 1.5 sec.) and check if a panicking condition occurs; the horn sounds continuously, the parking lights flash and the security indicator light flashes rapidly. Also, check if that condition lasts for 30 seconds or until any button of the transmitter is pressed.
- Press the “LOCK/ARM” button on the transmitter momentarily once with one of the doors including the rear gate (wagon) open and check if the horn chirps three times to warn of a door ajar.

Then, bring all doors including the rear gate (wagon) in closed condition and check if the arming condition is brought about; all the doors are locked, the horn chirps once and the parking lights flash once.

- Press the “LOCK” side of the power door locking switch with any one of the doors including the rear gate (wagon) open. Then, bring all the doors including the rear gate (wagon) in the closed condition and check if all the doors are locked, the horn chirps once and the parking lights flash once to ensure that the security system has been brought into the arming state.

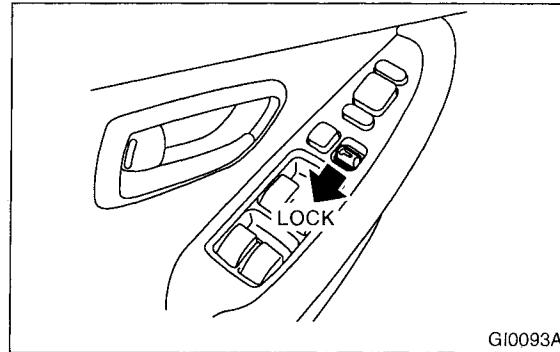

GI0093A

- Unlock a door using the inner lock knob or the key and open the door while the security system is in the arming state. Check to ensure that the alarming condition occurs, i.e. the horn sounds continuously, the parking lights flash and the security indicator light flashes rapidly, and that it lasts for 30 seconds or until the “UNLOCK/DISARM” button on the transmitter is pressed. Also, check to ensure that turning the ignition key to the “START” position in the arming state does not cause the starter motor to turn, thus the engine being prevented from starting.
- Apply a shock to the vehicle body with the security system in arming state, and check to ensure that the alarming condition occurs.
- Troubleshoot the security system if any one of the above-mentioned checks does not meet the requirements.

## 23. SEAT SA09719G5023

Check that each seat provides full functionality in sliding and reclining. Check all available functions of the rear seat such as a trunk-through center arm rest.

## 24. SEAT BELT SA09719G5024


Pull out the seat belt and then release it. Check that the belt webbing retracts smoothly.

# PRE-DELIVERY INSPECTION

## Pre-delivery Inspection

### 25. CHILD SEAT SA09719G5025

Check that an instruction tag for handling a child seat is attached to the specified position.

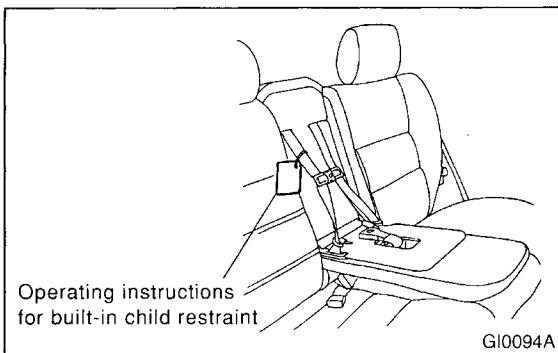


### 26. WHEEL ALIGNMENT SA09719G5026

Check the wheel alignments. <Ref. to FS-6 Wheel Alignment.> and <Ref. to RS-8 Wheel Alignment.>

### 27. TEST MODE CONNECTOR SA09719G5027

Turn the ignition switch to ON and check that the check-engine light starts blinking. If the light blinks, return the ignition key to LOCK and disconnect the test mode connector. Then, turn the ignition key to ON again. If the check-engine light blinks at that time in spite of the disconnected test mode connector, carry out an engine diagnosis.

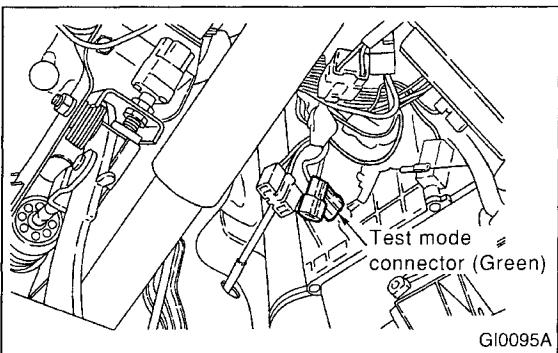

### 28. OPERATION CHECK OF SHIFT LOCK SYSTEM, KEY INTERLOCK, AND STARTER INTERLOCK SA09719G5028

- For a MT vehicle, check the starter interlock system operations.
- For an AT vehicle, check the shift lock and key interlock system operations.

### 29. STARTING CONDITION SA09719G5029

Start the engine and check that the engine starts smoothly. If any battery voltage problems are found, recharge or replace the battery. If any abnormal noises are observed, immediately stop the engine and check and repair the necessary components.

### 30. EXHAUST SYSTEM SA09719G5030

Listen to the exhaust noise to see if no abnormal noises are observed.

### 31. INDICATOR LIGHT SA09719G5031

Check that all the indicator lights are off.

### 32. CLOCK SA09719G5032

Check the clock for normal operations and enough accuracy.

### 33. RADIO SA09719G5033

Check the radio for full functionality and normal noise level. Also check the CD unit operations.

### 34. CIGARETTE LIGHTER SA09719G5034

Check that the cigarette lighter operations.

### 35. LIGHTING SYSTEM SA09719G5035


- Check the headlight operations.
- Check the brake light operations.
- Check the other lights for normal operations.

# PRE-DELIVERY INSPECTION

Pre-delivery Inspection

## 36. WINDOW WASHER SA09719G5036

Check that the window washer system injects washer fluid to the specified area of the windshield shown in the figure.

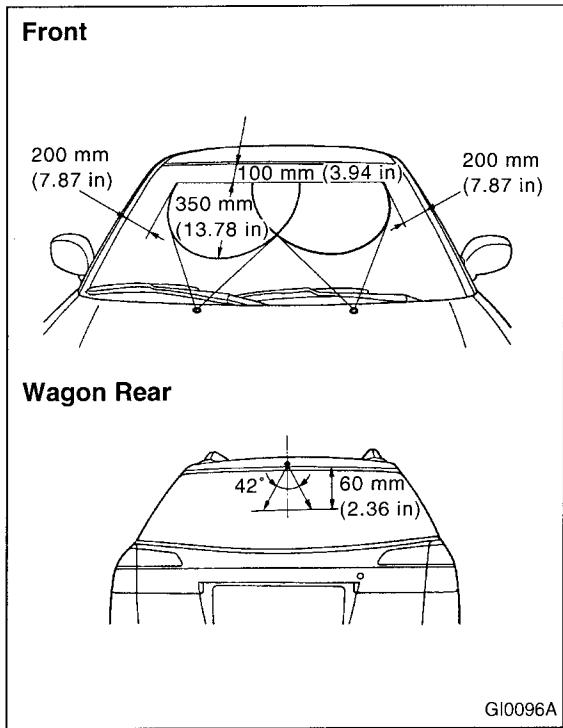

## 37. WIPER SA09719G5037

Check the front and rear wipers for normal operations.

## 38. BRAKE TEST SA09719G5038


Check the foot brake for normal operations.

## 39. PARKING BRAKE SA09719G5039

Check the parking brake for normal operations.

## 40. AT SHIFT CONTROL SA09719G5041

Set the AT select lever to each gear position while checking that the demanded gear position is correctly attained.

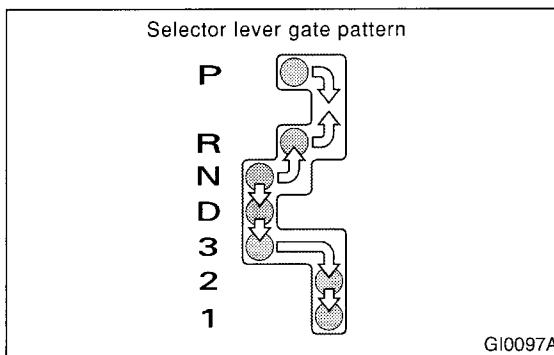

Selector Position	Gear Position			
	1st	2nd	3rd	4th
D	Yes	Yes	Yes	Yes
3	Yes	Yes	Yes	
2		Yes		
1	Yes			

## 41. HEATER & VENTILATION SA09719G5042

Operate the heater and ventilation system to check for normal airflow and heating capacity.

## 42. AIR CONDITIONER SA09719G5043


Operate the air conditioner. Check that the A/C compressor operates normally and enough cooling is provided.

## 43. CRUISE CONTROL SA09719G5044

Operate the cruise control system. Check that the system is activated and deactivated correctly.

## 44. ATF LEVEL SA09719G5045

Check that the ATF level is normal. If insufficient, check that no leaks are found. Then add the necessary amount of the specified ATF.

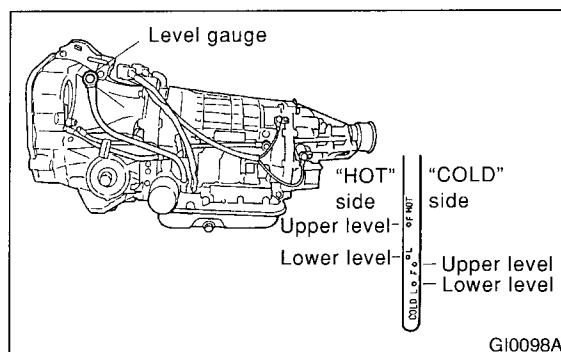


# PRE-DELIVERY INSPECTION

## Pre-delivery Inspection

### 45. POWER STEERING FLUID LEVEL

SA09719G5046

Check that the power steering fluid level is normal. If insufficient, check that no leaks are found. Then add the necessary amount of the specified power steering fluid.

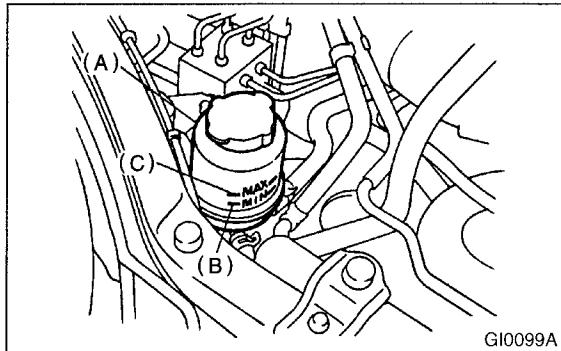

### 46. FLUID LEAK CHECK

SA09719G5047

Check the entire areas of the vehicle for any trace of coolant/oil/fluid leaks.

### 47. WATER LEAK TEST

SA09719G5048

Spray the vehicle with water and check that no water enters the passenger compartment.

- Before performing the water leakage test, remove anything that may obstruct the operation or which must be kept dry.

- Close all of the windows completely, and then close all of the doors tightly. Close the hood and trunk lid before starting the test.

- Connect a hose to a tap, and spray water on the vehicle. The rate of water discharge must be approx. 20 to 25 liters (5.3 to 6.6 US gal, 4.4 to 5.5 Imp gal) per minute.

When spraying water on areas adjacent to the floor and wheel house, increase the pressure. When directing water on areas other than the floor portion and wheel house, decrease the pressure. But the force of water must be made strong occasionally by pressing the end of the hose.

#### NOTE:

Be sure to keep the hose at least 10 cm (3.9 in) from the vehicle.

- Check the following areas:

- Front window and body framework mating portion
- Door mating portions
- Glass mating portions
- Rear quarter window mating portions
- Rear window and body framework mating portion
- Around roof drips

- If any dampness in the compartments is discovered after the water has been applied, carefully check all areas that may have possibly contributed to the leak.

### 48. APPEARANCE CHECK 2

SA09719G5049

Check the vehicle body paints, plated faces, glass, and lenses for any dirt or damage.

# GENERAL DESCRIPTION

Periodic Maintenance Services

---

## 1. General Description SA07001

### A: GENERAL SA07001G23

Be sure to perform periodic maintenance in order to maintain vehicle performance and find problems before they become serious.

# SCHEDULE

Periodic Maintenance Services

## 2. Schedule SA07682

### A: MAINTENANCE SCHEDULE 1 SA07682G24

	MAINTENANCE INTERVAL																		Remarks		
	[Number of months or km (miles), whichever occurs first]																				
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120			
	× 1,000 km			4.8		12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192
	× 1,000 miles			3		7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
1	Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3	Spark plugs					R				R			R					R	For 2.5 L		
										R								R	For 3.0 L		
4	Drive belt(s)					I				I				I		R					
5	Camshaft Drive belt					I				I				I		R			For 2.5 L	Note (1)	
6	Valve clearance															I					
8	Fuel line					(I)				(I)				(I)				I	Note (2)		
9	Fuel filter					(R)				(R)				(R)			R	Note (2)			
10	Air cleaner element					R				R				R			R	Note (3)			
11	Cooling system					I				I				I			I				
12	Coolant					R				R				R			R				
13	Clutch system	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
14	Transmission oil					I				I				I			I				
15	ATF					I				I				I			I	Note (4)			
16	Front & rear differential oil					I				I				I			I				
17	Brake line		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
18	Brake fluid					R				R				R			R				
19	Disc brake pads & discs					I				I				I			I				
20	Brake linings and drums					I				I				I			I				
21	Parking brake	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
22	Suspension	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
23	Wheel bearing									(I)							(I)				
24	Axle boots & joints	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
25	Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note (5)		
26	Steering system (Power steering)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
27	Supplement restraint system																				

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

(1) Periodic inspection and replacement of the camshaft drive chains on the 3.0 liter models are not required.

(2) This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

(3) When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

(4) ATF filter is maintenance free part. ATF filter needs replacement, when it has physically damaged or ATF leaked.

(5) A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

# SCHEDULE

Periodic Maintenance Services

## B: MAINTENANCE SCHEDULE 2


SA07682G25

Item	Every	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel filter	15 months				I		
	24,000 km						
	15,000 miles						
Fuel line	15 months				I		
	24,000 km						
	15,000 miles						
Transmission oil	15 months						R
	24,000 km						
	15,000 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
Front & rear differential oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pads & discs	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Brake linings and drums	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Parking brake	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Suspension	7.5 months		I	I	I		I
	12,000 km						
	7,500 miles						
Axe boots & joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months		I	I	I		I
	12,000 km						
	7,500 miles						


### 3. Engine Oil SA07077

#### A: REPLACEMENT SA07077A20

- 1) Drain engine oil by loosening engine oil drain plug.

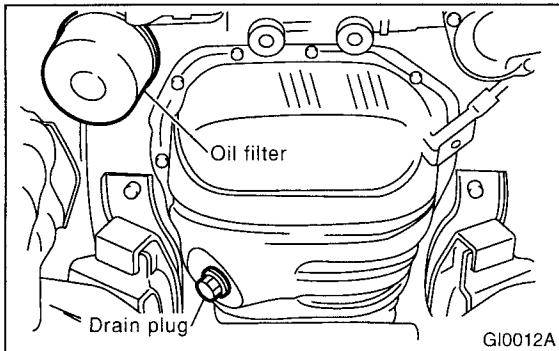


- 2) Open engine oil filler cap for quick draining of the engine oil.

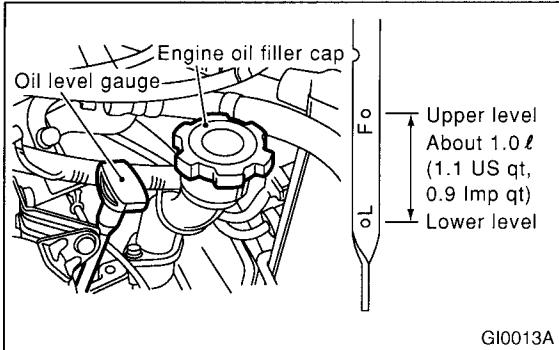

- 3) Replace drain plug gasket.
- 4) Tighten engine oil drain plug after draining engine oil.

#### Tightening torque:

44 N·m (4.5 kgf·m, 33 ft·lb)

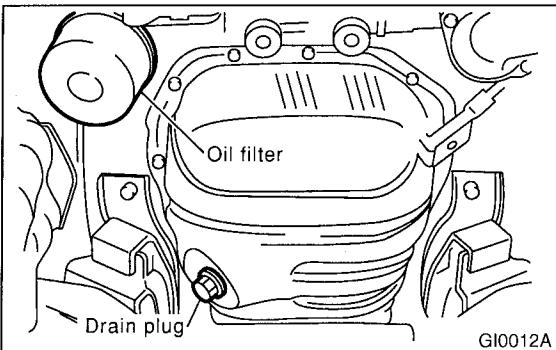

- 5) Fill engine oil through filler pipe up to upper point on level gauge. Make sure that vehicle is placed level when checking oil level. Use engine oil of proper quality and viscosity, selected in accordance with the table in figure.


#### Engine oil capacity:

##### Upper level

4.0 ℥ (4.2 US qt, 3.5 Imp qt)

##### Lower level

3.0 ℥ (3.2 US qt, 2.6 Imp qt)

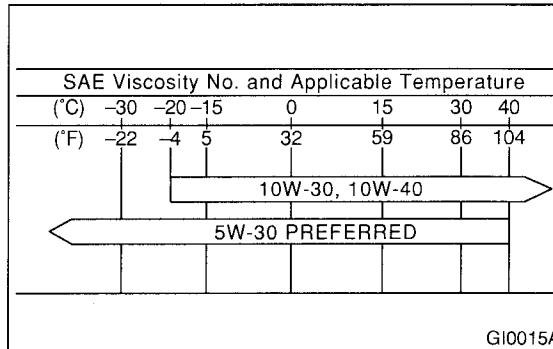

The proper viscosity helps vehicle get good cold and hot starting by reducing viscous friction and thus increasing cranking speed.

#### NOTE:


- When replenishing oil, it does not matter if the oil to be added is a different brand from that in the engine; however, use oil having the API classification and SAE viscosity No. designated by SUBARU.

- If vehicle is used in desert areas with very high temperatures or for other heavy duty applications, the following viscosity oils may be used:

API classification: SJ or SH

SAE Viscosity No.: 30, 40, 10W-50, 20W-40, 20W-50

- 6) Close engine oil filler cap.
- 7) Start engine and warm it up for a time.
- 8) After engine stops, recheck the oil level. If necessary, add engine oil up to upper level on level gauge.

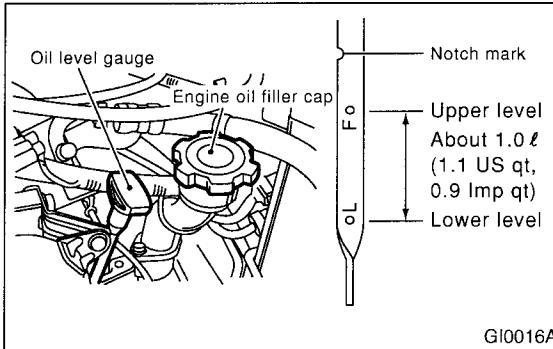

## B: INSPECTION SA07077A10

- 1) Park vehicle on a level surface.
- 2) Remove oil level gauge and wipe it clean.
- 3) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in the proper orientation.
- 4) Remove it again and note the reading. If the engine oil level is below the "L" line, add oil to bring the level up to the "F" line.
- 5) After turning off the engine, wait a few minutes for the oil to drain back into the oil pan before checking the level.
- 6) Just after driving or while the engine is warm, engine oil level may show in the range between the "F" line and the notch mark. This is caused by thermal expansion of the engine oil.
- 7) To prevent overfilling the engine oil, do not add oil above the "F" line when the engine is cold.

## 4. Engine Oil Filter


SA07585

### A: REPLACEMENT

SA07585A20

1) Remove oil filter with ST.

ST 498547000 OIL FILTER WRENCH

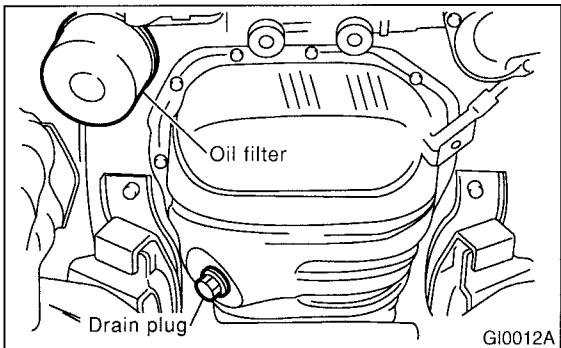

2) Get a new oil filter and apply a thin coat of engine oil to the seal rubber.

3) Install oil filter by turning it by hand, being careful not to damage seal rubber.

4) Tighten more (approximately 2/3 to 3/4 turn) after the seal rubber contacts the oil pump case. Do not tighten excessively, or oil may leak.

5) After installing oil filter, run engine and make sure that no oil is leaking around seal rubber.

#### NOTE:

The filter element and filter case are permanently joined; therefore, interior cleaning is not necessary.

6) Check the engine oil level. <Ref. to PI-7 ENGINE OIL, PDI PROCEDURE, Pre-delivery Inspection.>


## 5. Spark Plugs

SA07683

### A: REPLACEMENT

SA07683A20

- 1) Remove intake duct and intake chamber.
- 2) Remove washer tank and put it aside.
- 3) Disconnect spark plug cord.
- 4) Remove spark plug with a plug-wrench.

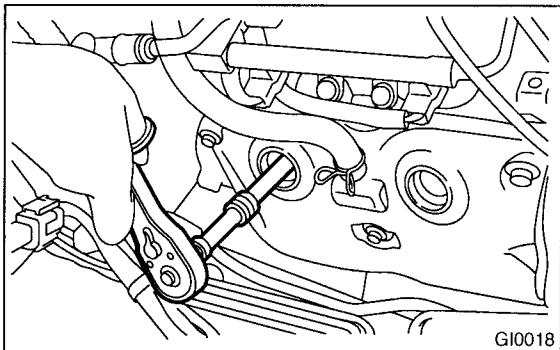

- 5) Set new spark plug.

**Recommended spark plug:**

**CHAMPION RC10YC4**

**CHAMPION RC8YC4**

**NGK BKR6E-11**

**NIPPONDENSO K20PR-U11**

**Spark plug gap**

**1.0 — 1.1 mm (0.039 — 0.043 in)**

- 6) Tighten spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

**Tightening torque:**

**20.6 N·m (2.10 kgf-m, 15.19 ft-lb)**

**NOTE:**

- Be sure to place the gasket between the cylinder head and spark plug.
- If torque wrench is not available, tighten spark plug until gasket contacts cylinder head; then tighten further 1/4 to 1/2 turns.

## 6. Drive Belt(s) SA07684

### A: INSPECTION SA07684A10

- 1) Replace belts, if cracks, fraying or wear is found.
- 2) Check drive belt tension and adjust it if necessary by changing generator installing position and/or idler pulley installing position.

#### Belt tension

(A)


replaced: 7 — 9 mm (0.276 — 0.354 in)  
reused: 9.0 — 10.0 mm (0.354 — 0.394 in)

(B)\*

replaced: 7.5 — 8.5 mm (0.295 — 0.335 in)

reused: 9.0 — 10.0 mm (0.354 — 0.394 in)

\*: There is no belt (B) on models without an air conditioner.

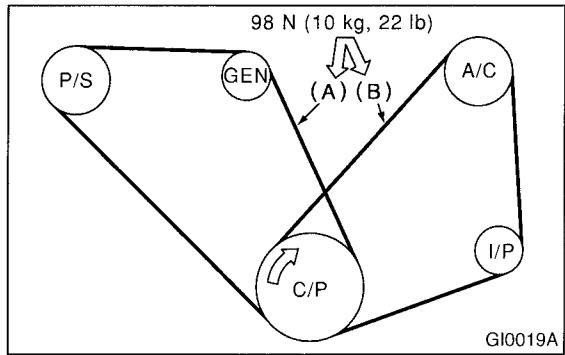

C/P Crankshaft pulley

GEN Generator

P/S Power steering oil pump pulley


A/C Air conditioning compressor pulley

I/P Idler pulley

## B: REPLACEMENT SA07684A20

### 1. V-BELT COVER SA07684A2001

- 1) Remove V-belt cover.

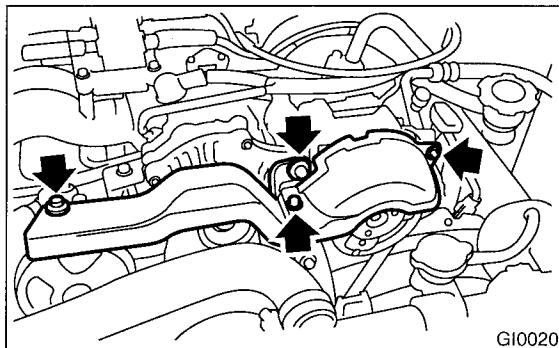

### 2. FRONT SIDE BELT (DRIVING POWER STEERING OIL PUMP AND GENERATOR)

SA07684A2002

#### NOTE:

Wipe off any oil or water on the belt and pulley.

- 1) Loosen the lock bolt (A).
- 2) Loosen the slider bolt (B).
- 3) Remove the front side belt (C).
- 4) Install a new belt, and tighten the slider bolt so as to obtain the specified belt tension.
- 5) Tighten the slider bolt (B).
- 6) Tighten the lock bolt (A).


#### Tightening torque:

##### Lock bolt, through bolt:

25 N·m (2.5 kgf-m, 18 ft-lb)

##### Slider bolt:

8 N·m (0.8 kgf-m, 5.8 ft-lb)

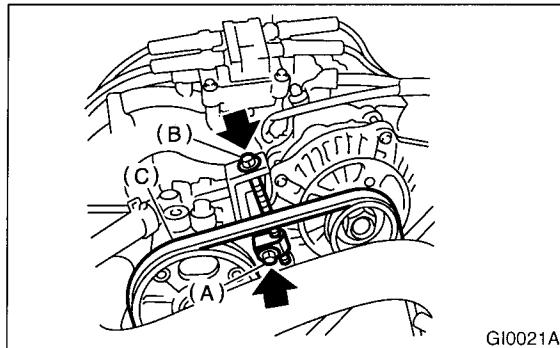

## 3. REAR SIDE BELT (DRIVING AIR CONDITIONER)

SA07684A2003


### NOTE:

- Wipe off any oil or water on the belt and pulley.
- Before removing the rear side belt, remove the front side belt.

- 1) Loosen the lock nut (A).
- 2) Loosen the slider bolt (B).
- 3) Remove the rear side belt.
- 4) Install a new belt, and tighten the slider bolt so as to obtain the specified belt tension.
- 5) Tighten the slider bolt (B).
- 6) Tighten the lock nut (A).

### ***Tightening torque:***


***22.6 N·m (2.3 kgf-m, 16.6 ft-lb)***

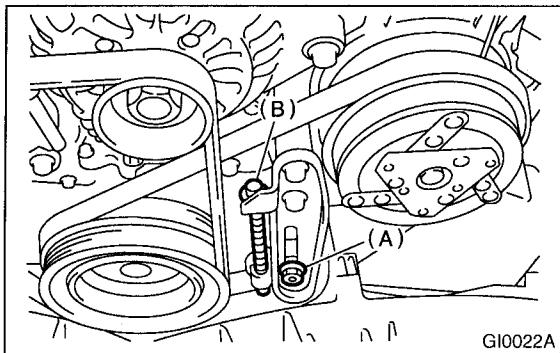


## 7. Camshaft Drive Belt SA07685

### A: REPLACEMENT SA07685A20

- 1) Remove radiator fan <Ref. to CO(H4)-20 Radiator Main Fan and Fan Motor.> and air conditioner fan <Ref. to CO(H4)-23 Radiator Sub Fan and Fan Motor.>.
- 2) Remove V-belt cover.

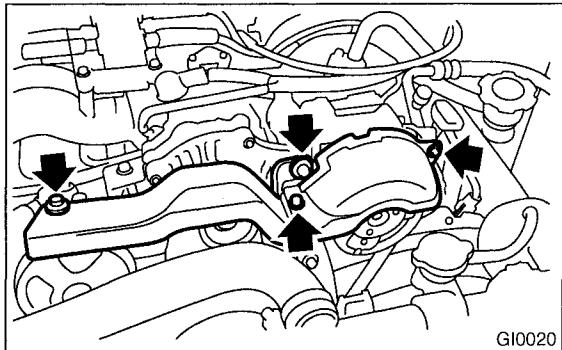


- 3) Remove V-belts. <Ref. to ME(H4)-43 V-belt.>
- 4) Remove air conditioning compressor drive belt tensioner.
- 5) Remove pulley bolt. To lock crankshaft use ST. ST 499977100 CRANKSHAFT PULLEY WRENCH

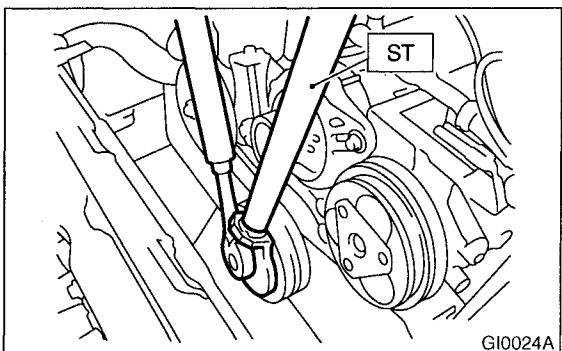


- 6) Remove crankshaft pulley.
- 7) Remove left side belt cover.
- 8) Remove front belt cover.


- 9) Turn crankshaft and align alignment marks on crankshaft, and left and right camshaft sprockets with notches of belt cover and cylinder block: ST 499987500 CRANKSHAFT SOCKET

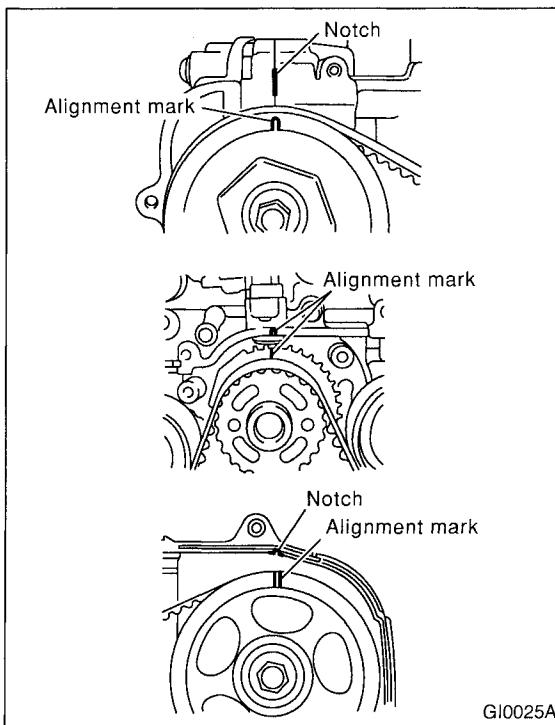

- 10) Remove belt idler.
- 11) Remove belt idler (No. 2).

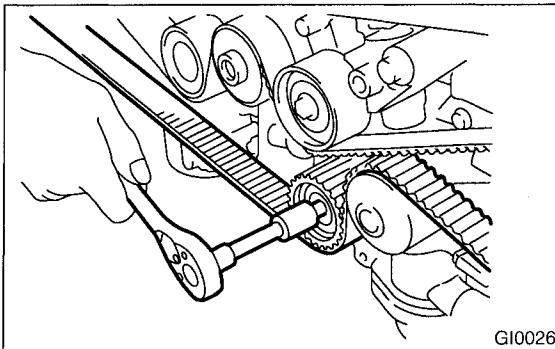

- 12) Remove timing belt.
- 13) Remove automatic belt tension adjuster assembly.

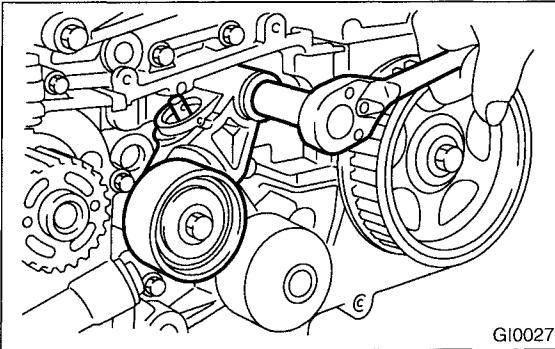

# CAMSHAFT DRIVE BELT

## B: INSTALLATION

SA07685A11

To install, reverse order of removal procedures.


### NOTE:

When installing the timing belt, be sure to align all alignment marks on the belt with corresponding marks on the sprockets. If incorrectly installed, interference between pistons and valves may occur.

## C: INSPECTION

SA07685A10

- 1) Remove left and right timing belt covers.
- 2) While cranking engine at least four rotations, check timing belt back surface for cracks or damage. Replace faulty timing belt as needed.
- 3) Measure timing belt width W. If it is less than 27 mm (1.06 in), check idlers, tensioner, water pump pulley and cam sprocket to determine idler alignment (squareness). Replace worn timing belt.

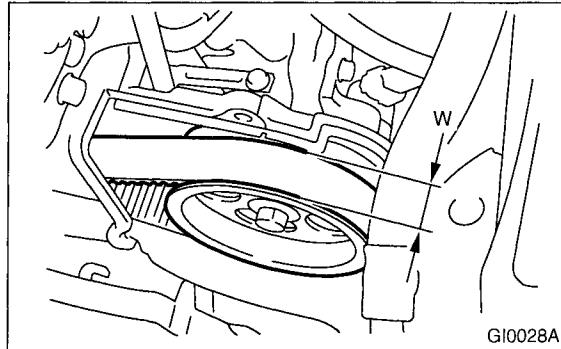

- 4) Install left and right timing belt covers.

## 8. Valve Clearance SA07083

### A: INSPECTION SA07083A10

For the inspection procedures of the valve clearance: <Ref. to ME(H4)-53 Valve Rocker Assembly.>

## 9. Fuel Line SA07686

### A: INSPECTION SA07686A10

The fuel line is located mostly internally, so check pipes, areas near pipes, and engine compartment piping for rust, hose damage, loose bands, etc. If faulty parts are found, repair or replace them. <Ref. to FU(H4)-98 Fuel Delivery, Return and Evaporation Lines.>

## 10. Fuel Filter

SA07027

### A: REPLACEMENT

SA07027A20

#### WARNING:


- Place "No fire" signs near the working area.
- Disconnect ground cable from battery.

#### CAUTION:

Be careful not to spill fuel on the floor.

1) Before removing the hose, filter, pump, etc., be sure to release the fuel pressure, as follows:

- Disconnect the wiring connector of the fuel pump.
- Crank the engine for more than five seconds. If the engine starts, let the engine run until it stops.
- After turning IG switch OFF, connect the wiring connector of the fuel pump.
- Disconnect ground cable from battery.
- Loosen the screw of the hose clamp and pull off the hose from the filter.
- Remove the filter from the holder.
- Replace fuel filter with a new one.

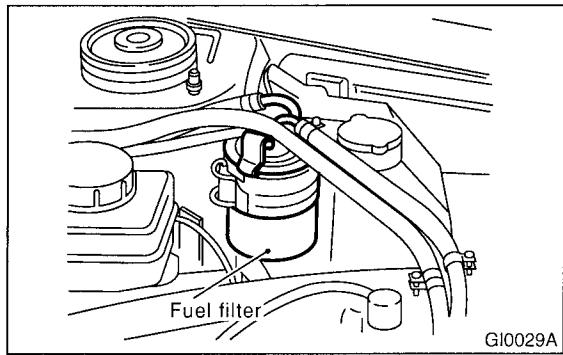


5) Install the hoses as shown in the figure.

#### Tightening torque:

1.0 — 1.5 N·m (0.1 — 0.15 kgf·m, 0.7 — 1.1 ft-lb)

#### CAUTION:

- If the hose is damaged at the clamping portion, replace the hose with a new one.
- If the hose clamp is deformed too much, replace with a new one.
- Correct the hose position by removing any twist so that it will not interfere with the filter body or washer tank, before tightening the screw of the hose clamp.

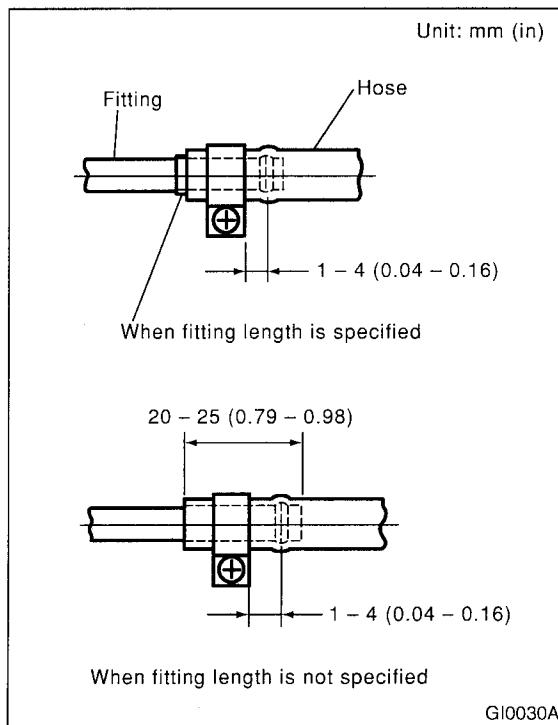


6) Install the fuel filter bracket to the vehicle body. And tighten the bolts to the specified torque.

#### NOTE:

Make sure that the clamp screw is not loose.

#### Tightening torque:


7.35 N·m (0.75 kgf·m, 5.45 ft-lb)

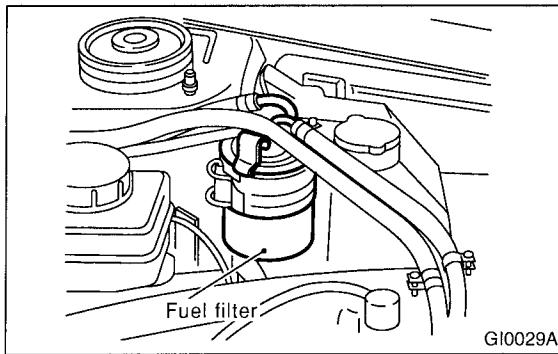

## 11. Air Cleaner Element SA07687

### A: REPLACEMENT SA07687A20

Do not attempt to clean the air cleaner element. The filter paper of the element is wetted with a special non-inflammable slow-evaporating viscous liquid. It is resistant to cold weather and has a long service life. Dirt adhering to this filter paper forms porous laminations with the viscous liquid, which function as a filtration layer to reduce dust penetration into the filter paper. If this filter paper is cleaned, the filtration layer thus formed will be lost along with the viscous liquid.

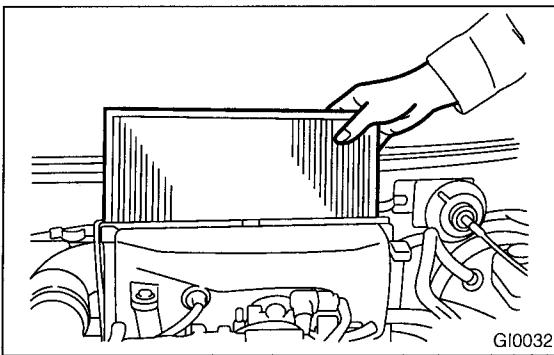

## 12. Cooling System

SA07688

### A: INSPECTION


SA07688A10

1) Check radiator for leakage, filling it with coolant and attach radiator cap tester (A) to the filler neck. Then apply a pressure of 157 kPa (1.6 kg/cm<sup>2</sup>, 23 psi) and check the following points:

- Each portion of radiator for leakage
- Hose joints and other connections for leakage

NOTE:

- When attaching or detaching tester and when operating tester, use special care not to deform radiator filler neck.

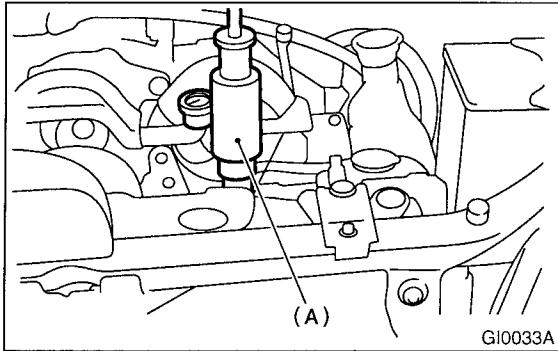

- When performing this check, be sure to keep the engine stationary and fill radiator with coolant.
- Wipe off check points before applying pressure.
- Use care not to spill coolant when detaching tester from radiator.

2) Check the radiator cap valve open pressure using radiator cap tester.

NOTE:

Rust or dirt on cap may prevent valve from functioning normally: be sure to clean cap before testing.

Raise the pressure until the needle of gauge stops and see if the pressure can be retained for five to six seconds. The radiator cap is normal if a pressure above the service limit value has been maintained for this period.



#### Radiator cap valve open pressure

**Standard value:**

93 — 123 kPa (0.95 — 1.25 kg/cm<sup>2</sup>, 14 — 18 psi)

**Service limit:**

83 kPa (0.85 kg/cm<sup>2</sup>, 12 psi)

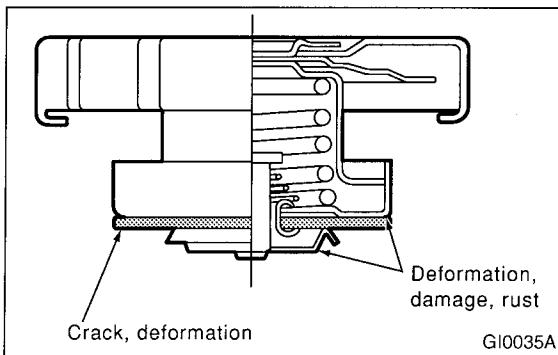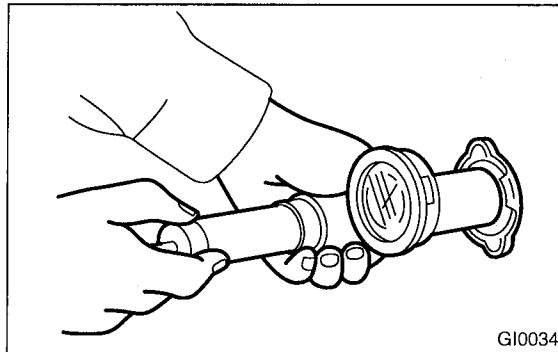


- 3) If the coolant temperature exceeds 76.0 to 80.0°C (169 to 176°F) while radiator is not so hot, check thermostat. If thermostat does not open at 76.0 to 80.0°C (169 to 176°F), replace it with a new one.
- 4) If electric fan does not operate when coolant temperature exceeds 90 to 94°C (194 to 201°F), check thermoswitch or fan motor.

**13. Coolant** SA07689**A: REPLACEMENT** SA07689A20**1. REPLACEMENT OF COOLANT** SA07689A2001**WARNING:**

The radiator is of the pressurized type. Do not attempt to open the radiator cap immediately after the engine has been stopped.

- 1) Lift up the vehicle.
- 2) Remove under cover.
- 3) Place a container under drain pipe.
- 4) Loosen and remove drain screw (A) to drain engine coolant into container.

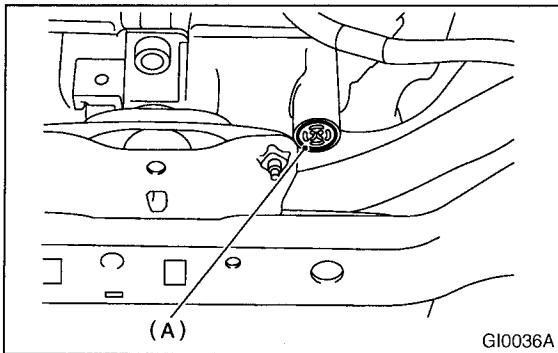

- 5) For quick draining, open radiator cap.

**CAUTION:**

Be careful not to spill coolant on the floor.

- 6) Drain coolant from reservoir tank.
- 7) Tighten radiator drain screw securely after draining coolant.
- 8) Slowly pour prepared coolant from radiator filler port to neck of filler, then pour into reservoir tank up to "FULL" level.

**Coolant capacity (fill up to "FULL" level)****MT model:**

Approx. 6.8 ℥ (7.2 US qt, 6.0 Imp qt)

**AT model:**

Approx. 6.7 ℥ (7.1 US qt, 5.9 Imp qt)

**NOTE:**

The SUBARU Genuine Coolant containing anti-freeze and anti-rust agents is especially made for SUBARU engine, which has an aluminum crank-case. Always use SUBARU Genuine Coolant, since other coolant may cause corrosion.

- 9) Securely install radiator cap.
- 10) Run engine for more than five minutes at 2,000 to 3,000 rpm. (Run engine until radiator becomes hot in order to purge air trapped in cooling system.)
- 11) Stop engine and wait until coolant temperature lowers. Then open radiator cap to check coolant level and add coolant up to radiator filler neck.

Next, add coolant into reservoir tank up to "FULL" level.


- 12) After adding coolant, securely install radiator and reservoir tank caps.

**2. RELATIONSHIP OF SUBARU COOLANT CONCENTRATION AND FREEZING TEMPERATURE** SA07689A2002

The concentration and safe operating temperature of the SUBARU coolant is shown in the diagram. Measuring the temperature and specific gravity of the coolant will provide this information.

**[Example]**

If the coolant temperature is 25°C (77°F) and its specific gravity is 1.054, the concentration is 35% (point A), the safe operating temperature is -14°C (7°F) (point B), and the freezing temperature is -20°C (-4°F) (point C).

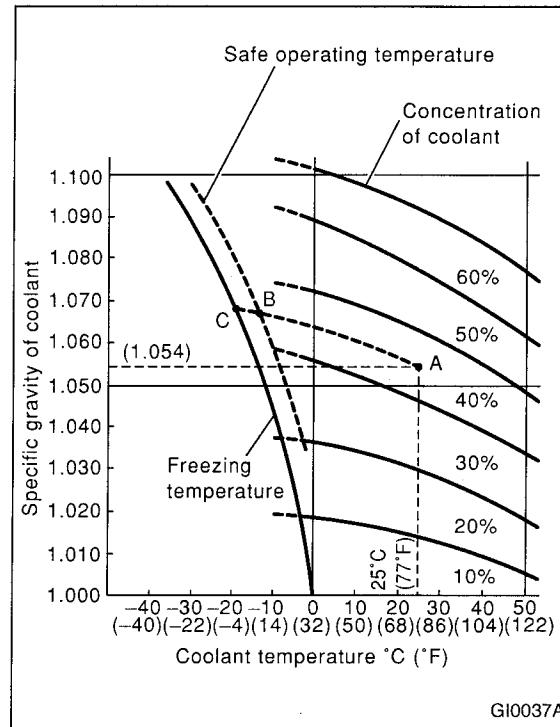

### 3. PROCEDURE TO ADJUST THE CONCENTRATION OF THE COOLANT


SA07689A2003

To adjust the concentration of the coolant according to temperature, find the proper fluid concentration in the above diagram and replace the necessary amount of coolant with an undiluted solution of SUBARU genuine coolant (concentration 50). The amount of coolant that should be replaced can be determined using the diagram.

[Example]

Assume that the coolant concentration must be increased from 25% to 40%. Find point A, where the 25% line of coolant concentration intersects with the 40% curve of the necessary coolant concentration, and read the scale on the vertical axis of the graph at height A. The quantity of coolant to be drained is 2.1 liters (2.2 US qt, 1.8 Imp qt). Drain 2.1 liters (2.2 US qt, 1.8 Imp qt) of coolant from the cooling system and add 2.1 liters (2.2 US qt, 1.8 Imp qt) of the undiluted solution of SUBARU coolant.

If a coolant concentration of 50% is needed, drain all the coolant and refill with the undiluted solution only.

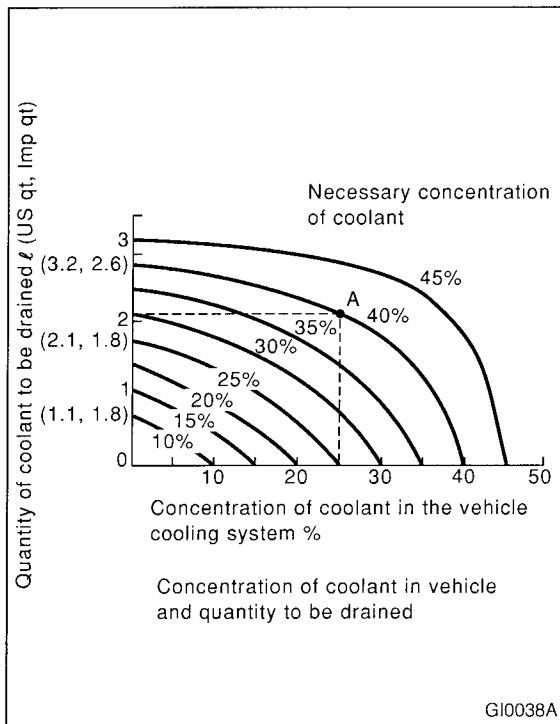


## 14. Clutch System SA07690

### A: INSPECTION AND ADJUSTMENT

SA07690G26

- 1) Push the release lever to retract the push rod of the operating cylinder and check if the fluid level in the clutch reservoir tank rises or not.

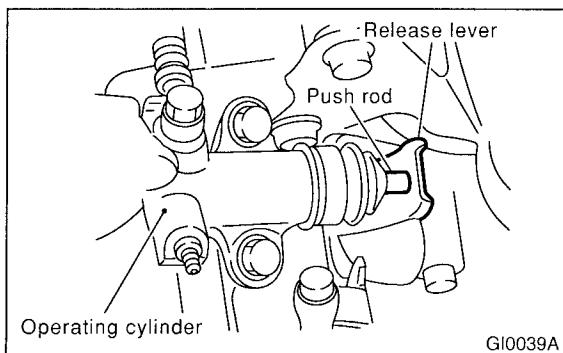


- 2) If the fluid level rises, pedal free play is correct.
- 3) If the fluid level does not rise, or the push rod cannot be retracted, adjust the clutch pedal. <Ref. to CL-21 Clutch Pedal.>
- 4) Inspect the underside of master cylinder, clutch damper and operating cylinder for clutch system, hoses, piping and their couplings for fluid leaks. If fluid leaks are found, correct them by retightening their fitting bolt and/or replacing their parts.
- 5) Check the fluid level using the scale on the outside of the clutch master cylinder tank (A). If the level is below "MIN" (B), add clutch fluid to bring it up to "MAX" (C).

#### ***Recommended clutch fluid:***

***FMVSS No. 116, fresh DOT3 or DOT4  
brake fluid***

#### **NOTE:**

- Avoid mixing different brakes or brake fluid to prevent degradation of the fluid.
- Be careful not to allow dirt or dust to get into the reservoir tank.

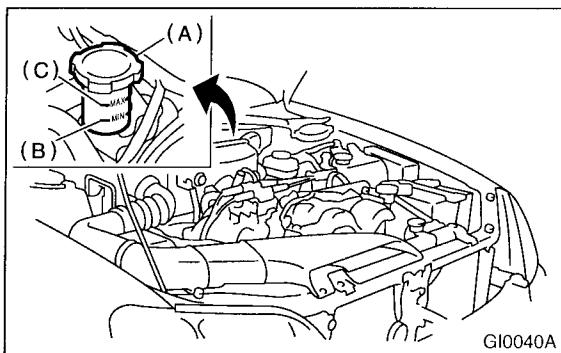

## 15. Transmission Oil SA07691


### A: REPLACEMENT SA07691A20

#### 1. MANUAL TRANSMISSION SA07691A2001

- 1) Drain gear oil by removing drain plug after allowing the engine to cool for 3 to 4 hours.

**NOTE:**

Before starting work, cool off the engine well.

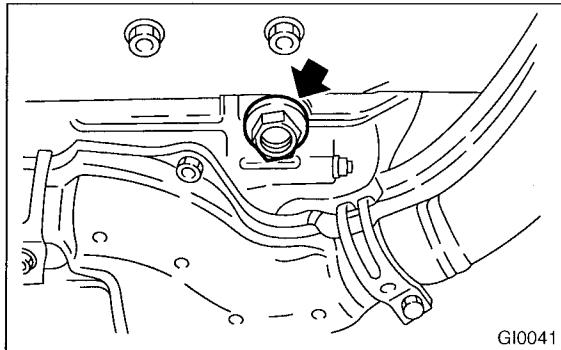

- 2) Reinstall drain plug after draining gear oil and tighten it to the specified torque.

**Tightening torque:**

**44 N·m (4.5 kgf-m, 32.5 ft-lb)**


**NOTE:**

- Be sure to place a gasket between the transmission case and drain plug.
- Replace the gasket with a new one.
- Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

- 3) Fill transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

**Gear oil capacity:**

**4.0 ℥ (4.2 US qt, 3.5 Imp qt)**

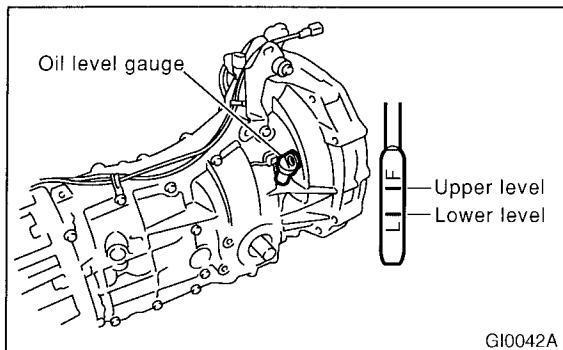


**16. ATF** SA07692**A: REPLACEMENT** SA07692A20**1. AUTOMATIC TRANSMISSION FLUID**SA07692A2001

- 1) Drain ATF (Automatic Transmission Fluid) by removing drain plug after allowing the engine to cool for 3 to 4 hours.

**NOTE:**

Before starting work, cool off the engine well.

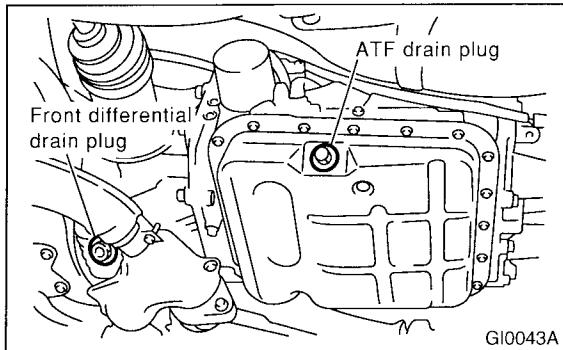

- 2) Reinstall drain plug after draining ATF, and tighten it to the specified torque.

**Tightening torque:**

**24.5 N·m (2.5 kgf-m, 18.1 ft-lb)**

- 3) Fill ATF up to the middle of the "COLD" side on level gauge by using the gauge hole.


**Recommended fluid:**

**Dexron IIIE or III type automatic transmission fluid**

**Fluid capacity:**

**$9.3^{+0.3/-0}$  l ( $9.8^{+0.3/-0}$  US qt,  $8.2^{+0.3/-0}$  Imp qt)**

- 4) Run the vehicle until the ATF temperature rises to 60 to 80°C (140 to 176°F) and check the ATF level.

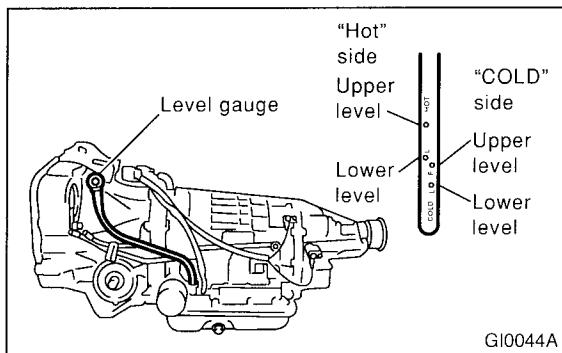**2. ATF FILTER** SA07692A2002**NOTE:**

ATF filter is maintenance free part. ATF filter needs replacement, when it has physically damaged or ATF leaked.

For the replacement procedures of the ATF filter:  
<Ref. to AT-38 ATF Filter.>

## 17. Front & Rear Differential Oil

SA07693

### A: REPLACEMENT

SA07693A20

#### 1. FRONT DIFFERENTIAL (MANUAL TRANSMISSION)

SA07693A2001

For M/T vehicle, manual transmission oil works as differential oil to lubricate differential. Refer to "Transmission Oil". <Ref. to PM-21 MANUAL TRANSMISSION, REPLACEMENT, Transmission Oil.>


#### 2. FRONT DIFFERENTIAL (AUTOMATIC TRANSMISSION)

SA07693A2002

- 1) Drain differential gear oil by removing drain plug after allowing the engine to cool for 3 to 4 hours.

**NOTE:**

Before starting work, cool off the engine well.

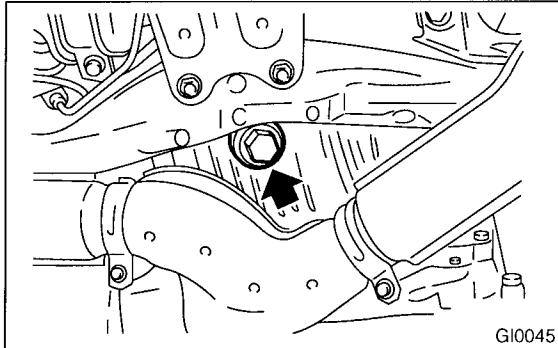

- 2) Reinstall drain plug after draining differential gear oil and tighten it to the specified torque.

**Tightening torque:**

**44 N·m (4.5 kgf·m, 32.5 ft-lb)**


**NOTE:**

- Be sure to place a gasket between the transmission case and drain plug.
- Replace the gasket with a new one.
- Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

- 3) Fill differential gear oil through the oil level gauge hole up to the upper point of level gauge.

**Differential gear oil capacity:**

**1.1 — 1.3 ℥ (1.2 — 1.4 US qt, 1.0 — 1.1 Imp qt)**

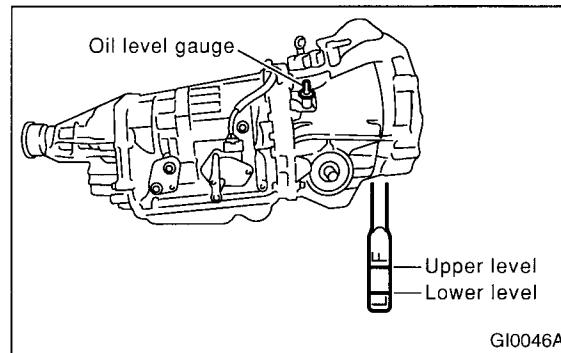

#### 3. REAR DIFFERENTIAL

SA07693A2003

- 1) Drain oil by removing drain plug.
- 2) Remove filler plug for quick draining oil.
- 3) Tighten drain plug after draining oil.


**NOTE:**

Apply fluid packing to drain plug threads before installation.

**Fluid packing:**  
*Three Bond 1105*

**Tightening torque:**  
**44.1 N·m (4.5 kgf·m, 32.5 ft-lb)**

- 4) After installing drain plug onto rear differential gear case firmly, fill oil up fully to the mouth of filler plug.

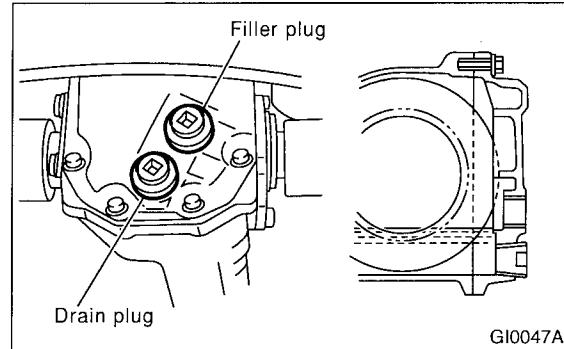

**Oil capacity:**  
**0.8 ℥ (0.8 US qt, 0.7 Imp qt)**

**NOTE:**

Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

- 5) Install filler plug onto rear differential gear case firmly.

**NOTE:**

Apply fluid packing to filler plug before installation.

**Fluid packing:**  
*Three Bond 1105*



**Tightening torque:**  
**44.1 N·m (4.5 kgf·m, 32.5 ft-lb)**

**18. Brake Line** SA07694**A: INSPECTION** SA07694A10**1. BRAKE LINE** SA07694A1001

- 1) Check scratches, swelling, corrosion and/or traces of fluid leakage on brake hoses or pipe joints.
- 2) Check the possibility of adjacent parts interfering with brake pipes/hoses during driving, and loose connections/clamps.
- 3) Check any trace of fluid leakage, scratches, etc. on master cylinder, wheel cylinder and pressure control valve.


**NOTE:**

- When the brake fluid level in the reservoir tank is lower than the specified limit, the brake fluid warning light on the combination meter will come on.
- Visually check brake hose (using a mirror where it is difficult to see) for any damage.

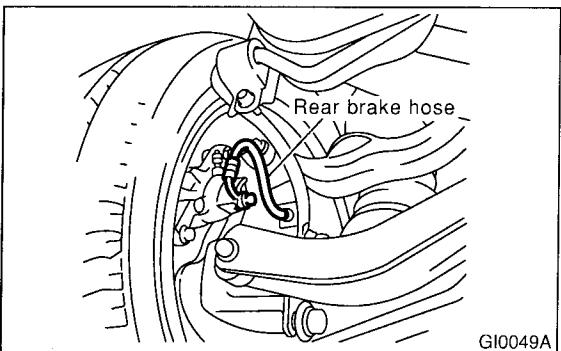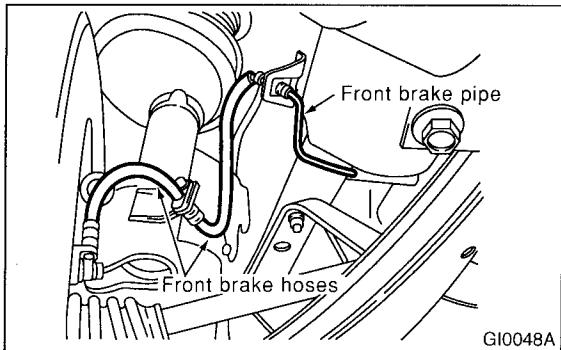**B: CHECKING** SA07694G27**1. SERVICE BRAKE** SA07694G2701


- 1) Check the free play of brake pedal with a force of less than 10 N (1 kgf, 2 lb).

**Brake pedal free play:**  
 $1 - 3 \text{ mm (0.04 - 0.12 in)}$

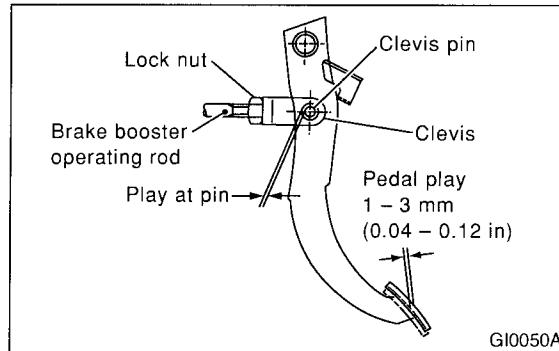

- 2) If the free play is out of specifications above, adjust the brake pedal as follows:

- (1) Be sure engine is off. (No vacuum is applied to brake booster.)
- (2) There should be play between brake booster clevis and pin at brake pedal installing portion.  
 [Depress brake pedal pad with a force of less than 10 N (1 kgf, 2 lb) to a stroke of 1 to 3 mm (0.04 to 0.12 in).]
- (3) Depress the surface of brake pad by hand.
- (4) If there is no free play between clevis pin and clevis, turn brake switch adjusting nut until the clearance between stopper and screw of brake switch becomes 0.3 mm (0.012 in).

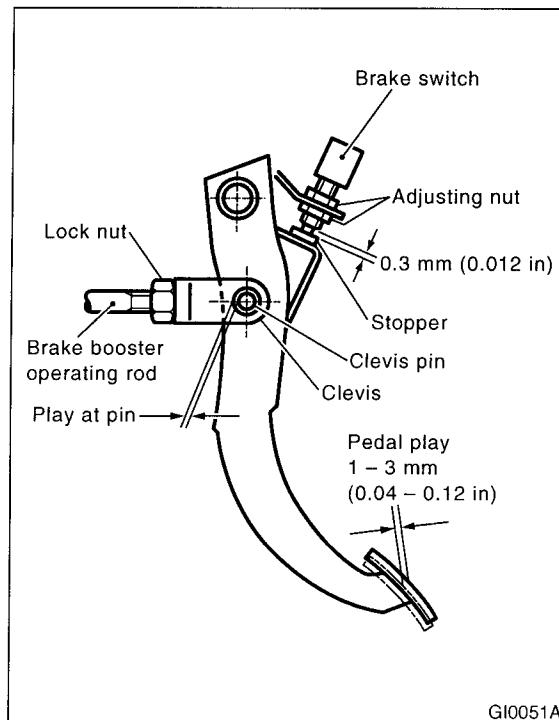


### 3) Check the pedal stroke.

While the engine is idling, depress the brake pedal with a 490 N (50 kgf, 110 lb) load and measure the distance between the brake pedal and steering wheel. With the brake pedal released, measure the distance between the pedal and steering wheel again. The difference between the two measurements must be less than 95 mm (3.74 in). If the distance is more than specified, there is a possibility air is in the inside of the hydraulic unit.

#### **Brake pedal reserve distance: A**

**more than 95 mm (3.74 in)/ 490 N (50 kgf, 110 lb)**

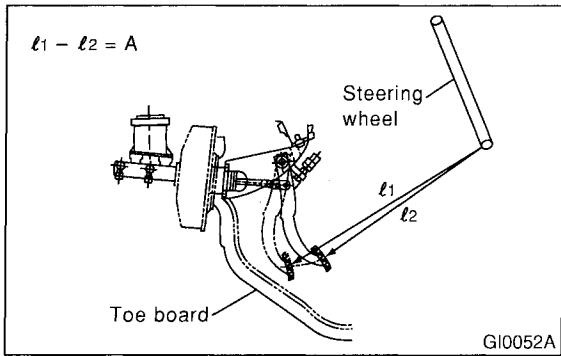

4) Check to see if air is in the hydraulic brake line by the feel of pedal operation. If air appears to exist in the line, bleed it from the system.

5) Check for even operation of all brakes, using a brake tester or by driving the vehicle for a short distance on a straight road.

## 2. BRAKE SERVO SYSTEM SA07694G2702

1) With the engine off, depress the brake pedal several times applying the same pedal force: Make sure the travel distance should not change.


2) With the brake pedal depressed, start the engine: Make sure the pedal should move slightly toward the floor.

3) With the brake pedal depressed, stop the engine and keep the pedal depressed for 30 seconds: Make sure the pedal height should not change.

4) Check valve is built into vacuum hose. Disconnect vacuum hose to inspect function of check valve.

Blow air into vacuum hose from its brake booster side end: Air must flow out of engine side end of hose. Next blow air into hose from engine side: Air should not flow out of hose.

Replace both check valve and vacuum hose if check valve is faulty. Engine side of vacuum hose is indicated by marking "ENGINE" as shown.

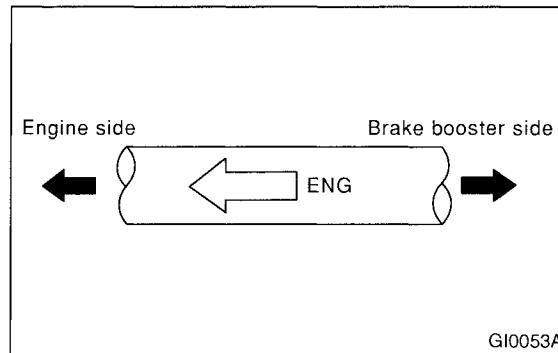

5) Check vacuum hose for cracks or other damage.

#### NOTE:

When installing the vacuum hose on the engine and brake booster, do not use soapy water or lubricating oil on their connections.

6) Check vacuum hose to make sure it is tight and secure.

## 19. Brake Fluid

SA07162

### A: REPLACEMENT

SA07162A20

- 1) Either jack up vehicle and place a safety stand under it, or lift up vehicle.
- 2) Remove both front and rear wheels.
- 3) Draw out the brake fluid from master cylinder with syringe.
- 4) Refill reservoir tank with recommended brake fluid.


#### Recommended brake fluid:

**FMVSS No. 116, fresh DOT3 or 4 brake fluid**

#### NOTE:


- Avoid mixing different brands of brake fluid to prevent degrading the quality of the fluid.
- Be careful not to allow dirt or dust to get into the reservoir tank.

Bleeding sequence (1) → (2) → (3) → (4)

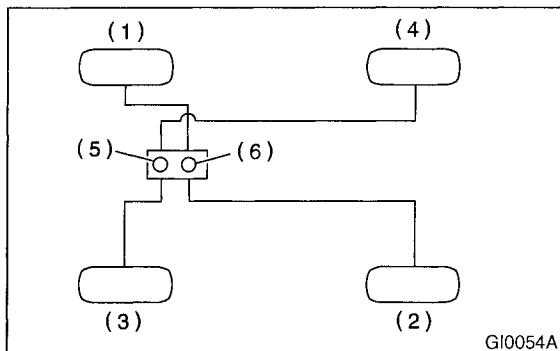

- (1) Front right
- (2) Rear left
- (3) Front left
- (4) Rear right
- (5) Secondary
- (6) Primary

- 5) Install one end of a vinyl tube onto the air bleeder and insert the other end of the tube into a container to collect the brake fluid.

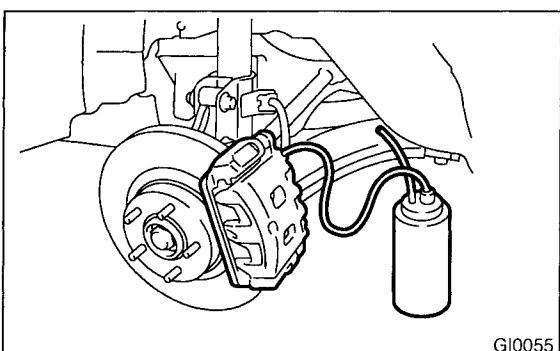

#### NOTE:

- Cover bleeder with waste cloth, when loosening it, to prevent brake fluid from being splashed over surrounding parts.
- During bleeding operation, keep the brake reserve tank filled with brake fluid to eliminate entry of air.
- Brake pedal operation must be very slow.
- For convenience and safety, it is advisable to have two men working.
- The amount of brake fluid required is approximately 500 ml (16.9 US fl oz, 17.6 Imp fl oz) for total brake system.

6) Instruct your co-worker to depress the brake pedal slowly two or three times and then hold it depressed.

7) Loosen bleeder screw approximately 1/4 turn until a small amount of brake fluid drains into container, and then quickly tighten screw.

8) Repeat steps 6) and 7) above until there are no air bubbles in drained brake fluid and new fluid flows through vinyl tube.

#### NOTE:

Add brake fluid as necessary while performing the air bleed operation, in order to prevent the tank from running short of brake fluid.

9) After completing the bleeding operation, hold brake pedal depressed and tighten screw and install bleeder cap.

#### Tightening torque:

**8 N·m (0.8 kgf·m, 5.8 ft-lb)**

- 10) Bleed air from each wheel cylinder by following the previous 5 steps.
- 11) Depress brake pedal with a force of approximately 294 N (30 kgf, 66 lb) and hold it there for approximately 20 seconds. At this time check pedal to see if it makes any unusual movement. Visually inspect bleeder screws and brake pipe joints to make sure that there is no fluid leakage.
- 12) Install wheels, and drive vehicle for a short distance between 2 to 3 km (1 to 2 miles) to make sure that brakes are operating properly.

## 20. Disc Brake Pads and Discs

SA07695


### A: INSPECTION

SA07695A10

#### 1. DISC BRAKE PAD AND DISC


SA07695A1001

- 1) Jack up vehicle and support with rigid racks. Then remove wheels.
- 2) Visually check pad thickness through inspection hole of disc brake assembly. Replace pad if necessary.

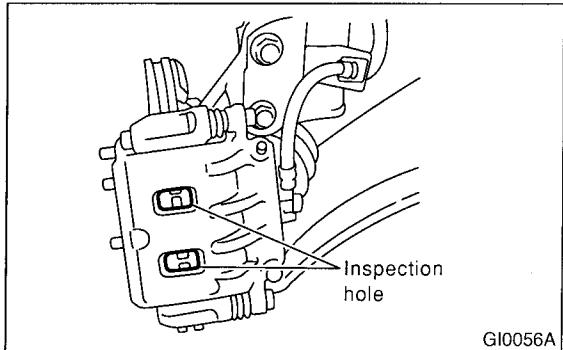


#### NOTE:

When replacing a pad, always replace the pads for both the left and right wheels at the same time. Also replace pad clips if they are twisted or worn.

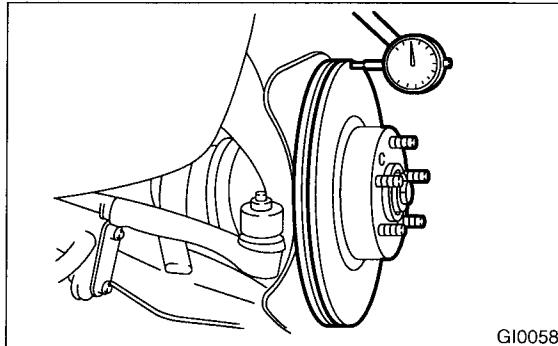

Pad thickness including back metal mm (in)		
	Front	Rear
Standard	17 (0.67)	14 (0.55)
Service limit	7.5 (0.295)	6.5 (0.256)
Service limit (exclusive back metal)	1.5 (0.059)	1.5 (0.059)

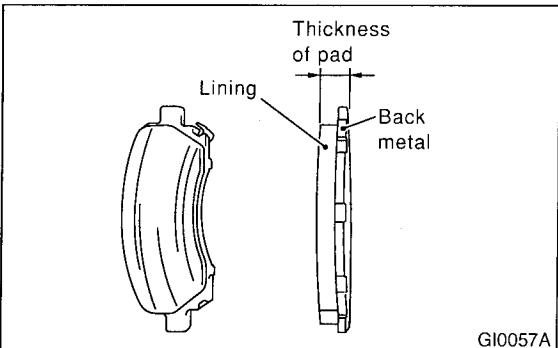

- 3) Check the disc rotor, and correct or replace if it is damaged or worn.

Brake disc thickness mm (in)		
	Front	Rear
Standard	24 (0.94)	10 (0.39)
Wear limit	22 (0.87)	8.5 (0.335)

- 4) Measure the disc rotor runout at a point less than 5 mm (0.20 in) from the outer periphery of the rotor.

#### Disc rotor runout limit:

Front: 0.075 mm (0.0030 in)

Rear: 0.075 mm (0.0030 in)

## 21. Brake Linings and Drums

SA07696

### A: INSPECTION

SA07696A10


#### 1. REAR DRUM BRAKE

SA07696A1001

- 1) Remove brake drum, and check that there is no fluid leakage from wheel cylinder. If there is fluid leakage from wheel cylinder, replace it.
- 2) Inspect brake shoes for damage or deformities and check brake linings for wear.

## NOTE:

- Always replace both leading and trailing brake shoes for the left and right wheels at the same time.
- When either the left or the right brake assembly is replaced, always replace the leading shoe and trailing shoe of the other.
- The cotter pin, once removed, cannot be reused.

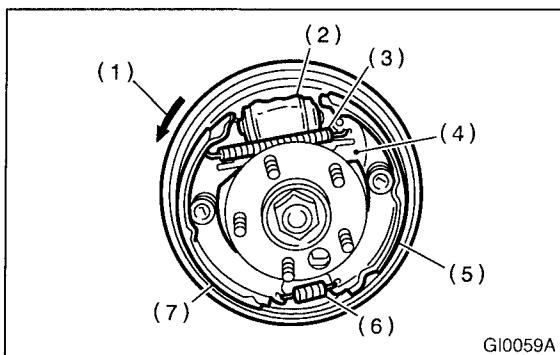***Thickness of lining (except back metal)*****Standard value: 4.1 mm (0.161 in)****Service limit: 1.5 mm (0.059 in)**

GI0059A

- (1) Rotational direction of drum (Forward)
- (2) Wheel cylinder
- (3) Upper shoe return spring
- (4) Adjusting lever
- (5) Trailing shoe
- (6) Lower shoe return spring
- (7) Leading shoe


To replace trailing shoe, remove cotter pin. Clevis pin should also be replaced if worn.

3) Check brake drum for wear, dents or other damage.

If the inside surface of brake drum is streaked, correct the surface with emery cloth (#200 or more). If it is unevenly worn, tapered, or the outside surface of brake drum is damaged, correct or replace it.

***Brake drum inner diameter*****Standard value: 228.6 mm (9.000 in)****Service limit: 230.6 mm (9.079 in)**

If deformation or wear of back plate, shoe, etc. is noticeable, replace the affected parts.

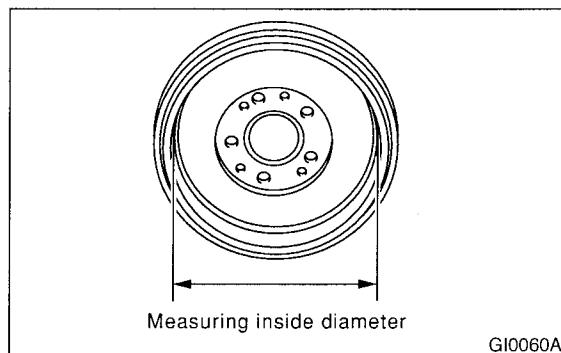

GI0060A

#### 2. PARKING BRAKE (REAR DISC BRAKE)


SA07696A1002

Inspect brake linings and drums of both sides of the rear brake at the same time by removing brake drums.

- 1) Inspect brake shoes for damage or deformation and check brake linings for wear.

## NOTE:

Always replace both primary and secondary brake shoes for the left and right wheels at the same time.

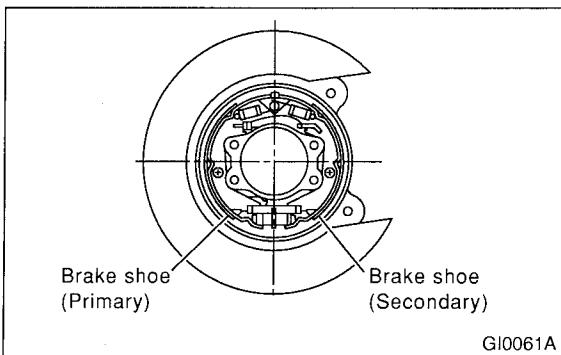***Brake lining thickness excluding back metal*****Standard value: 3.2 mm (0.126 in)****Wear limit: 1.5 mm (0.059 in)**


GI0061A

2) Check brake drum for wear, dents or other damage. If the inside surface of brake drum is streaked, correct the surface with emery cloth (#200 or more). If it is unevenly worn, tapered, or the outside surface of brake drum is damaged, correct or replace it.

#### Brake drum inside diameter

Standard value: 170 mm (6.69 in)

Wear limit: 171 mm (6.73 in)

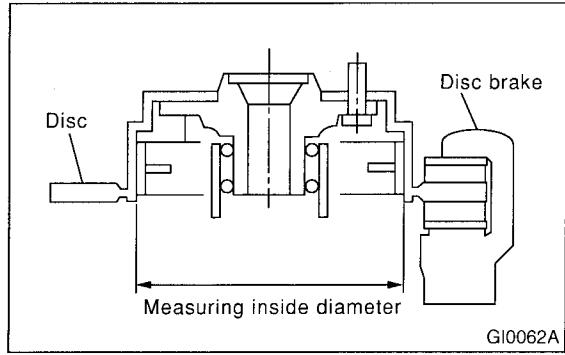

- 3) If the deformation or wear of back plate, shoe, etc. is noticeable, replace them.
- 4) When the shoe return spring tension is excessively weakened, replace it, taking care to identify upper and lower springs.

## B: ADJUSTMENT SA07696A01


### 1. REAR DRUM BRAKE SA07696A0101

The main brake is adjusted automatically, and so there is no need to adjust it.

### 2. PARKING BRAKE (REAR DISC BRAKE) SA07696A0102

For rear disc brake, adjust parking brake after bleeding the air.

- 1) Remove rear cover (rubber) installed at back plate.
- 2) Turn adjuster toward arrow mark (upward) until it is locked slightly, by using slot-type screwdriver as shown in illustration.

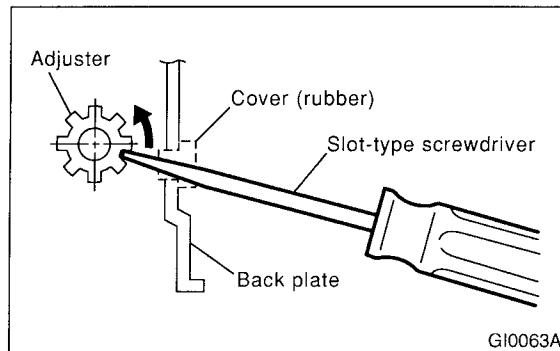

- 3) Turn back (downward) adjuster 3 to 4 notches.
- 4) Install cover (rubber) at original position correctly.

## 22. Suspension

SA07697



### A: INSPECTION

SA07697A10

#### 1. SUSPENSION BALL JOINT

SA07697A1001

- 1) Jack up vehicle until front wheels are off ground.
- 2) Next, grasp bottom of tire and move it in and out. If relative movement is observed between brake disc cover and end of transverse link, ball joint may be excessively worn.
- 3) Next, grasp end of transverse link and move it up and down. Relative movement between housing and transverse link boss indicates ball joint may be excessively worn.
- 4) If relative movement is observed in the immediately preceding two steps, remove and inspect ball joint. If free play exceeds standard, replace ball joint. <Ref. to FS-14 Front Ball Joint.>

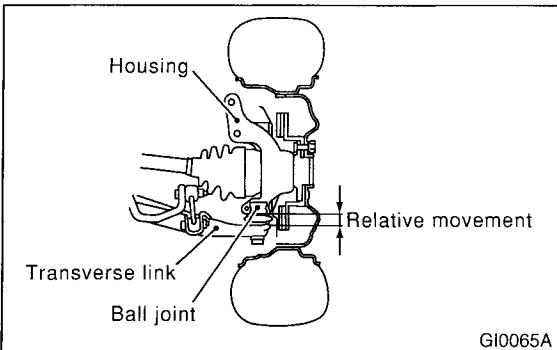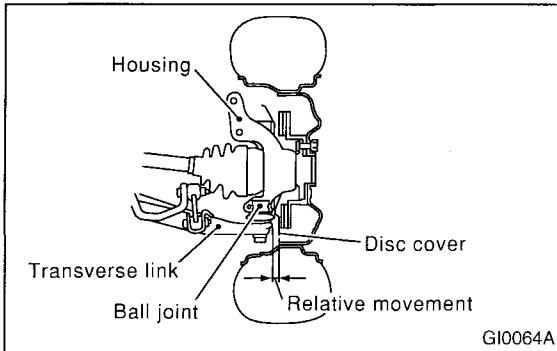


#### 5) Damage of dust seal

Visually inspect ball joint dust seal. If it is damaged, remove transverse link. <Ref. to FS-11 Front Transverse Link.> And measure free play of ball joint. <Ref. to FS-14 Front Ball Joint.>

- (1) When looseness exceeds standard value, replace ball joint.
- (2) If the dust seal is damaged, replace with the new ball joint.

#### NOTE:


When transverse link ball joint has been removed or replaced, check toe-in of front wheel. If front wheel toe-in is not at specified value, adjust toe-in. <Ref. to FS-6 Wheel Alignment.>

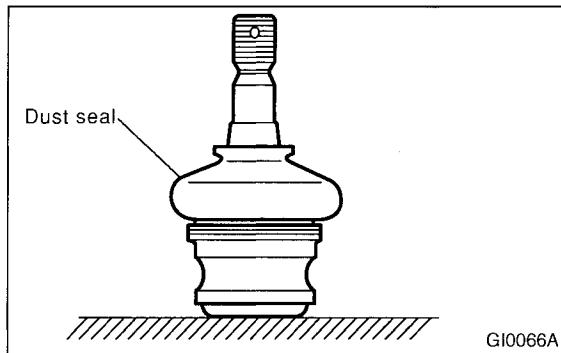

#### 2. TRANSVERSE LINK'S REAR BUSHING

SA07697A1002

Check oil leaks at around liquid-filled bushing. If oil leaks, replace bushing.

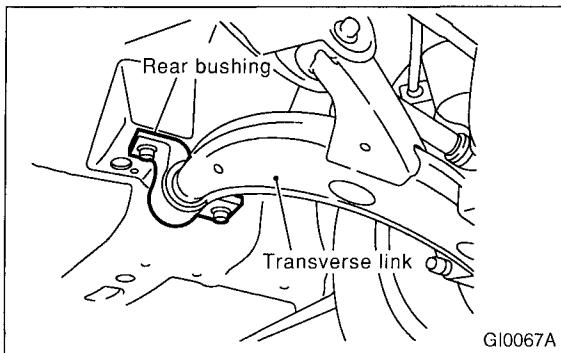

#### 3. WHEEL ARCH HEIGHT

SA07697A1003

- 1) Unload cargoes and set vehicle in curb weight (empty) condition.
- 2) Then, check wheel arch height of front and rear suspensions to ensure that they are within specified values.
- 3) When wheel arch height is out of standard, visually inspect following components and replace deformed parts.
  - Suspension components [Front strut assembly and rear shock absorber assembly]
  - Body parts to which suspensions are installed.
- 4) When no components are deformed, adjust wheel arch height by replacing coil spring in the suspension whose wheel arch height is out of standard. <Ref. to FS-6 Wheel Alignment.> <Ref. to RS-8 Wheel Alignment.>

## 4. WHEEL ALIGNMENT OF FRONT SUSPENSION

SA07697A1004

1) Check alignment of front suspension to ensure that following items conform to standard values.

- Toe-in
- Camber angle
- Caster angle
- Steering angle

<Ref. to FS-6 Wheel Alignment.>

2) When caster angle does not conform to standard value, visually inspect following components and replace deformed parts.

- Suspension components [Strut assembly, crossmember, transverse link, etc.]

- Body parts to which suspensions are installed.

3) When toe-in and camber are out of standard value, adjust them so that they conform to respective service standard.

4) When right-and-left turning angles of tire are out of standard, adjust to standard value.

## 5. WHEEL ALIGNMENT OF REAR SUSPENSION

SA07697A1005

1) Check alignment of rear suspension to ensure that following items are within standard values.

- Toe-in
- Camber angle
- Thrust angle

<Ref. to RS-8 Wheel Alignment.>

2) When camber angle does not conform to standard value, visually inspect parts listed below. If deformation is observed, replace damaged parts.

- Suspension components [Shock absorber, link F, link R, link UPR, arm R, sub frame, etc.]

- Body parts to which suspensions are installed.

3) When toe-in and thrust angle are out of standard value, adjust them so that they conform to respective service standard.

## 6. OIL LEAKAGE OF STRUT AND SHOCK ABSORBER

SA07697A1006

Visually inspect front strut and rear shock absorber for oil leakage as instructed. Replace front strut and rear shock absorber if oil leaks excessively.

## 7. TIGHTNESS OF BOLTS AND NUTS

SA07697A1007

Check bolts and nuts shown in the figure for looseness. Retighten bolts and nuts to specified torque. If self-lock nuts and bolts are removed, replace them with new ones.

Front suspension: <Ref. to FS-2 General Description.>

Rear suspension: <Ref. to RS-2 General Description.>

## 8. DAMAGE TO SUSPENSION PARTS

SA07697A1008

1) Check the following parts and the fastening portion of the vehicle body for deformation or excessive rusting which impairs the suspension. If necessary, replace damaged parts with new ones. If minor rust formation, pitting, etc. are noted, remove rust and apply remedial anti-corrosion measures.

- Front suspension

- Transverse link
- Crossmember
- Strut

- Rear suspension

- Sub frame
- Link F
- Link R
- Link UPR
- Arm R
- Shock absorber

- In the district where salt is sprayed to melt snow on a road in winter, check suspension parts for damage caused by rust every 12 months after lapse of 60 months. Take rust prevention measure as required.

## 23. Wheel Bearing SA07698

### A: INSPECTION SA07698A10

#### 1. FRONT WHEEL BEARING SA07698A1001

**NOTE:**

Inspect the condition of front wheel bearing grease.

- 1) Jack up the front of vehicle.
- 2) While holding front wheel by hand, swing it in and out to check bearing free play.
- 3) Loosen wheel nuts and remove front wheel.
- 4) If bearing free play exists in step 2) above, attach a dial gauge to hub and measure axial displacement in axial direction.

**Service limit:**



***Straight-ahead position within 0.05 mm  
(0.0020 in)***

- 5) Remove bolts and self-locking nuts, and extract transverse link from front crossmember.
- 6) While lightly hammering spring pin which secures S.F.J. to transmission spindle, remove it.
- 7) Extract S.F.J. from transmission spindle. <Ref. to DS-16 Front Axle.>
- 8) While supporting front drive shaft horizontally with one hand, turn hub with the other to check for noise or binding.

If hub is noisy or binds, disassemble front axle and check condition of oil seals, bearing, etc.

- 6) While supporting rear drive shaft horizontally with one hand, turn hub COMPL with the other to check for noise or binding.

If hub COMPL is noisy or binds, disassemble rear axle and check condition of oil seals, bearings, etc.

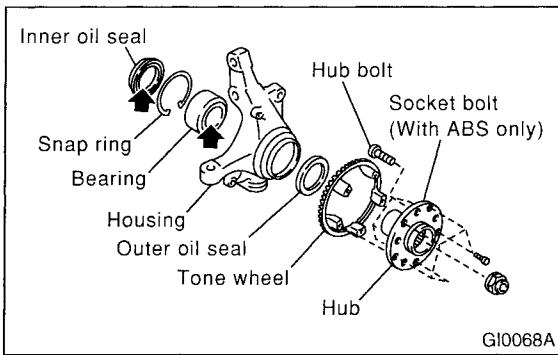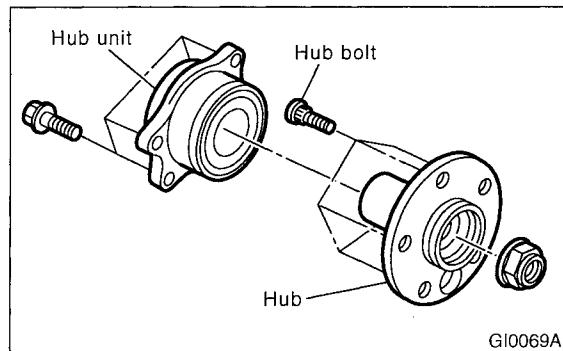

#### 2. REAR WHEEL BEARING SA07698A1002

- 1) Jack up the rear of vehicle.
- 2) While holding rear wheel by hand, swing it in and out to check bearing free play.
- 3) Loosen wheel nuts and remove rear wheel.
- 4) If bearing free play exists in step 2) above, attach a dial gauge to hub COMPL and measure axial displacement in axial direction.

**Service limit:**

***Straight-ahead position within 0.05 mm  
(0.0020 in)***

- 5) Remove the DOJ of rear drive shaft from rear differential. <Ref. to DS-33 Rear Drive Shaft.>

## 24. Axle Boots & Joints

SA07699


### A: INSPECTION

SA07699A10


#### 1. FRONT AND REAR AXLE BOOTS

SA07699A1001

Inspect front axle boots (A) and rear axle boots (B) for deformation, damage or failure. If faulty, replace them with new ones. <Ref. to DS-28 Front Drive Shaft.> <Ref. to DS-33 Rear Drive Shaft.>

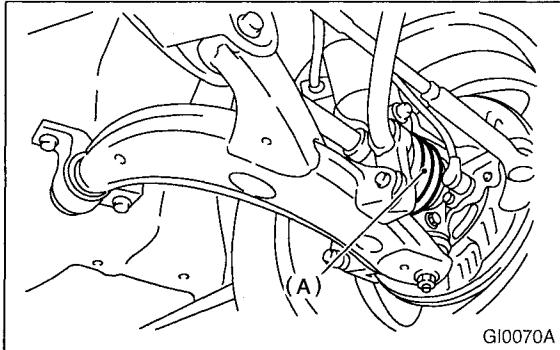

GI0070A

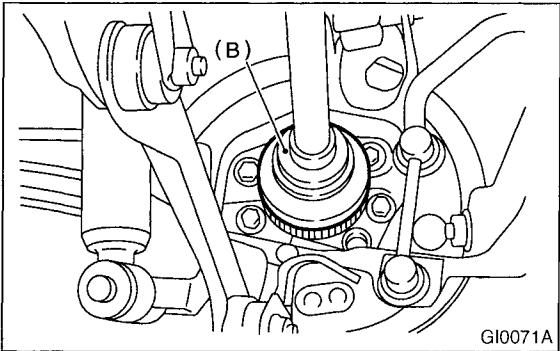

GI0071A

#### 2. PROPELLER SHAFT


SA07699A1002

Inspect propeller shaft for damage or failure. If faulty, replace with new one. <Ref. to DS-13 Propeller Shaft.>


## 25. Tire Rotation SA07700

### A: INSPECTION SA07700A10

- 1) Replace the tire if the tread depth is less than 1.6 mm (0.063 in) or if wear indicators appear across the tire tread. (It is recommended that both right and left tires are replaced as a set.)
- 2) Adjust the wheel alignment if abnormally uneven tire wear is found.
- 3) Also, rotate the tires between the front and rear tires as illustrated, in order to ensure uniform tire wear.

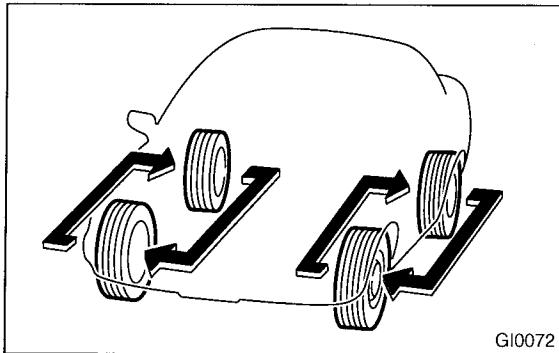

GI0072

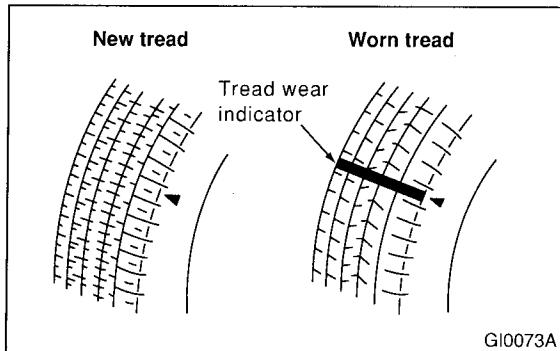

GI0073A

## 26. Steering System (Power Steering) SA07701

### A: INSPECTION SA07701A10


#### 1. STEERING WHEEL SA07701A1001

- 1) Set steering wheel in a straight-ahead position, and check wheel spokes to make sure they are correctly set in their specified positions.
- 2) Lightly turn steering wheel to the left and right to determine the point where front wheels start to move.

Measure the distance of the movement of steering wheel at the outer periphery of wheel.

##### **Steering wheel free play:**

**0 — 17 mm (0 — 0.67 in)**

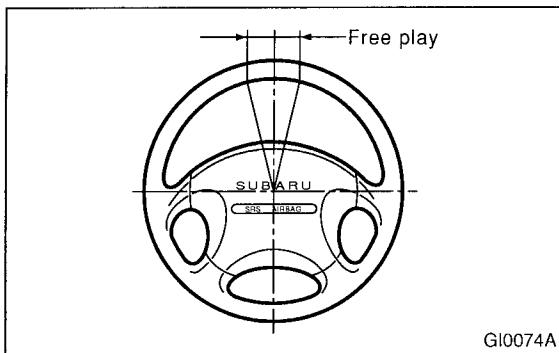

Move steering wheel vertically toward the shaft to ascertain if there is play in the direction.

##### **Maximum permissible play:**

**0.5 mm (0.020 in)**

- 3) Drive vehicle and check the following items during operation.

(1) Steering force .....

The effort required for steering should be smooth and even at all points, and should not vary.

(2) Pull to one side .....

Steering wheel should not be pulled to either side while driving on a level surface.

(3) Wheel runout .....

Steering wheel should not show any sign of runout.

(4) Return factor .....

Steering wheel should return to its original position after it has been turned and then released.

##### **Maximum permissible play:**


**0.5 mm (0.020 in)**

#### 2. STEERING SHAFT JOINT SA07701A1002

- 1) When steering wheel free play is excessive, disconnect universal joint of steering shaft and check it for any play and yawing torque (at the point of the crossing direction). Also inspect for any damage to sealing or worn serrations. If the joint is loose, retighten the mounting bolts to the specified torque.

##### **Tightening torque:**

**$24 \pm 3 \text{ N}\cdot\text{m}$  (2.4  $\pm$  0.3 kgf-m, 17.4  $\pm$  2.2 ft-lb)**

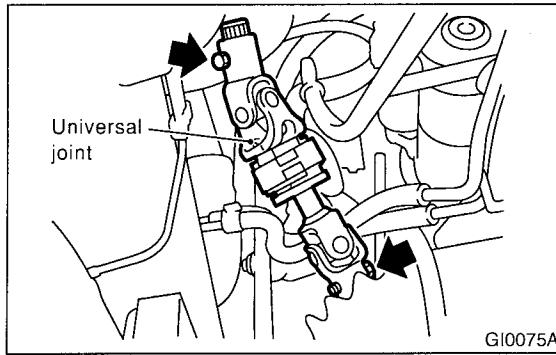


#### 3. GEARBOX SA07701A1003

- 1) With wheels placed on a level surface, turn steering wheel 90° in both the left and right directions.

While wheel is being rotated, reach under vehicle and check for looseness in gearbox.

##### **Tightening torque:**

**$59 \pm 12 \text{ N}\cdot\text{m}$  (6.0  $\pm$  1.2 kgf-m, 43.4  $\pm$  8.7 ft-lb)**

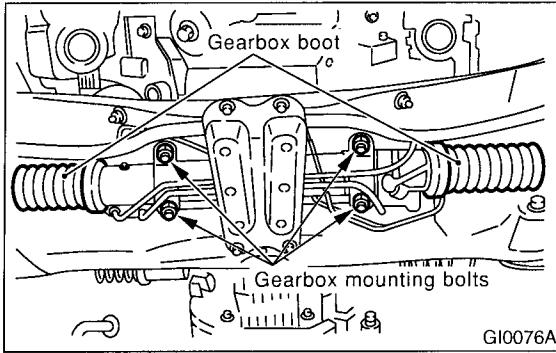

- 2) Check boot for damage, cracks or deterioration.

# STEERING SYSTEM (POWER STEERING)

## Periodic Maintenance Services


3) With vehicle on a level surface, quickly turn steering wheel to the left and right.

While steering wheel is being rotated, check the gear backlash. If any unusual noise is noticed, adjust the gear backlash in the following manner.

(1) Tighten adjusting screw to 7.4 N·m (0.75 kgf-m, 5.4 ft-lb) and then loosen. Repeat this operation twice.

(2) Retighten adjusting screw to 7.4 N·m (0.75 kgf-m, 5.4 ft-lb) and back off 25°.

(3) Apply liquid packing to at least 1/3 of entire perimeter of adjusting screw thread.

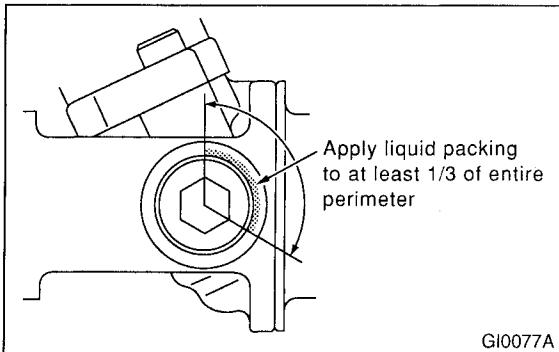

(4) Install lock nut. While holding adjusting screw with a wrench, tighten lock nut using ST. 926230000 SPANNER

### Tightening torque (Lock nut):


$39 \pm 10 \text{ N}\cdot\text{m}$  ( $4.0 \pm 1.0 \text{ kgf}\cdot\text{m}$ ,  $29 \pm 7 \text{ ft-lb}$ )

Hold the adjusting screw with a wrench to prevent it from turning while tightening the lock nut.

## 4. TIE-ROD

SA07701A1004

1) Check tie-rod and tie-rod ends for bends, scratches or other damage.

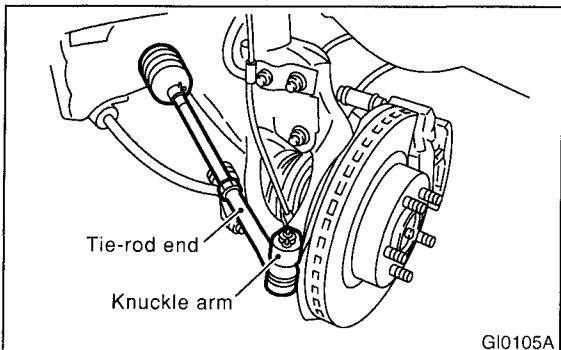

2) Check connections of knuckle ball joints for play, inspect for damage on dust seals, and check free play of ball studs. If castle nut is loose, retighten it to the specified torque, then tighten further up to 60° until cotter pin hole is aligned.

### Tightening torque:

$27 \pm 2.5 \text{ N}\cdot\text{m}$  ( $2.75 \pm 0.25 \text{ kgf}\cdot\text{m}$ ,  $19.9 \pm 1.8 \text{ ft-lb}$ )

3) Check lock nut on the tie-rod end for tightness. If it is loose, retighten it to the specified torque.

### Tightening torque:

$83 \pm 5 \text{ N}\cdot\text{m}$  ( $8.5 \pm 0.5 \text{ kgf}\cdot\text{m}$ ,  $61.5 \pm 3.6 \text{ ft-lb}$ )

## 5. POWER STEERING FLUID LEVEL


SA07701A1005

### NOTE:

The fluid level must be checked when the temperature of the reservoir tank surface is approximately 20°C (68°F).

1) Place vehicle with engine "off" on the flat and level surface.

2) Check the fluid level using the scale on the outside of the reservoir tank (A). If the level is below "MIN" (B), add fluid to bring it up to "MAX" (C).

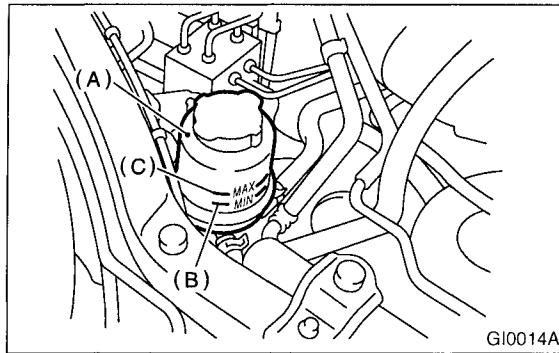

### NOTE:

If fluid level is at MAX level or above, drain fluid to keep the level in the specified range of indicator by using a syringe or the like.

### Recommended fluid:

Dexron III

### Fluid capacity:

$0.7 \ell$  (0.7 US qt, 0.6 Imp qt)

## 6. POWER STEERING FLUID FOR LEAKS

SA07701A1006

Inspect the underside of oil pump and gearbox for power steering system, hoses, piping and their couplings for fluid leaks.

If fluid leaks are found, correct them by retightening their fitting bolts (or nuts) and/or replacing their parts.

### NOTE:

- Wipe the leakage fluid off after correcting fluid leaks, or a wrong diagnosis is taken later.
- Also pay attention to clearances between hoses (or pipings) and other parts when inspecting fluid leaks.


## 7. HOSES OF OIL PUMP FOR DAMAGES

SA07701A1007

Check pressure hose and return hose of oil pump for crack, swell or damage. Replace hose with new one if necessary.

**NOTE:**

Prevent hoses from revolving and/or turning when installing hoses.

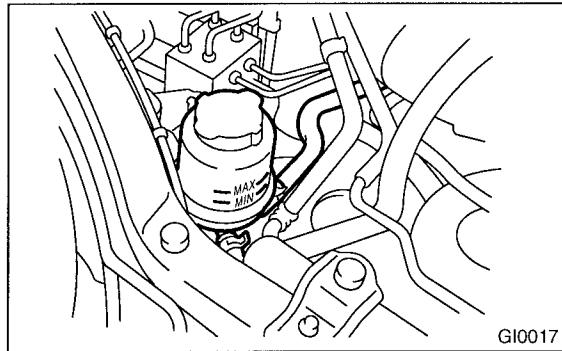

## 8. POWER STEERING PIPES FOR DAMAGE

SA07701A1008

Check power steering pipes for corrosion and damage.

Replace pipes with new one if necessary.

## 9. GEARBOX BOOTS

SA07701A1009

Inspect both sides of gearbox boots as follows, and correct the defects if necessary.

- 1) (A) and (B) positions of gearbox boot are fitted correspondingly in (A) and (B) grooves of gearbox and the rod.
- 2) Clips are fitted outside of (A) and (B) positions of boot.
- 3) Boot does not have crack and hole.

**NOTE:**


Rotate (B) position of gearbox boot against twist of it produced by adjustment of toe-in, etc.

## 10. FITTING BOLTS AND NUTS

SA07701A1010

Inspect fitting bolts and nuts of oil pump and bracket for looseness, and retighten them if necessary.

Inspect and/or retighten them when engine is cold.

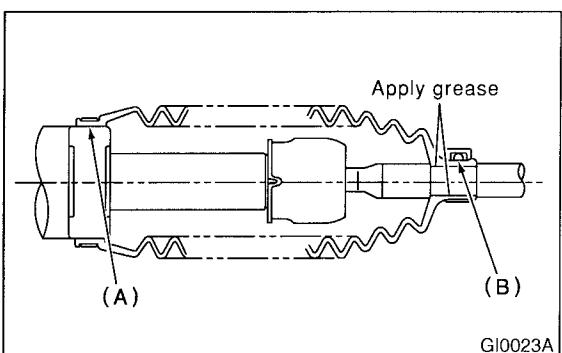


## 27. Supplemental Restraint System SA07702

### A: INSPECTION SA07702A10

Check the airbag system in accordance with the result of the self-diagnosis. <Ref. to AB-2 Basic Diagnostic Procedure.>

- 1) Ensure that airbag connectors are connected. If not, properly connect (also double lock the connector). When the ignition switch is turned ON with the connector(s) disconnected, the airbag warning light blinks to identify the fault.

**AIR BAG**

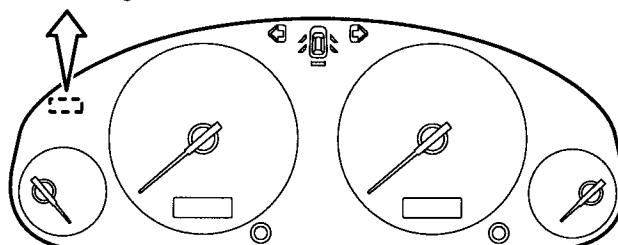

GI0031A

- 2) Turn the ignition switch ON, and connect the airbag diagnosis terminal of the service connector (located below lower cover) to the ground terminal.
- 3) The warning light blinks to indicate a trouble code (a fault is identified). When the airbag system is in good order (no trouble codes are stored in the memory), the warning light blinks on and off at 0.6 second intervals (as long as the diagnosis terminal is connected to the ground terminal).
- 4) When the warning light indicates a trouble code, check the airbag system in accordance with the troubleshooting procedure. <Ref. to AB-2 Basic Diagnostic Procedure.>