


General Description

AIRBAG SYSTEM

1. General Description


A: COMPONENT

1. DRIVER'S AIRBAG MODULE

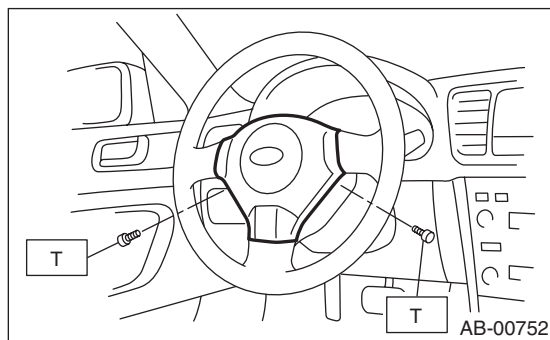


Tightening torque:
10 N·m (1.0 kgf-m, 7.2 ft-lb)

2. PASSENGER'S AIRBAG MODULE

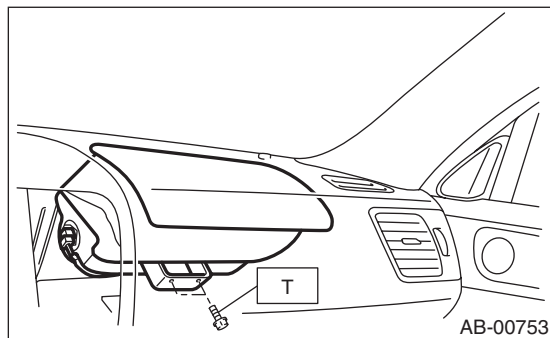


Tightening torque:
7.4 N·m (0.75 kgf-m, 5.5 ft-lb)

3. SIDE AIRBAG MODULE

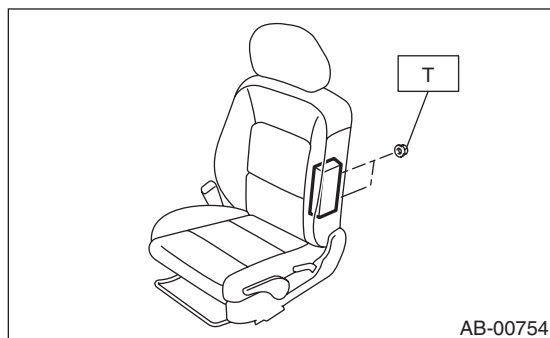

Tightening torque:
6 N·m (0.61 kgf-m, 4.4 ft-lb)

4. AIRBAG CONTROL MODULE

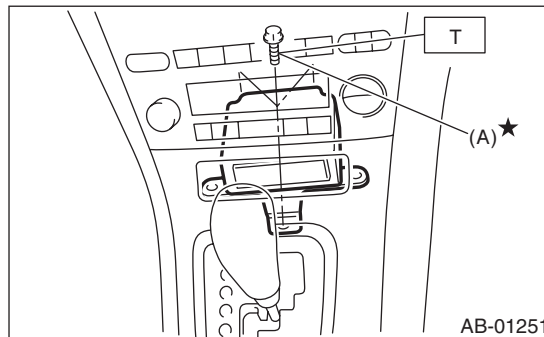


(A) Bolt

Tightening torque:
25 N·m (2.5 kgf-m, 18.1 ft-lb)

CAUTION:
Do not reuse mounting bolts and nuts.

5. FRONT SUB SENSOR

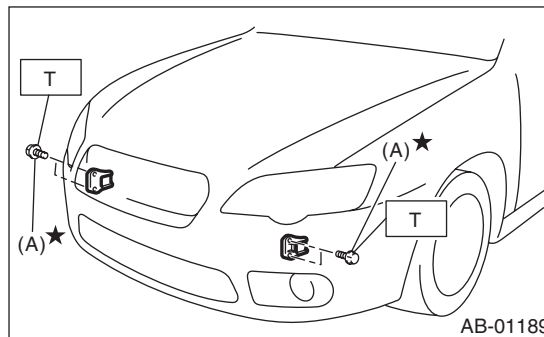


(A) Bolt

Tightening torque:
13 N·m (1.32 kgf-m, 9.6 ft-lb)

CAUTION:
Do not reuse mounting bolts and nuts.

6. SIDE AIRBAG SENSOR

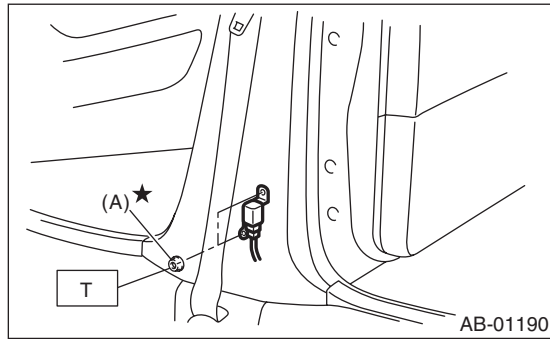

(A) Bolt


Tightening torque:

8.0 N·m (0.82 kgf-m, 5.9 ft-lb)

CAUTION:

Do not reuse mounting bolts and nuts.

7. CURTAIN AIRBAG SENSOR

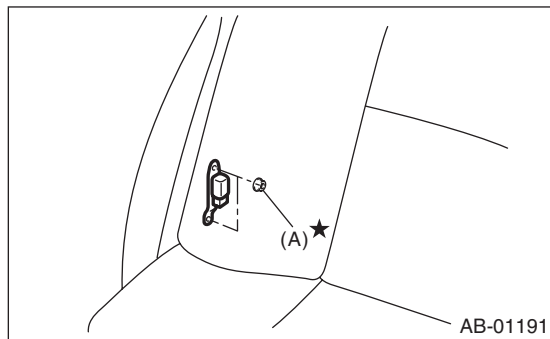

(A) Nut


Tightening torque:

8.0 N·m (0.82 kgf-m, 5.9 ft-lb)

CAUTION:

Do not reuse mounting bolts and nuts.

8. STEERING ROLL CONNECTOR

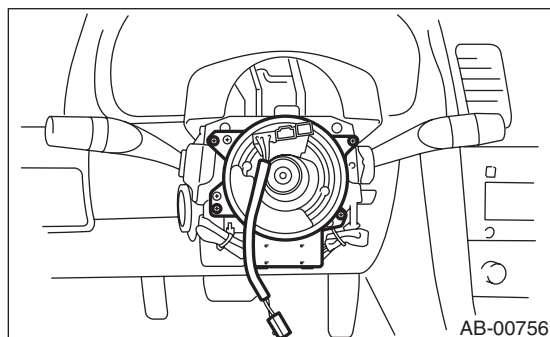


General Description

AIRBAG SYSTEM

9. CURTAIN AIRBAG MODULE

- Sedan model

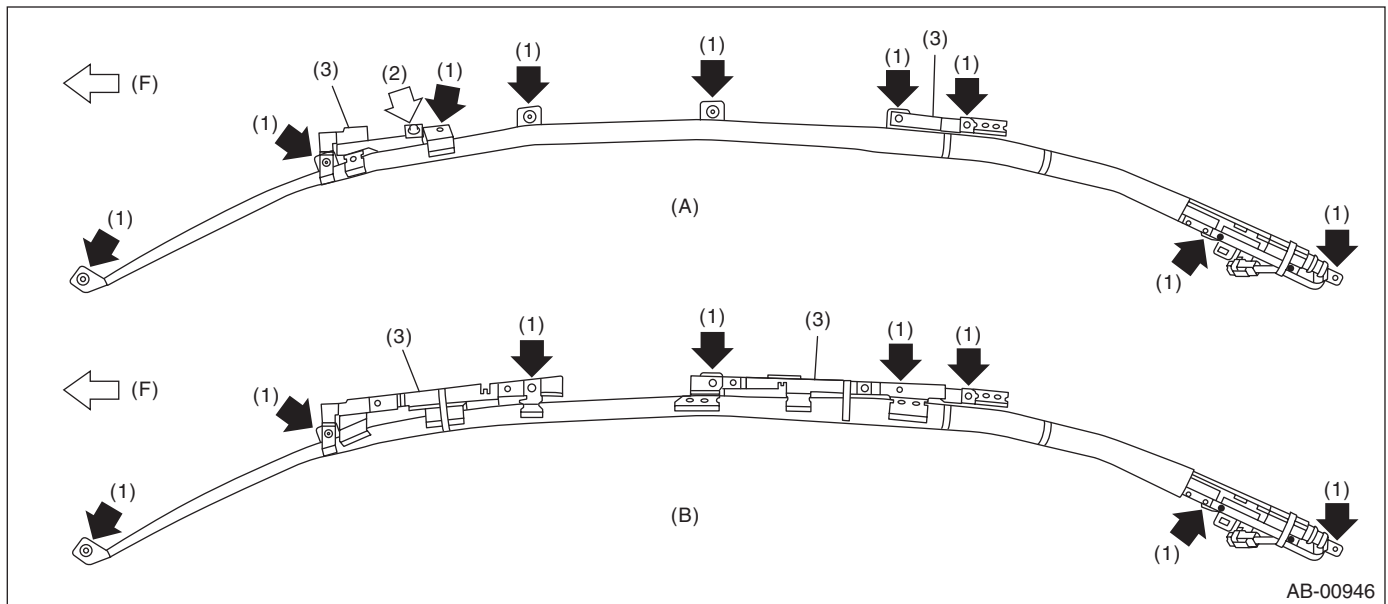

AB-00946

(A) Models with sunroof

(B) Models without sunroof


(F) Front side

(1) Bolt

(2) Clip

(3) Plate guard

- Wagon model

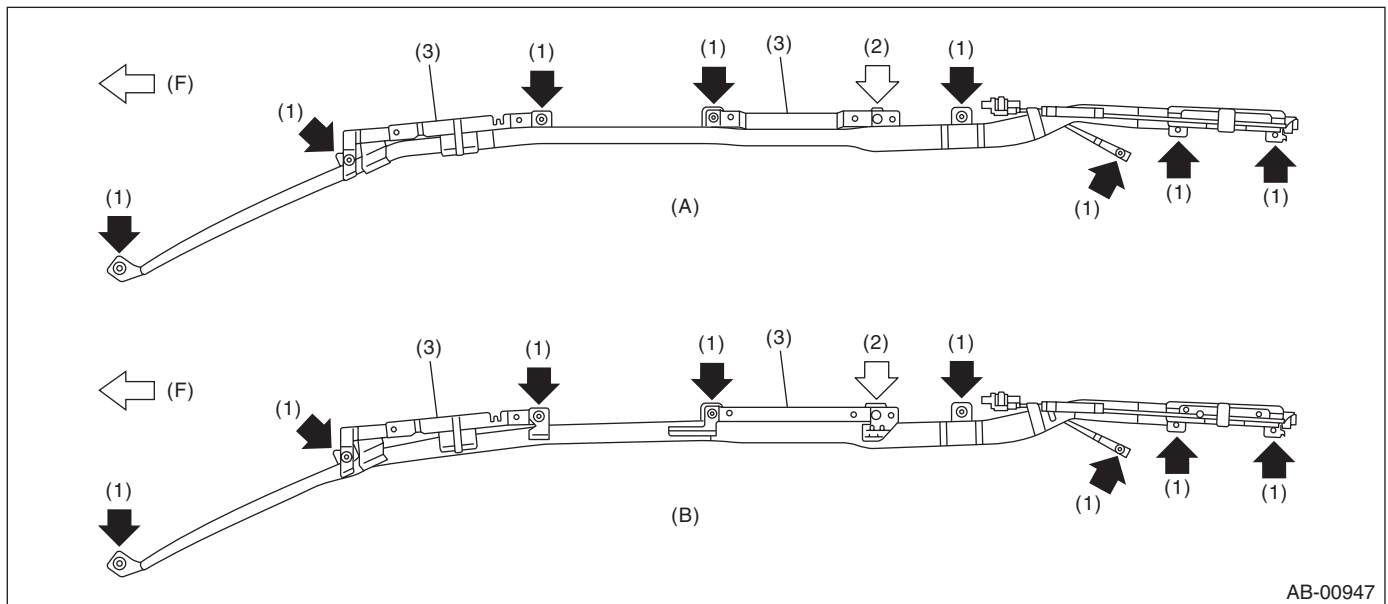

AB-00947

(A) Models with sunroof

(B) Models without sunroof

(F) Front side


(1) Bolt

(2) Clip

(3) Plate guard

Tightening torque:
7.5 N·m (0.77 kgf-m, 5.5 ft-lb)

10.AIRBAG HARNESS

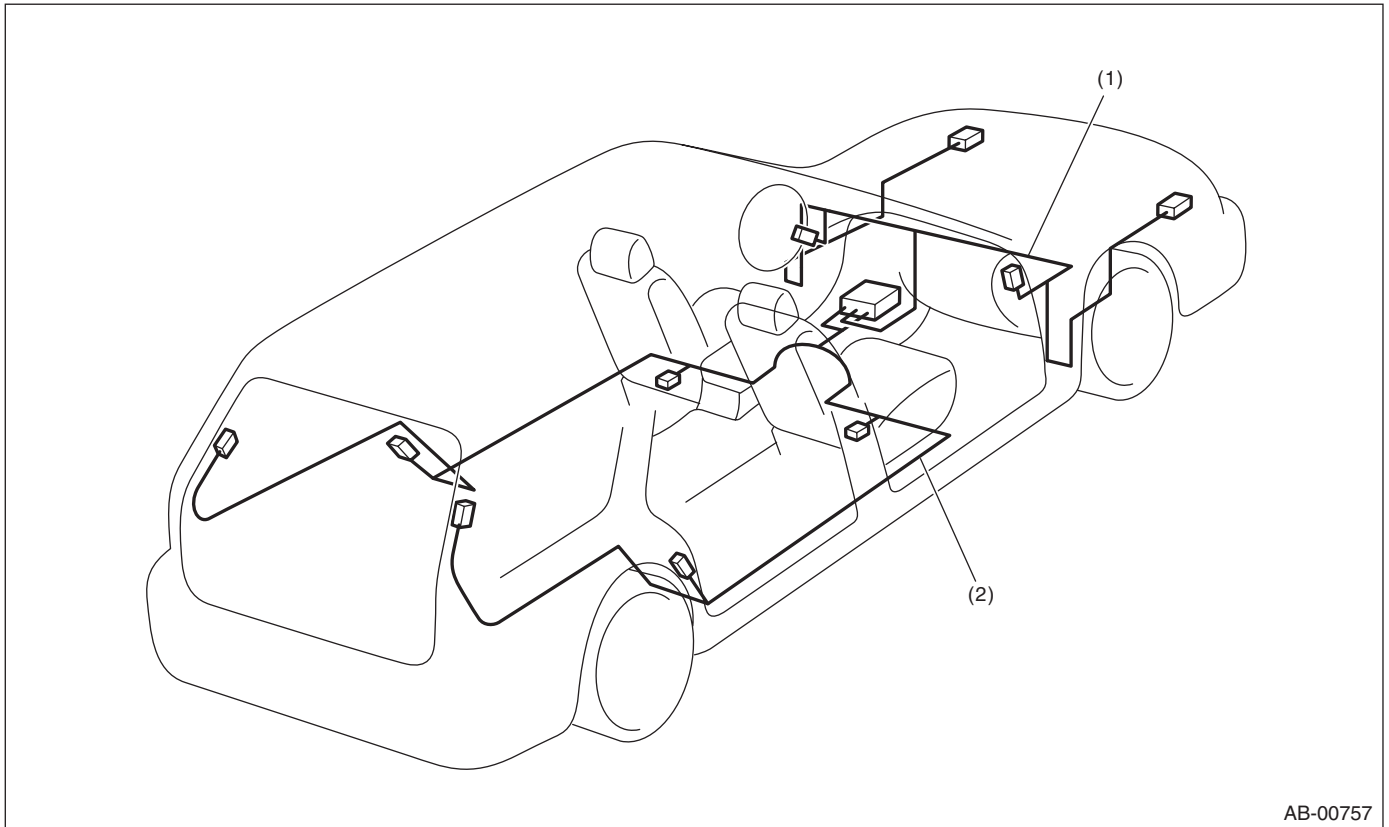

(1) Airbag main harness


(2) Airbag rear harness

General Description


AIRBAG SYSTEM

B: CAUTION


- When servicing a vehicle, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
- The airbag system is fitted with a backup power source. After disconnecting the battery ground cable, the airbag may deploy if you do not wait for more than 20 seconds before starting airbag system servicing.

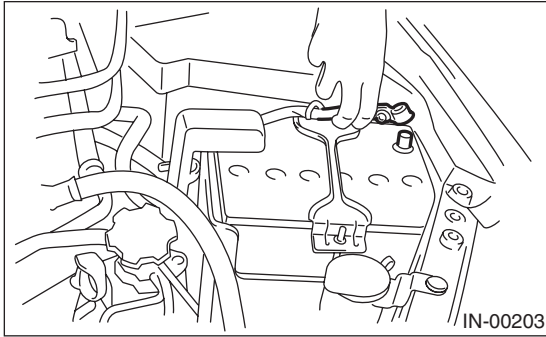


- If the airbag warning light illuminates, repair the vehicle immediately. Otherwise, the airbag or pretensioner may inflate incorrectly, or not inflate in collision.
- If sensors, airbag module, airbag control module, pretensioner or harness is deformed or damaged, replace with new part.

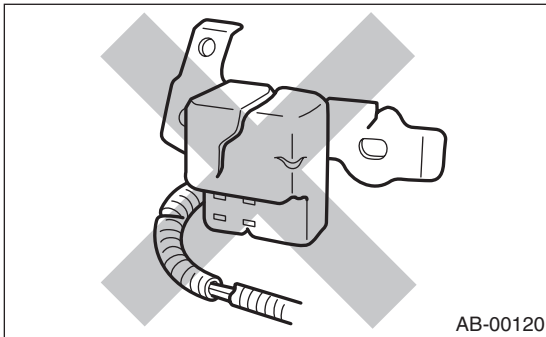


- When checking the airbag system, be sure to use a digital circuit tester. Use of an analog circuit tester may cause the airbag to activate erroneously due to a minimal current inside tester.

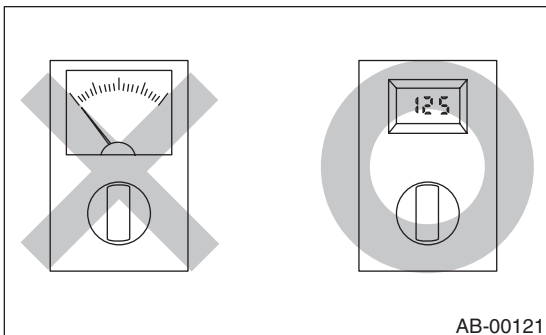


- When checking, use a test harness (1). Damage to connector terminal cause malfunction. Do not directly apply the tester probe to connector terminal of airbag.

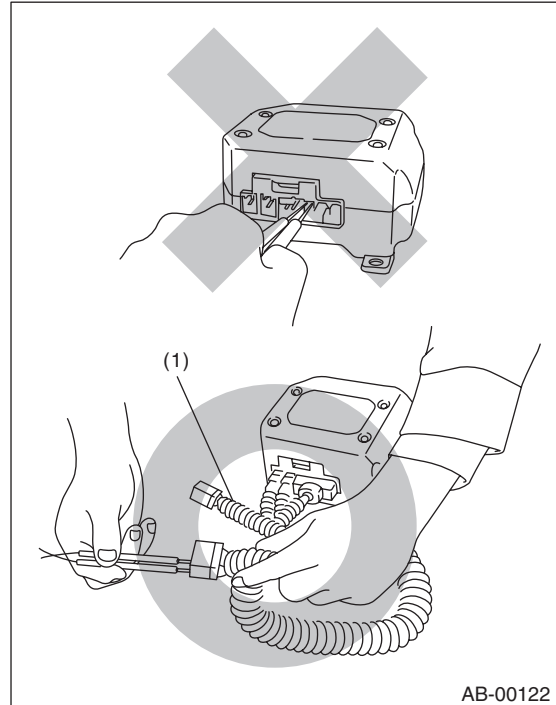


- Do not allow water or oil to come in contact with the connector terminals. Also, do not touch the connector terminals.

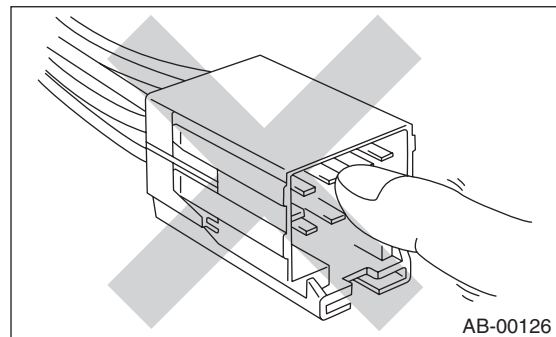


- Do not check continuity of the airbag modules for driver's side, passenger's side and curtain, or the pretensioner.

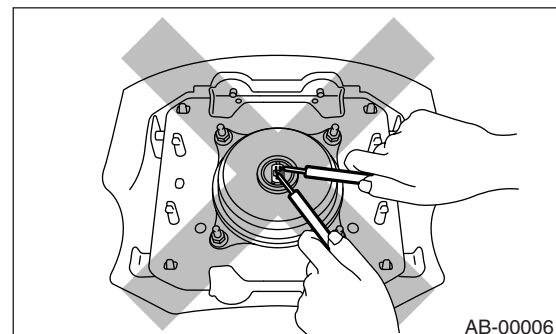


- If damage, open circuit or rust is found on airbag system wiring harness, do not use a soldering equipment to repair. Replace the faulty harness with a new genuine part.

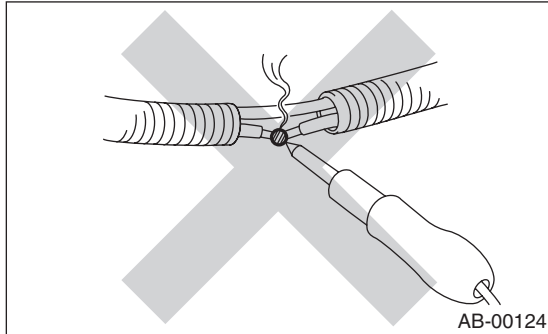

- Install the wiring harness securely with specified clips to avoid interference or becoming tangled with other parts.

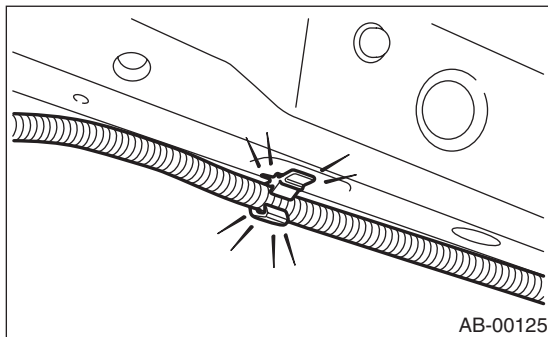


- When painting or performing sheet metal work on the front part of the vehicle, including the front wheel apron, front fender and front side frame, remove the front sub sensors and wiring harness of airbag system.
- When painting or performing sheet metal work on the side of the vehicle, including the side sill, center pillar and front and rear doors, remove the side airbag sensors and wiring harness of the airbag system.

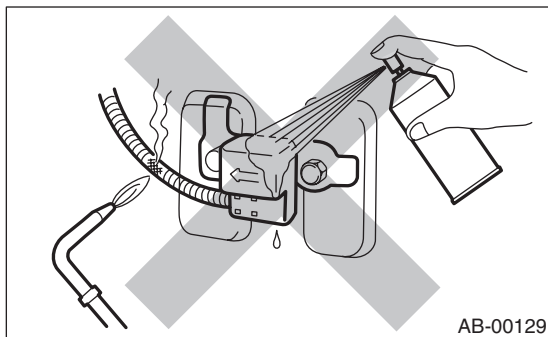


- Do not use the airbag or pretensioner parts from other vehicles. Always replace the defective parts with new parts.
- Never reuse a deployed airbag module and pretensioner.

- Do not discard the uninflated airbag or pretensioner.
- When airbag control module, front sub sensor, side airbag sensor and curtain airbag sensor are removed, do not reuse the bolts and nuts of them. Always use new bolts and nuts for them.
- Do not drop each airbag module, airbag control module and each sensor, or store these parts under high temperature over 93°C (199°F), or let water, oil or grease get on them; the internal parts may be damaged or the reliability may be greatly lowered.

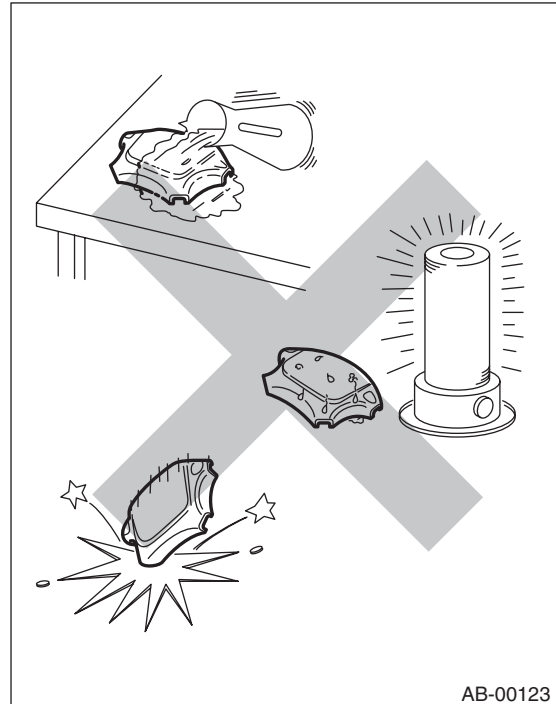


- After removal of each parts for airbag system, keep them with the pad facing upward on a dry, clean and flat surface without heat, light sources, moisture and dust.

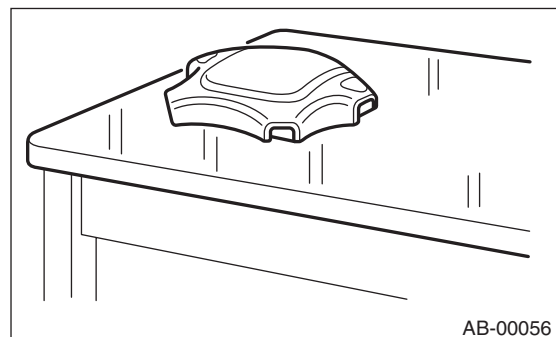


General Description

AIRBAG SYSTEM

- The driver's, passenger's, side, curtain airbag modules, and the pretensioner must not be disassembled.

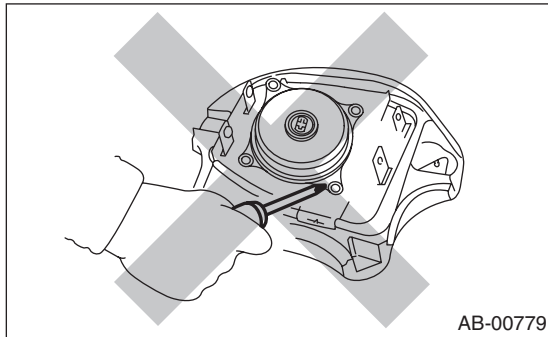

- When performing attachment of the steering wheel and steering roll connector, make sure to perform adjustment of the steering roll connector.
- The removed front seat with airbag module must be kept at least 200 mm (8 in) away from walls and other objects.

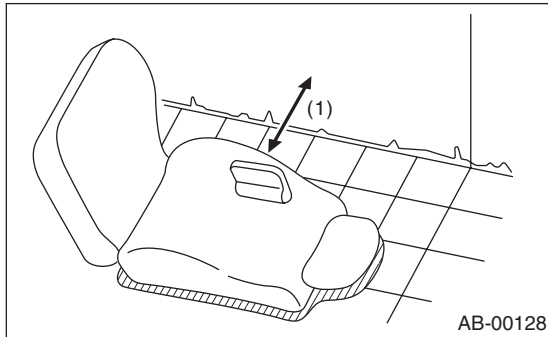


(1) 200 mm (8 in) or more

General Description


AIRBAG SYSTEM

- When storing a removed airbag module, do not place any objects on the module or stack them on top of each other. If the airbag inflates for some reason when it is placed with its pad side facing downward or under any object, a serious accident may result.

(1)

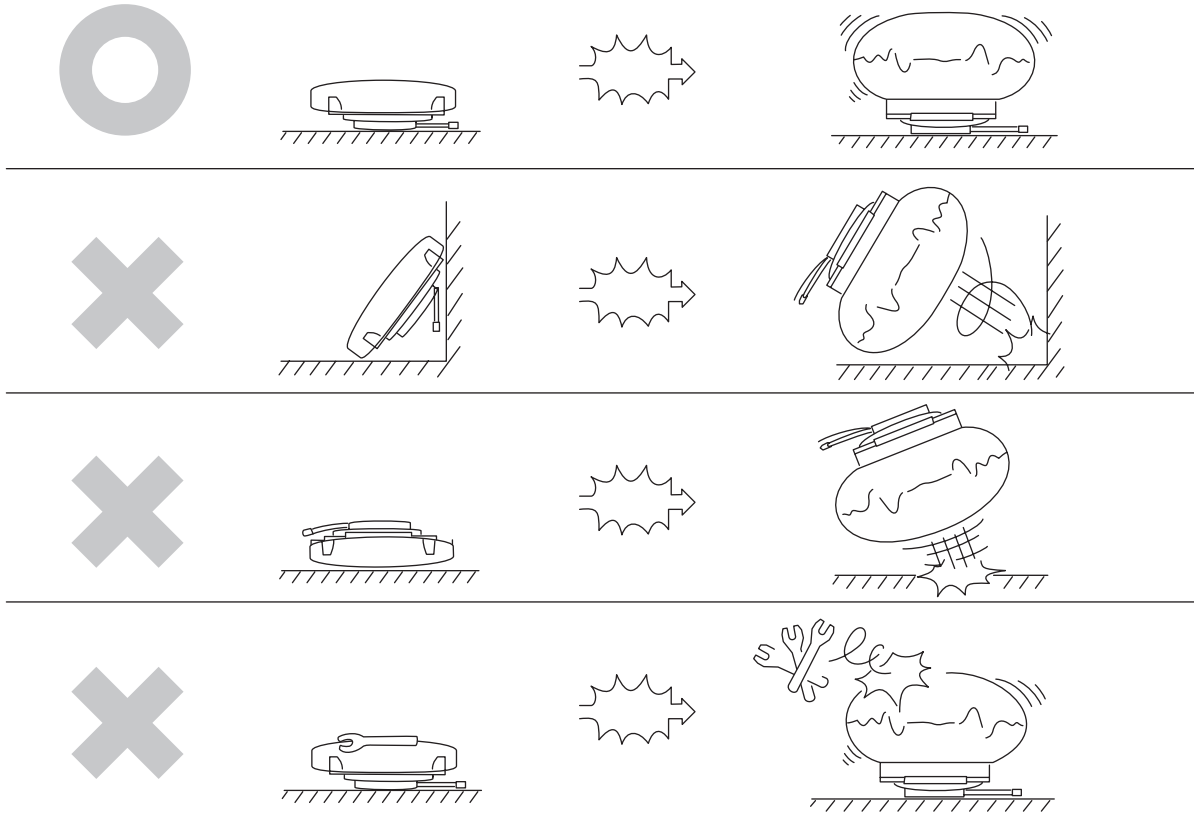

(2)

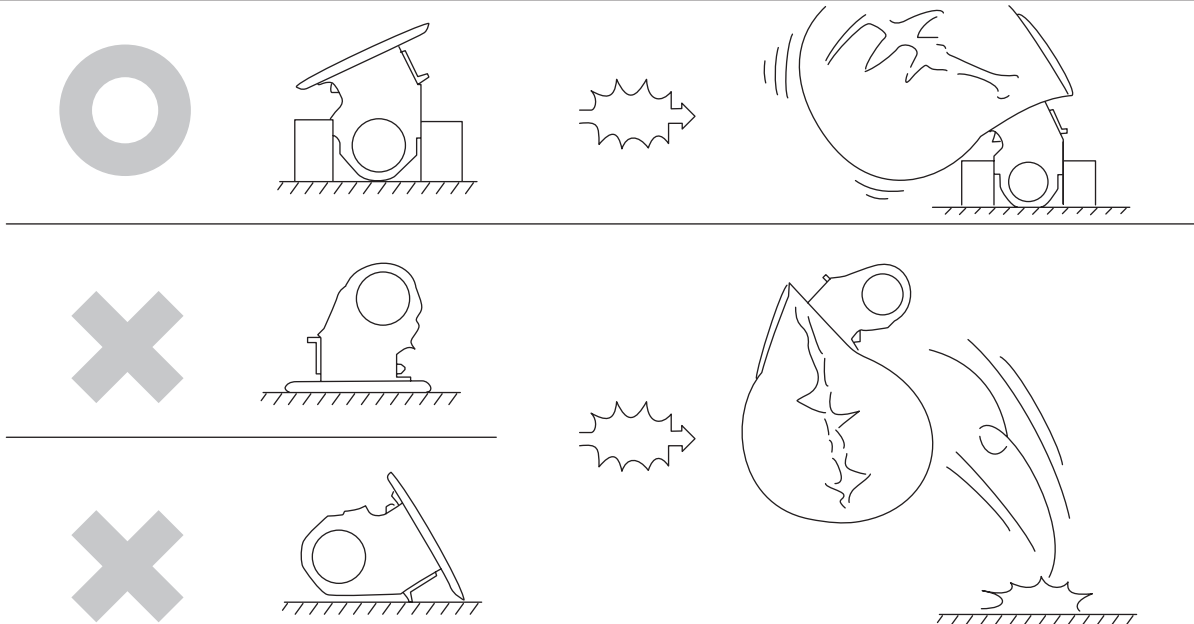

AB-00130

(1) Driver's airbag module

(2) Passenger's airbag module

General Description

AIRBAG SYSTEM

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
TORX® T30	Used for removing and installing driver's airbag module.


2. Airbag Connector

A: PROCEDURE

1. POWER SUPPLY AND BUCKLE SWITCH

1) How to disconnect:

- (1) Move the slide lock (A) in the direction of arrow.
- (2) While holding the slide lock (A) in the moved position, disconnect the connector.

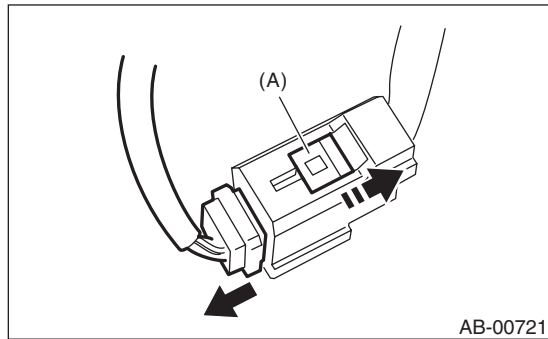


CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect:

Holding the connector (A), and push it in carefully until a clicking sound is heard.

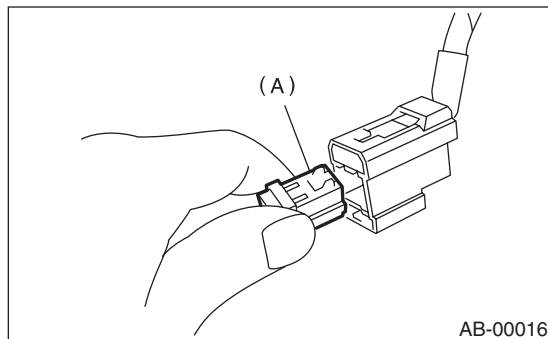


CAUTION:

Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.


2. DRIVER'S AIRBAG MODULE AND PRE-TENSIONER

1) How to disconnect:

- (1) Using a flat tip screwdriver, pry the push lock upward to unlock.

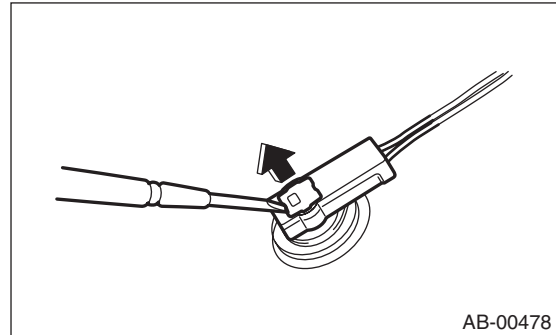

- (2) Pull the connector to disconnect from the driver's airbag module assembly or the retractor assembly.

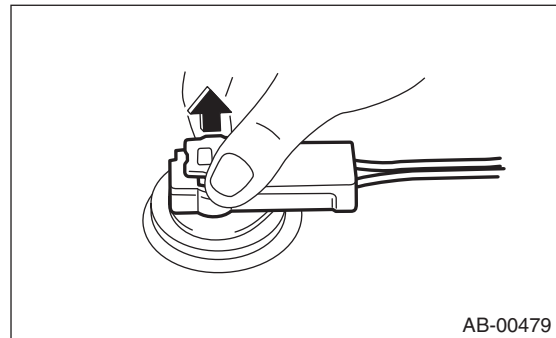


2) How to connect:

Connect the connector in the reverse order of disconnecting. At this time, be sure to insert the push lock until a clicking sound is heard.

CAUTION:

- Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.
- Be sure to push the push lock in securely.

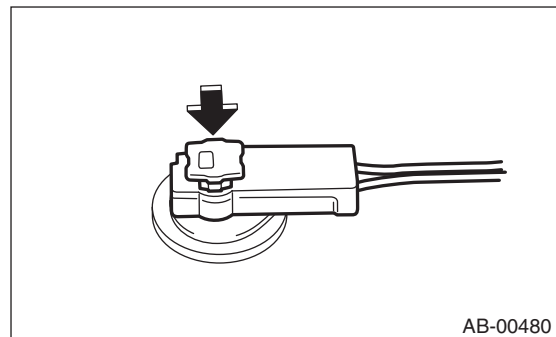

NOTE:

The connector cannot be connected when the push lock is in the lock position. Move the push lock to the release position and connect the connector.


Airbag Connector

AIRBAG SYSTEM


3. DRIVER'S AIRBAG (BETWEEN AIRBAG MAIN HARNESS AND ROLL CONNECTOR) AND SIDE AIRBAG

1) How to disconnect:

- (1) Push the slide lock (A) in the direction of arrow.

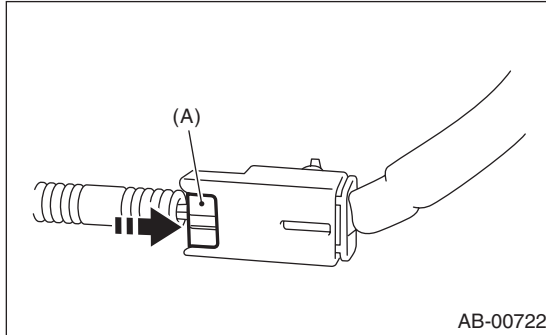

- (2) With the slide lock pushed, disconnect the connector.

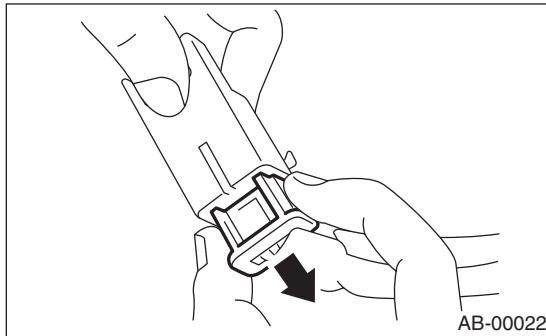

CAUTION:


When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:


Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.

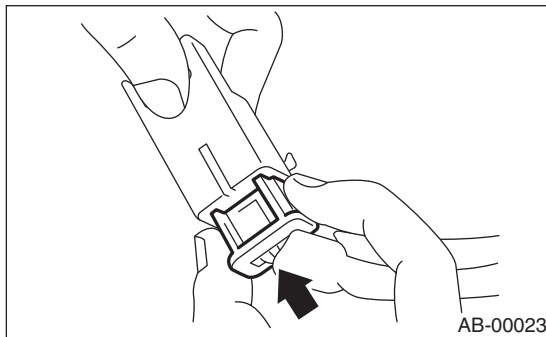

4. SIDE AIRBAG AND CURTAIN AIRBAG

1) How to disconnect:


- (1) Push the lock arm (A).
- (2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of arrow.

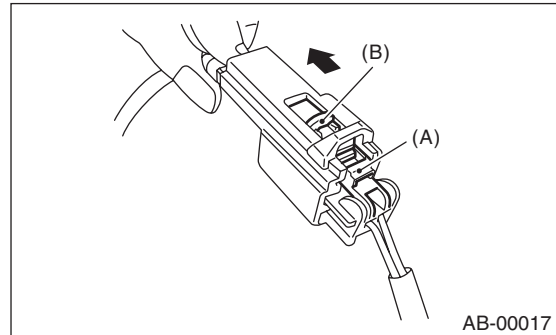

- (3) With the slide lock held in the moved position, release the lock arm (return to original position) and disconnect the connector.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

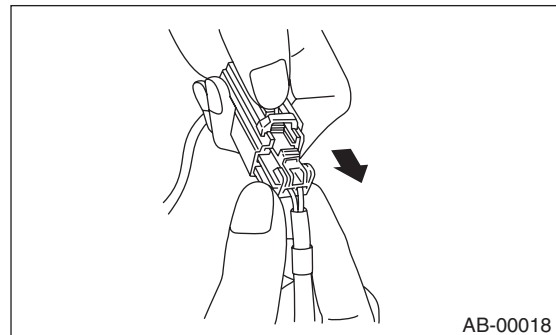


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.

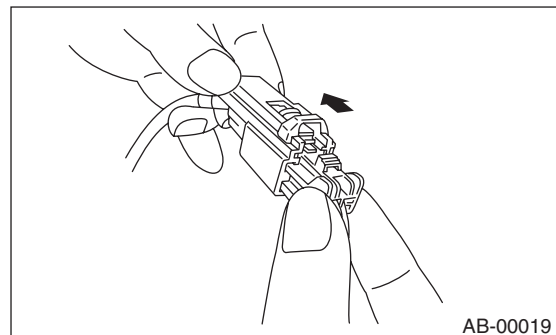


5. FRONT SUB SENSOR, SIDE AIRBAG SENSOR, CURTAIN AIRBAG SENSOR AND SEAT POSITION SENSOR

1) How to disconnect:
Holding outer part (A), pull it in the direction of arrow.

CAUTION:


When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

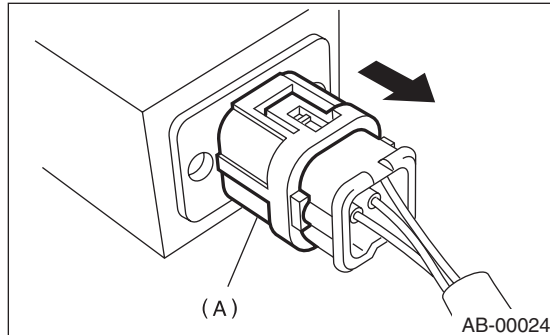

2) How to connect:
Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

- Do not touch the outer side section or else the outer side (A) will move back.
- Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.

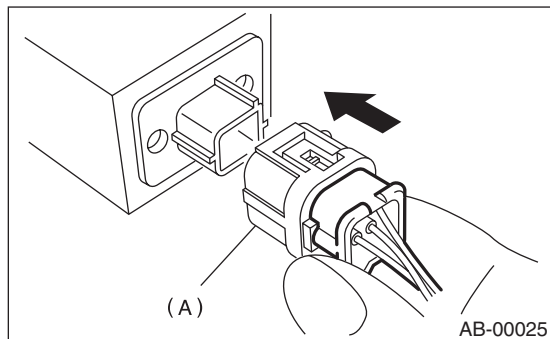


6. PASSENGER DETECTION SYSTEM (BETWEEN AIRBAG REAR HARNESS AND SEAT HARNESS) AND BELT TENSION SENSOR

1) How to disconnect:
Push lock arm (A), then disconnect the connector.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

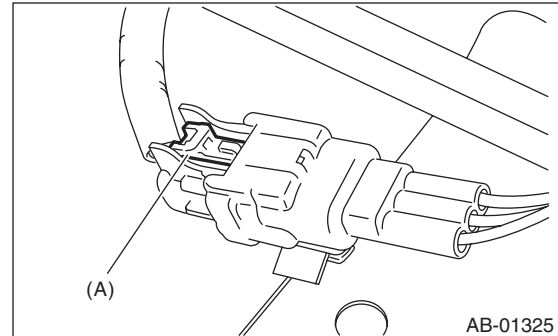

2) How to connect:
Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.

3. Inspection Locations After a Collision

A: REPLACEMENT

Replace the following parts when the airbag is deployed.

1. FRONT COLLISION

- 1) Driver's airbag module
- 2) Passenger's airbag module
- 3) Driver's seat belt (Pretensioner)
- 4) Passenger's seat belt (Pretensioner)
- 5) Airbag control module
- 6) Front sub sensor (L/R)
- 7) Roll connector
- 8) Instrument panel (for integrating with passenger's airbag module)
- 9) Passenger's side seat cushion pad and frame assembly

2. SIDE COLLISION

- 1) Airbag control module
- 2) Side airbag module (operating side seat backrest)
- 3) Side airbag sensor (Operating side)
- 4) Curtain airbag module (operating side)
- 5) Curtain airbag sensor (operating side)

3. INSPECTION OF OTHER PARTS

Check for the following parts, and replace the damaged parts with new parts.

- 1) Steering wheel and steering shaft

Check the steering shaft for mounting conditions and deflection of front and rear, upward and downward directions, and deflection of front and rear direction with tilt lever released. (After a collision, absorbing part of steering shaft may have been operated.)

- 2) Check the connectors of airbag module, pretensioner, etc. for damage, and also check each harness for pinch and connector damage. Replace the harness as a unit if damage is found.
- 3) Check the seat cushion frame, backrest, seat rail and headrest for deformation, distortion, crack, and installing condition and play.
- 4) For the passenger's seat, replace the seat cushion pad and frame assembly with a new part if the seat cushion pad and frame assembly is deformed or cracked.
- 5) If there are tears or loosening in the passenger side seat cushion cover, it may interfere with the proper operation of the passenger detection system. Replace with a new cushion cover.

- 6) Be sure to perform the system calibration for the occupant detection system after removing or replacing the passenger seat cushion cover. Failure to do so may cause improper operation of the occupant detection system. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

- 7) Use the Subaru Select Monitor to check whether the driver's seat position sensor and the driver's and the front left/right seat belt buckle switches are operating normally.

B: INSPECTION

If the vehicle is involved in a collision, even if it is a slight collision, be sure to check the following systems.

1. DRIVER'S AIRBAG MODULE

- 1) Check for the following, and replace the damaged parts with new parts.

- Airbag module is cracked or deformed.
- Harness and/or connector is cracked, deformed or open. Harness wire is exposed.
- The module surface is fouled with grease, oil, water or cleaning solvent.

- 2) When installing a new driver's airbag module, check for the following, and replace the damaged parts with new parts.

- The steering wheel is in the way, making it difficult to install the airbag module.
- The clearance between the driver's airbag module and steering wheel is not constant.
- When steering wheel deformation in axial and vertical directions exceed limits.


Specification:

Axial deflection A

Less than 6 mm (0.24 in)

Vertical deflection L

Less than 7 mm (0.28 in)

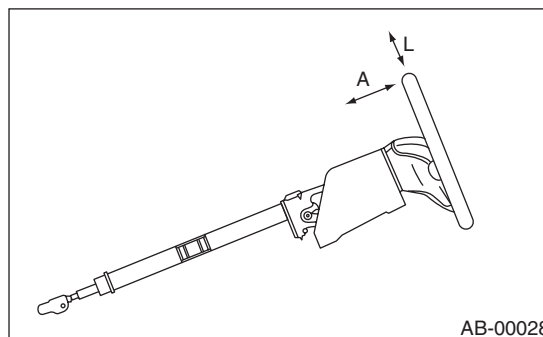

2. PASSENGER'S AIRBAG MODULE

Check for the following, and replace the damaged parts with new parts.

- Airbag module and instrument panel are cracked or deformed.
- Harness and/or connector is cracked, deformed or open. Harness wire is exposed.
- Mounting bracket is cracked or deformed.

3. SIDE AIRBAG MODULE

Check for the following, and replace the damaged parts with new parts.

- Front seat, airbag module and mounting bracket are damaged or deformed.
- Harness and/or connector is cracked, deformed or open. Harness wire is exposed.

4. CURTAIN AIRBAG MODULE

Check for the following, and replace the damaged parts with new parts.

- Airbag cover is scratched or torn.
- Harness and/or connector is cracked, deformed or open. Harness wire is exposed.
- Mounting bracket and securing clip are cracked or deformed.


5. AIRBAG CONTROL MODULE

Check for the following, and replace the damaged parts with new parts.

- Control module is cracked or deformed.
- Mounting bracket is cracked or deformed.
- Connector is scratched, cracked or deformed.
- Airbag is deployed.
- Side airbag is deployed.
- Curtain airbag is deployed.

6. FRONT SUB SENSOR


If the section of vehicle as shown in the figure is damaged, check the following items and replace the damaged parts with new parts.

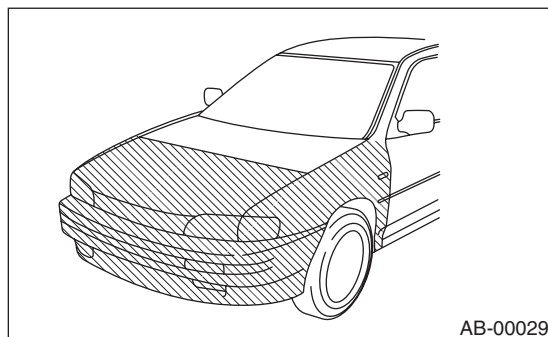

- Front sub sensor is cracked or deformed.
- Mounting bracket is cracked or deformed.
- Connector is scratched, cracked or deformed.
- Airbag is deployed.

7. SIDE AIRBAG SENSOR AND CURTAIN AIRBAG SENSOR

If the section of vehicle as shown in the figure is damaged, check the following items and replace the damaged parts with new parts.

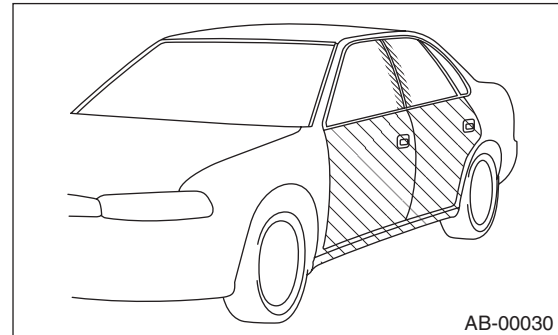

- Side airbag sensor and curtain airbag sensor are cracked or deformed.
- Mounting bracket is cracked or deformed.
- Connector is scratched, cracked or deformed.
- Side airbag or curtain airbag is deployed. (operating side)

8. ROLL CONNECTOR

Check for the following, and replace the damaged parts with new parts.

Combination switch or steering roll connector is cracked or deformed.

9. STEERING SHAFT

Check for the following, and replace the damaged parts with new parts.

Overall length of steering column should be within specification.

Specification:


Overall length L

Excluding OUTBACK model

$833.6^{+1.3}_{-0.3}$ mm (32.82^{+0.051}_{-0.012} in)

OUTBACK model

$825.4^{+1.3}_{-0.3}$ mm (32.50^{+0.051}_{-0.012} in)

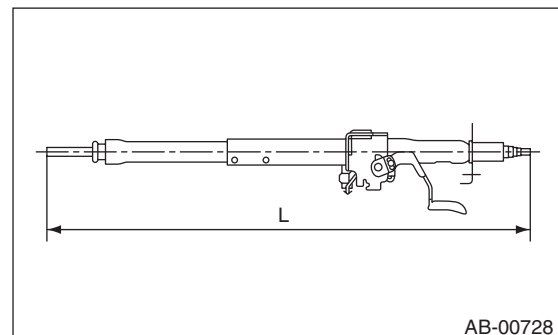

10.DRIVER'S SEAT

Check for the following, and replace the damaged parts with new parts.

- Seat belt buckle or seat position sensor body/ bracket is cracked or deformed.
- Harness and/or connector is cracked, deformed or open. Harness wire is exposed.

11.PASSENGER'S SEAT

1) Check for the following, and replace the damaged parts with new parts.

- Seat belt buckle body, bracket or connector is scratched, cracked or deformed.
- Backrest frame for crack or deformation
- Headrest for deformation or play
- If the seat cushion cover and seat back cover is scratched or coming loose, replace with a new cover and readjust the system. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

CAUTION:

If any of the following applies, replace the seat cushion pad and frame assembly. Do not disassemble.

- **Cracks or deformation found in the seat cushion frame or seat cushion pad.**
- **Scratches, cracks, or deformation found on the passenger detection system pressure sensor hoses or passenger detection control module, or attachment brackets of the control module.**
- **Harness and/or connector is cracked, deformed or open. Harness wire is exposed.**

2) After checking the installing condition of passenger's seat, perform the system calibration of occupant detection system. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

12.BELT TENSION SENSOR

Check for the following, and replace the damaged parts with new parts.

- Belt tension sensor is scratched, cracked, or deformed.
- Harness and/or connector is cracked, deformed or open. Harness wire is exposed.


4. Driver's Airbag Module

A: REMOVAL


CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

- 1) Position the front wheels straight ahead. (After moving a vehicle more than 5 m (16 ft) with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead.)
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using TORX® BIT T30 (1), remove the two TORX® bolts on the side of steering wheel.

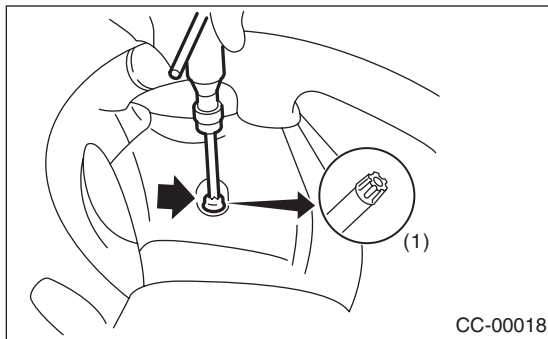

- 5) Disconnect the horn harness.
- 6) Disconnect the airbag connector on the back of airbag module, and then remove the airbag module. <Ref. to AB-11, PROCEDURE, Airbag Connector.>

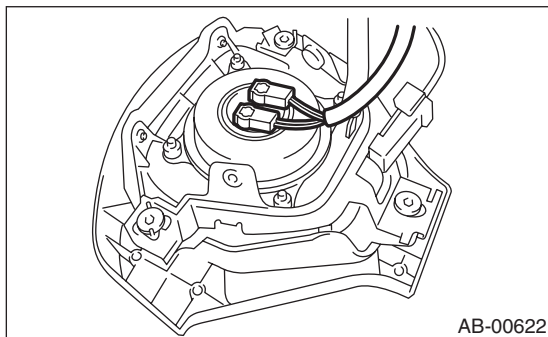

- 7) Refer to "CAUTION" for handling of a removed airbag module. <Ref. to AB-6, CAUTION, General Description.>

B: INSTALLATION

CAUTION:

- Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>
 - To prevent the misconnection, the connector is colored. Connect the harness side connector to the same color of module side connector.
- Install in the reverse order of removal.

Tightening torque:

10 N·m (1.0 kgf-m, 7.2 ft-lb)

C: INSPECTION

CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts.

Airbag module, harness, connector and mounting bracket are damaged. <Ref. to AB-14, DRIVER'S AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>


5. Passenger's Airbag Module

A: REMOVAL

CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the instrument panel. <Ref. to EI-55, INSTRUMENT PANEL (EXCLUDING STEERING SUPPORT BEAM), REMOVAL, Instrument Panel Assembly.>
- 4) Remove the pawl, and remove the passenger's airbag module.

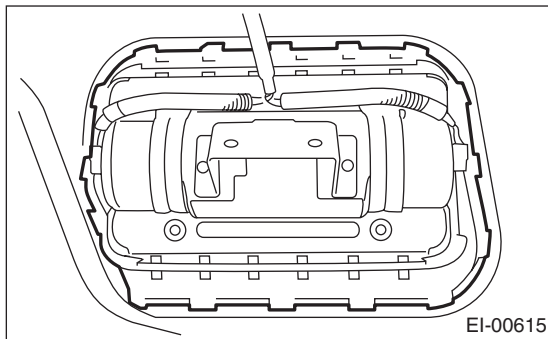

- 5) Refer to “CAUTION” for handling of a removed airbag module. <Ref. to AB-6, CAUTION, General Description.>

B: INSTALLATION

CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

Install in the reverse order of removal.

Tightening torque:

7.4 N·m (0.75 kgf-m, 5.5 ft-lb)

C: INSPECTION

CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts.

Airbag module, harness, connector and mounting bracket are damaged. <Ref. to AB-15, PASSENGER'S AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>

6. Side Airbag Module

A: REMOVAL


CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

NOTE:

Remove the passenger's side by referring to driver's side.

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 4) Disconnect the connector from the back side of seat cushion assembly, then remove the side airbag harness.
- 5) Remove the backrest cover. <Ref. to SE-9, DISASSEMBLY, Front Seat.>
- 6) Remove the nuts, and remove the side airbag module assembly from the back rest frame assembly.

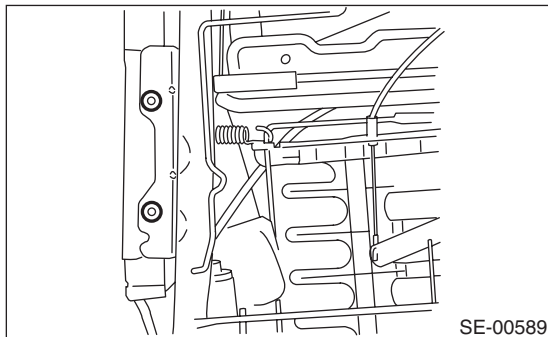

B: INSTALLATION


CAUTION:

- Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>
- Be sure to perform the system calibration for occupant detection system after passenger's seat installation. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

- 1) Make sure that there is no foreign matter on side airbag module.
- 2) Install the side airbag module (A) to backrest frame assembly.

CAUTION:

When attaching the side airbag module assembly, make sure to sandwich the seat backrest cover between the seat backrest side bracket and side airbag module.

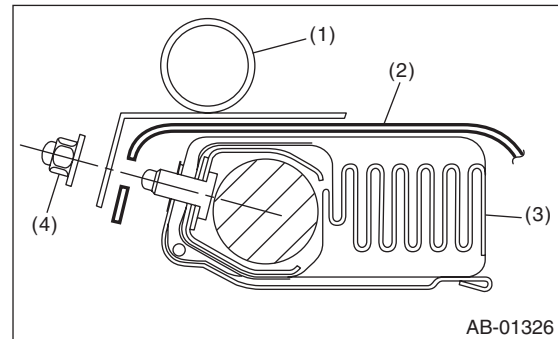

- (1) Backrest frame assembly
- (2) Backrest cover
- (3) Side airbag module assembly
- (4) Hexagon cap nut

Tightening torque:

6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

- 3) Install the backrest cover. <Ref. to SE-15, ASSEMBLY, Front Seat.>
- 4) Draw the side airbag harness around the back side of seat cushion assembly.
- 5) Recline the seat or slide it backward and forward, and check there is no contact between the seat backrest assembly, cushion cover assembly and side airbag harness.

C: INSPECTION

CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts. <Ref. to AB-15, SIDE AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>

1) With side collision (when side airbag is deployed)

- Side airbag module assembly
- Backrest pad assembly
- Backrest frame assembly
- Backrest cover assembly

2) When damage is found by visual check

- Headrest assembly
- Bushing
- Slide rail OUT (Driver's side)
- Slide rail IN (Driver's side)
- Seat cushion pad and frame ASSY
- Seat hinge cover
- Seat lifter lever
- Reclining lever
- Side airbag harness and connector on body side

3) With side collision (when side airbag is not deployed)

Check the seat and airbag module visually, and then replace them with new parts if damaged or cracked.

Specially inspect the damage of airbag module body, mounting bracket and harness connector.

4) Without side collision (dirt and damage of cover)

Replace the corresponding part with a new part.


7. Curtain Airbag Module

A: REMOVAL


CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the rear quarter trim. (Sedan model) <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 4) Remove the quarter rear pillar trim. (Wagon model) <Ref. to EI-61, WAGON MODEL, REMOVAL, Rear Quarter Trim.>
- 5) Disconnect the curtain airbag module connector.
 - Sedan model

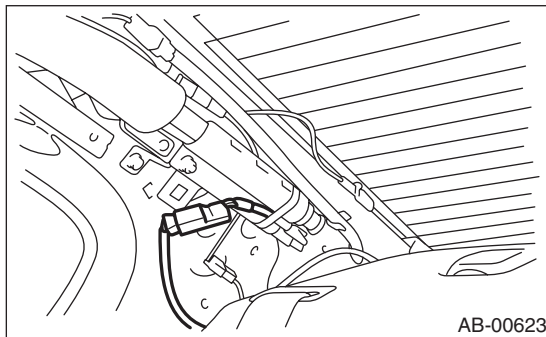

- Wagon model

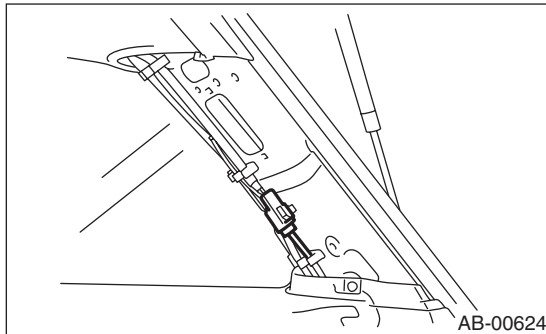


- 6) Remove the roof trim. <Ref. to EI-65, REMOVAL, Roof Trim.>


- 7) Remove bolt (A) and clip (B), and then remove the curtain airbag module.

CAUTION:

- Be careful not to damage the curtain airbag module during removal.
- Never open the curtain airbag module before deploying it. Never reuse the deployed curtain airbag module.
- Sedan model

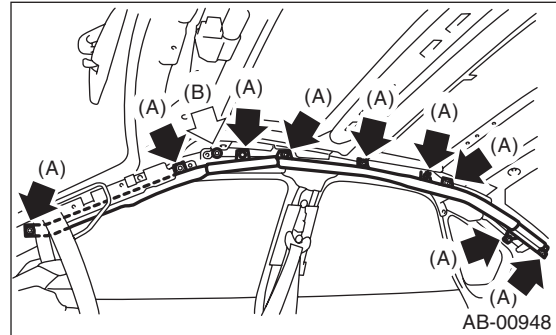


- Wagon model

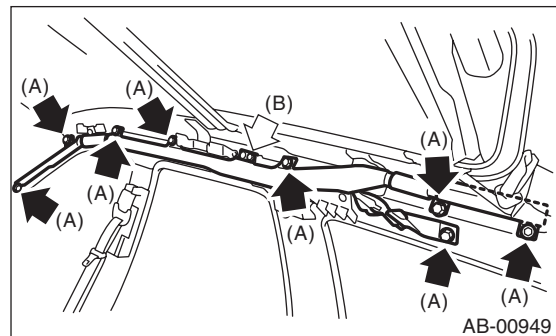

NOTE:

Remove the rear center seat belt retractor on the RH side before servicing.

- 8) Remove the airbag guide A from the front pillar.

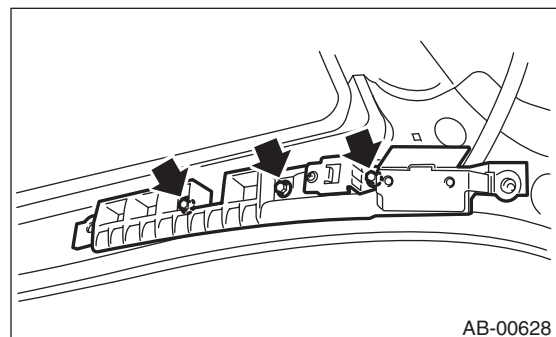


Curtain Airbag Module


AIRBAG SYSTEM

9) Remove the airbag guide B from the center pillar.

- Sedan model

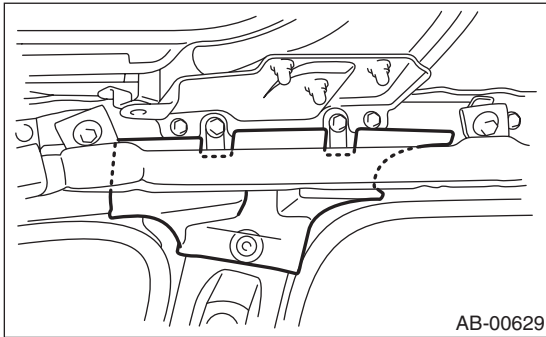


- Wagon model

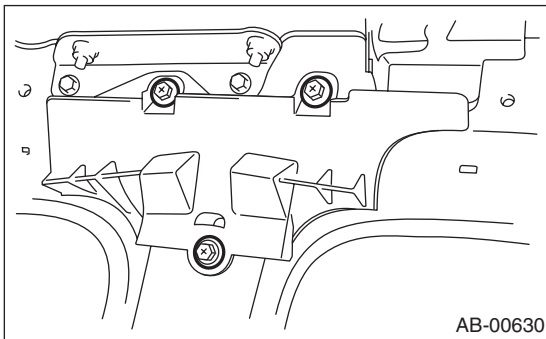


10) Remove airbag guide C from quarter pillar.

- Sedan model

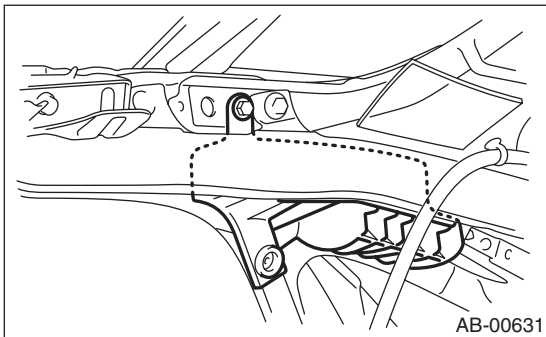

- Wagon model

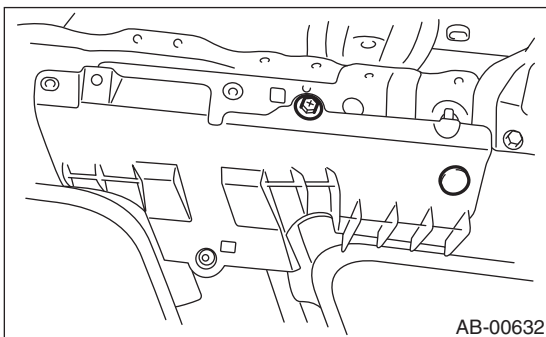

B: INSTALLATION

CAUTION:

- Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>
- When installing the curtain airbag module, install a specified part at specified place.
- Be careful not to damage the curtain airbag module during removal.
- Never open the curtain airbag module before deploying it. Never reuse the deployed curtain airbag module.
- Make sure that there are no foreign matter on airbag module.

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.77 kgf·m, 5.5 ft·lb)

C: INSPECTION

CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-6, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts. <Ref. to AB-15, CURTAIN AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>

1) With side collision (when curtain airbag is deployed)

- Curtain airbag module assembly
- Roof trim
- Front pillar upper trim
- Center pillar upper trim
- Rear quarter pillar trim
- Airbag guide A, B, C

2) When damage is found by visual check

- Assist grip
- Assist grip bracket
- Curtain airbag harness and connector on body side.

3) With side collision (when curtain airbag is not deployed)

Check the roof trim, pillar trim and airbag module visually, and then replace them with new parts if damaged or cracked.

Specially inspect the damage of airbag module body, mounting bracket and harness connector.

4) Without side collision (dirt and damage of cover)
Replace the corresponding part with a new part.


8. Airbag Control Module

A: REMOVAL


CAUTION:

- Do not disassemble the airbag control module.
- If the airbag control module is deformed or if the fault occurs by water, replace the airbag control module with a new part.
- Do not drop the airbag control module.
- After removal, keep the airbag control module on a dry, clean surface away from moisture, heat and dust.

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the console front panel and console side garnish. <Ref. to EI-53, REMOVAL, Center Console.>
- 4) Remove screws and pull out the audio unit assembly, and disconnect the connector for removal.

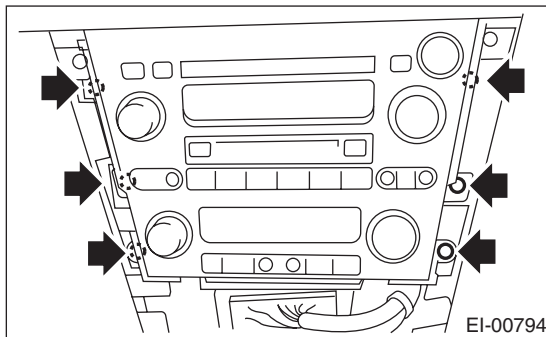

- 5) Disconnect the connector from airbag control module.
- 6) Remove the bolts and remove airbag control module.

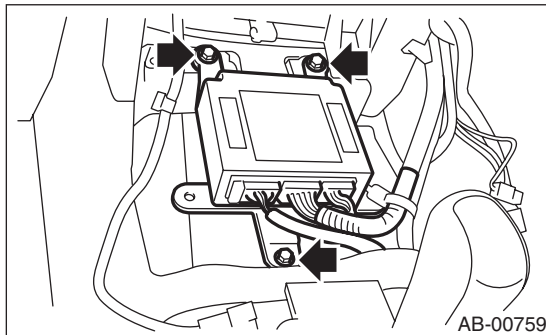

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.
- Be sure to put the water protection cover over the connector.

Install in the reverse order of removal.

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

C: INSPECTION


Check for the following, and replace the damaged parts with new parts.

- Control module, connector, and mounting bracket are damaged.
- Airbag is deployed.
- Side airbag is deployed.
- Curtain airbag is deployed.

9. Side Airbag Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the center pillar lower trim. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>
- 4) Remove the center pillar inner protector lower.
- 5) Remove the front outer seat belt retractor. <Ref. to SB-10, OUTER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>
- 6) Remove the nut and disconnect the airbag connector to remove side airbag sensor.

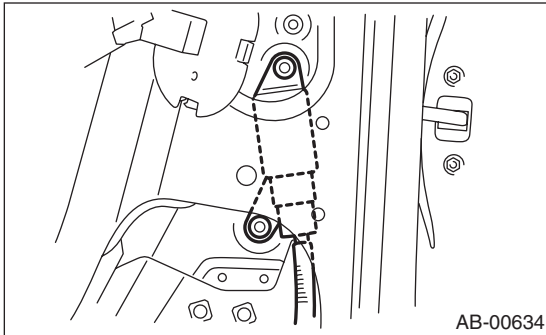

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

Tightening torque:

8.0 N·m (0.82 kgf-m, 5.9 ft-lb)

C: INSPECTION


Check for the following, and replace the damaged parts with new parts.

- Mounting bracket or connector of side airbag sensor is damaged.
- Side airbag is deployed.

10. Curtain Airbag Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 4) Remove the nut and disconnect the airbag connector to remove the curtain airbag sensor.

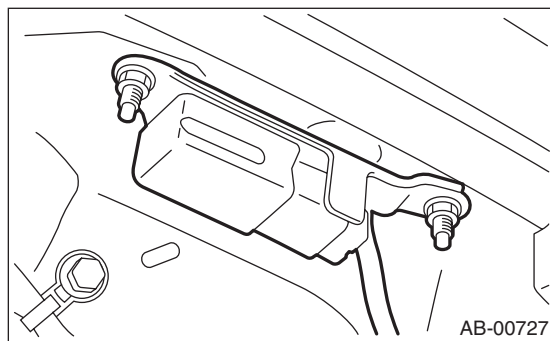

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

Tightening torque:

8.0 N·m (0.82 kgf-m, 5.9 ft-lb)

C: INSPECTION


Check for the following, and replace the damaged parts with new parts.

- Mounting bracket or connector of curtain airbag sensor is damaged.
- Curtain airbag is deployed.

11.Roll Connector

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the driver's airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>
- 4) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 5) Remove the steering column cover.
- 6) Remove the screws, and then remove the roll connector.

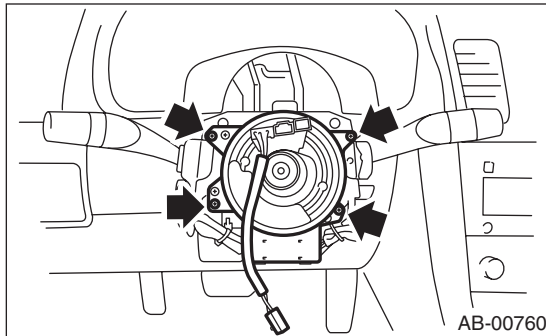

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Before installing steering wheel, be sure to adjust the direction of roll connector with steering. <Ref. to AB-26, ADJUSTMENT, Roll Connector.>


C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

Combination switch and roll connector are cracked or deformed.

D: ADJUSTMENT


- 1) Check that front wheels are positioned in straight ahead direction.
- 2) Turn the roll connector pin (A) clockwise until it stops.
- 3) Turn the roll connector pins (A) approx. 3.25 turns until "▲" marks are aligned.

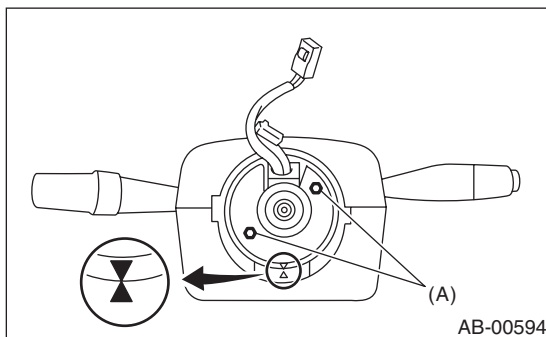

12.Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front bumper face. <Ref. to EI-30, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the bolt, and then detach the front sub sensor.

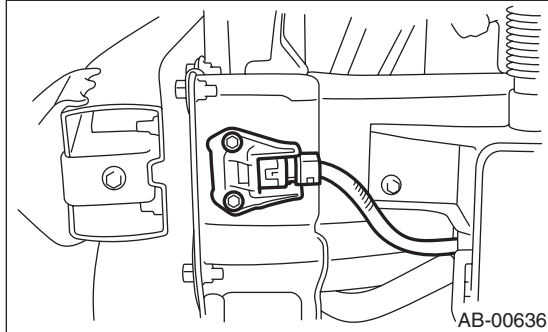

- 5) Disconnect the connector from front sub sensor.

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

Tightening torque:

13 N·m (1.32 kgf-m, 9.6 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor, mounting bracket and connector are damaged.
- Airbag is deployed.

Front Sub Sensor

AIRBAG SYSTEM

AIRBAG SYSTEM (DIAGNOSTICS)

AB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	23
5. Airbag Connector	24
6. Airbag Control Module I/O Signal	27
7. Subaru Select Monitor	29
8. Read Diagnostic Trouble Code (DTC)	34
9. Inspection Mode	35
10. Clear Memory Mode	36
11. Airbag Warning Light Illumination Pattern	37
12. Airbag Warning Light Failure	38
13. List of Diagnostic Trouble Code (DTC)	43
14. Diagnostic Chart with Trouble Code	47

Basic Diagnostic Procedure

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	CHECK WARNING LIGHT. Check whether the airbag warning light in the combination meter is lit.	Does the airbag warning light illuminate?	Go to step 2.	Perform the diagnosis according to phenomenon of the problem.
2	READ DTC. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to the data link connector. 3) Turn the ignition switch to ON, and the Subaru Select Monitor power switch to ON. 4) Read the DTC. <Ref. to AB(diag)-34, OPERATION, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of the Subaru Select Monitor cannot be executed normally, check the communication circuit. <Ref. to AB(diag)-31, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, INSPECTION, Subaru Select Monitor.> 5) Record all DTCs and freeze frame data.	Is DTC displayed?	Go to step 3.	<Ref. to AB(diag)-38, Airbag Warning Light Failure.>Go to "Airbag Warning Light Failure".
3	PERFORM DIAGNOSIS. 1) Judge the possible cause from "List of Diagnostic Trouble Code" <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>. 2) Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". 3) Repair the trouble cause. 4) Perform the Clear Memory Mode. <Ref. to AB(diag)-36, Clear Memory Mode.> 5) Perform the Inspection Mode. <Ref. to AB(diag)-35, Inspection Mode.> 6) Read any other DTCs displayed.	Is DTC displayed?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.

Check List for Interview

AIRBAG SYSTEM (DIAGNOSTICS)

2. Check List for Interview

A: CHECK

Customer's Name		Inspector's Name	
Date Vehicle Brought in	/ /	Registration No.	
Odometer Reading	km miles	V.I.N.	
Date Problem Occurred	/ /	Registration Year	/ /
Weather	☐ Fine ☐ Cloudy ☐ Rainy ☐ Snowy ☐ Others:		
Temperature	°C (°F)		
Road Condition	☐ Flat road ☐ Uphill ☐ Downhill ☐ Gravel road ☐ Others:		
Vehicle Operation	☐ Starting ☐ Idling ☐ Driving ☐ Constant speed ☐ Accelerating ☐ Decelerating ☐ Turning ☐ Others:		
Details of Problem			
Airbag Warning Light Operation	☐ Normal (After turning the ignition switch to ON, lit for approximately 6 seconds and goes off.) ☐ Remains ON ☐ Remains OFF		
DTC output	☐ OK code ☐ DTC: (Code:)		


General Description

AIRBAG SYSTEM (DIAGNOSTICS)


3. General Description

A: CAUTION


- When servicing a vehicle, be sure to turn the ignition switch to OFF, disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
- The airbag system is fitted with a backup power source. If the airbag system is serviced within 20 seconds after the ground cable is disconnected, it may inflate.

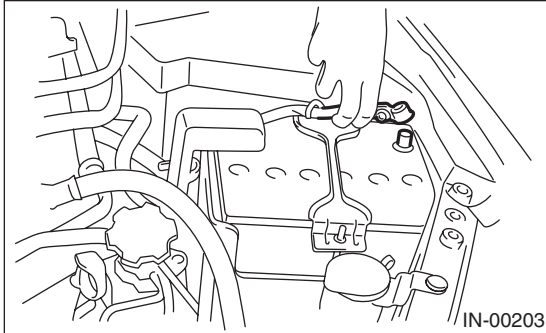


- If sensors, airbag module, airbag control module, pretensioner or harness is deformed or damaged, replace them with new genuine parts.

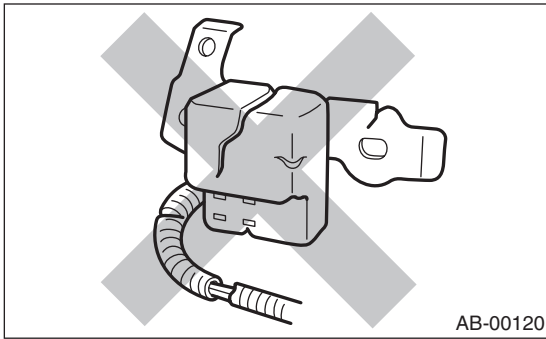


- Do not use the airbag system and pretensioners on other vehicles. When replacing parts, be sure to replace them with new parts.
- When checking the airbag system, be sure to use a digital circuit tester. Use of an analog circuit tester may cause the airbag to activate erroneously due to a minimal current inside tester.

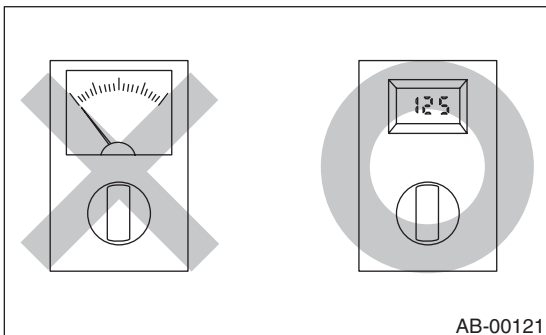

- When checking, use a test harness (1). Damage to connector terminal causes malfunction. Do not directly put the tester probe on airbag connector terminal.

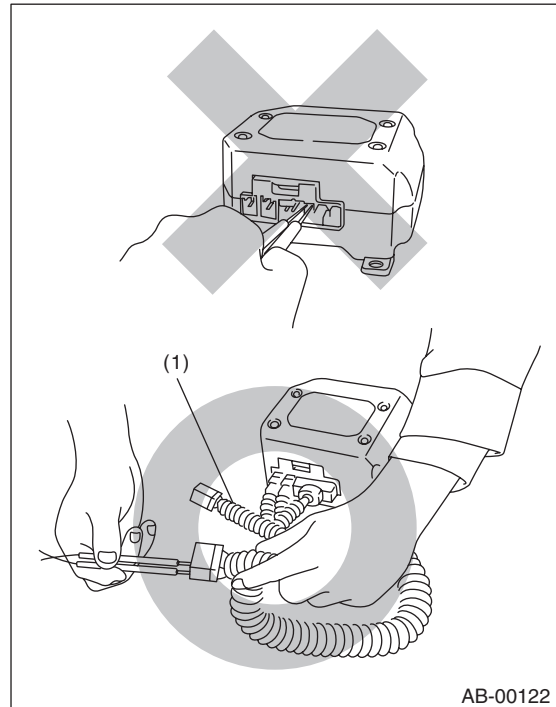


- Do not drop the airbag system parts, or keep them at high temperature over 93°C (199°F), or let water, oil or grease get on them; the internal parts may be damaged and reliability greatly lowered.

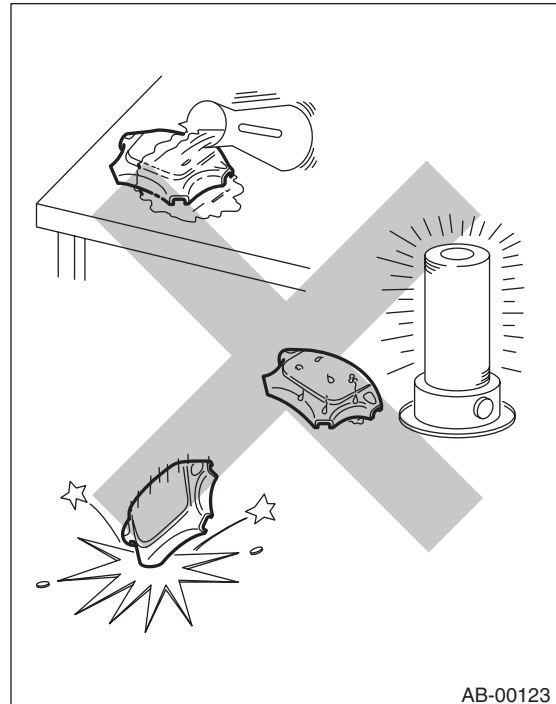


General Description

AIRBAG SYSTEM (DIAGNOSTICS)


- If damage, open circuit or rust is found on airbag system wiring harness, do not use a soldering equipment to repair. Replace the faulty harness with a new genuine part.

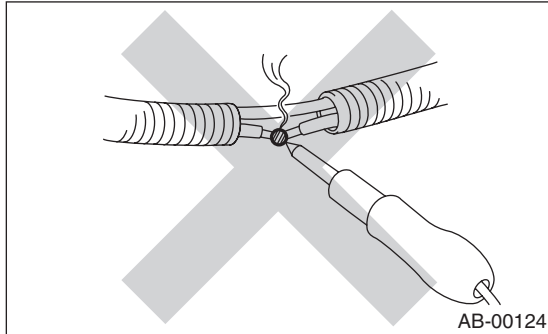


- Install the wiring harness securely with the specified clips to avoid interference or tangled with other parts.

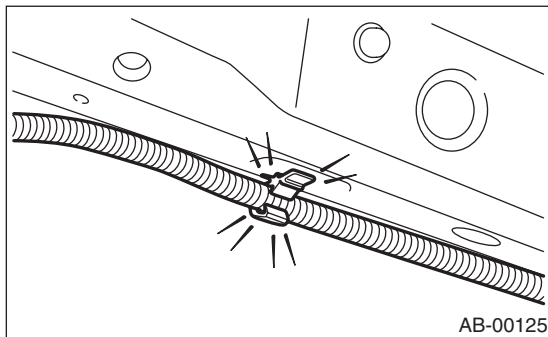


- Do not allow water or oil to come in contact with the connector terminals. Also, do not touch the connector terminals.

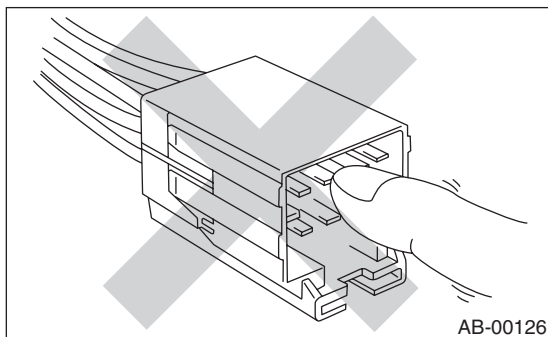


- Either of the airbag modules for driver's, passenger's, side or curtain, or the pretensioner must not be disassembled.

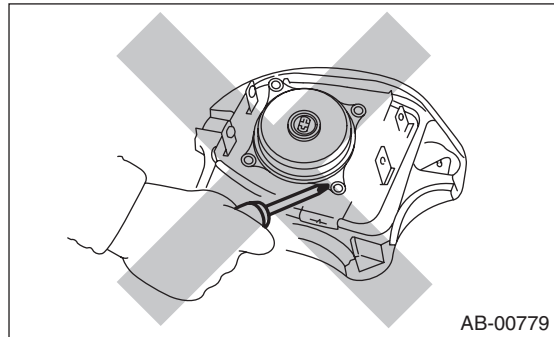

- The airbag module cannot be used again if deployed once.
- After removal, keep the airbag module with the pad side facing upward on a dry, clean and flat surface away from heat, light sources, moisture and dust.

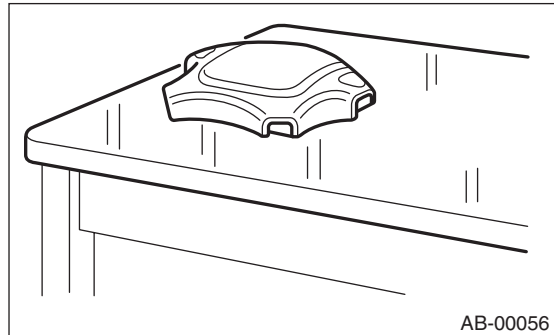


- Do not check continuity of the airbag modules for driver's side, passenger's side and curtain, or the pretensioner.

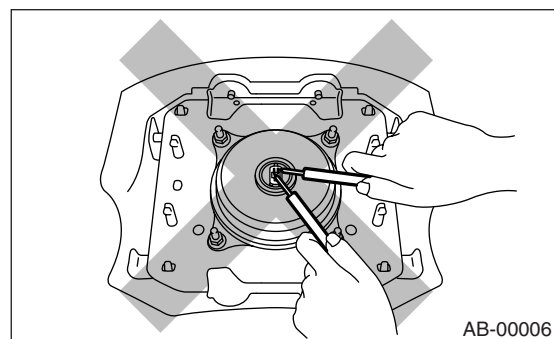

General Description


AIRBAG SYSTEM (DIAGNOSTICS)

- The removed front seat with airbag module must be kept at least 200 mm (8 in) away from walls and other objects.

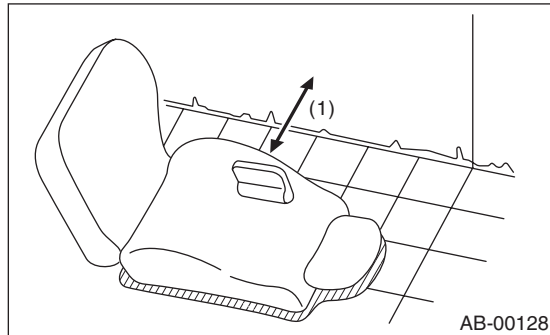

(1) 200 mm (8 in) or more

- When painting or performing sheet metal work on the front part of the vehicle, including the front wheel apron, front fender and front side frame, remove the front sub sensors and wiring harness of airbag system.
- When painting or performing sheet metal work on the side of the vehicle, including the side sill, center pillar and front and rear doors, remove the side airbag sensors and wiring harness of the airbag system.

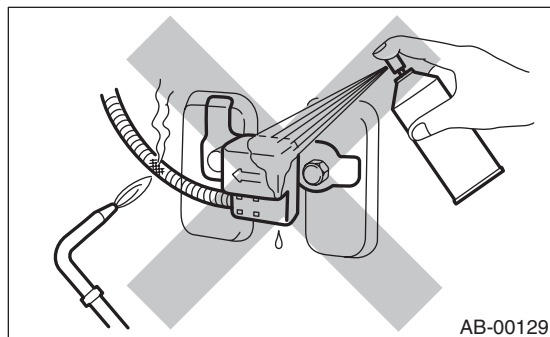








- Do not discard undeployed airbag module. They could easily cause a serious accident if accidentally deployed.

General Description





AIRBAG SYSTEM (DIAGNOSTICS)

- When storing a removed airbag module, do not place any objects on it or stack other airbag modules on top of each other. If the airbag inflates for some reason when it is placed with its pad side facing downward or under any object, a serious accident may result.

   (1)

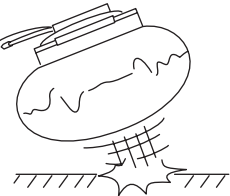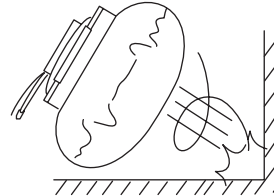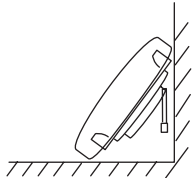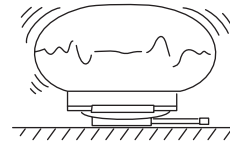

(2)

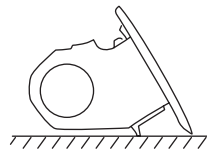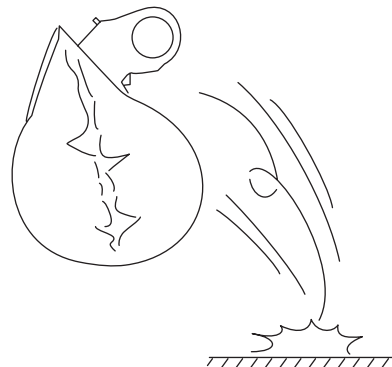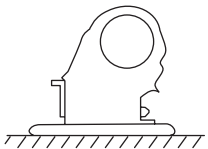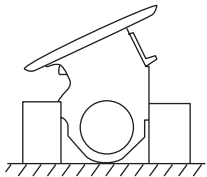

AB-00130

(1) Driver's airbag module

(2) Passenger's airbag module

B: INSPECTION

Measure the battery voltage and check electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

General Description


AIRBAG SYSTEM (DIAGNOSTICS)

C: PREPARATION TOOL

CAUTION:


To measure the voltage and resistance of airbag system component, be sure to use the specified test harness.


1. SPECIAL TOOL

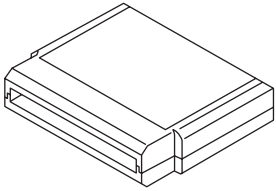ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18482AA010	18482AA010	CARTRIDGE	Troubleshooting for electrical system.
 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical system.

General Description

• TEST HARNESS D

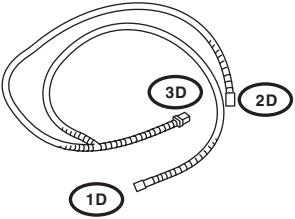
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG060	98299AG060	TEST HARNESS D	Used when measuring voltage and resistance of front seat belt buckle switch.

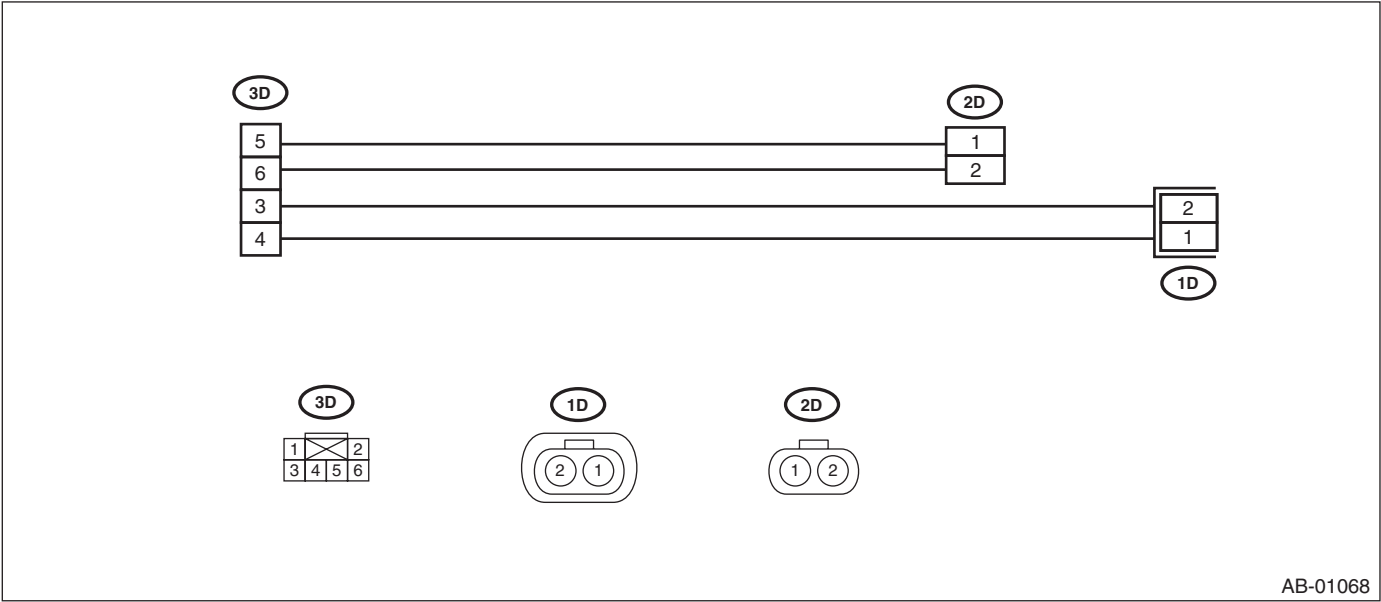


General Description

AIRBAG SYSTEM (DIAGNOSTICS)


• TEST HARNESS F

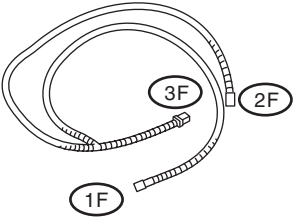
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FC010	98299FC010	TEST HARNESS F	Used when measuring voltage and resistance of airbag module harnesses.

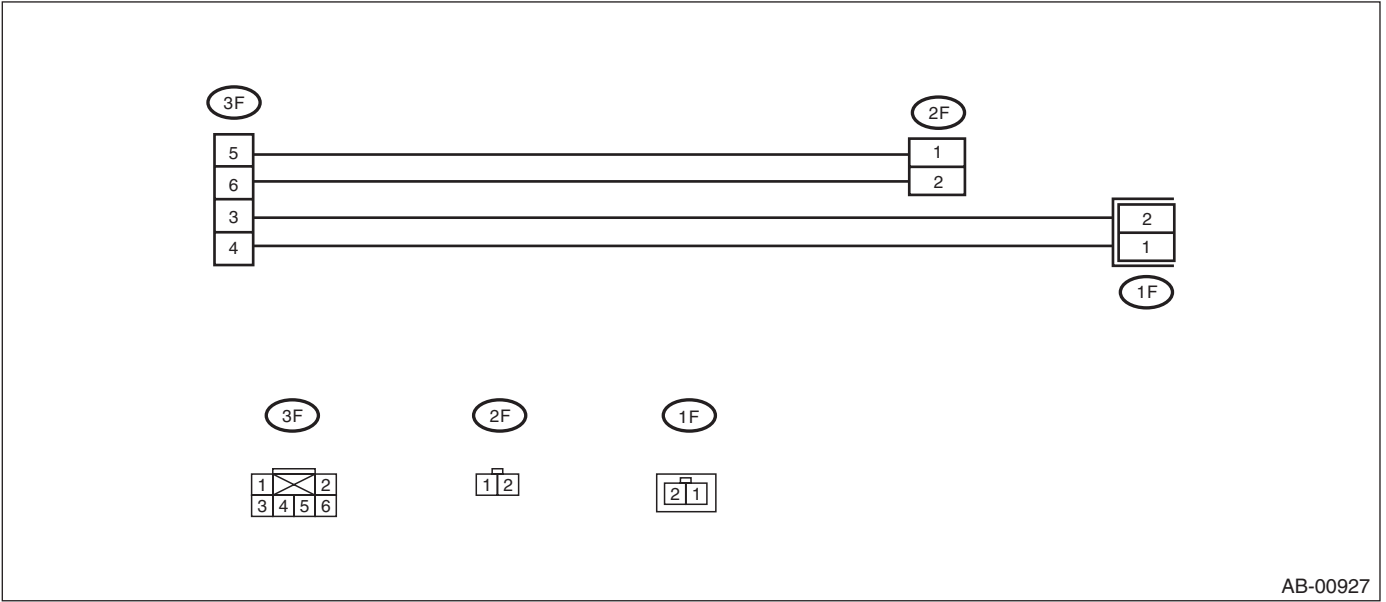

General Description

• TEST HARNESS H

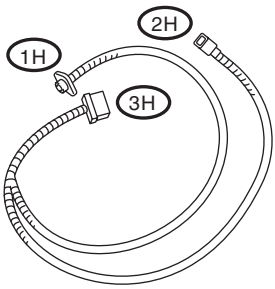
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FA030	98299FA030	TEST HARNESS H	Used when measuring voltage and resistance of front sub sensor.

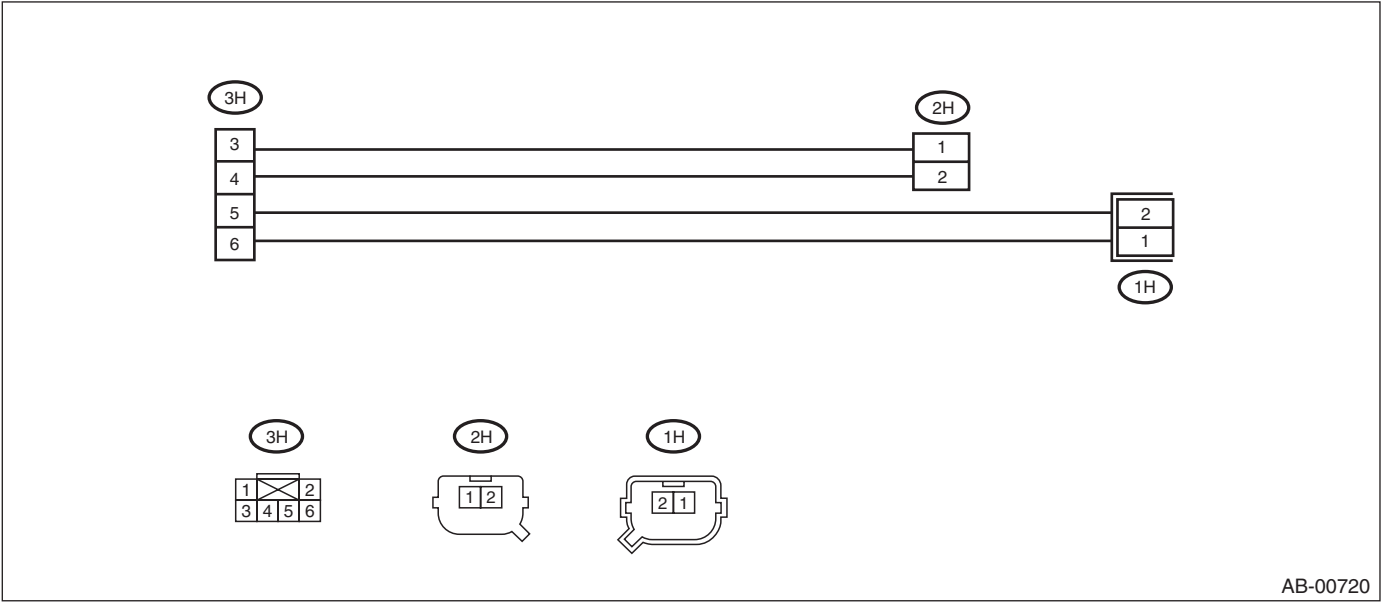


General Description

AIRBAG SYSTEM (DIAGNOSTICS)


- TEST HARNESS N

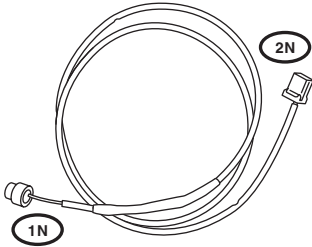
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299SA000	98299SA000	TEST HARNESS N	Used when measuring voltage and resistance of driver's airbag module and seat belt pretensioner.

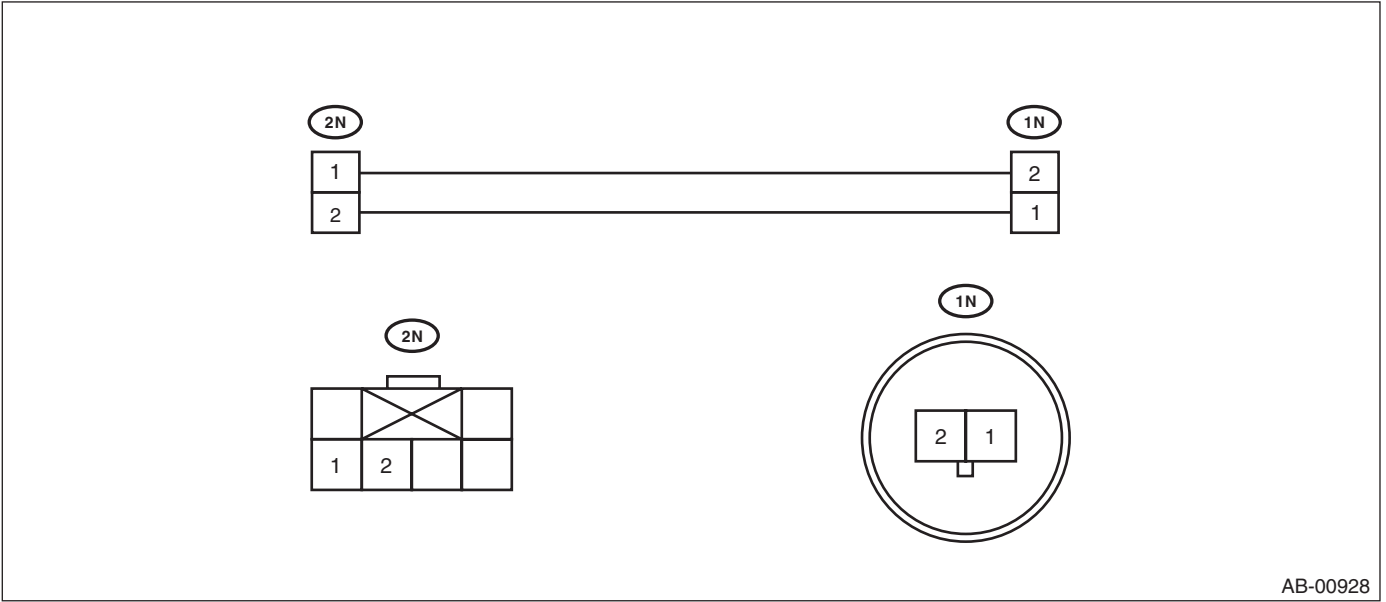

General Description

• TEST HARNESS P

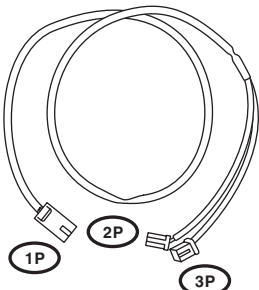
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299SA020	98299SA020	TEST HARNESS P	Used when measuring voltage and resistance of driver's airbag module harness and passenger's airbag module harness.

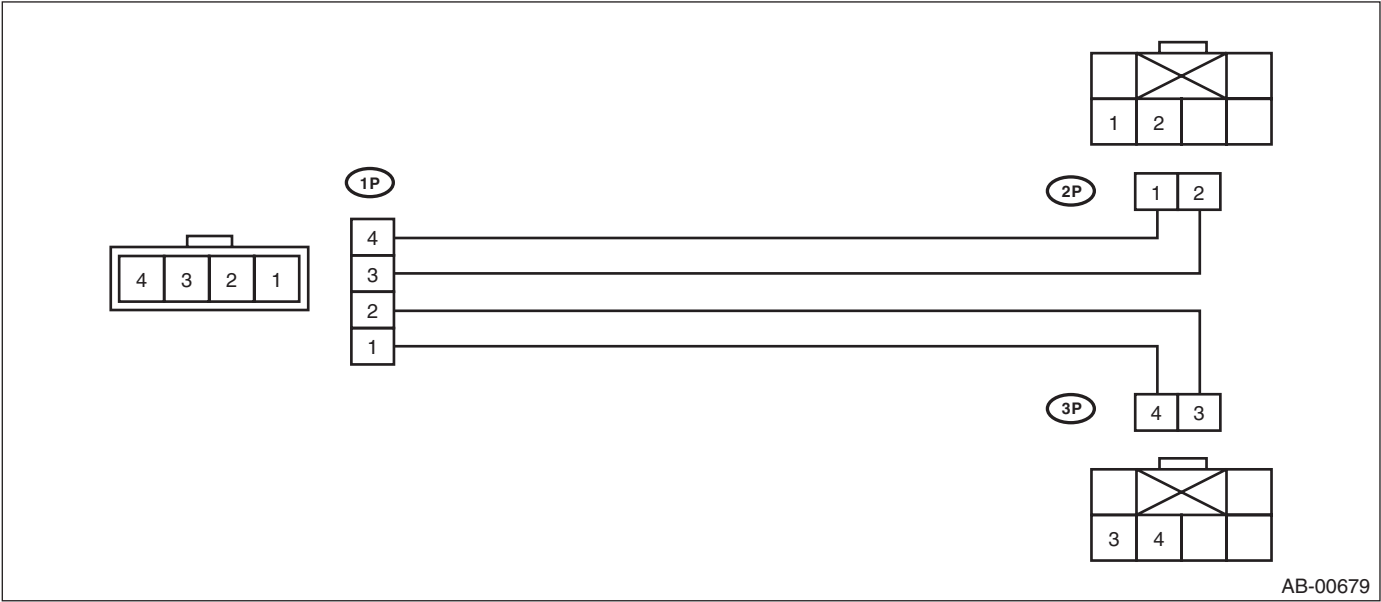


General Description


AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS Q

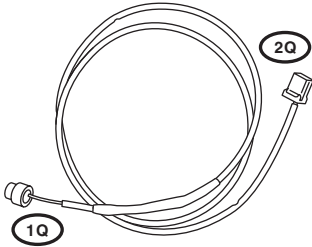ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299SA040	98299SA040	TEST HARNESS Q	Used when measuring voltage and resistance of driver's airbag module.

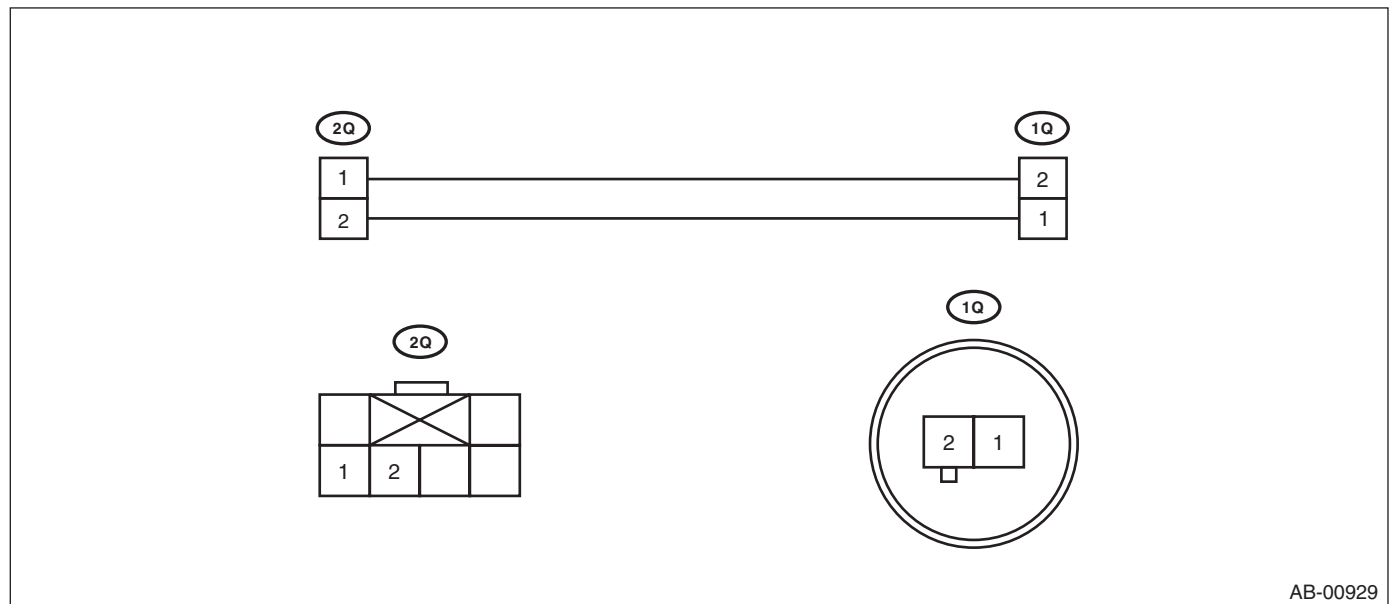


• TEST HARNESS U

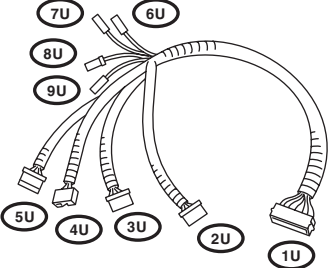ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG000	98299AG000	TEST HARNESS U	Used when measuring voltage and resistance of airbag control module.

General Description

AIRBAG SYSTEM (DIAGNOSTICS)

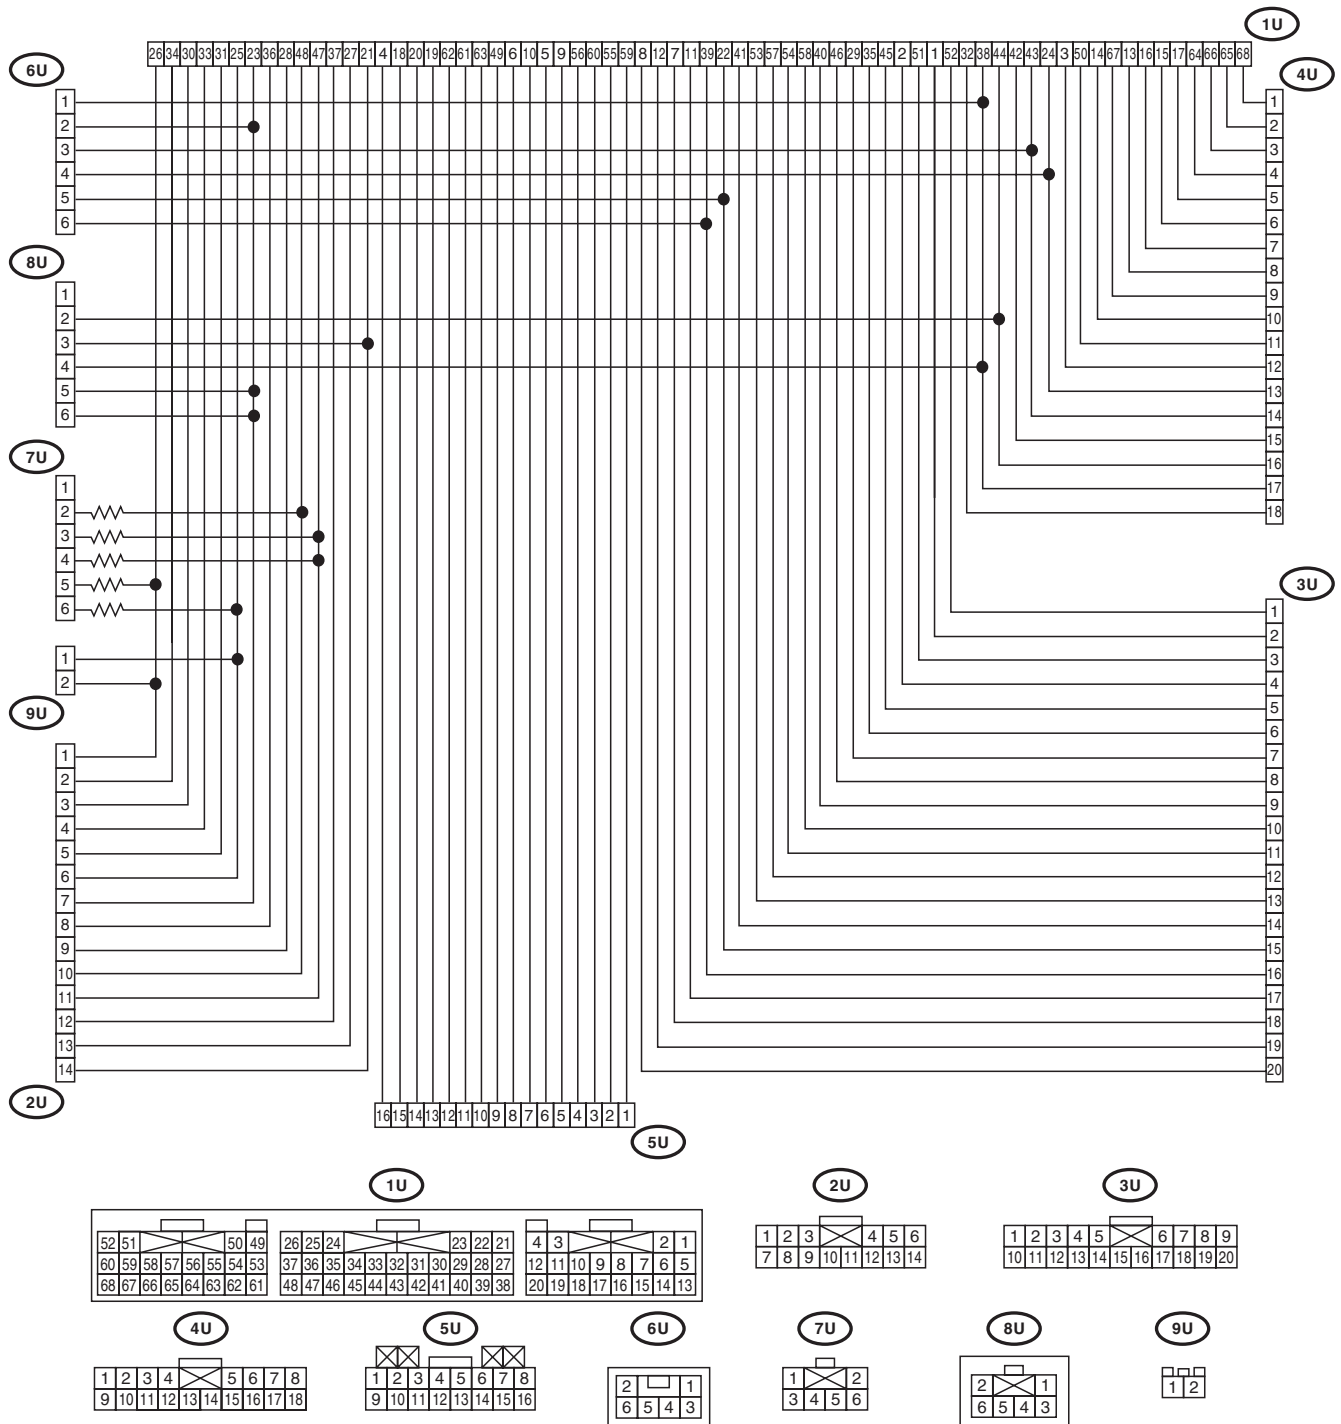



AB-00930

General Description

AIRBAG SYSTEM (DIAGNOSTICS)


• TEST HARNESS V

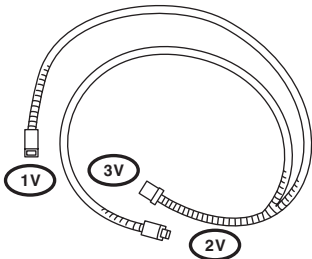
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG010	98299AG010	TEST HARNESS V	Used when measuring voltage and resistance of side airbag sensor and curtain airbag sensor.

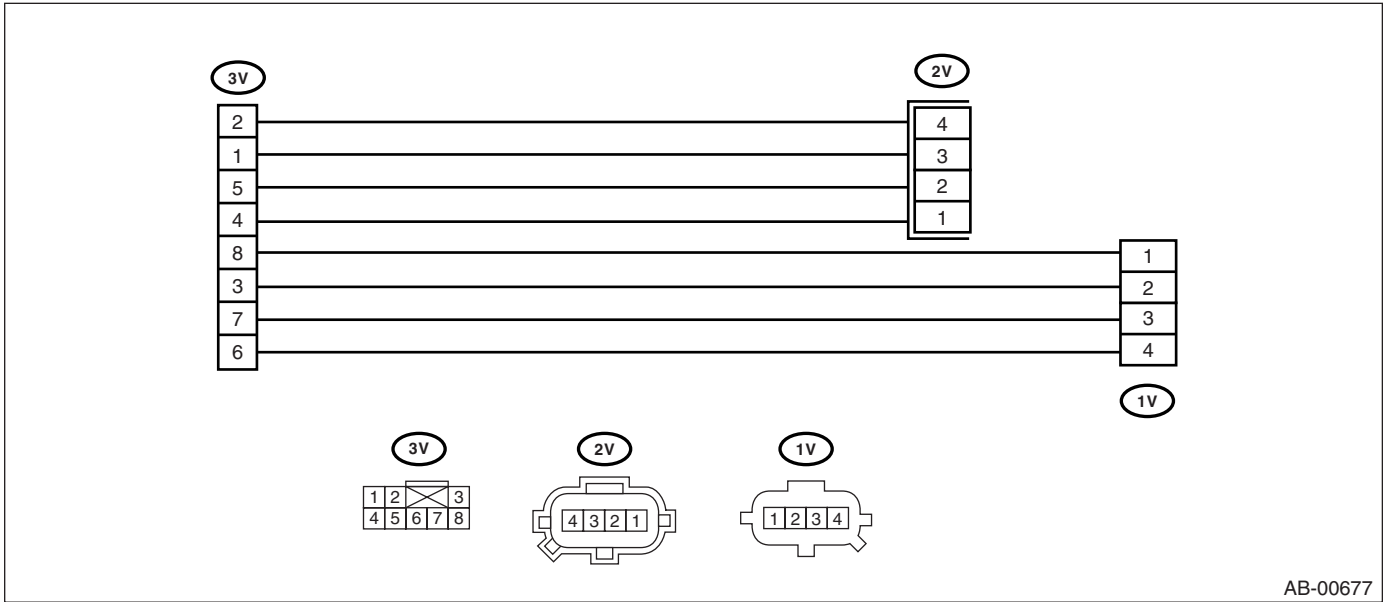

General Description

• TEST HARNESS Y

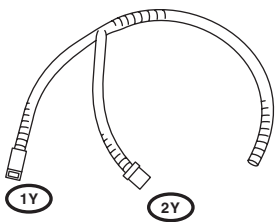
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG040	28299AG040	TEST HARNESS Y	Used for diagnosing seat belt buckle switch.

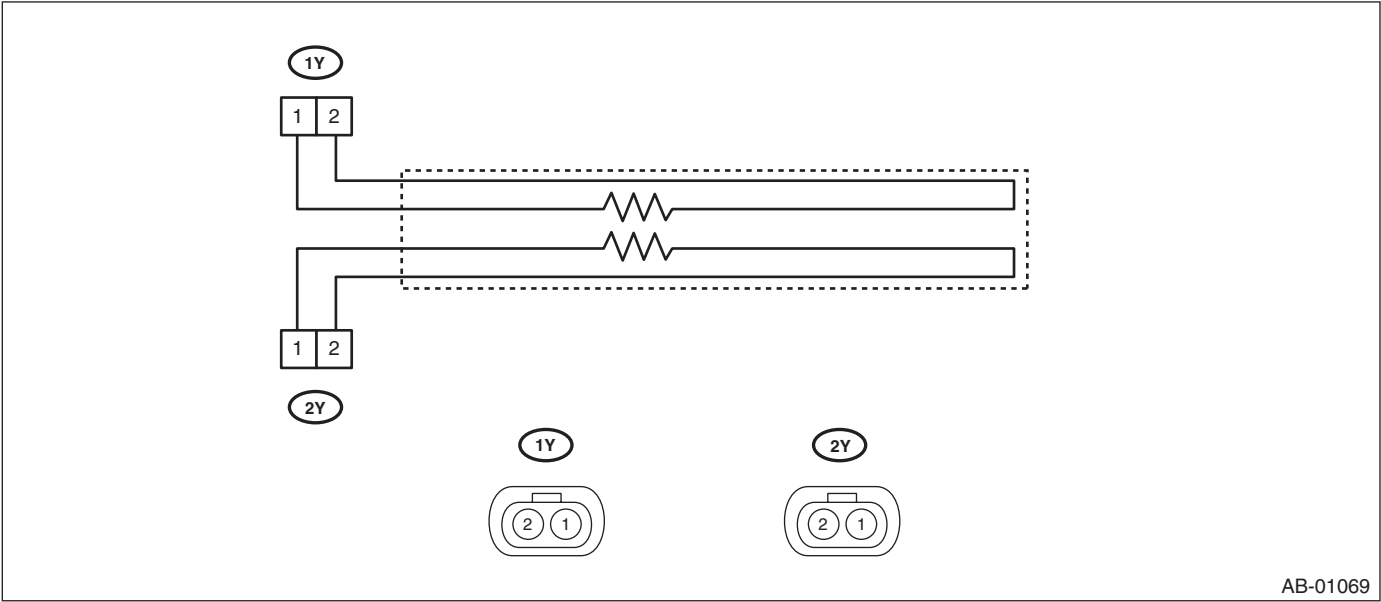


General Description

AIRBAG SYSTEM (DIAGNOSTICS)

- TEST HARNESS AB

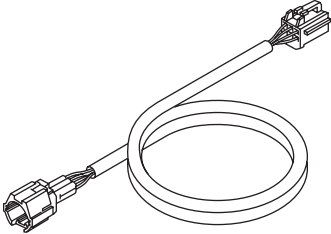
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA000	98299XA000	TEST HARNESS AB	Used when measuring voltage and resistance of occupant detection system.

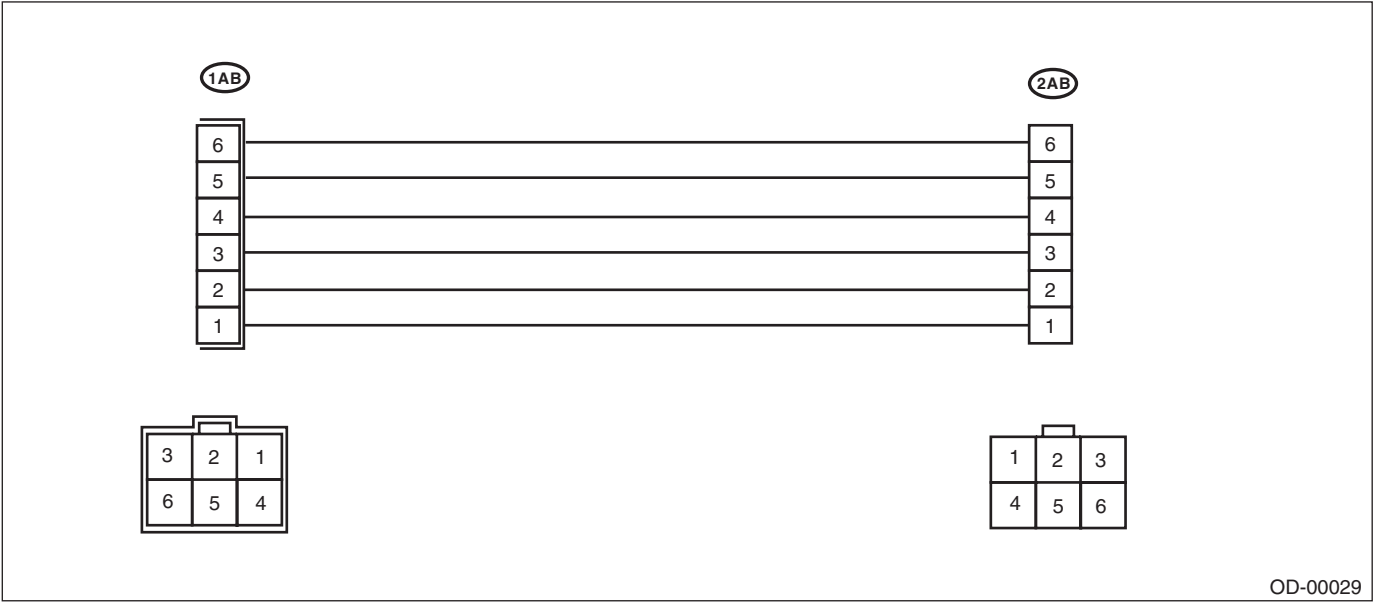


General Description

AIRBAG SYSTEM (DIAGNOSTICS)

- TEST HARNESS AC

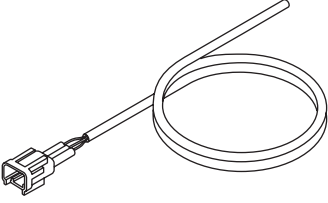ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA010	98299XA010	TEST HARNESS AC	Used for diagnosing a failure of the seat belt tension sensor.

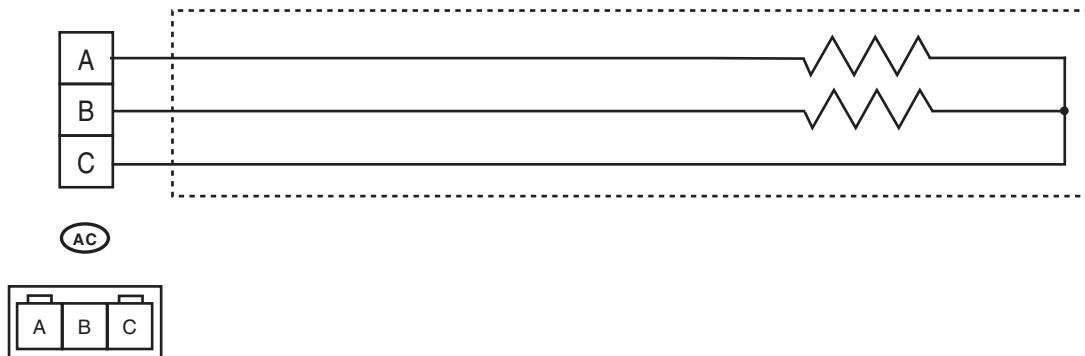



OD-00027

General Description

AIRBAG SYSTEM (DIAGNOSTICS)

- TEST HARNESS AD

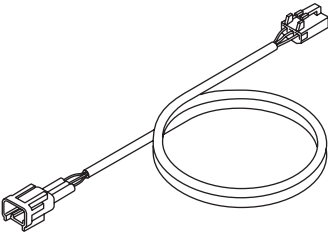
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA020	98299XA020	TEST HARNESS AD	Used when measuring voltage and resistance of seat belt tension sensor.

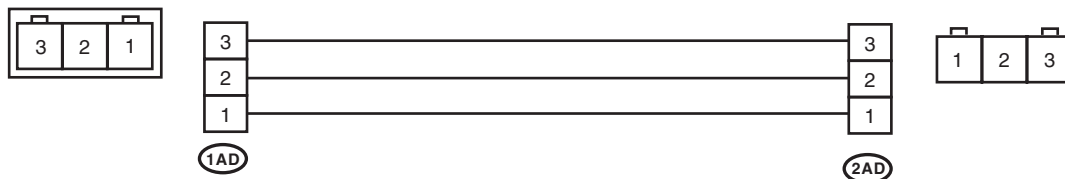


OD-00028

General Description

• TEST HARNESS AE

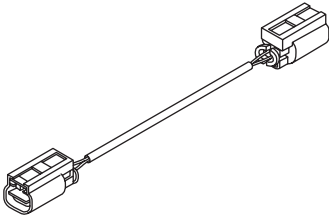
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA030	98299XA030	TEST HARNESS AE	• Used for diagnosing a failure of the seat belt tension sensor. • Used together with the test harness Y.

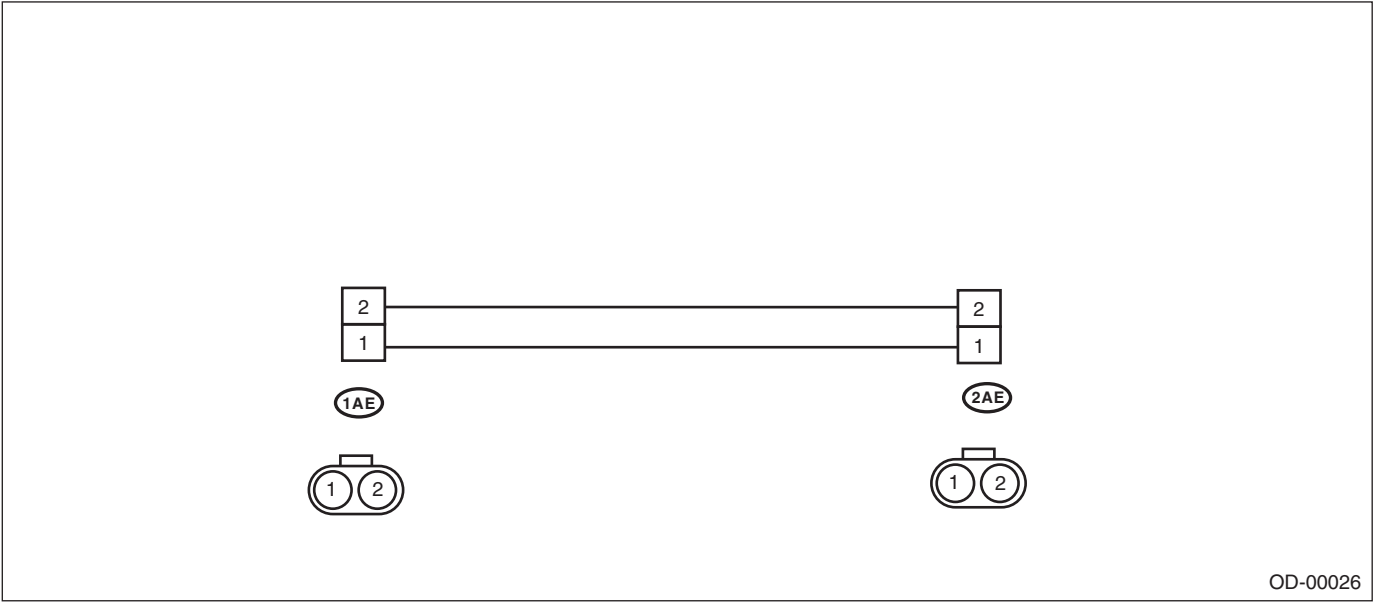


General Description

AIRBAG SYSTEM (DIAGNOSTICS)

• AIRBAG RESISTOR

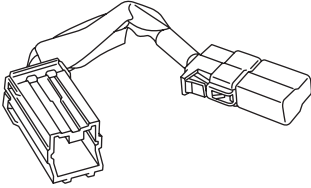ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299PA040	98299PA040	AIRBAG RESISTOR	Used in replacement of airbag module for which resistance value is same as airbag module.

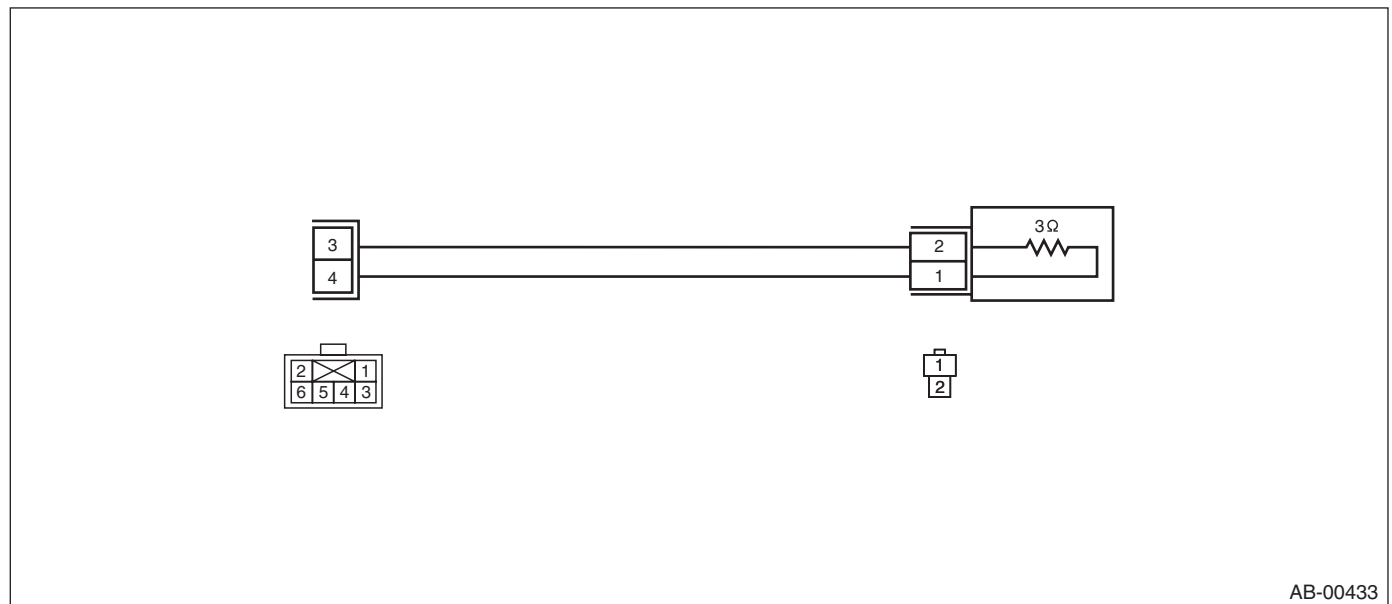

2. GENERAL TOOL


TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.
Oscilloscope	Used for measuring the sensor.

Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

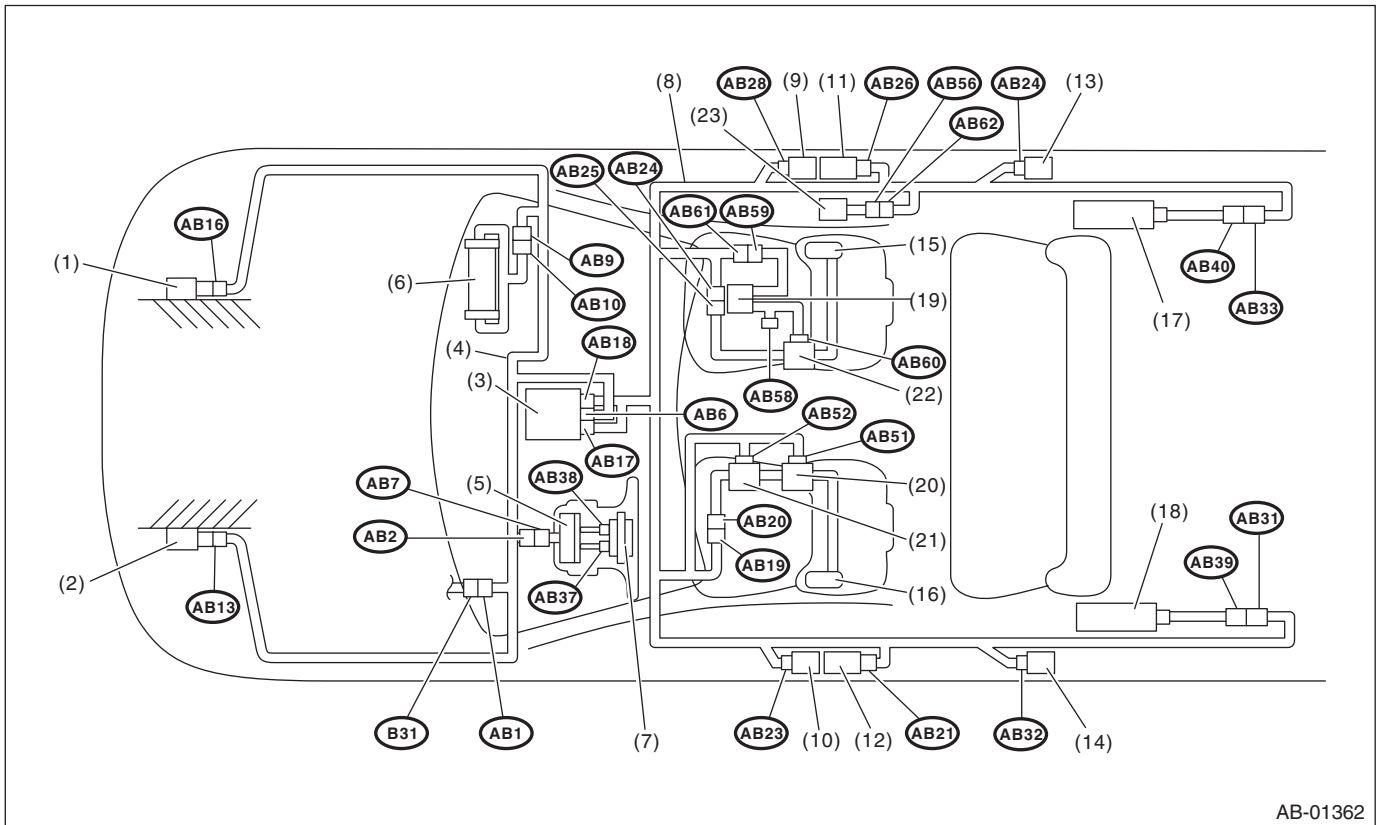

AB-01362

- | | | |
|--|----------------------------------|--|
| (1) Front sub sensor (RH) | (9) Side airbag sensor (RH) | (17) Curtain airbag inflator (RH) |
| (2) Front sub sensor (LH) | (10) Side airbag sensor (LH) | (18) Curtain airbag inflator (LH) |
| (3) Airbag control module with built-in safing and electric sensor | (11) Seat belt pretensioner (RH) | (19) Occupant detection control module |
| (4) Airbag main harness | (12) Seat belt pretensioner (LH) | (20) Buckle switch (LH) |
| (5) Roll connector | (13) Curtain airbag sensor (RH) | (21) Seat position sensor (LH) |
| (6) Passenger's airbag inflator | (14) Curtain airbag sensor (LH) | (22) Buckle switch (RH) |
| (7) Driver's airbag inflator | (15) Side airbag inflator (RH) | (23) Belt tension sensor |
| (8) Airbag rear harness | (16) Side airbag inflator (LH) | |

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB10)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)
Pin	12	4	28	4	4	4	2	2	20	20	2	2
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Female	Female	Female	Male	Female	Male	Female	Female	Female	Female	Female	Male

Connector No.	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)
Pin	2	4	2	2	2	4	2	4	2	4	2	2
Color	Black	Yellow	Yellow	Yellow	Black	Yellow	Yellow	Yellow	Yellow	Yellow	Orange	Black
Male/Female	Female	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female

Connector No.	(AB39)	(AB40)	(AB51)	(AB52)	(AB56)	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)		
Pin	2	2	2	2	3	3	6	2	6	3		
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Gray	Gray	Yellow	Gray	Brown		
Male/Female	Male	Male	Female	Female	Male	Female	Male	Male	Female	Female		

AB(diag)-23

Airbag Connector

AIRBAG SYSTEM (DIAGNOSTICS)


5. Airbag Connector

A: PROCEDURE

1. BUCKLE SWITCH

1) How to disconnect:

- (1) Move the slide lock (A) in the direction of arrow.
- (2) With the slide lock (A) moved, disconnect the connector.

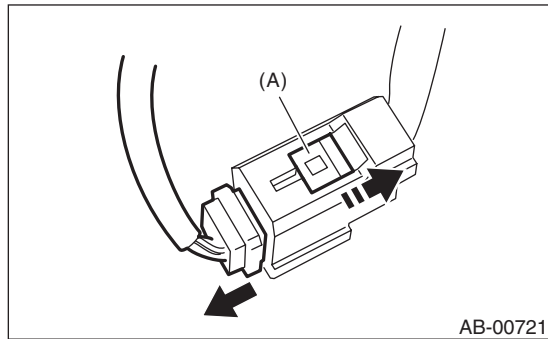


CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect:

Holding the connector (A), and push it in carefully until a clicking sound is heard.

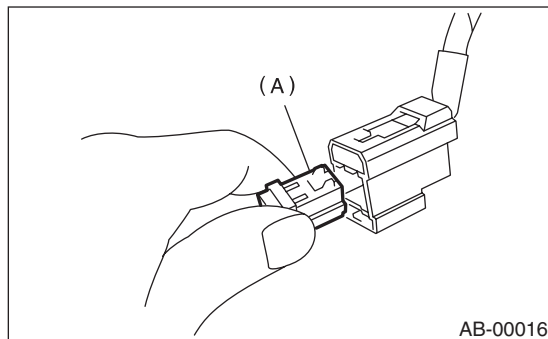


CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.


2. DRIVER'S AIRBAG MODULE AND PRE-TENSIONER

1) How to disconnect:

- (1) Using a flat tip screwdriver, pry the push lock upward to unlock.

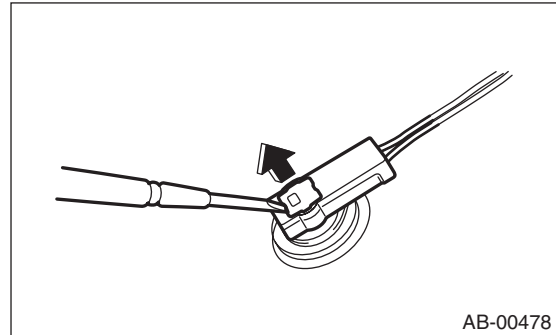

- (2) Pull the connector to disconnect from driver's airbag module assembly or retractor assembly.

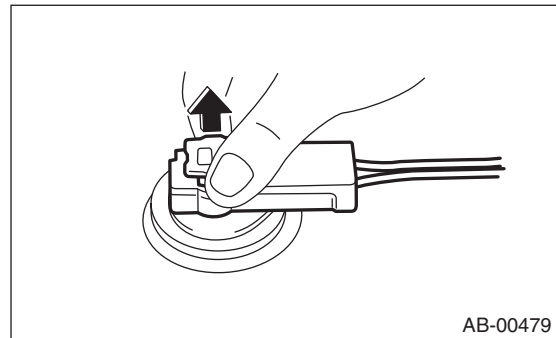


2) How to connect:

Connect the connector in the reverse order of disconnecting. At this time, be sure to insert the push lock until a clicking sound is heard.

CAUTION:

- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.
- Be sure to push the push lock in securely.

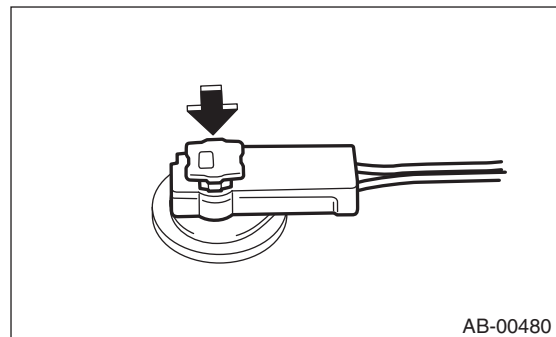


NOTE:

The connector cannot be connected when the push lock is in lock position. To connect the connector, set the push lock to unlock position.


3. DRIVER'S AIRBAG (BETWEEN AIRBAG MAIN HARNESS AND ROLL CONNECTOR) AND SIDE AIRBAG

1) How to disconnect:

- (1) Push the slide lock (A) into the direction of arrow.

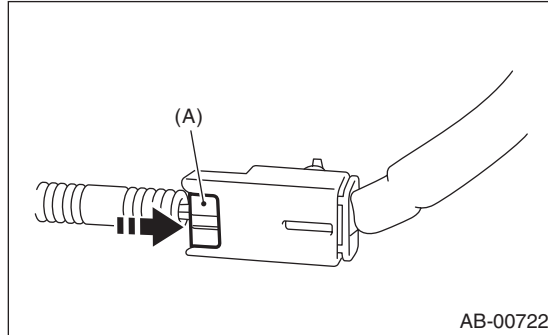

- (2) With the slide lock pushed, disconnect the connector.

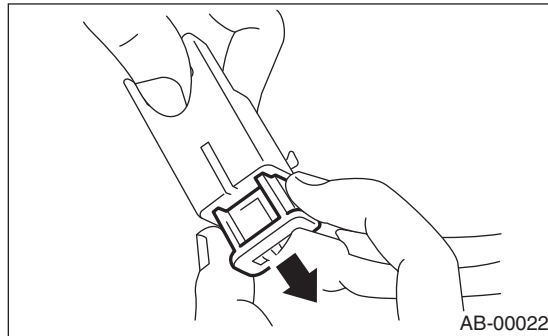

CAUTION:


When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

CAUTION:


Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

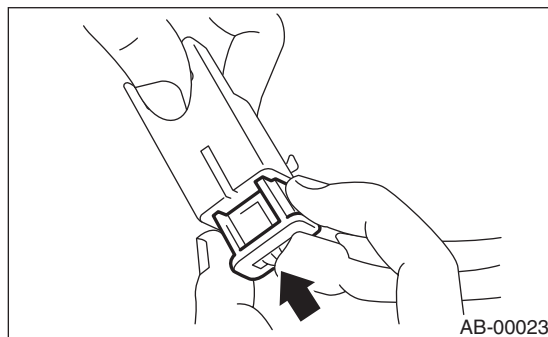

4. SIDE AIRBAG AND CURTAIN AIRBAG

1) How to disconnect:


- (1) Push the lock arm (A).
- (2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of arrow.

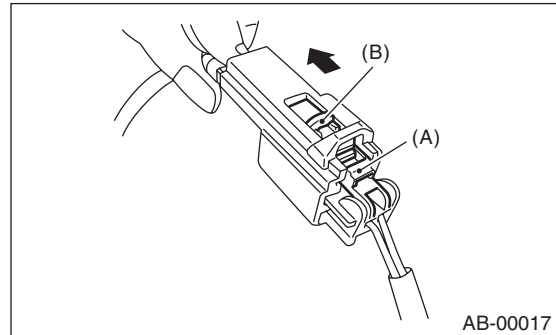

- (3) With the slide lock moved, release the lock arm (return to original position) and disconnect the connector.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

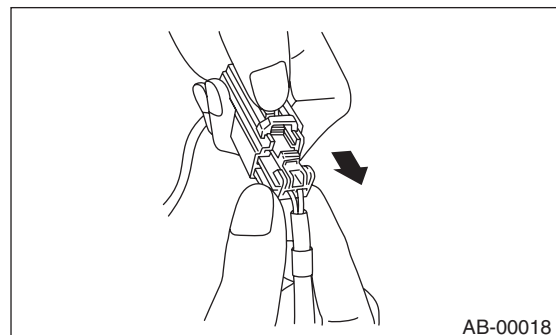

Airbag Connector

AIRBAG SYSTEM (DIAGNOSTICS)


5. FRONT SUB SENSOR, SIDE AIRBAG SENSOR, CURTAIN AIRBAG SENSOR AND SEAT POSITION SENSOR LH

1) How to disconnect:

Holding outer part (A), pull it in the direction of arrow.

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

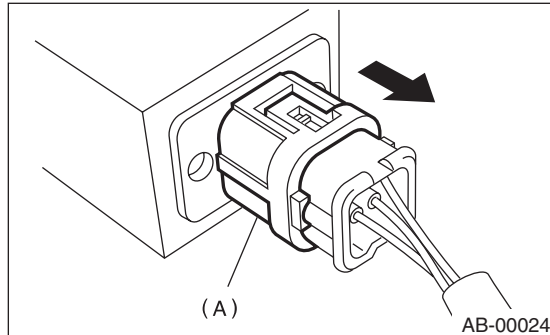


2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.


CAUTION:

- Outer side (A) moves back, and so do not put your hand on the outer part.
- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

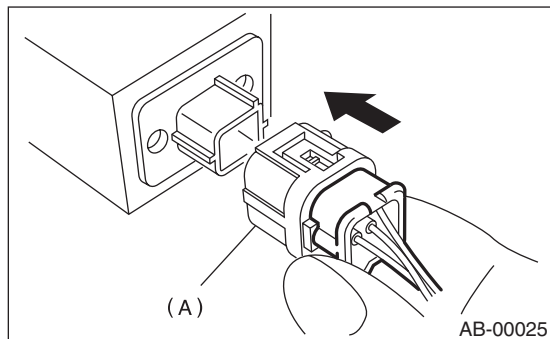

6. Airbag Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

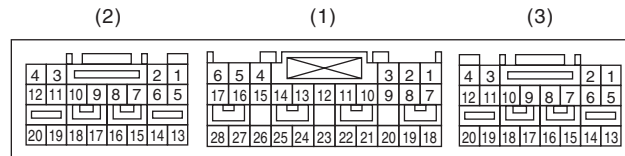

AB-00937

- Terminal numbers in airbag control module connector are shown in the figure.
- Airbag warning light illuminates when the connector is removed from airbag control module.

Item		Control module terminal No.
Data link connector		(1)-12
Combination meter		(1)-3
Battery power supply	Common use fuse	(1)-6
	Dedicated fuse	(1)-5
Passenger's airbag module level one	+	(1)-10
	-	(1)-11
Passenger's airbag module level two	+	(1)-8
	-	(1)-7
Driver's airbag module level one	+	(1)-14
	-	(1)-13
Driver's airbag module level two	+	(1)-16
	-	(1)-17
Front sub sensor LH	Power supply and communication	(1)-15
	GND	(1)-26
Front sub sensor RH	Power supply and communication	(1)-9
	GND	(1)-20
Ground line (GND)		(1)-27
		(1)-28
Passenger's airbag OFF indicator		(1)-1
Passenger's airbag ON indicator		(1)-18
Passenger's seat belt warning light (integrated module)		(1)-24
Seat belt buckle switch LH	+	(2)-19
	-	(2)-2
Seat position sensor LH	+	(2)-4
	-	(2)-3
Seat belt pretensioner LH	+	(2)-6
	-	(2)-5

Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

Item		Control module terminal No.
Side airbag sensor LH	Power supply and communication	(2)-16
	GND	(2)-18
	+	(2)-17
	-	(2)-20
Side airbag module LH	+	(2)-10
	-	(2)-9
Curtain airbag sensor LH	Power supply and communication	(2)-14
	GND	(2)-13
	+	(2)-15
	-	(2)-1
Curtain airbag module LH	+	(2)-11
	-	(2)-12
Seat belt pretensioner RH	+	(3)-11
	-	(3)-12
Side airbag sensor RH	Power supply and communication	(3)-17
	GND	(3)-15
	+	(3)-16
	-	(3)-13
Side airbag module RH	+	(3)-7
	-	(3)-8
Curtain airbag sensor RH	Power supply and communication	(3)-19
	GND	(3)-20
	+	(3)-18
	-	(3)-4
Curtain airbag module RH	+	(3)-6
	-	(3)-5
Occupant detection control module	+	(3)-1
	-	(3)-2

B: WIRING DIAGRAM

Refer to the WI section wiring diagram. <Ref. to WI-109, WIRING DIAGRAM, Airbag System.>

7. Subaru Select Monitor

A: OPERATION

1. READ DIAGNOSTIC TROUBLE CODE (DTC)

When malfunction of airbag system occurs, the DTC stored in airbag control module will be read out.


1) Prepare the Subaru Select Monitor kit. <Ref. to AB(diag)-8, SPECIAL TOOL, PREPARATION TOOL, General Description.>



ABS00111

2) Connect the diagnosis cable to Subaru Select Monitor.


3) Insert the cartridge to Subaru Select Monitor. <Ref. to AB(diag)-8, SPECIAL TOOL, PREPARATION TOOL, General Description.>

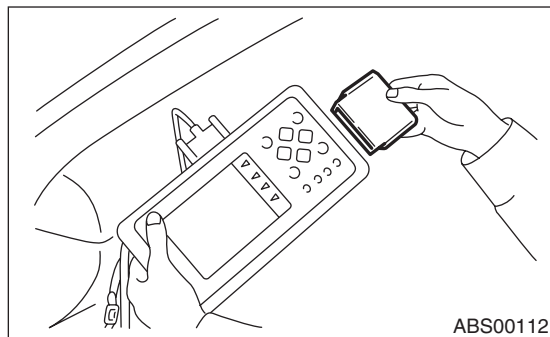

ABS00112

4) Connect the Subaru Select Monitor to the data link connector.

(1) Data link connector is located in the lower portion of instrument panel (on the driver's side).

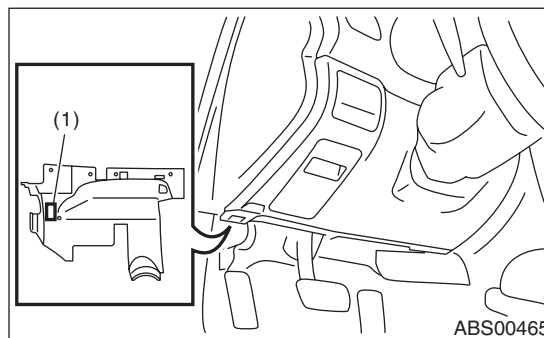

ABS00465


(1) Data link connector

(2) Connect the diagnosis cable to the data link connector.

CAUTION:

Do not connect the scan tools except for Subaru Select Monitor.

5) Turn the ignition switch to ON (engine OFF) and turn the Subaru Select Monitor switch to ON.

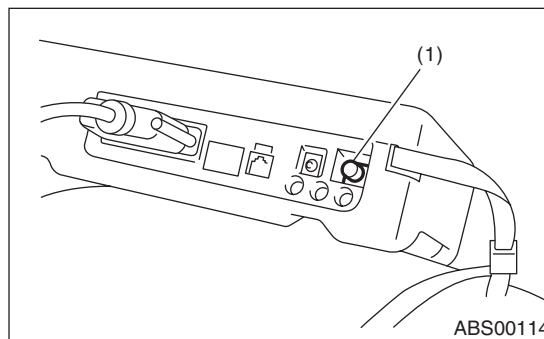

ABS00114

(1) Power switch

6) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.

7) On the «System Selection Menu» display screen, select the {Airbag System} and press the [YES] key.

8) {Press the [YES] key after the {**MY AIRBAG SYSTEM} is displayed.

9) On the «Airbag System» screen, select the {DTC Display}, and then press the [YES] key.

NOTE:

- For details concerning operation procedures, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".
- For details concerning DTCs, refer to List of Diagnostic Trouble Code (DTC). <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>

Subaru Select Monitor

AIRBAG SYSTEM (DIAGNOSTICS)

2. DISPLAY OF STATUS INFORMATION

Check the operating condition of each sensor in the event of malfunction in the seat belt buckle switch and seat position sensor, or when the seat belt buckle switch and seat position sensor has been replaced.

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Airbag System} and press the [YES] key.
- 3) On the «Airbag System» display screen, select the {Status Data} and press the [YES] key.

The following table is for support data.

Item	Display
Seat position sensor LH	Front position ^{*1} /Rear position ^{*2} /Other ^{*3} /Initial setting ^{*3} /— ^{*5}
Seat position sensor RH	— ^{*5}
Seat belt buckle switch LH	Belted ^{*6} /Unbelted ^{*7} /Other ^{*8} /Initial setting ^{*4} /— ^{*9}
Seat belt buckle switch RH	Belted ^{*6} /Unbelted ^{*7} /Other ^{*8} /Initial setting ^{*4} /— ^{*9}
Passenger's airbag control status	ON ^{*10} /OFF ^{*11} /Initial setting ^{*4}

*1: The seat position is forward.

*2: The seat position is rearward.

*3: Displayed when data other than before and behind the seat, such as the breakdown etc, is input.

*4: Displayed when it is initial.

*5: Seat position sensor not supported

*6: Seat belt fastened

*7: Seat belt not fastened

*8: Displayed when data other than belt fastened or not fastened, such as breakdowns is input.

*9: Seat belt buckle switch not supported

*10: Passenger's airbag operating state

*11: Passenger's airbag non-operating state

NOTE:

For details concerning operation procedures, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

3. CLEAR MEMORY MODE

Clear the DTC stored in the airbag control module after repairing the airbag system. (After the breakdown is recovered, the breakdown code for completed recoveries are read out when the next breakdown occurs if the memory clear work is not performed.)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Airbag System} and press the [YES] key.
- 3) On the {Airbag System} menu screen, select the {Clear Memory} and press the [YES] key.
- 4) When the “Clear Memory?” is shown on the screen, press the [YES] key.
- 5) When “Done” is displayed, turn the Subaru Select Monitor to OFF.

NOTE:

For details concerning operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

B: INSPECTION

1. COMMUNICATION FOR INITIALIZING IMPOSSIBLE


DETECTING CONDITION:

Defective harness connector

TROUBLE SYMPTOM:

Communication is impossible between the airbag control module and the Subaru Select Monitor.

WIRING DIAGRAM:

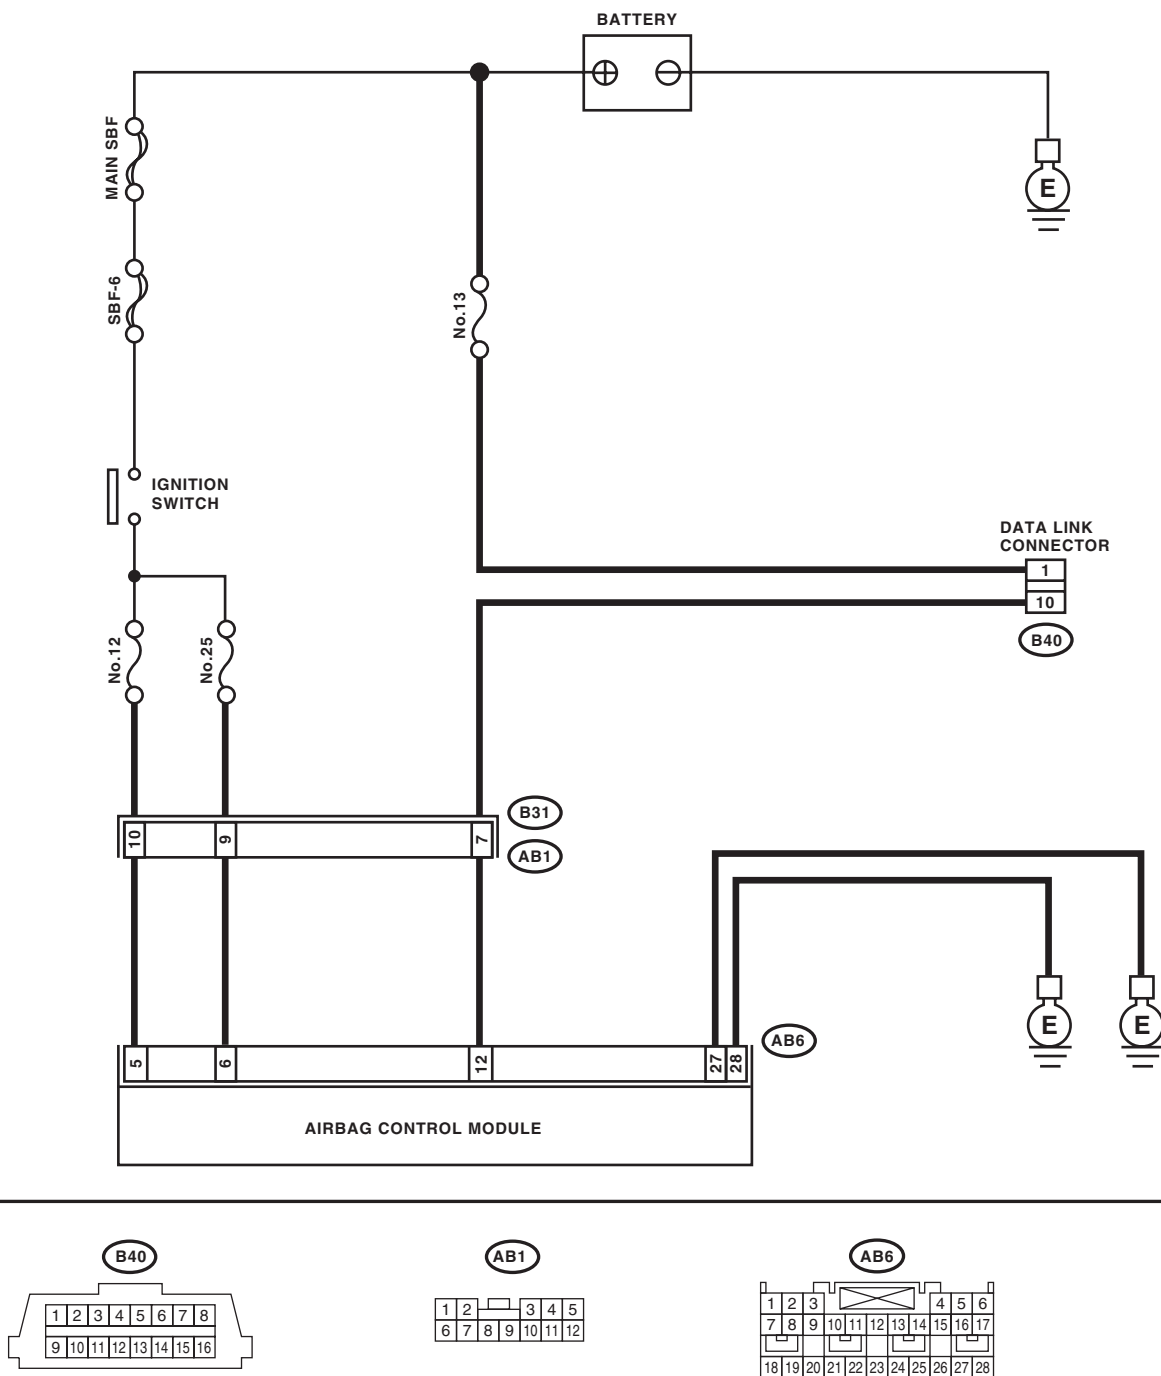

Subaru Select Monitor

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK IGNITION SWITCH.	Is the ignition switch ON?	Go to step 2.	Turn the ignition switch to ON, and select the airbag mode using the Subaru Select Monitor.
2 CHECK BATTERY. 1) Turn the ignition switch to OFF. 2) Measure the battery voltage.	Is the voltage more than 11 V?	Go to step 3.	Charge or replace the battery.
3 CHECK BATTERY TERMINAL.	Is there poor contact at battery terminal?	Repair or tighten the battery terminal.	Go to step 4.
4 CHECK SUBARU SELECT MONITOR COMMUNICATION. 1) Turn the ignition switch to ON. 2) Using the Subaru Select Monitor, check whether communication to other system can be executed normally.	Are the system name and model year displayed on Subaru Select Monitor?	Go to step 9.	Go to step 5.
5 CHECK AIRBAG CONTROL MODULE CONNECTOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Confirm that the connector of airbag control module (AB6) is securely connected.	Is the connector of the airbag control module securely connected?	Go to step 6.	Connect the connector of the airbag control module.
6 CHECK SUBARU SELECT MONITOR COMMUNICATION. 1) Turn the ignition switch to OFF. 2) Disconnect the airbag control module connector. 3) Turn the ignition switch to ON. 4) Check whether communication to other systems can be executed normally.	Are the system name and model year displayed on Subaru Select Monitor?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.
7 CHECK HARNESS CONNECTOR BETWEEN EACH CONTROL MODULE AND DATA LINK CONNECTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the airbag control module, ABSCM&H/U, ECM and TCM. 3) Measure the resistance between data link connector and chassis ground. Connector & terminal (B40) No. 10 — Chassis ground:	Is the resistance more than 1 MΩ?	Go to step 8.	Repair the harness and connector between each control module and data link connector. (Replace the harness without repairing the airbag harness.)
8 CHECK OUTPUT SIGNAL TO THE AIRBAG CONTROL MODULE. 1) Turn the ignition switch to ON in the condition of step 7. 2) Measure the voltage between data link connector and chassis ground. Connector & terminal (B40) No. 10 (+) — Chassis ground (–):	Is the voltage less than 1 V?	Go to step 9.	Repair the harness and connector between each control module and data link connector. (Replace the harness without repairing the airbag harness.)

Step	Check	Yes	No
9 CHECK THE HARNESS BETWEEN THE AIRBAG CONTROL MODULE AND DATA LINK CONNECTOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB6) from airbag control module. 3) Connect the connector (1U) in the test harness U to connector (AB6). 4) Measure the resistance between connector (4U) in the test harness U and the data link connector. Connector & terminal (4U) No. 18 — (B40) No. 10:	Is the resistance less than 10 Ω ?	Go to step 10.	Repair the harness between the airbag control module and the data link connector. Or replace the airbag main harness along with the bulkhead harness.
10 CHECK POWER SUPPLY CIRCUIT. 1) Turn the ignition switch to ON. 2) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal (2U) No. 1 — Chassis ground: (2U) No. 6 — Chassis ground:	Is the voltage more than 10 V?	Go to step 11.	Repair the harness between the airbag control module and the battery. Or replace the airbag main harness along with the bulkhead harness.
11 CHECK BETWEEN THE AIRBAG CONTROL MODULE AND CHASSIS GROUND. 1) Turn the ignition switch to OFF. 2) Measure the resistance between connector (2U) in the test harness U and chassis ground. Connector & terminal (2U) No. 10 — Chassis ground: (2U) No. 11 — Chassis ground:	Is the resistance less than 10 Ω ?	Go to step 12.	Repair the harness between the airbag control module and the chassis ground. Or replace the airbag main harness along with the bulkhead harness.
12 CHECK POOR CONTACT IN CONNECTOR.	Is there poor contact in the control module power supply, ground circuit and data link connector?	Repair the connector. (For airbag system connectors, do not repair but replace the entire harness.)	Replace the only airbag control module. <Ref. to AB-23, REMOVAL, Airbag Control Module.>

2. WITHOUT DTC

DETECTING CONDITION:

- Defective combination meter
- Open circuit in harness

TROUBLE SYMPTOM:

- Airbag warning light remains on.
- “NO TROUBLE CODE” will be displayed on the Subaru Select Monitor.

For detailed operation procedure, refer to “Airbag Warning Light Failure”. <Ref. to AB(diag)-38, Airbag Warning Light Failure.>

NOTE:

- For detailed operation procedure, refer to “Airbag Warning Light Failure”. <Ref. to AB(diag)-38, Airbag Warning Light Failure.>
- When the airbag warning light is OFF and “NO TROUBLE CODE” is displayed on Subaru Select Monitor, the system is in normal condition.

Read Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details concerning DTC reading procedure, refer to "Subaru Select Monitor". <Ref. to AB(diag)-29, Subaru Select Monitor.>

9. Inspection Mode

A: PROCEDURE

Recreate the circumstance by referring to the conditions described in the checklist.

10. Clear Memory Mode


A: OPERATION

- Clear the memory in the following steps after the malfunction is repaired.
- For details concerning DTC clear operation, refer to "Subaru Select Monitor". <Ref. to AB(diag)-29, Subaru Select Monitor.>

11. Airbag Warning Light Illumination Pattern

A: INSPECTION

Turn the ignition switch to ON, and confirm that the airbag warning light remains on for approx. 6 seconds then turns off afterwards.

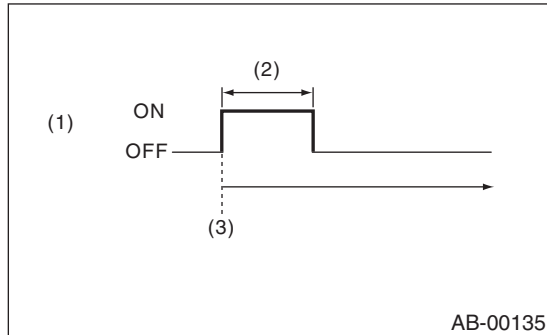


- (1) Airbag warning light
- (2) Approx. 6 sec.
- (3) Ignition switch ON

DETECTING CONDITION:

- CAUTION:**

 - Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.



Airbag Warning Light Failure

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 READ DTC. Read the DTC. <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC displayed?	Perform the diagnosis according to DTC.	Go to step 2.
2 CHECK POOR CONTACT. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Confirm that there is solid connection between the airbag control module and connector (AB6).	Is there poor contact in connector (AB6)?	Replace the body harness along with airbag main harness or airbag control module, if it is not eliminated the poor contact of connectors. <Ref. to AB-23, Airbag Control Module.>	Go to step 3.
3 CHECK AIRBAG MAIN HARNESS. 1) Remove the instrument panel lower cover and disconnect the connectors (AB7) and (AB2). 2) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 3) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 4) Connect the battery ground terminal and turn the ignition switch to ON. 5) Connect the connectors (7U) and (8U) in the test harness U. NOTE: After the fault has been cleared, disconnect the connectors (7U) and (8U).	Does the airbag warning light go off?	Go to step 4.	Go to step 5.
4 CHECK GROUND CIRCUIT. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB6) from airbag control module. 3) Connect the connector (1U) in the test harness U to body harness connector (AB6). 4) Measure the resistance between connector (2U) in the test harness U and chassis ground. Connector & terminal (2U) No. 10 — Chassis ground: (2U) No. 11 — Chassis ground:	Is the resistance less than 10 Ω ?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Repair the chassis ground circuit.
5 CHECK AIRBAG MAIN HARNESS AND BULKHEAD HARNESS. 1) Disconnect the connectors (7U) and (8U). 2) Remove the combination meter. 3) Measure the resistance between connector (i10) and connector (2U) in the test harness U. Connector & terminal (2U) No. 7 — (i10) No. 13:	Is the resistance less than 10 Ω ?	Check the combination meter.	Go to step 6.
6 CHECK POOR CONTACT OF CONNECTORS (AB1) AND (B31). 1) Turn the ignition switch to OFF, disconnect the battery ground terminal, and wait more than 20 seconds. 2) Confirm that firm contact is secured between connectors (AB1) and (B31).	Is there poor contact in connectors (AB1) and (B31)?	Repair the bulkhead harness or replace the airbag main harness along with body harness.	Go to step 7.

Airbag Warning Light Failure

AIRBAG SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
7	CHECK AIRBAG MAIN HARNESS. Check the airbag main harness for abnormalities.	Is anything unusual to airbag main harness?	Replace the airbag main harness along with bulk-head harness.	Repair the bulk-head harness.

Airbag Warning Light Failure

AIRBAG SYSTEM (DIAGNOSTICS)

B: AIRBAG WARNING LIGHT REMAINS OFF


DETECTING CONDITION:

- Fuse No. 5 (in fuse box) is brown out.
- Body harness circuit is open.
- Airbag warning light is faulty.
- Airbag main harness is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

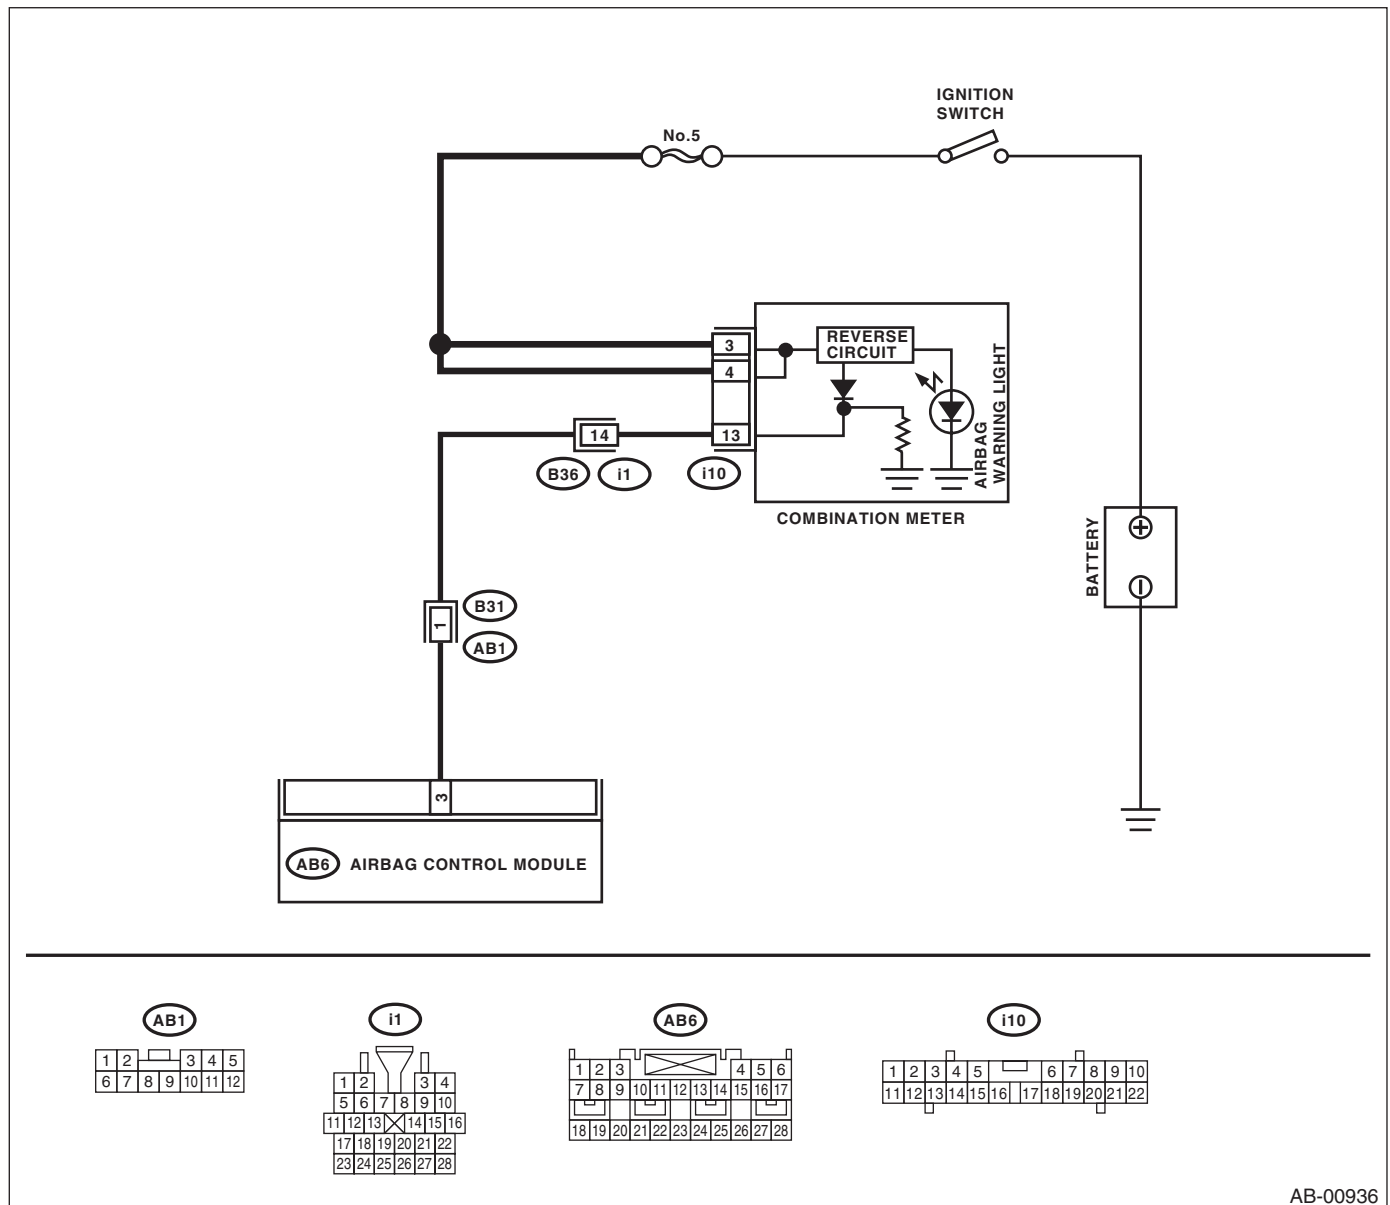

AB-00936

Airbag Warning Light Failure

AIRBAG SYSTEM (DIAGNOSTICS)

	Step	Check	Yes	No
1	CHECK COMBINATION METER. Turn the ignition switch to ON, and confirm that warning light of combination meter is turned on.	Do warning lights except for airbag turn on?	Go to step 2.	Check the combination meter.
2	CHECK DTC. Read the DTC. <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC displayed?	Perform the diagnosis according to DTC.	Go to step 3.
3	CHECK FUSE NO. 5 (IN MAIN FUSE BOX). Remove the fuse No. 5 and perform visual inspection.	Is the fuse No. 5 (in main fuse box) blown out?	Replace the fuse No. 5. If the fuse No. 5 is blown out again, go to step 4.	Go to step 4.
4	CHECK AIRBAG WARNING LIGHT CIRCUIT (IN COMBINATION METER). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB1) from (B31). 3) Connect the battery ground terminal and turn the ignition switch to ON.	Does airbag warning light turn on?	Go to step 5.	Check the combination meter.
5	CHECK AIRBAG MAIN HARNESS. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Connect the connector (AB1) to (B31). 3) Disconnect the connector (AB6) from airbag control module. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does airbag warning light turn on?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Replace the airbag main harness along with bulk-head harness.

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

13.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Display	Content of diagnosis	Reference
11	Driver's Airbag failure	- Airbag main harness circuit is open, shorted or shorted to ground. - Airbag module harness (Driver's side) circuit is open, shorted or shorted to ground. - Roll connector circuit is open, shorted or shorted to ground. - Airbag control module is faulty. - Driver's airbag module is faulty.	<Ref. to AB(diag)-47, DTC 11 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
12	Passenger's Airbag failure	- Airbag main harness circuit is open, shorted or shorted to ground. - Airbag module harness (Passenger's side) circuit is open, shorted or shorted to ground. - Airbag control module is faulty. - Passenger's airbag module is faulty.	<Ref. to AB(diag)-50, DTC 12 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
15	Driver's Airbag failure	- Airbag main harness circuit (Driver's side) is shorted to power supply. - Airbag module harness circuit (Driver's side) is shorted to power supply. - Roll connector is shorted to power supply. - Airbag control module is faulty. - Driver's airbag module is faulty.	<Ref. to AB(diag)-53, DTC 15 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
16	Passenger's Airbag failure	- Airbag main harness circuit (Passenger's side) is shorted to power supply. - Airbag module harness circuit (Passenger's side) is shorted to power supply. - Airbag control module is faulty. - Passenger's airbag module is faulty.	<Ref. to AB(diag)-56, DTC 16 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
21	Airbag ECM failure	Airbag control module is faulty.	<Ref. to AB(diag)-58, DTC 21 AIRBAG ECM FAILURE, Diagnostic Chart with Trouble Code.>
22	Front Airbag Firing output	Front airbag module and seat belt pretensioner (LH/RH) are inflated.	<Ref. to AB(diag)-59, DTC 22 FRONT AIRBAG FIRING OUTPUT, Diagnostic Chart with Trouble Code.>
23	Connector to Airbag ECM failure	Connection of (AB6), (AB17) and (AB18) to airbag control module is improper.	<Ref. to AB(diag)-60, DTC 23 CONNECTOR TO AIRBAG ECM, Diagnostic Chart with Trouble Code.>
24	IG1 open	- Airbag control module is faulty. - Airbag main harness circuit is open. - Fuse No. 25 (in joint box) is blown. - Airbag rear harness circuit is open.	<Ref. to AB(diag)-61, DTC 24 IG1 OPEN, Diagnostic Chart with Trouble Code.>
25	IG2 open	- Airbag control module is faulty. - Airbag main harness circuit is open. - Fuse No. 12 (in joint box) is blown. - Airbag rear harness circuit is open.	<Ref. to AB(diag)-63, DTC 25 IG2 OPEN, Diagnostic Chart with Trouble Code.>
26	Passenger's Airbag indicator failure	- Passenger's airbag indicator is faulty. - Airbag control module is faulty. - Airbag main harness circuit is open, shorted or shorted to ground. - Body harness circuit is open.	<Ref. to AB(diag)-65, DTC 26 PASSENGER'S AIRBAG INDICATOR FAILURE, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
27	ODS Communication error	- Occupant detection control module communication is faulty. - Airbag rear harness circuit is open, shorted, shorted to ground or shorted to power supply. - Occupant detection harness is faulty. - Airbag control module is faulty. - Occupant detection system is faulty.	<Ref. to AB(diag)-67, DTC 27 ODS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
29	ODS Failure	- Occupant detection sensor is faulty. - Occupant detection control module is faulty. - Occupant detection harness is faulty. - Fuse No. 25 (in joint box) is blown.	Refer to "Occupant Detection System" for DTC 29. <Ref. to OD(diag)-28, DTC 29 ODS FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2A	ODS Calibration error	System calibration (Rezeroing) of the occupant detection system was not ended normally.	Refer to "Occupant Detection System" for DTC 2A. <Ref. to OD(diag)-25, DTC 2A ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2B	ODS Erroneous Parts	- Wrong airbag control module was installed. - Wrong occupant detection system was installed. - Occupant detection system is faulty.	Refer to "Occupant Detection System" for DTC 2B. <Ref. to OD(diag)-25, DTC 2B ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2C	Belt Tension Sensor failure	- Passenger's seat belt tension sensor is faulty. - Occupant detection system is faulty. - Airbag rear harness circuit is open, shorted, shorted to ground or shorted to power supply. - Occupant detection harness is faulty.	Refer to "Occupant Detection System" for DTC 2C. <Ref. to OD(diag)-26, DTC 2C BELT TENSION SENSOR FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
31	Front Sub Sensor RH failure	- Front sub sensor harness (RH) circuit is open or shorted. - Front sub sensor (RH) is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-69, DTC 31 FRONT SUB SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
32	Front Sub Sensor LH failure	- Front sub sensor harness (LH) circuit is open or shorted. - Front sub sensor (LH) is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-71, DTC 32 FRONT SUB SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
33	Front Sub Sensor RH failure	Front sub sensor (RH) is faulty.	<Ref. to AB(diag)-73, DTC 33 FRONT SUB SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
34	Front Sub Sensor LH failure	Front sub sensor (RH) is faulty.	<Ref. to AB(diag)-73, DTC 34 FRONT SUB SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
36	Seat Position Sensor LH failure	- Driver's seat position sensor is faulty. - Airbag control module is faulty. - Airbag rear harness circuit is open, shorted or shorted to ground.	<Ref. to AB(diag)-74, DTC 36 SEAT POSITION SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
37	Buckle Switch RH failure	- Passenger's buckle switch circuit is open, shorted or shorted to ground. - Occupant detection system is faulty. - Occupant detection harness is faulty.	Refer to "Occupant Detection System" for DTC 37. <Ref. to OD(diag)-29, DTC 37 BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
38	Buckle Switch LH failure	- Driver's buckle switch circuit is open, shorted or shorted to ground. - Airbag rear harness circuit is open, shorted or shorted to ground. - Airbag control module is faulty.	<Ref. to AB(diag)-76, DTC 38 BUCKLE SWITCH LH FAILURE, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
39	Seatbelt Warning failure	- Airbag control module is faulty. - Body integrated unit is faulty. - Harness circuits between body integrated unit and airbag control module are open, shorted or shorted to ground.	<Ref. to AB(diag)-78, DTC 39 SEAT BELT WARNING FAILURE, Diagnostic Chart with Trouble Code.>
41	Side Airbag RH failure	- Side airbag harness (RH) circuit is faulty. - Side airbag module (RH) is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-80, DTC 41 SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code.>
42	Side Airbag LH failure	- Side airbag harness (LH) circuit is faulty. - Side airbag module (LH) is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-82, DTC 42 SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code.>
45	Side Airbag RH failure	- Side airbag harness (RH) is shorted to power supply. - Airbag control module is faulty.	<Ref. to AB(diag)-84, DTC 45 SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code.>
46	Side Airbag LH failure	- Side airbag harness (LH) is shorted to power supply. - Airbag control module is faulty.	<Ref. to AB(diag)-86, DTC 46 SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code.>
51	Side Airbag Sensor RH failure	- Side airbag sensor (RH) is faulty. - Side airbag harness (RH) circuit is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-88, DTC 51 SIDE AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
52	Side Airbag Sensor LH failure	- Side airbag sensor (LH) is faulty. - Side airbag harness (LH) circuit is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-90, DTC 52 SIDE AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
53	Side Airbag Sensor RH failure	Side airbag sensor (RH) is faulty.	<Ref. to AB(diag)-92, DTC 53 SIDE AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
54	Side Airbag Sensor LH failure	Side airbag sensor (LH) is faulty.	<Ref. to AB(diag)-92, DTC 54 SIDE AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
55	Side Curtain Airbag Firing output	- Side airbag module is deployed. - Curtain airbag module is deployed.	<Ref. to AB(diag)-92, DTC 55 SIDE CURTAIN AIRBAG FIRING OUTPUT, Diagnostic Chart with Trouble Code.>
56	Curtain Airbag Sensor RH failure	- Curtain airbag sensor (RH) is faulty. - Curtain airbag harness (RH) circuit is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-92, DTC 56 CURTAIN AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
57	Curtain Airbag Sensor LH failure	- Curtain airbag sensor (LH) is faulty. - Curtain airbag harness (LH) circuit is faulty. - Airbag control module is faulty.	<Ref. to AB(diag)-95, DTC 57 CURTAIN AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
58	Curtain Airbag Sensor RH failure	Curtain airbag sensor (RH) is faulty.	<Ref. to AB(diag)-97, DTC 58 CURTAIN AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
59	Curtain Airbag Sensor LH failure	Curtain airbag sensor (LH) is faulty.	<Ref. to AB(diag)-97, DTC 59 CURTAIN AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
61	Belt Pretensioner RH failure	- Seat belt pretensioner (RH) circuit is open, shorted or shorted to ground. - Airbag control module is faulty. - Pretensioner is faulty. - Pretensioner harness is faulty.	<Ref. to AB(diag)-98, DTC 61 BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Display	Content of diagnosis	Reference
62	Belt Pretensioner LH failure	• Seat belt pretensioner (LH) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Pretensioner is faulty. • Pretensioner harness is faulty.	<Ref. to AB(diag)-101, DTC 62 BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
65	Belt Pretensioner RH failure	• Seat belt pretensioner (RH) circuit is shorted to power supply. • Pretensioner is faulty. • Pretensioner harness is faulty. • Airbag control module is faulty.	<Ref. to AB(diag)-104, DTC 65 BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
66	Belt Pretensioner LH failure	• Seat belt pretensioner (LH) circuit is shorted to power supply. • Pretensioner is faulty. • Pretensioner harness is faulty. • Airbag control module is faulty.	<Ref. to AB(diag)-106, DTC 66 BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
71	Driver's Airbag failure	• Airbag main harness circuit is open, shorted or shorted to ground. • Airbag module harness (Driver's side) circuit is open, shorted or shorted to ground. • Roll connector circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Driver's airbag module is faulty.	<Ref. to AB(diag)-108, DTC 71 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
72	Passenger's Airbag failure	• Airbag main harness circuit is open, shorted or shorted to ground. • Airbag module harness (Passenger's side) circuit is open, shorted or shorted to ground. • Airbag control module is faulty. • Passenger's airbag module is faulty.	<Ref. to AB(diag)-111, DTC 72 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
75	Driver's Airbag failure	• Airbag main harness circuit (Driver's side) is shorted to power supply. • Airbag module harness circuit (Driver's side) is shorted to power supply. • Roll connector is shorted to power supply. • Airbag control module is faulty. • Driver's airbag module is faulty.	<Ref. to AB(diag)-114, DTC 75 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
76	Passenger's Airbag failure	• Airbag main harness circuit (Passenger's side) is shorted to power supply. • Airbag module harness circuit (Passenger's side) is shorted to power supply. • Airbag control module is faulty. • Passenger's airbag module is faulty.	<Ref. to AB(diag)-117, DTC 76 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
91	Curtain Airbag Module RH failure	• Curtain airbag harness (RH) circuit is faulty. • Curtain airbag module (RH) is faulty. • Airbag control module is faulty.	<Ref. to AB(diag)-119, DTC 91 CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
92	Curtain Airbag Module LH failure	• Curtain airbag harness (LH) circuit is faulty. • Curtain airbag module (LH) is faulty. • Airbag control module is faulty.	<Ref. to AB(diag)-122, DTC 92 CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
95	Curtain Airbag Module RH failure	• Curtain airbag harness (RH) is shorted to power supply. • Curtain airbag module (RH) is faulty. • Airbag control module is faulty.	<Ref. to AB(diag)-125, DTC 95 CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
96	Curtain Airbag Module LH failure	• Curtain airbag harness (LH) is shorted to power supply. • Curtain airbag module (LH) is faulty. • Airbag control module is faulty.	<Ref. to AB(diag)-127, DTC 96 CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>

14.Diagnostic Chart with Trouble Code

A: DTC 11 DRIVER'S AIRBAG FAILURE

DTC DETECTING CONDITION:

- Airbag main harness circuit is open, shorted or shorted to ground.
- Airbag module harness (driver's side) circuit is open, shorted or shorted to ground.
- Roll connector circuit is open, shorted or shorted to ground.
- Driver's airbag module is faulty.
- Airbag control module is faulty.


CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

NOTE:

Prior to starting work, prepare two airbag resistors (98299PA040).

WIRING DIAGRAM:

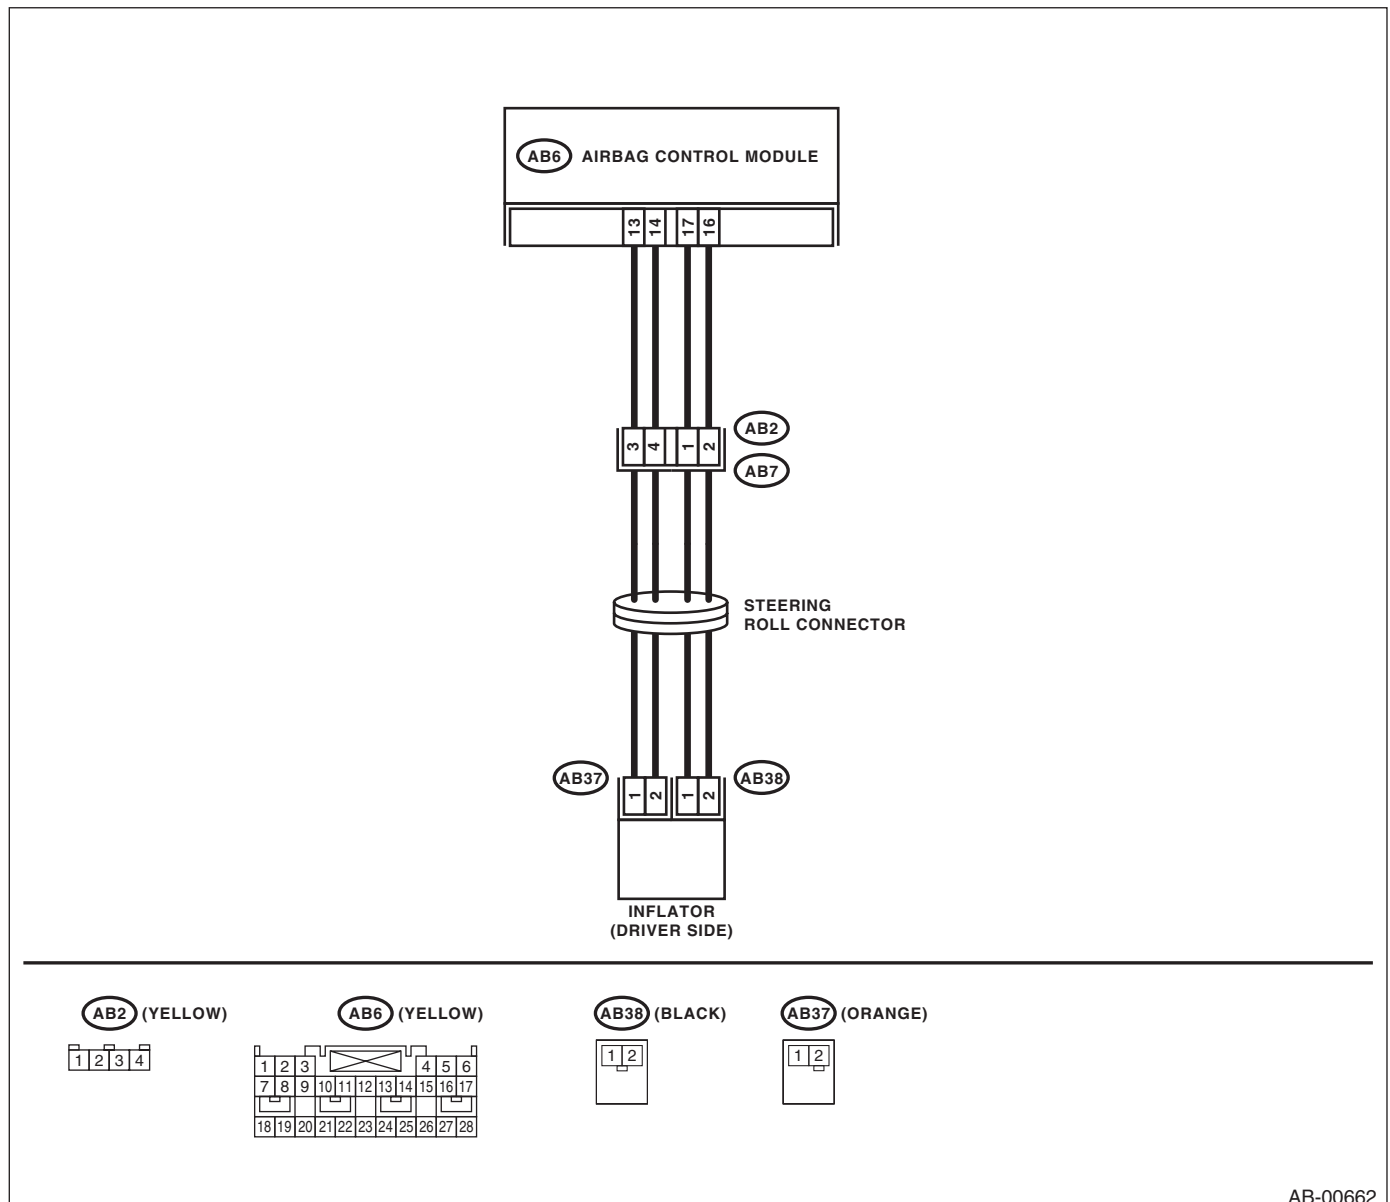

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
1	CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the driver's airbag module.	Is there poor contact?	Replace the airbag harness.	Go to step 2.
2	CHECK DRIVER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the driver's airbag module. 3) Connect the connector (1N) in the test harness N to the connector (AB38). 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the connector (1Q) in the test harness Q to connector (AB37). 6) Connect the airbag resistor to the connector (2Q) in the test harness Q. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the driver's airbag module. <Ref. to AB-17, Driver's Airbag Module.>	Go to step 3.
3	CHECK ROLL CONNECTOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the test harness N from connector (AB38). 3) Disconnect the test harness Q from connector (AB37). 4) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 5) Connect the connector (1P) in the test harness P to connector (AB2). 6) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the roll connector. <Ref. to AB-26, Roll Connector.>	Go to step 4.
4	CHECK AIRBAG MAIN HARNESS (DRIVER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Measure the resistance between connector (2U) in the test harness U and connectors (2P) and (3P) in the test harness P. Connector & terminal (2U) No. 2 — (2P) No. 1: (2U) No. 4 — (2P) No. 2: (2U) No. 8 — (3P) No. 3: (2U) No. 12 — (3P) No. 4:	Is the resistance less than 10 Ω?	Go to step 5.	Replace the airbag main harness along with body harness.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK AIRBAG MAIN HARNESS (DRIVER'S AIRBAG HARNESS). Measure the resistance between connector (2U) terminals in the test harness U. Connector & terminal <i>(2U) No. 2 — (2U) No. 4:</i> <i>(2U) No. 4 — Chassis ground:</i> <i>(2U) No. 2 — Chassis ground:</i> <i>(2U) No. 8 — (2U) No. 12:</i> <i>(2U) No. 8 — Chassis ground:</i> <i>(2U) No. 12 — Chassis ground:</i>	Is the resistance more than 1 MΩ?	Go to step 6.	Replace the airbag main harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

B: DTC 12 PASSENGER'S AIRBAG FAILURE


DTC DETECTING CONDITION:

- Airbag main harness circuit is open, shorted or shorted to ground.
- Airbag module harness (Passenger's side) circuit is open, shorted or shorted to ground.
- Passenger's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

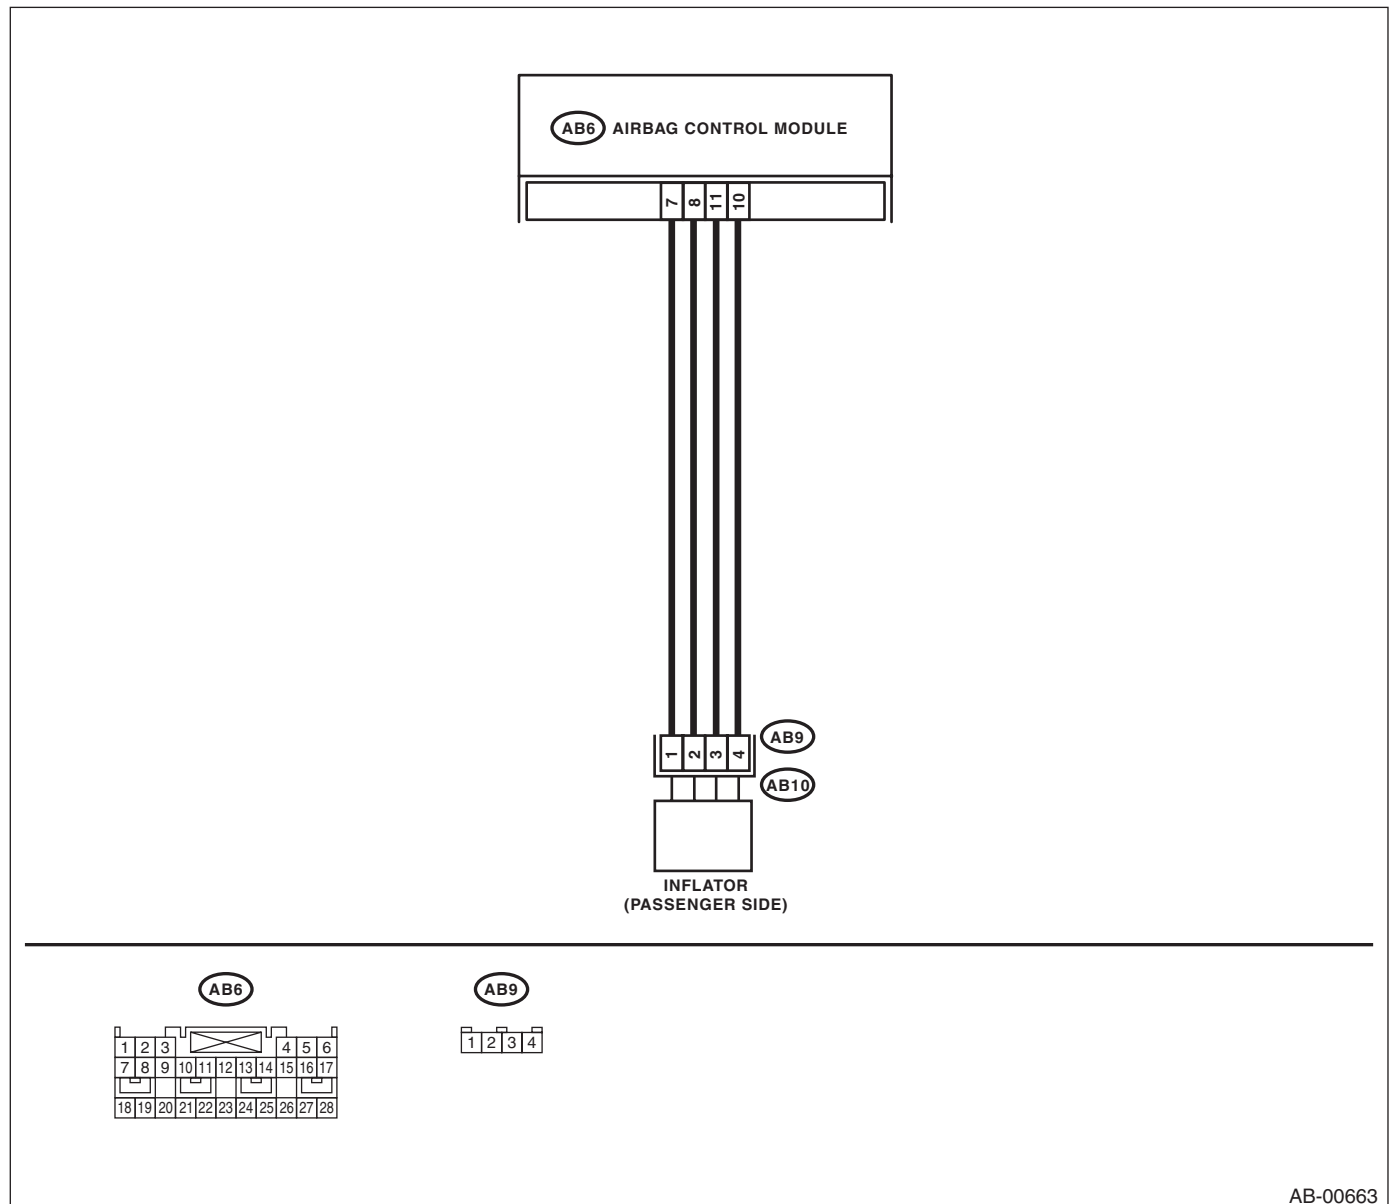

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the passenger's airbag module.	Is there poor contact?	Replace the airbag harness.	Go to step 2.
2 CHECK PASSENGER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the instrument panel side cover on the passenger's side. 3) Disconnect the connector (AB10) from (AB9). 4) Connect the connector (1P) in the test harness P to connector (AB9). 5) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 6) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the passenger's airbag module. <Ref. to AB-18, Passenger's Airbag Module.>	Go to step 3.
3 CHECK AIRBAG MAIN HARNESS (PASSENGER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Measure the resistance between connector (2U) in the test harness U and connectors (2P) and (3P) in the test harness P. Connector & terminal (2U) No. 3 — (2P) No. 1: (2U) No. 5 — (2P) No. 2: (2U) No. 9 — (3P) No. 3: (2U) No. 13 — (3P) No. 4:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag main harness along with body harness.
4 CHECK AIRBAG MAIN HARNESS (PASSENGER'S AIRBAG HARNESS). Measure the resistance between connectors (2U) in the test harness U, and between connector (2U) and chassis ground. Connector & terminal (2U) No. 3 — (2U) No. 5: (2U) No. 3 — Chassis ground: (2U) No. 5 — Chassis ground: (2U) No. 9 — (2U) No. 13: (2U) No. 9 — Chassis ground: (2U) No. 13 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag main harness along with body harness.
5 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 6.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
6 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to AB(diag)-43, List of Diagnostic Trou- ble Code (DTC).>	Finish the diagno- sis.

C: DTC 15 DRIVER'S AIRBAG FAILURE

DTC DETECTING CONDITION:

- Airbag main harness circuit (Driver's side) is shorted to power supply.
- Airbag module harness circuit (Driver's side) is shorted to power supply.
- Roll connector is shorted to power supply.
- Driver's airbag module is faulty.
- Airbag control module is faulty.


CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

NOTE:

Prior to starting work, prepare two airbag resistors (98299PA040).

WIRING DIAGRAM:

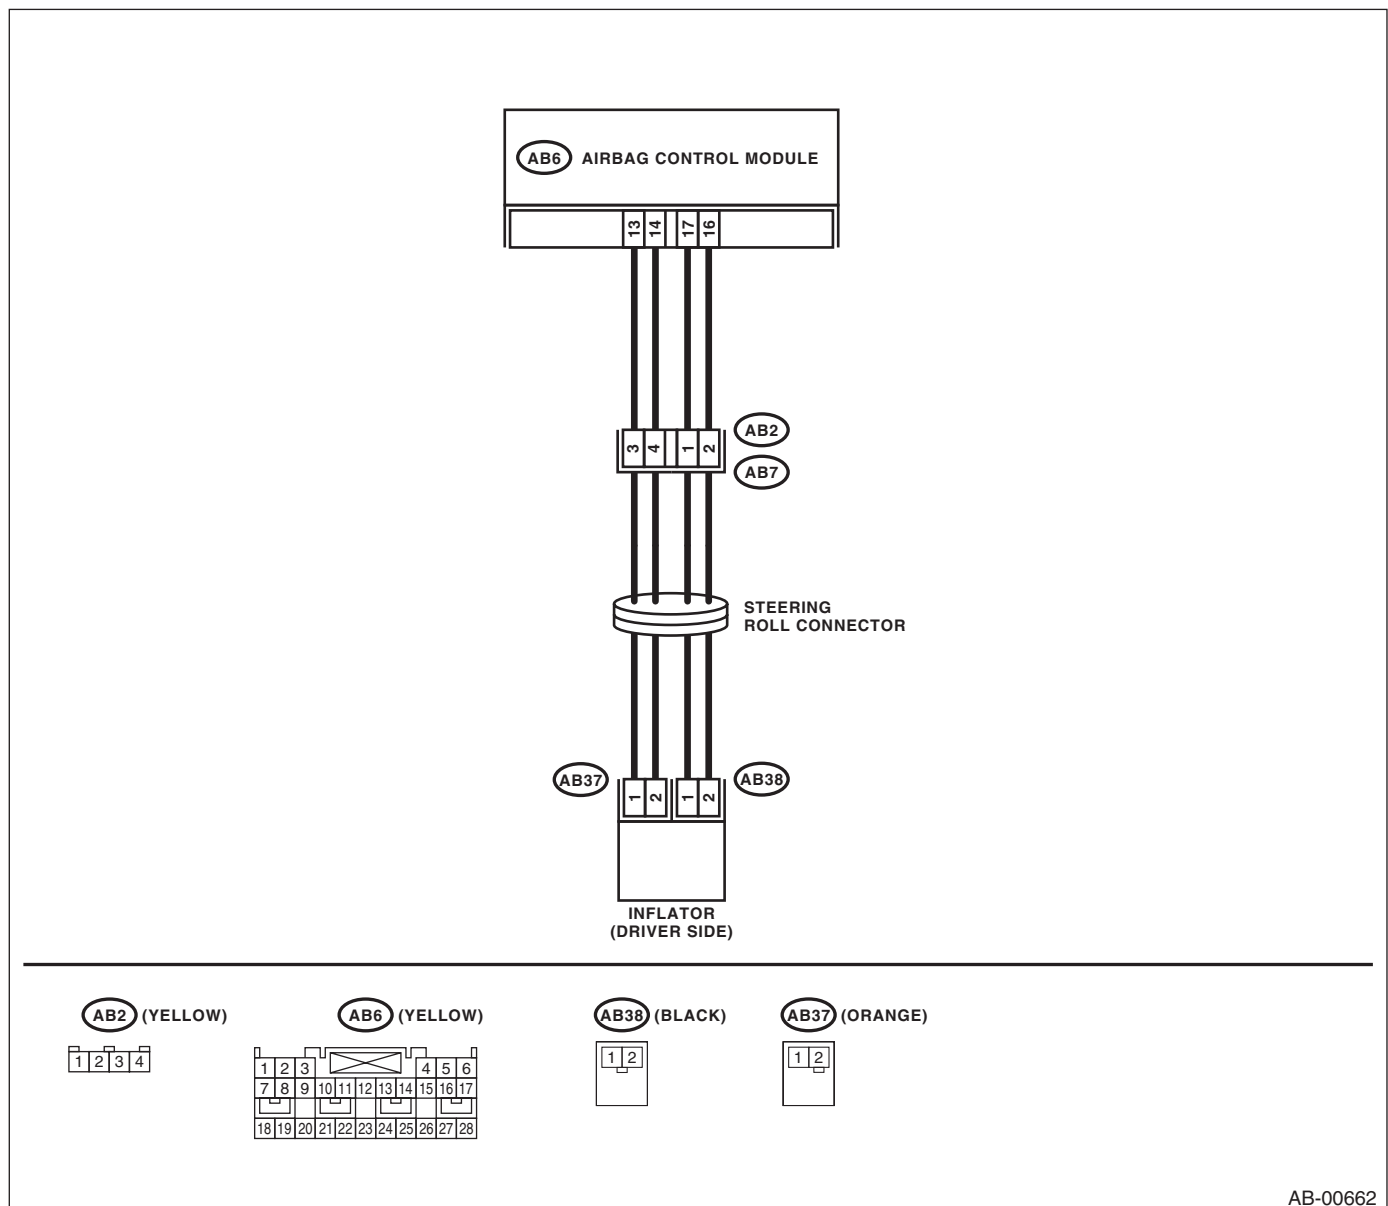

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the driver's airbag module.	Is there poor contact?	Replace the airbag harness.	Go to step 2.
2 CHECK DRIVER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the driver's airbag module. 3) Connect the connector (AB38) to the connector (1N) in the test harness N. 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the connector (1Q) in the test harness Q to connector (AB37). 6) Connect the airbag resistor to the connector (2Q) in the test harness Q. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the driver's airbag module. <Ref. to AB-17, Driver's Airbag Module.>	Go to step 3.
3 CHECK ROLL CONNECTOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the test harness N from connector (AB38). 3) Disconnect the test harness Q from connector (AB37). 4) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 5) Connect the connector (1P) in the test harness P to connector (AB2). 6) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the roll connector. <Ref. to AB-26, Roll Connector.>	Go to step 4.
4 CHECK AIRBAG MAIN HARNESS (DRIVER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Connect the battery ground terminal and turn the ignition switch to ON. (engine OFF) 6) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal <i>(2U) No. 4 (+) — Chassis ground (-):</i> <i>(2U) No. 2 (+) — Chassis ground (-):</i> <i>(2U) No. 8 (+) — Chassis ground (-):</i> <i>(2U) No. 12 (+) — Chassis ground (-):</i>	Is the voltage less than 1 V?	Go to step 5.	Replace the airbag main harness along with body harness.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
5	CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 6.
6	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

D: DTC 16 PASSENGER'S AIRBAG FAILURE


DTC DETECTING CONDITION:

- Airbag main harness circuit (Passenger's side) is shorted to power supply.
- Airbag module harness circuit (Passenger's side) is shorted to power supply.
- Passenger's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

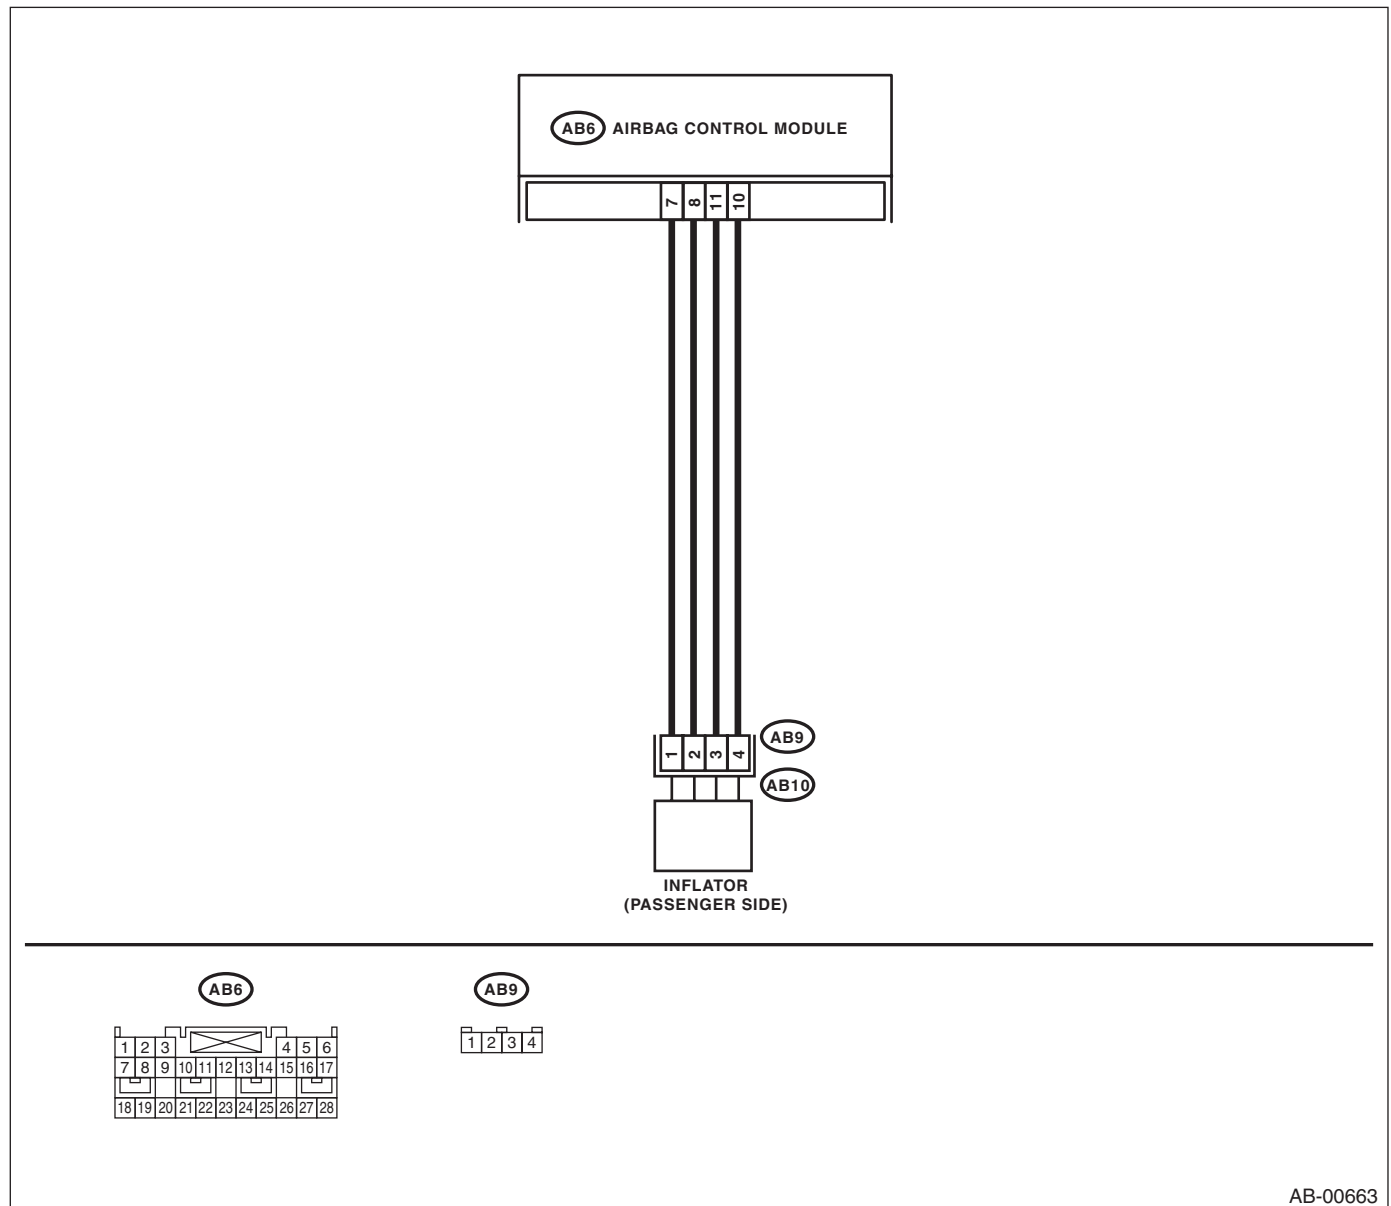

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the passenger's airbag module.	Is there poor contact?	Replace the airbag harness along with chassis harness.	Go to step 2.
2 CHECK PASSENGER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the instrument panel side cover on the passenger's side. 3) Disconnect the connector (AB10) from (AB9). 4) Connect the connector (1P) in the test harness P to connector (AB9). 5) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 6) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the passenger's airbag module. <Ref. to AB-18, Passenger's Airbag Module.>	Go to step 3.
3 CHECK AIRBAG MAIN HARNESS (PASSENGER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal (2U) No. 3 (+) — Chassis ground (-): (2U) No. 5 (+) — Chassis ground (-): (2U) No. 9 (+) — Chassis ground (-): (2U) No. 13 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag main harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

E: DTC 21 AIRBAG ECM FAILURE

DTC DETECTING CONDITION:

Airbag control module is faulty.

CAUTION:



- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.

Step		Check	Yes	No
1	CHECK IF DTC 21 IS INDICATED. Read the DTC. <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC 21 indicated for airbag warning light?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Perform the Clear Memory Mode. <Ref. to AB(diag)-30, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

F: DTC 22 FRONT AIRBAG FIRING OUTPUT WIRING DIAGRAM:

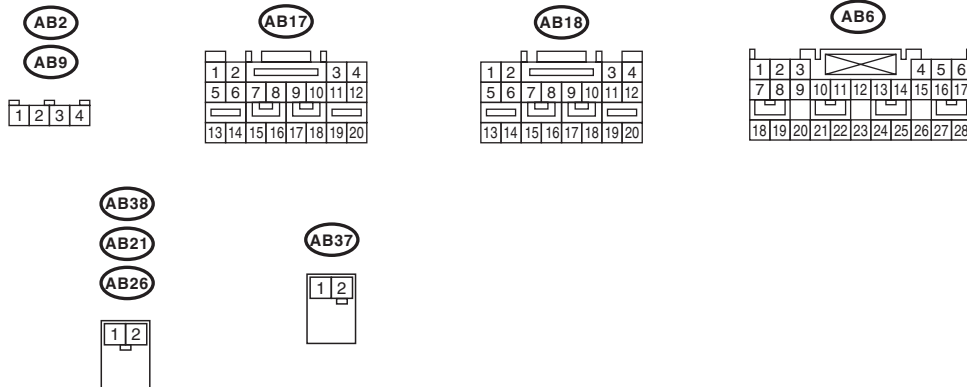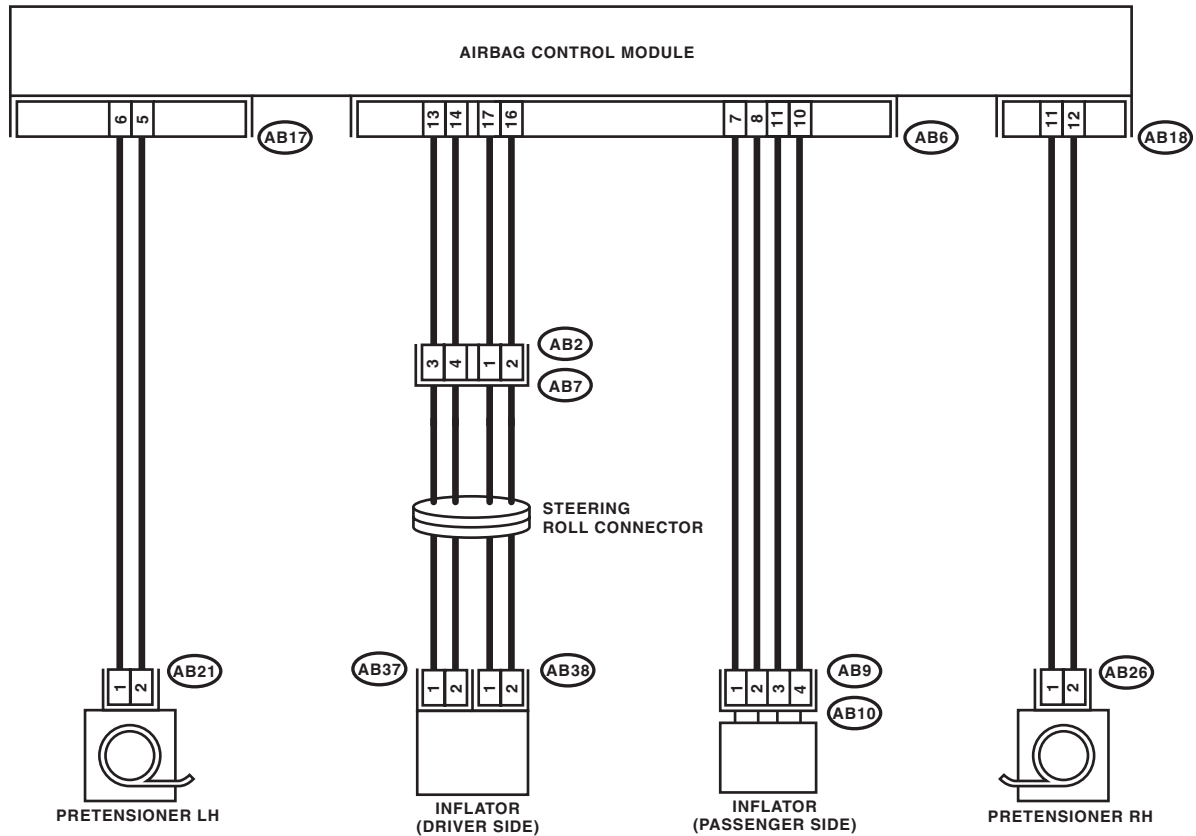

AB-00922

- This DTC is indicated when the front airbag module and the pretensioner are deployed. Once this DTC is displayed, the memory cannot be cleared. Therefore replace the following parts.
- Airbag control module <Ref. to AB-23, Airbag Control Module.>
 - Driver's airbag module <Ref. to AB-17, Driver's Airbag Module.>
 - Passenger's airbag module <Ref. to AB-18, Passenger's Airbag Module.>
 - Front sub sensor of both sides <Ref. to AB-27, Front Sub Sensor.>
 - Front seat belt outer with pretensioner of both sides. <Ref. to SB-10, Front Seat Belt.>
 - Steering roll connector <Ref. to AB-26, Roll Connector.>
 - Occupant detection system (passenger's seat cushion & frame assembly) <Ref. to SE-9, Front Seat.>

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

G: DTC 23 CONNECTOR TO AIRBAG ECM

DTC DETECTING CONDITION:

Connection of (AB6), (AB17) and (AB18) to airbag control module is improper.

CAUTION:

Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.

Step	Check	Yes	No
1 CHECK POOR CONTACT OF CONNECTORS (AB6), (AB17) AND (AB18). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connectors (AB6), (AB17) and (AB18) from airbag control module.	Is there rust or damage on the harness connector and the control module connector?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.> Replace the body harness with the airbag main harness or replace the body harness along with the side airbag harness.	Go to step 2.
2 CHECK POOR CONTACT OF CONNECTORS (AB6), (AB17) AND (AB18). 1) Reconnect the connector securely. 2) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Go to step 3.	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>
3 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 4.
4 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

H: DTC 24 IG1 OPEN


DTC DETECTING CONDITION:

- Airbag control module is faulty.
- Airbag main harness circuit is open.
- Fuse No. 25 (in joint box) is blown.
- Body harness circuit is open.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

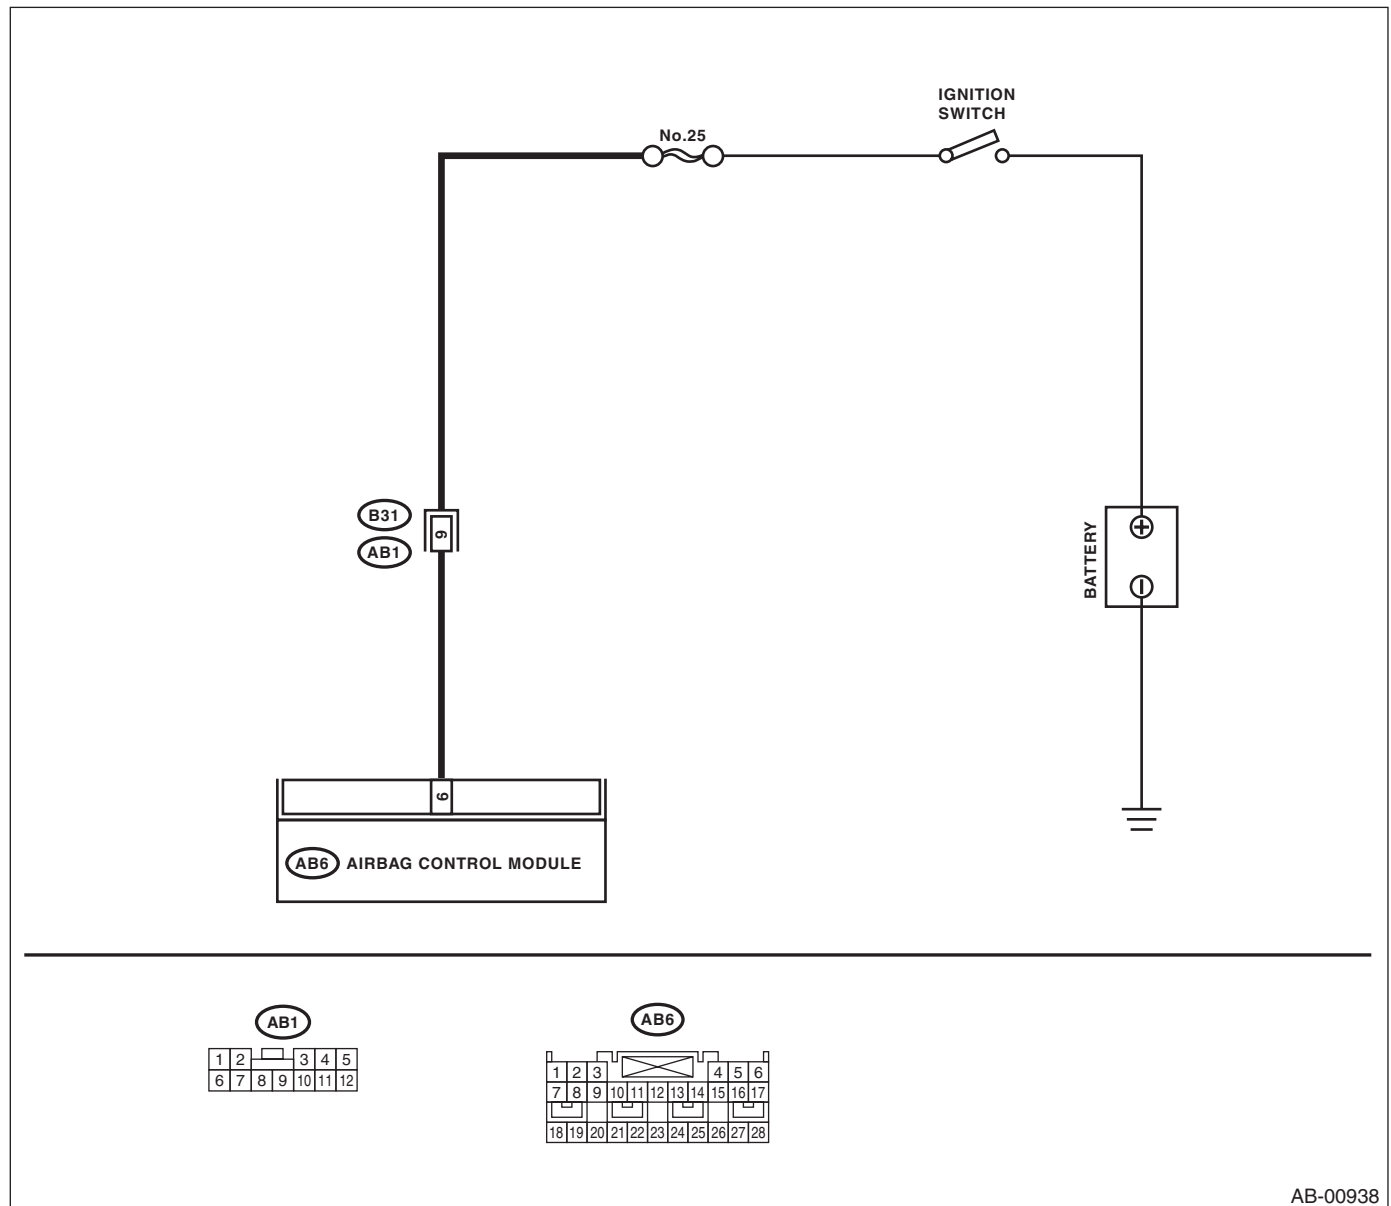

AB-00938

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK AIRBAG CONTROL MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB6) from airbag control module. 3) Connect the connector (1U) in the test harness U to connector (AB6). 4) Connect the battery ground terminal and turn the ignition switch to ON. 5) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal (2U) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 2.
2 CHECK FUSE NO. 25 (IN JOINT BOX). 1) Confirm that the ignition switch is turned to OFF. 2) Remove the fuse No. 25 (in joint box) and perform visual inspection.	Is the fuse No. 25 blown out?	Replace the fuse No. 25. If fuse No. 25 is blown out again, repair the body harness. Or replace the airbag main harness along with body harness.	Go to step 3.
3 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 4.
4 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

I: DTC 25 IG2 OPEN


DTC DETECTING CONDITION:

- Airbag control module is faulty.
- Airbag main harness circuit is open.
- Fuse No. 12 (in joint box) is blown.
- Body harness circuit is open.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

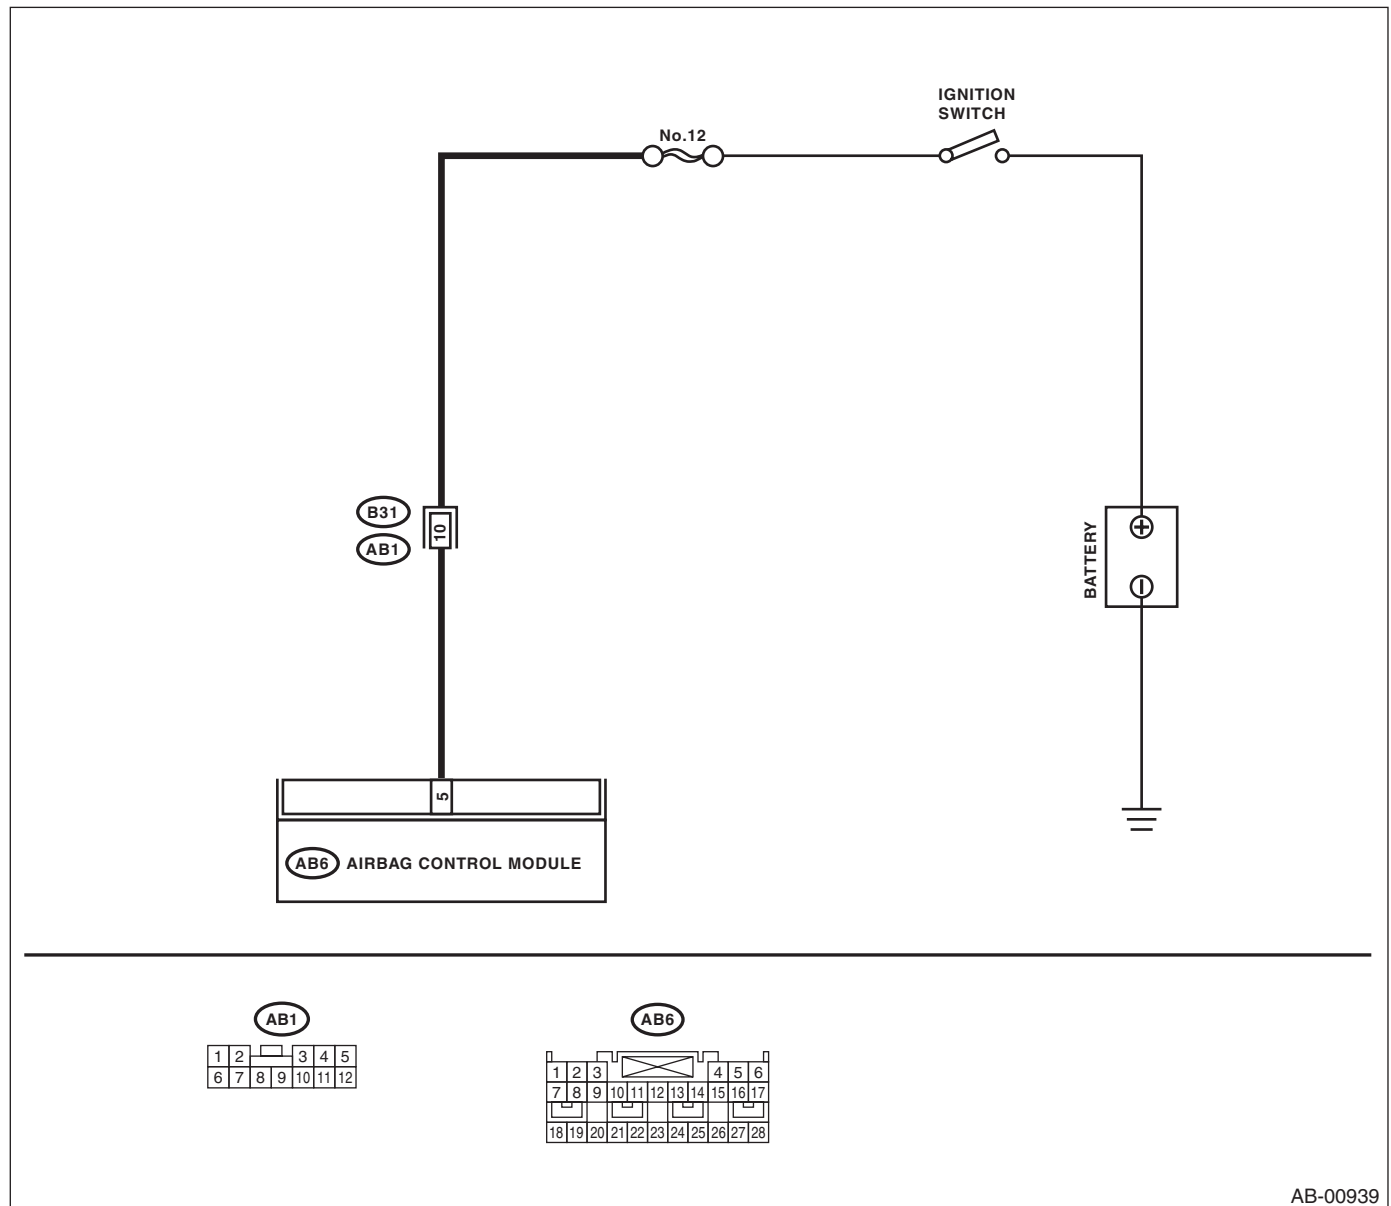

AB-00939

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK AIRBAG CONTROL MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB6) from airbag control module. 3) Connect the connector (1U) in the test harness U to connector (AB6). 4) Connect the battery ground terminal and turn the ignition switch to ON. 5) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal (2U) No. 6 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 2.
2 CHECK FUSE NO. 12 (IN JOINT BOX). 1) Confirm that the ignition switch is turned to OFF. 2) Remove the fuse No. 12 (in joint box) and perform visual inspection.	Is the fuse No. 12 blown out?	Replace the fuse No. 12. If fuse No. 12 is blown out again, repair the body harness. Or replace the airbag main harness along with body harness.	Go to step 3.
3 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 4.
4 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

J: DTC 26 PASSENGER'S AIRBAG INDICATOR FAILURE


DTC DETECTING CONDITION:

- Passenger's airbag indicator is faulty.
- Airbag control module is faulty.
- Airbag main harness circuit is open.
- Body harness circuit is open.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag harness, disconnect the airbag module connector and seat belt pretensioner for safety.

WIRING DIAGRAM:

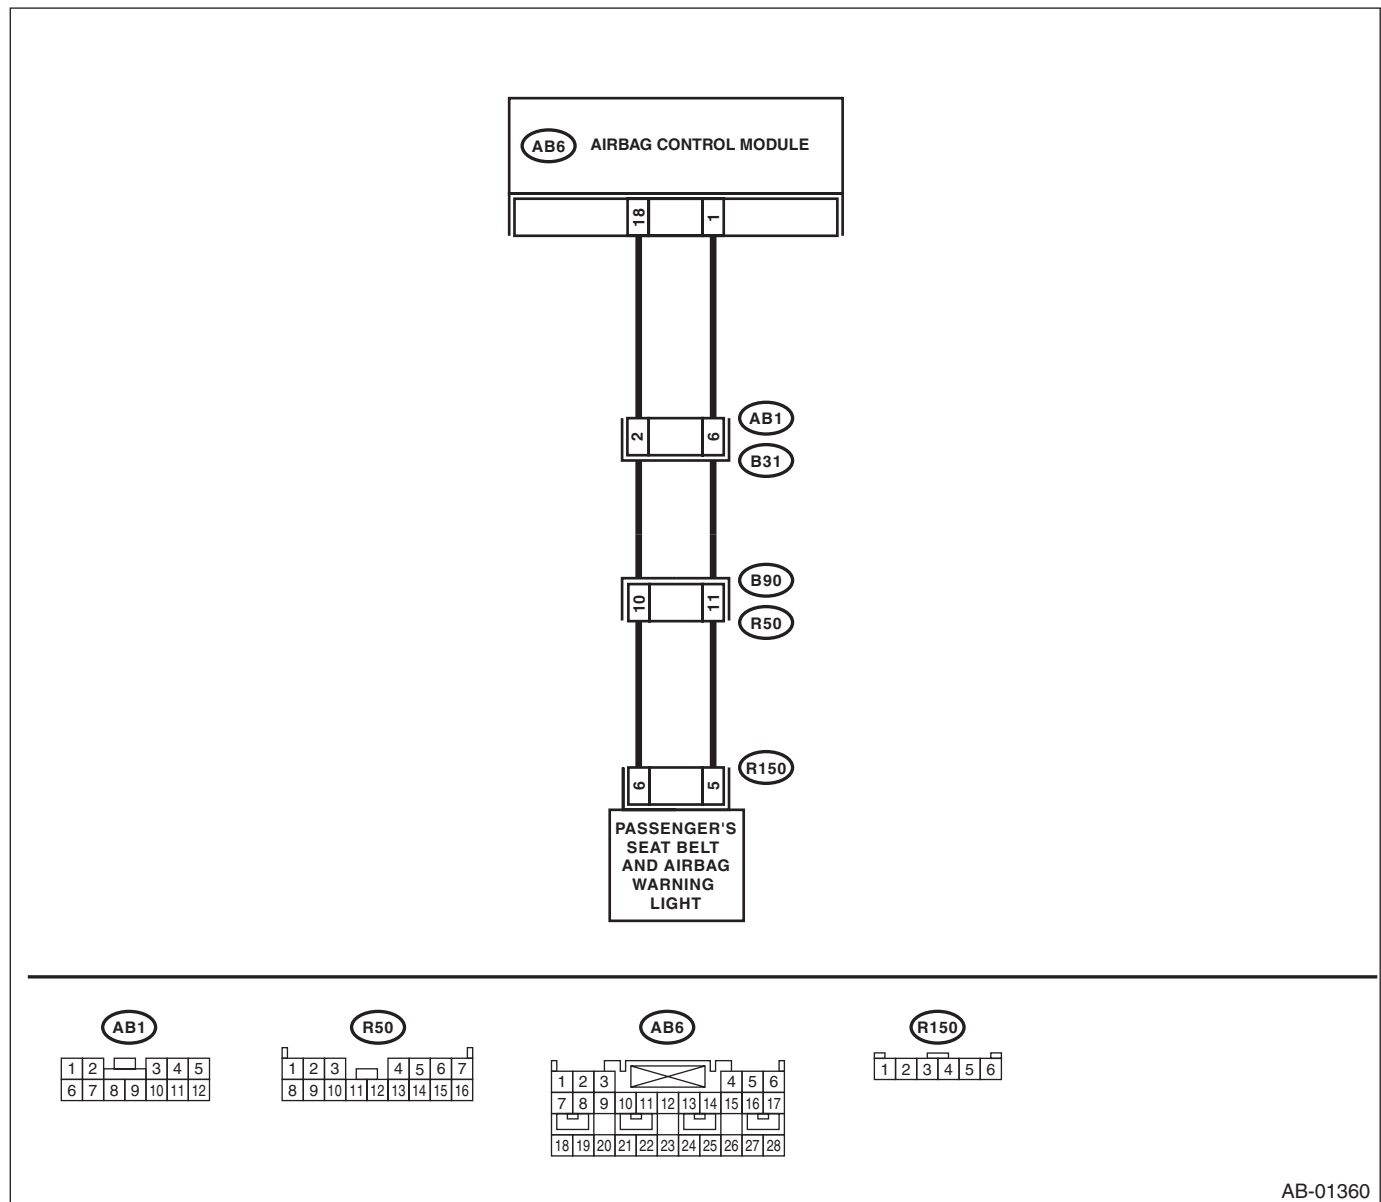

AB-01360

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Confirm that firm contact is secured for the connector between the airbag control module and map light.	Is there poor contact in any connector?	Replace the airbag harness connector.	Go to step 2.
2 CHECK AIRBAG MAIN HARNESS. 1) Disconnect the connector (AB6) from airbag control module. 2) Connect the battery ground terminal and turn the ignition switch to ON. NOTE: Neither of ON/OFF illuminates when it is normal.	Is the passenger's airbag indicator turned on?	Go to step 3.	Go to step 4.
3 CHECK AIRBAG MAIN HARNESS. 1) Turn the ignition switch to OFF. 2) Remove the map light and disconnect the connector (R150). 3) Connect the connector (1U) in the test harness U to connector (AB6). 4) Measure the resistance between connectors (2U) and (4U) in the test harness U and chassis ground. Connector & terminal (2U) No. 14 — (4U) No. 17: (2U) No. 14 — Chassis ground: (4U) No. 17 — Chassis ground:	Is the resistance more than 1 MΩ?	Replace the map light. <Ref. to IDI-20, Clock.>	Repair the bulkhead harness. Or replace the airbag main harness along with body harness.
4 CHECK AIRBAG HARNESS. 1) Connect the connectors (7U) and (8U) in the test harness U. 2) Connect the battery ground terminal and turn the ignition switch to ON.	Is the passenger's airbag indicator turned on?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK AIRBAG HARNESS. 1) Turn the ignition switch to OFF. 2) Connect the connector (1U) in the test harness U to connector (AB6). 3) Measure the resistance between connectors (2U) and (4U) in the test harness U and the connector (R150). Connector & terminal (2U) No. 14 — (R150) No. 5: (4U) No. 17 — (R150) No. 6:	Is the resistance less than 10 Ω?	Go to step 6.	Repair the bulkhead harness. Or replace the airbag main harness along with body harness.
6 CHECK BODY HARNESS. 1) Turn the ignition switch to ON. 2) Measure the voltage between connector (R150) and chassis ground. Connector & terminal (R150) No. 1 — Chassis ground:	Is the voltage more than 10 V?	Replace the map light. <Ref. to IDI-20, Clock.>	Repair the map light power supply line.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

K: DTC 27 ODS COMMUNICATION ERROR

DTC DETECTING CONDITION:

- Communication to the occupant detection control module is faulty.
- Airbag rear harness circuit is open, shorted, shorted to ground or shorted to power supply.
- Occupant detection harness (seat harness) is faulty.
- Occupant detection system is faulty.
- Airbag control module is faulty.

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the occupant detection control module.	Is there poor contact?	Reconnect the connector. If defective is not improved, replace the airbag rear harness RH or the occupant detection harness (seat harness).	Go to step 2.
2 CHECK AIRBAG HARNESS. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB18) from airbag control module. 3) Disconnect the connectors (AB59) and (AB61) under the passenger's seat. 4) Connect the connector (1U) in the test harness U to connector (AB18). 5) Connect the connector (1AB) in the test harness AB to the connector (AB61). 6) Measure the resistance between connector (3U) in the test harness U and connector (2AB) in the test harness AB. Connector & terminal (3U) No. 2 — (2AB) No. 1: (3U) No. 4 — (2AB) No. 2:	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness RH along with body harness.
3 CHECK AIRBAG HARNESS. Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 2 — Chassis ground: (3U) No. 2 — (3U) No.4:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness RH along with the body harness.
4 CHECK AIRBAG HARNESS. 1) Turn the ignition switch to ON. 2) Measure the voltage between connector (2AB) in the test harness AB and chassis ground. Connector & terminal (2AB) No. 3 — chassis ground:	Is the voltage more than 9 V?	Go to step 5.	Check the battery voltage and fuse. If there is no faulty, replace the airbag rear harness RH along with body harness.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK AIRBAG HARNESS. Measure the voltage between connector (2AB) in the test harness AB and chassis ground. Connector & terminal (2AB) No. 1 — chassis ground:	Is the voltage more than 9 V?	Replace the airbag rear harness RH along with body harness.	Replace the occupant detection harness (seat harness). If defective is not improved, replace the occupant detection system (seat cushion & frame assembly), and then the airbag control module in this order.

L: DTC 29 ODS FAILURE

NOTE:

Refer to “Occupant Detection System” for DTC 29. <Ref. to OD(diag)-28, DTC 29 ODS FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

M: DTC 2A ODS CALIBRATION ERROR

NOTE:

Refer to “Occupant Detection System” for DTC 2A. <Ref. to OD(diag)-25, DTC 2A ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

N: DTC 2B ODS SYSTEM WRONG PARTS

NOTE:

Refer to “Occupant Detection System” for DTC 2B. <Ref. to OD(diag)-25, DTC 2B ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

O: DTC 2C BELT TENSION SENSOR FAILURE

NOTE:

Refer to “Occupant Detection System” for DTC 2C. <Ref. to OD(diag)-26, DTC 2C BELT TENSION SENSOR FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

P: DTC 31 FRONT SUB SENSOR RH FAILURE


DTC DETECTING CONDITION:

- Front sub sensor harness (RH) circuit is shorted.
- Front sub sensor harness (RH) circuit is open.
- Front sub sensor (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

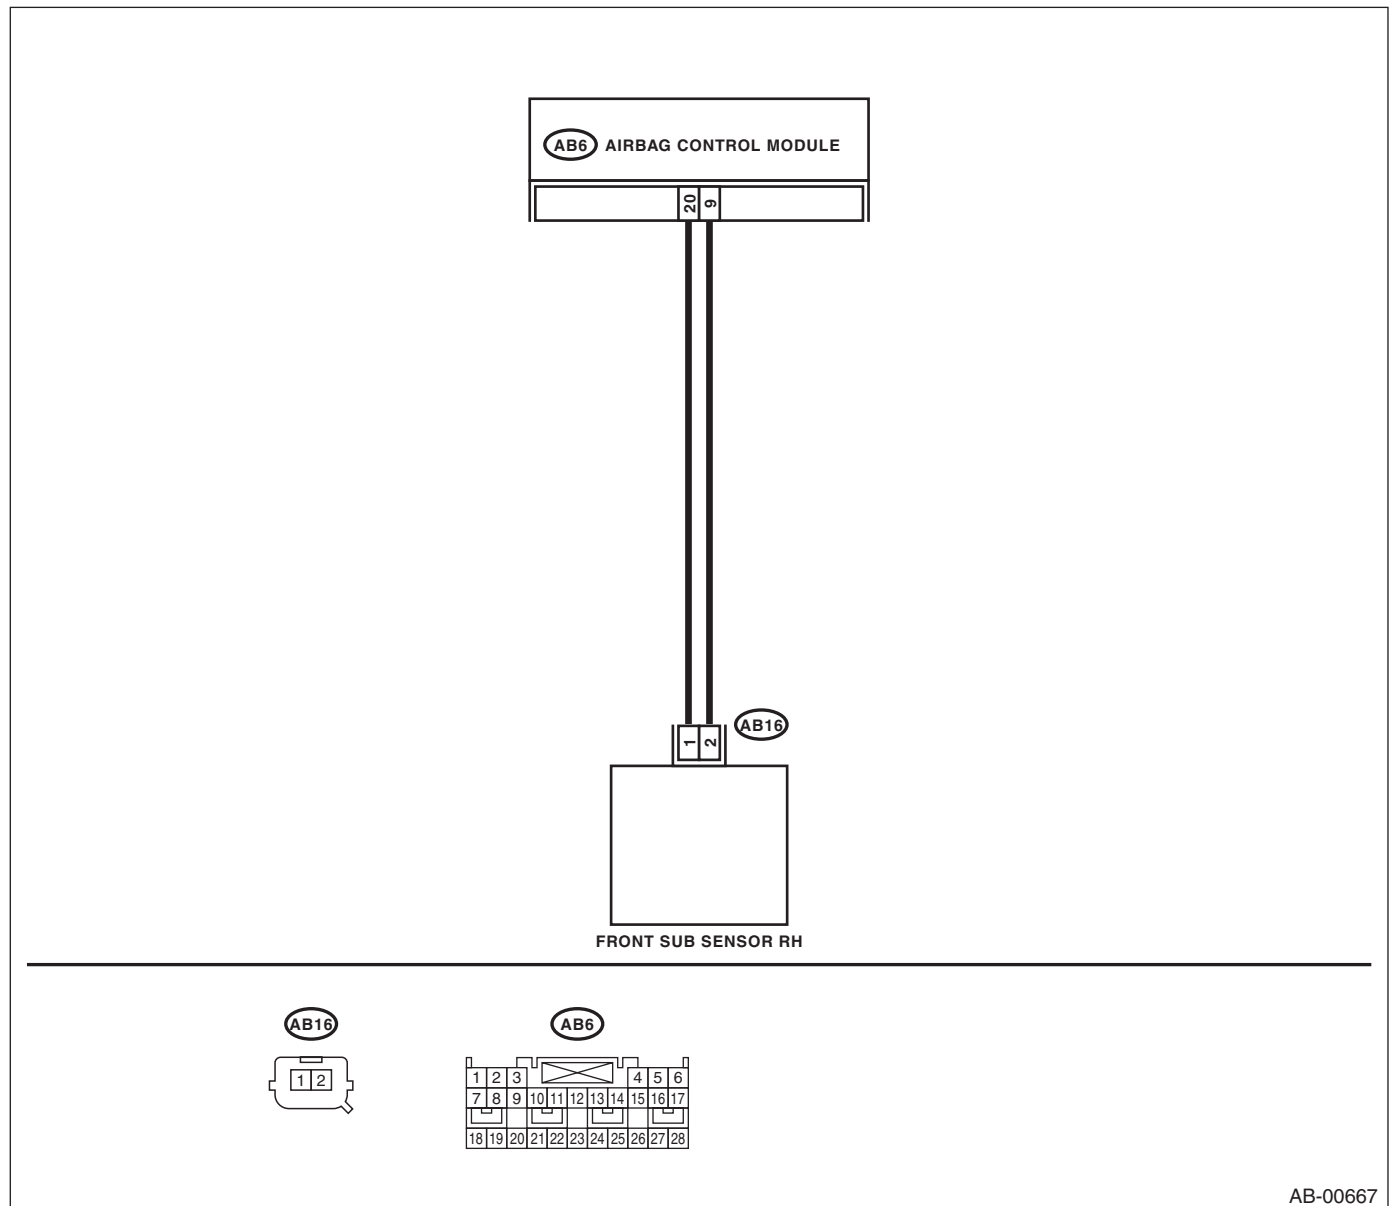

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the front sub sensor RH.	Is there poor contact?	Repair the connector.	Go to step 2.
2 CHECK AIRBAG MAIN HARNESS (FRONT SUB SENSOR HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the instrument panel lower cover and disconnect the connectors (AB7) and (AB2). 3) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 4) Disconnect the connector (AB6) from airbag control module. 5) Connect the connector (1U) in the test harness U to connector (AB6). 6) Disconnect the front sub sensor (RH), and then connect the connector (1H) in the test harness H to connector (AB16). 7) Measure the resistance between connector (3U) in the test harness U and connector (3H) in the test harness H. Connector & terminal (3U) No. 7 — (3H) No. 5: (3U) No. 9 — (3H) No. 6:	Is the resistance less than 10 Ω?	Go to step 3.	Replace the airbag main harness along with body harness.
3 CHECK AIRBAG MAIN HARNESS (FRONT SUB SENSOR HARNESS RH). Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 7 — Chassis ground: (3U) No. 9 — Chassis ground:	Is the resistance more than 1 MΩ?	Replace the front sub sensor (RH). <Ref. to AB-27, Front Sub Sensor.> Replace the airbag control module if not operating normally even after replacing the sensor. <Ref. to AB-23, Airbag Control Module.>	Go to step 4.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Q: DTC 32 FRONT SUB SENSOR LH FAILURE


DTC DETECTING CONDITION:

- Front sub sensor harness (LH) circuit is shorted.
- Front sub sensor harness (LH) circuit is open.
- Front sub sensor (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

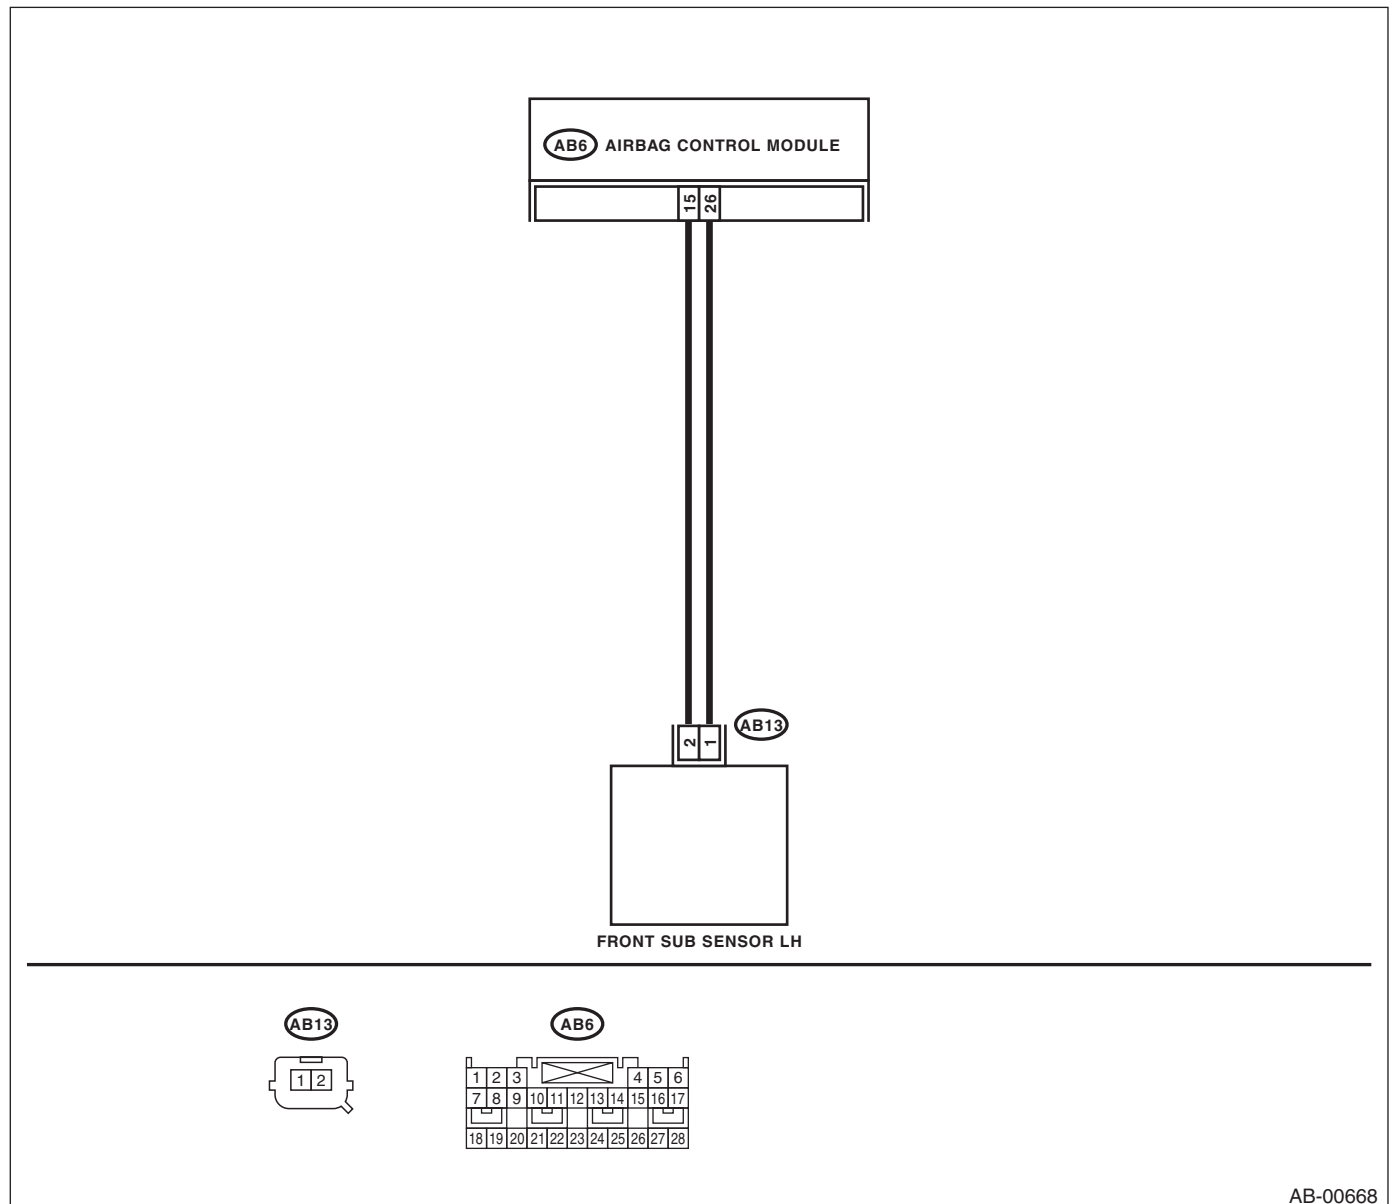

AB-00668

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the front sub sensor LH.	Is there poor contact?	Replace the airbag main harness along with body harness.	Go to step 2.
2 CHECK AIRBAG MAIN HARNESS (FRONT SUB SENSOR HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the instrument panel lower cover and disconnect the connectors (AB7) and (AB2). 3) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 4) Disconnect the connector (AB6) from airbag control module. 5) Connect the connector (1U) in the test harness U to connector (AB6). 6) Disconnect the front sub sensor (LH), and then connect the connector (1H) in the test harness H to connector (AB13). 7) Measure the resistance between connector (3U) in the test harness U and connector (3H) in the test harness H. Connector & terminal (3U) No. 6 — (3H) No. 5: (3U) No. 8 — (3H) No. 6:	Is the resistance less than 10 Ω?	Go to step 3.	Replace the airbag main harness along with body harness.
3 CHECK AIRBAG MAIN HARNESS (FRONT SUB SENSOR HARNESS LH). Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 6 — Chassis ground: (3U) No. 8 — Chassis ground:	Is the resistance more than 1 MΩ?	Replace the front sub sensor (LH). <Ref. to AB-27, Front Sub Sensor.> Replace the airbag control module if not operating normally even after replacing the sensor. <Ref. to AB-23, Airbag Control Module.>	Go to step 4.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

R: DTC 33 FRONT SUB SENSOR RH FAILURE

DTC DETECTING CONDITION:

Front sub sensor (RH) is faulty.

If DTC 33 is displayed, the circuit within the front sub sensor (RH) is faulty. Replace the front sub sensor (RH). <Ref. to AB-27, Front Sub Sensor.>

S: DTC 34 FRONT SUB SENSOR LH FAILURE

DTC DETECTING CONDITION:

Front sub sensor (LH) is faulty.

If DTC 34 is displayed, the circuit within the front sub sensor (LH) is faulty. Replace the front sub sensor (LH). <Ref. to AB-27, Front Sub Sensor.>

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

T: DTC 36 SEAT POSITION SENSOR LH FAILURE


DTC DETECTING CONDITION:

- Driver's seat position sensor is faulty.
- Airbag control module is faulty.
- Airbag rear harness circuit is open, shorted or shorted to ground.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag harness, disconnect the airbag module connector and seat belt pretensioner for safety.

WIRING DIAGRAM:

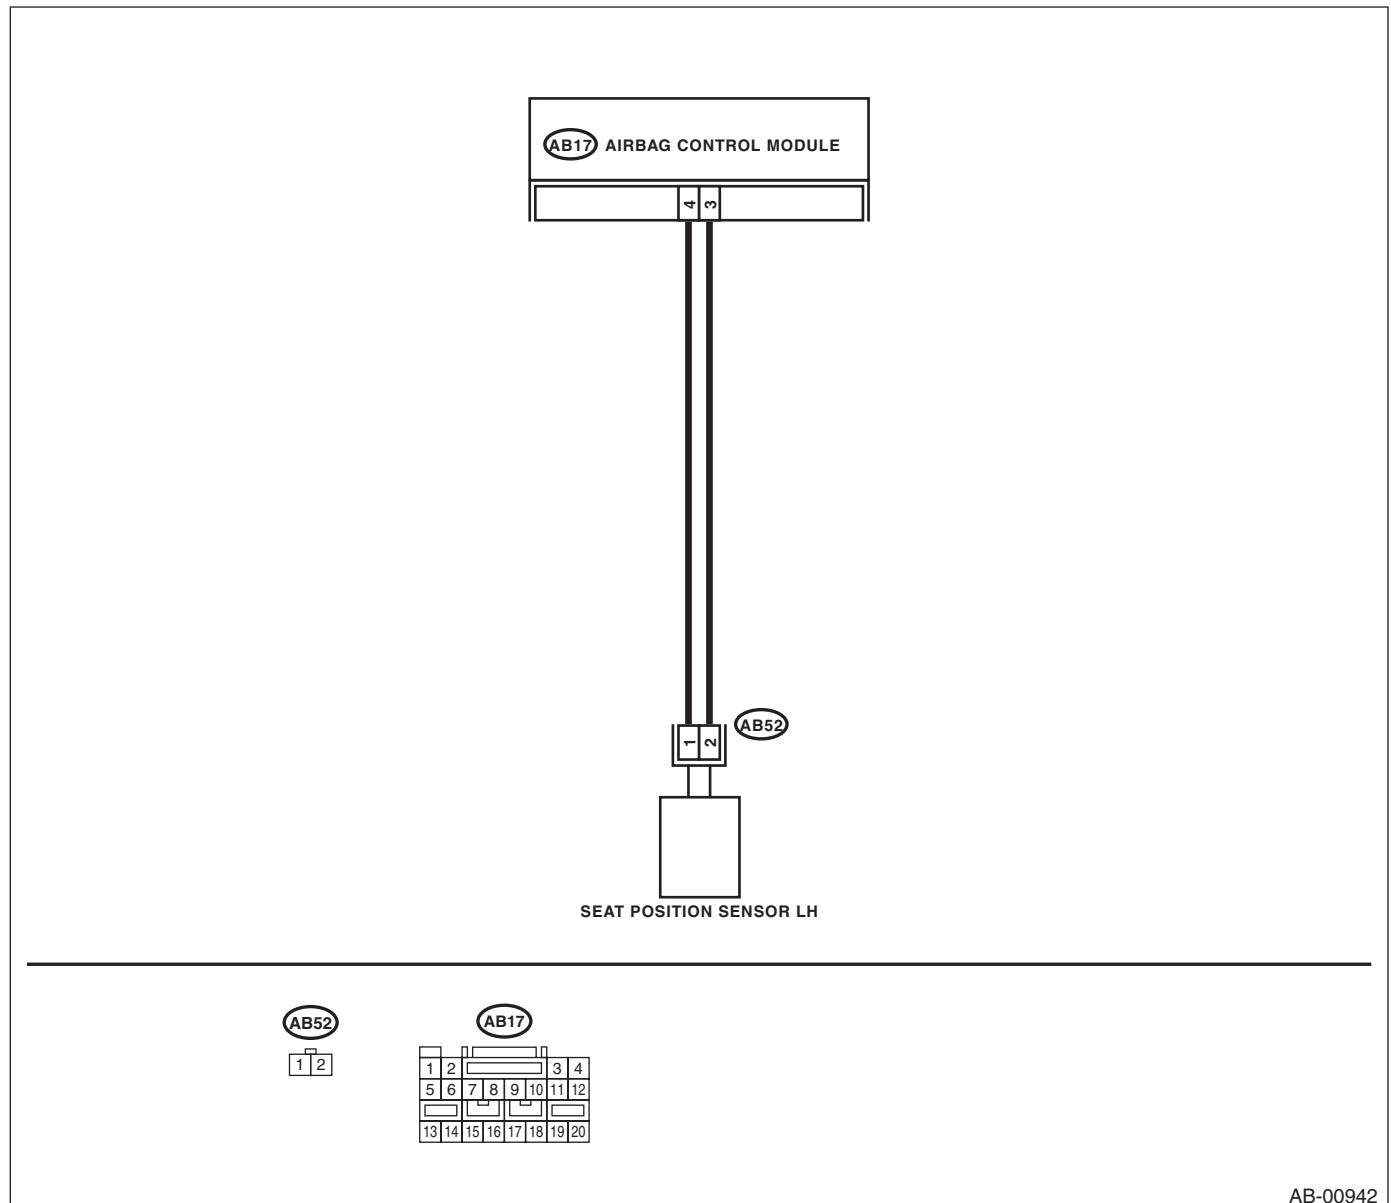

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK SEAT POSITION SENSOR (LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB52) from the seat position sensor (LH). 3) Connect the connector (2Y) in the test harness Y to connector (AB52). 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the seat position sensor (LH) along with the driver's seat slide rail assembly. <Ref. to SE-9, Front Seat.>	Go to step 2.
2 CHECK AIRBAG REAR HARNESS (SEAT POSITION SENSOR HARNESS (LH)). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB23) from side airbag module (LH). 3) Disconnect the connector (AB31) from curtain airbag module (LH). 4) Disconnect the connector (AB21) from seat belt pretensioner (LH). 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Disconnect the seat position sensor (LH), and then connect the connector (1H) in the test harness H to connector (AB52). 8) Measure the resistance between connector (3U) in the test harness U and connector (3H) in the test harness H. Connector & terminal (3U) No. 1 — (3H) No. 6: (3U) No. 3 — (3H) No. 5:	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness along with body harness.
3 CHECK AIRBAG REAR HARNESS. Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 1 — Chassis ground:	Is the resistance less than 10 Ω ?	Replace the airbag rear harness along with body harness.	Replace the airbag control module.

U: DTC 37 BUCKLE SWITCH RH FAILURE

NOTE:

Refer to "Occupant Detection System" for DTC 37. <Ref. to OD(diag)-29, DTC 37 BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

V: DTC 38 BUCKLE SWITCH LH FAILURE


DTC DETECTING CONDITION:

- Driver's buckle switch circuit is open, shorted or shorted to ground.
- Airbag rear harness circuit is open, shorted or shorted to ground.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag harness, disconnect the airbag module connector and seat belt pretensioner for safety.

WIRING DIAGRAM:

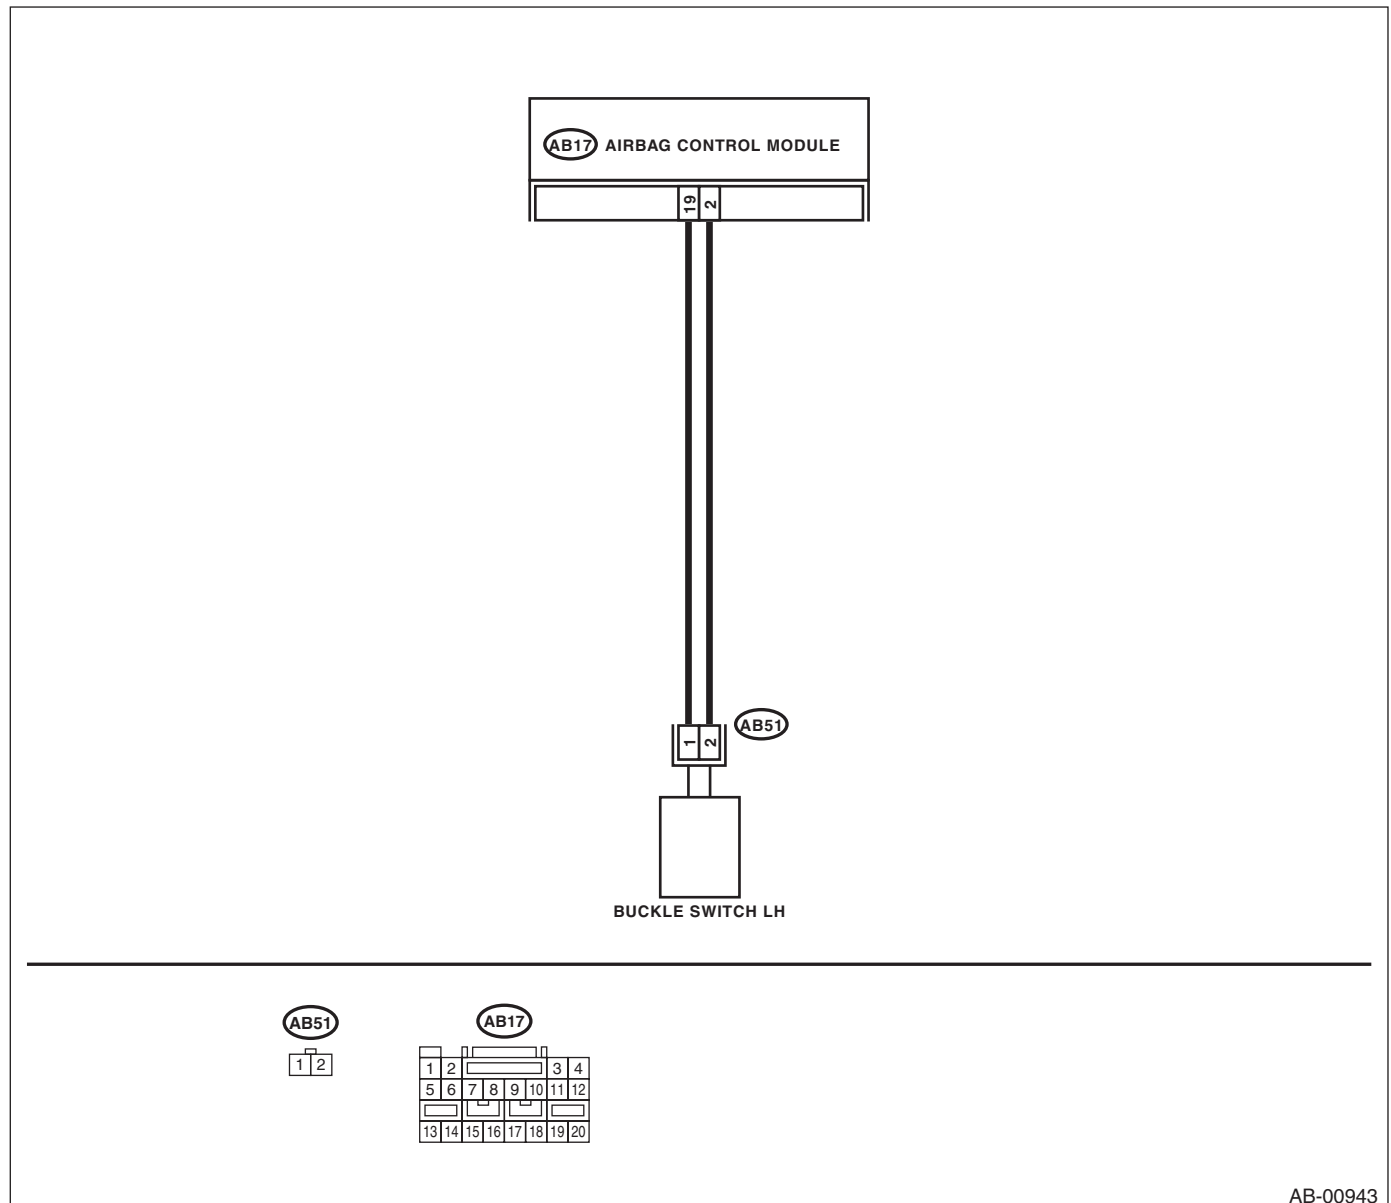

AB-00943

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK SEAT BELT BUCKLE SWITCH (LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB51) from buckle switch (LH). 3) Connect the connector (1Y) in the test harness Y to connector (AB51). 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the seat belt buckle switch (LH). <Ref. to SB-10, Front Seat Belt.>	Go to step 2.
2 CHECK AIRBAG REAR HARNESS (BUCKLE SWITCH HARNESS (LH)). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB23) from side airbag module (LH). 3) Disconnect the connector (AB31) from curtain airbag module (LH). 4) Disconnect the connector (AB21) from seat belt pretensioner (LH). 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Disconnect the seat belt buckle switch (LH), and then connect the connector (1D) in the test harness D to connector (AB51). 8) Measure the resistance between connectors (4U) and (5U) in the test harness U and connector (3D) in the test harness D. Connector & terminal (4U) No. 11 — (3D) No. 3: (4U) No. 9 — (3D) No. 4:	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness along with body harness.
3 CHECK AIRBAG REAR HARNESS. Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (4U) No. 9 — (4U) No. 11: (4U) No. 9 — Chassis ground:	Is the resistance less than 10 Ω ?	Replace the airbag rear harness along with body harness.	Replace the airbag control module.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

W: DTC 39 SEAT BELT WARNING FAILURE


DTC DETECTING CONDITION:

- Airbag control module is faulty.
- Body integrated unit is faulty.
- Harness circuits between body integrated unit and airbag control module are open, shorted or shorted to ground.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag harness, disconnect the airbag module connector and seat belt pretensioner for safety.

WIRING DIAGRAM:

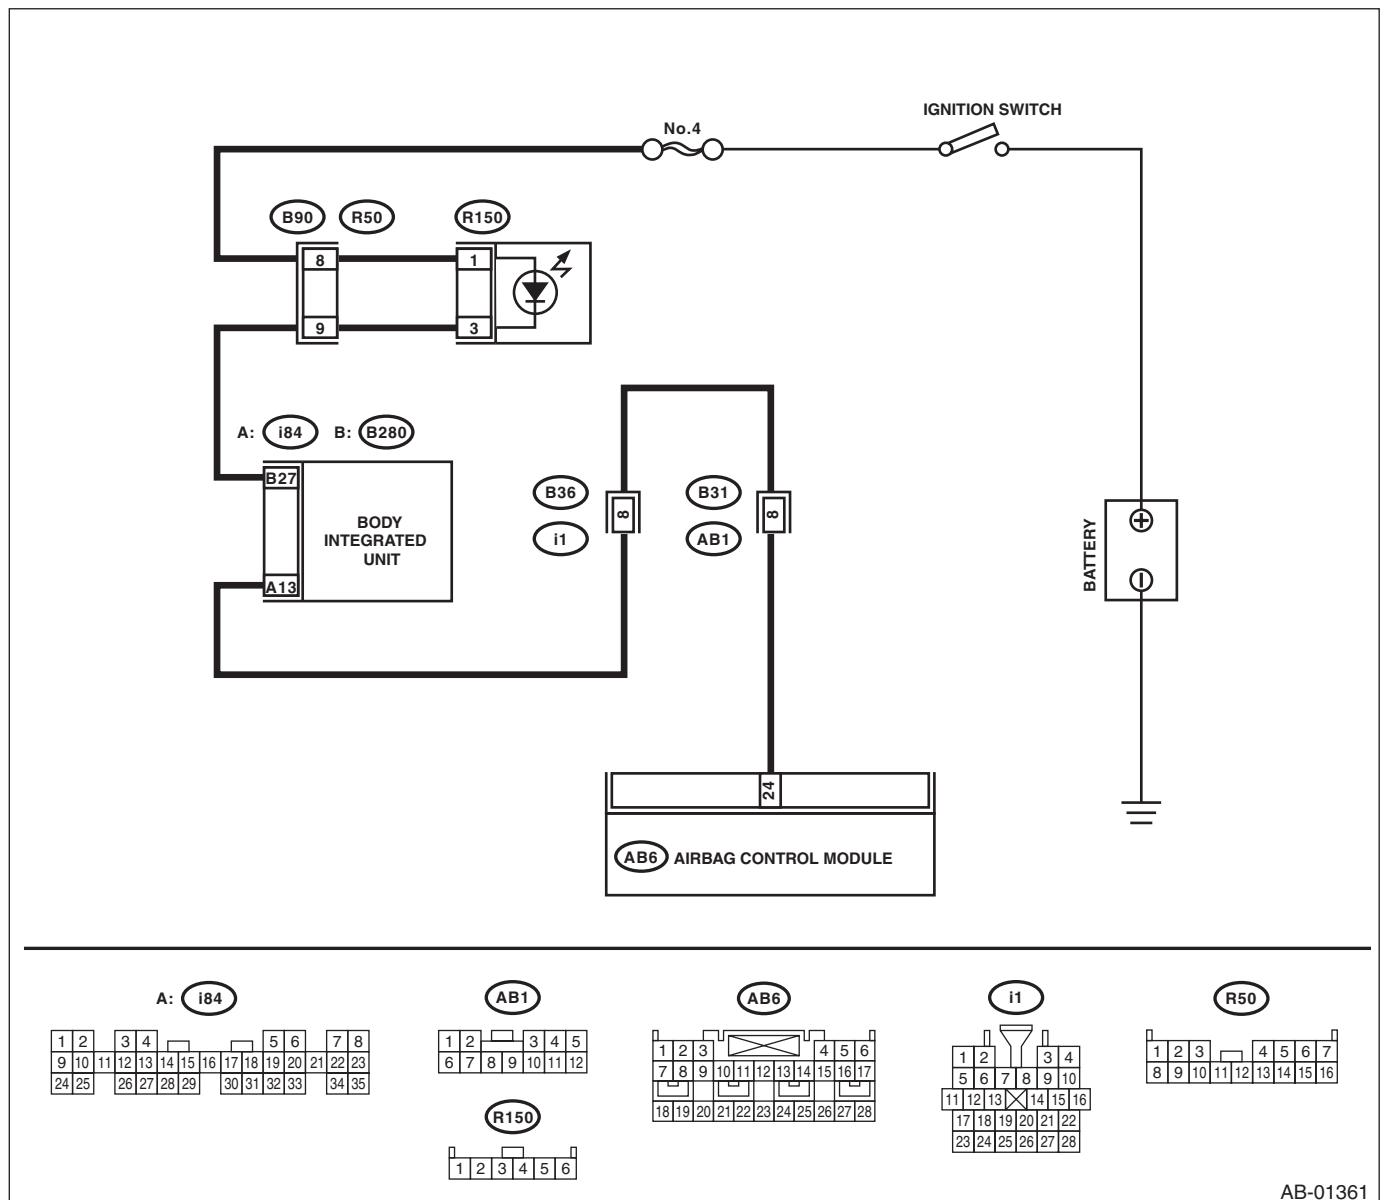

AB-01361

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK AIRBAG HARNESS. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB6) from air-bag control module. 3) Connect the battery ground terminal and turn the ignition switch to ON.	Does the passenger's seat belt warning light blink for 6 seconds and go off?	Go to step 3.	Go to step 2.
2 CHECK AIRBAG HARNESS. 1) Turn the ignition switch to OFF. 2) Connect the connector (1U) in the test harness U to connector (AB6). 3) Measure the resistance between connector (4U) in the test harness U and chassis ground. Connector & terminal (4U) No. 16 — Chassis ground:	Is the resistance more than 1 MΩ?	Replace the body integrated unit.	Repair the bulk-head harness. Or replace the airbag main harness along with body harness.
3 CHECK AIRBAG HARNESS. 1) With the condition of step 2, connect the connectors (7U) and (8U) in the test harness U. 2) Turn the ignition switch to ON.	Does the passenger's seat belt warning light blink for 6 seconds, then repeatedly light and go off?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 4.
4 CHECK AIRBAG HARNESS. 1) With the condition of step 3, disconnect the connectors (7U) and (8U) in the test harness U. 2) Measure the resistance between connector (4U) in the test harness U and the connector (i84). Connector & terminal (4U) No. 16 — (i84) No. 13:	Is the resistance less than 10 Ω?	Replace the body integrated unit.	Repair the bulk-head harness. Or replace the airbag main harness along with body harness.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

X: DTC 41 SIDE AIRBAG RH FAILURE


DTC DETECTING CONDITION:

- Side airbag harness (RH) is faulty.
- Side airbag module (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

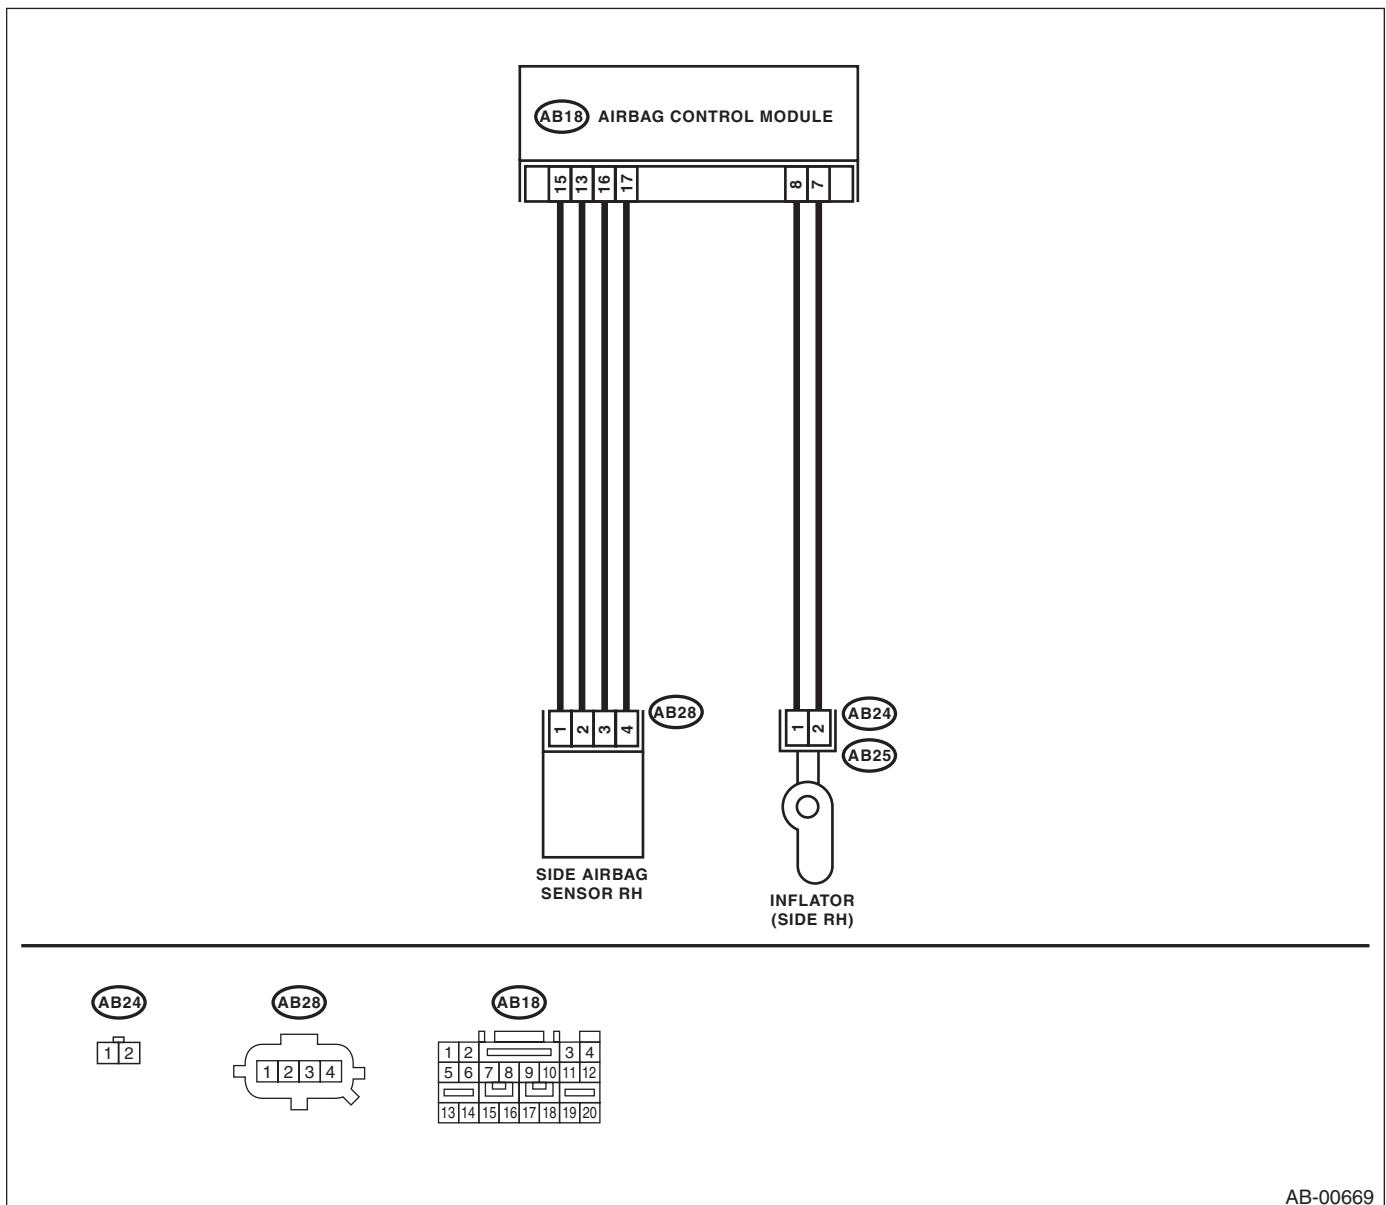

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, side airbag module RH and the side airbag sensor RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SIDE AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB25) from (AB24), and connect the connector (1F) in test harness F to connector (AB24). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the side airbag module (RH). <Ref. to AB-19, REMOVAL, Side Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Disconnect the connector (AB33) from curtain airbag module (RH). 4) Disconnect the airbag resistor from test harness F. 5) Disconnect the connector (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Measure the resistance between connector (3U) in the test harness U and connector (3F) in the test harness F. Connector & terminal (3U) No. 20 — (3F) No. 4: (3U) No. 18 — (3F) No. 3:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS RH). Measure the resistance between connector (3U) terminals in the test harness U. Connector & terminal (3U) No. 20 — (3U) No. 18:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag rear harness along with body harness.
5 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS RH). Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 20 — Chassis ground: (3U) No. 18 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 6.	Replace the airbag rear harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Y: DTC 42 SIDE AIRBAG LH FAILURE


DTC DETECTING CONDITION:

- Side airbag harness (LH) is faulty.
- Side airbag module (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

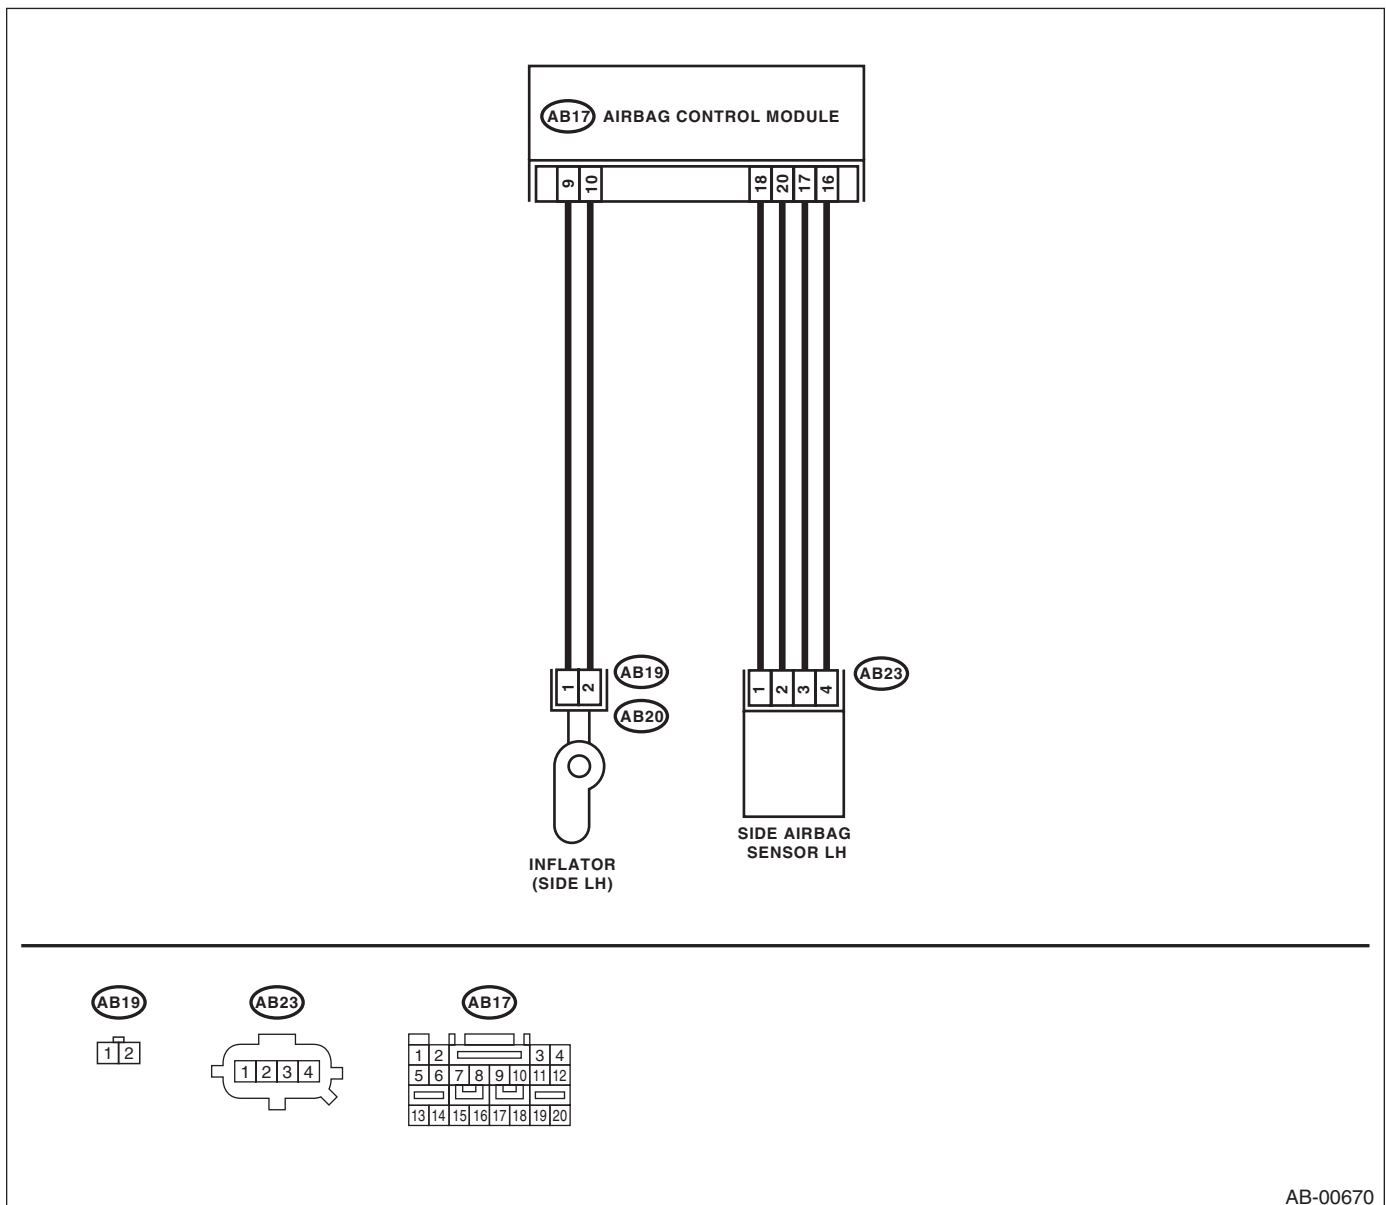

AB-00670

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, side airbag module LH and the side airbag sensor LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SIDE AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB20) from (AB19), and connect the connector (1F) in test harness F to connector (AB19). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the side airbag module (LH). <Ref. to AB-19, REMOVAL, Side Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Disconnect the connector (AB31) from curtain airbag module (LH). 4) Disconnect the airbag resistor from test harness. 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Measure the resistance between connector (3U) in the test harness U and connector (3F) in the test harness F. Connector & terminal (3U) No. 12 — (3F) No. 4: (3U) No. 10 — (3F) No. 3:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS LH). Measure the resistance between connector (3U) terminals in the test harness U. Connector & terminal (3U) No. 12 — (3U) No. 10:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag rear harness along with body harness.
5 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS LH). Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 12 — Chassis ground: (3U) No. 10 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 6.	Replace the airbag rear harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Z: DTC 45 SIDE AIRBAG RH FAILURE


DTC DETECTING CONDITION:

- Side airbag harness (RH) is shorted to power supply.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

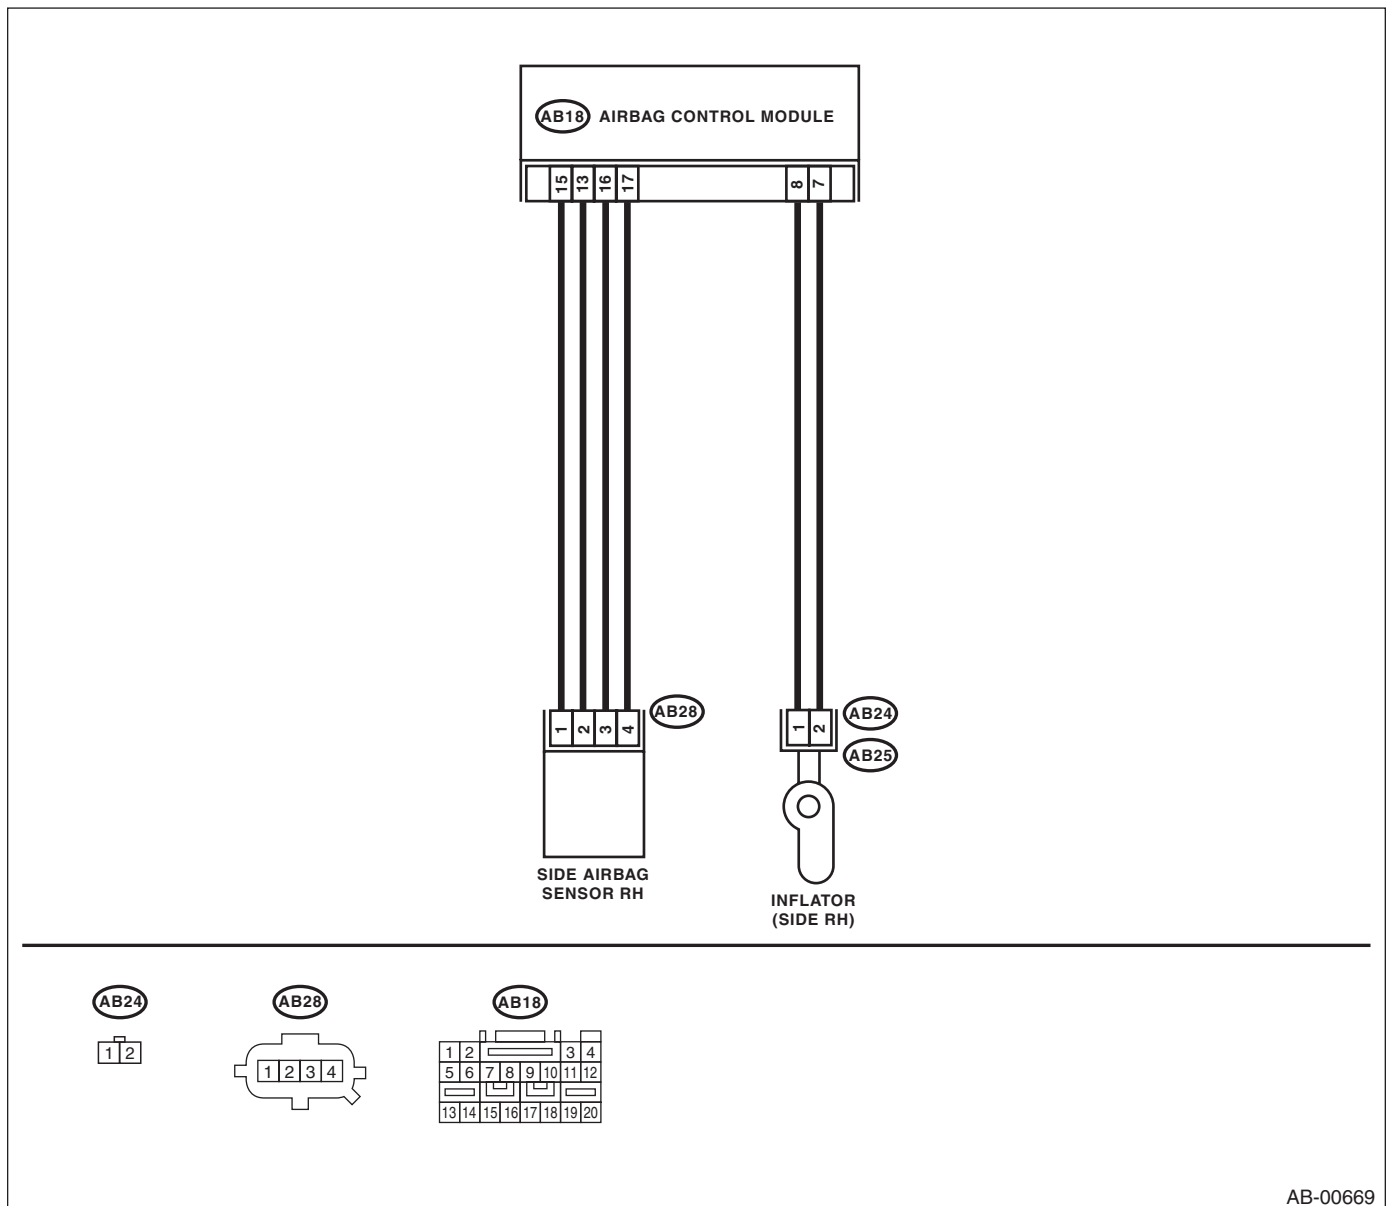

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, side airbag module RH and the side airbag sensor RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SIDE AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB25) from (AB24), and connect the connector (1F) in test harness F to connector (AB24). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the side airbag module (RH). <Ref. to AB-19, REMOVAL, Side Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Disconnect the connector (AB33) from curtain airbag module (RH). 4) Disconnect the airbag resistor from test harness. 5) Disconnect the connector (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Connect the battery ground terminal and turn the ignition switch to ON. 8) Measure the voltage between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 20 (+) — Chassis ground (-): (3U) No. 18 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AA:DTC 46 SIDE AIRBAG LH FAILURE


DTC DETECTING CONDITION:

- Side airbag harness (LH) is shorted to power supply.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

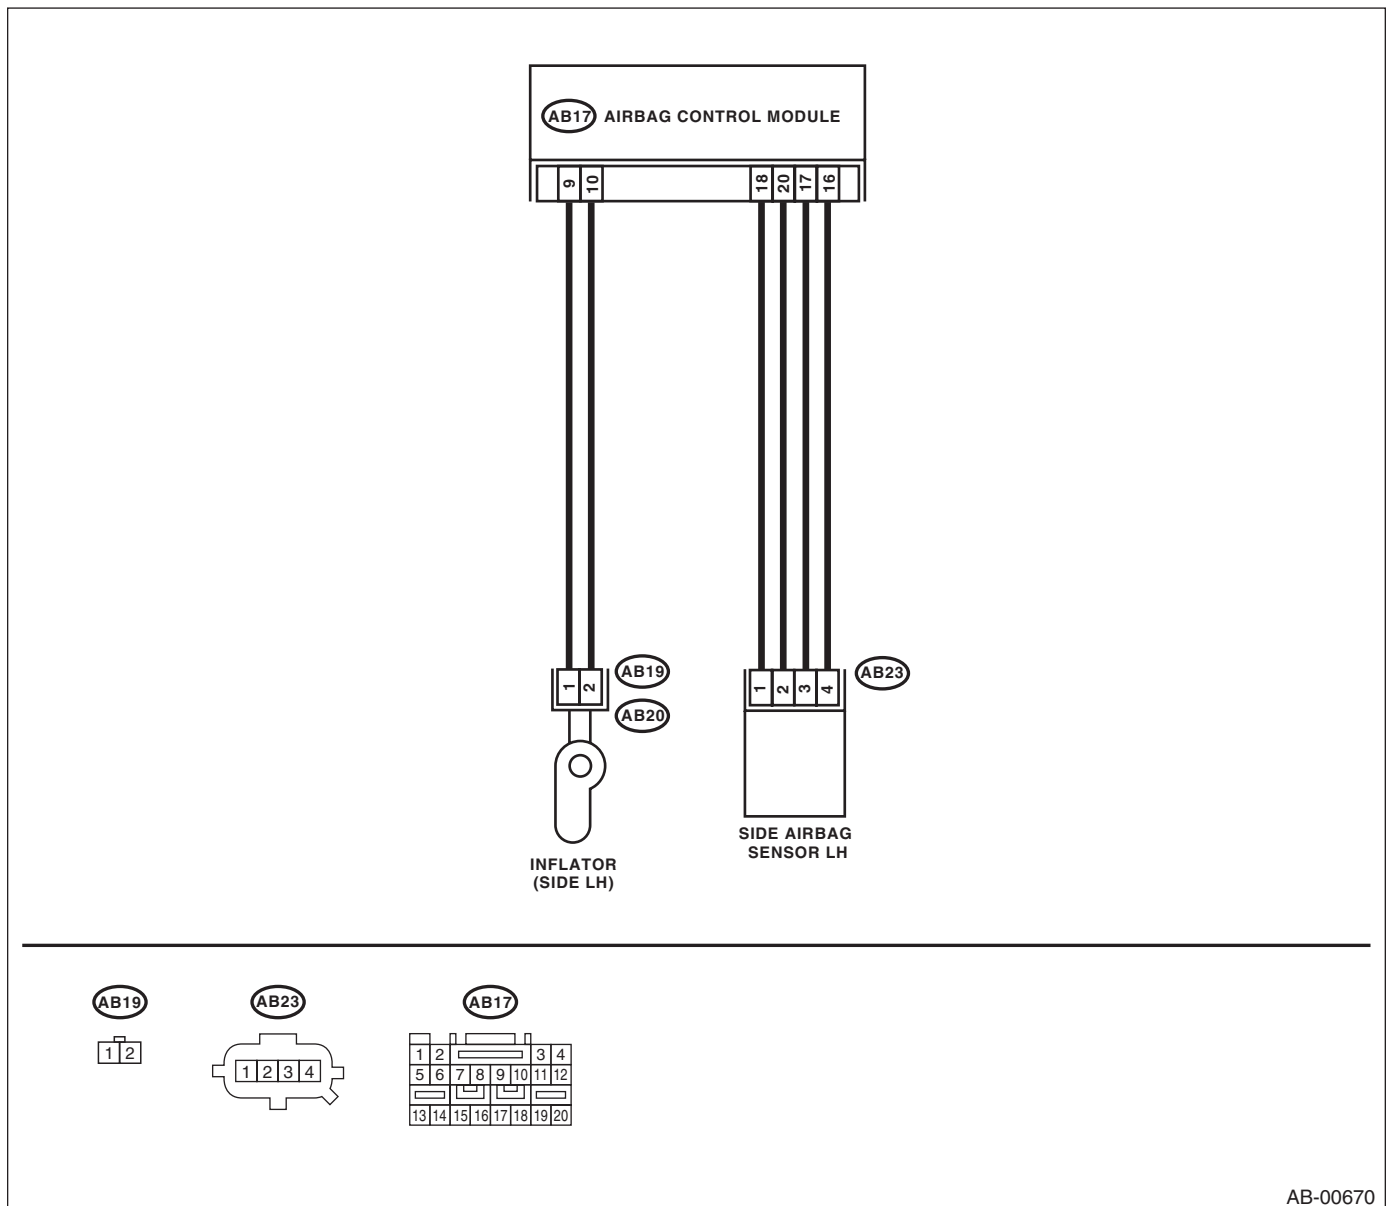

AB-00670

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, side airbag module LH and the side airbag sensor LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SIDE AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB20) from (AB19), and connect the connector (1F) in test harness F to connector (AB19). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the side airbag module (LH). <Ref. to AB-19, REMOVAL, Side Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG MODULE HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Disconnect the connector (AB31) from curtain airbag module (LH). 4) Disconnect the airbag resistor from test harness. 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Connect the battery ground terminal and turn the ignition switch to ON. 8) Measure the voltage between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 12 (+) — Chassis ground (-): (3U) No. 10 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AB:DTC 51 SIDE AIRBAG SENSOR RH FAILURE


DTC DETECTING CONDITION:

- Side airbag sensor (RH) is faulty.
- Side airbag harness (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

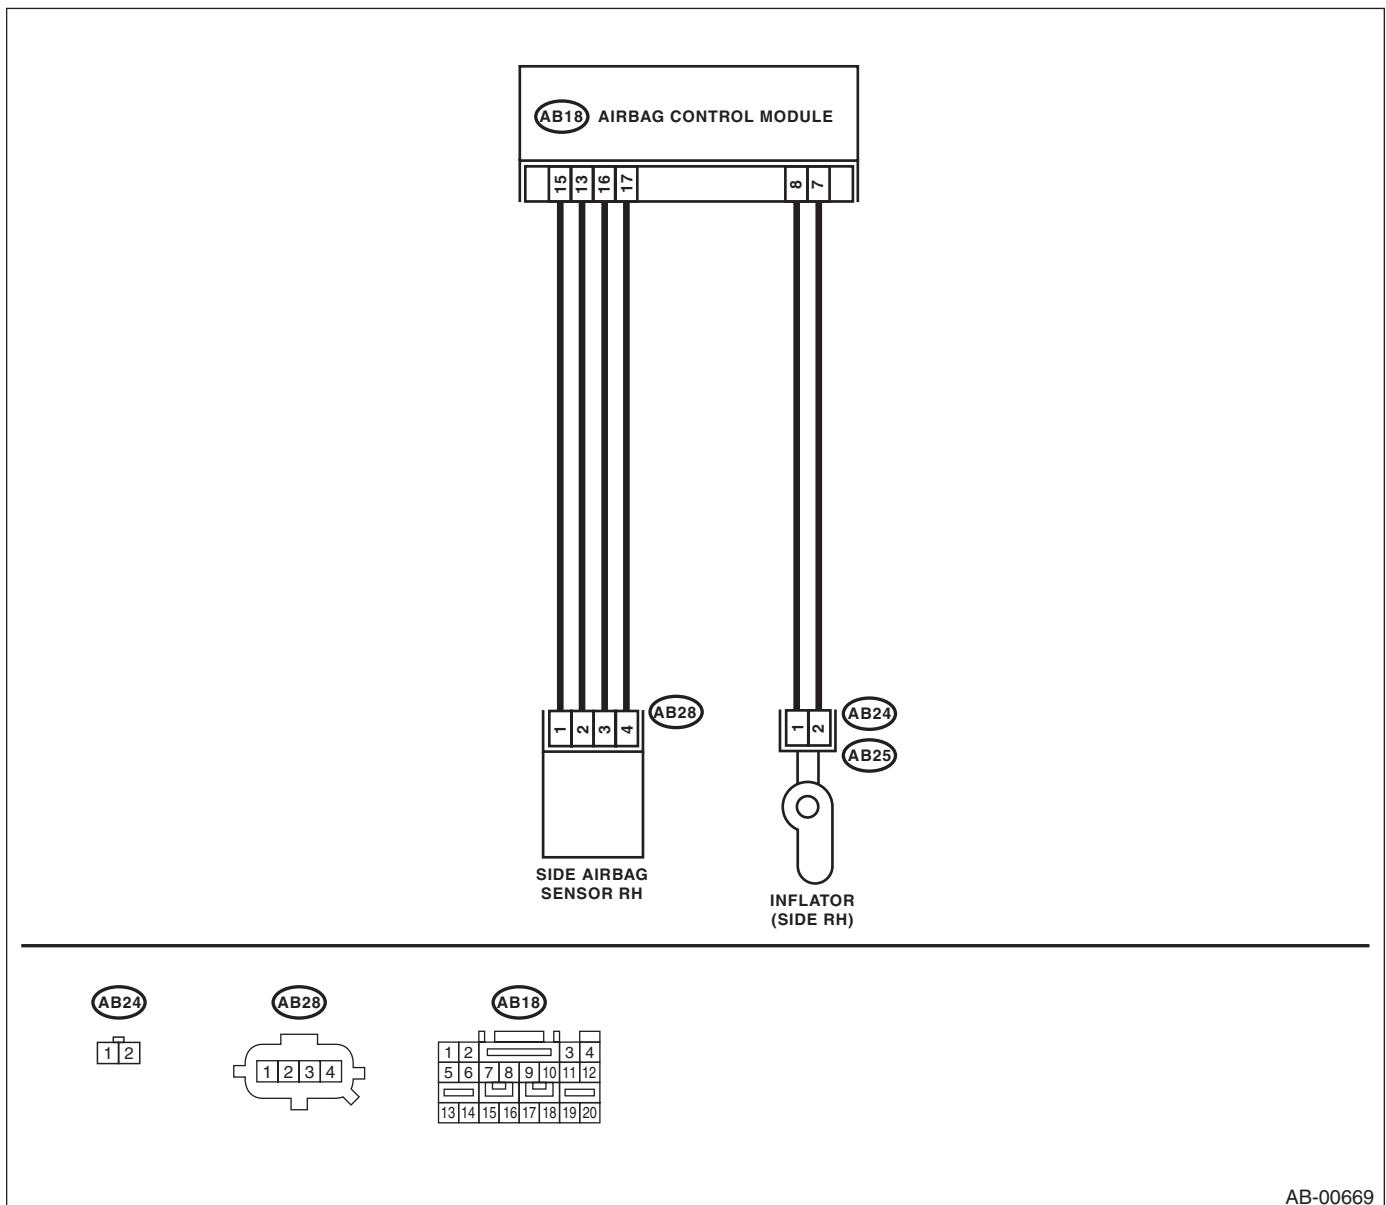

AB-00669

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, side airbag module RH and the side airbag sensor RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG SENSOR HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Disconnect the connector (AB33) from curtain airbag module (RH). 4) Disconnect the connector (AB25) from (AB24). 5) Disconnect the connector (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Disconnect the connector (AB28) from side airbag sensor (RH), and connect the connector (2V) in test harness V to connector (AB28). 8) Measure the resistance between connector (4U) in the test harness U and connector (3V) in the test harness V. Connector & terminal (4U) No. 5 — (3V) No. 2: (4U) No. 7 — (3V) No. 1: (4U) No. 8 — (3V) No. 5: (4U) No. 6 — (3V) No. 4:	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness along with body harness.
3 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG SENSOR HARNESS RH). Measure the resistance between connector (4U) in the test harness U and chassis ground. Connector & terminal (4U) No. 5 — Chassis ground: (4U) No. 7 — Chassis ground: (4U) No. 8 — Chassis ground: (4U) No. 6 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the side airbag sensor (RH). <Ref. to AB-24, Side Airbag Sensor.> Replace the airbag control module if not operating normally even after replacing the sensor. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AC:DTC 52 SIDE AIRBAG SENSOR LH FAILURE


DTC DETECTING CONDITION:

- Side airbag sensor (LH) is faulty.
- Side airbag harness (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

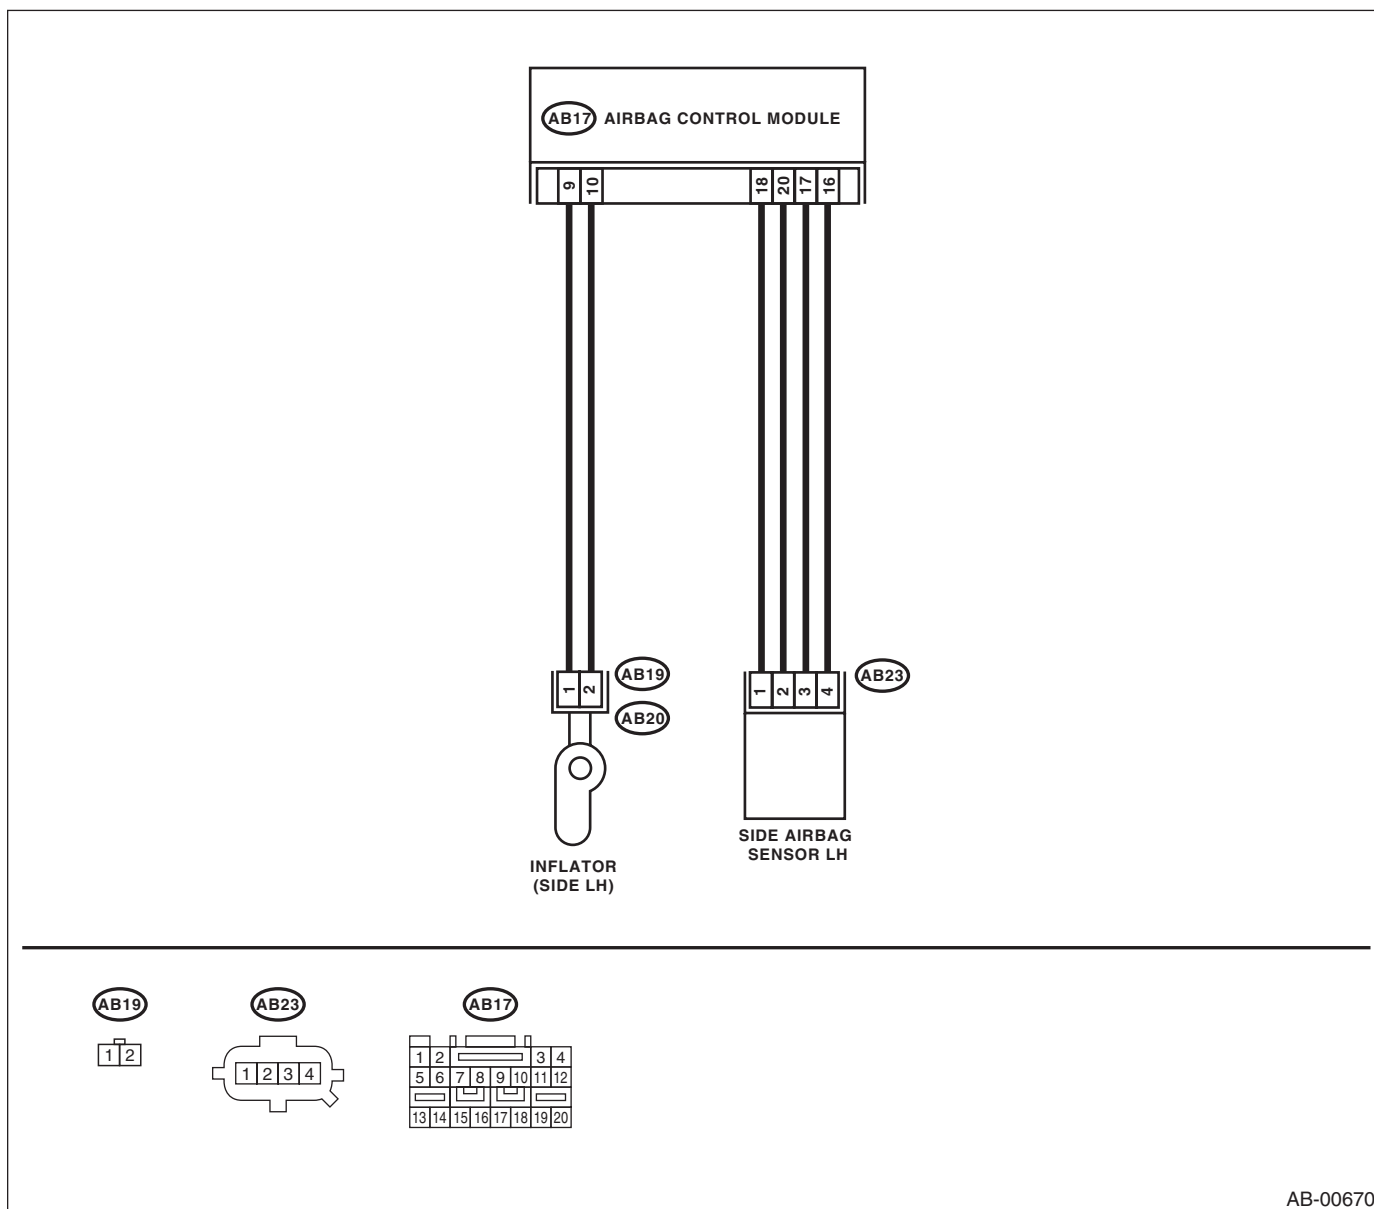

AB-00670

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, side airbag module LH and the side airbag sensor LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG SENSOR HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Disconnect the connector (AB31) from curtain airbag module (LH). 4) Disconnect the connector (AB20) from (AB19). 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Disconnect the connector (AB23) from side airbag sensor (LH), and connect the connector (2V) in test harness V to connector (AB23). 8) Measure the resistance between connector (4U) in the test harness U and connector (3V) in the test harness V. Connector & terminal (4U) No. 3 — (3V) No. 4: (4U) No. 1 — (3V) No. 5: (4U) No. 2 — (3V) No. 1: (4U) No. 4 — (3V) No. 2:	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness along with body harness.
3 CHECK AIRBAG REAR HARNESS (SIDE AIRBAG SENSOR HARNESS LH). Measure the resistance between connector (4U) in the test harness U and chassis ground. Connector & terminal (4U) No. 3 — Chassis ground: (4U) No. 1 — Chassis ground: (4U) No. 2 — Chassis ground: (4U) No. 4 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the side airbag sensor (LH). <Ref. to AB-24, Side Airbag Sensor.> Replace the airbag control module if not operating normally even after replacing the sensor. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AD:DTC 53 SIDE AIRBAG SENSOR RH FAILURE

DTC DETECTING CONDITION:

Side airbag sensor (RH) is faulty.

When DTC 53 is displayed, the circuit within the side airbag sensor (RH) is faulty. Replace the side airbag sensor (RH). <Ref. to AB-24, Side Airbag Sensor.>

AE:DTC 54 SIDE AIRBAG SENSOR LH FAILURE

DTC DETECTING CONDITION:

Side airbag sensor (LH) is faulty.

When DTC 54 is displayed, the circuit within the side airbag sensor (LH) is faulty. Replace the side airbag sensor (LH). <Ref. to AB-24, Side Airbag Sensor.>

AF:DTC 55 SIDE CURTAIN AIRBAG FIRING OUTPUT

This DTC is displayed when the side airbag module and curtain airbag module are deployed.

Once this DTC is displayed, the memory cannot be cleared. Replace the following parts.

- Airbag control module <Ref. to AB-23, Airbag Control Module.>
- Front seat with side airbag module (Operating side) <Ref. to SE-9, Front Seat.>
- Side airbag sensor (Operating side) <Ref. to AB-24, Side Airbag Sensor.>
- Curtain airbag module (Operating side) <Ref. to AB-21, Curtain Airbag Module.>
- Curtain airbag sensor (Operating side) <Ref. to AB-25, Curtain Airbag Sensor.>

AG:DTC 56 CURTAIN AIRBAG SENSOR RH FAILURE

DTC DETECTING CONDITION:

- Curtain airbag sensor (RH) is faulty.
- Curtain airbag harness (RH) is faulty.
- Airbag control module is faulty.


CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

WIRING DIAGRAM:

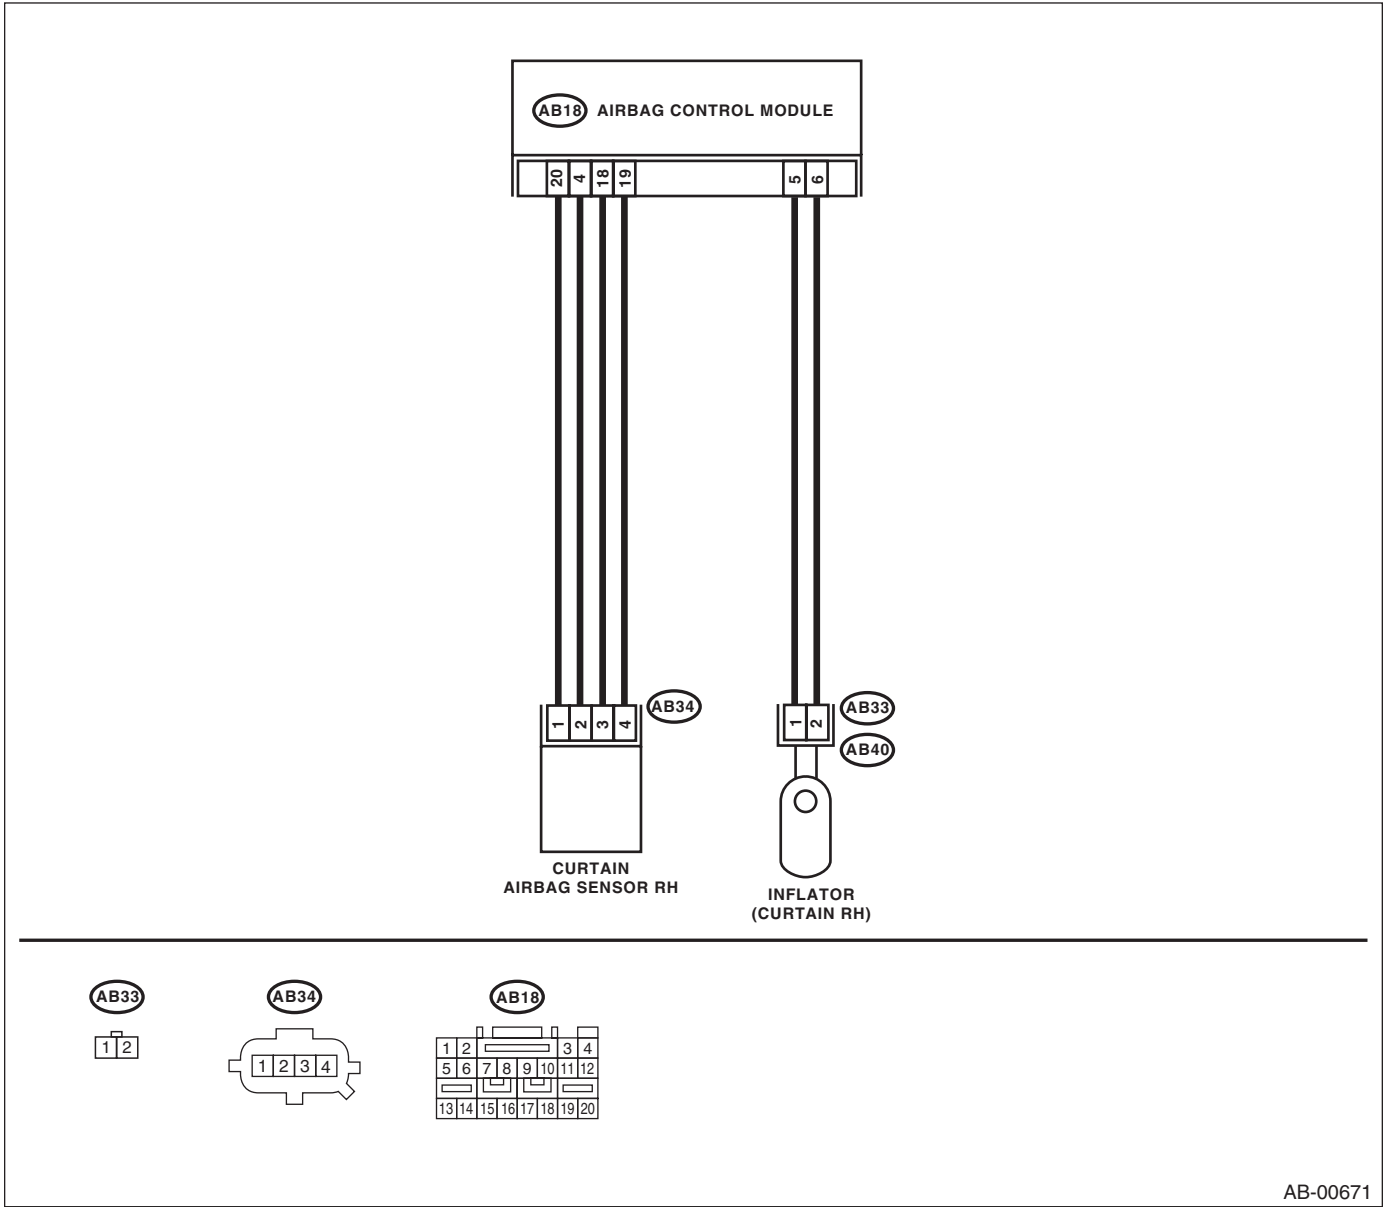

AB-00671

Step	Check	Yes	No
1	CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, curtain airbag module RH and the curtain airbag sensor RH.	Is there poor contact? Replace the airbag rear harness along with body harness.	Go to step 2.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
2 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG SENSOR HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Disconnect the connector (AB24) from side airbag module (RH). 4) Disconnect the connector (AB33) from (AB40). 5) Disconnect the connector (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Disconnect the connector (AB34) from curtain airbag sensor (RH), and connect the connector (2V) in test harness V to connector (AB34). 8) Measure the resistance between connector (5U) in the test harness U and connector (3V) in the test harness V. Connector & terminal <i>(5U) No. 14 — (3V) No. 4:</i> <i>(5U) No. 16 — (3V) No. 5:</i> <i>(5U) No. 15 — (3V) No. 1:</i> <i>(5U) No. 13 — (3V) No. 2:</i>	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness along with body harness.
3 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG SENSOR HARNESS RH). Measure the resistance between connector (5U) in the test harness U and chassis ground. Connector & terminal <i>(5U) No. 14 — Chassis ground:</i> <i>(5U) No. 16 — Chassis ground:</i> <i>(5U) No. 15 — Chassis ground:</i> <i>(5U) No. 13 — Chassis ground:</i>	Is the resistance more than 1 M Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the curtain airbag sensor (RH). <Ref. to AB-25, Curtain Airbag Sensor.> Replace the airbag control module if not operating normally even after replacing the sensor. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

AH:DTC 57 CURTAIN AIRBAG SENSOR LH FAILURE


DTC DETECTING CONDITION:

- Curtain airbag sensor (LH) is faulty.
- Curtain airbag harness (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

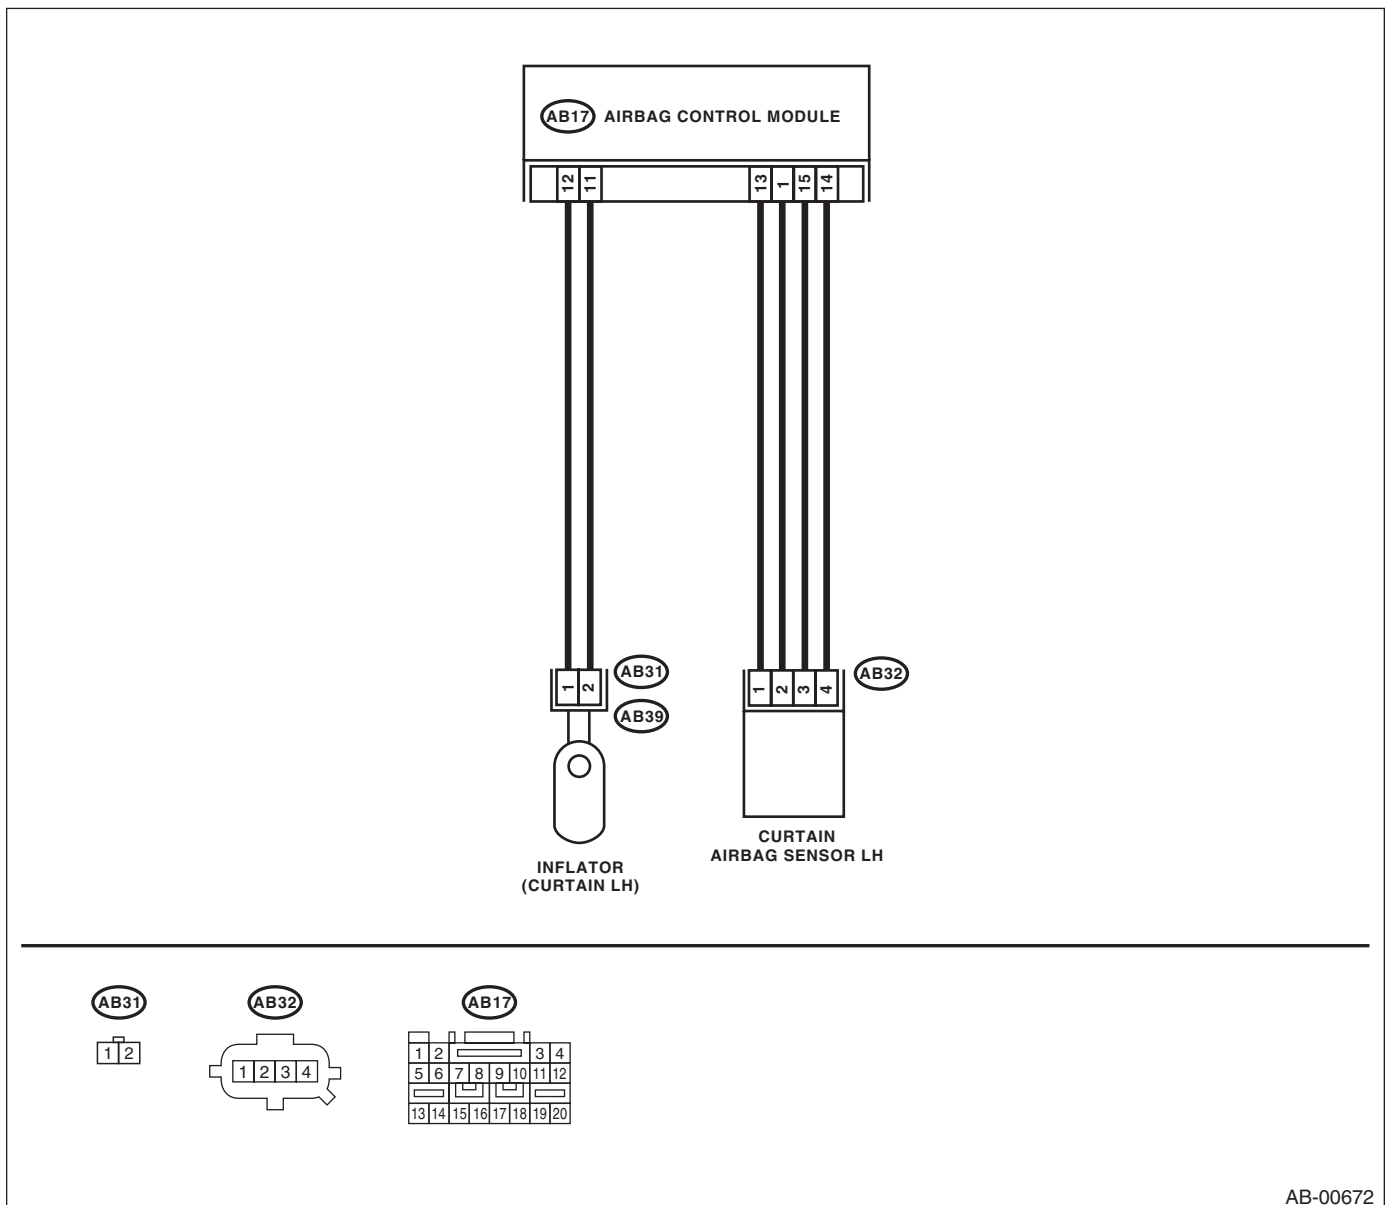

AB-00672

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, curtain airbag module LH and the curtain airbag sensor LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG SENSOR HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Disconnect the connector (AB19) from side airbag module (LH). 4) Disconnect the connector (AB31) from (AB39). 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Disconnect the connector (AB32) from curtain airbag sensor (LH), and connect the connector (2V) in test harness V to connector (AB32). 8) Measure the resistance between connector (5U) in the test harness U and connector (3V) in the test harness V. Connector & terminal (5U) No. 11 — (3V) No. 4: (5U) No. 9 — (3V) No. 5: (5U) No. 10 — (3V) No. 1: (5U) No. 12 — (3V) No. 2:	Is the resistance less than 10 Ω ?	Go to step 3.	Replace the airbag rear harness along with body harness.
3 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG SENSOR HARNESS LH). Measure the resistance between connector (5U) in the test harness U and chassis ground. Connector & terminal (5U) No. 11 — Chassis ground: (5U) No. 9 — Chassis ground: (5U) No. 10 — Chassis ground: (5U) No. 12 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the curtain airbag sensor (LH). <Ref. to AB-25, Curtain Airbag Sensor.> Replace the airbag control module if not operating normally even after replacing the sensor. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

AI: DTC 58 CURTAIN AIRBAG SENSOR RH FAILURE

DTC DETECTING CONDITION:

Curtain airbag sensor (RH) is faulty.

If DTC 58 is displayed, the circuit within the curtain airbag sensor (RH) is faulty. Replace the curtain airbag sensor (RH). <Ref. to AB-25, Curtain Airbag Sensor.>

AJ:DTC 59 CURTAIN AIRBAG SENSOR LH FAILURE

DTC DETECTING CONDITION:

Curtain airbag sensor (LH) is faulty.

If DTC 59 is displayed, the circuit within the curtain airbag sensor (LH) is faulty. Replace the curtain airbag sensor (LH). <Ref. to AB-25, Curtain Airbag Sensor.>

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AK:DTC 61 BELT PRETENSIONER RH FAILURE


DTC DETECTING CONDITION:

- Seat belt pretensioner (RH) circuit is open, shorted or shorted to ground.
- Airbag control module is faulty.
- Pretensioner is faulty.
- Pretensioner harness is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

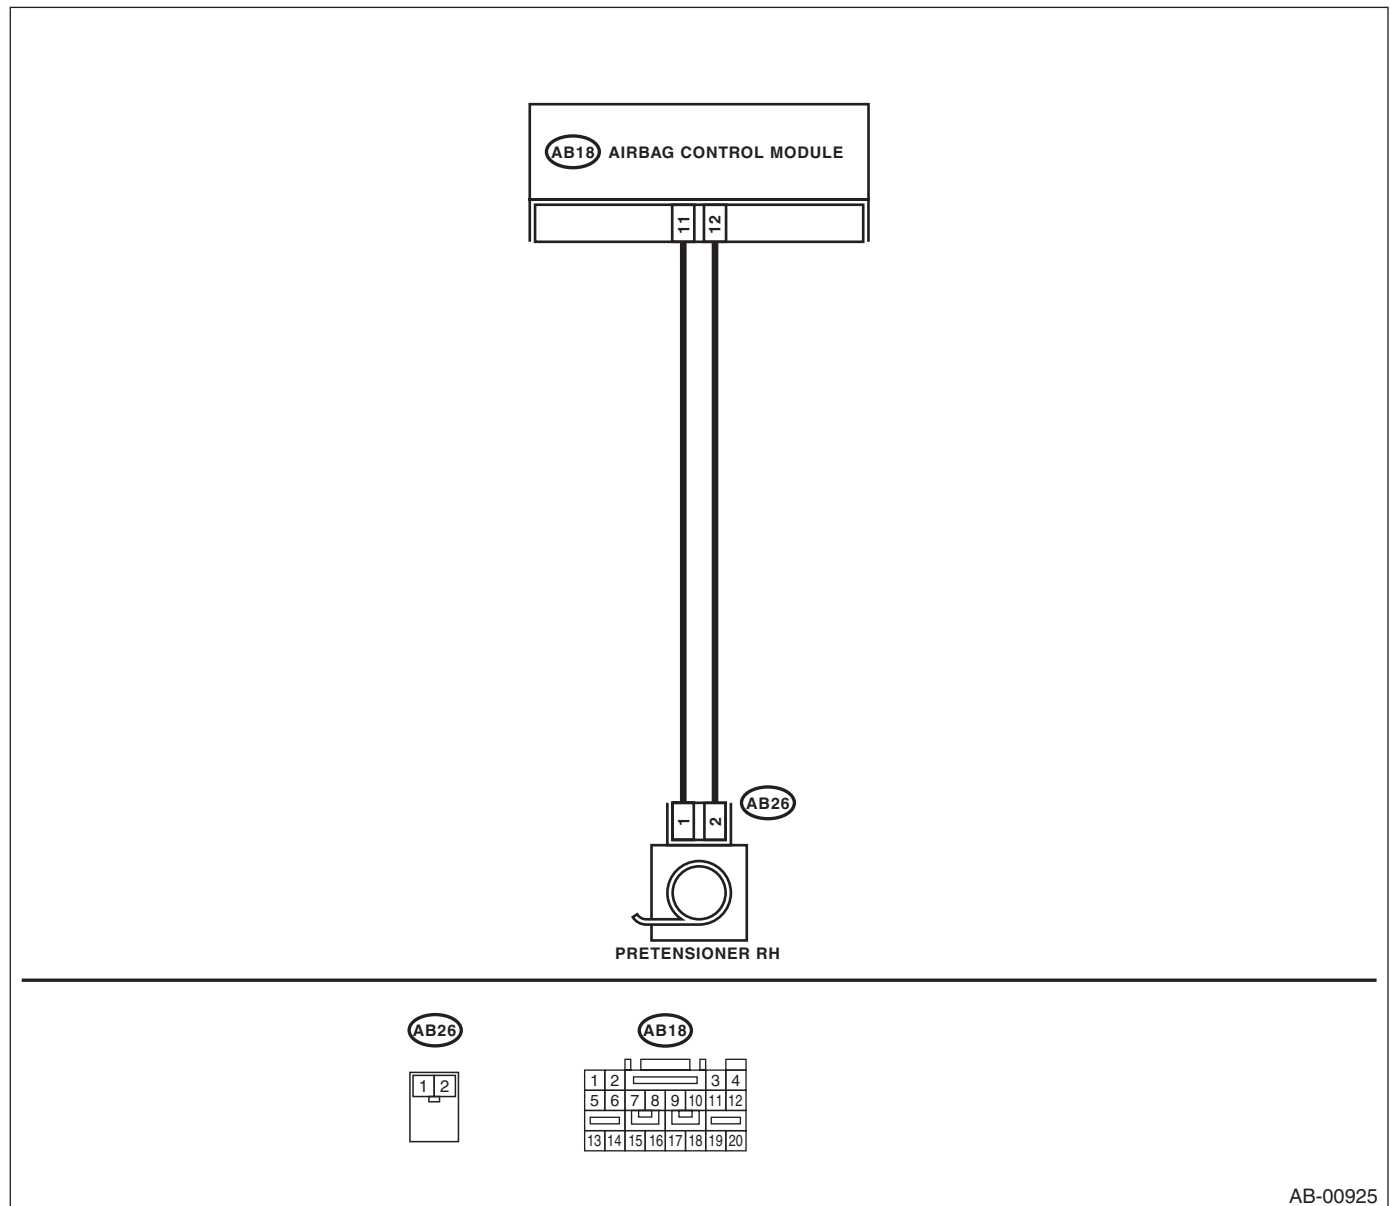

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the seat belt pretensioner RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SEAT BELT PRETENSIONER. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Connect the connector (1N) in the test harness N to the connector (AB26). 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the seat belt pretensioner (RH). <Ref. to SB-10, Front Seat Belt.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from test harness. 3) Disconnect the connector (AB24) from side airbag module (RH). 4) Disconnect the connector (AB33) from curtain airbag module (RH). 5) Disconnect the connectors (AB17) and (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Measure the resistance between connector (3U) in the test harness U and connector (2N) in the test harness N. Connector & terminal (3U) No. 17 — (2N) No. 2: (3U) No. 19 — (2N) No. 1:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS RH). Measure the resistance between connector (3U) terminals in the test harness U. Connector & terminal (3U) No. 19 — (3U) No. 17:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag rear harness along with body harness.
5 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS RH). Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 17 — Chassis ground: (3U) No. 19 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 6.	Replace the airbag rear harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to AB(diag)-43, List of Diagnostic Trou- ble Code (DTC).>	Finish the diagno- sis.

AL:DTC 62 BELT PRETENSIONER LH FAILURE


DTC DETECTING CONDITION:

- Seat belt pretensioner (LH) circuit is open, shorted or shorted to ground.
- Airbag control module is faulty.
- Pretensioner is faulty.
- Pretensioner harness is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

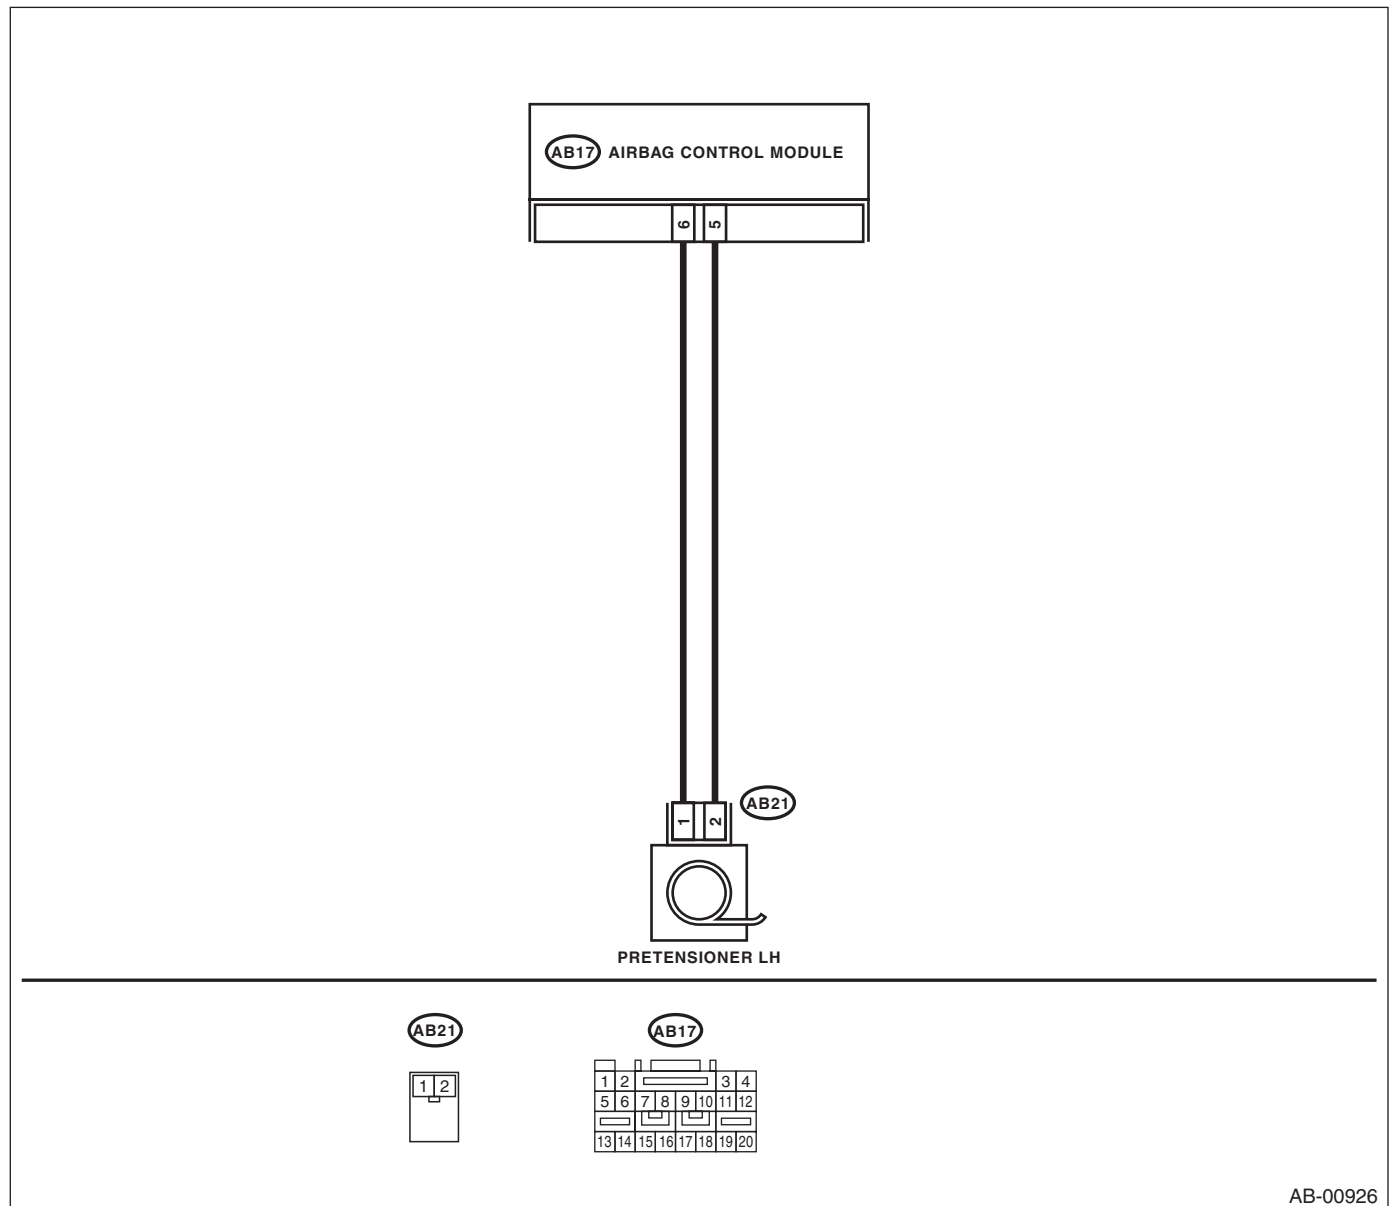

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the seat belt pretensioner LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SEAT BELT PRETENSIONER. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Connect the connector (1N) in the test harness N to the connector (AB21). 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the seat belt pretensioner (LH). <Ref. to SB-10, Front Seat Belt.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from test harness. 3) Disconnect the connector (AB19) from side airbag module (LH). 4) Disconnect the connector (AB31) from curtain airbag module (LH). 5) Disconnect the connectors (AB17) and (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Measure the resistance between connector (3U) in the test harness U and connector (2N) in the test harness N. Connector & terminal (3U) No. 13 — (2N) No. 1: (3U) No. 11 — (2N) No. 2:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS LH). Measure the resistance between connector (3U) terminals in the test harness U. Connector & terminal (3U) No. 11 — (3U) No. 13:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag rear harness along with body harness.
5 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS LH). Measure the resistance between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 11 — Chassis ground: (3U) No. 13 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 6.	Replace the airbag rear harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to AB(diag)-43, List of Diagnostic Trou- ble Code (DTC).>	Finish the diagno- sis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AM:DTC 65 BELT PRETENSIONER RH FAILURE


DTC DETECTING CONDITION:

- Seat belt pretensioner (RH) circuit is shorted to power supply.
- Pretensioner is faulty.
- Pretensioner harness is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

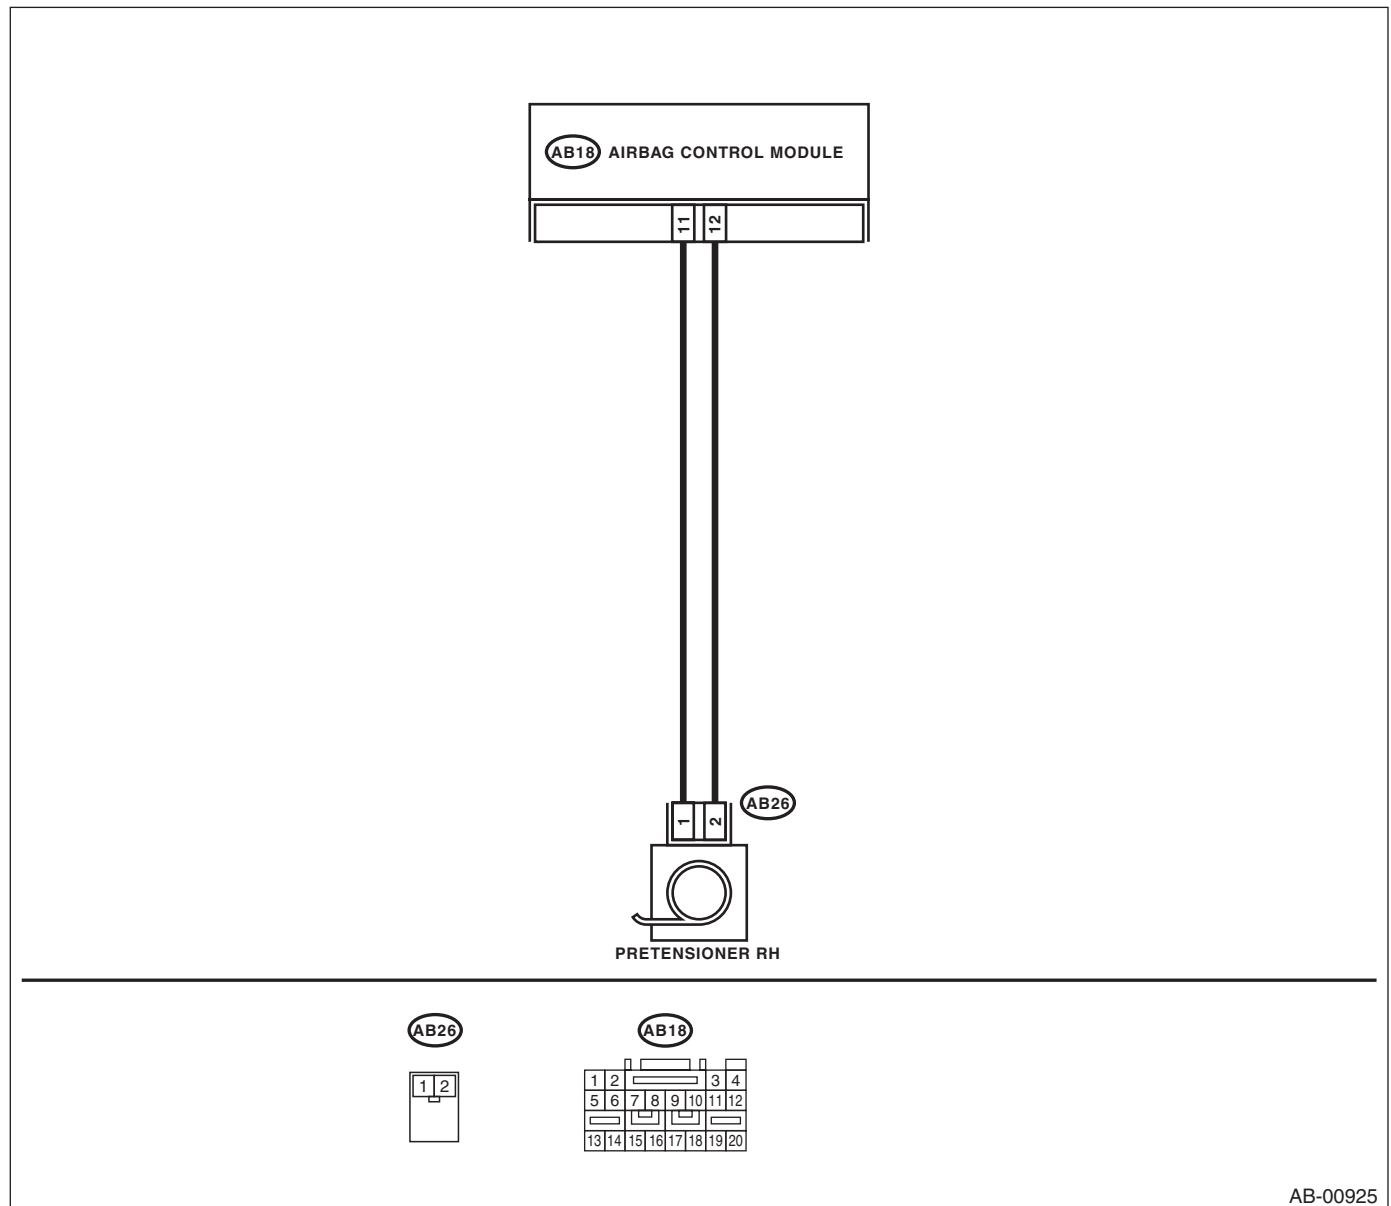

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the seat belt pretensioner RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SEAT BELT PRETENSIONER. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Connect the connector (1N) in the test harness N to the connector (AB26). 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the seat belt pretensioner (RH). <Ref. to SB-10, Front Seat Belt.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from test harness. 3) Disconnect the connector (AB24) from side airbag module (RH). 4) Disconnect the connector (AB33) from curtain airbag module (RH). 5) Disconnect the connectors (AB17) and (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Connect the battery ground terminal and turn the ignition switch to ON. 8) Measure the voltage between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 17 (+) — Chassis ground (-): (3U) No. 19 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AN:DTC 66 BELT PRETENSIONER LH FAILURE


DTC DETECTING CONDITION:

- Seat belt pretensioner (LH) circuit is shorted to power supply.
- Pretensioner is faulty.
- Pretensioner harness is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

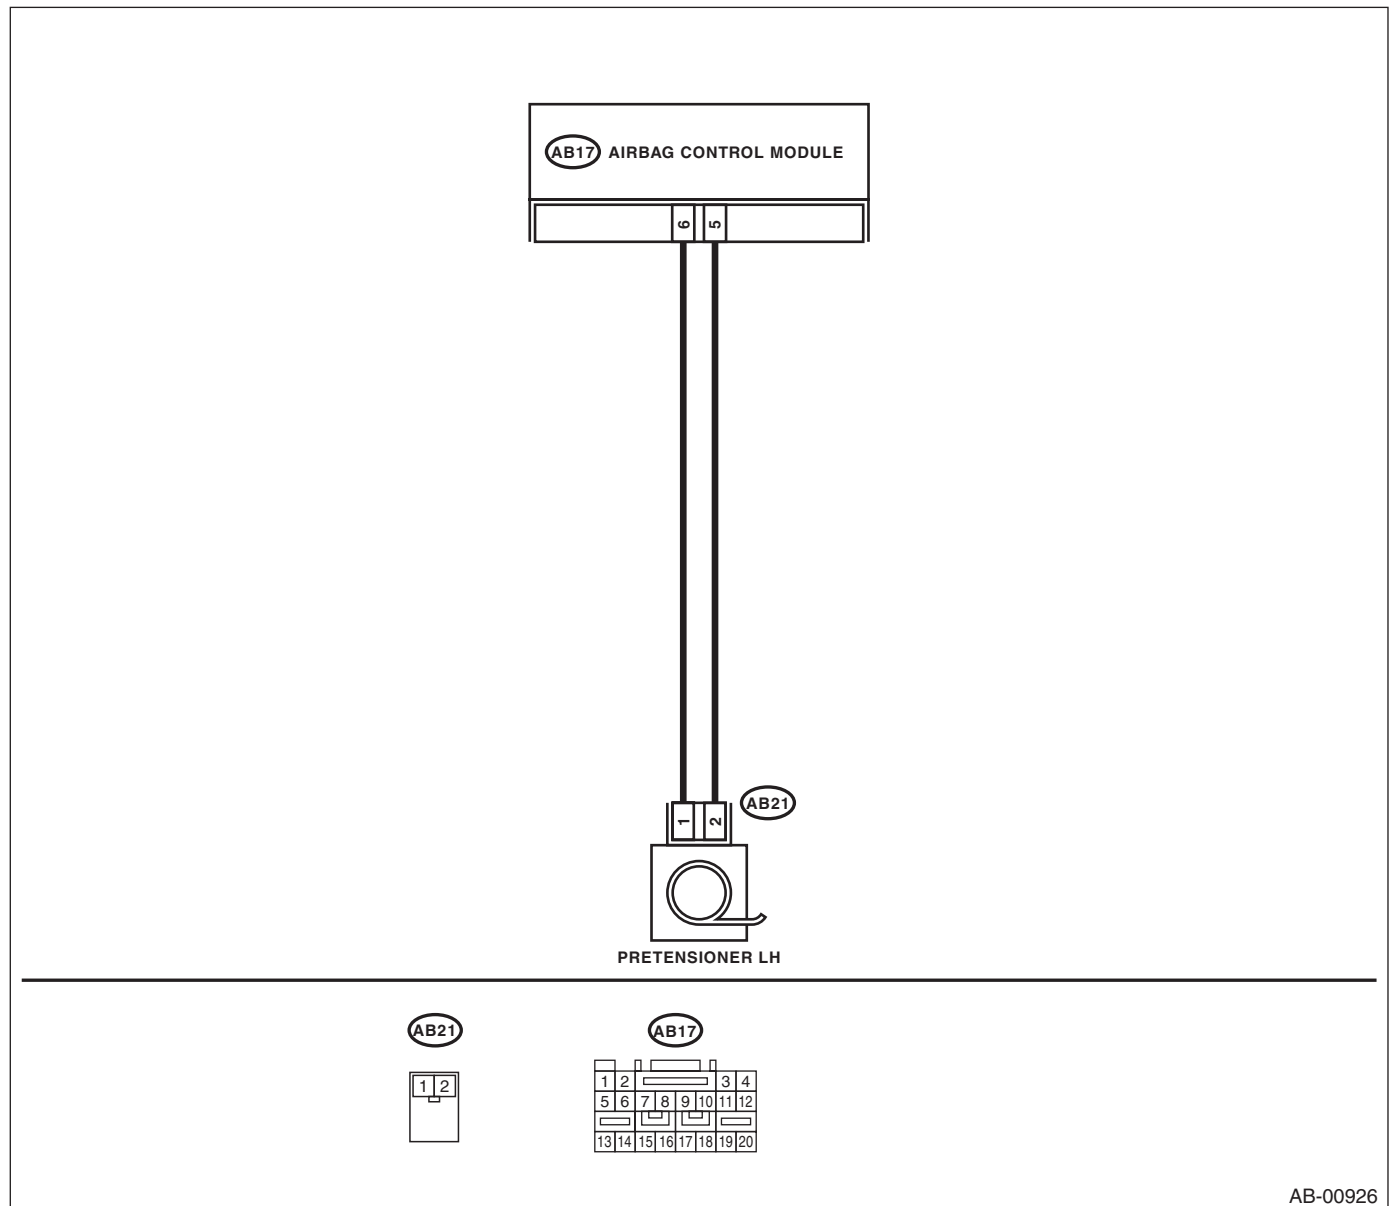

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the seat belt pretensioner LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SEAT BELT PRETENSIONER. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Connect the connector (1N) in the test harness N to the connector (AB21). 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the seat belt pretensioner (LH). <Ref. to SB-10, Front Seat Belt.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (PRE-TENSIONER HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from test harness. 3) Disconnect the connector (AB19) from side airbag module (LH). 4) Disconnect the connector (AB31) from curtain airbag module (LH). 5) Disconnect the connectors (AB17) and (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Connect the battery ground terminal and turn the ignition switch to ON. 8) Measure the voltage between connector (3U) in the test harness U and chassis ground. Connector & terminal (3U) No. 11 (+) — Chassis ground (-): (3U) No. 13 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AO:DTC 71 DRIVER'S AIRBAG FAILURE

DTC DETECTING CONDITION:

- Airbag main harness circuit is open, shorted or shorted to ground.
- Airbag module harness (driver's side) circuit is open, shorted or shorted to ground.
- Roll connector circuit is open, shorted or shorted to ground.
- Driver's airbag module is faulty.
- Airbag control module is faulty.


CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

NOTE:

Prior to starting work, prepare two airbag resistors (98299PA040).

WIRING DIAGRAM:

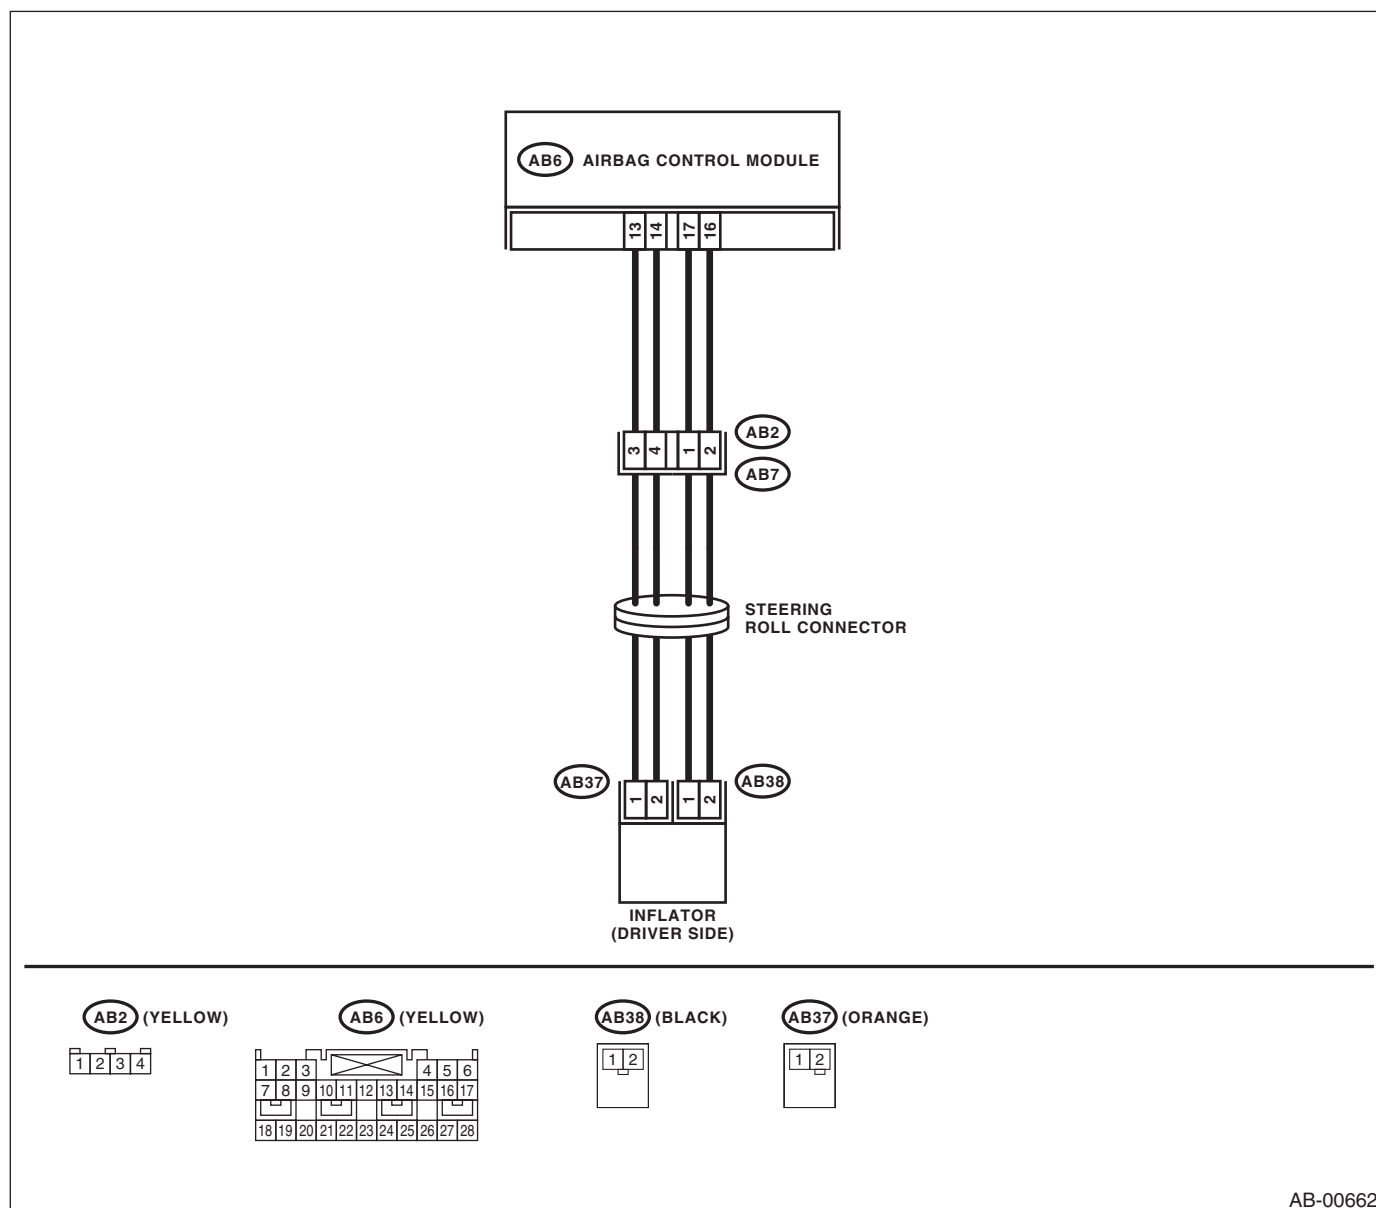

AB-00662

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the driver's airbag module.	Is there poor contact?	Replace the airbag main harness along with body harness.	Go to step 2.
2 CHECK DRIVER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the driver's airbag module. 3) Connect the connector (1N) in the test harness N to the connector (AB38). 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the connector (1Q) in the test harness Q to connector (AB37). 6) Connect the airbag resistor to the connector (2Q) in the test harness Q. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the driver's airbag module. <Ref. to AB-17, Driver's Airbag Module.>	Go to step 3.
3 CHECK ROLL CONNECTOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the test harness N from connector (AB38). 3) Disconnect the test harness Q from connector (AB37). 4) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 5) Connect the connector (1P) in the test harness P to connector (AB2). 6) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the roll connector. <Ref. to AB-26, Roll Connector.>	Go to step 4.
4 CHECK AIRBAG MAIN HARNESS (DRIVER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Measure the resistance between connector (2U) in the test harness U and connectors (2P) and (3P) in the test harness P. Connector & terminal (2U) No. 2 — (2P) No. 1: (2U) No. 4 — (2P) No. 2: (2U) No. 8 — (3P) No. 3: (2U) No. 12 — (3P) No. 4:	Is the resistance less than 10 Ω ?	Go to step 5.	Replace the airbag main harness along with body harness.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK AIRBAG MAIN HARNESS (DRIVER'S AIRBAG HARNESS). Measure the resistance between connectors (2U) in the test harness U, and between connector (2U) and chassis ground. Connector & terminal <i>(2U) No. 2 — (2U) No. 4:</i> <i>(2U) No. 4 — Chassis ground:</i> <i>(2U) No. 2 — Chassis ground:</i> <i>(2U) No. 8 — (2U) No. 12:</i> <i>(2U) No. 8 — Chassis ground:</i> <i>(2U) No. 12 — Chassis ground:</i>	Is the resistance more than 1 MΩ?	Go to step 6.	Replace the airbag main harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

AP:DTC 72 PASSENGER'S AIRBAG FAILURE


DTC DETECTING CONDITION:

- Airbag main harness circuit is open, shorted or shorted to ground.
- Airbag module harness (Passenger's side) circuit is open, shorted or shorted to ground.
- Passenger's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

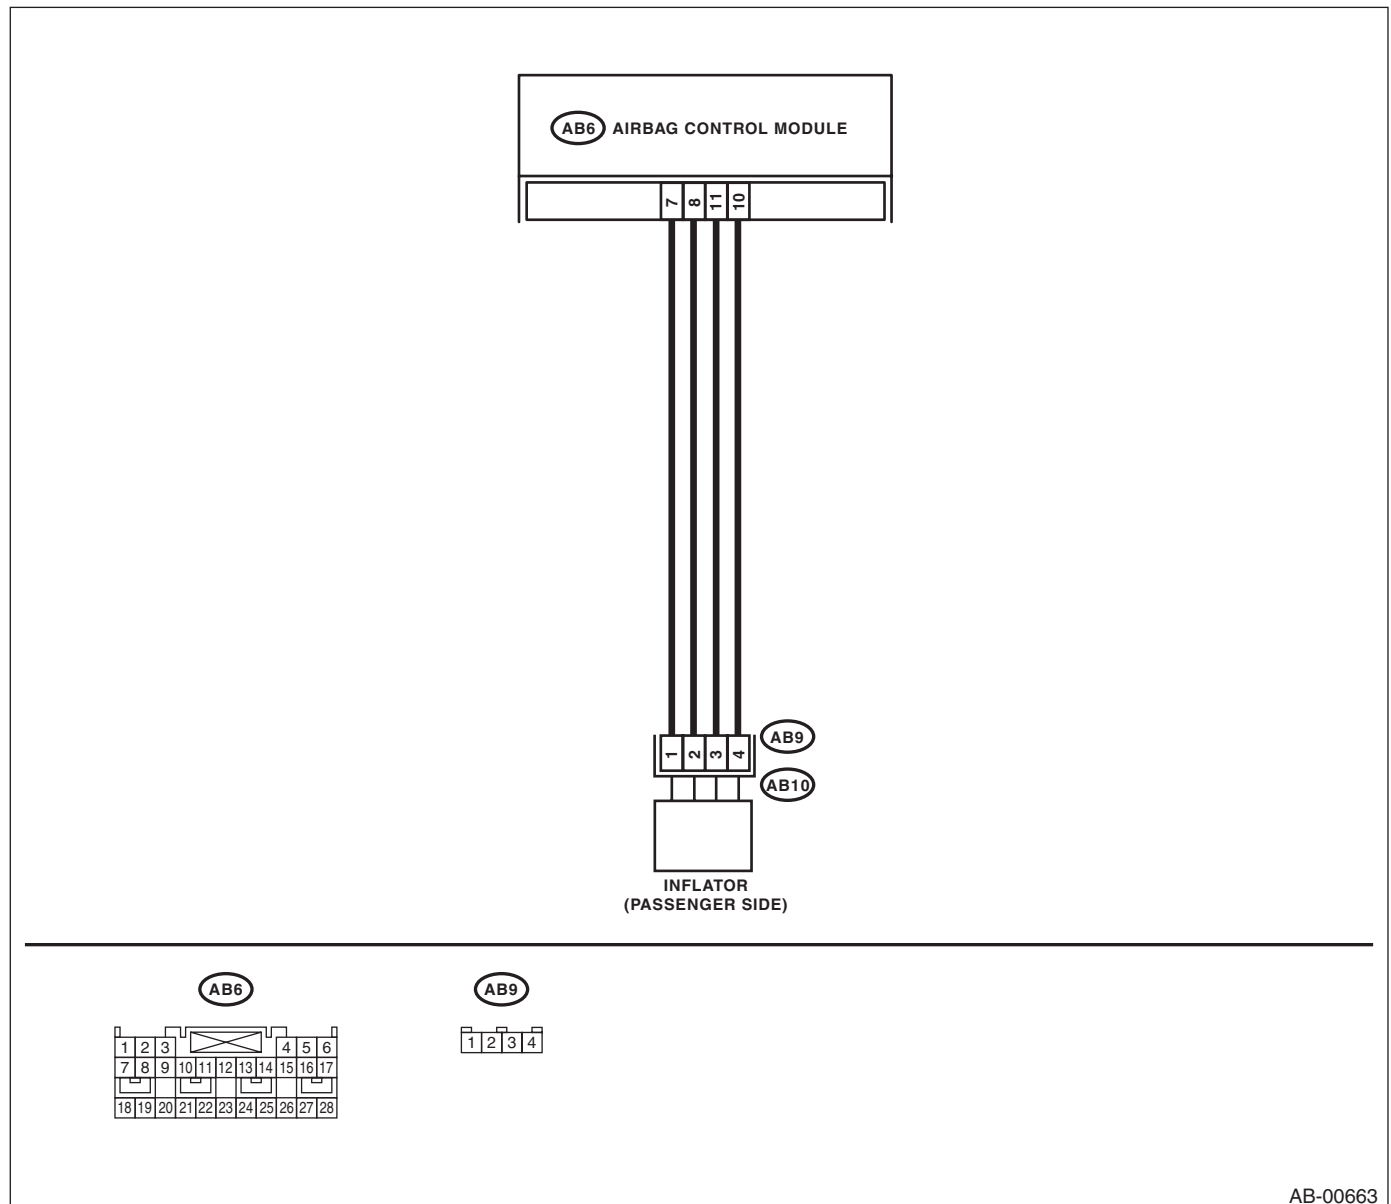

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the passenger's airbag module.	Is there poor contact?	Replace the airbag main harness along with body harness.	Go to step 2.
2 CHECK PASSENGER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the instrument panel side cover on the passenger's side. 3) Disconnect the connector (AB10) from (AB9). 4) Connect the connector (1P) in the test harness P to connector (AB9). 5) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 6) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the passenger's airbag module. <Ref. to AB-18, Passenger's Airbag Module.>	Go to step 3.
3 CHECK AIRBAG MAIN HARNESS (PASSENGER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Measure the resistance between connector (2U) in the test harness U and connectors (2P) and (3P) in the test harness P. Connector & terminal (2U) No. 3 — (2P) No. 1: (2U) No. 5 — (2P) No. 2: (2U) No. 9 — (3P) No. 3: (2U) No. 13 — (3P) No. 4:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag main harness along with body harness.
4 CHECK AIRBAG MAIN HARNESS (PASSENGER'S AIRBAG HARNESS). Measure the resistance between connectors (2U) in the test harness U, and between connector (2U) and chassis ground. Connector & terminal (2U) No. 3 — (2U) No. 5: (2U) No. 3 — Chassis ground: (2U) No. 5 — Chassis ground: (2U) No. 9 — (2U) No. 13: (2U) No. 9 — Chassis ground: (2U) No. 13 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag main harness along with body harness.
5 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 6.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
6 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AQ:DTC 75 DRIVER'S AIRBAG FAILURE

DTC DETECTING CONDITION:

- Airbag main harness circuit (Driver's side) is shorted to power supply.
- Airbag module harness circuit (Driver's side) is shorted to power supply.
- Roll connector is shorted to power supply.
- Driver's airbag module is faulty.
- Airbag control module is faulty.


CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

NOTE:

Prior to starting work, prepare two airbag resistors (98299PA040).

WIRING DIAGRAM:

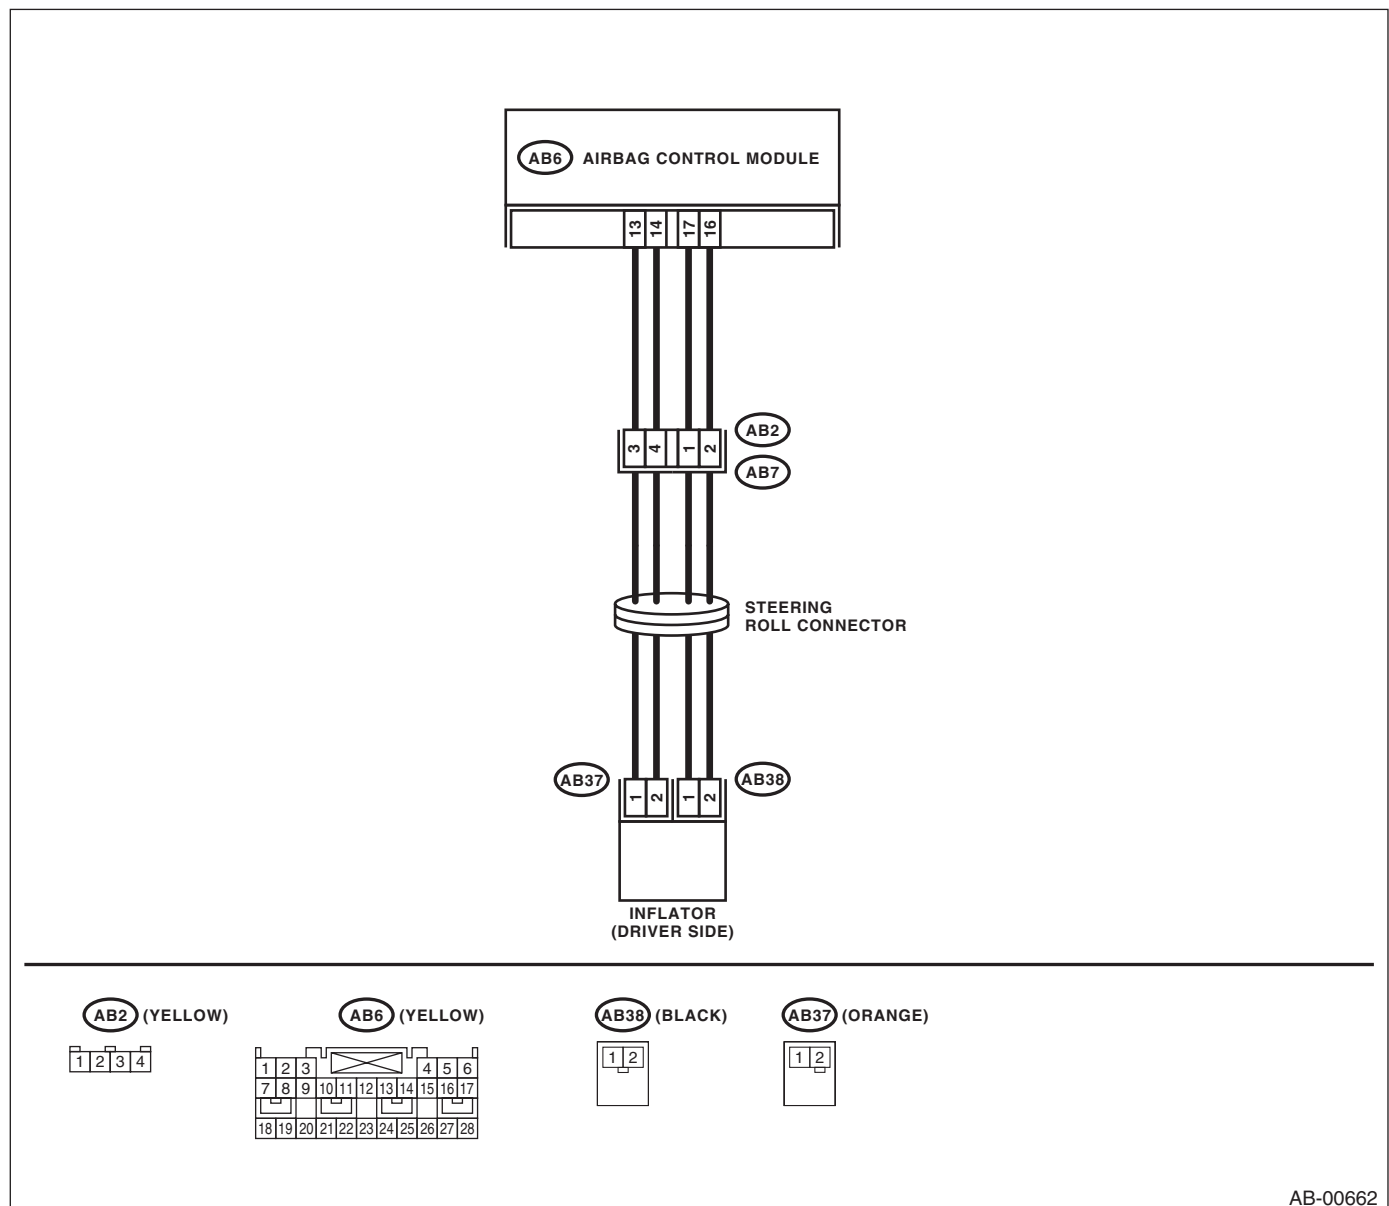

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the driver's airbag module.	Is there poor contact?	Replace the airbag main harness along with body harness.	Go to step 2.
2 CHECK DRIVER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the driver's airbag module. 3) Connect the connector (AB38) to the connector (1N) in the test harness N. 4) Connect the airbag resistor to the connector (2N) in the test harness N. 5) Connect the connector (1Q) in the test harness Q to connector (AB37). 6) Connect the airbag resistor to the connector (2Q) in the test harness Q. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the driver's airbag module. <Ref. to AB-17, Driver's Airbag Module.>	Go to step 3.
3 CHECK ROLL CONNECTOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the test harness N from connector (AB38). 3) Disconnect the test harness Q from connector (AB37). 4) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 5) Connect the connector (1P) in the test harness P to connector (AB2). 6) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 7) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the roll connector. <Ref. to AB-26, Roll Connector.>	Go to step 4.
4 CHECK AIRBAG MAIN HARNESS (DRIVER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the passenger's side instrument panel side cover, and disconnect the connectors (AB10) and (AB9). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Connect the battery ground terminal and turn the ignition switch to ON. (engine OFF) 6) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal <i>(2U) No. 4 (+) — Chassis ground (-):</i> <i>(2U) No. 2 (+) — Chassis ground (-):</i> <i>(2U) No. 8 (+) — Chassis ground (-):</i> <i>(2U) No. 12 (+) — Chassis ground (-):</i>	Is the voltage less than 1 V?	Go to step 5.	Replace the airbag main harness along with body harness.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
5	CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 6.
6	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

AR:DTC 76 PASSENGER'S AIRBAG FAILURE


DTC DETECTING CONDITION:

- Airbag main harness circuit (Passenger's side) is shorted to power supply.
- Airbag module harness circuit (Passenger's side) is shorted to power supply.
- Passenger's airbag module is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors and seat belt pretensioners of the driver's and passenger's seats for safety reasons.

WIRING DIAGRAM:

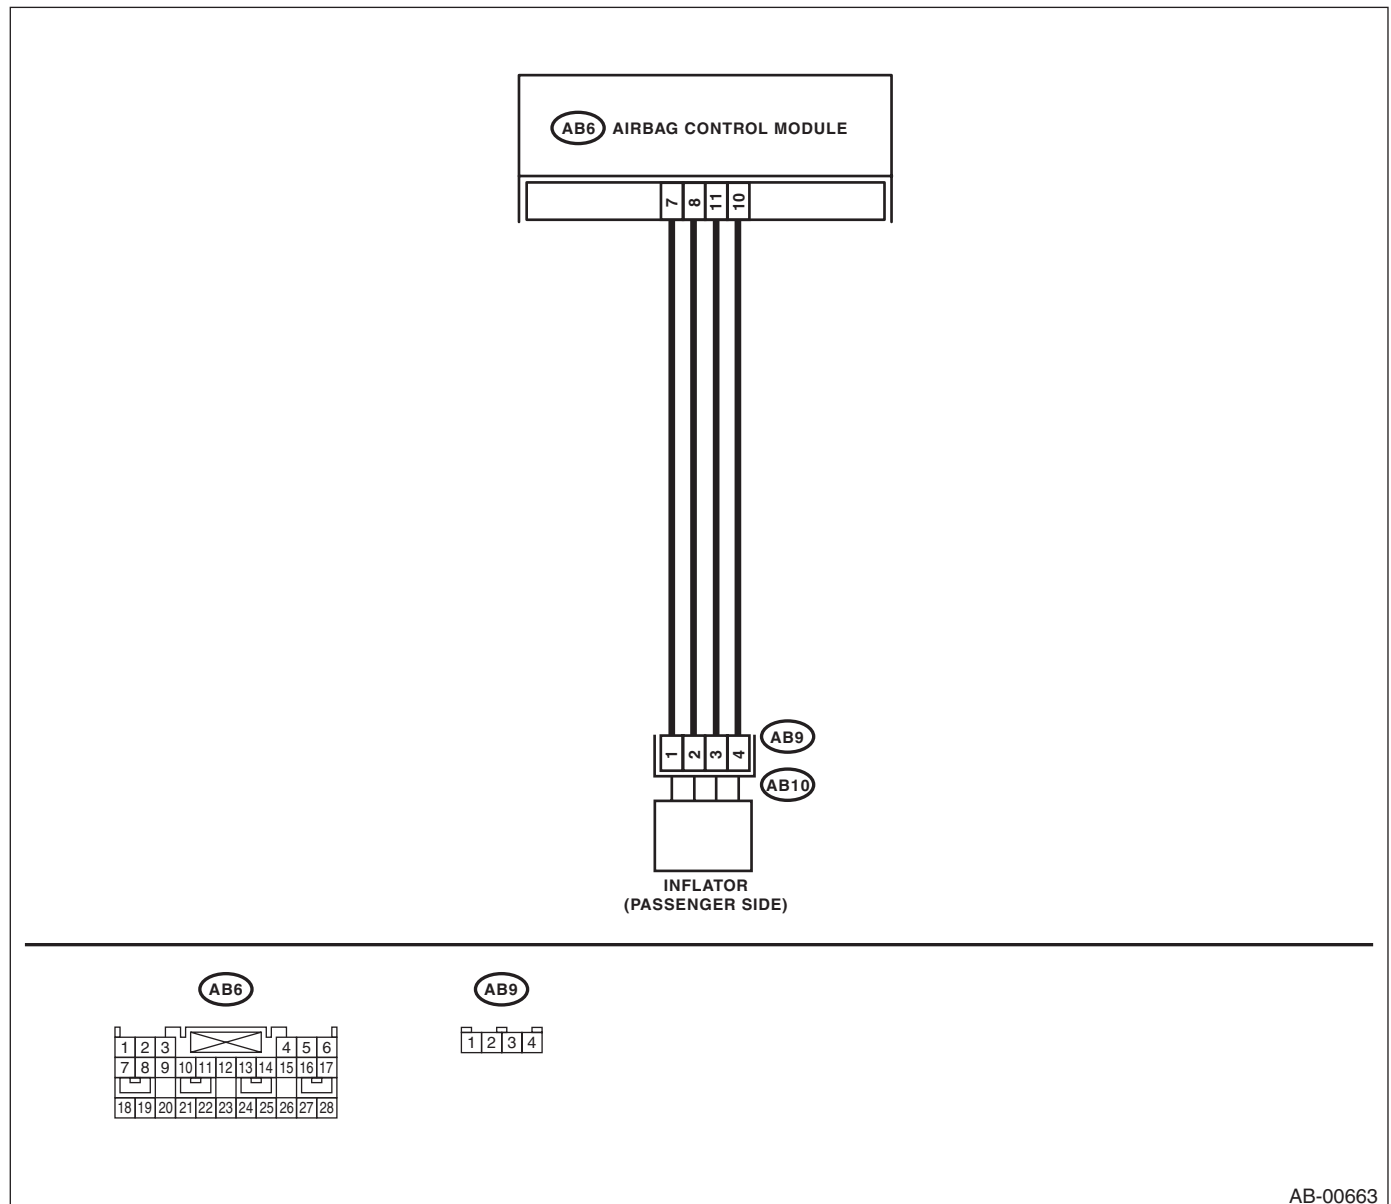

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module and the passenger's airbag module.	Is there poor contact?	Replace the airbag main harness along with body harness.	Go to step 2.
2 CHECK PASSENGER'S AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Remove the instrument panel side cover on the passenger's side. 3) Disconnect the connector (AB10) from (AB9). 4) Connect the connector (1P) in the test harness P to connector (AB9). 5) Connect the airbag resistor to the connectors (2P) and (3P) in the test harness P. 6) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the passenger's airbag module. <Ref. to AB-18, Passenger's Airbag Module.>	Go to step 3.
3 CHECK AIRBAG MAIN HARNESS (PASSENGER'S AIRBAG HARNESS). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the airbag resistor from the connectors (2P) and (3P) in the test harness P. 3) Remove the instrument panel lower cover and disconnect the connector (AB7) from (AB2). 4) Disconnect the connector (AB6) from airbag control module, and connect the connector (1U) in the test harness U. 5) Measure the voltage between connector (2U) in the test harness U and chassis ground. Connector & terminal <i>(2U) No. 3 (+) — Chassis ground (-):</i> <i>(2U) No. 5 (+) — Chassis ground (-):</i> <i>(2U) No. 9 (+) — Chassis ground (-):</i> <i>(2U) No. 13 (+) — Chassis ground (-):</i>	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag main harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

AS:DTC 91 CURTAIN AIRBAG MODULE RH FAILURE


DTC DETECTING CONDITION:

- Curtain airbag harness (RH) is faulty.
- Curtain airbag module (RH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

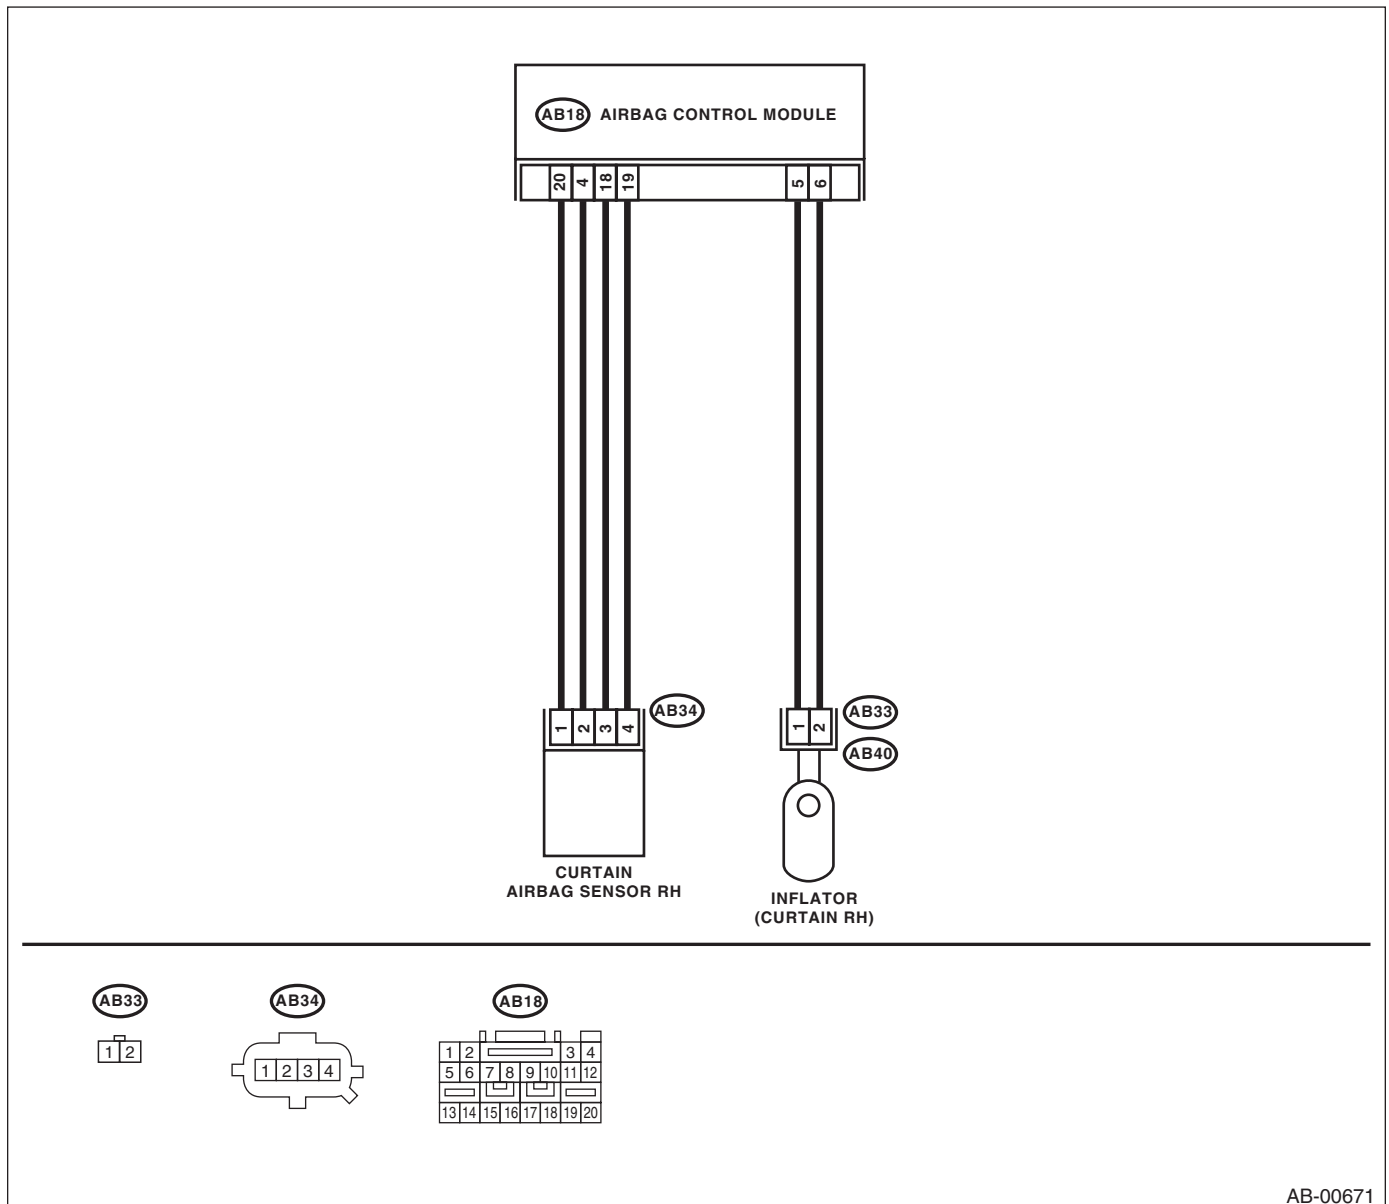

AB-00671

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, curtain airbag module RH and the curtain airbag sensor RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK CURTAIN AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB33) from (AB40), and connect the connector (1F) in test harness F to connector (AB33). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the curtain airbag module (RH). <Ref. to AB-21, Curtain Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Disconnect the connector (AB24) from side airbag module (RH). 4) Disconnect the airbag resistor from test harness F. 5) Disconnect the connector (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Measure the resistance between connector (5U) in the test harness U and connector (3F) in the test harness F. Connector & terminal (5U) No. 6 — (3F) No. 4: (5U) No. 8 — (3F) No. 3:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS RH). Measure the resistance between connector (5U) terminals in the test harness U. Connector & terminal (5U) No. 6 — (5U) No. 8:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag rear harness along with body harness.
5 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS RH). Measure the resistance between connector (5U) in the test harness U and chassis ground. Connector & terminal (5U) No. 6 — Chassis ground: (5U) No. 8 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 6.	Replace the airbag rear harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to AB(diag)-43, List of Diagnostic Trou- ble Code (DTC).>	Finish the diagno- sis.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

AT:DTC 92 CURTAIN AIRBAG MODULE LH FAILURE


DTC DETECTING CONDITION:

- Curtain airbag harness (LH) is faulty.
- Curtain airbag module (LH) is faulty.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

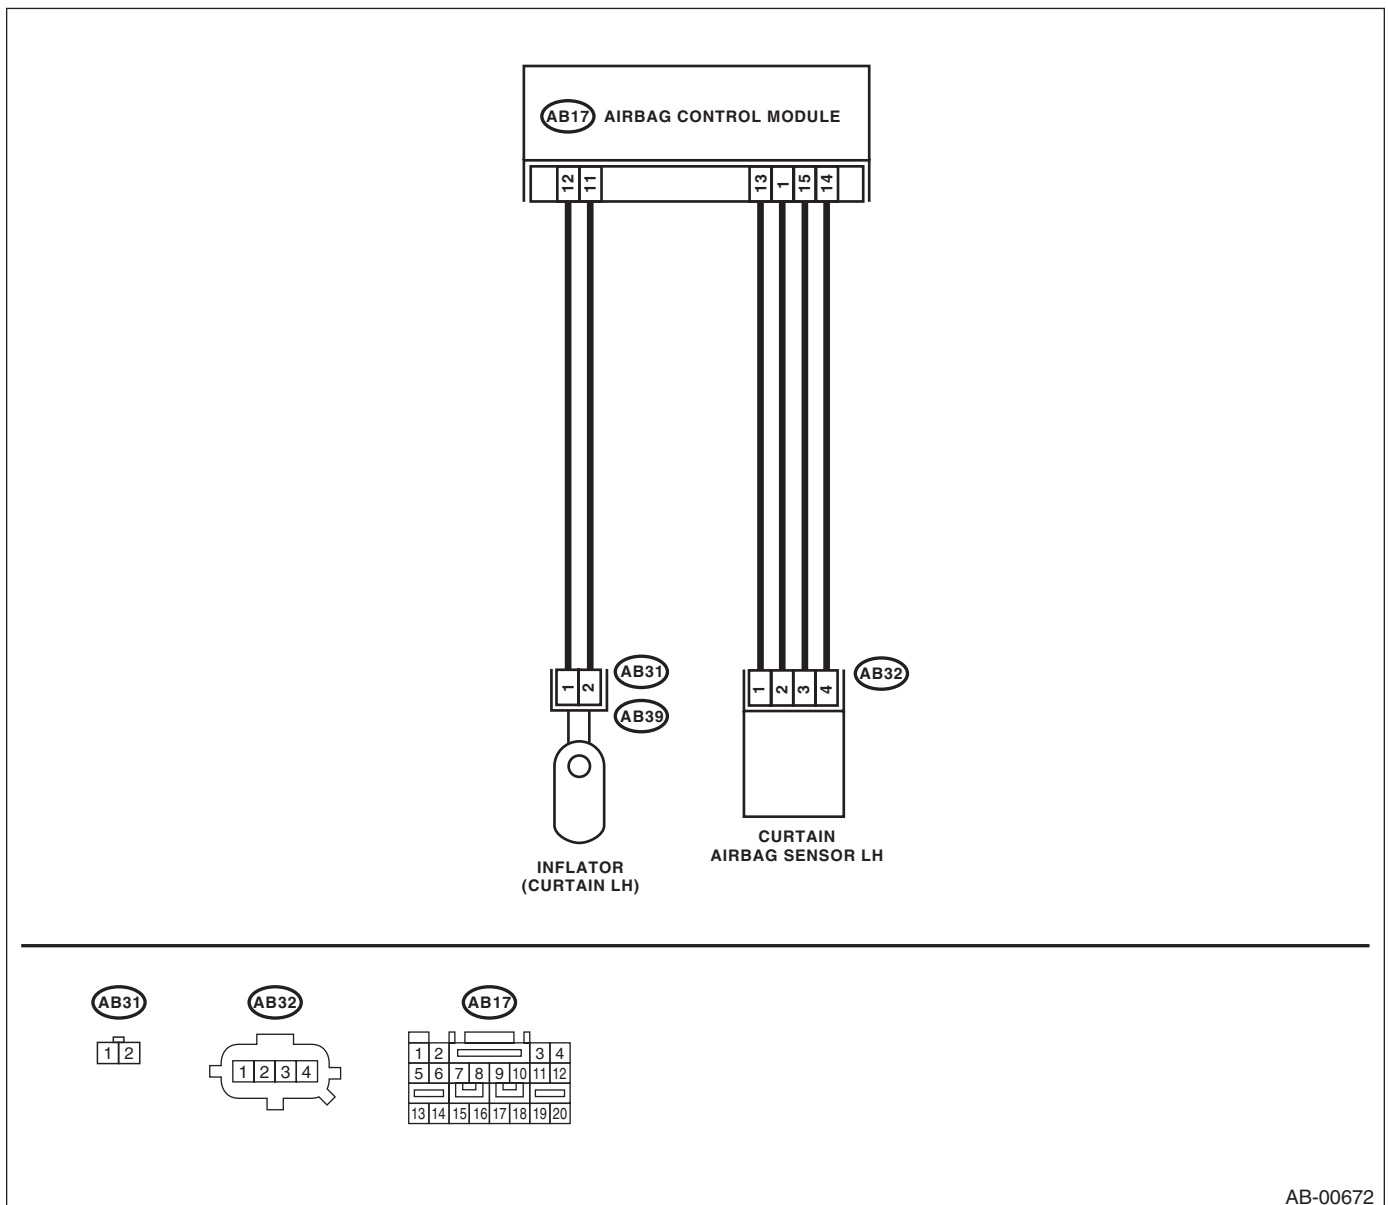

AB-00672

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, curtain airbag module LH and the curtain airbag sensor LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK CURTAIN AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB31) from (AB39), and connect the connector (1F) in test harness F to connector (AB31). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the curtain airbag module (LH). <Ref. to AB-21, Curtain Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Disconnect the connector (AB19) from side airbag module (LH). 4) Disconnect the airbag resistor from test harness F. 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Measure the resistance between connector (5U) in the test harness U and connector (3F) in the test harness F. Connector & terminal (5U) No. 1 — (3F) No. 3: (5U) No. 3 — (3F) No. 4:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS LH). Measure the resistance between connector (5U) terminals in the test harness U. Connector & terminal (5U) No. 1 — (5U) No. 3:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag rear harness along with body harness.
5 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS LH). Measure the resistance between connector (5U) in the test harness U and chassis ground. Connector & terminal (5U) No. 1 — Chassis ground: (5U) No. 3 — Chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 6.	Replace the airbag rear harness along with body harness.
6 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 7.

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to AB(diag)-43, List of Diagnostic Trou- ble Code (DTC).>	Finish the diagno- sis.

AU:DTC 95 CURTAIN AIRBAG MODULE RH FAILURE


DTC DETECTING CONDITION:

- Curtain airbag harness (RH) is shorted to power supply.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

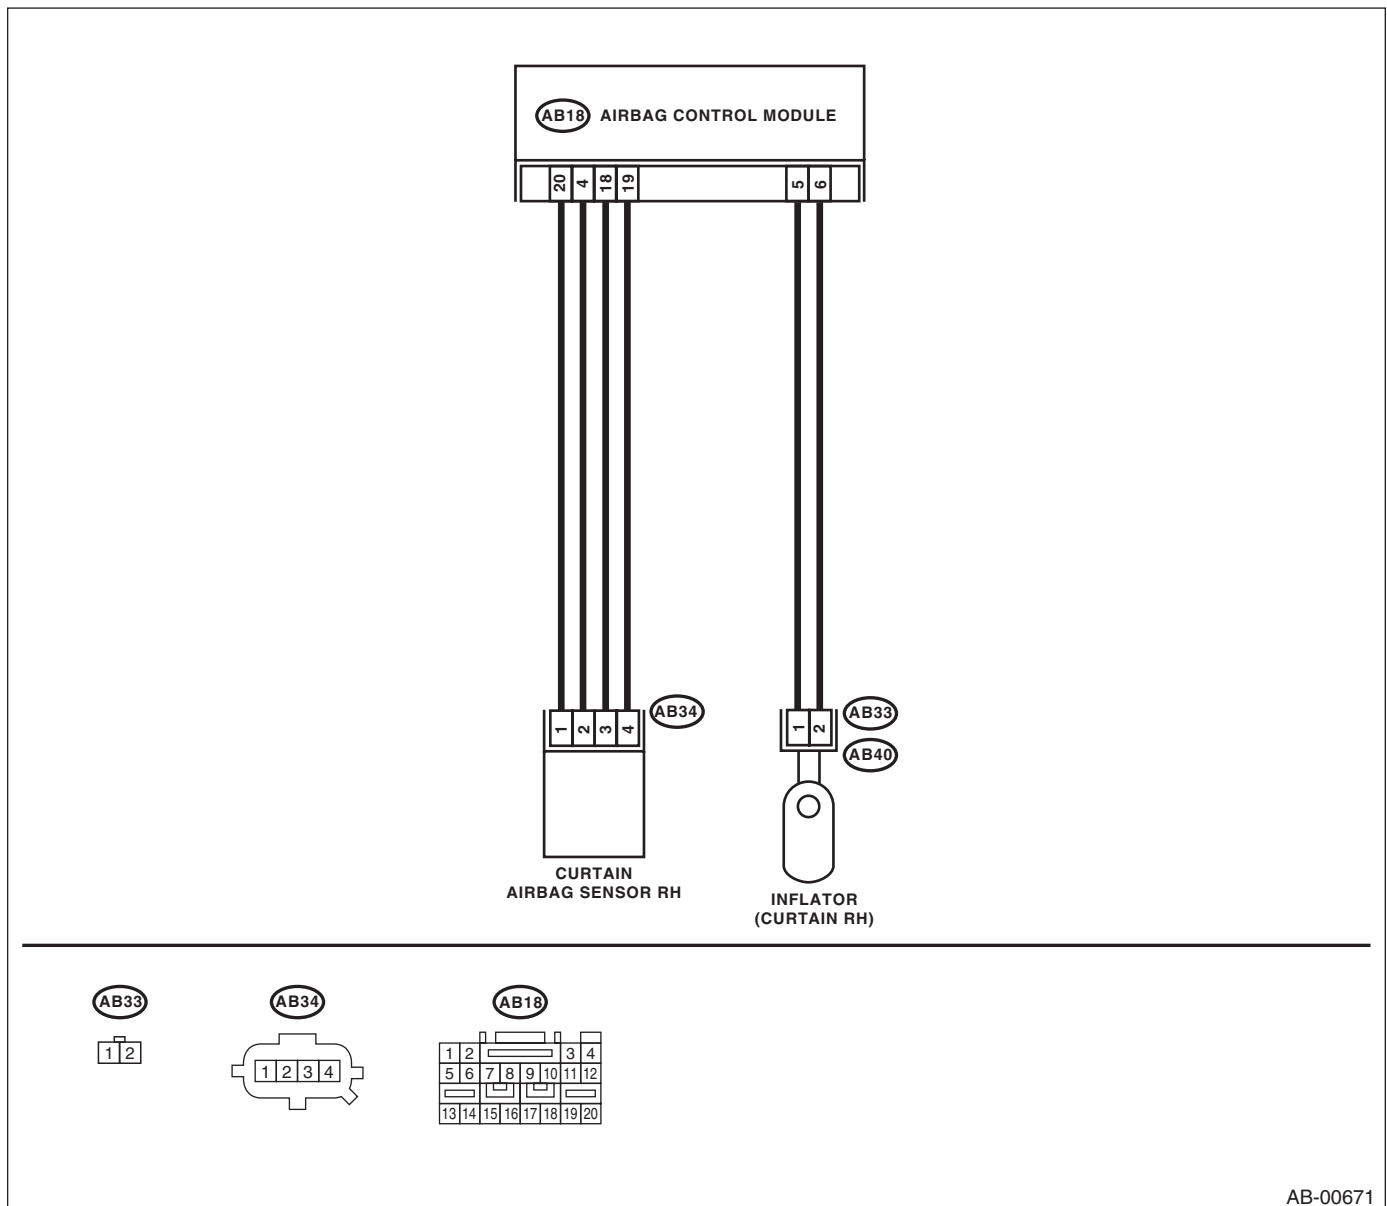

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, curtain airbag module RH and the curtain airbag sensor RH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK CURTAIN AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB33) from (AB40), and connect the connector (1F) in test harness F to connector (AB33). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the curtain airbag module (RH). <Ref. to AB-21, Curtain Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS RH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB26) from seat belt pretensioner (RH). 3) Disconnect the connector (AB24) from side airbag module (RH). 4) Disconnect the airbag resistor from test harness F. 5) Disconnect the connector (AB18) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB18). 7) Connect the battery ground terminal and turn the ignition switch to ON. 8) Measure the voltage between connector (5U) in the test harness U and chassis ground. Connector & terminal (5U) No. 6 (+) — Chassis ground (-): (5U) No. 8 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

AV:DTC 96 CURTAIN AIRBAG MODULE LH FAILURE


DTC DETECTING CONDITION:

- Curtain airbag harness (LH) is shorted to power supply.
- Airbag control module is faulty.

CAUTION:

- Before diagnosing the airbag system, be sure to turn the ignition switch to OFF, disconnect the ground terminal from battery, and wait more than 20 seconds before starting to work.
- When replacing the airbag module, seat belt pretensioner, roll connector, control module and sensor, reconnect each part and check that the warning light operates properly.
- When inspecting the airbag main harness, disconnect the airbag module connectors of the driver's and passenger's seats for safety.
- When inspecting the airbag rear harness, disconnect the side airbag module connector, curtain airbag module connector and seat belt pretensioner connector for safety reasons.

WIRING DIAGRAM:

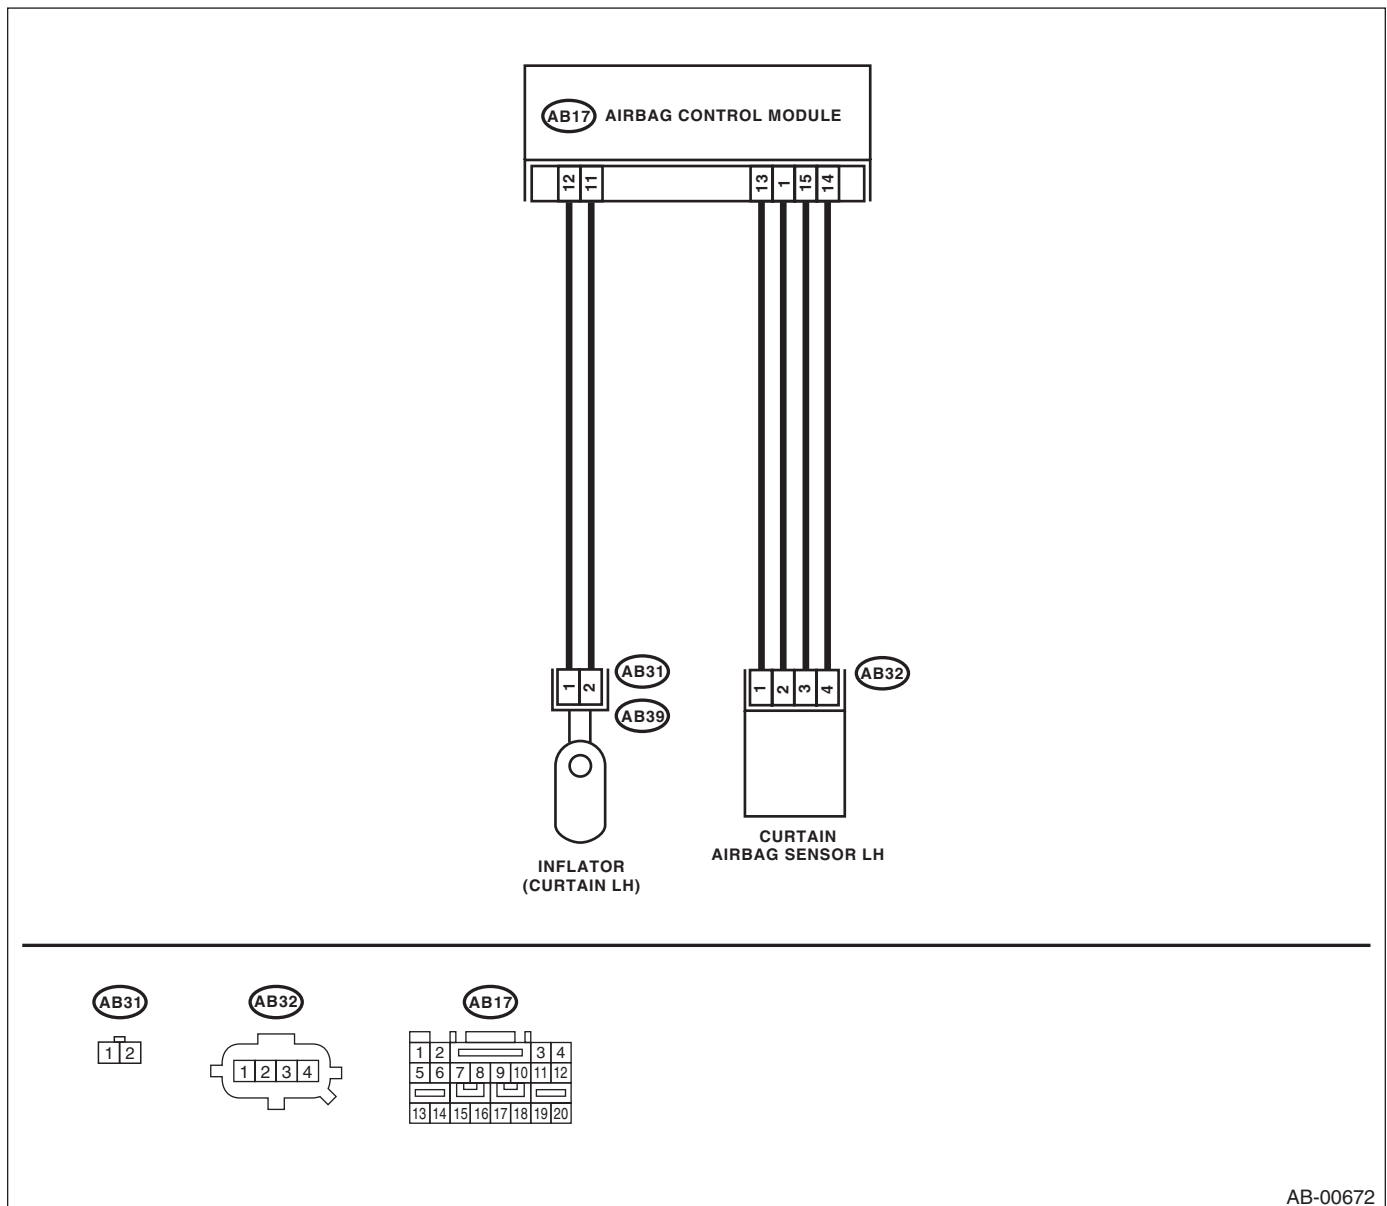

AB-00672

Diagnostic Chart with Trouble Code

AIRBAG SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POOR CONTACT IN CONNECTORS. Check for poor contact of the connectors between the airbag control module, curtain airbag module LH and the curtain airbag sensor LH.	Is there poor contact?	Replace the airbag rear harness along with body harness.	Go to step 2.
2 CHECK SIDE AIRBAG MODULE. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB31) from (AB39), and connect the connector (1F) in test harness F to connector (AB31). 3) Connect the airbag resistor to the connector (3F) of test harness F. 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for six seconds and go off?	Replace the curtain airbag module (LH). <Ref. to AB-21, Curtain Airbag Module.>	Go to step 3.
3 CHECK AIRBAG REAR HARNESS (CURTAIN AIRBAG MODULE HARNESS LH). 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the connector (AB21) from seat belt pretensioner (LH). 3) Disconnect the connector (AB19) from side airbag module (LH). 4) Disconnect the airbag resistor from test harness F. 5) Disconnect the connector (AB17) from airbag control module. 6) Connect the connector (1U) in the test harness U to connector (AB17). 7) Connect the battery ground terminal and turn the ignition switch to ON. 8) Measure the voltage between connector (5U) in the test harness U and chassis ground. Connector & terminal (5U) No. 1 (+) — Chassis ground (-): (5U) No. 3 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Replace the airbag rear harness along with body harness.
4 CHECK AIRBAG CONTROL MODULE. 1) Connect all the connectors. 2) Erase the memory. 3) Perform the Inspection Mode. 4) Read the DTC.	Is the same DTC displayed?	Replace the airbag control module. <Ref. to AB-23, Airbag Control Module.>	Go to step 5.
5 CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Check DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

OD(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	13
5. Airbag Connector	14
6. Control Module I/O Signal	15
7. Subaru Select Monitor	16
8. Read Diagnostic Trouble Code (DTC)	19
9. Inspection Mode	20
10. Clear Memory Mode	21
11. Airbag Warning Light Illumination Pattern	22
12. Passenger's Airbag ON/OFF Indicator Light Illumination Pattern	23
13. List of Diagnostic Trouble Code (DTC)	24
14. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	25

General Description

BODY STRUCTURE

1. General Description

A: PREPARATION TOOL


TOOL NAME	REMARKS
Tram tracking gauge	Used for measuring dimension.
Tape measure	Used for measuring dimension.

2. Datum Dimensions

A: MEASUREMENT


NOTE:

- Using a tram tracking gauge, measure all the dimensions.
- When using a tape measure, carefully measure dimensions without letting the tape measure sag or twist.
- Measure the linear dimensions between cores of holes.
- Suffixes “RH” and “LH” indicate right-hand and left-hand.

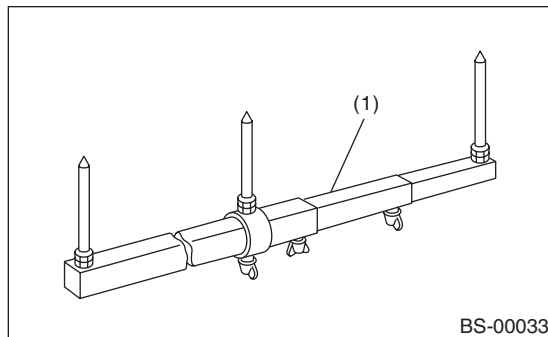

(1) Tram tracking gauge

- Measure at the center of the circle around the outside of the body panel.

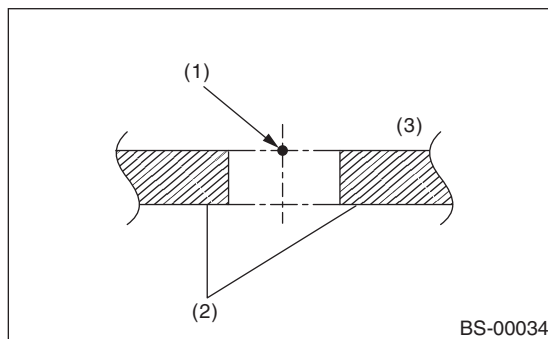

- (1) Datum points
- (2) Body panel
- (3) Outside

1. CENTER STRUCTURE


NOTE:

- Longitudinal dimensions are projected dimensions.
- The height dimensions are the vertical distances from the gauge point on the assumed horizontal line through the side sill flange joint (bending angle point).
- Diagonal dimensions are the actual dimensions between reference points. The values in brackets are projected dimensions for reference.

Datum Dimensions

BODY STRUCTURE

Unit: mm

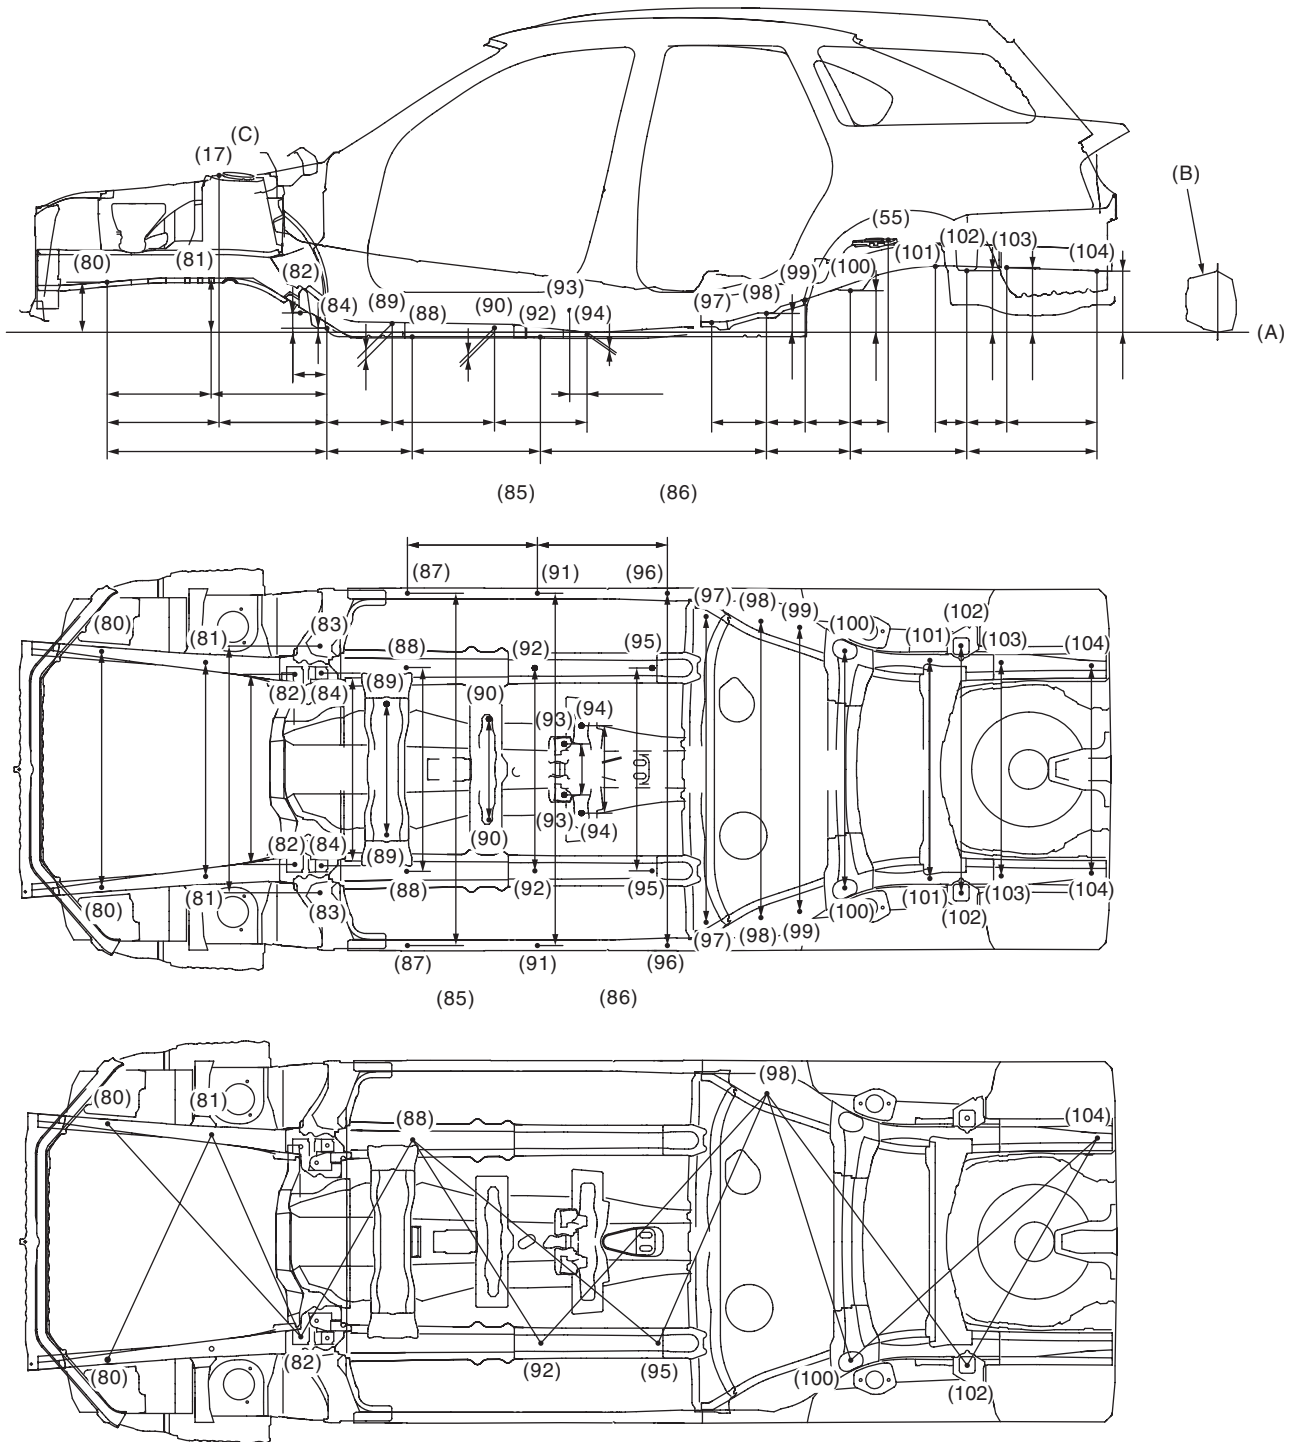

BS-01530

Datum Dimensions

BODY STRUCTURE

(A) Standard line	(B) Side sill	(C) Upper face
(80) Gauge hole (symmetrical)	(89) Transmission crossmember mounting hole (symmetrical)	(97) Fuel protector mounting hole (symmetrical)
(81) Front crossmember mounting hole	(90) Gauge hole (symmetrical)	(98) Trailing arm mounting hole (symmetrical)
(82) (symmetrical), Lower surface rear	(91) Under cover mounting hole (symmetrical)	(99) Trailing arm mounting hole (symmetrical)
(83) Strut mount mounting hole (symmetrical)	(92) Under cover mounting hole (symmetrical)	(100) Rear suspension crossmember mounting hole (symmetrical)
(84) Strut mount mounting hole (symmetrical)	(93) Center bearing mounting hole (symmetrical)	(101) Canister hose mounting hole (symmetrical)
(85) Transmission crossmember mounting hole (symmetrical)	(94) Exhaust cover mounting hole (symmetrical)	(102) Rear suspension crossmember mounting hole (symmetrical)
(86) Drain hose mounting hole (symmetrical)	(95) Weight reduction hole (symmetrical)	(103) Gauge hole (symmetrical)
(87) Under cover mounting hole (symmetrical)	(96) Under cover mounting hole (symmetrical)	(104) Weight reduction hole (symmetrical)
(88) Under cover mounting hole (symmetrical)		


Point of measurement	Dimension mm (in)
Datum line to (80)	198 (7.80)
Datum line to (81)	212 (8.35)
Datum line to (82)	77 (3.03)
Datum line to (84)	17 (0.07)
Datum line to (89)	(4AT and MT) 35 (1.38) (5AT) 56 (2.20)
Datum line to (90)	18 (0.71)
Datum line to (94)	-9 (-0.35)
Datum line to (98)	75 (2.95)
Datum line to (100)	164 (6.46)
Datum line to (102)	243 (9.57)
Datum line to (103)	255 (10.04)
Datum line to (104)	241 (9.49)
(17) to (80)	439 (17.28)
(17) to (84)	423 (16.65)
(80) to (81)	408 (16.06)
(80) to (84)	862 (33.94)
(81) to (84)	454 (17.87)
(82) to (84)	104 (4.09)
(84) to (88)	335 (13.19)
(84) to (89)	(4AT and MT) 257 (10.12) (5AT) 357 (14.06)
(88) to (92)	503 (19.80)
(89) to (90)	302 (11.89)
(90) to (94)	363 (14.29)
(92) to (98)	887 (34.92)
(93) to (94)	68 (2.68)
(97) to (98)	215 (8.46)
(98) to (99)	152 (5.98)
(98) to (100)	329 (12.95)
(99) to (100)	177 (6.97)
(100) to (55)	149 (5.87)
(100) to (102)	457 (17.99)
(101) to (102)	123 (4.84)
(102) to (103)	157 (6.18)

Point of measurement	Dimension mm (in)
(102) to (104)	505 (19.88)
(103) to (104)	348 (13.70)
(80) RH to (80) LH	926 (36.46)
(81) RH to (81) LH	840 (33.07)
(82) RH to (82) LH	746 (29.37)
(83) RH to (83) LH	968 (38.11)
(84) RH to (84) LH	756 (29.76)
(87) RH to (87) LH	1,382 (54.41)
(87) to (91)	510 (20.08)
(88) RH to (88) LH	800 (31.50)
(89) RH to (89) LH	(4AT and MT) 529 (20.83) (5AT) 433 (17.05)
(90) RH to (90) LH	396 (15.59)
(91) RH to (91) LH	1,382 (54.41)
(91) to (96)	510 (20.08)
(92) RH to (92) LH	796 (31.34)
(93) RH to (93) LH	200 (7.87)
(94) RH to (94) LH	343 (13.50)
(95) RH to (95) LH	796 (31.34)
(96) RH to (96) LH	1,382 (54.51)
(97) RH to (97) LH	1,200 (47.24)
(98) RH to (98) LH	1,163 (45.49)
(99) RH to (99) LH	1,115 (43.90)
(100) RH to (100) LH	930 (36.61)
(101) RH to (101) LH	856 (33.70)
(102) RH to (102) LH	970 (38.19)
(103) RH to (103) LH	836 (32.91)
(104) RH to (104) LH	814 (32.05)
(85)	Height 86 (3.39), Width 620 (24.41)
(86)	Height 117 (4.61), Width 600 (23.62)

Datum Dimensions

BODY STRUCTURE

Point of measurement	Dimension/Projected Dimensions For Reference mm (in)
(80) RH to (82) LH	1,135 (44.68)/1,128 (44.41)
(80) LH to (81) RH	973 (38.31)/973 (38.31)
(81) RH to (82) LH	877 (34.53)/867 (34.13)
(82) LH to (88) LH	894 (35.20)/889 (35.00)
(88) RH to (92) LH	943 (37.13)/943 (37.13)
(88) RH to (95) LH	1,251 (49.25)/1,251 (49.25)
(92) LH to (98) RH	1,325 (52.17)/1,321 (52.01)
(95) LH to (98) RH	1,072 (42.20)/1,069 (42.09)
(98) RH to (100) LH	1,101 (43.35)/1,097 (43.19)
(98) RH to (102) LH	1,335 (52.56)/1,325 (52.17)
(100) LH to (104) RH	1,305 (51.38)/1,303 (51.30)
(102) LH to (104) RH	1,028 (40.47)/1,028 (40.47)

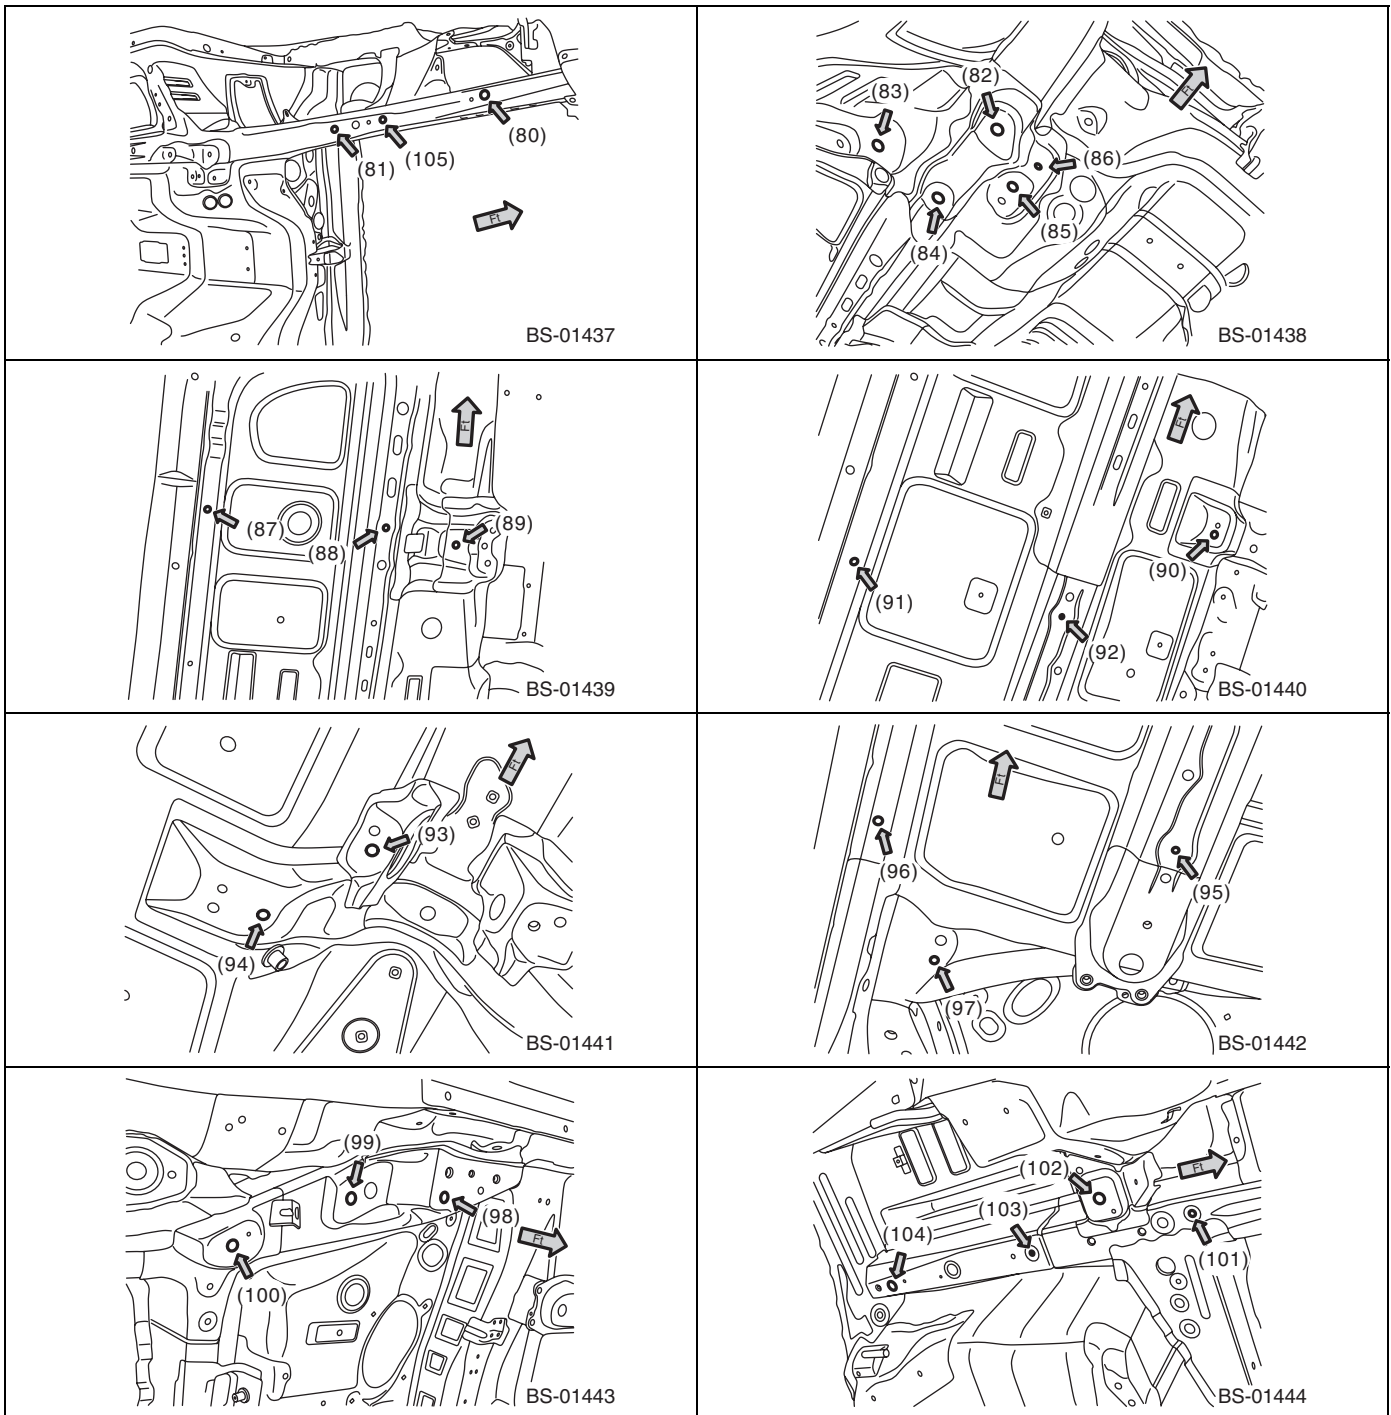**NOTE:**

For reference point (17) Strut mounting hole (symmetrical), refer to "Datum Dimensions". <Ref. to BS-8, FRONT STRUCTURE, MEASUREMENT, Datum Dimensions.>


For reference point (55) Rear suspension mounting hole (symmetrical), refer to "Datum Dimensions". <Ref. to BS-11, INSIDE, MEASUREMENT, Datum Dimensions.>

Datum Dimensions

BODY STRUCTURE

2. FRONT STRUCTURE

- Common for wagon and sedan model

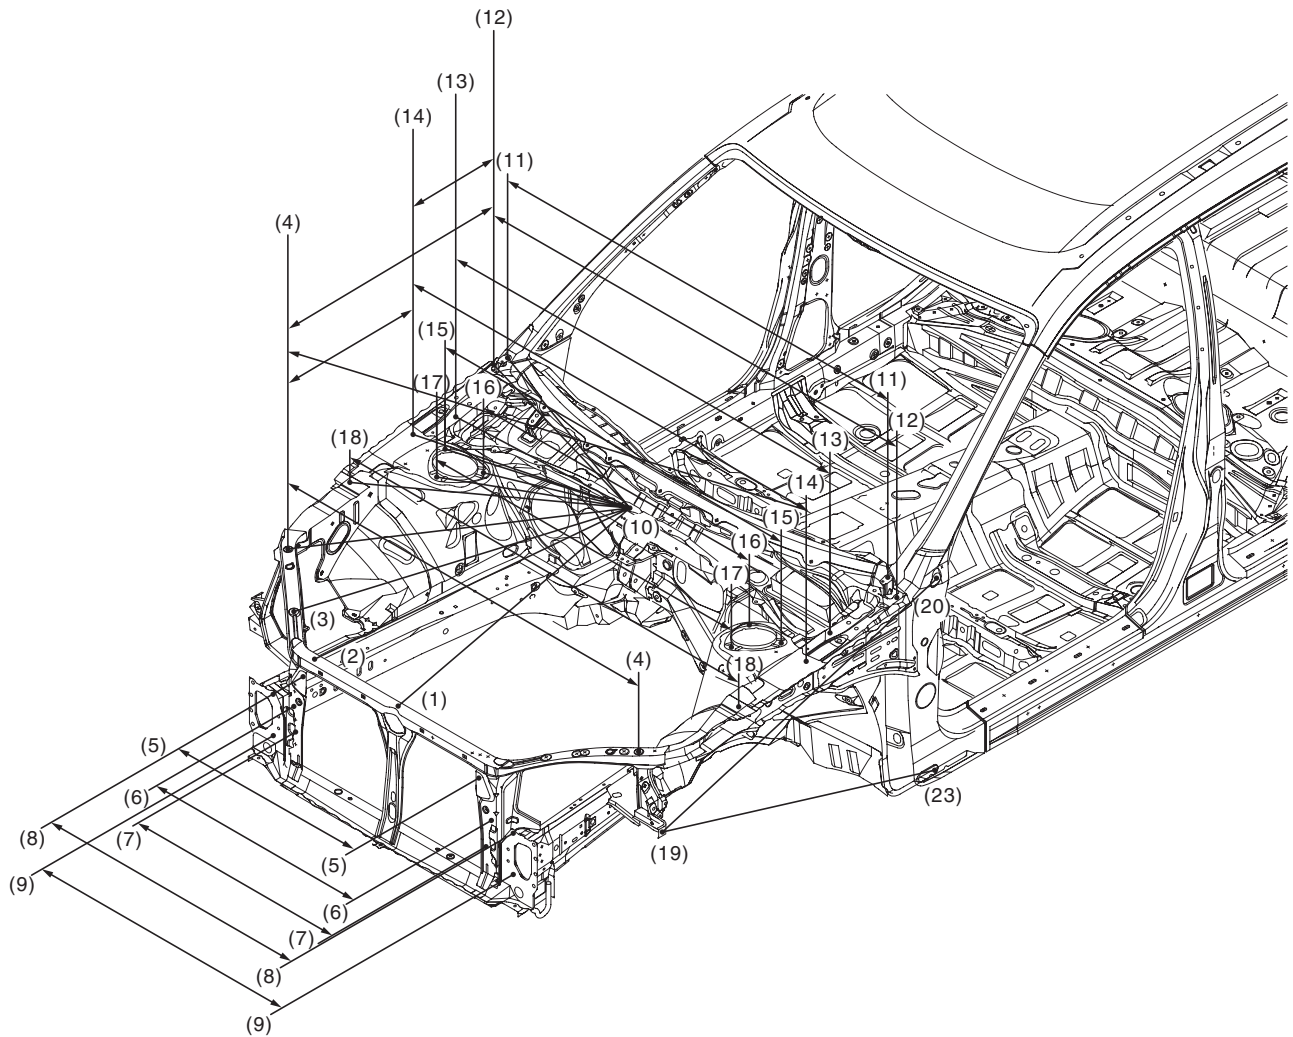

BS-01531

- | | | |
|---|--|---|
| (1) Repair location hole (body center) | (9) Bumper beam mounting hole (symmetrical), lower side | (16) Strut mount mounting hole (symmetrical), rear inside |
| (2) Radiator mounting hole | (10) Cowl panel mounting hole (body center) | (17) Strut mount mounting hole (symmetrical), front |
| (3) Headlight mounting hole (symmetrical) | (11) Fender mounting hole (symmetrical) | (18) Fender mounting hole (symmetrical) |
| (4) Reinforcement fender mounting hole (symmetrical) | (12) Location hole (symmetrical) | (19) Fender mounting hole (symmetrical) |
| (5) Air conditioner condenser mounting hole (symmetrical) | (13) Hood hinge mounting hole (symmetrical), front | (20) Fender mounting hole (symmetrical) |
| (6) Beam corner side mounting hole (symmetrical) | (14) Fender extension mounting hole (symmetrical) | (23) Fender mounting hole (symmetrical) |
| (7) Heat insulation cover mounting hole (symmetrical) | (15) Strut mount mounting hole (symmetrical), rear outside | |
| (8) Bumper beam mounting hole (symmetrical), upper side | | |

Datum Dimensions

BODY STRUCTURE

Point of measurement	Datum Dimension mm (in)
(1) — (10)	893 (35.16)
(2) — (10)	948 (37.32)
(3) — (10)	934 (36.77)
(4) — (10)	918 (36.14)
(4) — (4)	1,314 (51.73)
(4) — (12)	882 (34.72)
(4) — (14)	557 (21.93)
(4) RH — (14) LH	1,498 (58.98)
(4) LH — (14) RH	1,498 (58.98)
(5) — (5)	658 (25.91)
(6) — (6)	740 (29.13)
(7) — (7)	700 (27.56)
(8) — (8)	900 (35.43)
(9) — (9)	900 (35.43)
(10) — (11)	755 (29.72)
(10) — (12)	794 (31.26)


Point of measurement	Datum Dimension mm (in)
(10) — (13)	707 (27.83)
(10) — (14)	745 (29.33)
(10) — (15)	639 (25.16)
(10) — (16)	512 (20.16)
(10) — (17)	585 (23.03)
(10) — (18)	804 (31.65)
(11) — (11)	1,422 (55.98)
(12) — (12)	1,508 (59.37)
(12) — (14)	326 (12.83)
(13) — (13)	1,402 (55.20)
(14) — (14)	1,472 (57.95)
(15) — (15)	1,258 (49.53)
(16) — (16)	995 (39.17)
(17) — (17)	1,104 (43.46)
(18) — (18)	1,456 (57.32)
(19) — (20)	1,064 (41.89)
(19) — (23)	1,035 (40.75)

NOTE:


- The reference points (1) and (10) are at the body center, while the other points are left-right symmetrical.
- The dimensions are the actual dimensions between the reference points.

Datum Dimensions


BODY STRUCTURE

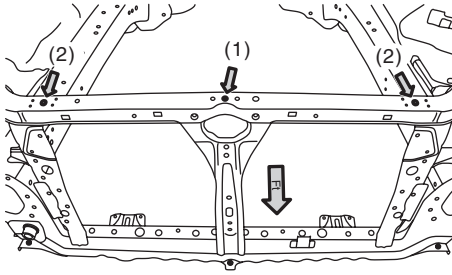


BS-01445

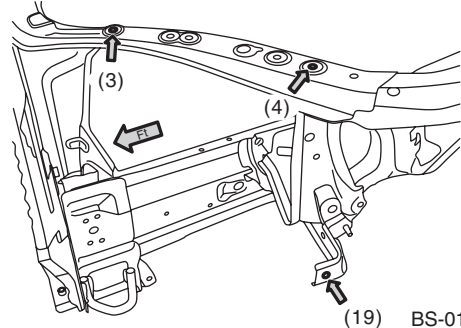


(19) BS-01446

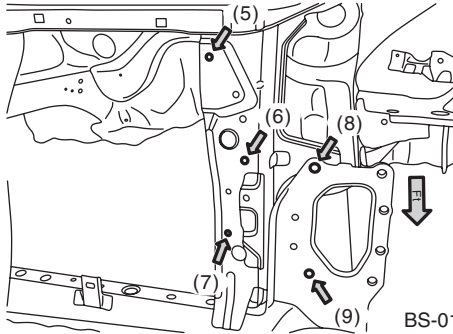


BS-01447

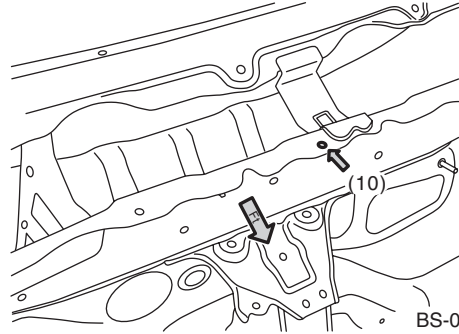


BS-01491

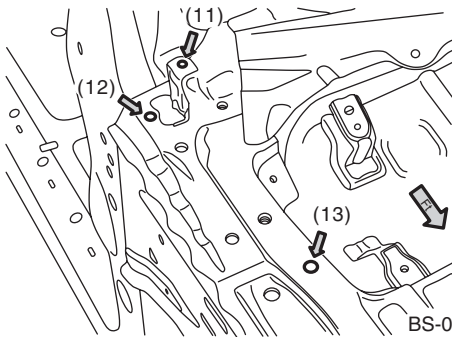


BS-01492

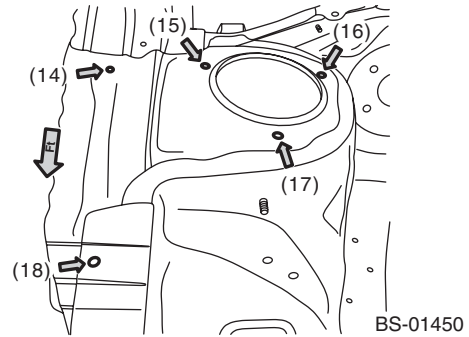

BS-01450

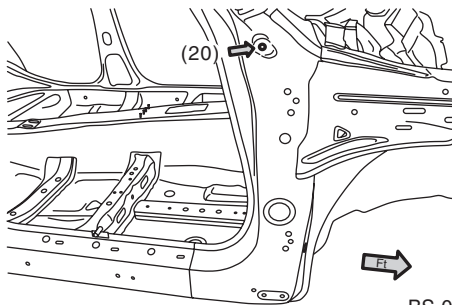


BS-01451

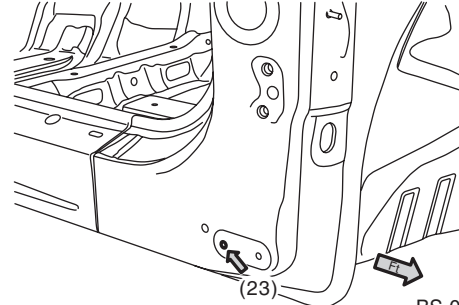

BS-01452

3. INSIDE

- Common for wagon and sedan model, 1

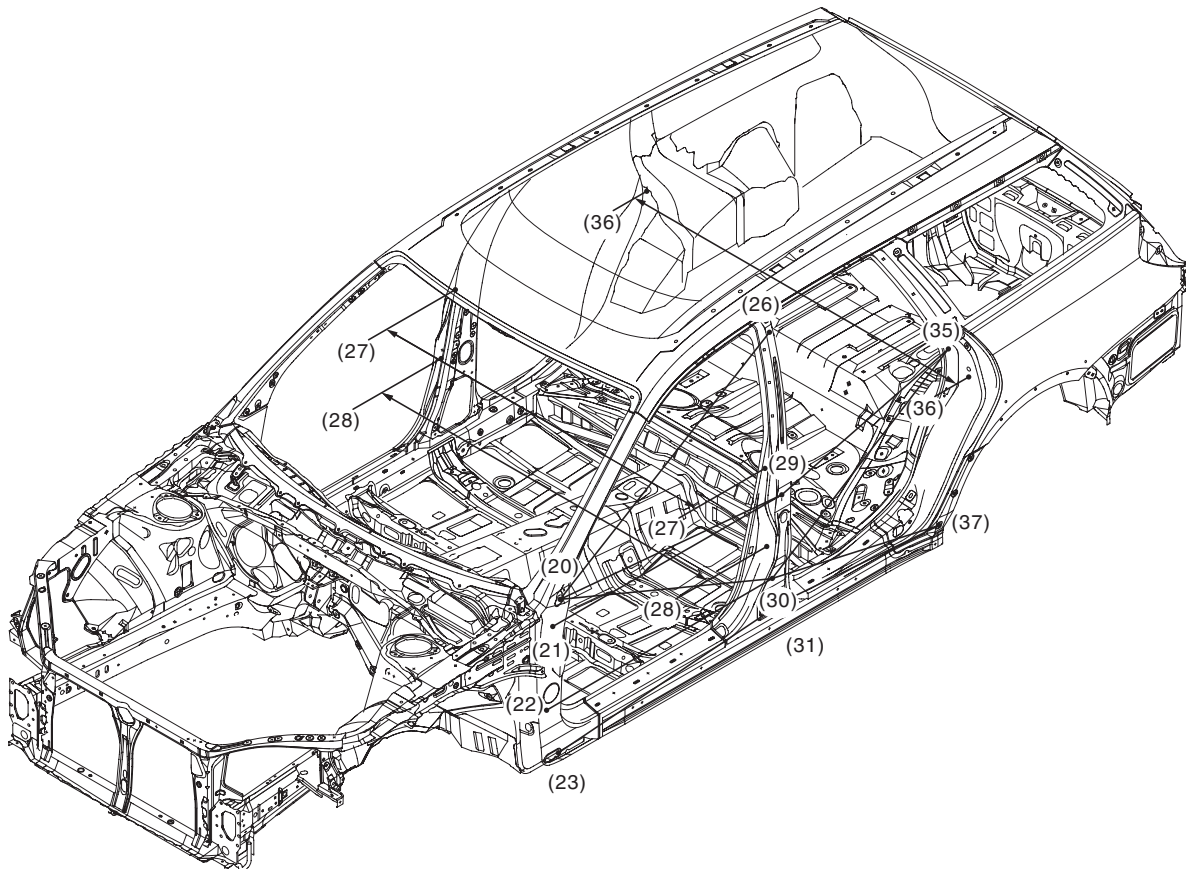

BS-01413

- | | | |
|---|--|--|
| (20) Fender mounting hole (symmetrical) | (27) Weatherstrip mounting hole (symmetrical) | (31) Gauge hole (symmetrical) |
| (21) Front door hinge upper mounting hole (symmetrical), upper side | (28) Front door striker mounting hole (symmetrical) | (35) Weatherstrip mounting hole (symmetrical) |
| (22) Front door hinge lower mounting hole (symmetrical), upper side | (29) Rear door hinge upper mounting hole (symmetrical) | (36) Rear door striker mounting hole (symmetrical) |
| (23) Fender mounting hole (symmetrical) | (30) Rear door hinge lower mounting hole (symmetrical) | (37) Protector mounting hole (symmetrical) |
| (26) Gauge hole (symmetrical) | | |

Datum Dimensions


BODY STRUCTURE

Point of measurement	Datum Dimension mm (in)
(20) — (26)	1,232 (48.50)
(20) — (29)	1,034 (40.71)
(20) — (30)	1,066 (41.97)
(21) — (29)	1,080 (42.52)
(22) — (30)	1,055 (41.54)
(23) — (31)	1,070 (42.13)


Point of measurement	Datum Dimension mm (in)
(27) — (27)	1,448 (57.01)
(28) — (28)	1,523 (59.96)
(29) — (35)	863 (33.98)
(30) — (35)	1,002 (39.45)
(30) — (37)	753 (29.65)
(31) — (37)	679 (26.73)
(36) — (36)	1,506 (59.29)

NOTE:

- All reference points are left-right symmetrical.
- The dimensions are the actual dimensions between the reference points.

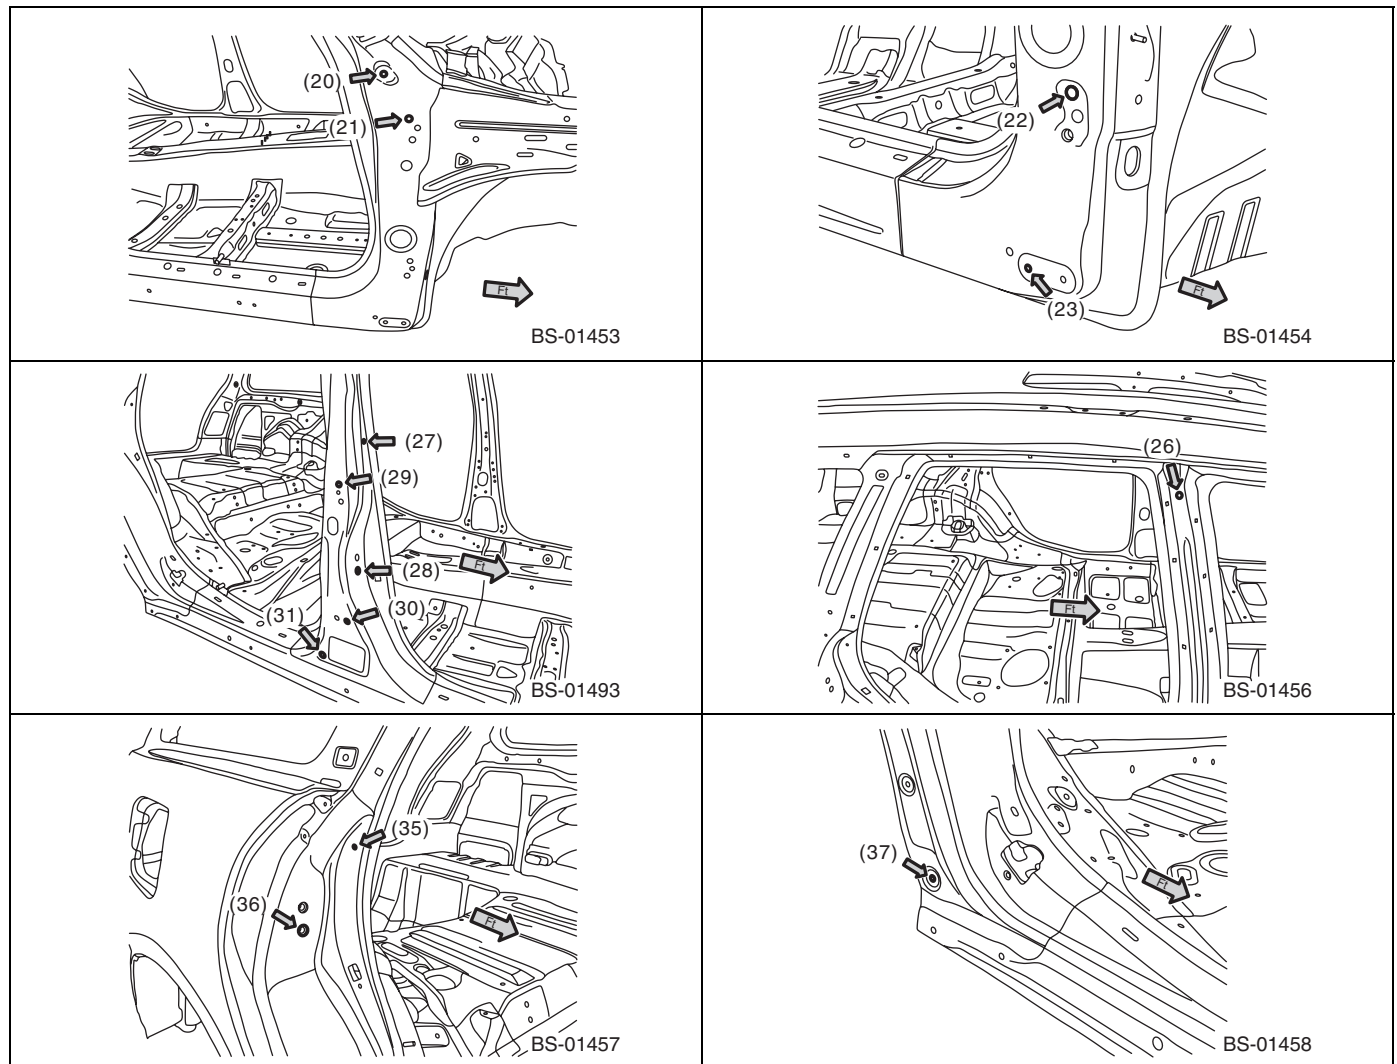

- Common for wagon and sedan model, 2

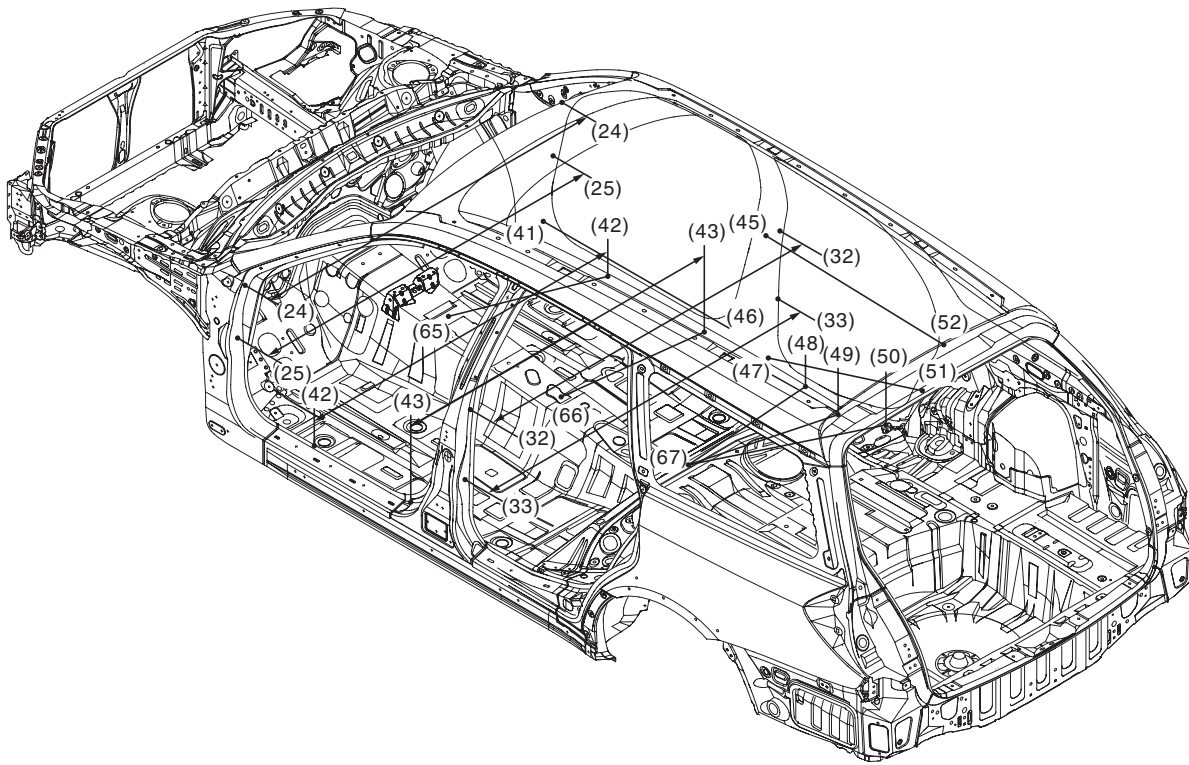

BS-01414

(24) Weatherstrip mounting hole (symmetrical)	(43) Harness clip mounting hole (symmetrical)	(50) Side sill cover mounting hole (symmetrical)
(25) Front door checker mounting hole (symmetrical)	(45) Trim clip mounting hole (symmetrical)	(51) Gauge hole (symmetrical)
(32) Weatherstrip mounting hole (symmetrical)	(46) Trim clip mounting hole (symmetrical)	(52) Trim clip mounting hole (symmetrical)
(33) Rear door checker mounting hole (symmetrical)	(47) Harness clip mounting hole (symmetrical)	(65) Airbag unit mounting hole (body center)
(41) Side sill cover mounting hole (symmetrical)	(48) Harness clip mounting hole (symmetrical)	(66) Side sill cover mounting hole (symmetrical)
(42) Harness clip mounting hole (symmetrical)	(49) Harness clip mounting hole (symmetrical)	(67) Floor mat mounting hole (body center)










Datum Dimensions

BODY STRUCTURE

Point of measurement	Datum Dimension mm (in)
(24) — (24)	1,482 (58.35)
(25) — (25)	1,476 (58.11)
(32) — (32)	1,448 (57.01)
(33) — (33)	1,464 (57.64)
(41) — (46)	863 (33.98)
(42) — (42)	1,373 (54.06)
(42) — (65)	706 (27.80)
(43) — (43)	1,373 (54.06)
(43) — (66)	693 (27.28)
(45) — (52)	838 (32.99)
(47) — (51)	740 (29.13)
(48) — (67)	711 (27.99)
(49) — (67)	649 (25.55)
(50) — (67)	704 (27.72)

NOTE:


- The reference points (65), (66), and (67) are at the body center, while the other points are left-right symmetrical.
- The dimensions are the actual dimensions between the reference points.

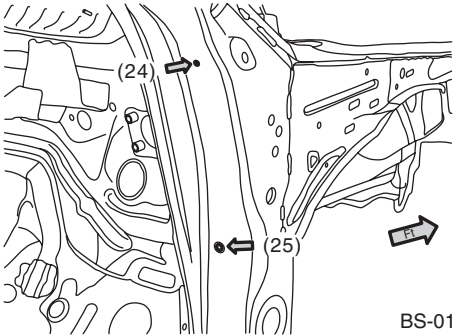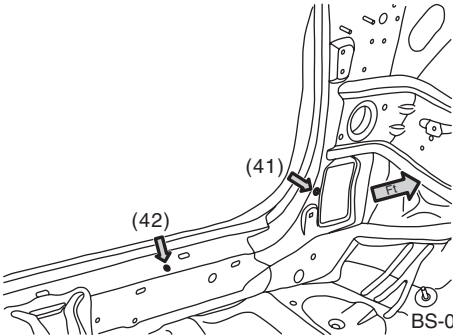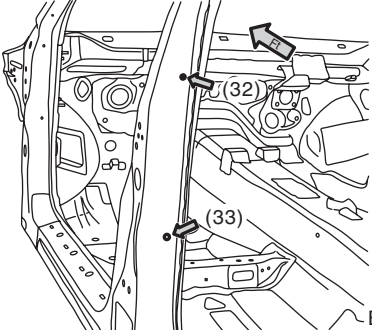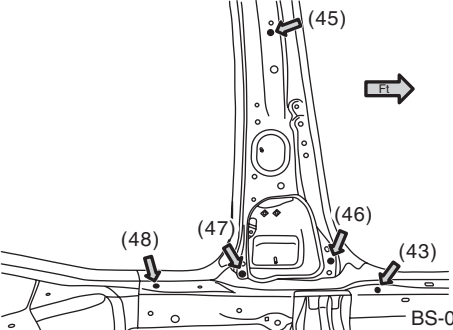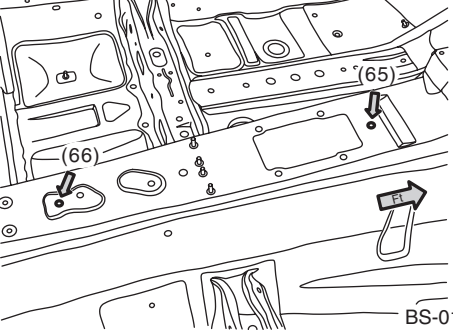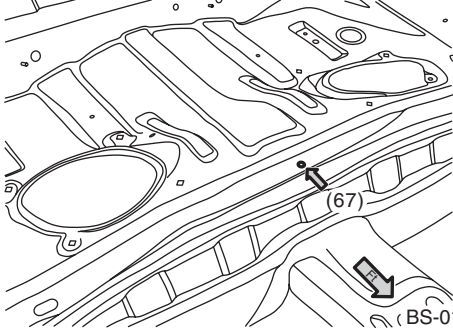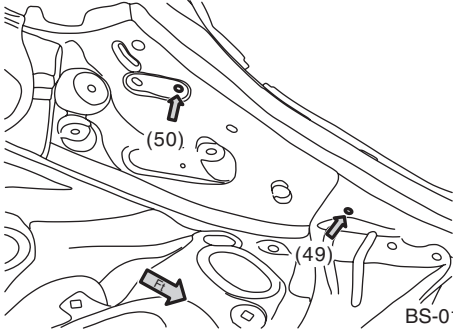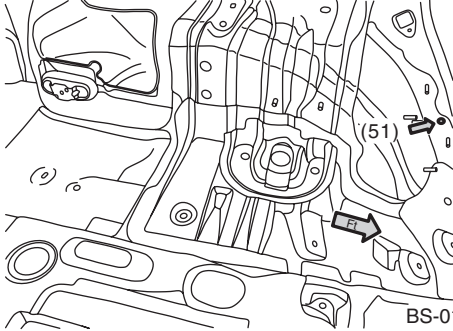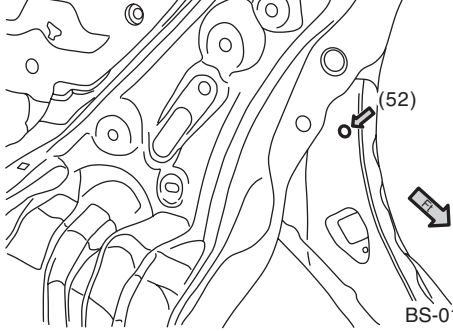 BS-01459	 BS-01460
 BS-01494	 BS-01462
 BS-01463	 BS-01464
 BS-01465	 BS-01466
 BS-01467	

Datum Dimensions

BODY STRUCTURE

- Common for wagon and sedan model, 3

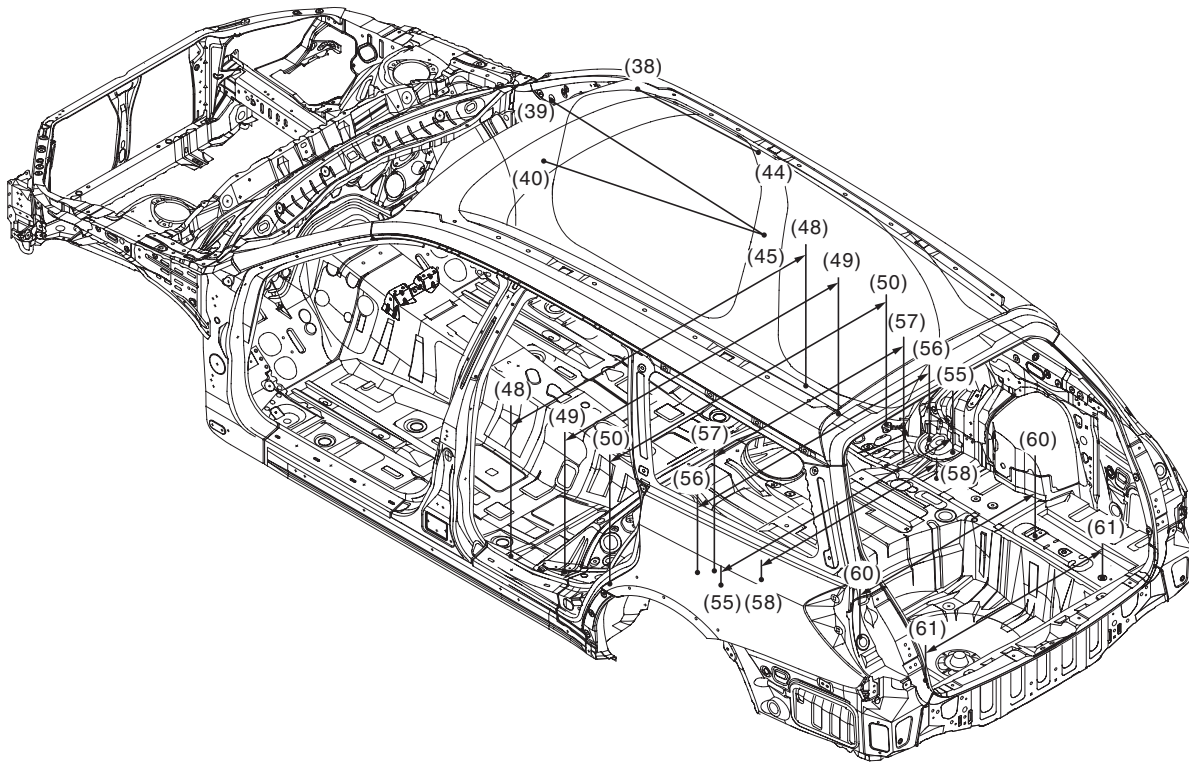

BS-01532

(38) Trim clip mounting hole (symmetrical)	(48) Harness clip mounting hole (symmetrical)	(56) Rear suspension mounting hole (symmetrical), front
(39) ED hole (symmetrical)	(49) Harness clip mounting hole (symmetrical)	(57) Rear seat hinge mounting hole (symmetrical)
(40) Hood lock lever arrest hole (symmetrical)	(50) Side sill cover mounting hole (symmetrical)	(58) Gauge hole (symmetrical)
(44) Trim clip mounting hole (symmetrical)	(55) Rear suspension mounting hole (symmetrical), rear	(60) Gauge hole (symmetrical)
(45) Trim clip mounting hole (symmetrical)		(61) Gauge hole (symmetrical)

Datum Dimensions


BODY STRUCTURE

Point of measurement	Datum Dimension mm (in)
(38) — (44)	586 (23.07)
(39) — (45)	993 (39.09)
(40) — (45)	1,043 (41.06)
(48) — (48)	1,380 (54.33)
(49) — (49)	1,280 (50.39)
(50) — (50)	1,294 (50.94)

Point of measurement	Datum Dimension mm (in)
(55) — (55)	1,084 (42.68)
(56) — (56)	1,090 (42.91)
(57) — (57)	886 (34.88)
(58) — (58)	820 (32.28)
(60) — (60)	820 (32.28)
(61) — (61)	840 (33.07)


NOTE:

- All reference points are left-right symmetrical.
- The dimensions are the actual dimensions between the reference points.

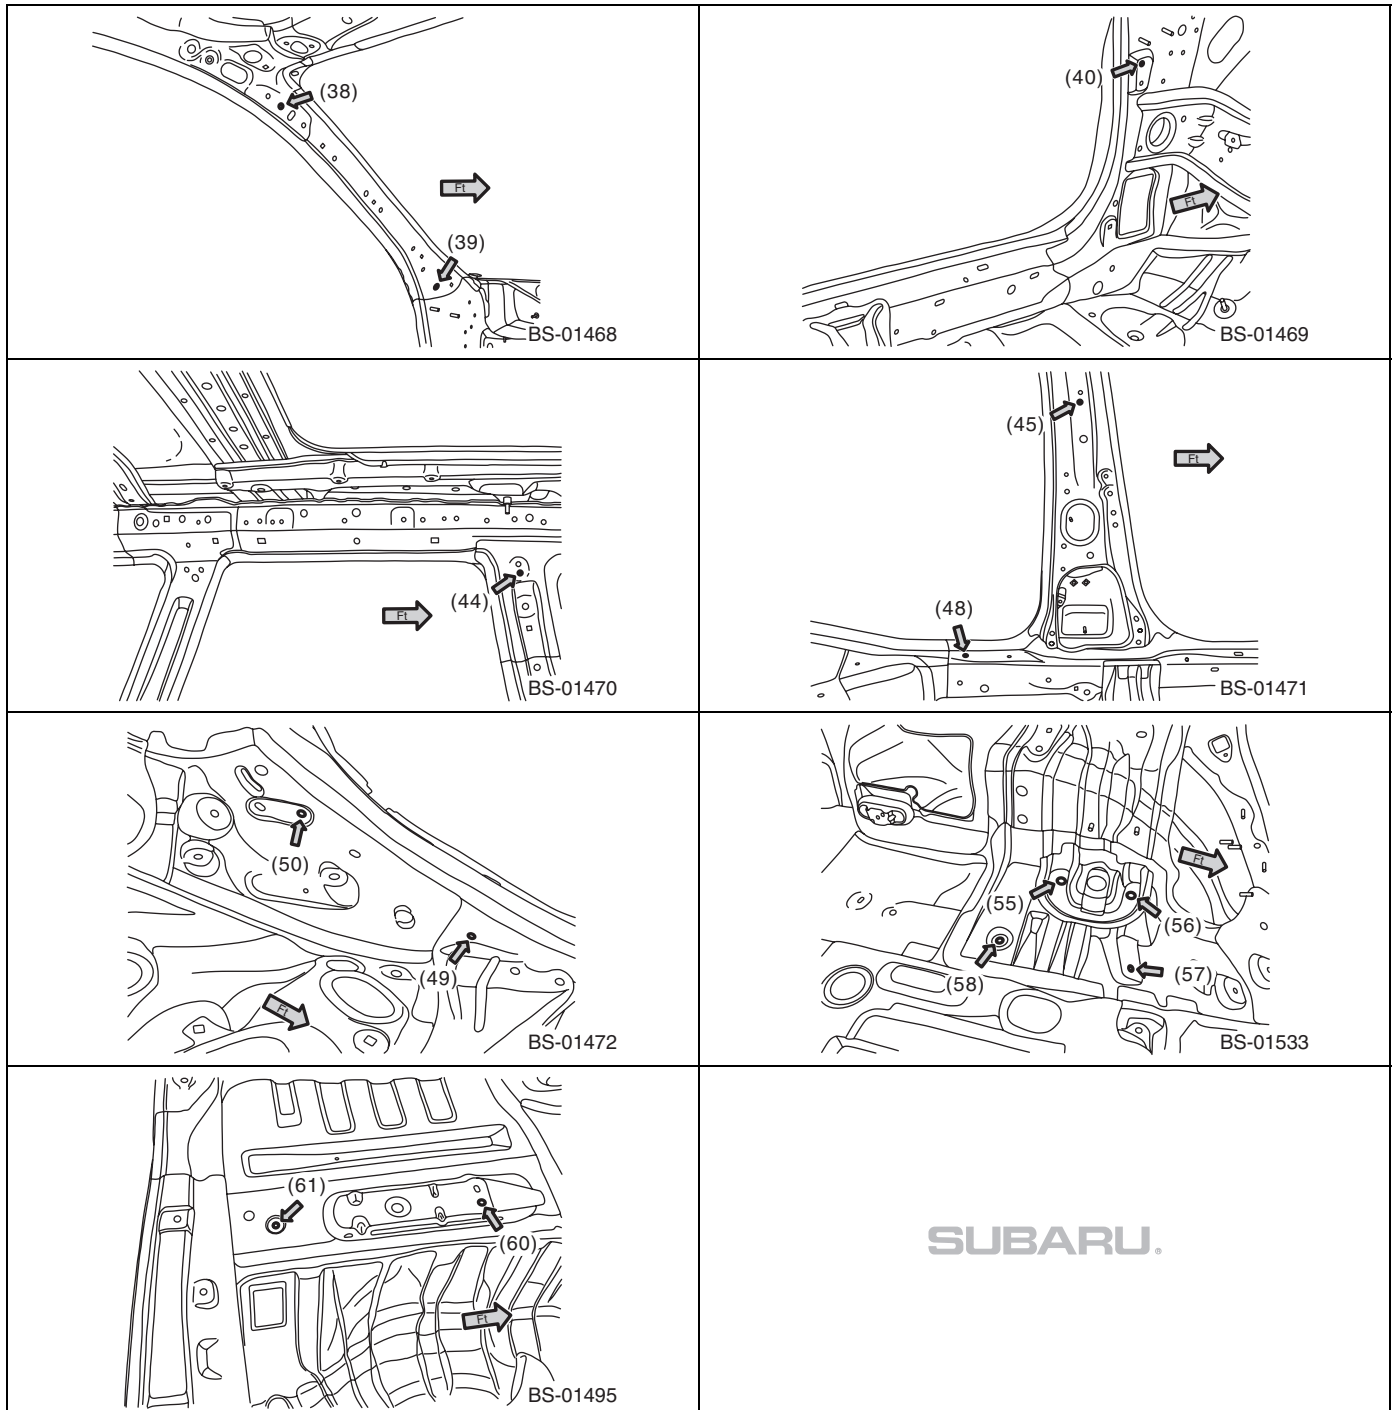

4. REAR

- Wagon model

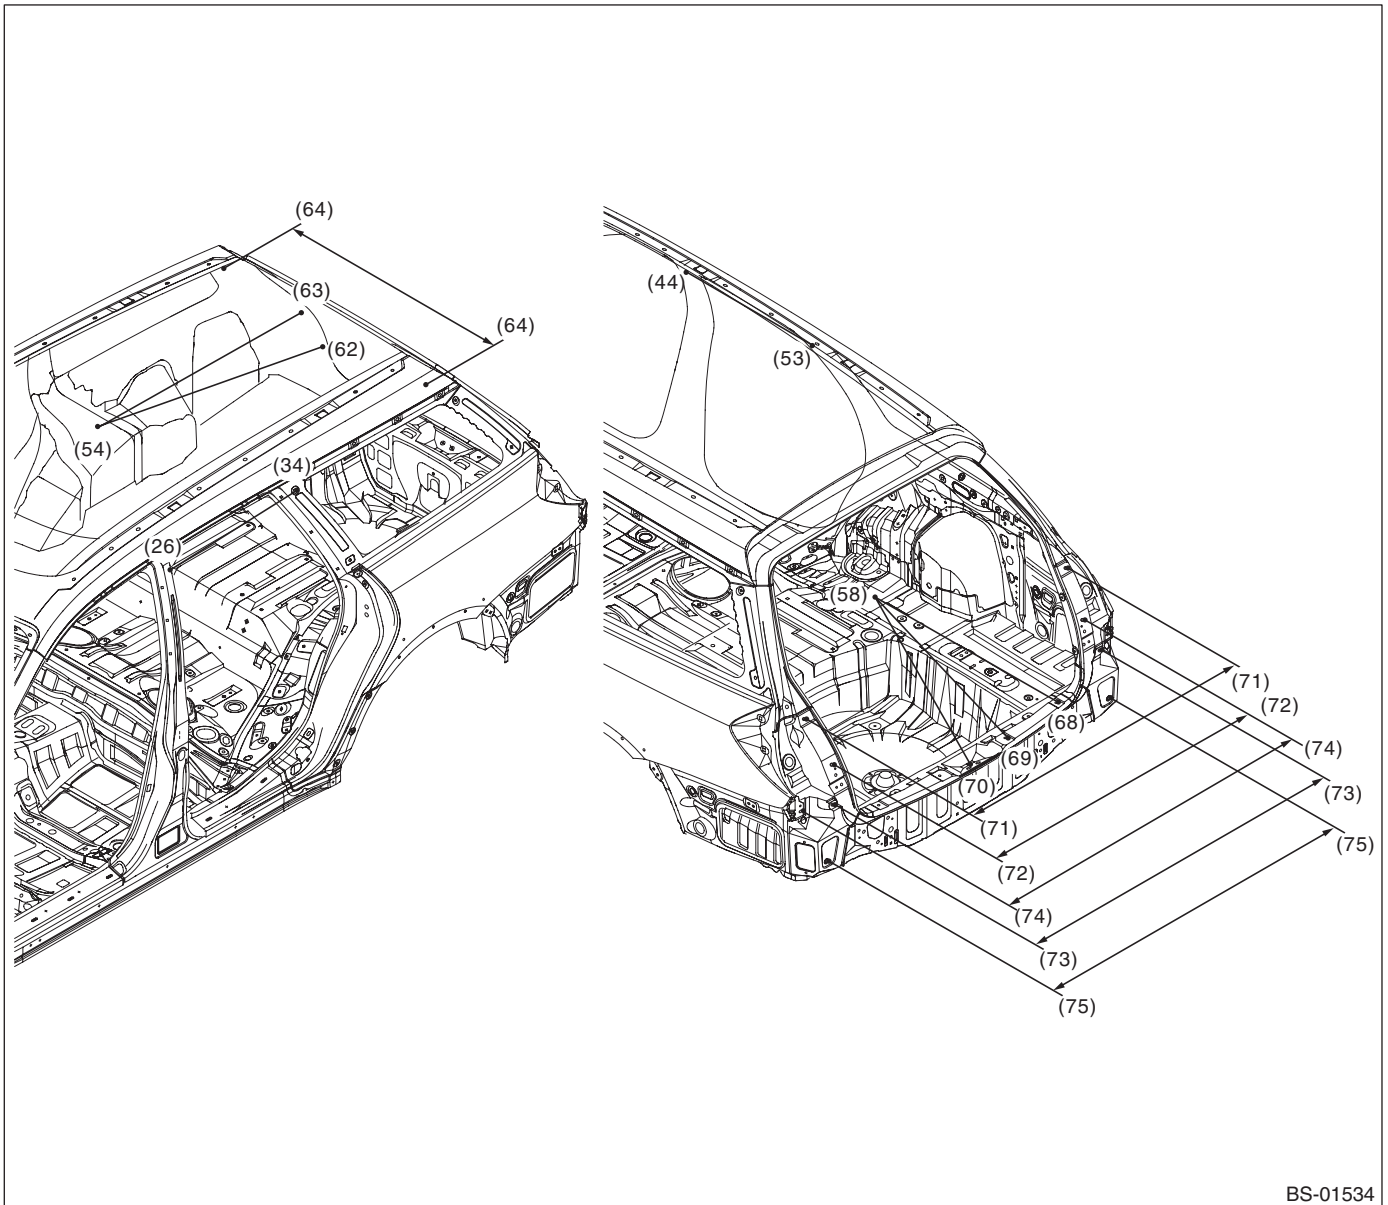

BS-01534

(26) Gauge hole (symmetrical)	(63) Trim clip mounting hole (symmetrical)	(71) Combination light mounting hole (symmetrical)
(34) Rear quarter glass mounting hole (symmetrical)	(64) Harness clip mounting hole (symmetrical)	(72) Buffer mounting hole (symmetrical)
(44) Trim clip mounting hole (symmetrical)	(68) Trim clip mounting hole (symmetrical)	(73) Bumper mounting hole (symmetrical)
(53) Trim clip mounting hole (symmetrical)	(69) Trim clip mounting hole (symmetrical)	(74) Bracket corner mounting hole (symmetrical)
(54) Rear seat striker mounting hole (symmetrical)	(70) Repair location hole (body center)	(75) Gauge hole (symmetrical)
(58) Gauge hole (symmetrical)		
(62) Trim clip mounting hole (symmetrical)		

Datum Dimensions


BODY STRUCTURE

Point of measurement	Datum Dimension mm (in)
(26) — (34)	613 (24.13)
(44) — (53)	591 (23.27)
(54) — (62)	969 (38.15)
(54) — (63)	884 (34.80)
(58) — (68)	900 (35.43)
(58) — (69)	958 (37.72)

Point of measurement	Datum Dimension mm (in)
(58) — (70)	990 (38.98)
(64) — (64)	944 (37.17)
(71) — (71)	1,224 (48.19)
(72) — (72)	1,173 (46.18)
(73) — (73)	1,438 (56.61)
(74) — (74)	1,250 (49.21)
(75) — (75)	1,320 (59.97)

NOTE:


- The reference point (70) is at the body center, while the other points are left-right symmetrical.
- The dimensions are the actual dimensions between the reference points.

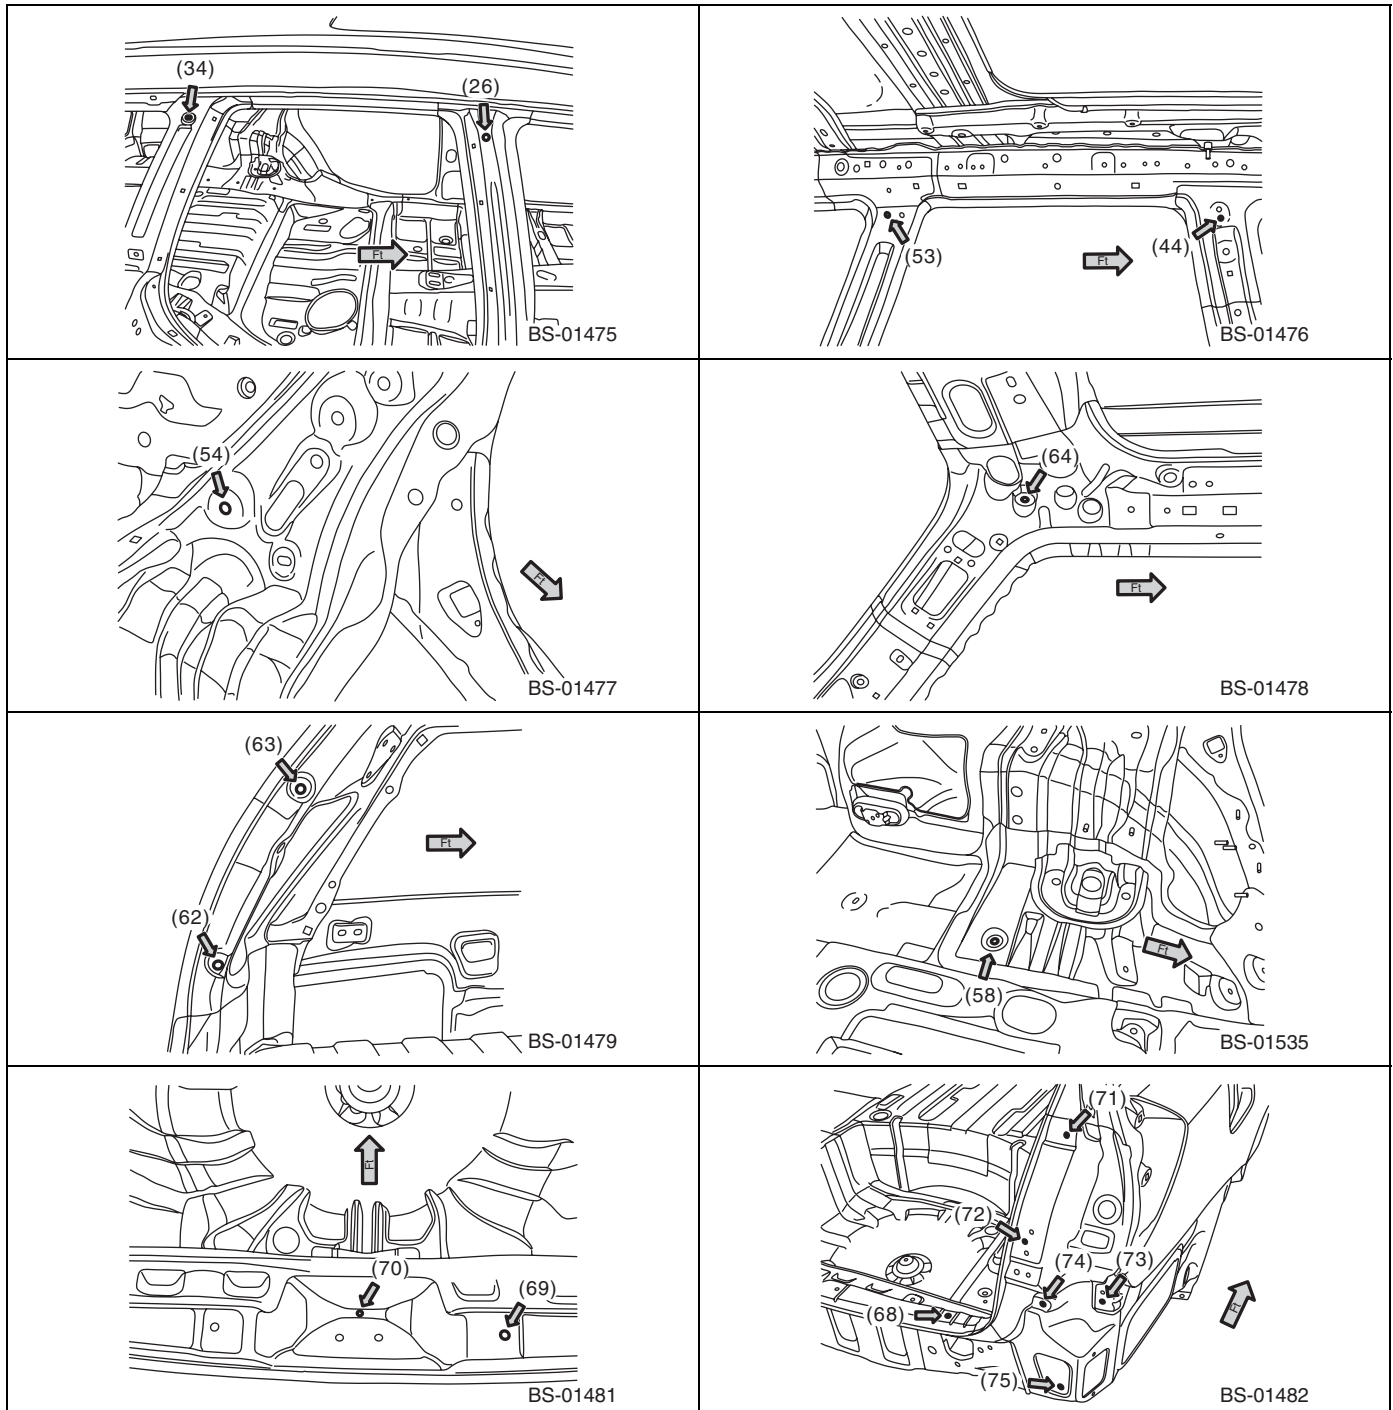

Datum Dimensions

BODY STRUCTURE

- Sedan model

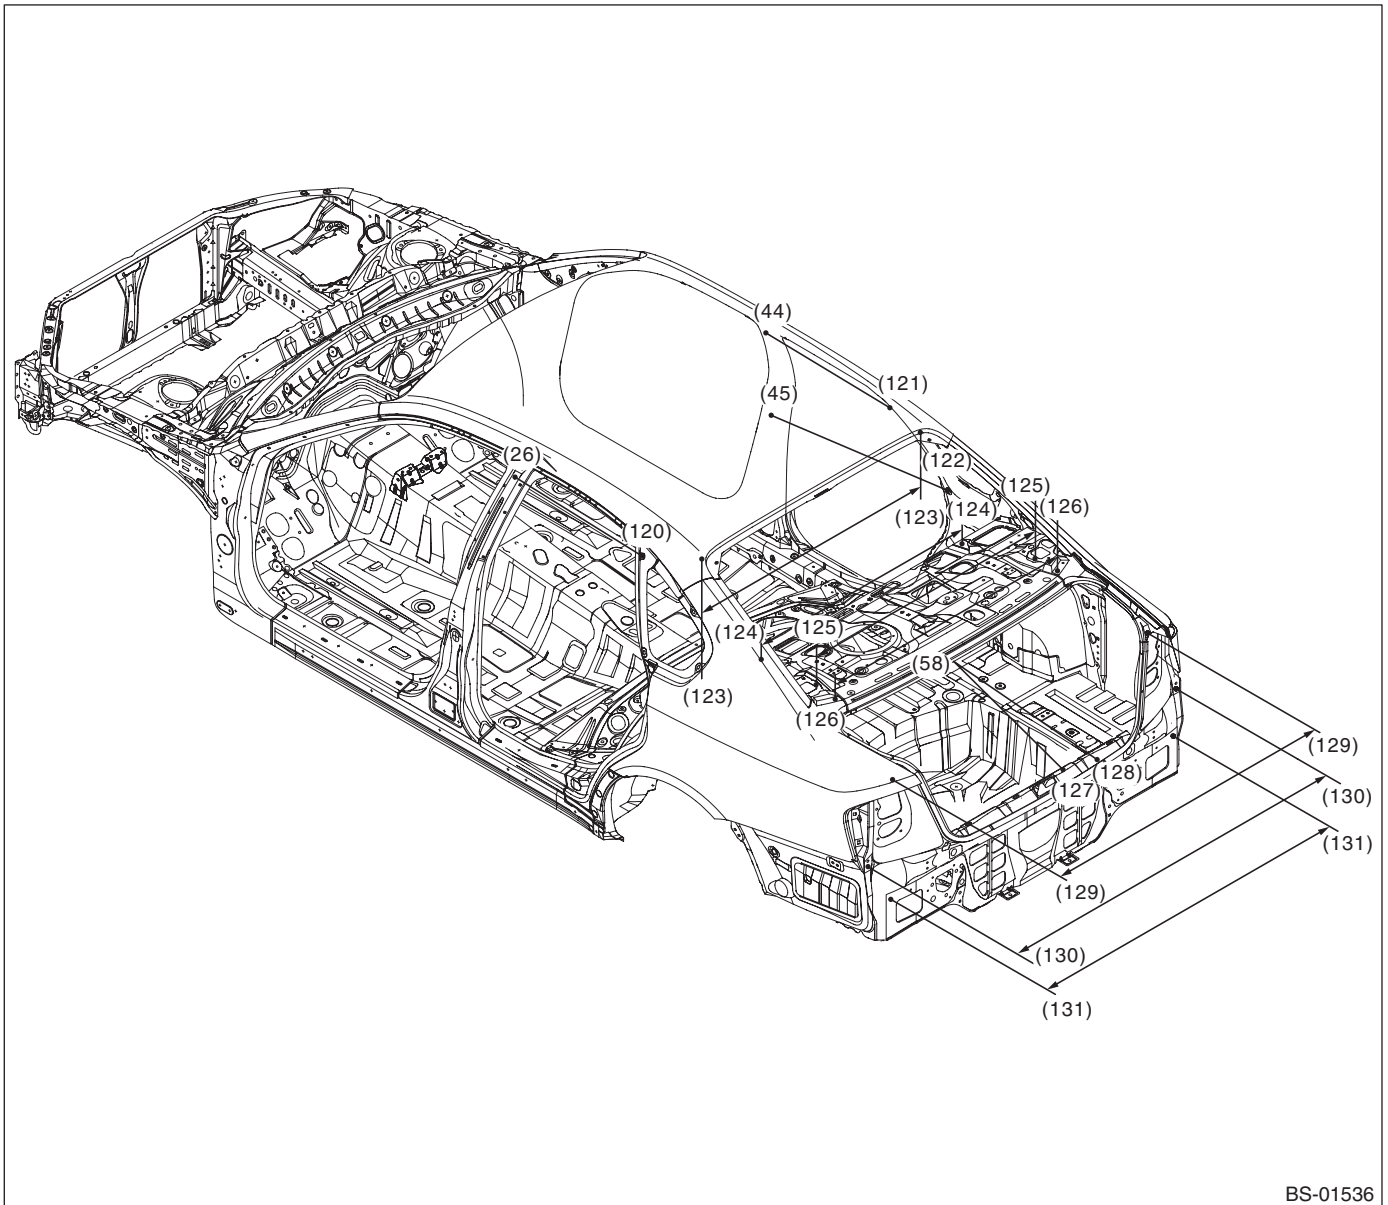


BS-01536

(26) Gauge hole (symmetrical)	(122) Trim clip mounting hole (symmetrical)	(126) Gauge hole (symmetrical)
(44) Trim clip mounting hole (symmetrical)	(123) Sunroof drain hose clip mounting hole (symmetrical)	(127) Trim clip mounting hole (symmetrical)
(45) Trim clip mounting hole (symmetrical)	(124) Trim clip mounting hole (symmetrical)	(128) ED hole (symmetrical)
(58) Gauge hole (symmetrical)	(125) Harness clip mounting hole (symmetrical)	(129) Combination light mounting hole
(120) Six light glass mounting hole (symmetrical)		(130) Bumper bracket mounting hole (symmetrical)
(121) Trim clip mounting hole (symmetrical)		(131) ED hole (symmetrical)

Point of measurement	Datum Dimension mm (in)
(26) — (120)	598 (23.54)
(44) — (121)	570 (22.44)
(45) — (122)	835 (32.87)
(58) — (127)	916 (36.06)
(58) — (128)	904 (35.59)
(123) — (123)	1,024 (40.31)
(124) — (124)	940 (37.01)
(125) — (125)	1,024 (40.31)
(126) — (126)	1,040 (40.94)
(129) — (129)	1,191 (46.89)
(130) — (130)	1,442 (56.77)
(131) — (131)	1,322 (52.05)

NOTE:



- All reference points are left-right symmetrical.
- The dimensions are the actual dimensions between the reference points.

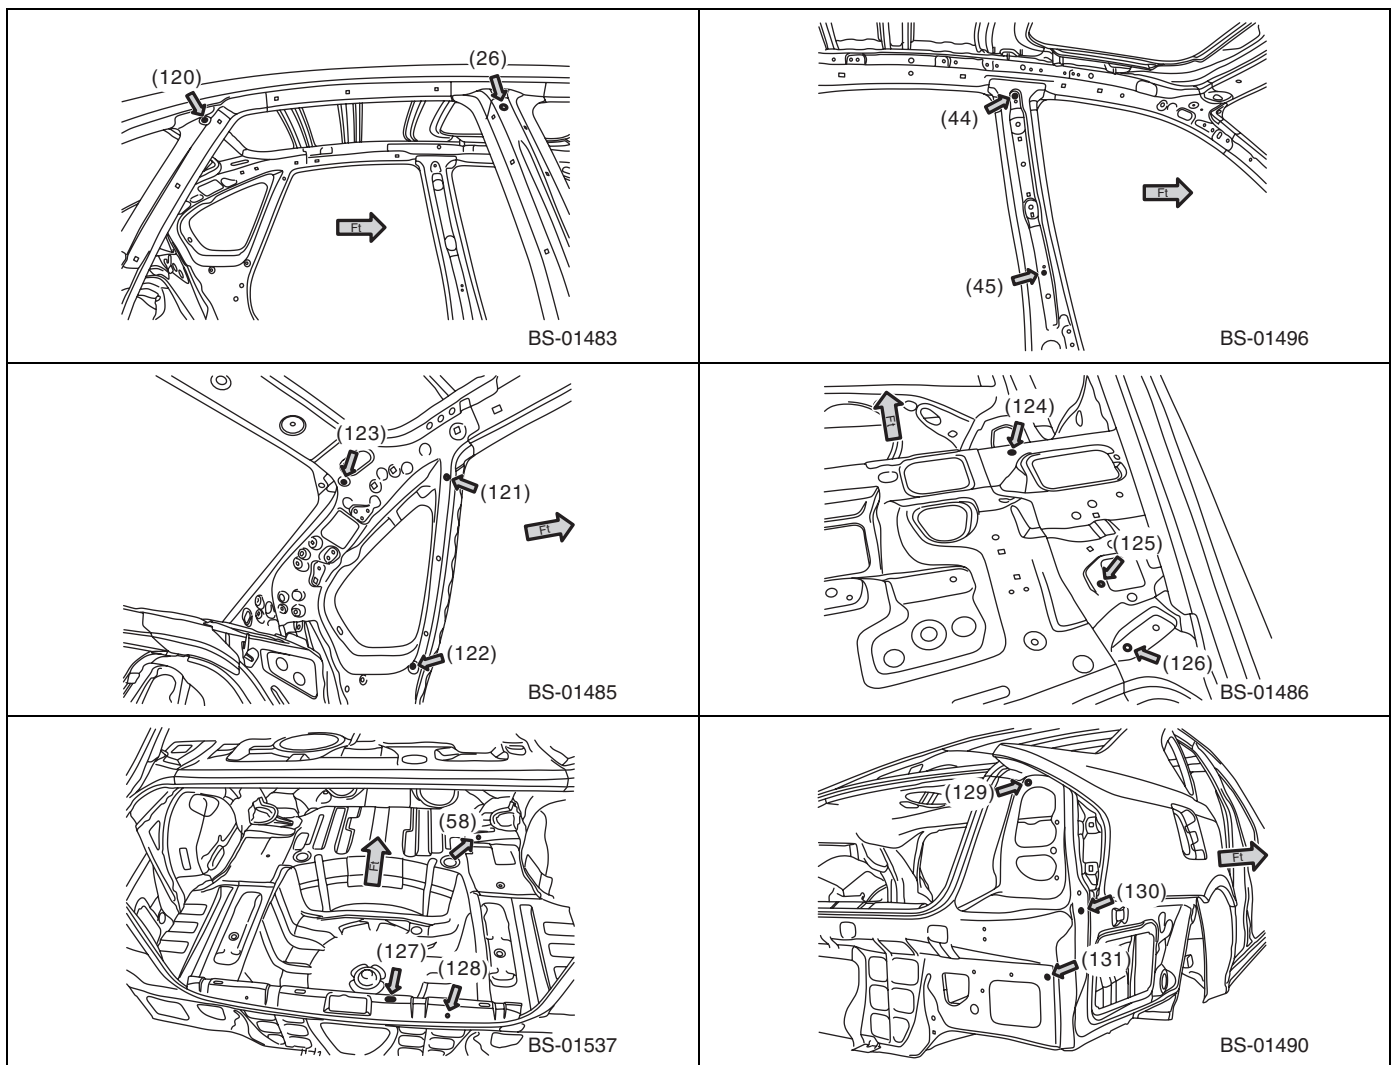

5. SUSPENSION MOUNT

NOTE:

- Longitudinal dimensions are projected dimensions.
- The height dimensions are the vertical distances from the gauge point on the assumed horizontal line through the side sill flange joint (bending angle point).
- For the reference point positions, refer to “Datum Dimensions”. <Ref. to BS-3, CENTER STRUCTURE, MEASUREMENT, Datum Dimensions.>

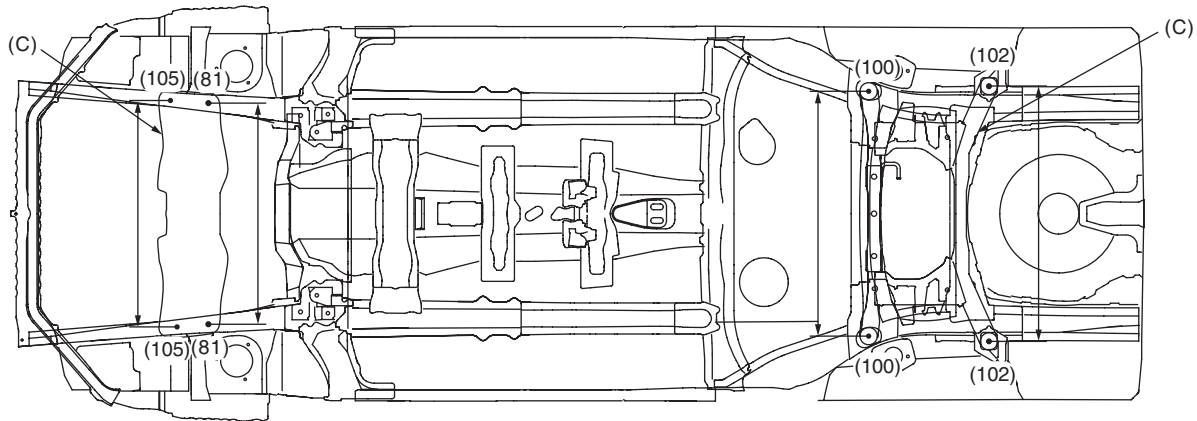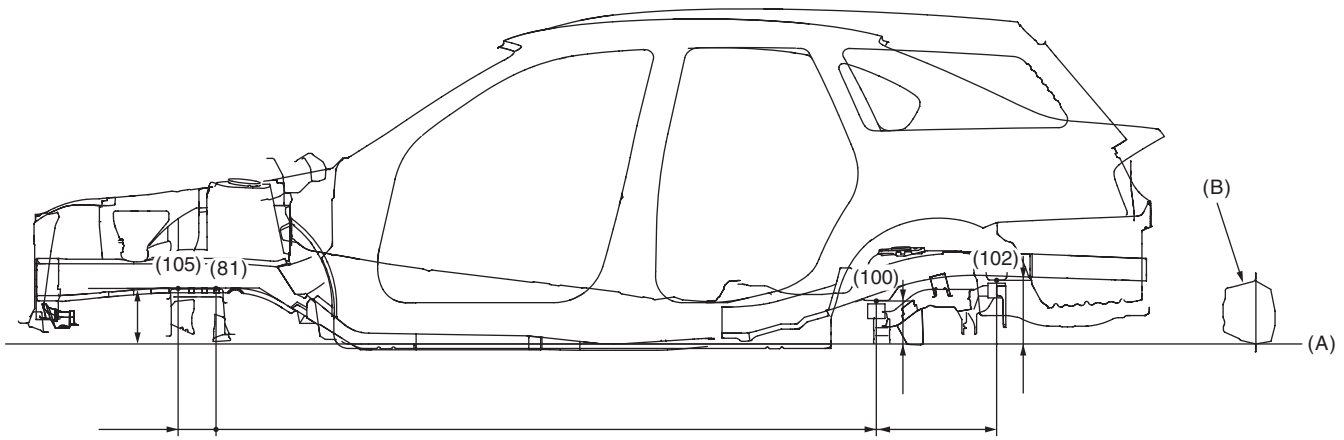

BS-01418

(A) Standard line

(B) Side sill

(C) Crossmember

(81) Front crossmember mounting hole (symmetrical), rear


(102) Rear suspension mounting hole (symmetrical)

(105) Front crossmember mounting hole (symmetrical), front

(100) Rear suspension mounting hole (symmetrical)

3. Plastic Parts and Materials

A: SPECIFICATION

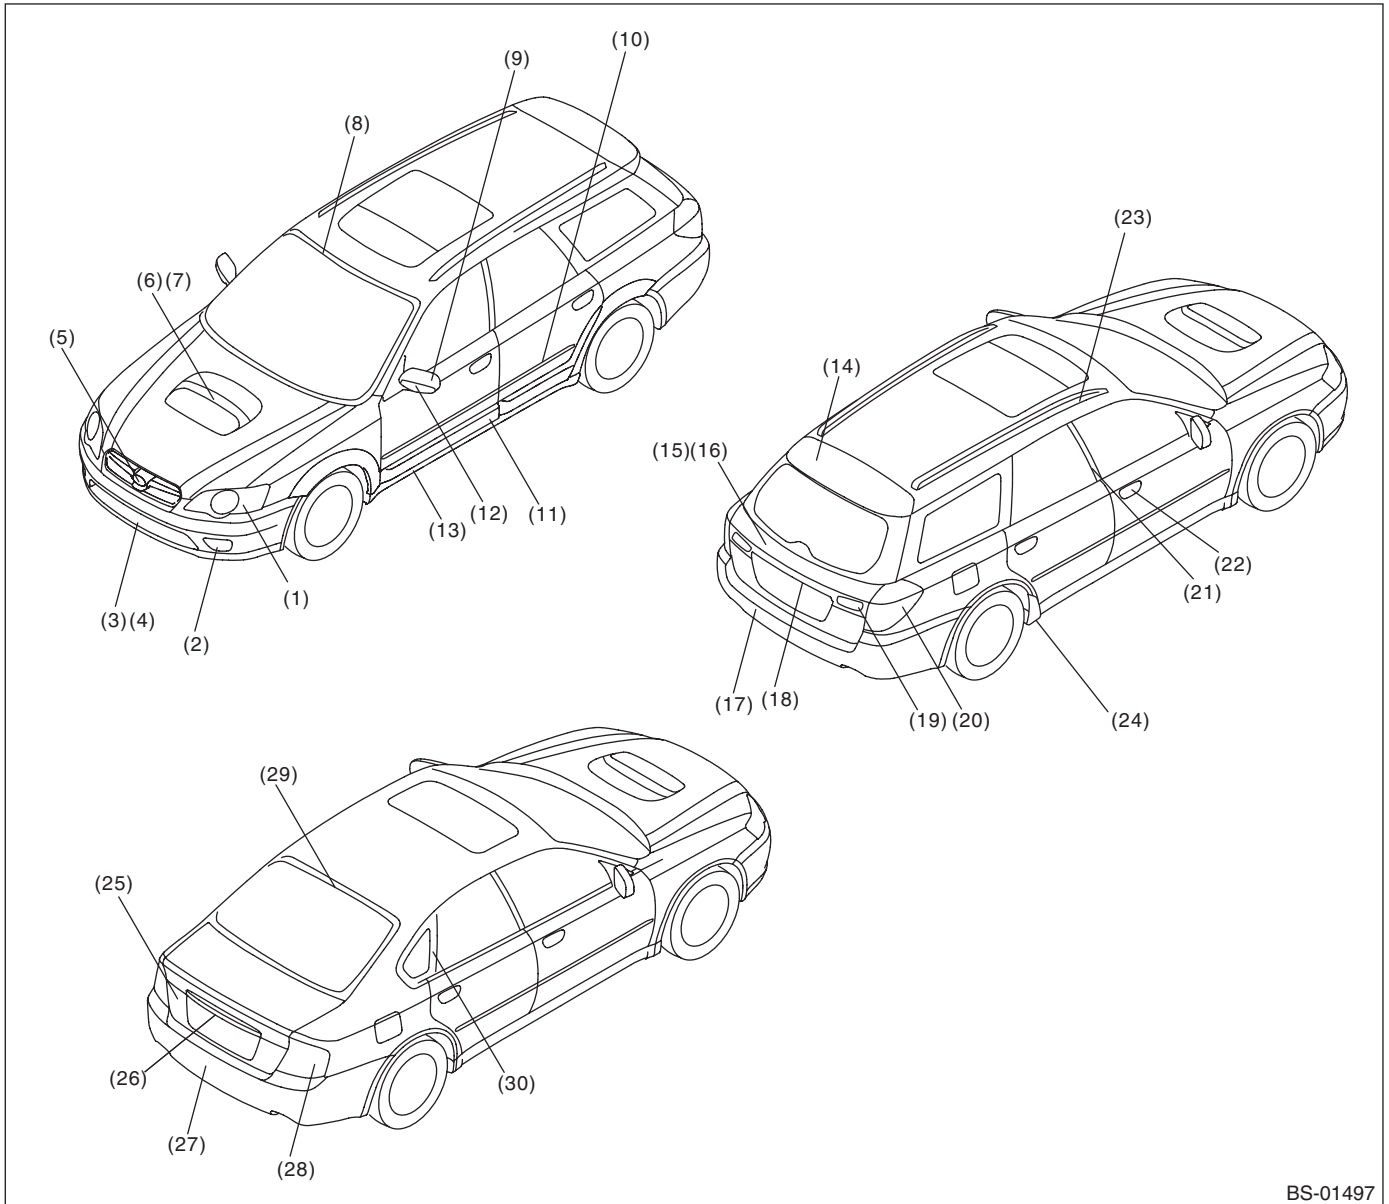

BS-01497

- | | | |
|---------------------------|-----------------------------|-----------------------------|
| (1) Headlight | (11) Side Garnish | (21) Center pillar cover |
| (2) Front fog light | (12) Side turn light | (22) Door handle |
| (3) Front bumper | (13) Side spoiler | (23) Roof rail |
| (4) Air intake cover | (14) Rear Spoiler | (24) Rear Quarter Protector |
| (5) Front grille | (15) Rear garnish | (25) Trunk garnish |
| (6) Turbo grille | (16) License plate light | (26) License plate light |
| (7) Hood duct inner | (17) Rear bumper | (27) Rear bumper |
| (8) Front window moulding | (18) Rear gate handle | (28) Rear combination light |
| (9) Door mirror | (19) Back-up light | (29) Rear window moulding |
| (10) Side protector | (20) Rear combination light | (30) Six light moulding |

- Wagon model/Common for wagon and sedan model

No.	Part name		Material
(1)	Headlight	Lens	PC
		Housing	PP
		Extension	PBT + PET
(2)	Front fog light (standard)	Housing	PET
	Front fog light (OUTBACK)	Lens	PC
		Reflector	UP - GF10
		Bracket	PP - GF30
(3)	Front bumper	Face	PP
		EA foam	Foamed PP
		Fog light cover	PP
		Hook cover	PP
		Bumper cover (OUTBACK)	PP
(4)	Air intake cover		PP
(5)	Front grille		ABS
(6)	Turbo grille		PA + PPE
(7)	Hood duct inner		PP + EPDM
(8)	Front window moulding		PVC
(9)	Door mirror	Body	ASA
		Inner cover	AES
		Outer cover	ABS
		Mirror holder	PP
(10)	Side protector		PP
(11)	Side Garnish	Door body	PC + PET
		Other than door body	PP
		Side sill end cover	PP + EPDM
(12)	Side turn light	Lens	PMMA + PC
		Housing	PC
(13)	Side spoiler	Engine	PP
(14)	Rear Spoiler	Engine	PC + PET
		High mount lens	PMMA
		High mount housing	ABS
(15)	Rear garnish	Engine	PC + PET
		Moulding	ABS
(16)	License plate light	Lens	PC
		Housing	PBT + PET
(17)	Rear bumper	Face	PP
		EA foam	Foamed PP
(18)	Rear gate handle		PP - GF 20
(19)	Back-up light	Lens	PMMA
		Housing	ASA
(20)	Rear combination light	Lens	PMMA
		Inner lens	PC
		Housing	ASA
		Reflex reflector	PMMA
		Cover	ASA
(21)	Center pillar cover		ABS
(22)	Door handle	HANDLE	PC + PET
		End cover	PP
(23)	Roof rail	Front cover	PC + PET
		Center cover (OUTBACK)	PC + PET
		Rear cover	PC + PET

Plastic Parts and Materials

BODY STRUCTURE

No.	Part name		Material
(24)	Rear Quarter Protector		PP
	Front mud guard	Engine	PE
		Air flap	TPO
	Rear mud guard		PE
	Under cover	Engine	PP
		Flap	TPO
	Splash board		PP
	Cowl panel	Body, side	PP
		Cover	PP
	Rear wiper	Blade	PBT
		Arm	PET
		Arm cover	PBT

- Sedan model

No.	Part name		Material
(25)	Trunk garnish		PC + PET
(26)	License plate light	Lens	PMMA
		Housing	ASA
(27)	Rear bumper	Face	PP
		EA foam	Foamed PP
(28)	Rear combination light	Lens	PMMA
		Inner lens	PC
		Housing	ASA
		Reflex reflector	PMMA
		Cover	ASA
(29)	Rear window moulding		PVC
(30)	Six light moulding		ABS
	High-mounted stop light	Lens	PC
		Case	PP
		Reflector	PBT + PET

4. List of Plastic Material Notations

A: SPECIFICATION

Notation symbol	Material name	Notation symbol	Material name
ABS	ABS resin (acrylonitrile-butadiene-styrene resin)	PMMA	Polymethyl methacrylate
AES	Acrylonitrile/ethylene/styrene	PP	Polypropylene
ASA	Acrylonitrile/styrene/acrylate	PPE	Poly (phenylene ether)
EPDM	Ethylene/propylene/dien rubber	PP -GF20	Polypropylene (20% glass fiber content)
GF	Glass fiber	PP - GF30	Polypropylene (30% glass fiber content)
PA	Polyamide	PVC	Polyvinyl chloride
PBT	Poly (butylene terephthalate)	SEPM	Styrene/ethylene/propylene rubber
PC	Polycarbonate	TPO	Thermoplastic olefine
PE	Polyethylene	UP	Unsaturated polyester resin
PET	Polyethylene terephthalate	UP - GF10	Unsaturated polyester resin (10% glass fiber content)


5. Body Sealing

A: SPECIFICATION

Used material:

THREE BOND 4104 (004403063)

- Common for wagon and sedan model

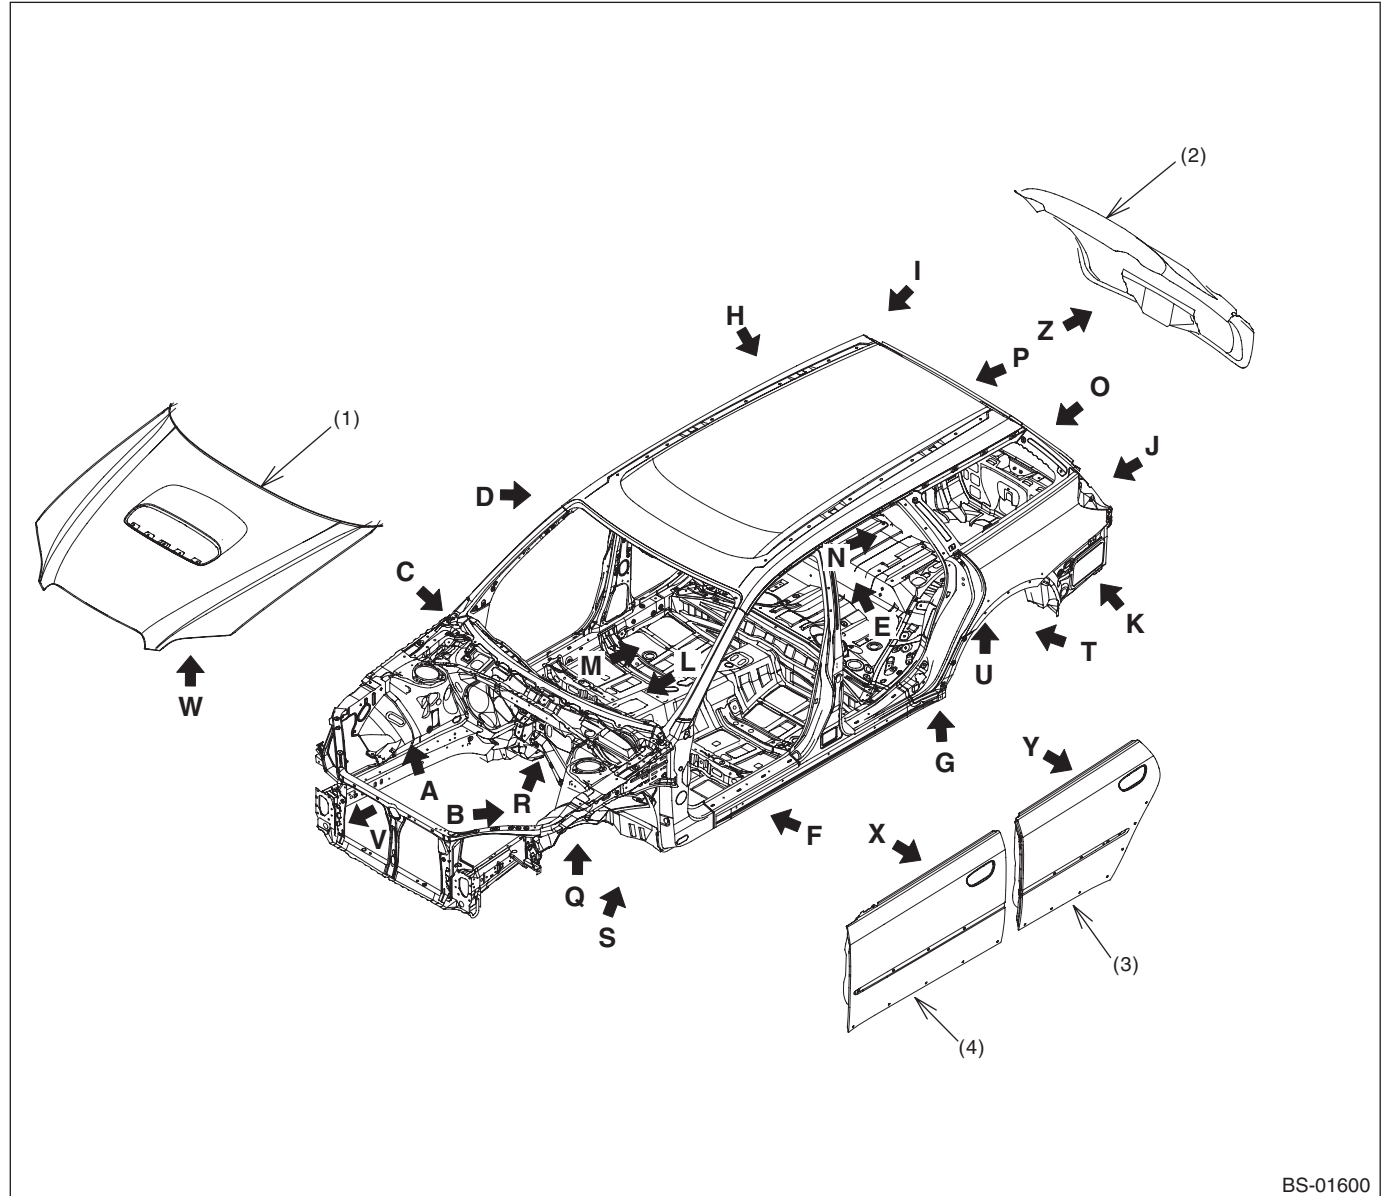


BS-01600

- (1) Front hood
(2) Rear Gate

- (3) Rear door


- (4) Front door

View A

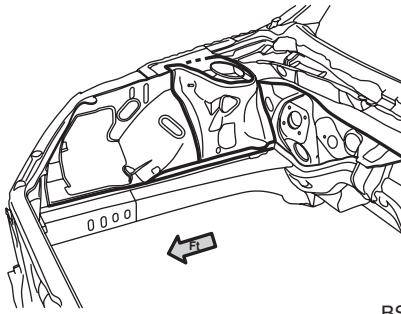


BS-01498

View B

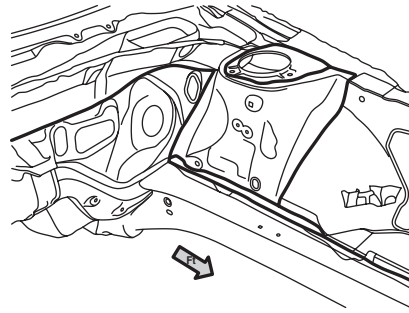


BS-01499

View C

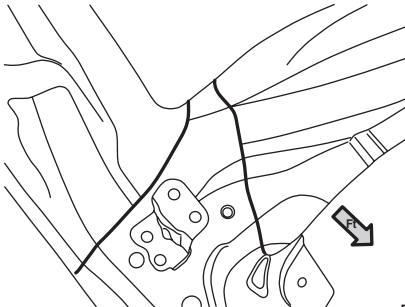


BS-00734

View D

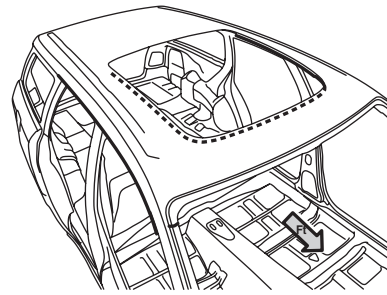


BS-00735

View E

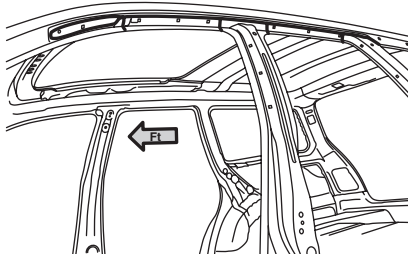


BS-00736

View F

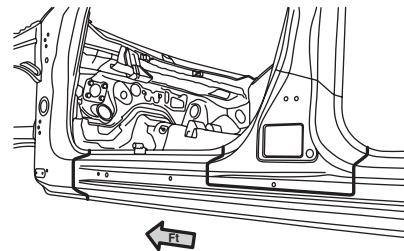


BS-01601

View G

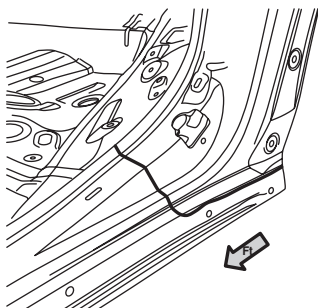

BS-00738

View H

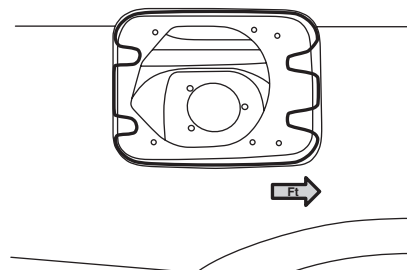


BS-00739

Body Sealing


BODY STRUCTURE

View I

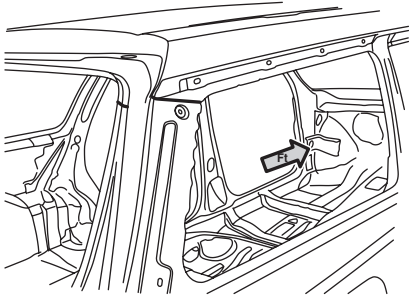


BS-00740

View J

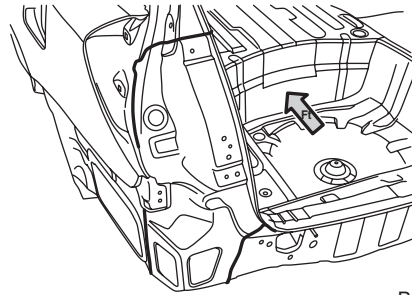


BS-00741

View K

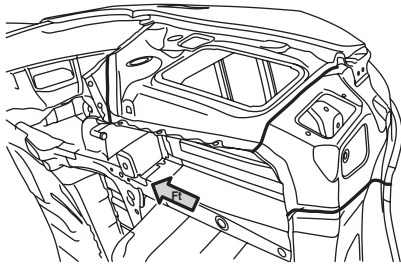


BS-00742

View L

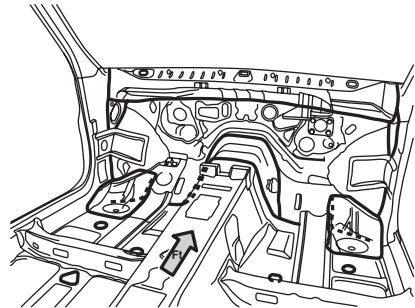


BS-00743

View M

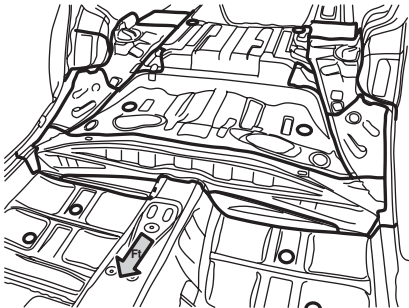


BS-00744

View N

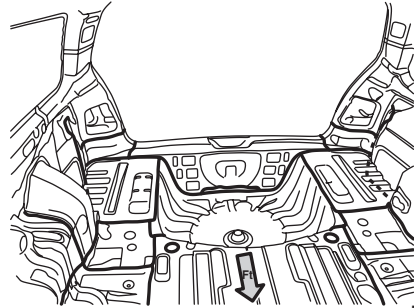


BS-00745

View O

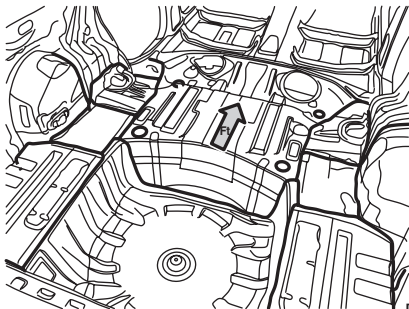


BS-00746

View P

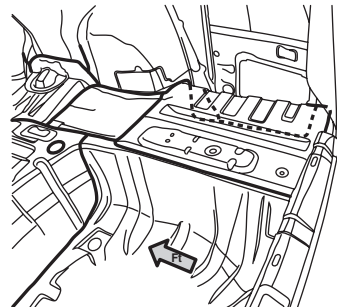


BS-00747

View Q

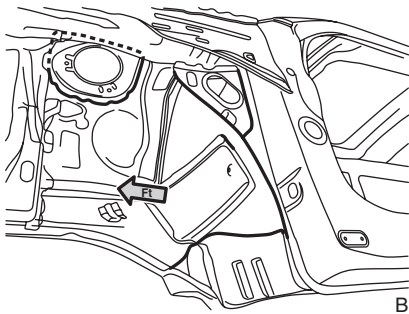


BS-00748

View R

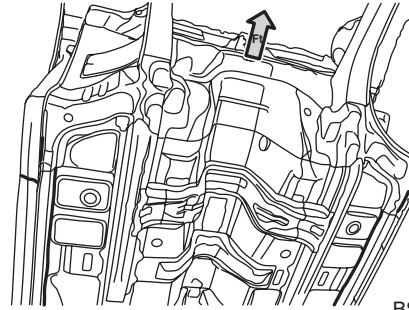


BS-01500

View S

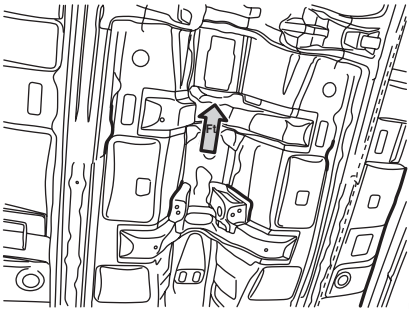


BS-01501

View T

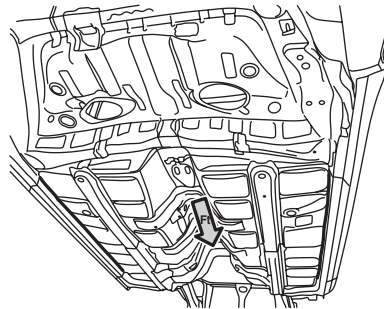


BS-01502

View U

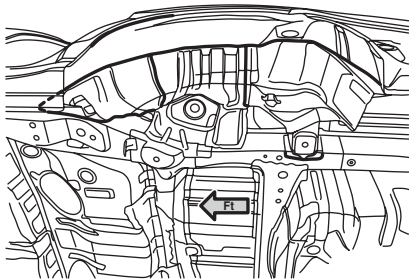

BS-01602





View V

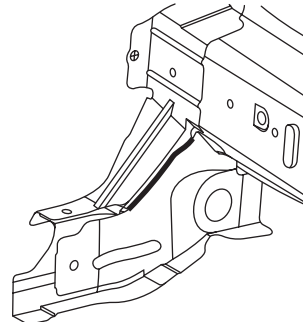

BS-01610


Body Sealing

BODY STRUCTURE

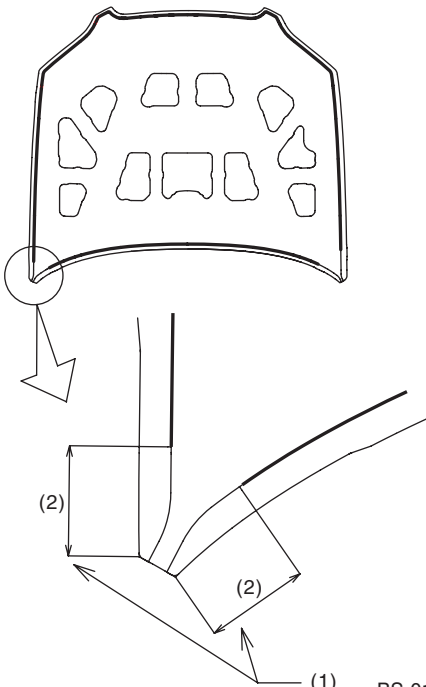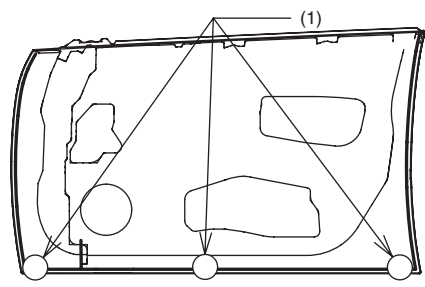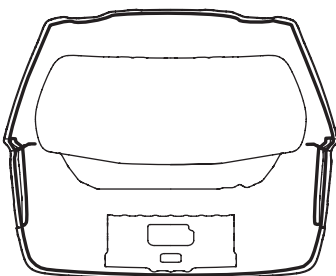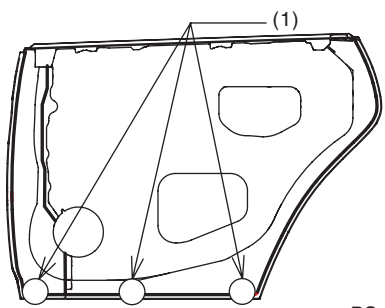View W  (1) Application not required. (2) 50 mm (1.97 in) BS-01436	View X  BS-00754 (1) Do not block the water drain holes.
View Z  BS-00756	View Y  BS-00755 (1) Do not block the water drain holes. SUBARU

CAUTION:
Sealer already has been applied to hood, door, and rear gate in replacement condition.








- Sedan model

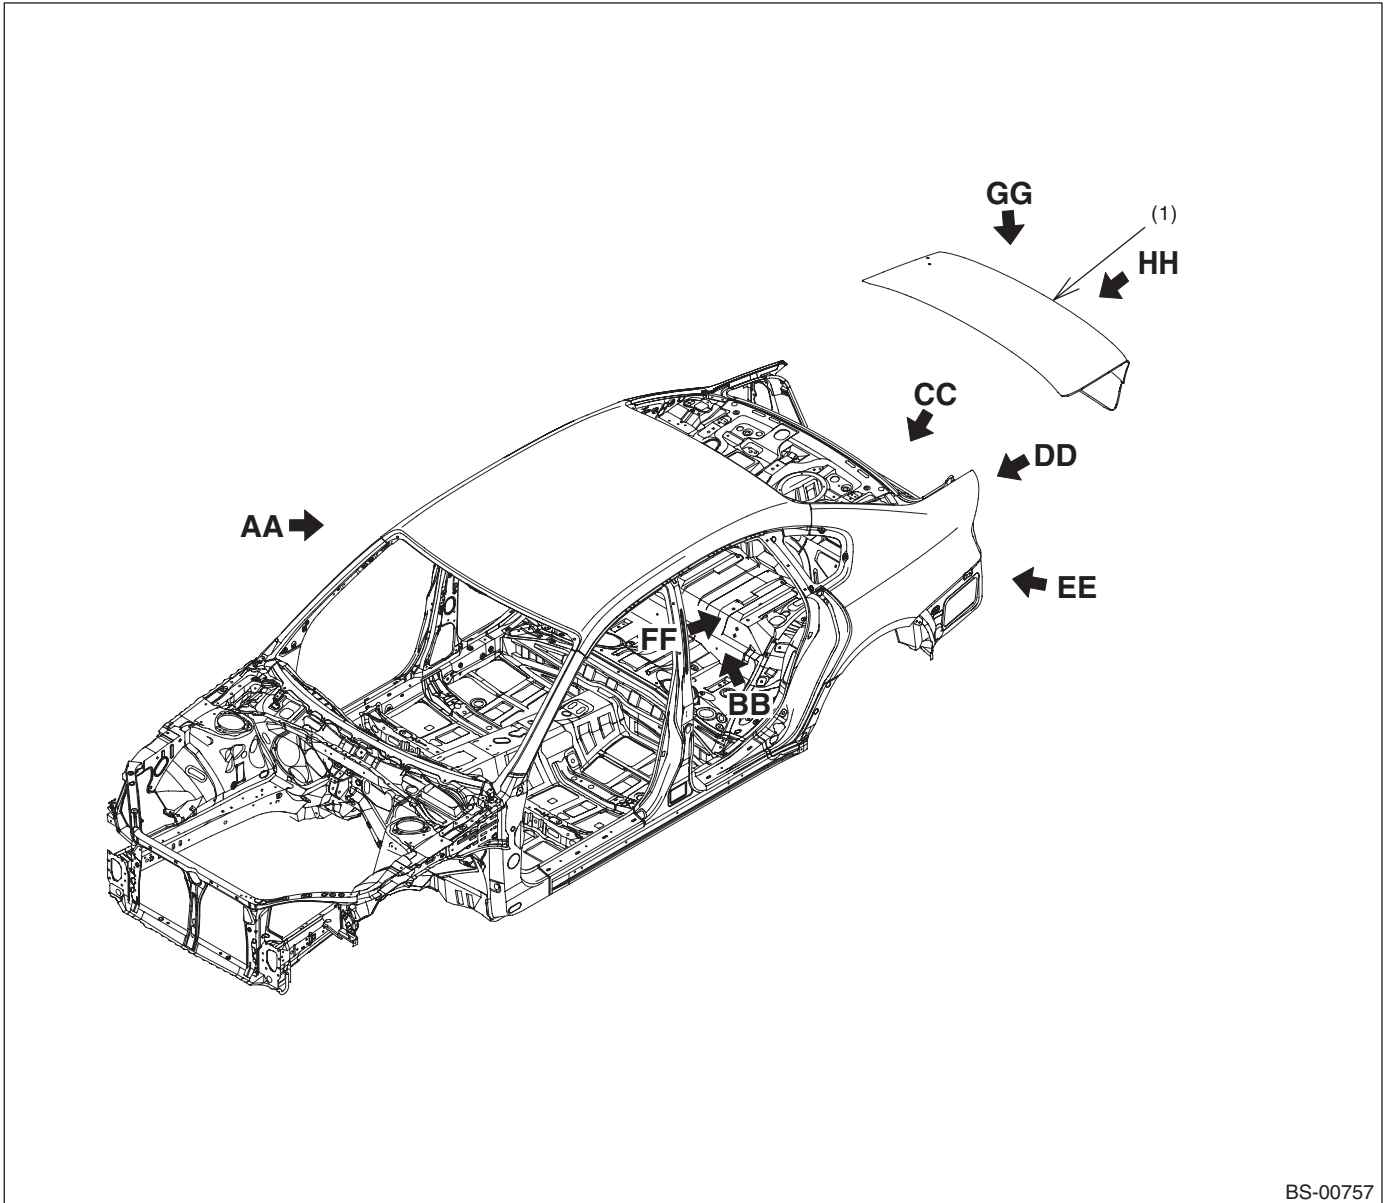

(1) Trunk

Body Sealing

BODY STRUCTURE

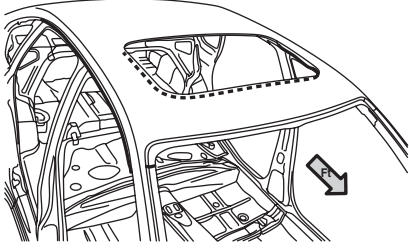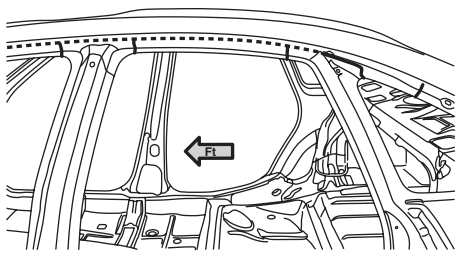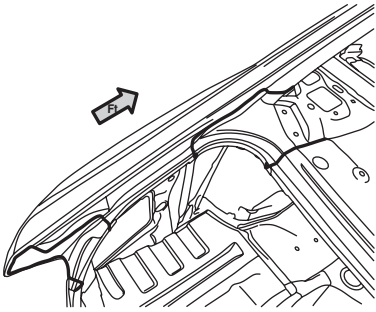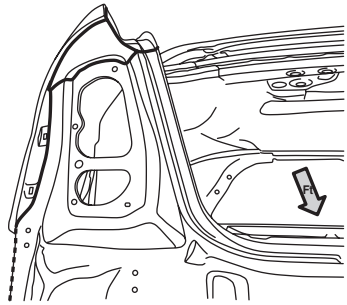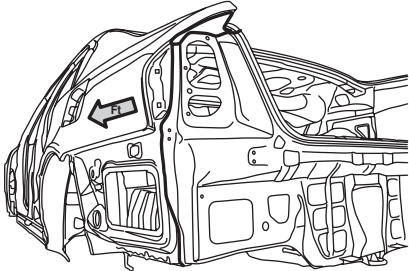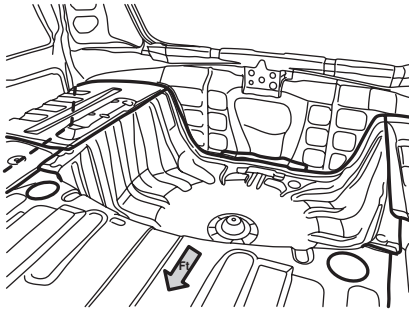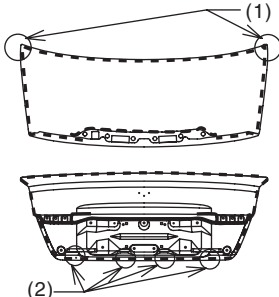View AA  BS-00758	View BB  BS-00759
View CC  BS-00760	View DD  BS-00761
View EE  BS-00762	View FF  BS-00763
View GG View HH  BS-00764 (1) The holes shall be blocked. (2) Do not block the water drain holes.	

CAUTION:
Sealer already has been applied to the trunk in replacement condition.


6. Anticorrosion Wax

A: SPECIFICATION

Used material:

Rust-stop aerosol (K0877YA015)

- Front hood

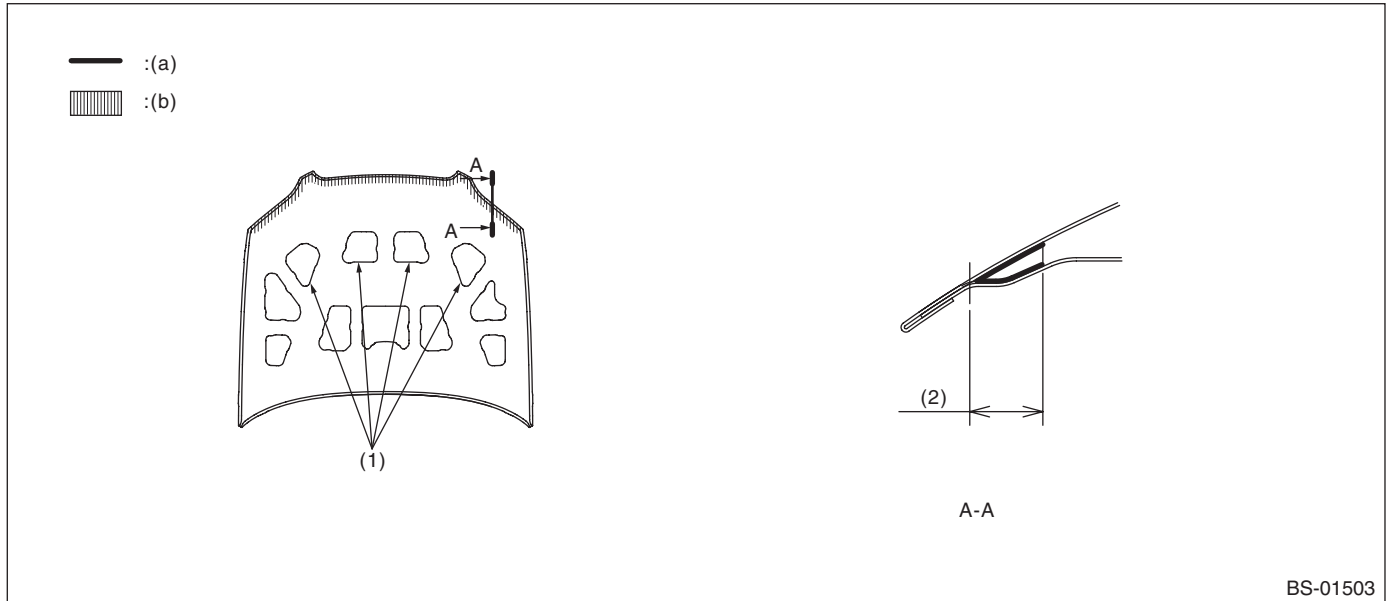


- | | |
|--|----------------------|
| (a) Application thickness = 50 μm or more | (b) Application area |
| (1) Wax application work openings | (2) 10 mm (0.39 in) |

Anticorrosion Wax

BODY STRUCTURE

• Door (front, rear)

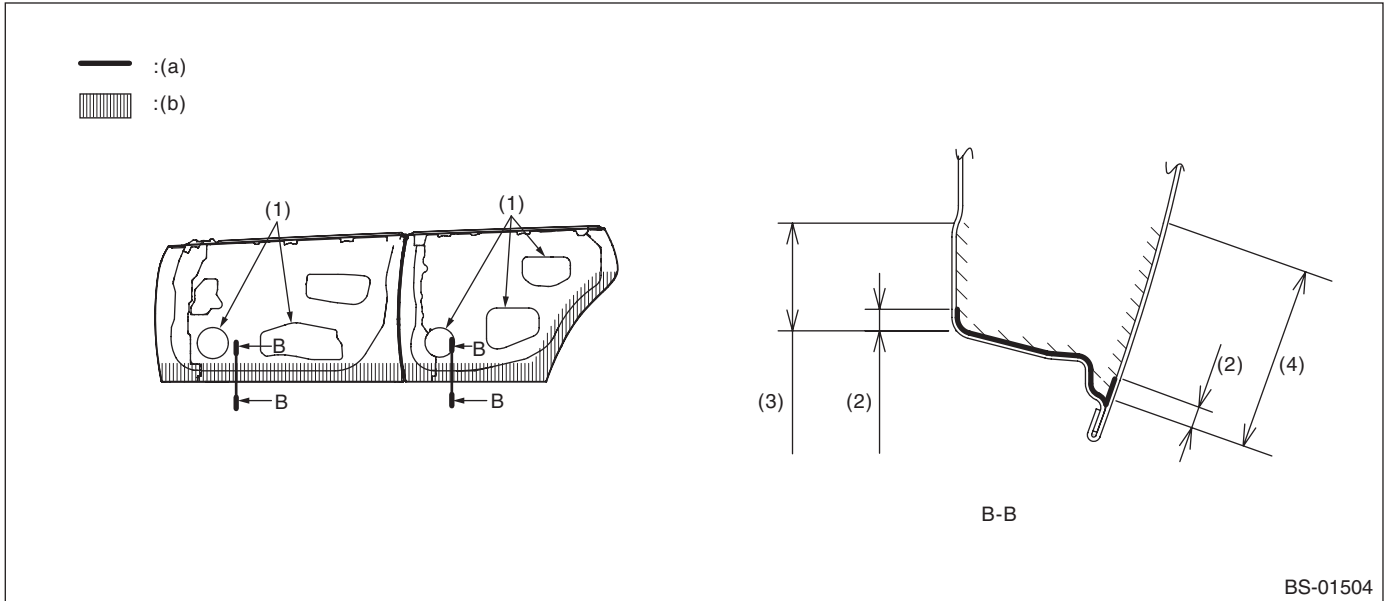

(a) Application thickness = 50 μm or more

(b) Application area more


(1) Wax application work openings

(3) 50 mm (1.97 in)

(4) 90 mm (3.54 in)

(2) 10 mm (0.39 in)

• Rear gate

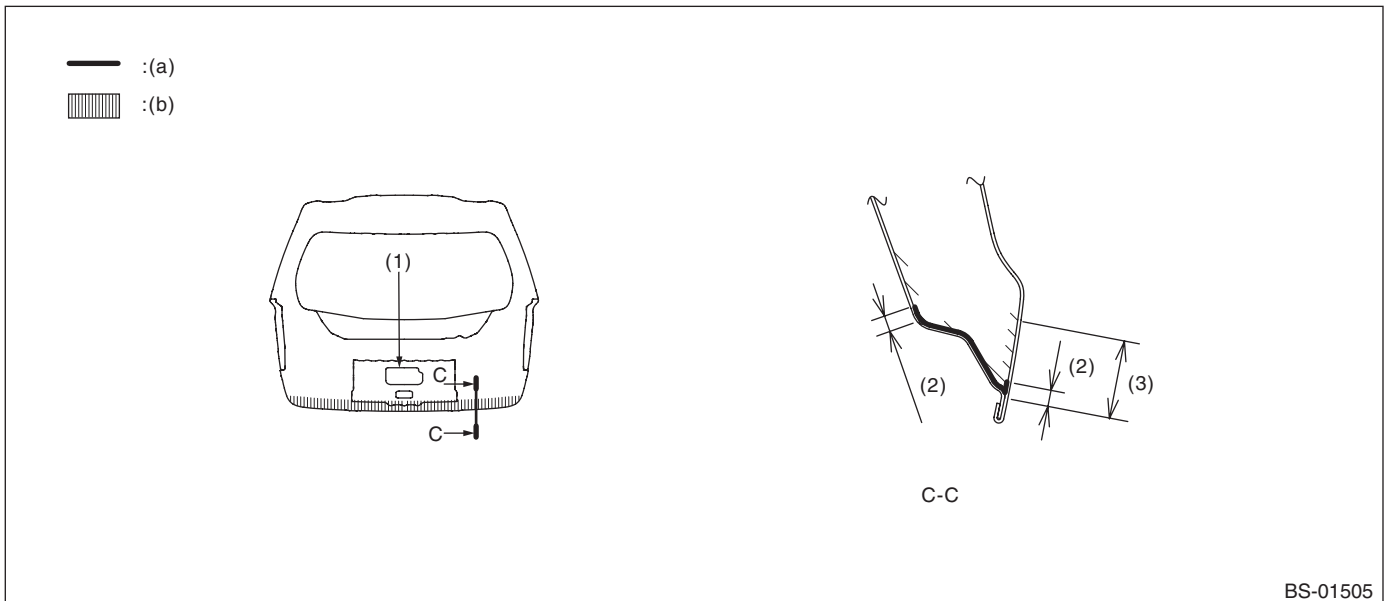

(a) Application thickness = 50 μm or more

(b) Application area more


(1) Wax application work openings

(2) 10 mm (0.39 in)

(3) 40 mm (1.57 in)

(4) 90 mm (3.54 in)

- Trunk

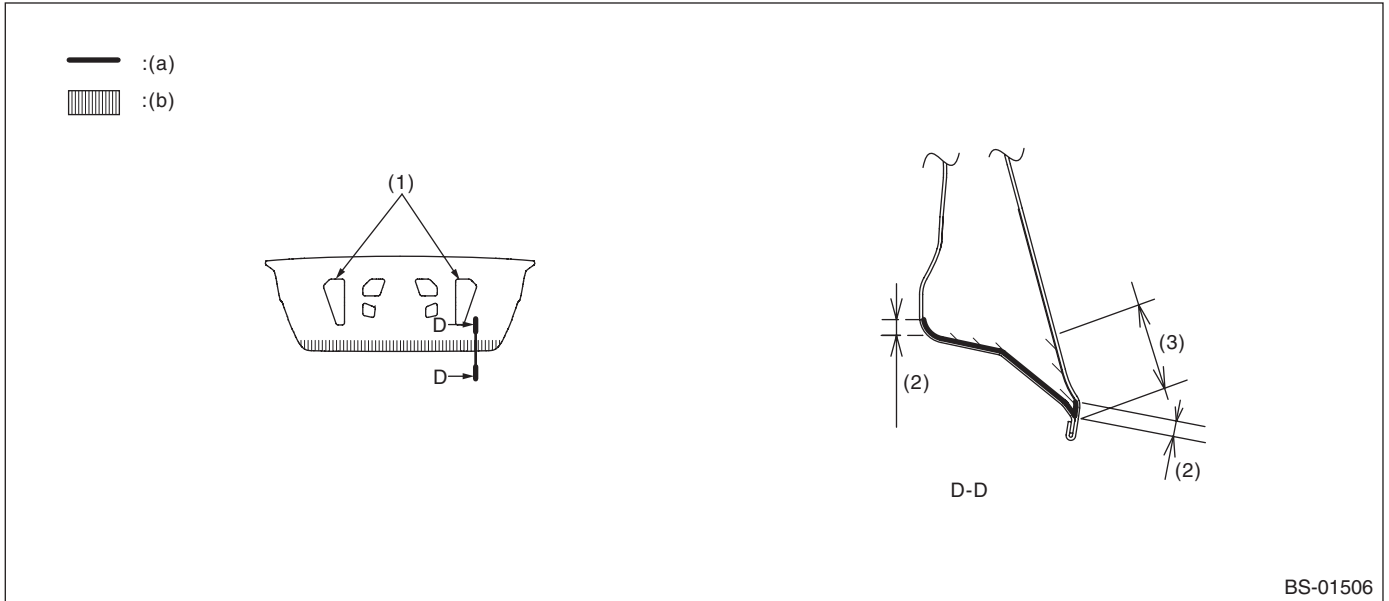

(a) Application thickness = 50 μm or more

(b) Application area more

(1) Wax application work openings


(2) 10 mm (0.39 in)

(3) 40 mm (1.57 in)

BODY STRUCTURE

- Front hood hinge


Apply around the installation outer circumference (indicated range) at two locations on the left and right.

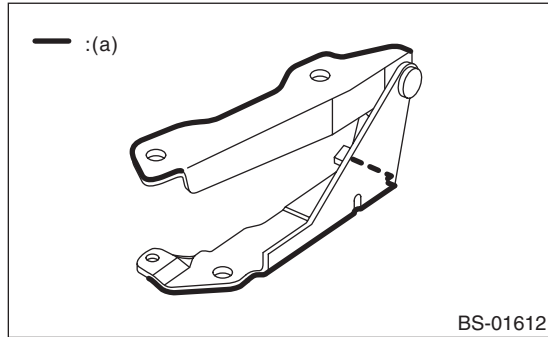

(a) Application thickness = 15 μm or more

- Door hinge


Apply to the installation outer circumference at two locations at the top and bottom (all eight locations).

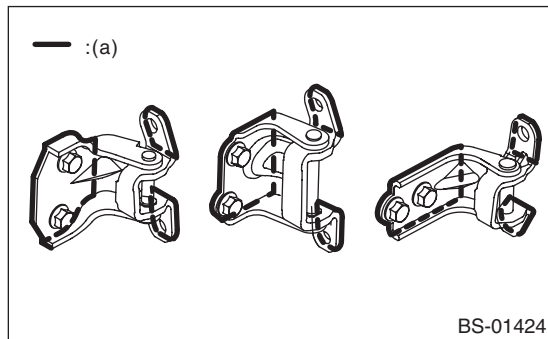

(a) Application thickness = 15 μm or more


- Rear gate hinge

Apply around the installation outer circumference (plate edges) at two locations on the left and right.

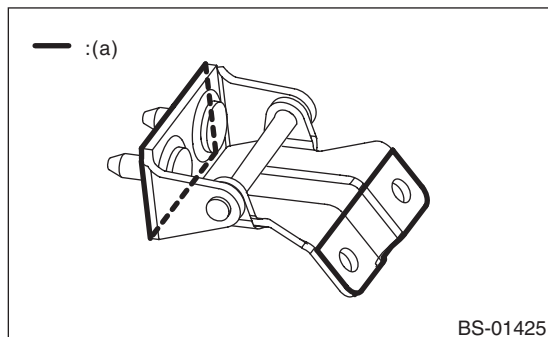

(a) Application thickness = 15 μm or more

- Overall view

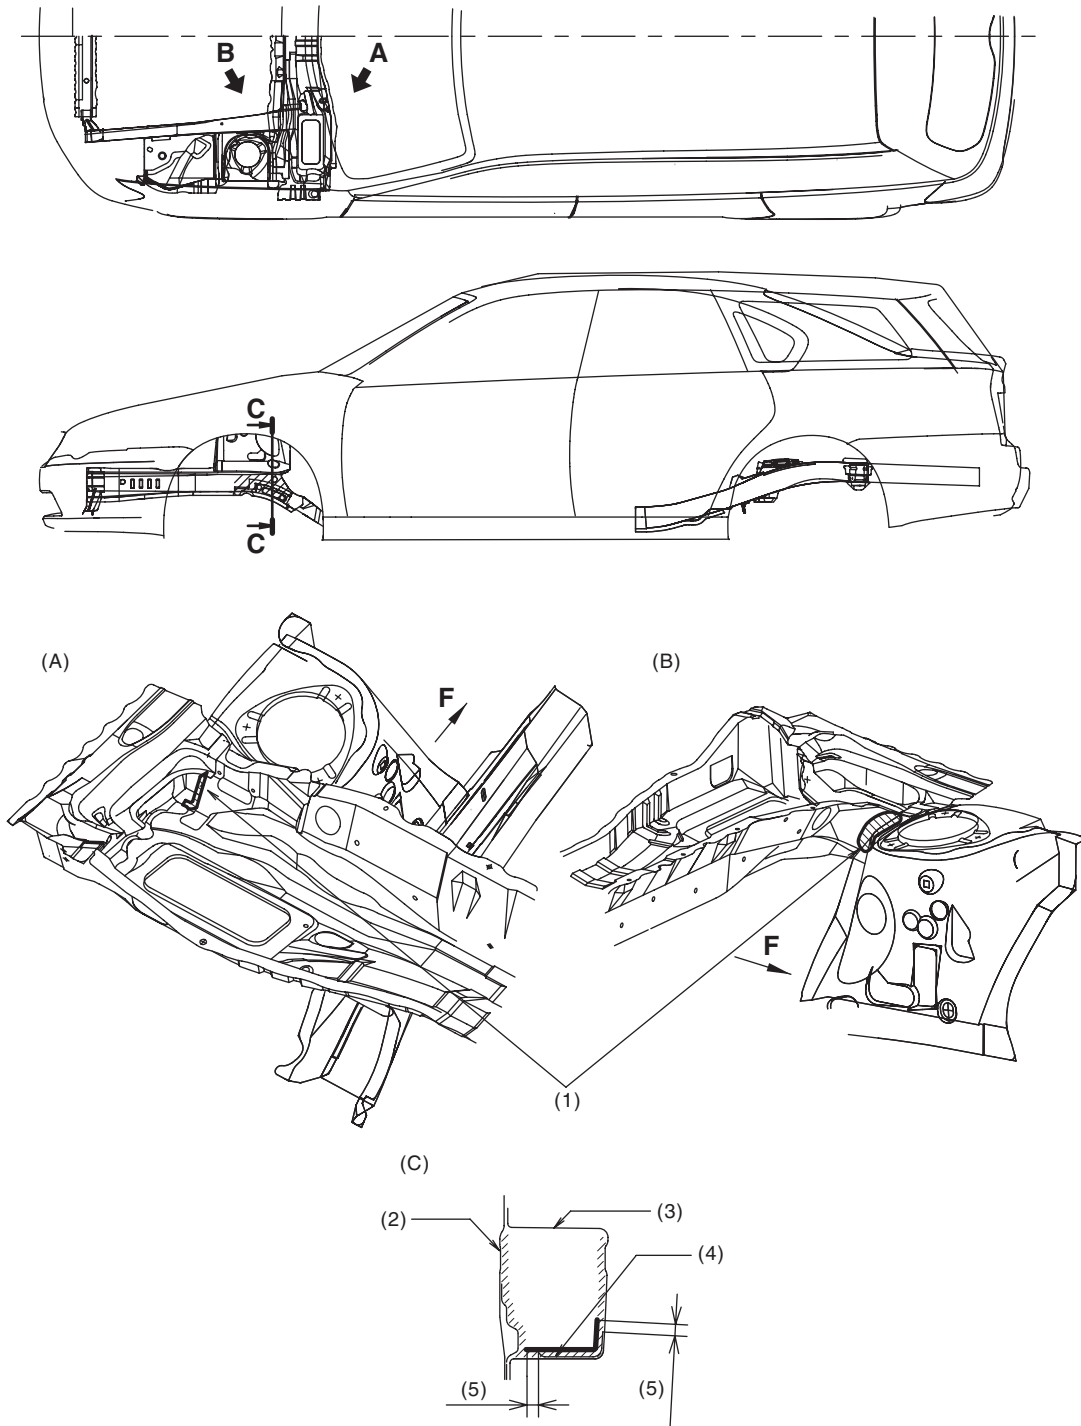

BS-01426

(A) View A

(B) View B

(C) Cross section C — C


(1) Apply to the contact surface between the front suspension bracket and duct. (15 μ m or more)

(2) Closing plate
(3) Front side frame front

(4) Reinforcement
(5) 10 mm (0.39 in)

Anticorrosion Wax

BODY STRUCTURE

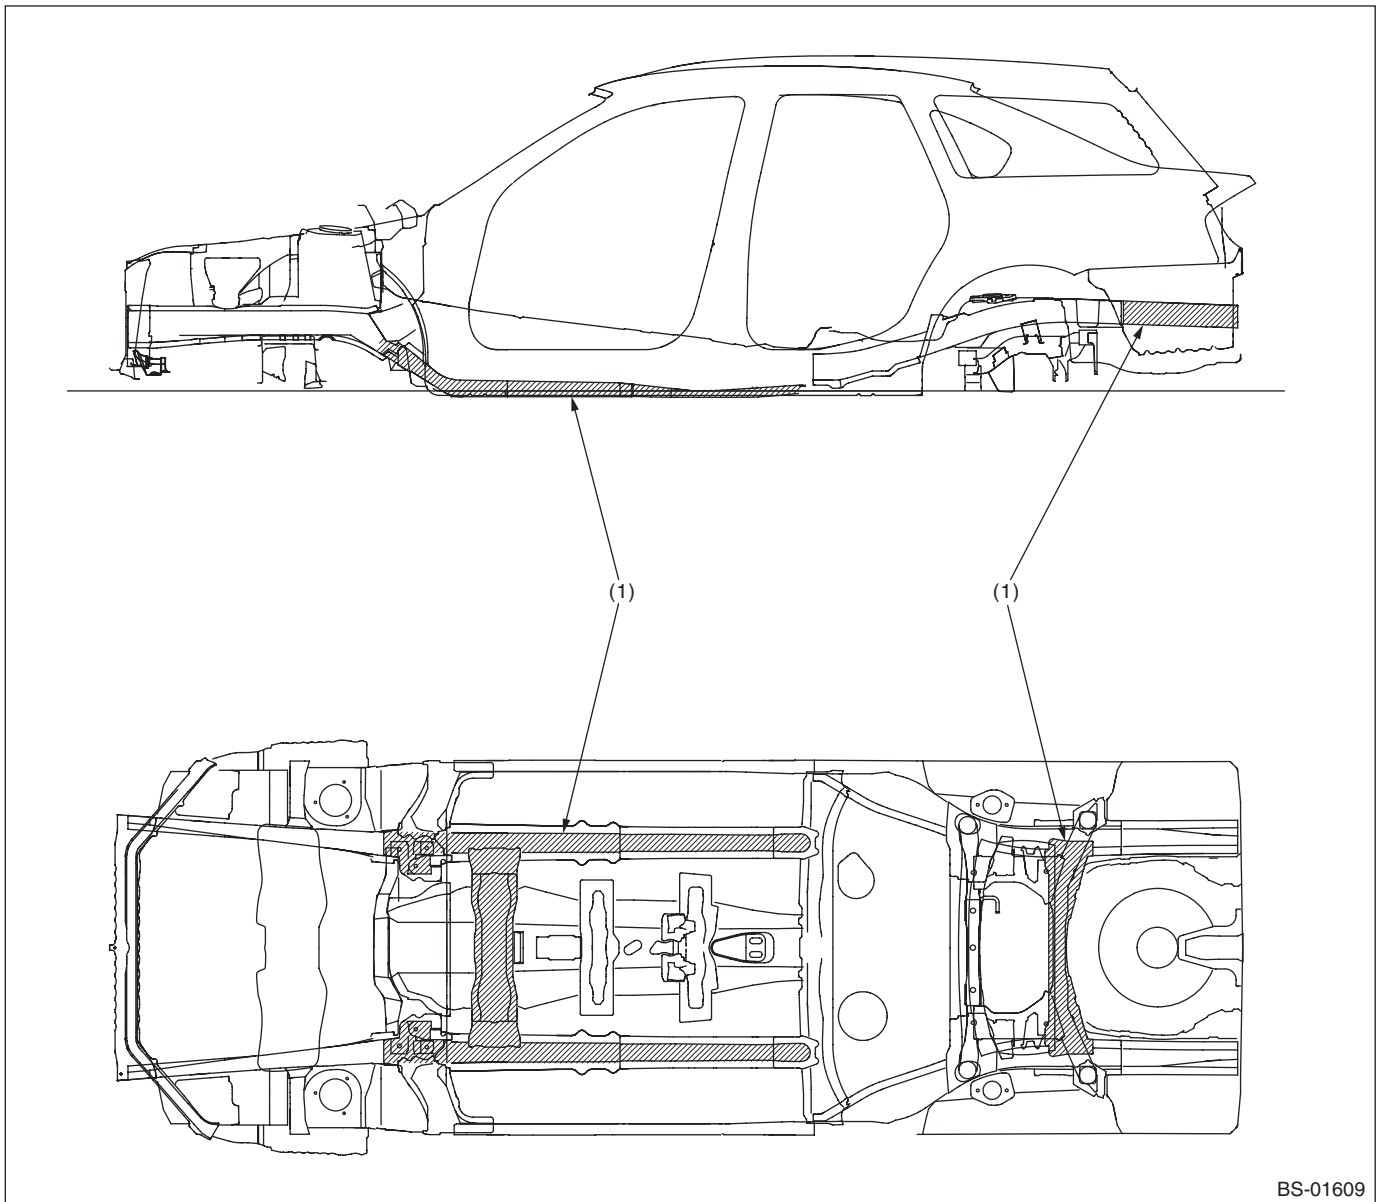

BS-01609

- (1) Apply wax to the underside of vehicle.


7. Under Coat

A: SPECIFICATION

Repair material:

THREE BOND 6115

- 1) The application thickness is 0.4 mm or more when no instruction is indicated.
- 2) Take care that under coat does not become attached to other locations than shown in the figures and the following locations.
 - High-temperature parts related to the exhaust pipe
 - Hoses, tubes, and harness parts
 - Installation surfaces of rear suspension, transmission, subframe, etc.
- 3) Application area
 - Side view

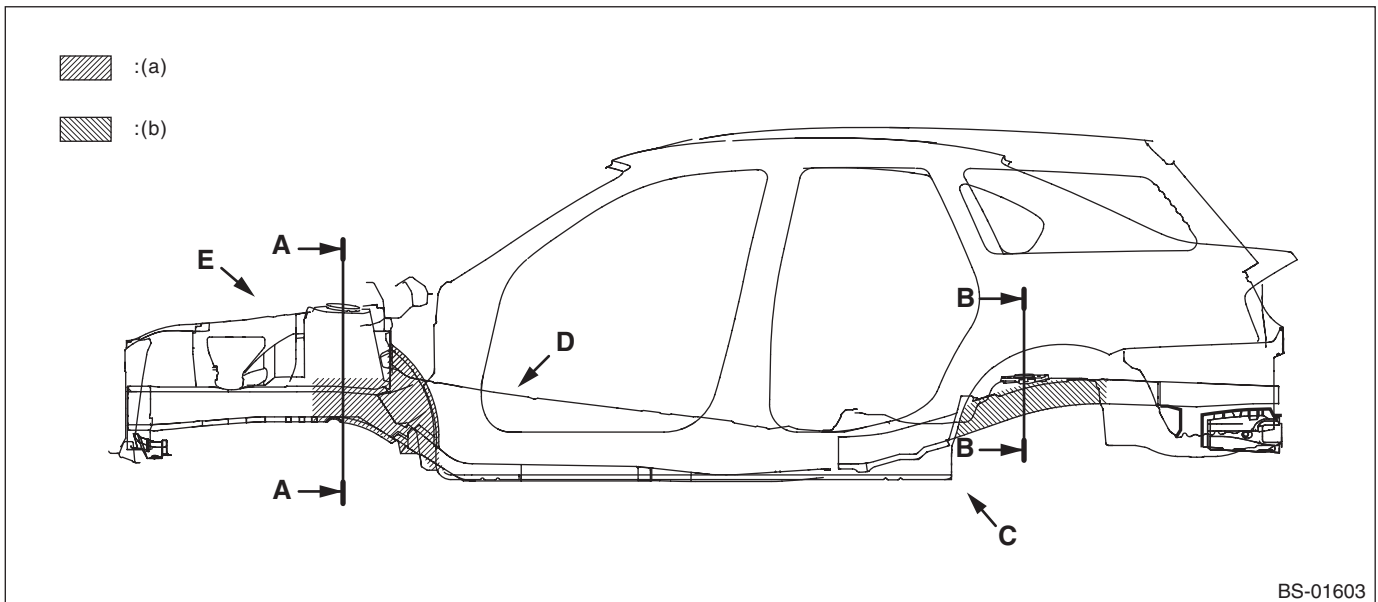


(a) Under coat application locations

(b) Under coat application locations
(Film thickness = 600 μm or more)

Under Coat


BODY STRUCTURE

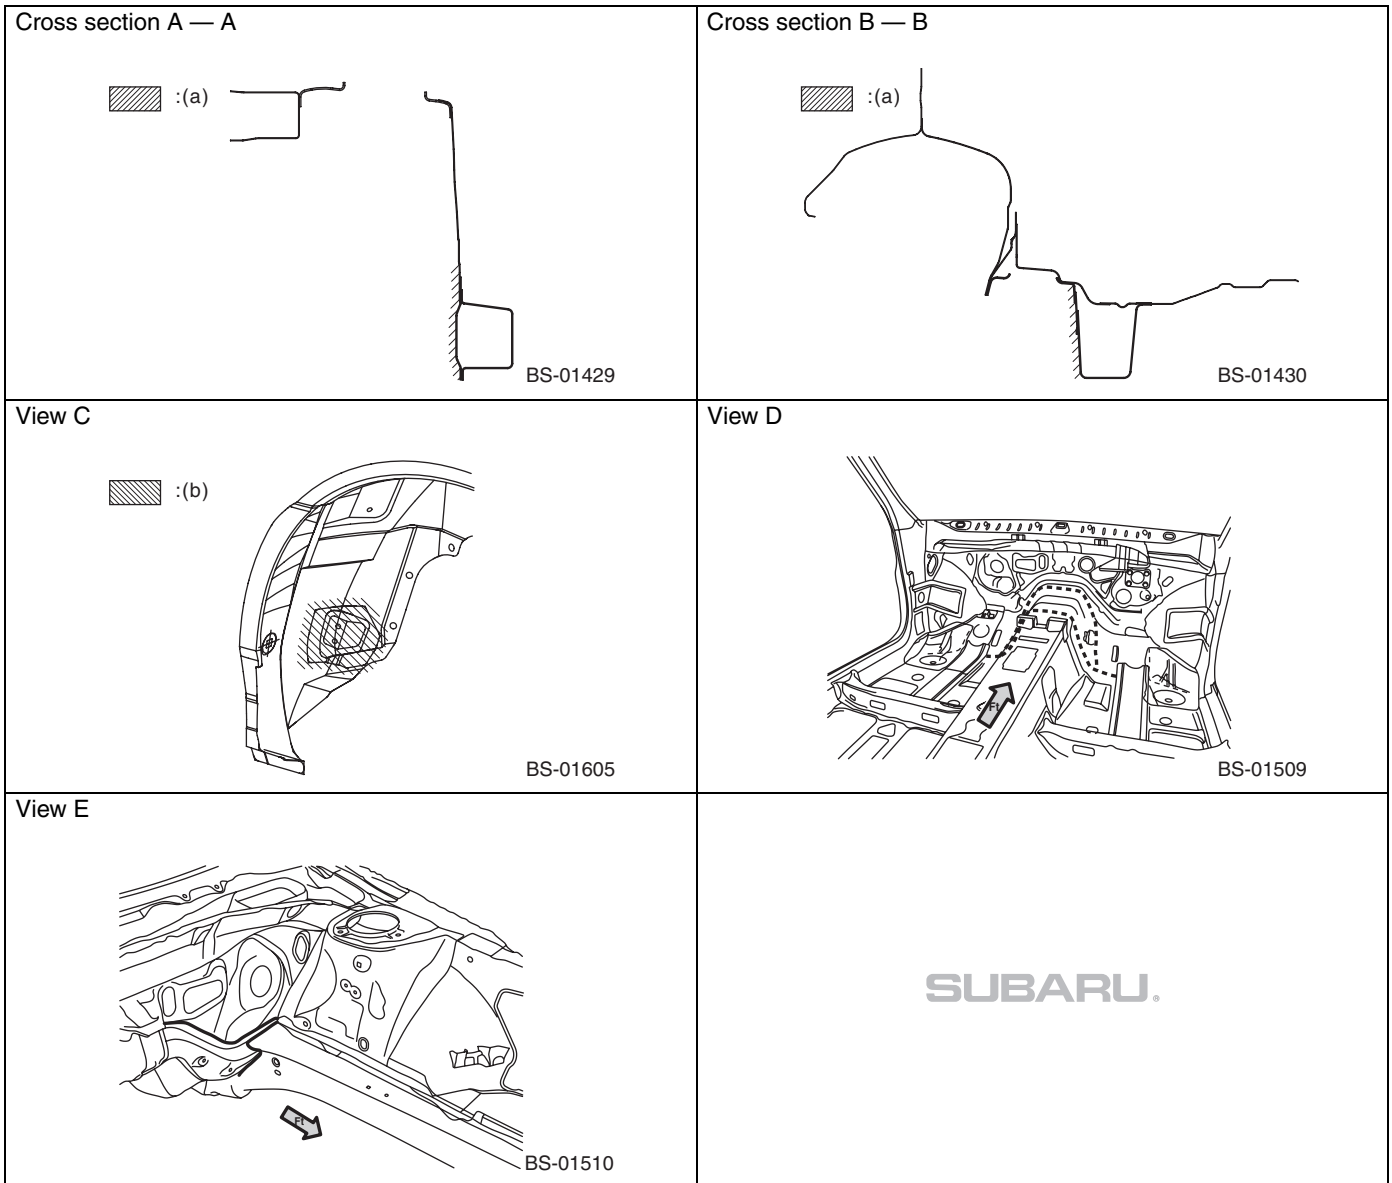

(a) Under coat application locations

(b) Under coat application locations
(Film thickness = 600 μ or more)






- Bottom view/rear view

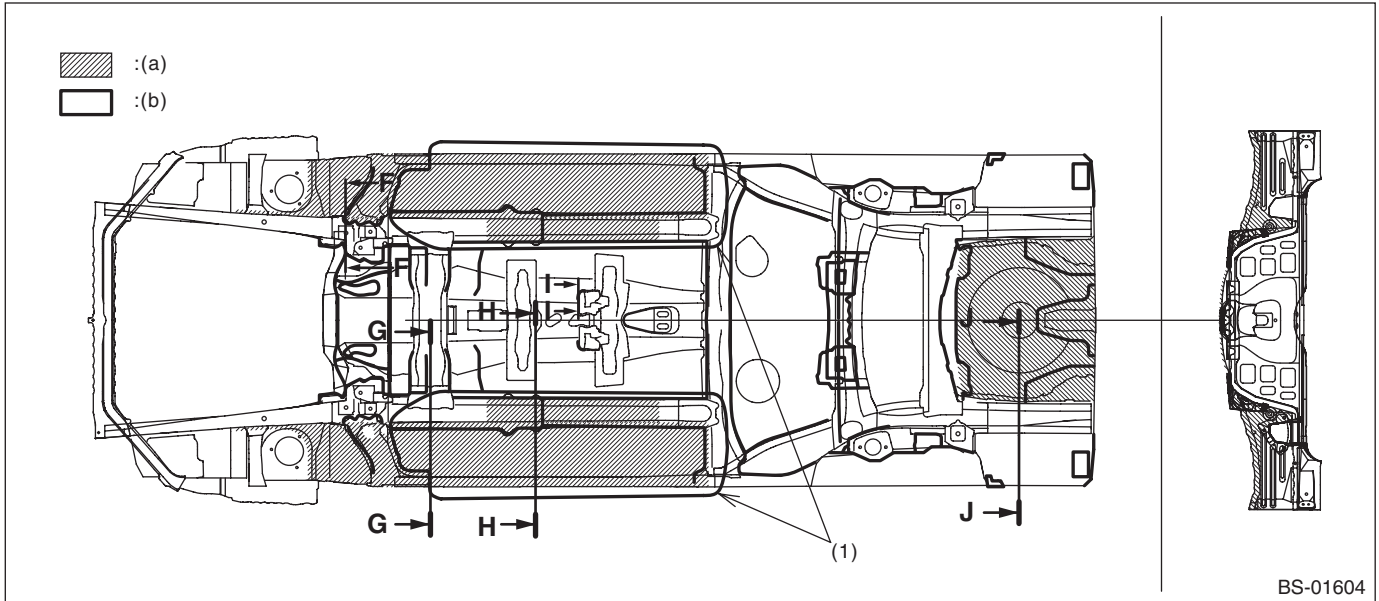

- (1) For models with an under cover, no under coat is required in this area.
- (a), (b) Under coat application locations

Under Coat


BODY STRUCTURE

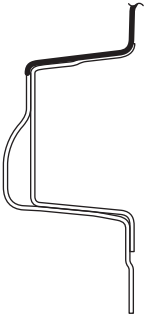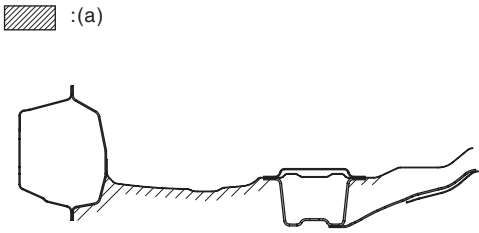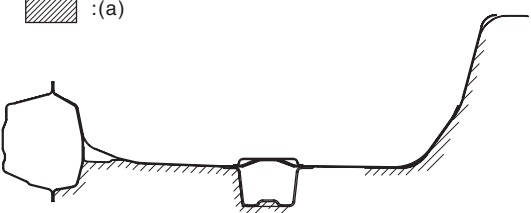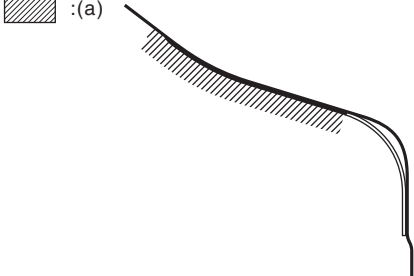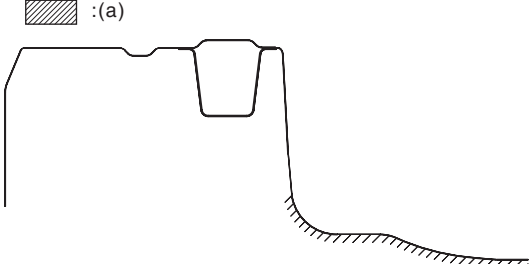Cross section F — F  BS-01511	Cross section G — G (rotated 90°)  BS-01606
Cross section H — H (rotated 90°)  BS-01607	Cross section I — I  BS-01512
Cross section J — J (rotated 90°)  BS-01608	SUBARU.

(a) Under coat application locations

8. Anti Chipping Coat


A: SPECIFICATION

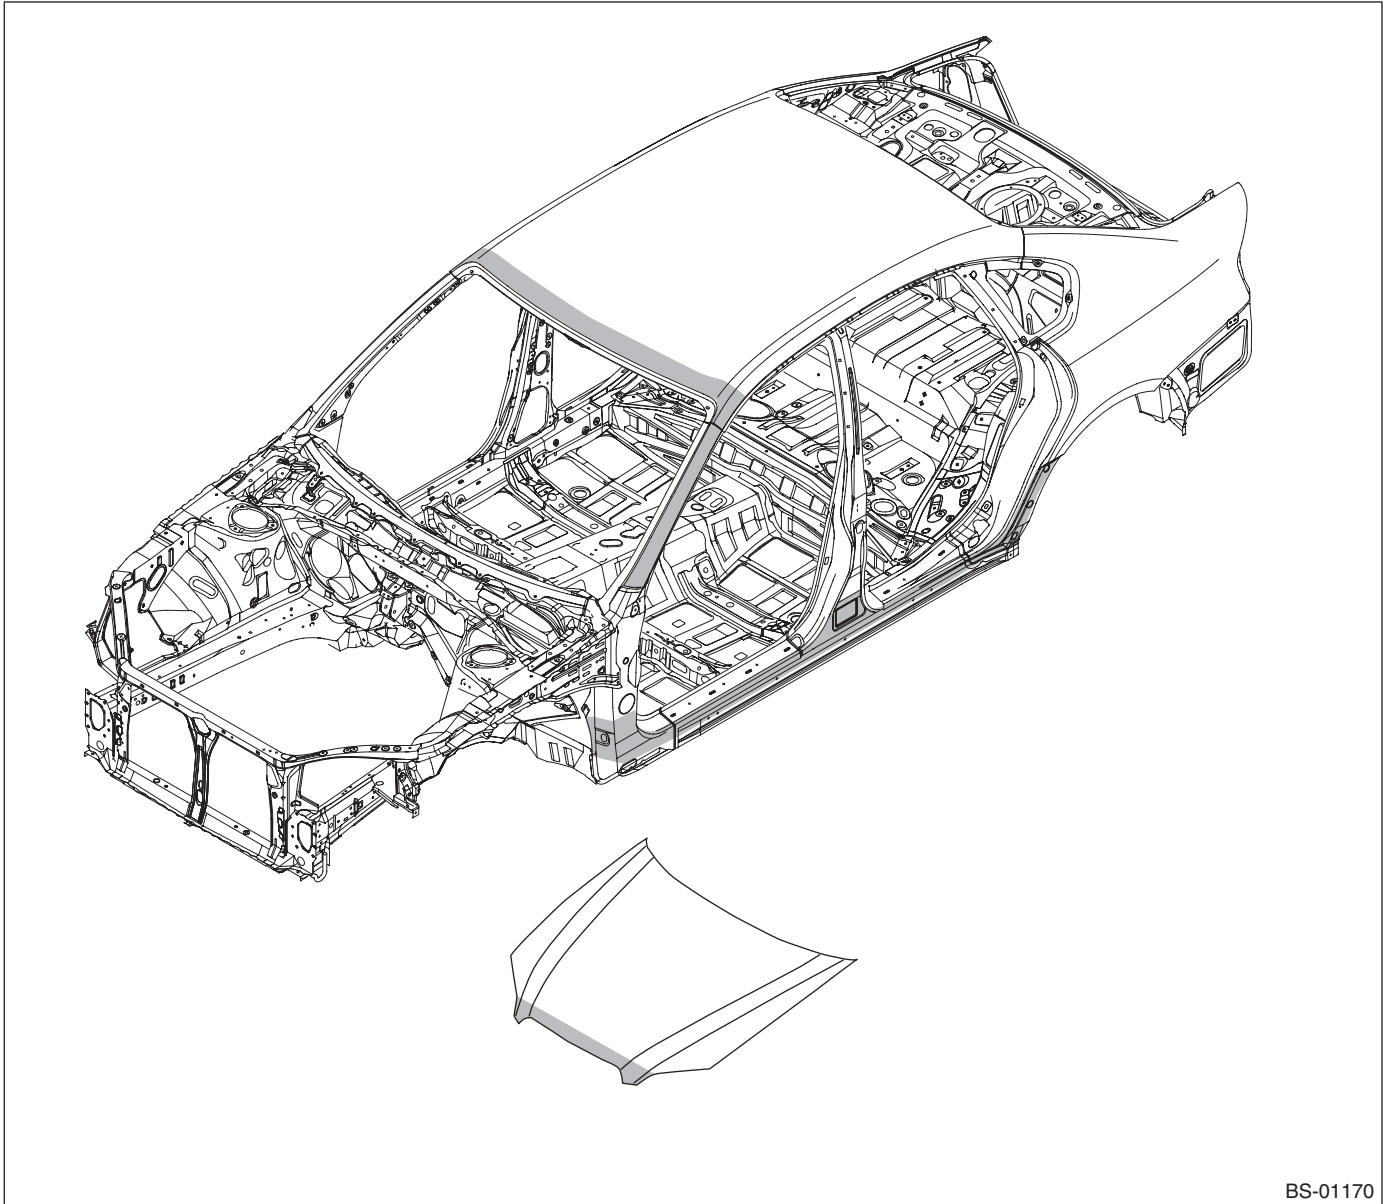

BS-01170

9. Stone Guard Coat


A: SPECIFICATION

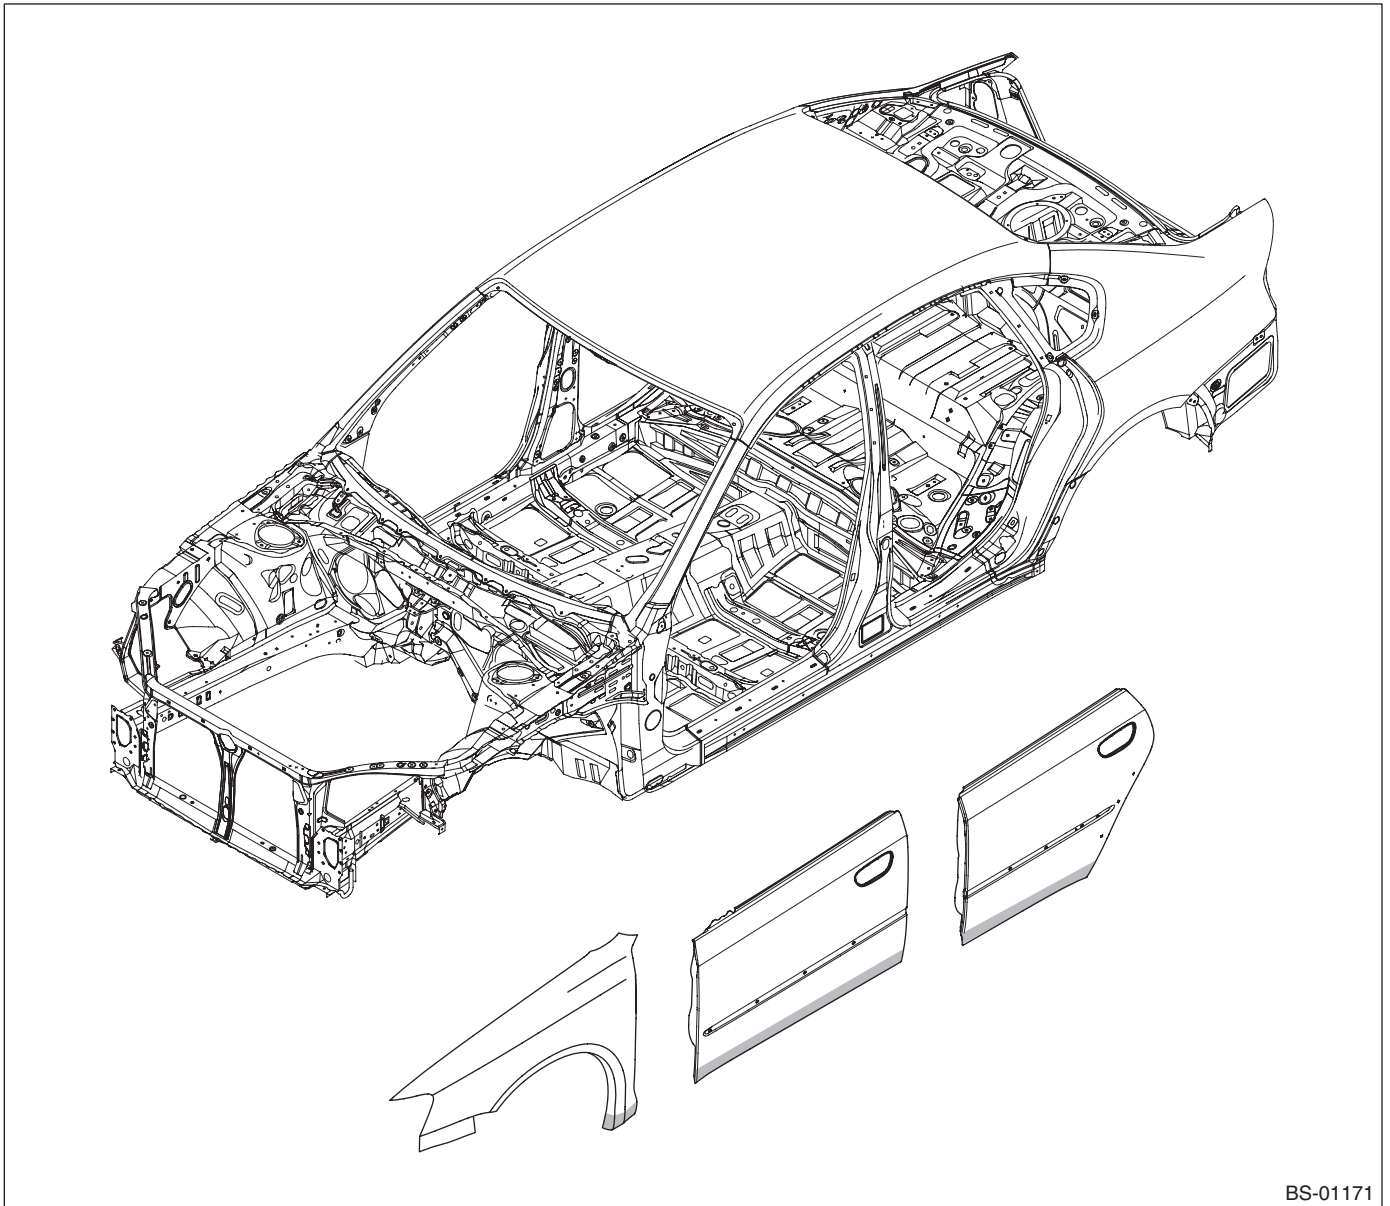

BS-01171

10. Galvanized Sheet Metal

A: SPECIFICATION

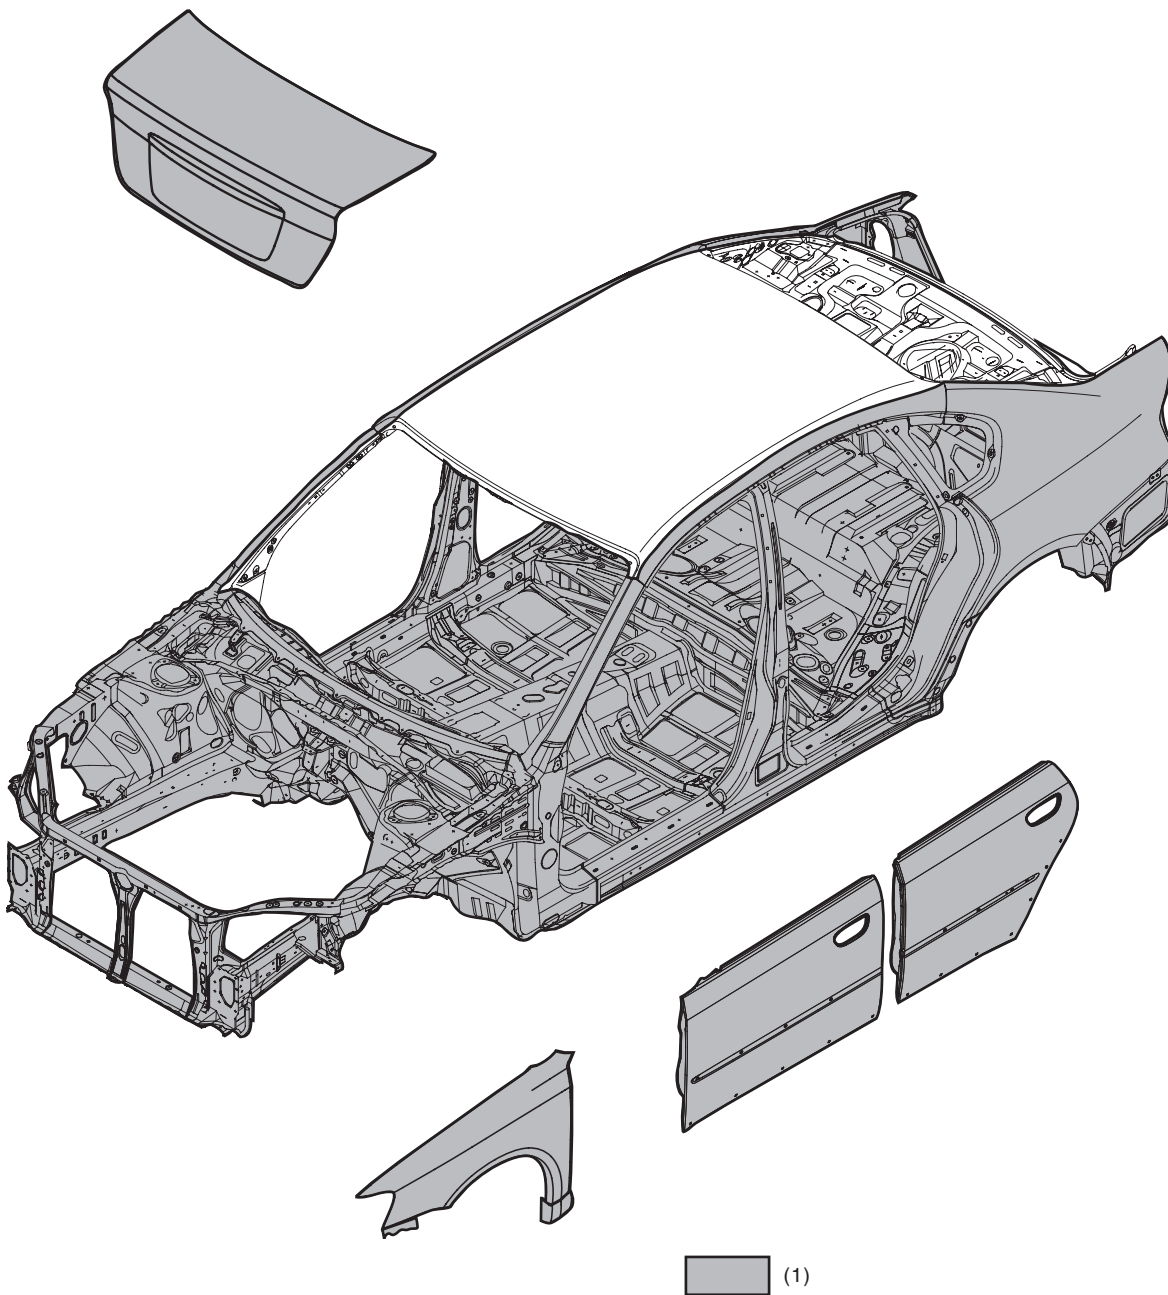


BS-01208

(1) Galvanized on both sides

11. Aluminium Sheet Metal

A: SPECIFICATION

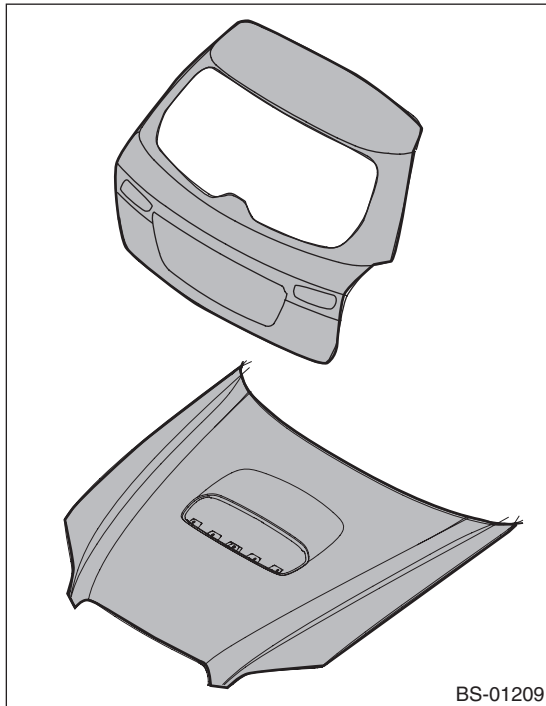

INSTRUMENTATION/DRIVER INFO

IDI

	Page
1. General Description	2
2. Combination Meter System	3
3. Clock System	12
4. Combination Meter	14
5. Speedometer	16
6. Tachometer	17
7. Fuel Gauge	18
8. Engine Coolant Temperature Gauge	19
9. Clock	20

1. General Description

A: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

B: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
TORX® bit T30	Used for removing/installing driver's airbag module.

2. Horn System

A: WIRING DIAGRAM


1. HORN

<Ref. to WI-143, WIRING DIAGRAM, Horn System.>

B: INSPECTION

1. HORN RELAY

Measure the security horn relay resistance between terminals (indicated in the table below) when connecting terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal.

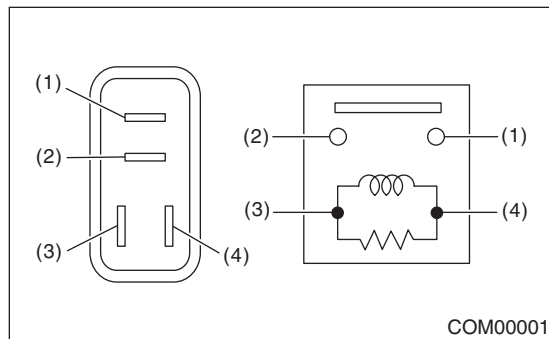


Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1Ω
No		1 MΩ or more


3. Horn

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the two clips and peel the right side lower mud guard upward.

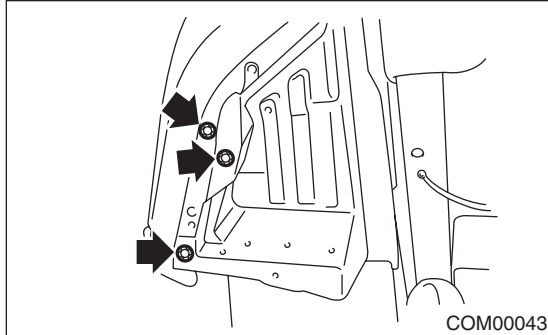

- 3) Remove the horn bracket mounting bolt (A).
- 4) Disconnect the harness connector and remove the horn assembly (B).

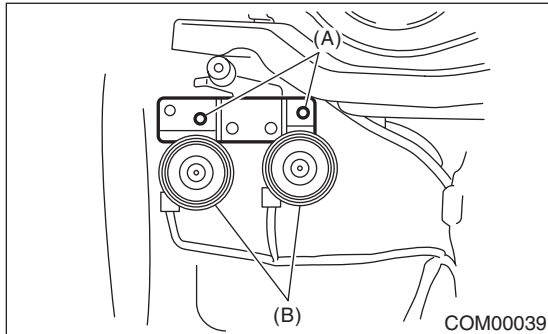


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

With 12 V direct current supplied between horn terminals, check that the horn sounds properly.

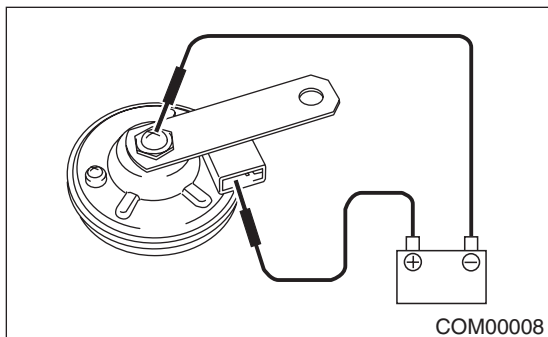

4. Horn Switch

A: REMOVAL

CAUTION:

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-6, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

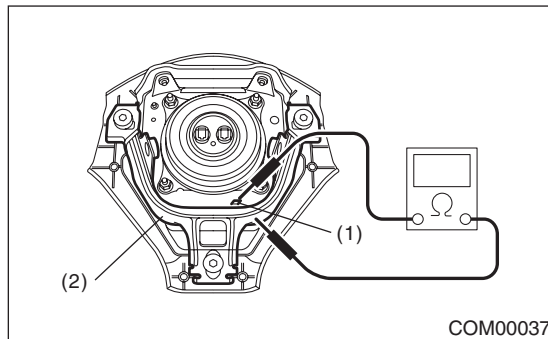

- (1) Airbag module bracket
(2) Horn switch terminal

Switch position	Terminal No.	Resistance
When horn switch is pushed.	Horn switch terminal and airbag module bracket	Less than 1 Ω
When horn switch is not pushed.		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW


	Page
1. General Description	2
2. Power Window System	8
3. Power Window Control Switch	9
4. Front Door Glass	12
5. Front Regulator and Motor Assembly	17
6. Remote Control Mirror System	18
7. Scalp Cap	19
8. Outer Mirror Assembly	20
9. Outer Mirror	22
10. Remote Control Mirror Switch	23
11. Rear Door Glass	24
12. Rear Regulator and Motor Assembly	26
13. Windshield Glass	27
14. Rear Gate Glass	30
15. Rear Window Glass	31
16. Rear Window Defogger System	32
17. Rear Window Defogger	33
18. Rear Quarter Glass	35
19. Sunroof Glass	36
20. Rearview Mirror	37
21. Wiper Deicer System	38
22. Wiper Deicer Switch	39

General Description

CRUISE CONTROL SYSTEM

1. General Description

A: COMPONENT

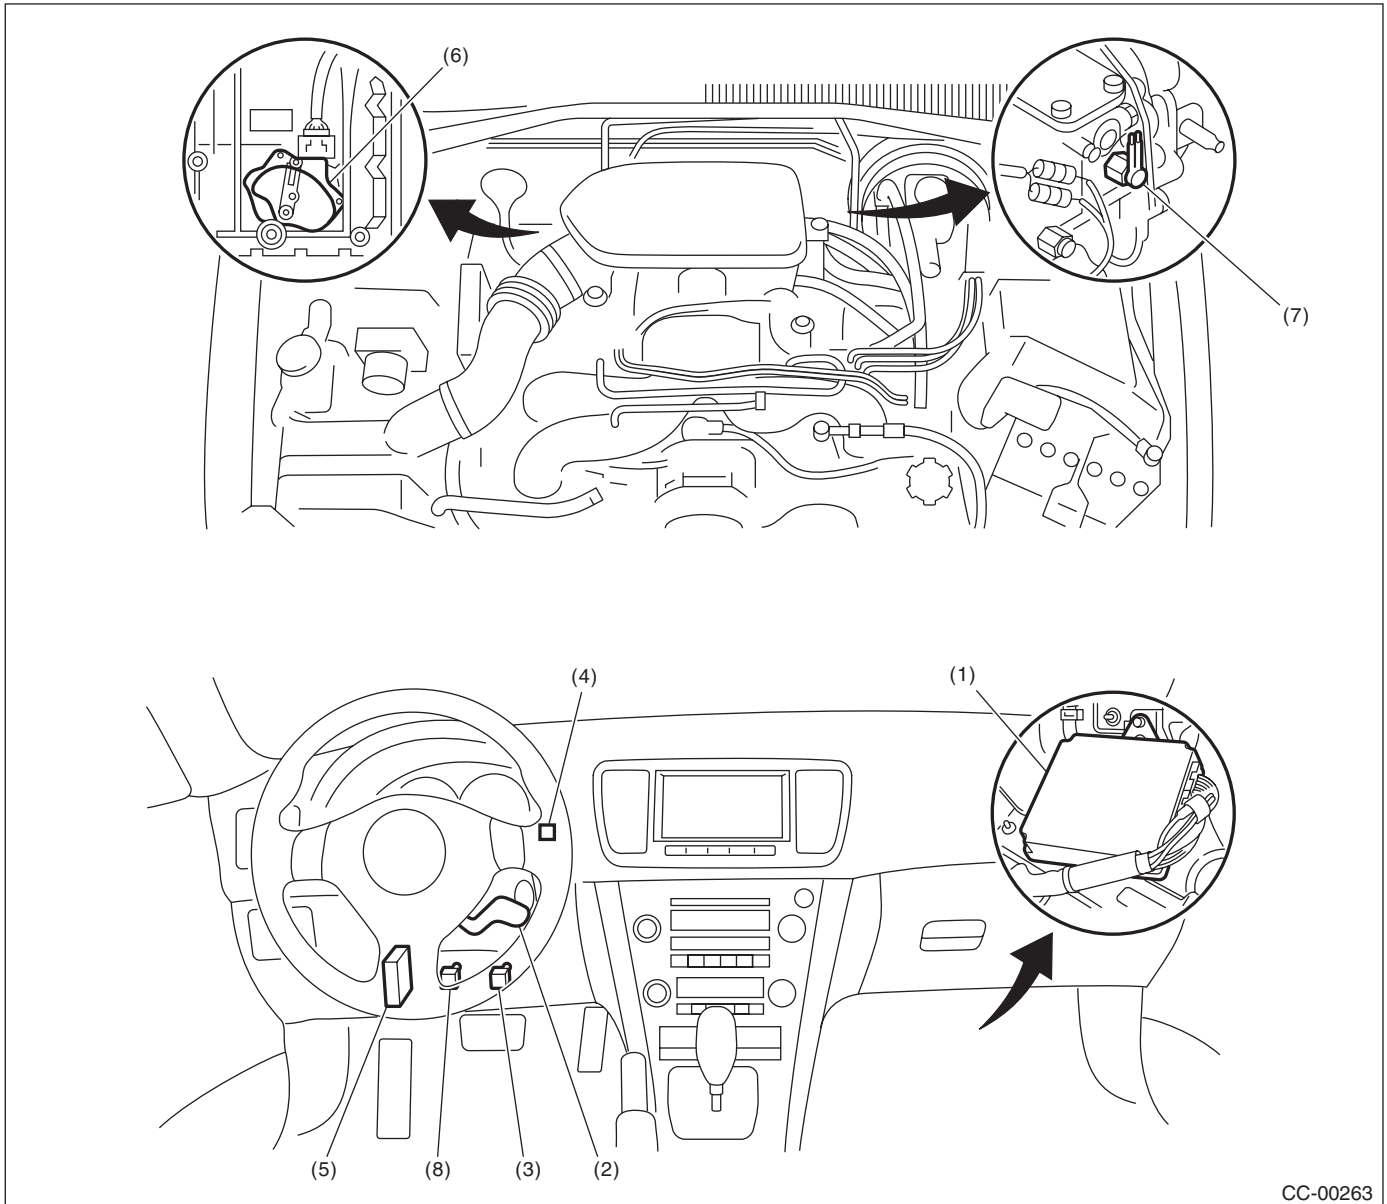

CC-00263

- | | | |
|---|--|--|
| (1) Engine control module (ECM) | (5) Transmission control module (TCM) (AT model) | (7) Neutral position switch (MT model) |
| (2) Cruise control command switch | (6) Inhibitor switch (AT model) | (8) Clutch switch (MT model) |
| (3) Stop light & brake switch | | |
| (4) Cruise indicator light and cruise set indicator light | | |

B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When repairing the audio, control module, etc. which are provided with memory functions, record the memory contents before disconnecting the ground cable from battery. Otherwise, the memory will be cleared.
- Reassemble the parts in the reverse order of disassembly unless otherwise indicated.
- Adjust the parts to specifications specified in this manual.
- Connect the connectors securely during reassembly.
- After reassembly, ensure functional parts operate properly.

C: PREPARATION TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.

2. Cruise Control Unit

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

<Ref. to FU(H4SO)-36, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

<Ref. to FU(H4SO)-36, INSTALLATION, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, INSTALLATION, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, INSTALLATION, Engine Control Module (ECM).>


3. Cruise Control Command Switch

A: REMOVAL


CAUTION:

Before servicing, be sure to read the notes in the “AB” section for proper handling of the driver’s airbag module. <Ref. to AB-6, CAUTION, General Description.>


- 1) Set the front wheels in straight ahead position.
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using TORX® BIT T30 (1), loosen two TORX® bolts which secure the driver’s airbag module.

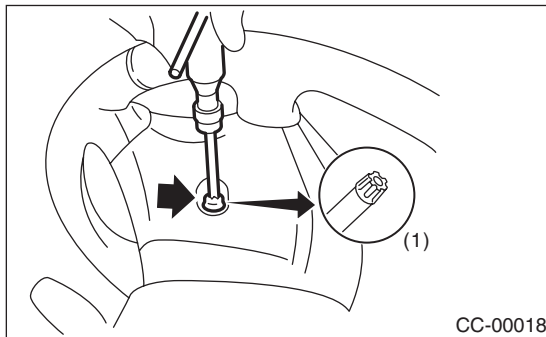

- 5) Disconnect the airbag module connector on back of the airbag module.
- 6) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 7) Remove the four screws to remove the lower cover from steering wheel.

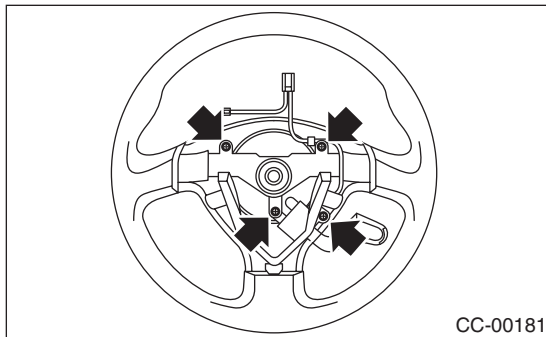

- 8) Remove one screw to remove the cruise control command switch from lower cover.

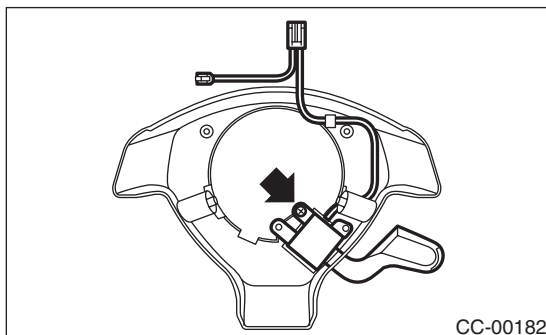


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the cruise control command switch resistance.

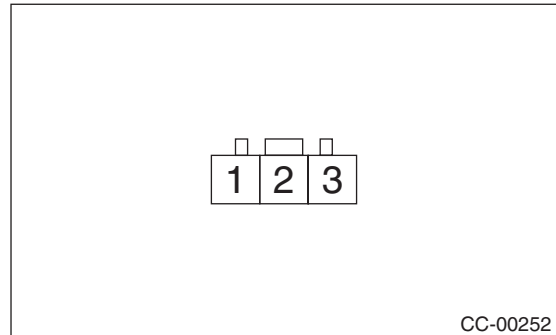

Switch	Position	Terminal No.	Standard
CANCEL SET/COAST RESUME/ ACCEL	All OFF	2 and 3	Approx. 4 kΩ
CANCEL	ON	2 and 3	Less than 1 Ω
SET/COAST	ON	2 and 3	Approx. 250 Ω
RESUME/ ACCEL	ON	2 and 3	Approx. 1500 Ω
MAIN	OFF	1 and 2	1 MΩ or more
	ON	1 and 2	Less than 1 Ω

If NG, replace the cruise control command switch.

Stop Light & Brake Switch

CRUISE CONTROL SYSTEM

4. Stop Light & Brake Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the stop light & brake switch, and then remove the switch. <Ref. to BR-40, REMOVAL, Stop Light Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance of brake switch (A) and stop light switch (B).

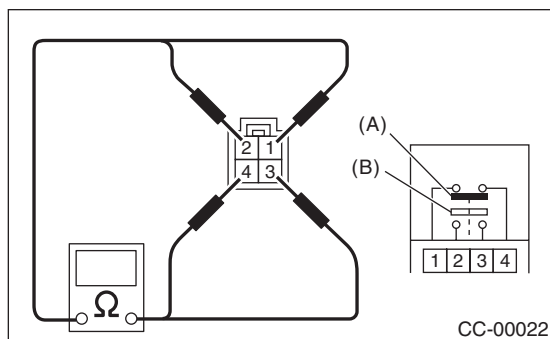

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 Ω
	Depressed	1 and 4	1 M Ω or more
Stop light	Released	2 and 3	1 M Ω or more
	Depressed	2 and 3	Less than 1 Ω

If NG, replace the stop light & brake switch.

5. Clutch Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the clutch switch, and then remove the switch. <Ref. to CL-23, DIS-ASSEMBLY, Clutch Pedal.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the clutch switch resistance.

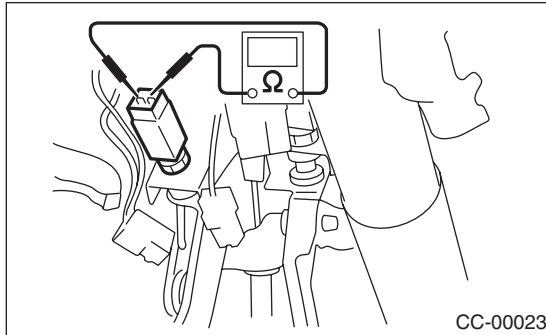

Switch	Pedal	Terminal No.	Standard
Clutch	Released	1 and 2	Less than 1 Ω
	Depressed	1 and 2	1 M Ω or more

If NG, replace the clutch switch.

6. Inhibitor Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from inhibitor switch, then remove the switch. <Ref. to 4AT-47, REMOVAL, Inhibitor Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the inhibitor switch resistance.

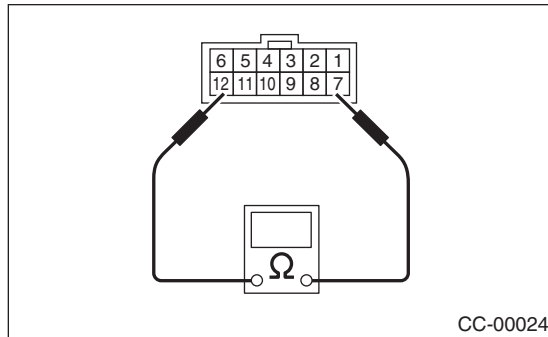

Select lever position	Terminal No.	Standard
P	7 and 12	Less than 1 Ω
N		Less than 1 Ω
Other than P or N		1 M Ω or more

If NG, replace the inhibitor switch.

7. Neutral Position Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the neutral position switch, and remove the switch. <Ref. to 5MT-33, BACK-UP LIGHT SWITCH AND NEUTRAL POSITION SWITCH, REMOVAL, Switches and Harness.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance of neutral position switch.

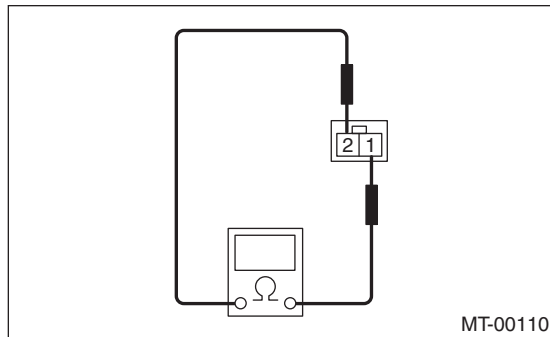

Gear shift position	Terminal No.	Standard
Neutral position	1 and 2	Less than 1 Ω
Other positions		1 M Ω or more

If NG, replace the neutral position switch.

Neutral Position Switch

CRUISE CONTROL SYSTEM

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	4
3. Electrical Component Location	5
4. Engine Control Module (ECM) I/O Signal	6
5. Subaru Select Monitor	7
6. Diagnostics with Phenomenon	9
7. List of Diagnostic Trouble Code (DTC)	11
8. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	13

Basic Diagnostic Procedure

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

Step	Check	Yes	No
1 CHECK MALFUNCTION INDICATOR LIGHT. Make sure the malfunction indicator light illuminates.	Does the malfunction indicator light illuminate?	Go to step 5.	Go to step 2.
2 CHECK CRUISE INDICATOR LIGHT. Make sure the cruise indicator light blinks.	Does the cruise indicator light blink?	Go to step 5.	Go to step 3.
3 CHECK CRUISE CONTROL MAIN SWITCH OPERATION. Check cruise control main switch operation. (Ensure the cruise indicator light illuminates.)	Is the cruise control main switch turned on? (Does the cruise indicator light illuminate?)	Go to step 4.	Go to phenomenon 1. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
4 CHECK CRUISE CONTROL SET OPERATION. Check the cruise control setting operation.	Can the cruise control be set while driving at more than 40 km/h (25 MPH)?	Go to step 6.	Go to step 5.
5 PERFORM CRUISE CONTROL CANCEL CONDITIONS DIAGNOSIS. Perform the cruise cancel conditions diagnosis.	Is DTC displayed?	Go to "List of Diagnostic Trouble Code (DTC)". <Ref. to CC(diag)-11, List of Diagnostic Trouble Code (DTC).>	Go to phenomenon 2. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
6 CHECK CRUISE SET INDICATOR LIGHT. Make sure the cruise set indicator light illuminates.	Does the cruise set indicator light illuminate?	Go to step 7.	Go to phenomenon 3. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
7 CHECK VEHICLE SPEED IS HELD WITHIN SET SPEED. Make sure the vehicle speed is held within set speed.	Is the vehicle speed kept within setting speed ± 3 km/h (± 2 MPH) ? (Make sure that on a level road.)	Go to step 8.	Go to phenomenon 4. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
8 CHECK RESUME/ACCEL OPERATION. Check the RESUME/ACCEL switch operation.	Does the vehicle speed increase or return to set speed after RESUME/ACCEL switch has been pressed?	Go to step 9.	Go to phenomenon 5. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
9 CHECK SET/COAST OPERATION. Check the SET/COAST switch operation.	Does the vehicle speed decrease after SET/COAST switch has been pressed?	Go to step 10.	Go to phenomenon 6. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>

Basic Diagnostic Procedure

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
10 CHECK CANCEL OPERATION. Check the CANCEL switch operation.	Is the cruise control released after CANCEL switch has been pressed?	Go to step 11.	Go to phenomenon 7. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
11 CHECK CRUISE CONTROL RELEASE OPERATION. Check the cruise control release operation.	Is the cruise control released after brake pedal has been depressed?	Go to step 12.	Go to phenomenon 8. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
12 CHECK CRUISE CONTROL RELEASE OPERATION. Check the cruise control release operation.	Is the cruise control released after shifting to the neutral position?	Go to step 13.	Go to phenomenon 9. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>
13 CHECK CRUISE CONTROL RELEASE OPERATION. Check the cruise control release operation.	Is the cruise control released after depressing the clutch pedal?	Finish the diagnosis.	Go to phenomenon 10. <Ref. to CC(diag)-9, DIAGNOSTIC PROCEDURE WITH PHENOMENON, Diagnostics with Phenomenon.>

General Description

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

2. General Description

A: CAUTION


Airbag system wiring harness is routed near the cruise control command switch.

CAUTION:

- All airbag system wiring harnesses and connectors are yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the cruise control command switch.

B: PREPARATION TOOL

1. SPECIAL TOOL

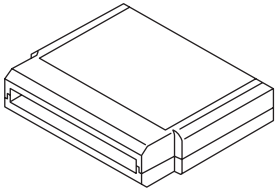ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18482AA010	18482AA010	CARTRIDGE	Troubleshooting for the electrical system.
 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.

C: INSPECTION

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage:

12 V or more

Specific gravity:


1.260 or more

Electrical Component Location

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

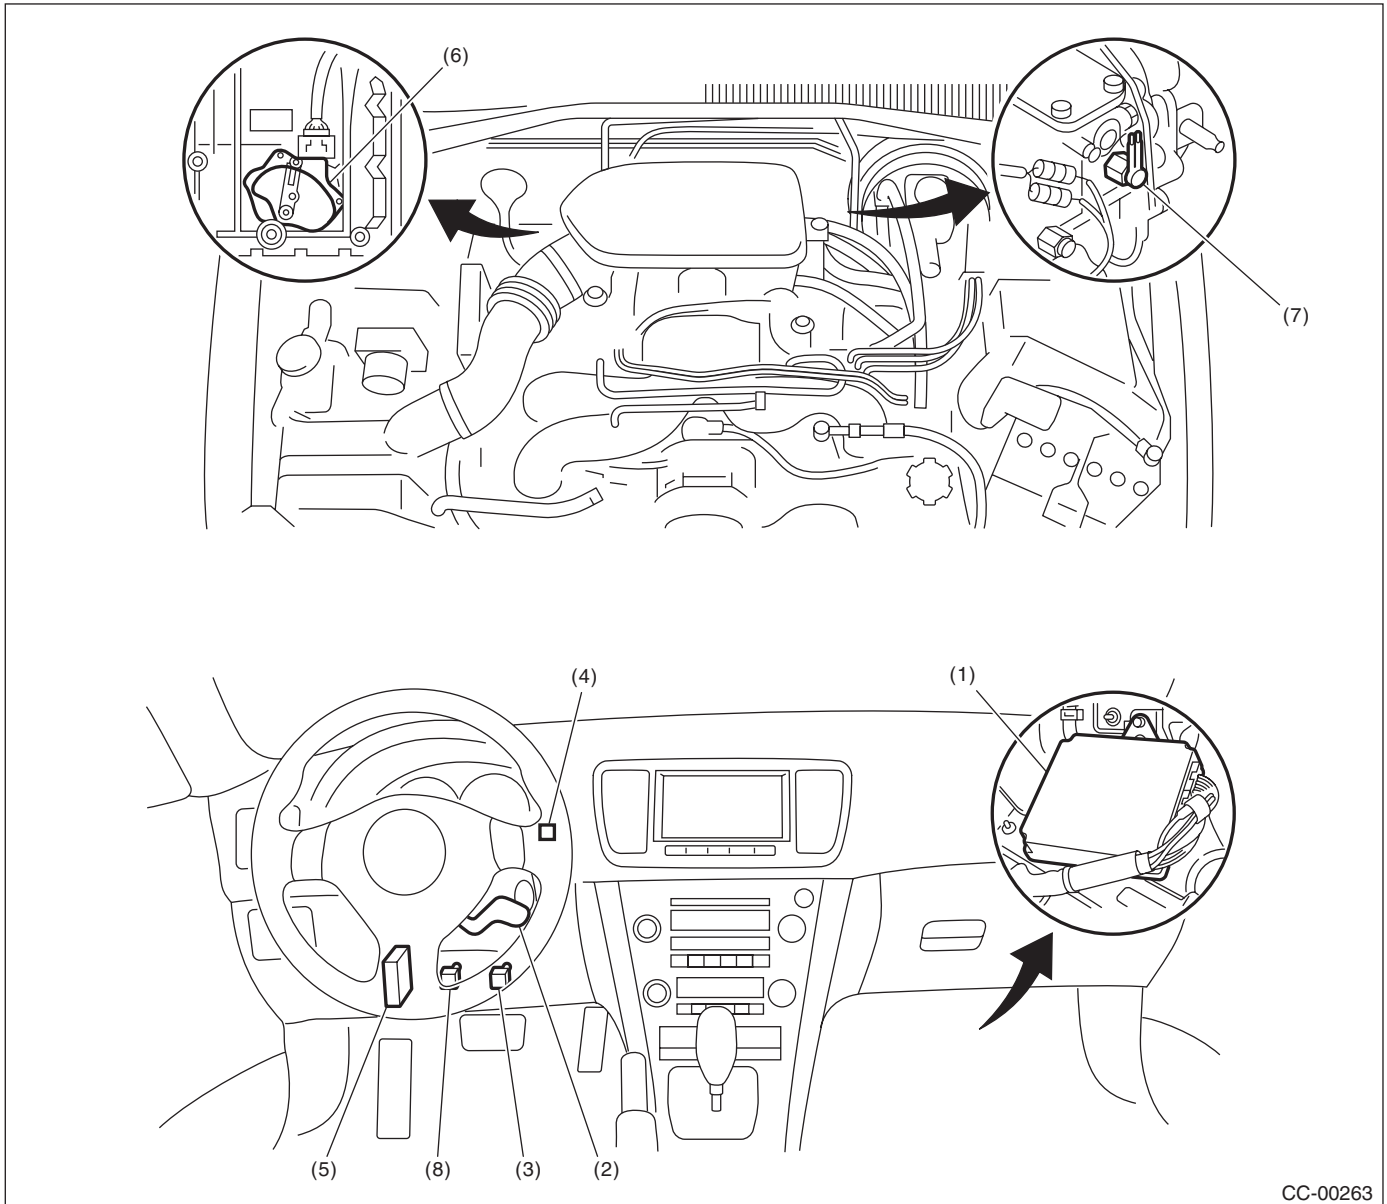

CC-00263


- | | | |
|---|--|--|
| (1) Engine control module (ECM) | (5) Transmission control module (TCM) (AT model) | (7) Neutral position switch (MT model) |
| (2) Cruise control command switch | (6) Inhibitor switch (AT model) | (8) Clutch switch (MT model) |
| (3) Stop light & brake switch | | |
| (4) Cruise indicator light and cruise set indicator light | | |

Engine Control Module (ECM) I/O Signal

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

4. Engine Control Module (ECM) I/O Signal

A: ELECTRICAL SPECIFICATION

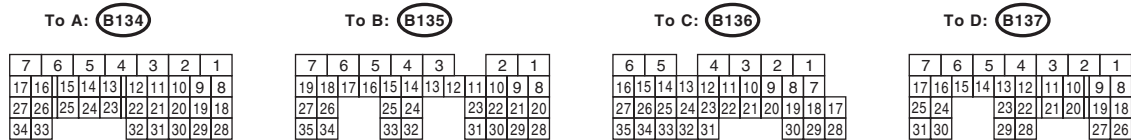

CC-00197

Remarks		Terminal No.	Measurement condition and I/O signal (Idling with ignition ON: Except cruise set light)
Main power supply	VB (CONTROL 1) VB (CONTROL 2)	Non-turbo model: A7, B2 Turbo model: B5, B6	- Battery voltage is detected when the main power is turned ON. "0 V" is detected when the main power is turned OFF.
Command switch		Non-turbo model: B24 Turbo model: C11	"0 V" is detected when the command switch is in CANCEL position. "Approx. 1 V" is present when the command switch is in SET/COAST position. "Approx. 3 V" is detected when the command switch is in RESUME/ACCEL position. "Approx. 4 V" is detected when the command switch is released.
Brake switch 1 (Brake switch)		Non-turbo model: B20 Turbo model: C9	- Battery voltage is detected when the brake pedal is released. "0 V" is present when brake pedal is depressed.
Brake switch 2 (Stop light switch)		Non-turbo model: B28 Turbo model: C8	- Battery voltage is present when brake pedal is depressed. "0 V" is detected when the brake pedal is released.
Main switch		Non-turbo model: B12 Turbo model: C7	"0 V" is present while the main switch is pressed or turned on. - Battery voltage is detected when the main switch is turned OFF.
Ground	GND (CONTROL 1) GND (CONTROL 2)	D2 D1	—
Ignition switch		Non-turbo model: B19 Turbo model: D14	- Battery voltage is detected when the ignition switch is turned ON. "0 V" is detected when the ignition switch is turned OFF.
Clutch switch (MT model)		Non-turbo model: C25 Turbo model: A1	"0 V" is present when brake pedal is depressed. - Battery voltage is detected when the clutch pedal is released.
Neutral position switch (MT model)		Non-turbo model: C31 Turbo model: D9	"0 V" is detected when the shift lever is in neutral position. "Approx. 5 V" is detected when the shift lever is in neutral position.
Neutral signal (AT model)		Non-turbo model: C31 Turbo model: D9	"Approx. 5 V" (4AT model) or battery voltage (5AT model) is detected when the shift lever is set in any position except "P" or "N". "0 V" is detected when the shift lever is in "P" or "N" position.

B: WIRING DIAGRAM

<Ref. to WI-170, WIRING DIAGRAM, Cruise Control System.>

5. Subaru Select Monitor

A: OPERATION

1. GENERAL DESCRIPTION

For the on-board diagnosis function of the cruise control system, use Subaru Select Monitor.

The on-board diagnosis function operates in two categories, which are used depending on the type of problems;

1) Cruise Control Cancel Conditions Diagnosis:

(1) This category of diagnosis requires actual vehicle driving in order to determine the cause, as when cruise speed is cancelled during driving although cruise cancel condition is not entered.

(2) Cruise control memory in ECM stores the cancel condition (Code No.) which occurred during driving. When there are multiple cancel conditions (Code No.), they are shown on the Subaru Select Monitor.

CAUTION:

- The cruise control memory stores not only the cruise “cancel” which occurred (although “cancel” operation is not entered by the driver), but also the “cancel” condition input by the driver.
- The content of memory is cleared when ignition switch or cruise control main switch is turned OFF.

2) Real-time Diagnosis:

Real-time diagnosis function is used to determine whether or not the input signal system is in good order, according to signal emitted from switches, sensors, etc.

(1) Vehicle cannot be driven at cruise speed when the problem occurs in the cruise control system or relevant circuits.

(2) Monitor the signal conditions from switches and sensors.


2. CRUISE CONTROL CANCEL CONDITIONS DIAGNOSIS

1) Prepare the Subaru Select Monitor kit.




2) Connect the diagnosis cable to the Subaru Select Monitor.

3) Insert the cartridge to the Subaru Select Monitor. <Ref. to CC(diag)-4, SPECIAL TOOL, PREPARATION TOOL, General Description.>

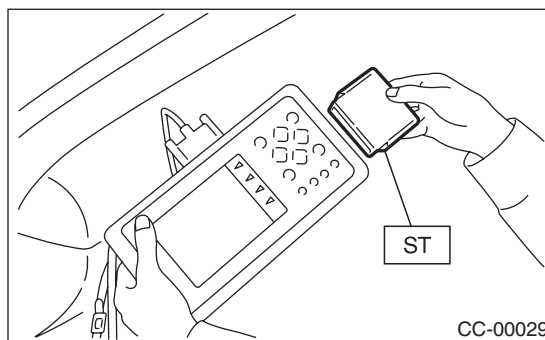

4) Connect the Subaru Select Monitor to the data link connector.

(1) Data link connector is located in the lower portion of the instrument panel (on the driver's side).

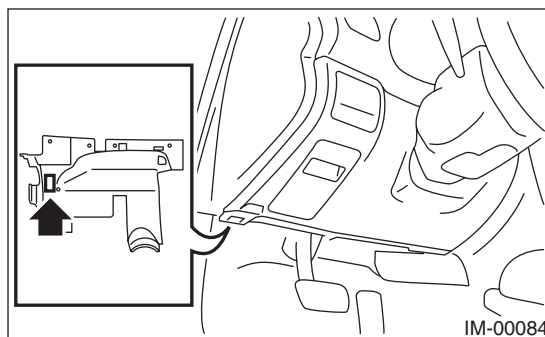


(2) Connect the diagnosis cable to the data link connector.

5) Start the engine and turn the cruise control main switch to ON.

Subaru Select Monitor

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

6) Turn the Subaru Select Monitor switch to ON.

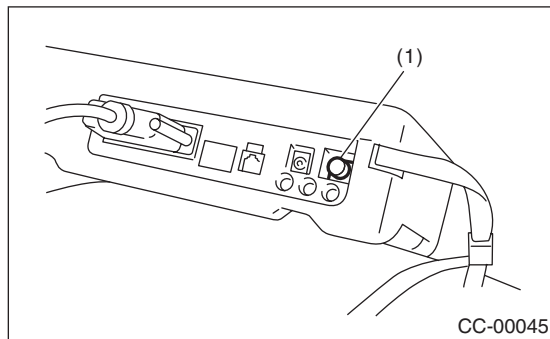

(1) Power switch

7) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key. On the system selection display screen, select the {Engine Control System} and press the [YES] key. Press the [YES] key after the information of engine type is displayed.

8) Drive vehicle at 40 km/h (25 MPH) or more and set the cruise control.

9) When the cruise speed is canceled by itself (without any cancel operations), DTC will be displayed on the screen after selecting the {Check Cancel Code} and pressing the [YES] key on the engine malfunction diagnosis screen.

CAUTION:

- When performing diagnosis, observe the legal speed limit on the road.
- DTC will be also displayed when cruise control is cancelled by driver. Do not confuse them.
- Get an assistant in the vehicle for help of diagnosis while driving.

NOTE:

DTC will be cleared by turning ignition switch or cruise control main switch to OFF.

3. REAL-TIME DIAGNOSIS

- 1) Connect the Subaru Select Monitor.
- 2) Turn the ignition switch and cruise control main switch to ON.
- 3) Turn the Subaru Select Monitor switch to ON.
- 4) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 5) On the «System Selection» display screen, select the {Engine Control System} and press the [YES] key.
- 6) Press the [YES] key after the information of engine type is displayed.
- 7) On the «Cruise Control Diagnosis» display screen, select the {Current Data Display/Save}, and then press the [YES] key.
- 8) Make sure that normal display is shown when operated as follows:
 - Depress and release the brake pedal. (Stop light switch and brake switch are turned to ON.)
 - Turn the main switch to ON.
 - Turn the «CANCEL» switch to ON.
 - Turn the «SET/COAST» switch to ON.
 - Turn the «RESUME/ACCEL» switch to ON.
 - Depress or release the clutch pedal.
 - Place the shift lever in any position other than neutral.

NOTE:

- For details concerning the operation procedure, refer to the «SUBARU SELECT MONITOR OPERATION MANUAL».
- Refer to «List of Diagnostic Trouble Code (DTC)» for DTC. <Ref. to CC(diag)-11, List of Diagnostic Trouble Code (DTC).>

6. Diagnostics with Phenomenon

A: DIAGNOSTIC PROCEDURE WITH PHENOMENON

Phenomenon		Checking item	Reference
1	Cruise control main switch is not turned to ON. (Cruise indicator light does not illuminate.)	(1) Check the cruise indicator light.	<Ref. to CC(diag)-10, CHECK CRUISE INDICATOR LIGHT AND CRUISE SET INDICATOR LIGHT, Diagnostics with Phenomenon.>
		(2) Check the cruise control command switch.	<Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2	Cruise control cannot be set.	(1) Check the cruise control command switch.	<Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
		(2) Check stop light switch and brake switch.	<Ref. to CC(diag)-15, DTC 12 AND 25 STOP LIGHT SWITCH AND BRAKE SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
		(3) Check clutch switch.	<Ref. to CC(diag)-17, DTC 13 CLUTCH SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
		(4) Check the neutral position switch.	<Ref. to CC(diag)-19, DTC 14 NEUTRAL POSITION SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
		(5) Check vehicle speed sensor.	<Ref. to CC(diag)-24, DTC 22 AND 32 VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
3	Cruise set indicator light does not illuminate.	Check the cruise set indicator light.	<Ref. to CC(diag)-10, CHECK CRUISE INDICATOR LIGHT AND CRUISE SET INDICATOR LIGHT, Diagnostics with Phenomenon.>
4	Vehicle speed is not held within set speed ± 3 km/h (± 2 MPH).	Inspect the vehicle speed sensor.	<Ref. to CC(diag)-24, DTC 22 AND 32 VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
5	Vehicle speed does not increase or does not return to set speed after RESUME/ACCEL switch has been pressed.	Check the RESUME/ACCEL switch.	<Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
6	Vehicle speed does not decrease after SET/COAST switch has been pressed.	Check the SET/COAST switch.	<Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
7	Cruise control is not released after CANCEL switch has been pressed.	Check the CANCEL switch.	<Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
8	Cruise control is not released after brake pedal has been depressed.	Check the stop light switch and brake switch.	<Ref. to CC(diag)-15, DTC 12 AND 25 STOP LIGHT SWITCH AND BRAKE SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
9	Cruise control is not released after shifting to the neutral position.	Check the neutral position switch.	<Ref. to CC(diag)-19, DTC 14 NEUTRAL POSITION SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
10	Cruise control is not released after clutch pedal has been depressed.	Check the clutch switch.	<Ref. to CC(diag)-17, DTC 13 CLUTCH SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

Diagnostics with Phenomenon

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

B: CHECK CRUISE INDICATOR LIGHT AND CRUISE SET INDICATOR LIGHT

TROUBLE SYMPTOM:

Cruise control can be set, but the cruise indicator light and cruise set indicator light do not illuminate.

	Step	Check	Yes	No
1	CHECK CRUISE INDICATOR LIGHT AND CRUISE SET INDICATOR LIGHT. 1) Perform the self-diagnosis of combination meter.<Ref. to IDI-3, SELF-DIAGNOSIS, INSPECTION, Combination Meter System.> 2) Check the cruise indicator light and cruise set indicator light if they illuminate.	Do the cruise indicator light and cruise set indicator light illuminate?	Go to step 2.	Replace the meter case assembly. <Ref. to IDI-14, Combination Meter.>
2	CHECK LAN COMMUNICATION CIRCUIT ERROR DISPLAY. 1) Complete self-diagnosis, and turn the ignition switch to ON again. 2) Check if the communication error is displayed on the odometer/trip meter in combination meter.	Is the error code "Er xx" displayed on odometer/trip meter?	Check the LAN communication circuit.<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>

List of Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

7. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Contents of diagnosis	Reference
11	Main switch	Main switch of cruise control command switch is turned to OFF, and then the cruise control is released.	This DTC is displayed without operating the main switch. <Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
12	Stop light & brake switch	Stop light switch or brake switch is turned to ON, and then the cruise control is released.	This DTC is displayed without depressing the brake pedal. <Ref. to CC(diag)-15, DTC 12 AND 25 STOP LIGHT SWITCH AND BRAKE SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
13	Clutch switch	Clutch switch is turned to ON, and then the cruise control is released.	This DTC is displayed without depressing the clutch pedal. <Ref. to CC(diag)-17, DTC 13 CLUTCH SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
14	Neutral switch	Neutral position switch is turned to ON, and then the cruise control is released.	This DTC is displayed without shifting to neutral position. <Ref. to CC(diag)-19, DTC 14 NEUTRAL POSITION SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
15	Cancel switch	Cancel switch is turned to ON, and then the cruise control is released.	This DTC is displayed without operating the cancel switch. <Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
16	Ignition switch	Ignition switch is turned to OFF, and then the cruise control is released.	This DTC is displayed without operating the ignition switch. <Ref. to CC(diag)-23, DTC 16 IGNITION SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
21	Cruise control switch malfunction when ignition switch is turned to ON	When the ignition switch is turned to ON, each switch of cruise control command switch is already turned to ON.	This DTC is displayed without operating the main switch. <Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
22	Vehicle Speed Variation Malfunction	Malfunction of vehicle speed signal variation is detected.	<Ref. to CC(diag)-24, DTC 22 AND 32 VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
23	Engine Related Sensor Malfunction	Malfunction related to engine is detected.	<Ref. to EN(H4SO)(diag)-2, Basic Diagnostic Procedure.> <Ref. to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.> <Ref. to EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>
24	Cruise Control Related Switch Malfunction	Command switch malfunction is detected. (While the switch is pressed ON for an abnormally long time (approximately two minutes), open circuit is detected.)	This DTC is displayed with normal operation. <Ref. to CC(diag)-13, DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
25	Brake Switch Input Circuit Malfunction	Malfunction of brake switch input circuit in ECM is detected.	<Ref. to CC(diag)-15, DTC 12 AND 25 STOP LIGHT SWITCH AND BRAKE SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
31	Engine speed signal	- Abnormal increase of engine speed is detected. - Gear is placed in Neutral, 1st or Reverse position.	Cruise in more than 2nd shift position.

List of Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

DTC	Item	Contents of diagnosis	Reference
32	Out of vehicle speed range of cruise control operation	- Controlled vehicle speed decreased under the limit during cruising. - Set operation was performed at vehicle speed unavailable for setting. - RESUME operation was performed without memorized vehicle speed.	This DTC is displayed, though the vehicle speed is increased to the speed available for cruise set and set operation was performed again. <Ref. to CC(diag)-24, DTC 22 AND 32 VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
33	Prohibition of WAIT after acceleration operation	Controlled vehicle speed increased above the limit during cruising.	This DTC is displayed when driving at higher speed than appropriate cruise control speed. In this case, lower the vehicle speed to the speed available for cruise set, and perform cruise set operation again.
34	Prohibition when accelerator position is continued to be large	The vehicle has been driven at higher speed than set vehicle speed for an abnormally long time (approximately 10 minutes) during cruise driving.	This DTC is displayed when driving for a long period of time at higher speed than appropriate cruise set vehicle speed by operating accelerator pedal. In this case, the cruise setting is deactivated.
35	Prohibition when vehicle speed feedback is impossible	Set vehicle speed cannot be kept because of some reasons (steep uphill, parking brake, abnormal decrease of engine output, etc.) during cruise driving.	This DTC is displayed when driving condition is not suitable for cruise control. Perform cruise set operation again after clearing the possible cause.
41	VDC/TCS operation	Vehicle dynamics control (VDC) or TCS is operated during cruise driving or cruise setting.	This DTC is displayed when driving condition is not suitable for cruise control. Perform cruise set operation again after clearing the possible cause.
42	High speed CAN communication failure	Combination meter malfunction is detected during cruise driving or cruise setting.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
43	ABS/VDC malfunction	ABS or Vehicle dynamics control (VDC) system malfunction is detected during cruise driving or cruise setting.	<Ref. to ABS(diag)-2, Basic Diagnostic Procedure.>or <Ref. to VDC(diag)-2, Basic Diagnostic Procedure.>
44	Body integrated unit malfunction	Body integrated unit system malfunction is detected during cruise driving or cruise setting.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
45	Meter Failure	Combination meter malfunction is detected during cruise driving or cruise setting.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)



 
 

8. Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC 11, 15, 21 AND 24 CRUISE CONTROL COMMAND SWITCH

TROUBLE SYMPTOM:

- Cruise control cannot be set. (Cancelled immediately.)
- Cruise control cannot be released.

WIRING DIAGRAM:

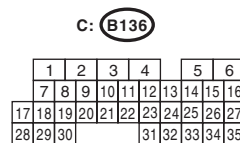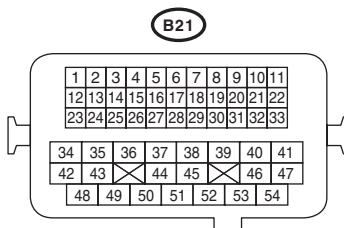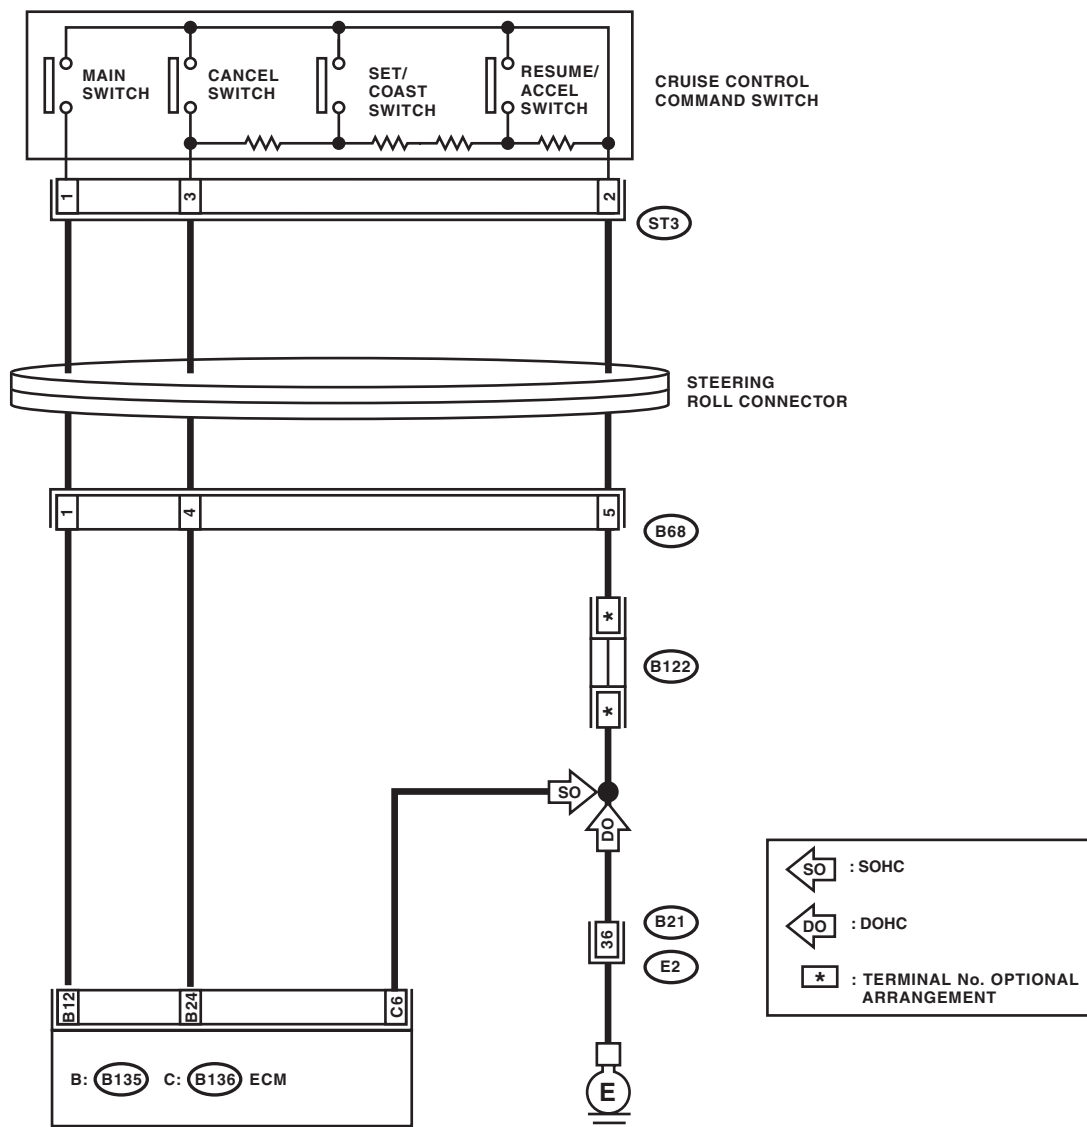

CC-00399

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK CRUISE CONTROL COMMAND SWITCH CIRCUIT. 1) Remove the driver's airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.> 2) Disconnect the harness connector of cruise control command switch. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (ST3) No. 1 (+) — Chassis ground (-): (ST3) No. 3 (+) — Chassis ground (-):	Is the voltage more than 5 V?	Go to step 2.	Check the harness between cruise control command switch and ECM for open or shorted circuit.
2 CHECK CANCEL SWITCH. 1) Turn the ignition switch to OFF. 2) Remove the cruise control command switch. <Ref. to CC-5, REMOVAL, Cruise Control Command Switch.> 3) Measure the resistance between switch terminals when the CANCEL switch is pressed and not pressed. Terminals No. 2 — No. 3:	Is the resistance approx. less than 1 Ω when the CANCEL switch is pressed? Is the resistance approx. 4 k Ω when the CANCEL switch is not pressed?	Go to step 3.	Replace the cruise control command switch. <Ref. to CC-5, Cruise Control Command Switch.>
3 CHECK SET/COAST SWITCH. Measure the resistance between switch terminals when SET/COAST switch is pressed and not pressed. Terminals No. 2 — No. 3:	Is the resistance approx. 250 Ω when SET/COAST switch is pressed? Is the resistance approx. 4 k Ω when SET/COAST switch is not pressed?	Go to step 4.	Replace the cruise control command switch. <Ref. to CC-5, Cruise Control Command Switch.>
4 CHECK RESUME/ACCEL SWITCH CIRCUIT. Measure the resistance between switch terminals when RESUME/ACCEL switch is pressed and not pressed. Terminals No. 2 — No. 3:	Is the resistance approx. 1,500 Ω when RESUME/ACCEL switch is pressed? Is the resistance approx. 4 k Ω when RESUME/ACCEL switch is not pressed?	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>	Replace the cruise control command switch. <Ref. to CC-5, Cruise Control Command Switch.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)




 

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

B: DTC 12 AND 25 STOP LIGHT SWITCH AND BRAKE SWITCH

TROUBLE SYMPTOM:

- Cruise control cannot be set.
- Cruise control cannot be released.

WIRING DIAGRAM:

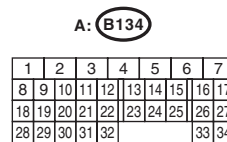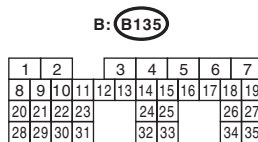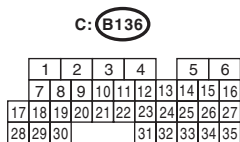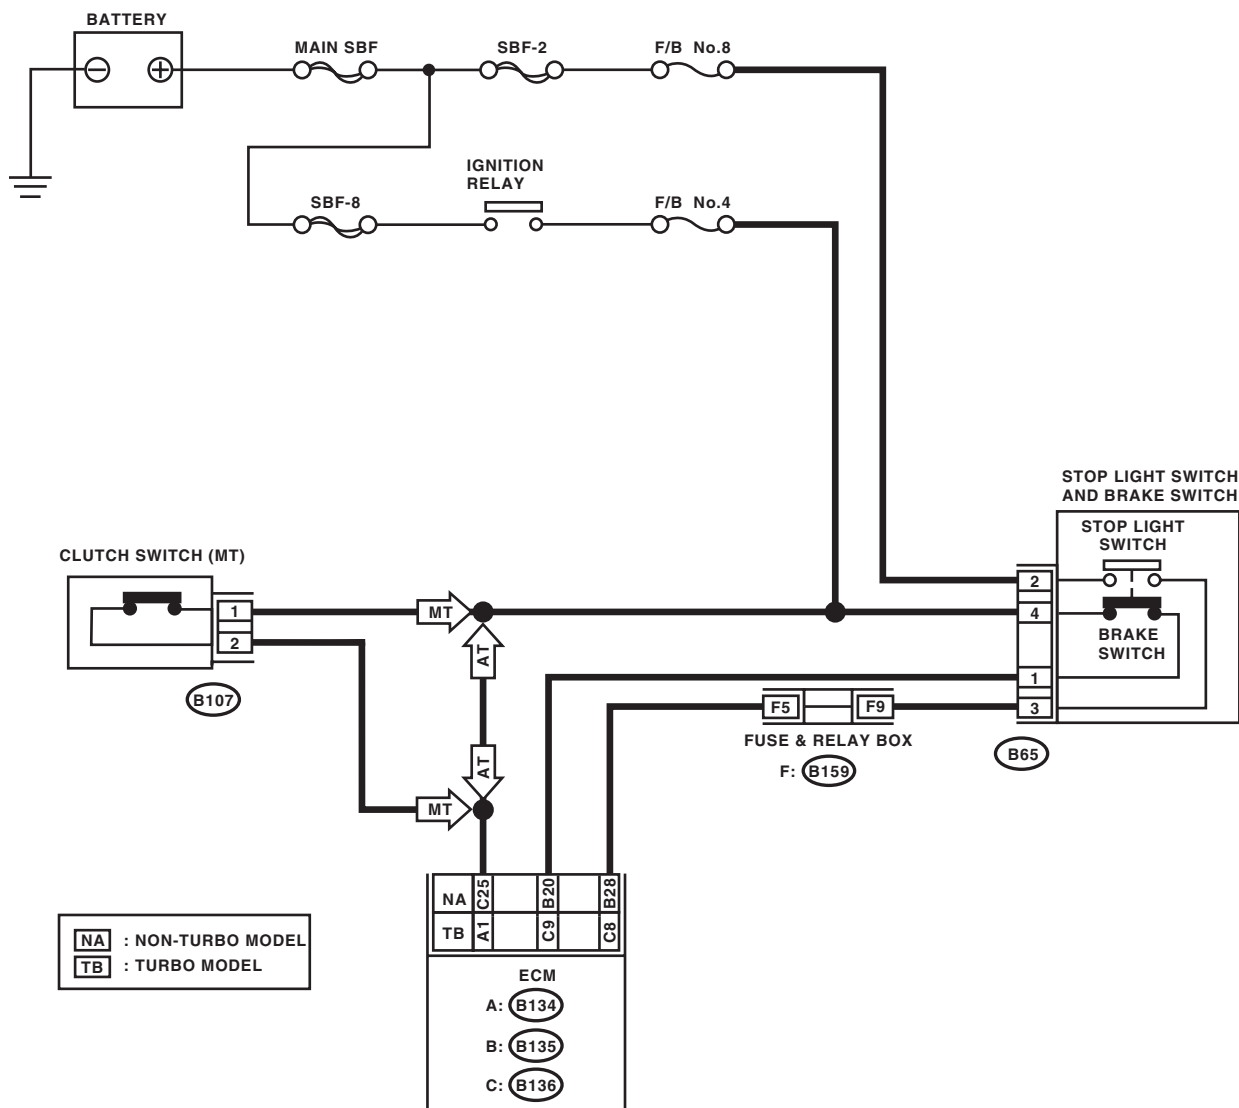

CC-00400

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK STOP LIGHT SWITCH AND BRAKE SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the stop light switch and brake switch harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B65) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	- Check fuse No. 8 (in fuse & relay box). - Check for open or short in the harness between stop light/brake switch and fuse & relay box.
2 CHECK STOP LIGHT SWITCH AND BRAKE SWITCH CIRCUIT. Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B65) No. 4 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	- Check fuse No. 4 (in fuse & relay box). - Check for open or short in the harness between stop light/brake switch and fuse & relay box.
3 CHECK STOP LIGHT SWITCH AND BRAKE SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of ECM. 3) Measure the resistance between ECM harness connector terminal and stop light switch and brake switch harness connector terminal. Connector & terminal (B136) No. 8 — (B65) No. 3: (B136) No. 9 — (B65) No. 1:	Is the resistance less than 10 Ω ?	Go to step 4.	Repair the harness.
4 CHECK STOP LIGHT SWITCH AND BRAKE SWITCH. Remove and check the stop light switch and brake switch. <Ref. to CC-6, Stop Light & Brake Switch.>	Are the stop light switch and brake switch OK?	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>	Replace the stop light switch and brake switch.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)



CRUISE CONTROL SYSTEM (DIAGNOSTICS)

C: DTC 13 CLUTCH SWITCH

TROUBLE SYMPTOM:

- Cruise control cannot be set.
- Cruise control cannot be released.

WIRING DIAGRAM:

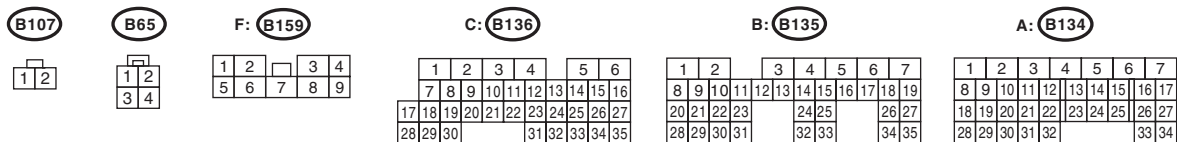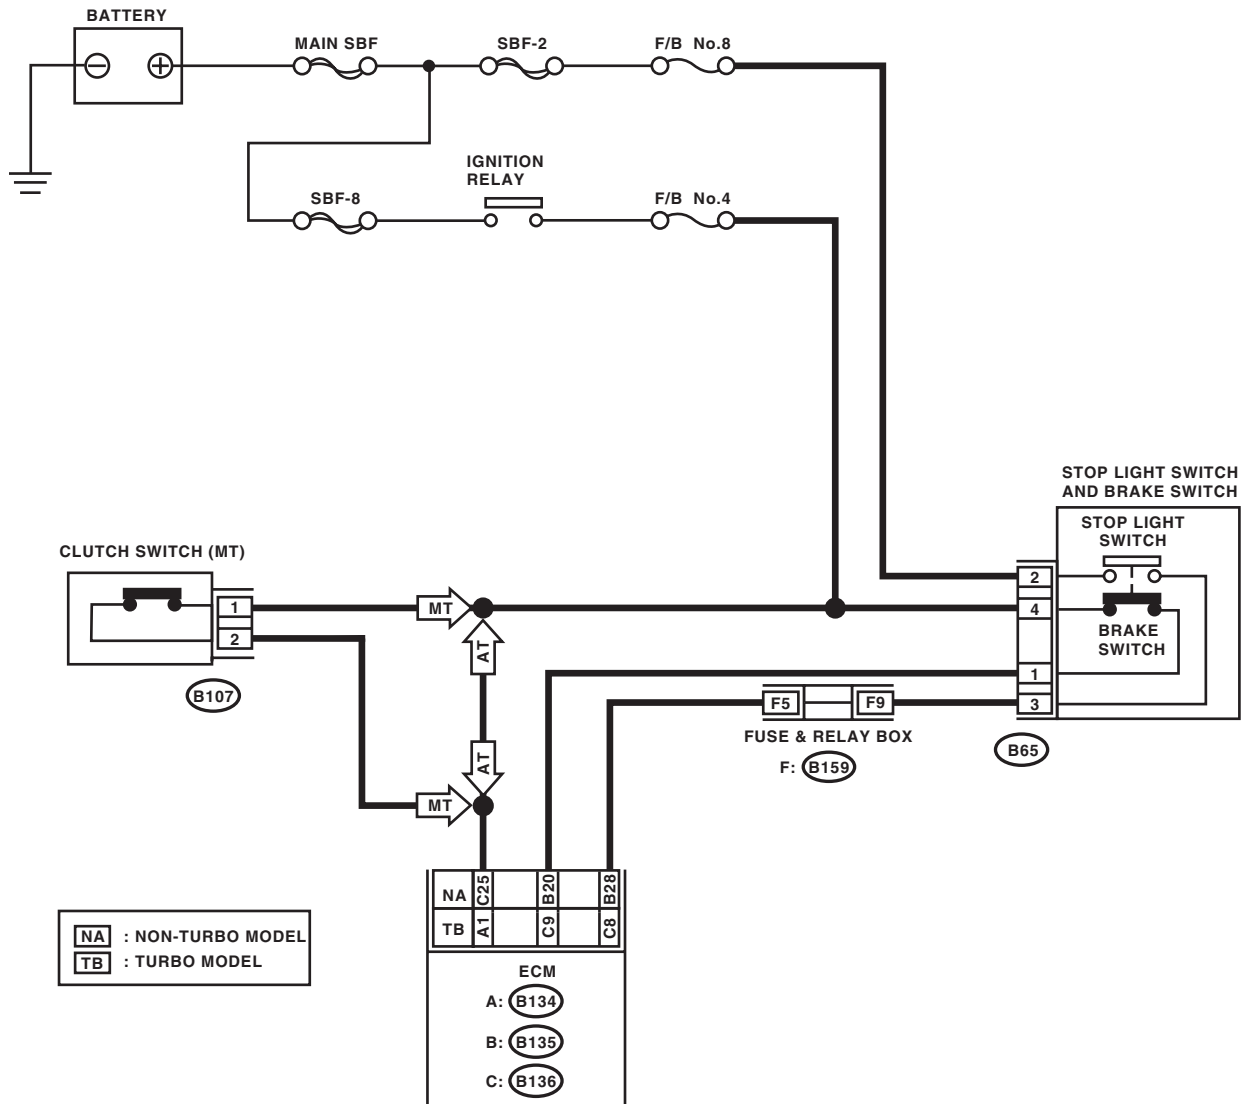

CC-00400

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK CLUTCH SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the clutch switch harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B107) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	- Check fuse No. 4 (in fuse & relay box). - Check open or shorted circuit of harness between clutch switch and fuse & relay box.
2 CHECK CLUTCH SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of ECM. 3) Measure the resistance between clutch switch harness connector terminal and ECM harness connector terminal. Connector & terminal Non-turbo model: (B107) No. 2 — (B136) No. 25: Turbo model: (B107) No. 2 — (B134) No. 1:	Is the resistance less than 10 Ω?	Go to step 3.	Repair the harness.
3 CHECK CLUTCH SWITCH. Remove and check the clutch switch. <Ref. to CC-7, Clutch Switch.>	Is clutch switch OK?	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).>	Replace the clutch switch.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)


D: DTC 14 NEUTRAL POSITION SWITCH

TROUBLE SYMPTOM:

Cruise control cannot be set.

WIRING DIAGRAM:

- H4 Non-turbo (MT and 4AT) model AT

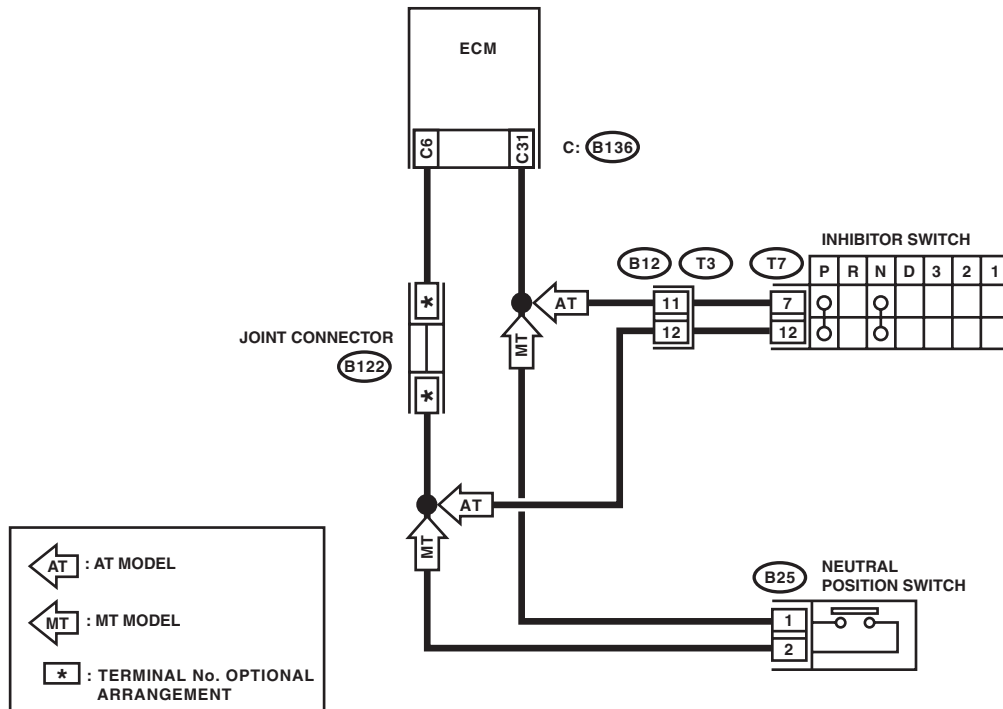

B25

1 2

B122

1	2	3	4
5	6	7	8

T7

1	2	3	4	5	6
7	8	9	10	11	12

B12

1	2	3	4
5	6	7	8
9	10	11	12

C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

CC-00401

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

-
- ECM
- H6 TB
- C31 D9
- C: B136
- D: B137
- AT
- T2 T9 B128
- B21 E2
- TCM
- B55
- B128
- | | |
|---|---|
| 1 | 2 |
| 1 | 2 |
- B: B55
- | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
| 19 | 20 | 21 | | | | 22 | 23 | 24 |
- D: B137
- | | | | | | | |
|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 15 | 16 | 17 | 18 | 19 | 20 | 21 |
| 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| 29 | 30 | 31 | | | | |
- C: B136
- | | | | | | |
|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 |
| 7 | 8 | 9 | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 |
| 19 | 20 | 21 | 22 | 23 | 24 |
| 25 | 26 | 27 | 28 | 29 | 30 |
| 31 | 32 | 33 | 34 | 35 | |
- B21
- | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
| 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 |
| 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 |
| 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 |
| 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 |
- CC-00402

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK VEHICLE FOR SPECIFICATION. Check the vehicle specification.	Is the transmission type 5AT?	Go to step 2.	Go to step 5.
2 CHECK NEUTRAL POSITION SWITCH. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch and Subaru Select Monitor switch to ON. 3) Select {Engine Control System} from the main menu. 4) Then, select {Current Data Display & Save}. 5) Check the neutral position switch signal by shifting the select lever to "P" or "N" range.	Is Subaru Select Monitor ON when select lever is shifted into "P" or "N" range? Is Subaru Select Monitor OFF when select lever is shifted to a range other than the "P" or "N" range?	Replace the ECM. <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>	Go to step 3.
3 CHECK TCM OUTPUT VOLTAGE. 1) Turn the ignition switch to ON. 2) Measure the voltage between TCM harness connector terminal and chassis ground. Connector & terminal (B55) No. 19 (+) — Chassis ground (-):	Is voltage more than 10 V when select lever is shifted to a range other than "P" or "N" range? Is voltage less than 1 V when select lever is shifted into "P" or "N" range?	Go to step 4.	Check the TCM. <Ref. to 5AT(diag)-2, Basic Diagnostic Procedure.>
4 CHECK HARNESS BETWEEN TCM AND ECM. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector from TCM and ECM. 3) Measure the resistance between TCM harness connector terminal and ECM harness connector terminal. Connector & terminal Non-turbo model (B136) No. 31 — (B55) No. 19: Turbo model (B137) No. 9 — (B55) No. 19:	Is the resistance less than 10 Ω ?	Replace the ECM. <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>	Repair the wiring harness.
5 CHECK TRANSMISSION TYPE.	Is the transmission type 4AT?	Go to step 6.	Go to step 9.
6 CHECK INHIBITOR SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the inhibitor switch harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (ST7) No. 12 (+) — Chassis ground (-):	Is the voltage approx. 5 V?	Go to step 7.	Check for open or short in the harness between inhibitor switch and ECM.
7 CHECK INHIBITOR SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the starter motor harness connector. 3) Measure the resistance between inhibitor switch harness connector terminal and chassis ground. Connector & terminal (T7) No. 7 — Chassis ground:	Is the resistance less than 10 Ω ?	Go to step 8.	Repair the harness.
8 CHECK INHIBITOR SWITCH. Remove and check the inhibitor switch. <Ref. to CC-8, Inhibitor Switch.>	Is the inhibitor switch OK?	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).>	Replace the inhibitor switch.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
9 CHECK NEUTRAL POSITION SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the neutral position switch harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal Non-turbo model: (B25) No. 1 (+) — Chassis ground (-): Turbo model: (B128) No. 1 (+) — Chassis ground (-):	Is the voltage approx. 5 V?	Go to step 10.	Check for open or short in the harness between neutral position switch and ECM.
10 CHECK NEUTRAL POSITION SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Measure resistance between harness connector terminal of neutral position switch and chassis ground. Connector & terminal Non-turbo model: (B25) No. 2 — Chassis ground: Turbo model: (B128) No. 3 — Chassis ground:	Is the resistance less than 10 Ω ?	Go to step 11.	Repair the harness.
11 CHECK NEUTRAL POSITION SWITCH. Remove and check the neutral position switch. <Ref. to CC-9, Neutral Position Switch.>	Is the neutral position switch OK?	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).>	Replace the neutral position switch.


Diagnostic Procedure with Diagnostic Trouble Code (DTC)

E: DTC 16 IGNITION SWITCH

TROUBLE SYMPTOM:

Cruise control cannot be set.

WIRING DIAGRAM:

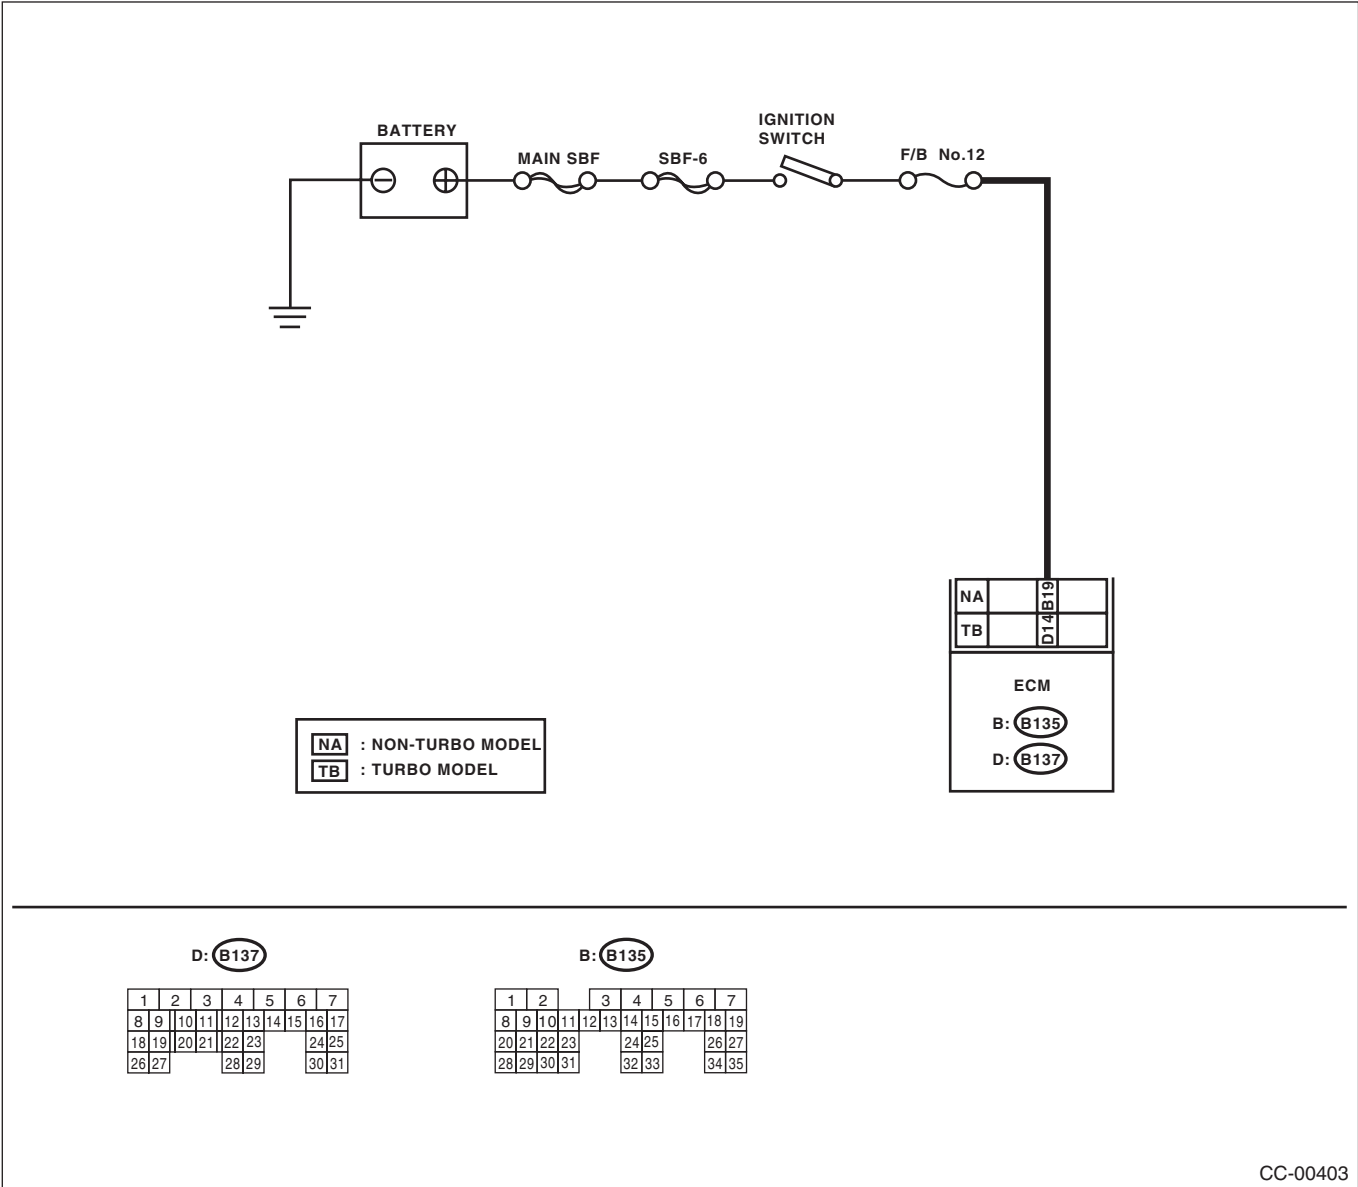

Step	Check	Yes	No
1 CHECK IGNITION SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the ECM harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal Non-turbo model (B135) No. 19 (+) — Chassis ground (-): Turbo model (B137) No. 14 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Check the poor contact of ECM connector.	• Check fuse No. 12 (in fuse & relay box). • Check the harness for open or short circuit between ignition switch and ECM.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

F: DTC 22 AND 32 VEHICLE SPEED SENSOR

DIAGNOSIS:

Open or shorted circuit in vehicle speed sensor system.

TROUBLE SYMPTOM:

Cruise control cannot be set. (Cancelled immediately.)

Step	Check	Yes	No
1 CHECK ABS WARNING LIGHT. 1) Turn the ignition switch to ON. 2) After the initial operation of combination meter is completed, check if the ABS warning light continues to illuminate.	Does the ABS warning light continue to illuminate?	Check ABSCM or VDCCM. <Ref. to ABS(diag)-2, Basic Diagnostic Procedure.> or <Ref. to VDC(diag)-2, Basic Diagnostic Procedure.>	Go to step 2.
2 CHECK LAN COMMUNICATION CIRCUIT ERROR DISPLAY. Check if the communication error is displayed on the odo/trip meter in combination meter.	Is the error code "Er xx" displayed on odo/trip meter?	Check the LAN communication circuit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>

IMMOBILIZER (DIAGNOSTICS)

IM(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	3
3. Electrical Component Location	5
4. Immobilizer Control Module I/O Signal	6
5. Subaru Select Monitor	7
6. Read Diagnostic Trouble Code (DTC)	8
7. Clear Memory Mode	9
8. Diagnostics Chart for Security Indicator Light	10
9. List of Diagnostic Trouble Code (DTC)	14
10. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	16

1. General Description

A: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

B: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Conductive silver composition (DUPONT No. 4817 or equivalent)	Used for repairing antenna wire.

2. Audio System

A: WIRING DIAGRAM

<Ref. to WI-136, WIRING DIAGRAM, Audio System.>

B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	1. Check the fuse and power supply for audio. 2. Check the audio ground. 3. Remove the audio and repair them.
A specific speaker does not operate.	1. Check the speaker. 2. Check the output circuit between audio and speaker.
Audio generates noise with engine is running.	1. Check the audio ground. 2. Check the generator. 3. Check the ignition coil. 4. Remove the audio and repair them.
Volume is low in AM and FM modes, or interference noise occurs.	1. Check the antenna. 2. Check the antenna amplifier. 3. Check the noise suppressor. 4. Check the audio ground. 5. Remove the audio and repair them.

3. Front Accessory Power Supply Socket System

A: WIRING DIAGRAM

<Ref. to WI-138, WIRING DIAGRAM, Front Accessory Power Supply Socket System.>

4. Rear Accessory Power Supply Socket System

A: WIRING DIAGRAM

<Ref. to WI-139, WIRING DIAGRAM, Rear Accessory Power Supply Socket System.>

5. Navigation System

A: WIRING DIAGRAM

<Ref. to WI-140, WIRING DIAGRAM, Navigation System.>

B: INSPECTION

1. CHECK THE OPERATION OF THE NAVIGATION.

Start the engine, and then inspect that the opening screen is displayed.

Standard: The opening screen should be displayed.

OK: Normal

NG: When not displayed, check the signal line connector and the audio connector. If there are no problems in the connecting lines or the lines were repaired, check that the opening screen is displayed.

At this point, if the display is not viewable, the unit is defective.

2. CHECK THE DVD-ROM.

An opening screen is displayed, then it switches to the map screen after a while.

When a screen other than the opening screen is displayed, press the «MAP» key.

Standard value: The map screen should be displayed.

OK: Normal

NG: If the map screen is not displayed, check whether the DVD-ROM is set in the navigation system, whether the correct side is set, type of the DVD-ROM, the existence of any scratches, etc. If there are no problems on the DVD-ROM, the main body is defective.

3. CHECK EACH CONNECTION

If there are no problems in the inspections of 1 and 2 above, use "<Ref. to WI-140, WIRING DIAGRAM, Navigation System.>" of the navigation device to perform inspection.

4. SWITCHING TO CONNECTION INSPECTION MODE

- 1) Press the menu key.
- 2) Select navigation setup from the menu screen.
- 3) Select navigation information from the navigation setup screen.
- 4) Select the vehicle signal from the navigation information screen.
- 5) The display will switch to the vehicle signal (for connection inspection) screen.

6) Check that the display changes according to each operation

ON: Normal

NG: Check the circuit when the display does not change.

5. CHECK THE GPS ANTENNA

NOTE:

When checking the GPS antenna, perform the check operation outdoors to improve the receiver sensitivity.

Make sure that a value other than "zero" is displayed in the GPS item.

OK: Normal

NG: If "No positioning" is displayed, check the GPS antenna connection.

If the GPS display is red, the main unit could be faulty.

6. CHECK THE BACK SENSOR

NOTE:

Before starting inspections, inspect the safety around the rear end of the vehicle.

- 1) Turn the ignition switch to ON.
 - 2) Pull the parking brake and depress the brake, then put the gear in reverse.
 - 3) Make sure that "On" is lit in the back sensor item.
- Standard Value: "On" should be lit.

On: Normal

NG: If "On" does not light, check the signal line connection. If there are no problems, the unit could be faulty.

7. CHECK THE ILLUMINATION

- 1) Turn the lighting switch to level 1.

NOTE:

Make sure that the bright switch is not turned ON at this time.

- 2) Make sure that "On" lights in the illumination item, then the screen fades out.

Standard Value: "On" should be lit.

OK: Normal

NG: If "On" does not light, check the signal line connection. If there are no problems, the unit could be faulty.

8. CHECK THE PARKING BRAKE SIGNAL

NOTE:

The side brake signal is normally "OFF", so operating it will produce no change.

9. CHECK SPEED SENSOR

NOTE:

- Before starting inspections, inspect the safety around the vehicle.

- Lift-up the vehicle as necessary.

- When the diagnostic trouble code is input in the VDCCM, clear the memory.

- 1) Move the vehicle 2 to 3 meters (6.6 to 9.8 ft).

- 2) Check that the numbers from the speed sensor are displayed.

Standard: Vehicle speed is to be shown in numbers.


OK: Normal

NG: If vehicle speed is not displayed, check the signal line connection. If there are no problems, the unit could be faulty.

6. Audio


A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 3) Remove the console front panel. <Ref. to EI-53, REMOVAL, Center Console.>
- 4) Remove the console side garnish. <Ref. to EI-53, REMOVAL, Center Console.>

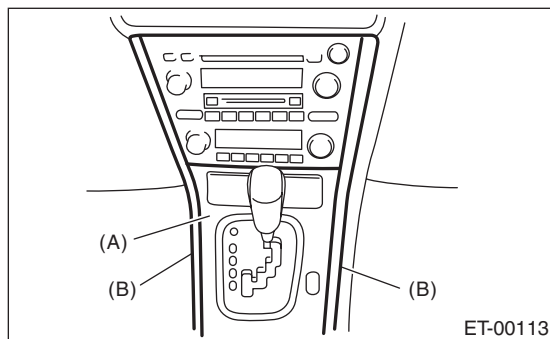

- (A) Console front panel
(B) Console side garnish

- 5) Remove the screws, and partially pull the audio out from center console.

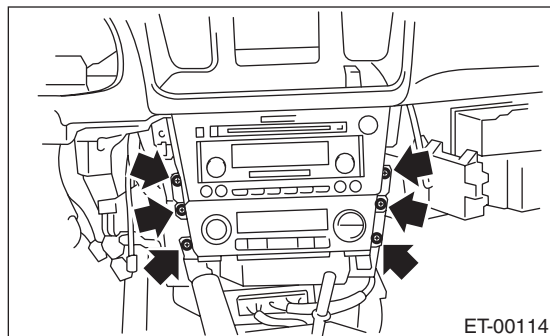

- 6) Disconnect the harness connector and antenna feeder cord, and then remove the audio.


B: INSTALLATION

Install in the reverse order of removal.

7. Front Speaker

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the front speaker mounting screws.

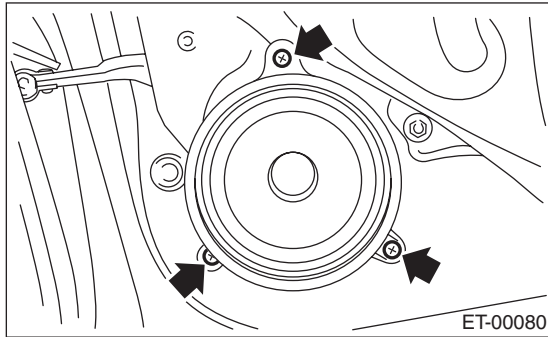

- 4) Disconnect the harness connector and remove the front speaker.


B: INSTALLATION

Install in the reverse order of removal.

8. Tweeter

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the tweeter mounting screws.

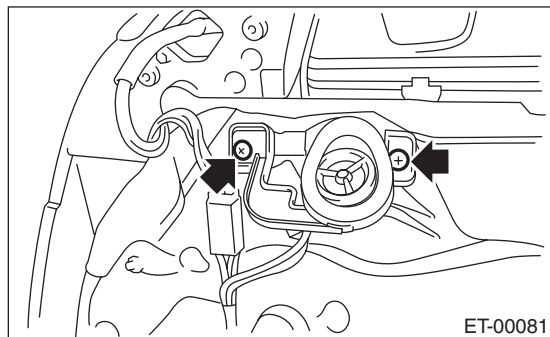

- 4) Disconnect the harness connector and remove the tweeter.


B: INSTALLATION

Install in the reverse order of removal.

9. Rear Speaker

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the rear speaker mounting screws.

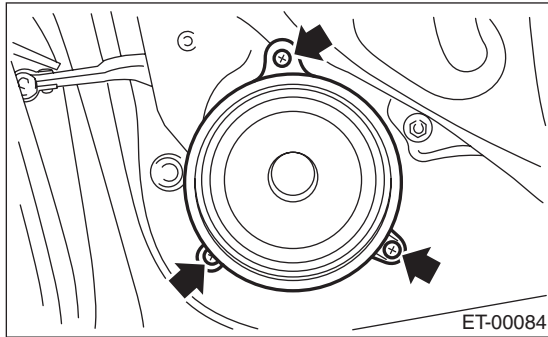

- 4) Disconnect the harness connector and remove the rear speaker.


B: INSTALLATION

Install in the reverse order of removal.


10.Woofer

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the hooks (A) and detach the woofer cover. <Ref. to EI-61, REMOVAL, Rear Quarter Trim.>

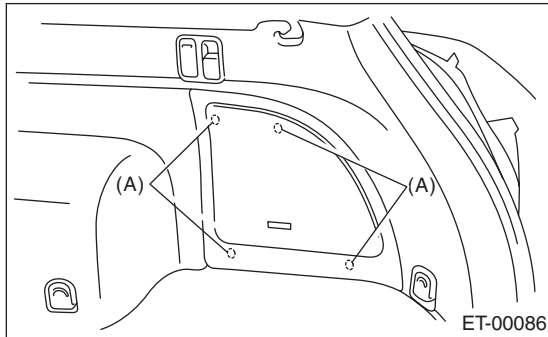

- 3) Remove the quarter lower trim. <Ref. to EI-61, REMOVAL, Rear Quarter Trim.>
- 4) Remove the woofer bracket mounting clips (A) and screws, then remove the woofer bracket.

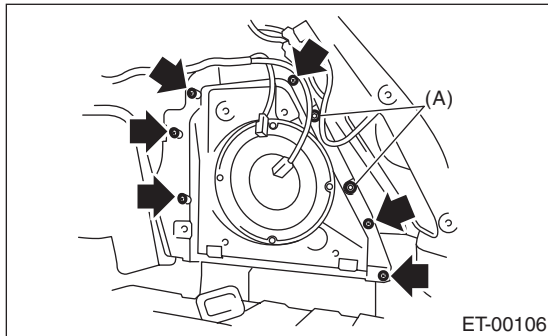

- 5) Disconnect the harness connector and detach the woofers.

B: INSTALLATION

Install in the reverse order of removal.

11. Antenna


A: INSPECTION

Measure the resistance between the antenna terminal and each antenna wire.

If an antenna wire is OK, resistance will be less than $1\ \Omega$. If an antenna wire is broken, resistance will be more than $1\ \text{M}\Omega$.


NOTE:

When checking the continuity, wind a piece of aluminum foil around the tip of tester probe and press foil against the antenna wire with your finger.

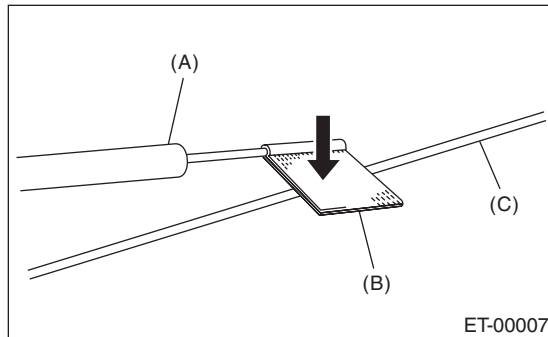

- (A) Tester probe
- (B) Aluminum foil
- (C) Antenna wire

To locate the broken point, move the probe along antenna wire.

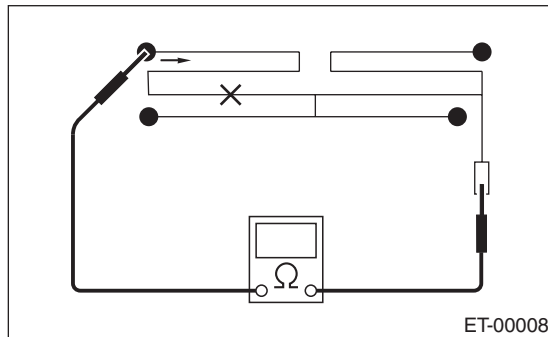


B: REPAIR

1) Clean the antenna wire and surrounding area with a cloth dampened by alcohol.

2) Paste a thin masking film on the glass along broken wire.

3) Apply the conductive silver composition (DU-PONT No. 4817) on the broken portion with a drawing pen.

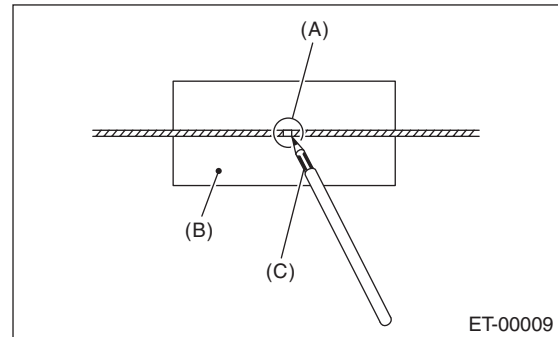

- (A) Broken portion
- (B) Masking film
- (C) Conductive silver composition

4) Dry out the deposited portion.


5) After repair has been completed, measure the resistance in repaired wire.

12. Antenna Amplifier

A: REMOVAL


1. SEDAN MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear quarter trim. <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the curtain airbag module. <Ref. to AB-21, REMOVAL, Curtain Airbag Module.>
- 5) Remove the screws and detach the antenna amplifier.

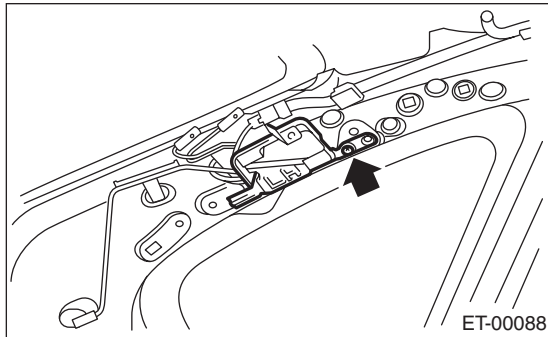

2. WAGON MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the screws and detach the antenna amplifier.

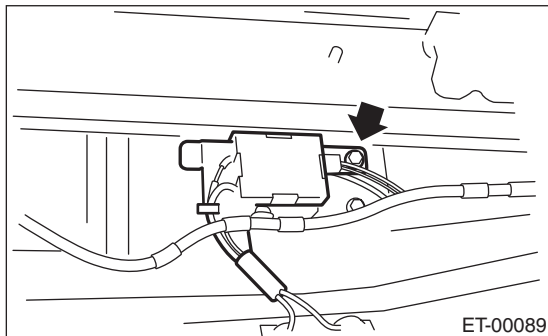


B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

Measure the resistance of antenna amplifier.

- Sedan model

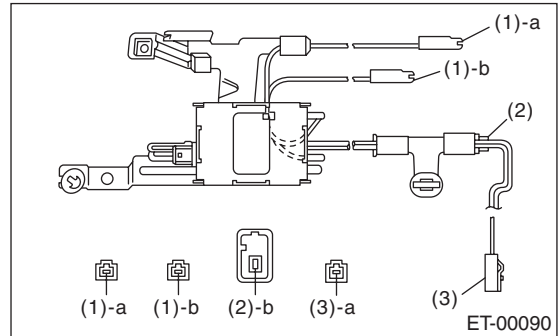

- Wagon model

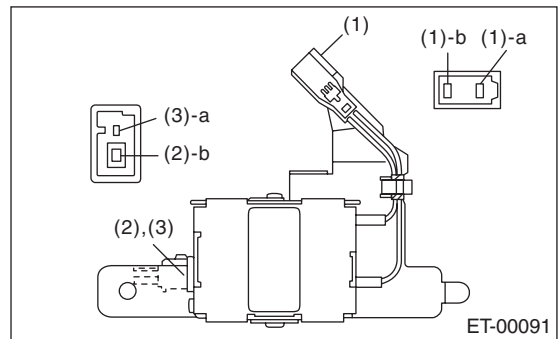


Terminal No.	Standard
(1)-a and Amplifier body	10 kΩ or more
(1)-b and Amplifier body	10 kΩ or more
(2)-b and Amplifier body	10 kΩ or more
(3)-a and Amplifier body	10 kΩ or more

13.Noise Suppressor

A: REMOVAL


1. SEDAN MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear quarter trim. <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Remove the curtain airbag module. <Ref. to AB-21, REMOVAL, Curtain Airbag Module.>
- 4) Disconnect harness connector from noise suppressor.
- 5) Remove the harness clip.
- 6) Remove the screws and detach the noise suppressor.

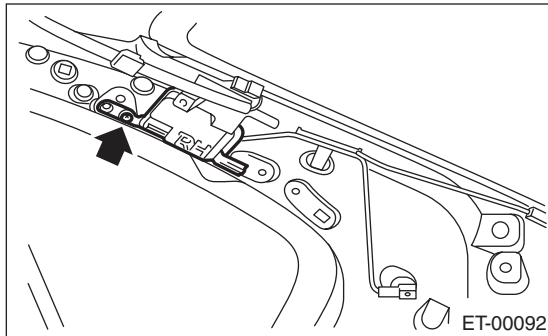

2. WAGON MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 3) Disconnect harness connector from noise suppressor.
- 4) Remove the screws and detach the noise suppressor.

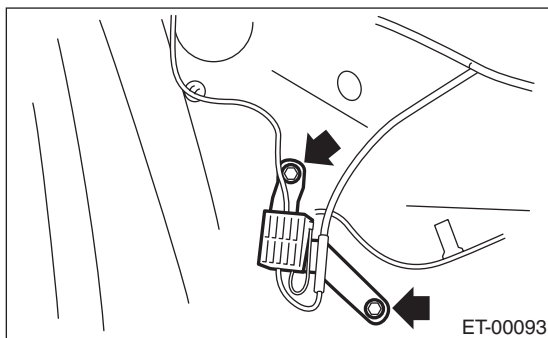


B: INSTALLATION

Install in the reverse order of removal.


14. Navigation Display

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the clip, and remove the center upper panel.

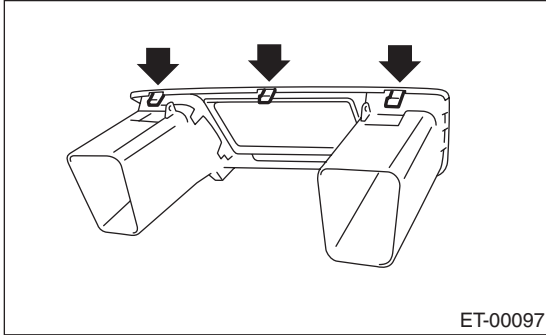

- 3) Remove the display mounting screws.

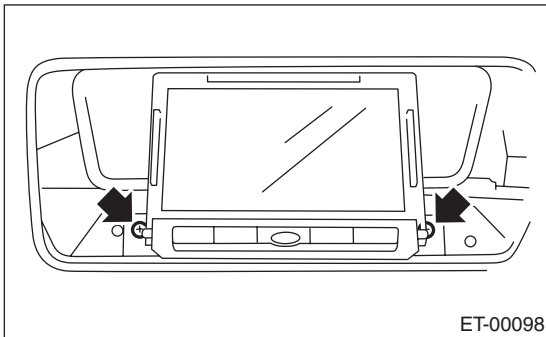

- 4) Disconnect the harness connector and remove the navigation display.



B: INSTALLATION

Install in the reverse order of removal.

15. GPS Antenna

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
- 3) Remove the GPS antenna mounting screws to remove the GPS antenna.

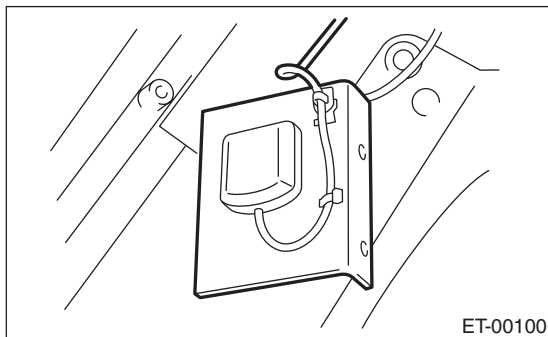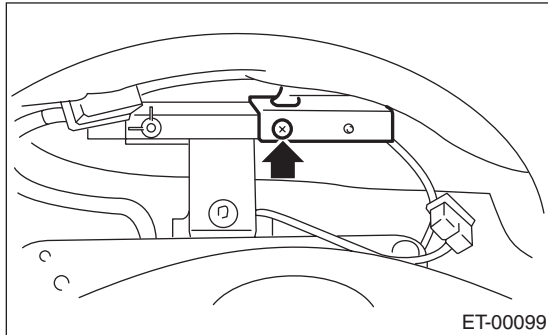

- 4) Remove the audio. <Ref. to ET-8, REMOVAL, Audio.>
- 5) Remove the GPS antenna cord connector from the steering support beam stay (on the driver's side).


B: INSTALLATION

Install in the reverse order of removal.

16.Navigation Body

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's seat. <Ref. to SE-9, REMOVAL, Front Seat.>
- 3) Disconnect the connector.
- 4) Remove the bolts and then remove the navigation unit.

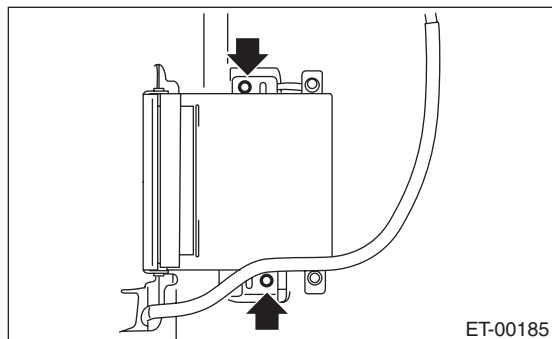


B: INSTALLATION

Install in the reverse order of removal.

17.Front Accessory Power Supply Socket

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console front panel. <Ref. to EI-53, REMOVAL, Center Console.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

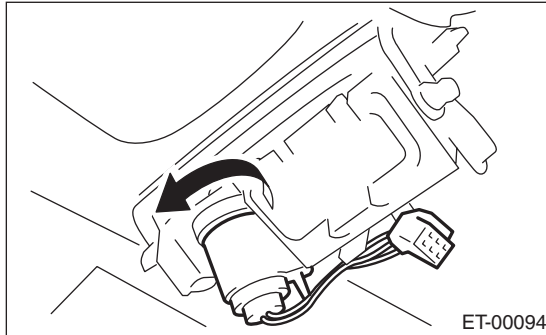


B: INSTALLATION

Install in the reverse order of removal.

18. Rear Accessory Power Supply Socket

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

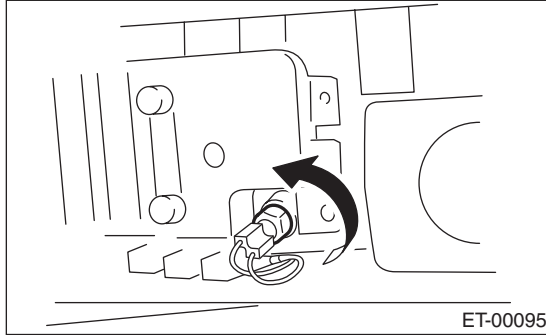

B: INSTALLATION

Install in the reverse order of removal.

19. Steering Satellite Switch


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Set the tire to the straight-ahead position.
- 3) Remove the airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>

WARNING:

If there are airbag modules mounted, always refer to "Airbag System" when performing airbag module service. <Ref. to AB-17, INSPECTION, Driver's Airbag Module.>

- 4) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 5) Remove the cover from steering wheel.
- 6) Remove 1 satellite switch mounting screws each from the left and right sides.

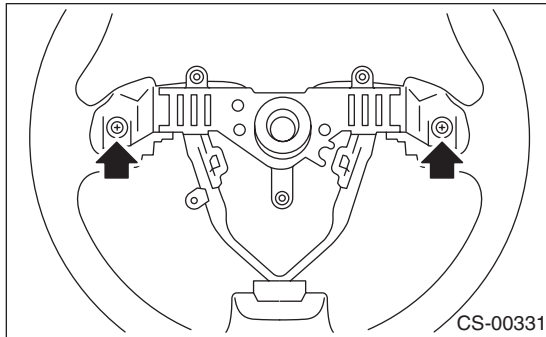

- 7) Remove the satellite switch.


B: INSTALLATION

Install in the reverse order of removal.

Steering Satellite Switch

ENTERTAINMENT

C: INSPECTION

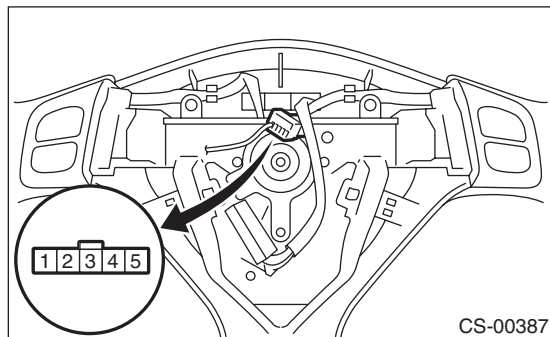

Step	Check	Yes	No
1 MUTE SWITCH CONTINUITY CHECK. 1) Press the mute switch. 2) Measure the resistance between satellite switch connector terminals. Terminals No. 1 — No. 2:	Is the resistance approx. 22 Ω ?	Go to step 2.	Replace the satellite switch.
2 VOLUME SWITCH CONTINUITY CHECK. 1) Press the volume switch. 2) Measure the resistance between satellite switch connector terminals. Terminals No. 1 — No. 2: Volume up No. 1 — No. 2: Volume down	Is the resistance approx. 90 Ω ? (Volume up) And is the resistance approx. 200 Ω ? (Volume down)	Go to step 3.	Replace the satellite switch.
3 MODE SWITCH CONTINUITY CHECK. 1) Press the MODE switch. 2) Measure the resistance between satellite switch connector terminals. Terminals No. 1 — No. 2:	Is the resistance approx. 360 Ω ?	Go to step 4.	Replace the satellite switch.
4 SEEK SWITCH CONTINUITY CHECK. 1) Press the seek switch. 2) Measure the resistance between satellite switch connector terminals. Terminals No. 1 — No. 2: Seek up No. 1 — No. 2: Seek down	Is the resistance approx. 690 Ω ? (Seek up) And is the resistance approx. 1.5 k Ω ? (Seek down)	Go to step 5.	Replace the satellite switch.
5 CHECK SATELLITE SWITCH INSULATION. 1) Not to operate the satellite switch. 2) Measure the resistance between satellite switch connector terminals. Terminals No. 1 — No. 2:	Is the resistance approx. 4.7 k Ω ?	Satellite switch is normal.	Replace the satellite switch.

COMMUNICATION SYSTEM

COM

	Page
1. General Description	2
2. Horn System	3
3. Horn	4
4. Horn Switch	5




General Description

EXTERIOR BODY PANELS

1. General Description

A: SPECIFICATION

1. SIDE

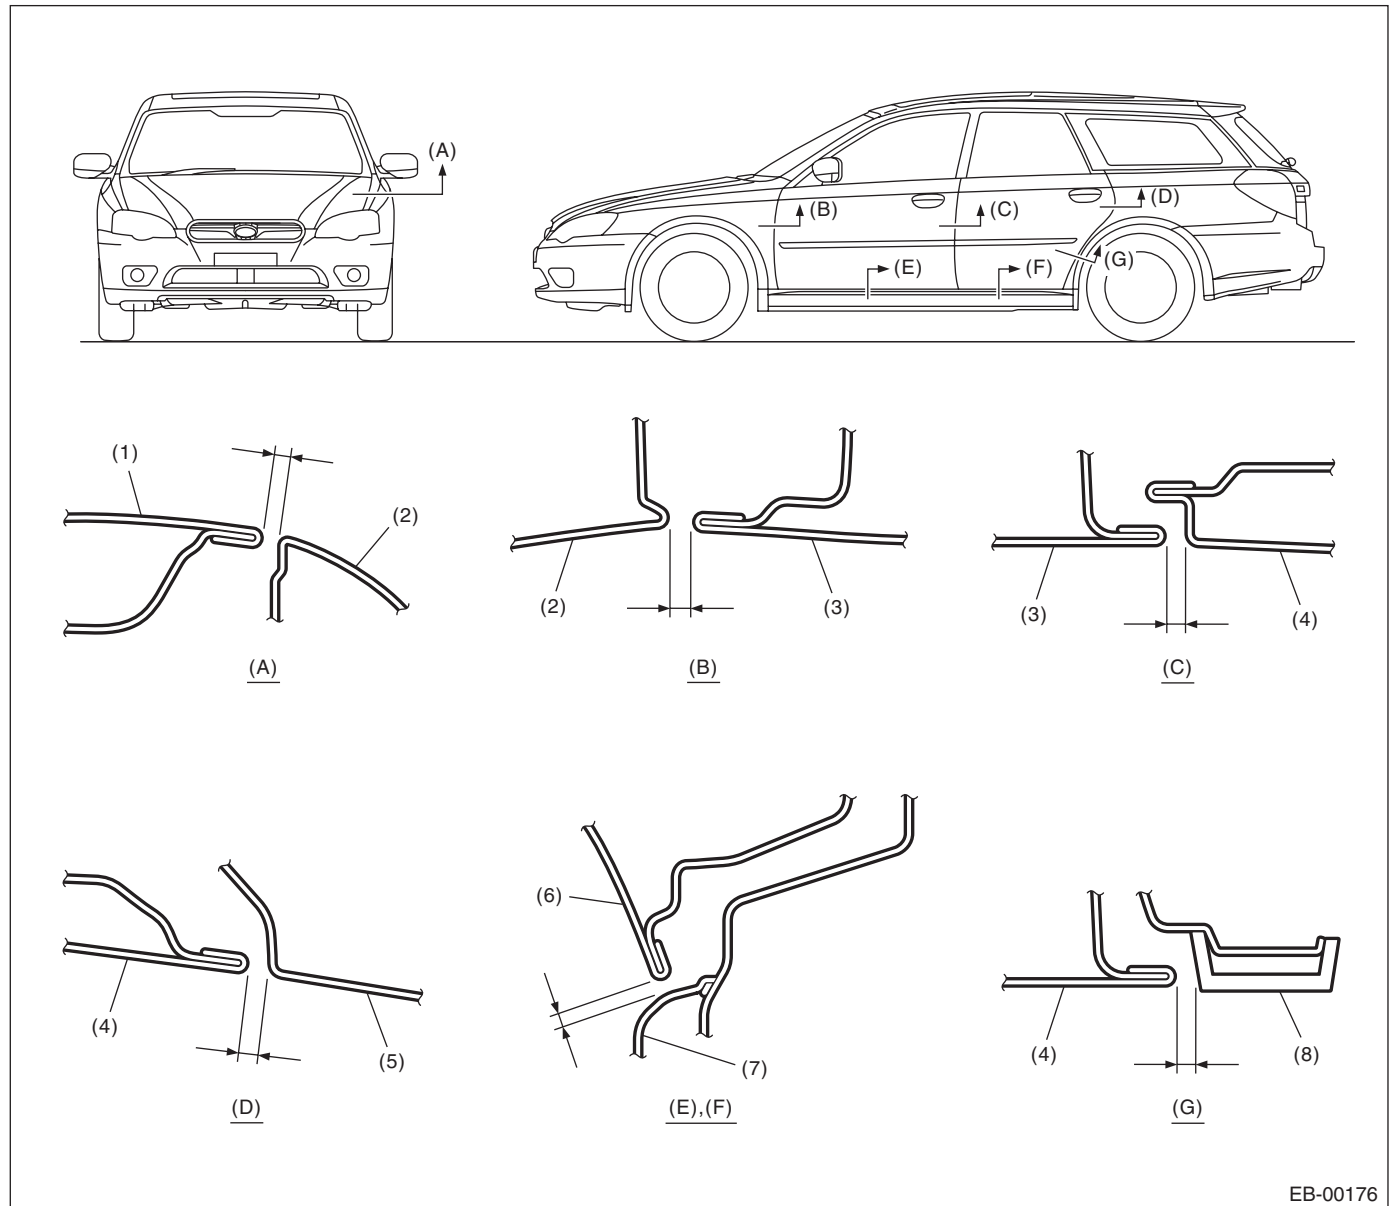


EB-00176

- | | | |
|------------------------|------------------------|----------------------------------|
| (1) Front hood panel | (4) Rear door panel | (7) Side sill |
| (2) Front fender panel | (5) Rear quarter panel | (8) Rear quarter lower protector |
| (3) Front door panel | (6) Door panel | |

Section	Part	Standard value
(A)	Front hood panel to Front fender panel	3.5±1.0 mm (0.14±0.04 in)
(B)	Front fender panel to Front door panel	4.7±1.0 mm (0.18±0.04 in)
(C)	Front door panel to Rear door panel	5.1±1.0 mm (0.20±0.04 in)
(D)	Rear door panel to Rear quarter panel	4.6±1.0 mm (0.18±0.04 in)
(E), (F)	Door panel to Side sill	6.0±1.0 mm (0.24±0.04 in)
(G)	From rear door panel to Rear quarter lower protector	4.8±1.0 mm (0.19±0.04 in)

2. FRONT

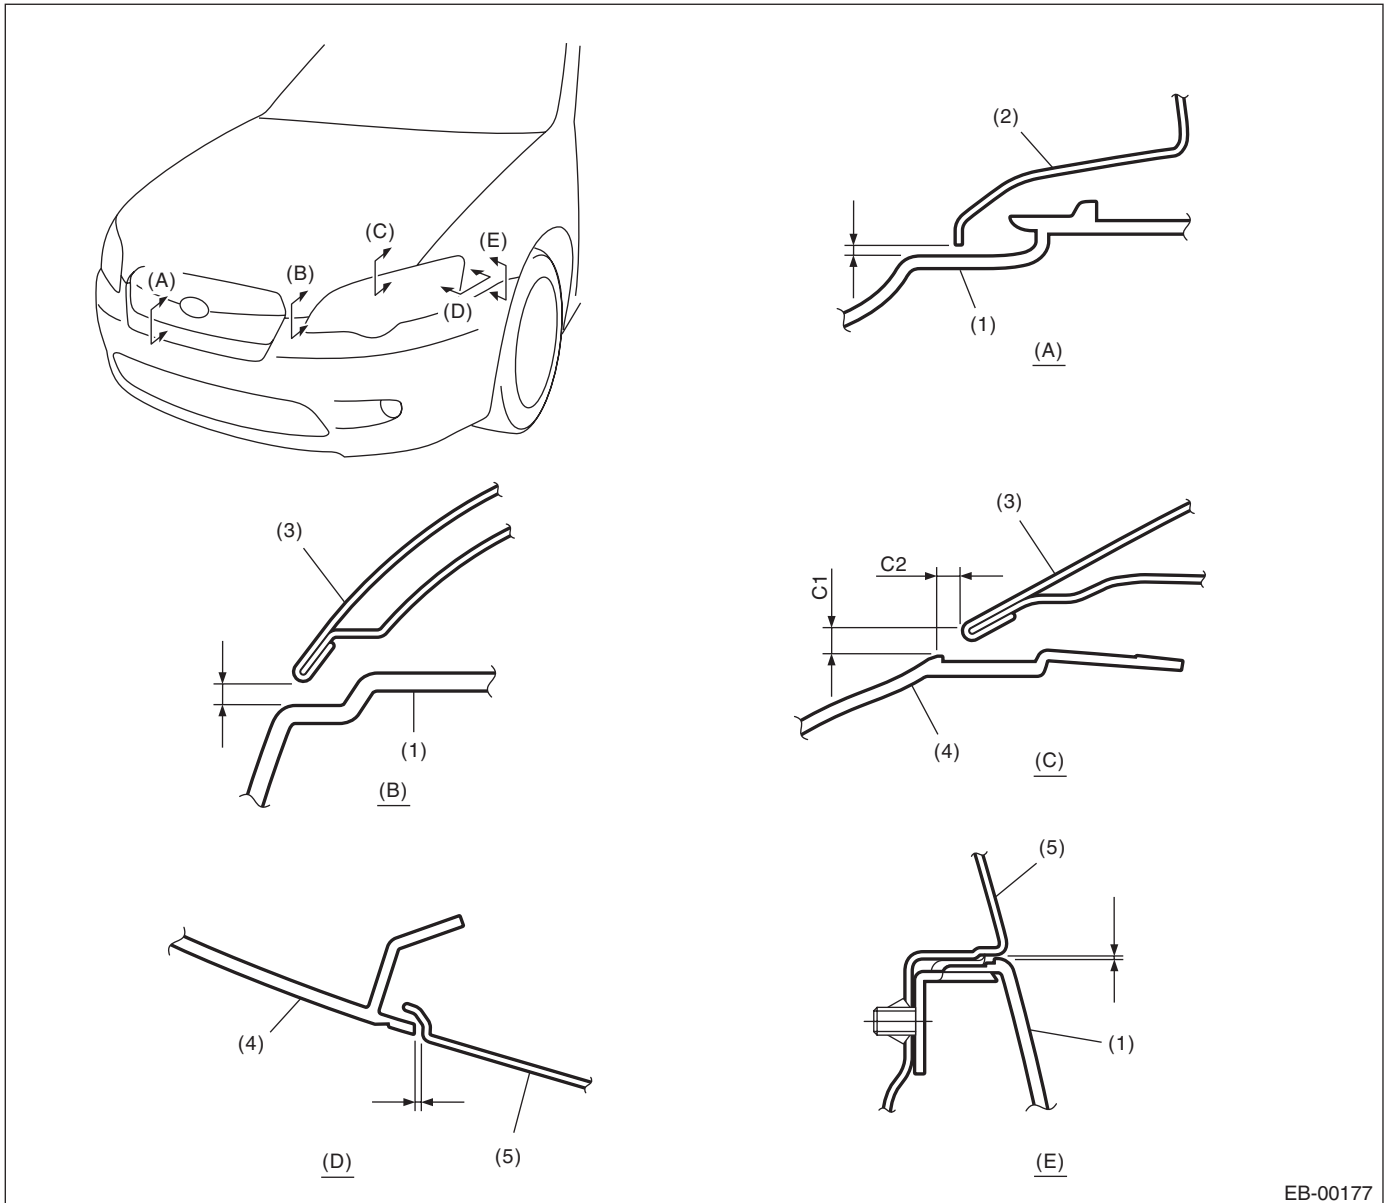

EB-00177


- | | | |
|------------------|----------------------|------------------------|
| (1) Front bumper | (3) Front hood panel | (5) Front fender panel |
| (2) Front grille | (4) Headlight | |

Section	Part	Standard value
(A)	From front bumper to Front grille (longitudinal direction)	1.0±0.7 mm (0.04±0.03 in)
(B)	Front hood panel to Front bumper	4.0 — 6.0 mm (0.16 — 0.24 in)
(C)	Front hood panel to Headlight	C1: 6.0±1.0 mm (0.24±0.04 in) C2: 5.0±1.0 mm (0.20±0.04 in)
(D)	From front fender panel to Headlight	1.5±1.0 mm (0.06±0.04 in)
(E)	From front fender panel to Front bumper	1.0±0.7 mm (0.04±0.03 in)

General Description

EXTERIOR BODY PANELS

3. REAR (SEDAN MODEL)

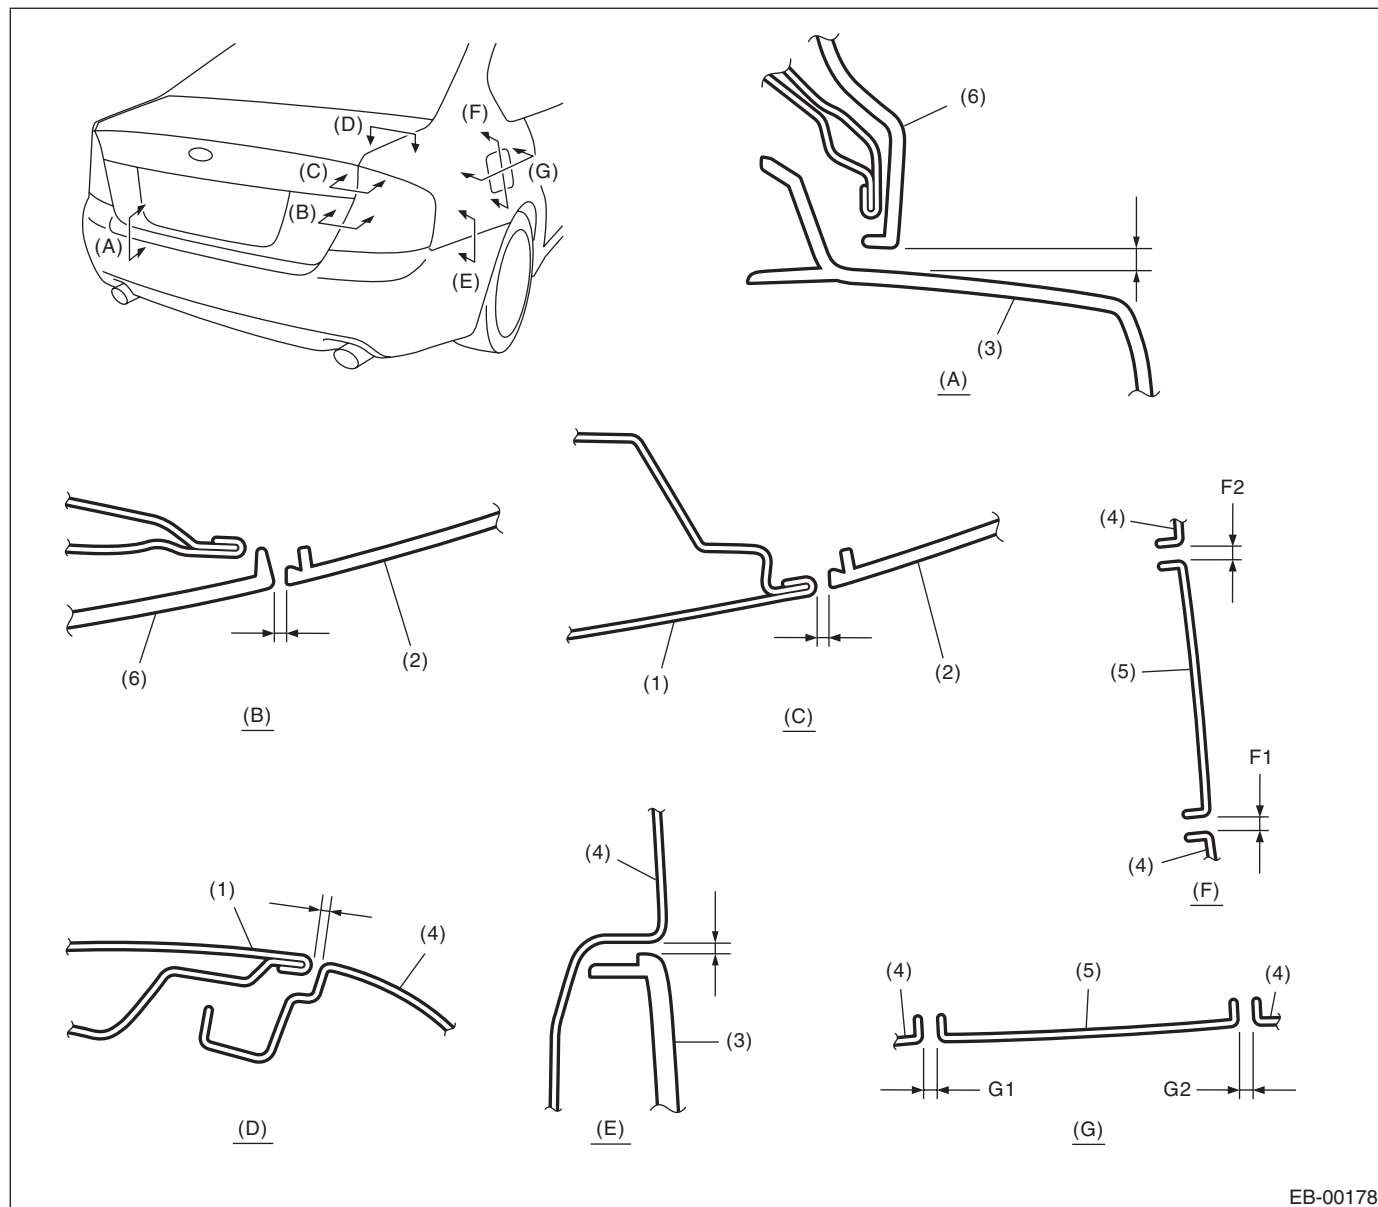


EB-00178

- | | | |
|----------------------------|-----------------------|--------------------------|
| (1) Trunk lid panel | (3) Rear bumper | (5) Fuel filler flap lid |
| (2) Rear combination light | (4) Rear fender panel | (6) Trunk lid garnish |

Section	Part	Standard value
(A)	From trunk lid garnish to Rear bumper	7.0±1.0 mm (0.28±0.04 in)
(B)	From trunk lid garnish to Rear combination light	4.0±1.0 mm (0.16±0.04 in)
(C)	From trunk lid panel to Rear combination light	3.5±1.0 mm (0.14±0.04 in)
(D)	From trunk lid panel to Rear fender panel	3.5±1.0 mm (0.14±0.04 in)
(E)	From rear fender panel to Rear bumper	1.0±0.7 mm (0.04±0.03 in)
(F)	From rear fender panel to Fuel filler flap lid (longitudinal direction)	F1: 3.7±0.5 mm (0.15±0.02 in) F2: 3.4±0.5 mm (0.13±0.02 in)
(G)	From rear fender panel to Fuel filler flap lid (lateral direction)	G1, G2: 3.5±0.5 mm (0.14±0.02 in)

4. REAR (WAGON MODEL)

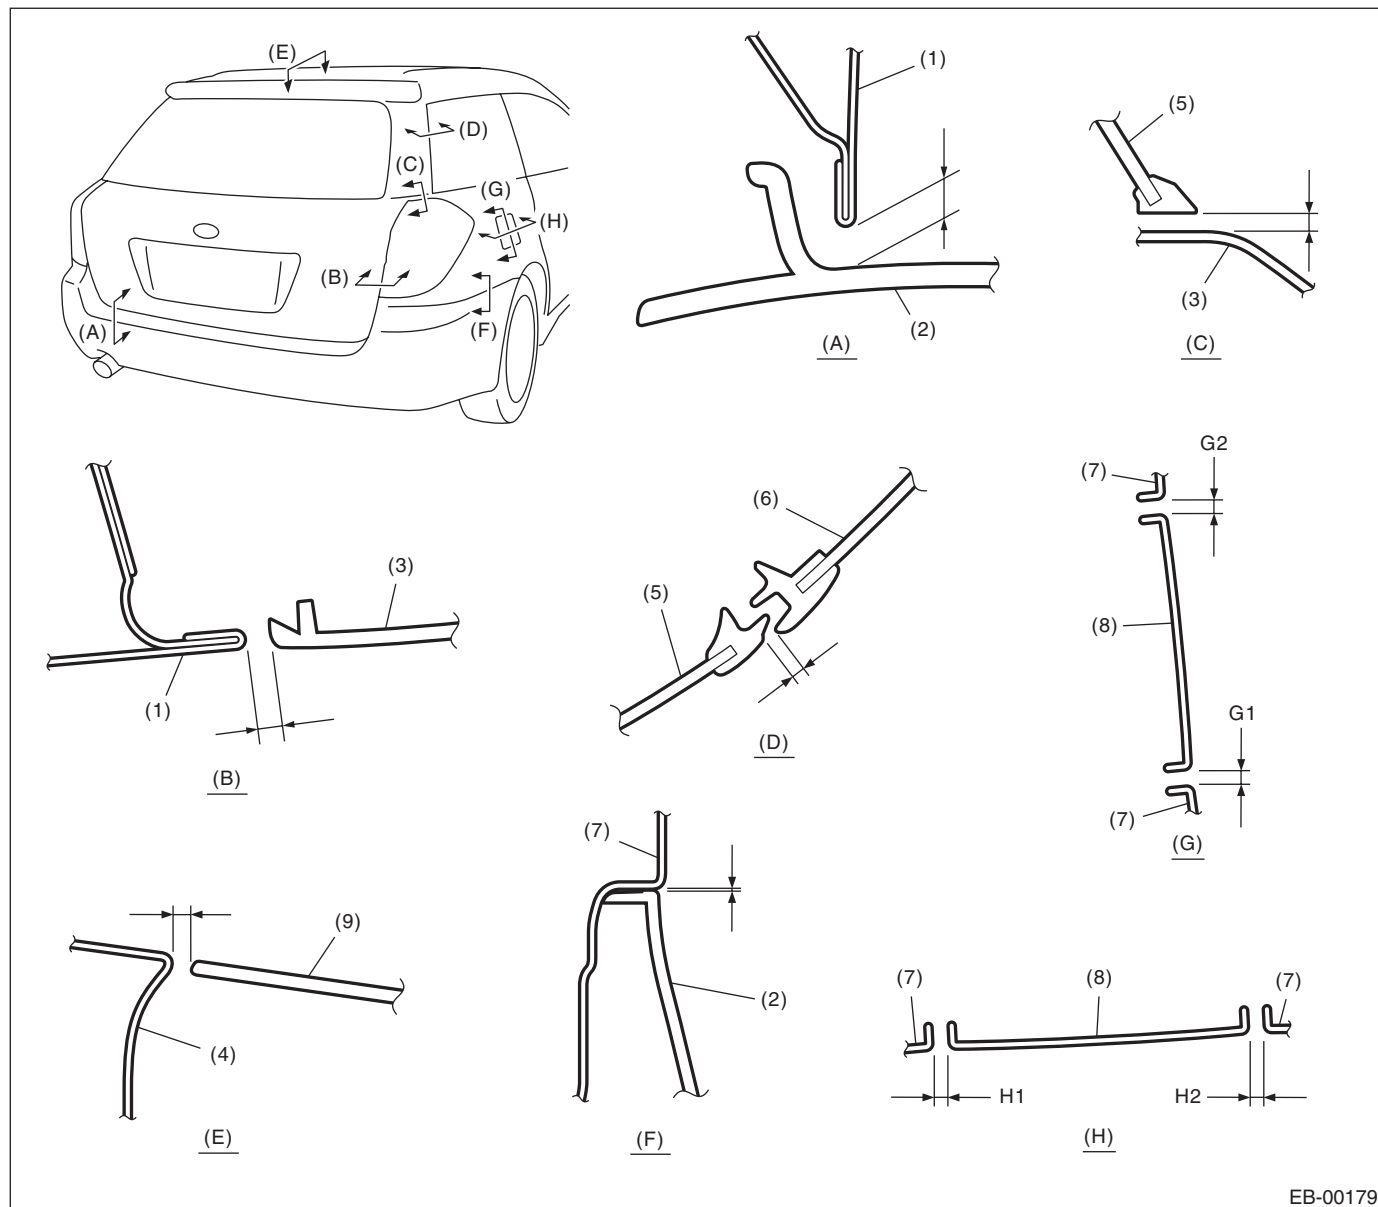

EB-00179

- | | | |
|----------------------------|------------------------|--------------------------|
| (1) Rear gate panel | (4) Roof panel | (7) Rear fender panel |
| (2) Rear bumper | (5) Rear gate glass | (8) Fuel filler flap lid |
| (3) Rear combination light | (6) Door quarter glass | (9) Roof spoiler |


Section	Part	Standard value
(A)	Rear gate panel to Rear bumper	8.0±1.0 mm (0.31±0.04 in)
(B)	From the rear gate panel to Rear combination light	5.0±1.0 mm (0.20±0.04 in)
(C)	From the rear gate glass to Rear combination light	5.5±1.0 mm (0.22±0.04 in)
(D)	From the rear gate glass to Rear quarter glass	4.0±1.5 mm (0.16±0.06 in)
(E)	Roof panel to Roof spoiler	5.0 — 6.5 mm (0.20 — 0.26 in)
(F)	From rear fender panel to Rear bumper	1.0±0.7 mm (0.04±0.03 in)
(G)	From rear fender panel to Fuel filler flap lid (longitudinal direction)	G1: 3.7±0.5 mm (0.15±0.02 in) G2: 3.4±0.5 mm (0.13±0.02 in)
(H)	From rear fender panel to Fuel filler flap lid (lateral direction)	H1, H2: 3.5±0.5 mm (0.14±0.02 in)

General Description

EXTERIOR BODY PANELS

B: COMPONENT

1. FRONT HOOD

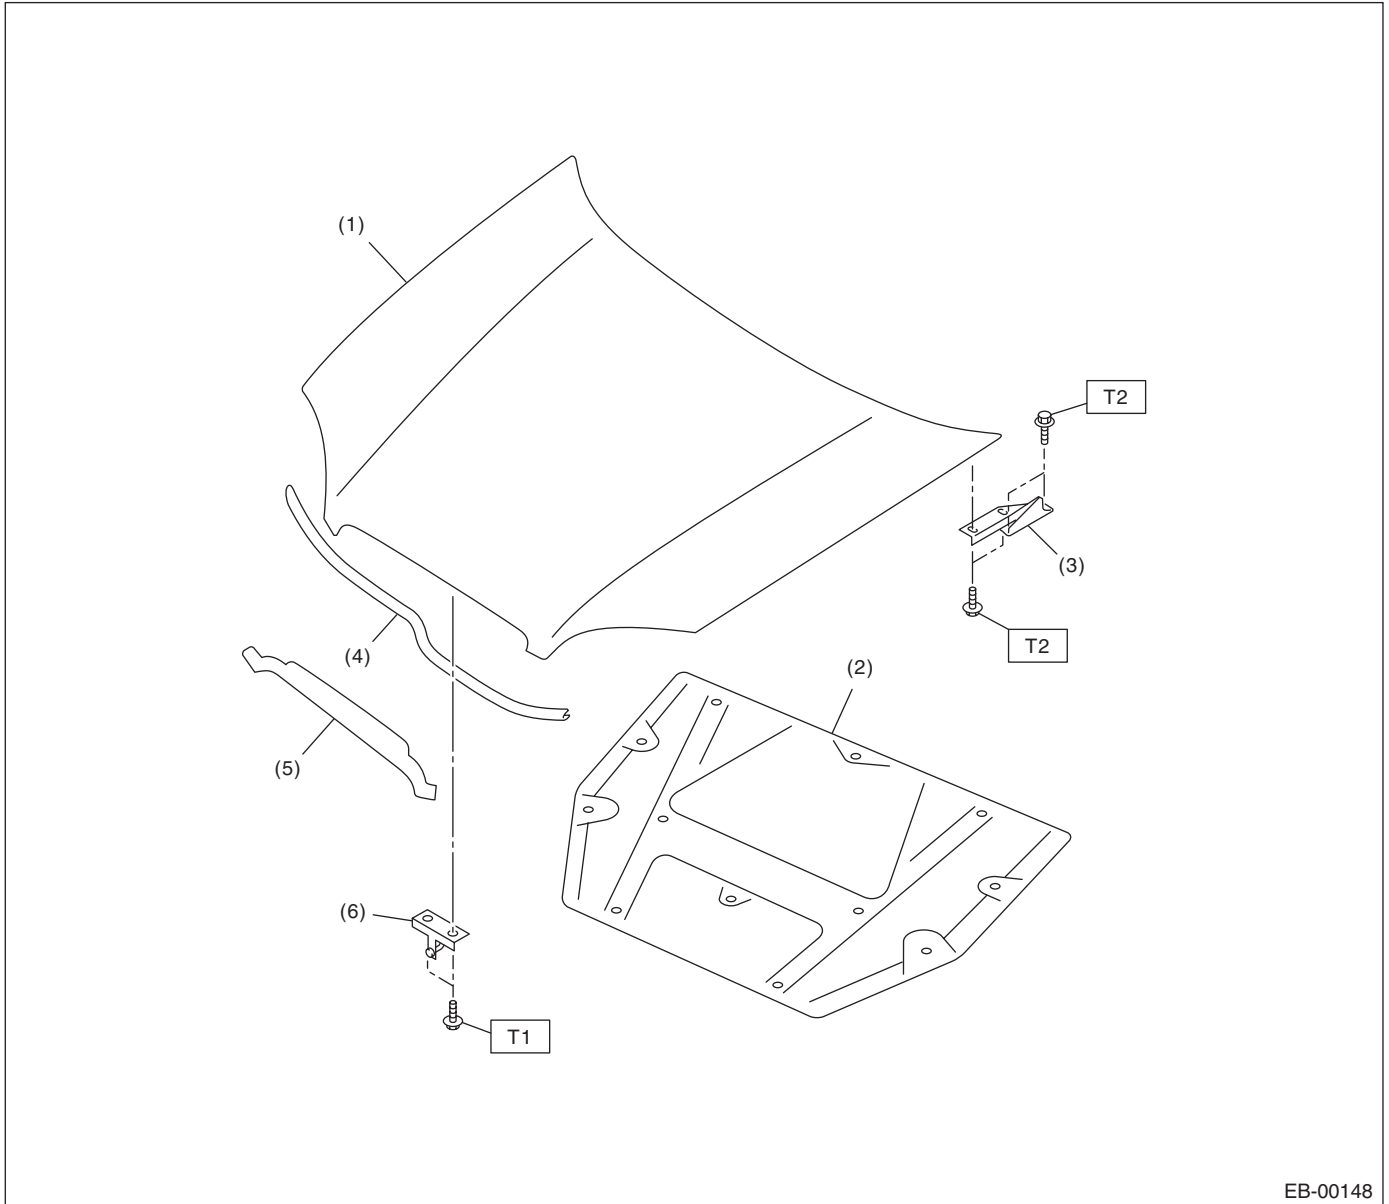

EB-00148


- | | |
|--------------------------|-------------------------------|
| (1) Front hood panel | (4) Intake duct weather strip |
| (2) Front hood insulator | (5) Front hood weather strip |
| (3) Front hood hinge | (6) Front hood striker |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 33 (3.4, 24.5)

T2: 24.5 (2.5, 18.1)

2. FRONT FENDER PANEL

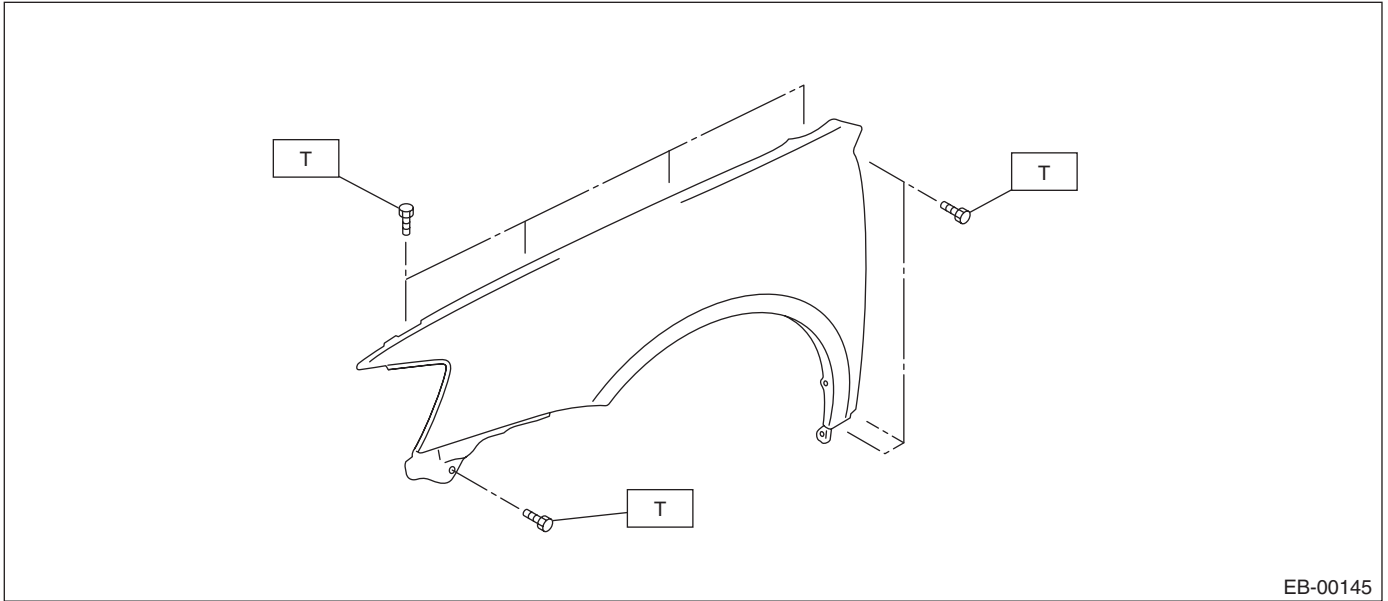


Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.5)

General Description

EXTERIOR BODY PANELS

3. FRONT DOOR PANEL

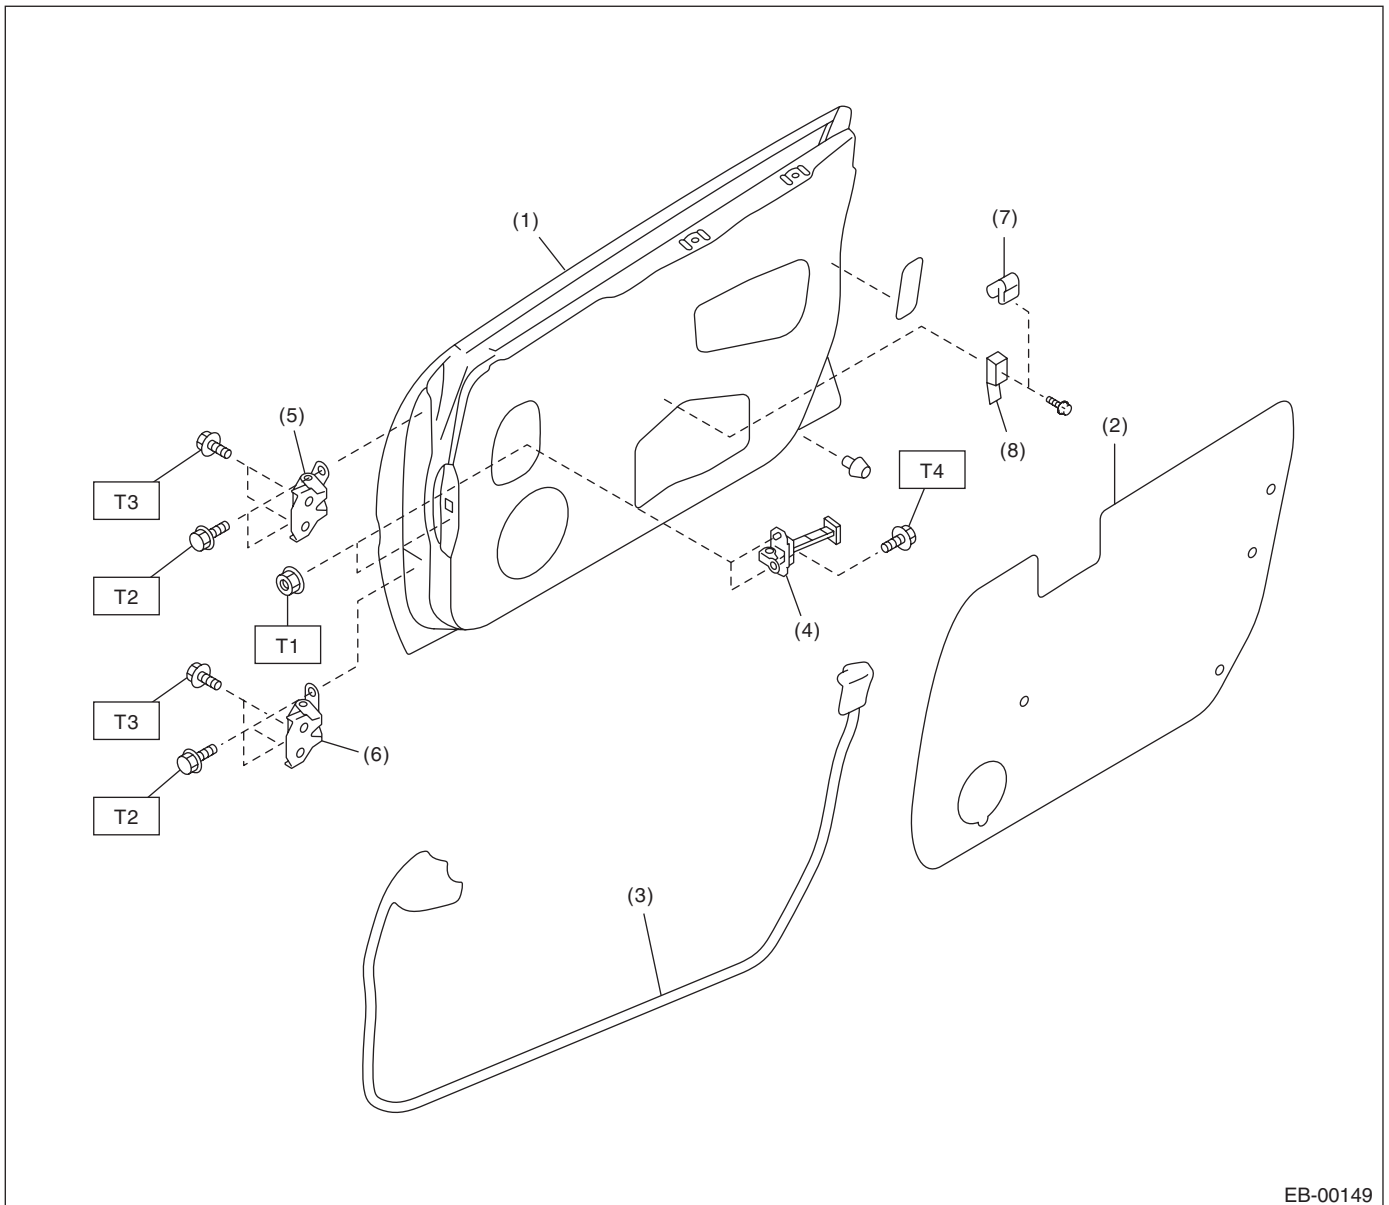

EB-00149

- | | |
|------------------------------|-----------------------------|
| (1) Front door panel | (5) Upper hinge |
| (2) Sealing cover | (6) Lower hinge |
| (3) Front door weather strip | (7) Door trim bracket upper |
| (4) Checker | (8) Door trim bracket lower |

Tightening torque: N·m (kgf·m, ft·lb)


T1: 7.4 (0.75, 5.5)

T2: 24.5 (2.5, 18.1)

T3: 29.4 (3.0, 21.7)

T4: 32.3 (3.3, 23.8)

4. REAR DOOR PANEL

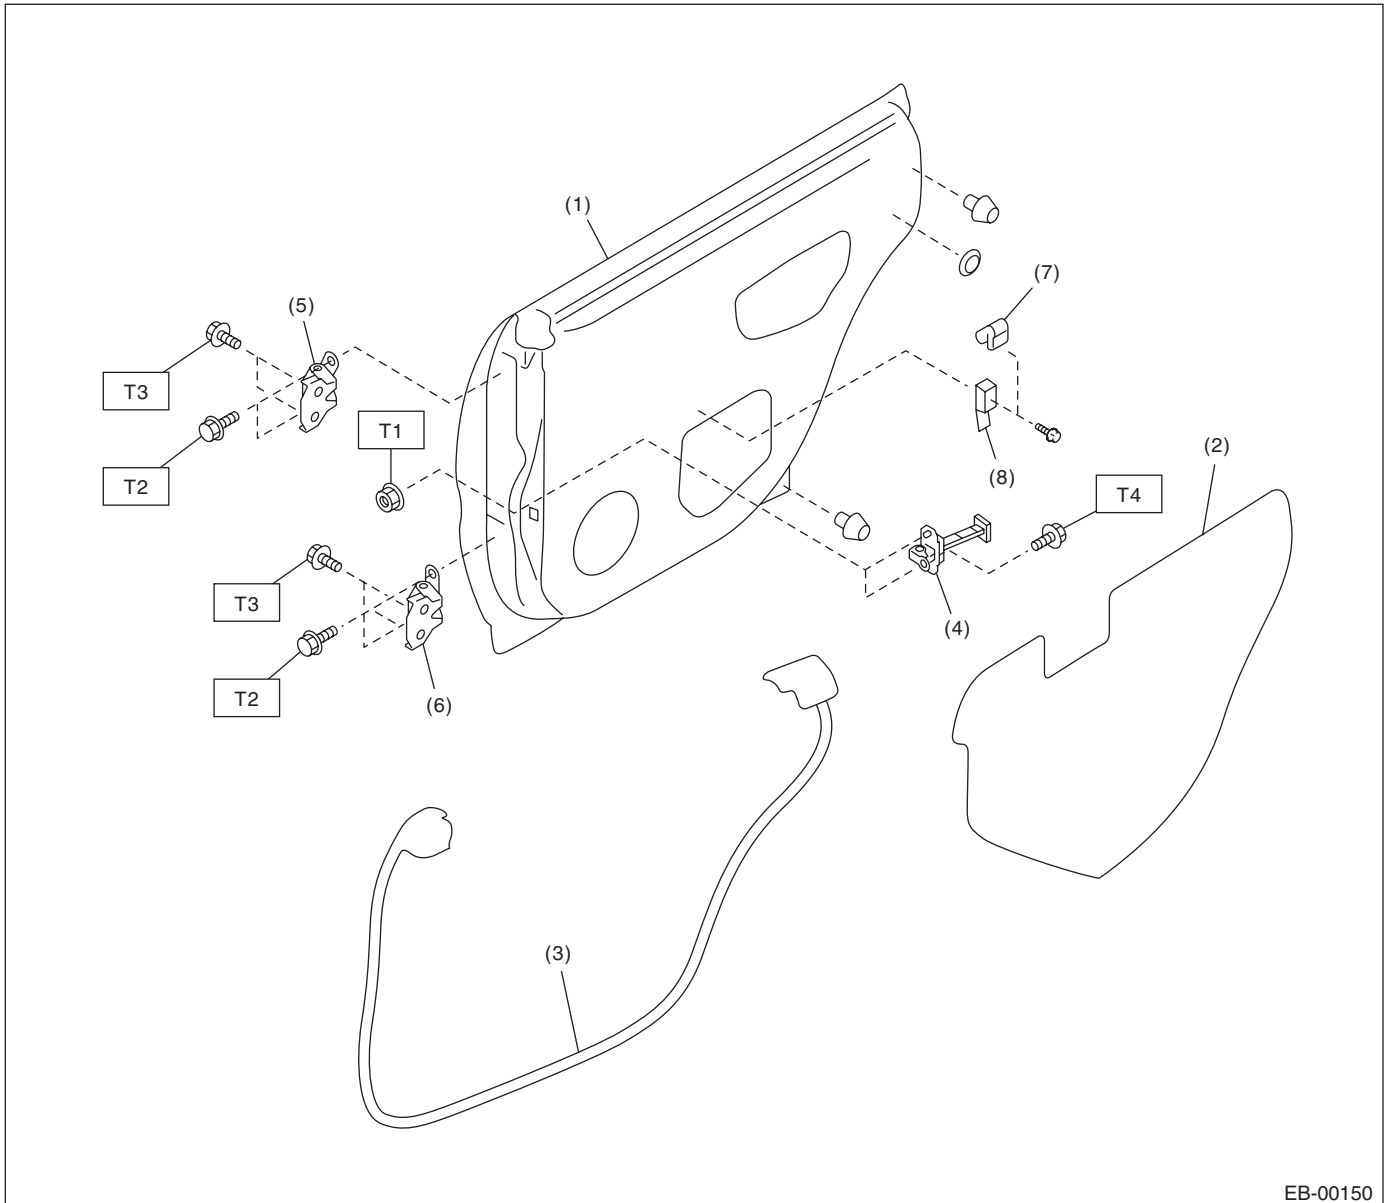

EB-00150

- | | |
|-----------------------------|-----------------------------|
| (1) Rear door panel | (5) Upper hinge |
| (2) Sealing cover | (6) Lower hinge |
| (3) Rear door weather strip | (7) Door trim bracket upper |
| (4) Checker | (8) Door trim bracket lower |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.4 (0.75, 5.5)

T2: 24.5 (2.5, 18.1)


T3: 29.4 (3.0, 21.7)

T4: 32.3 (3.3, 23.8)

General Description

EXTERIOR BODY PANELS

5. TRUNK LID PANEL

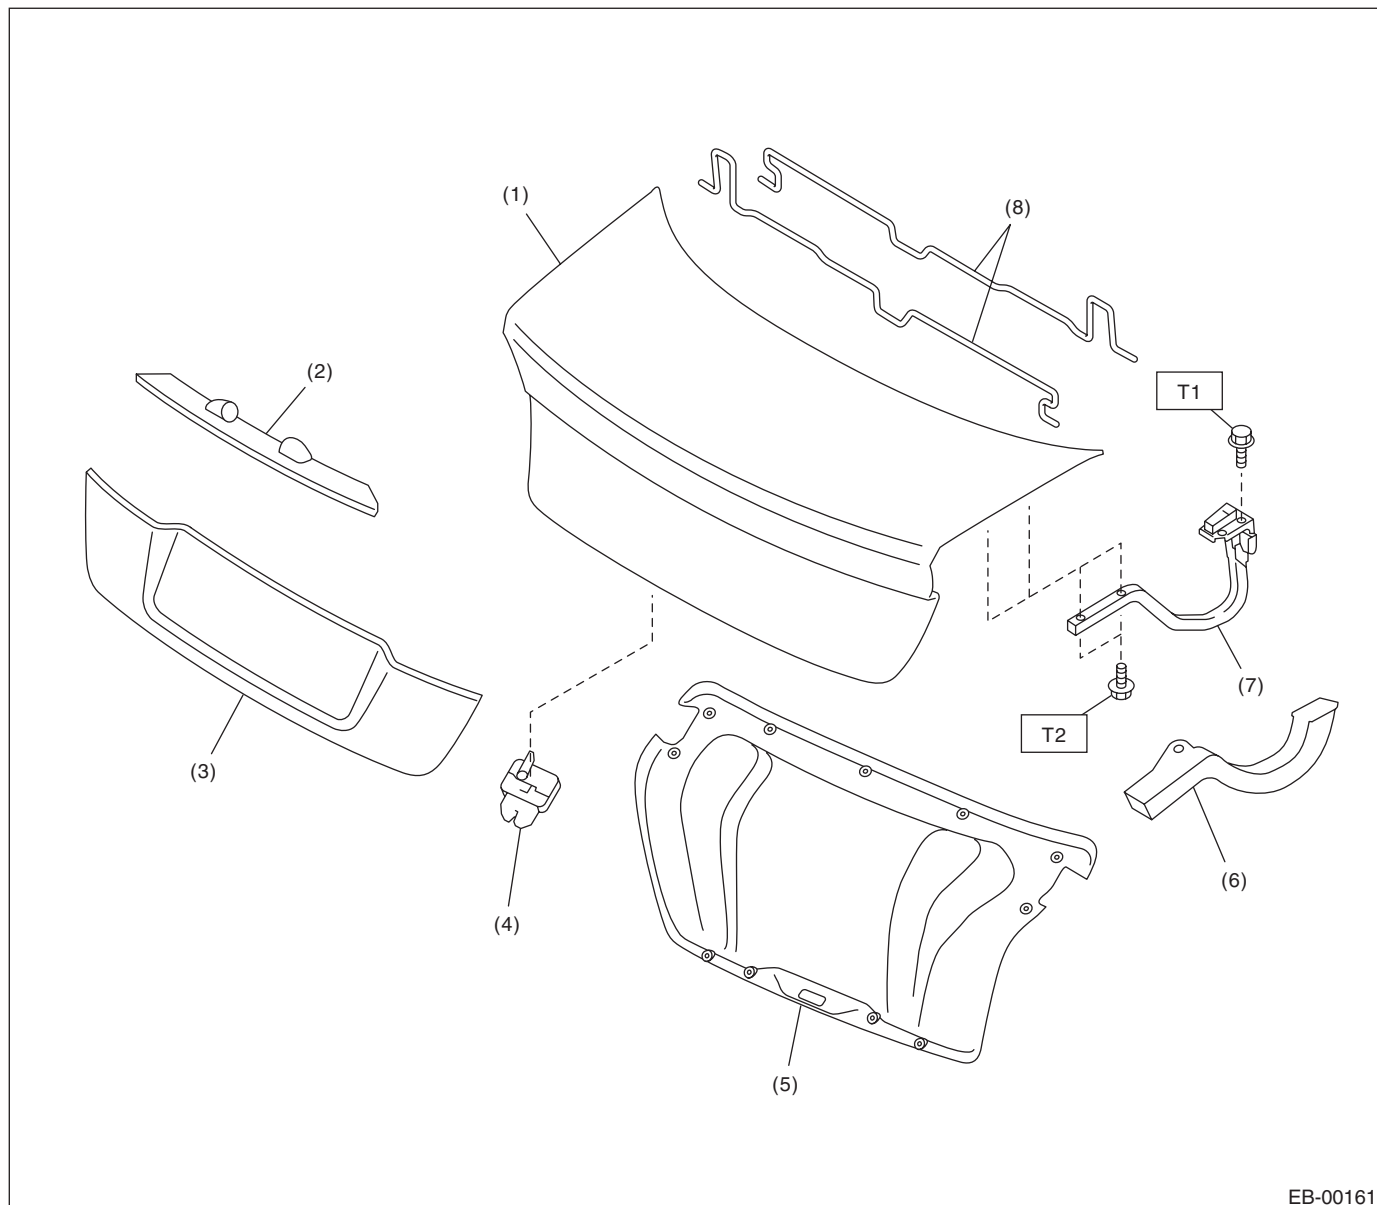

EB-00161


- | | |
|-------------------------------|-------------------------|
| (1) Trunk lid panel | (5) Trunk lid trim |
| (2) License plate light cover | (6) Trunk lid arm cover |
| (3) Trunk lid garnish | (7) Trunk lid arm ASSY |
| (4) Trunk lid lock ASSY | (8) Torsion bar |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 17.6 (1.8, 12.9)

T2: 14 (1.43, 10.3)

6. REAR GATE PANEL

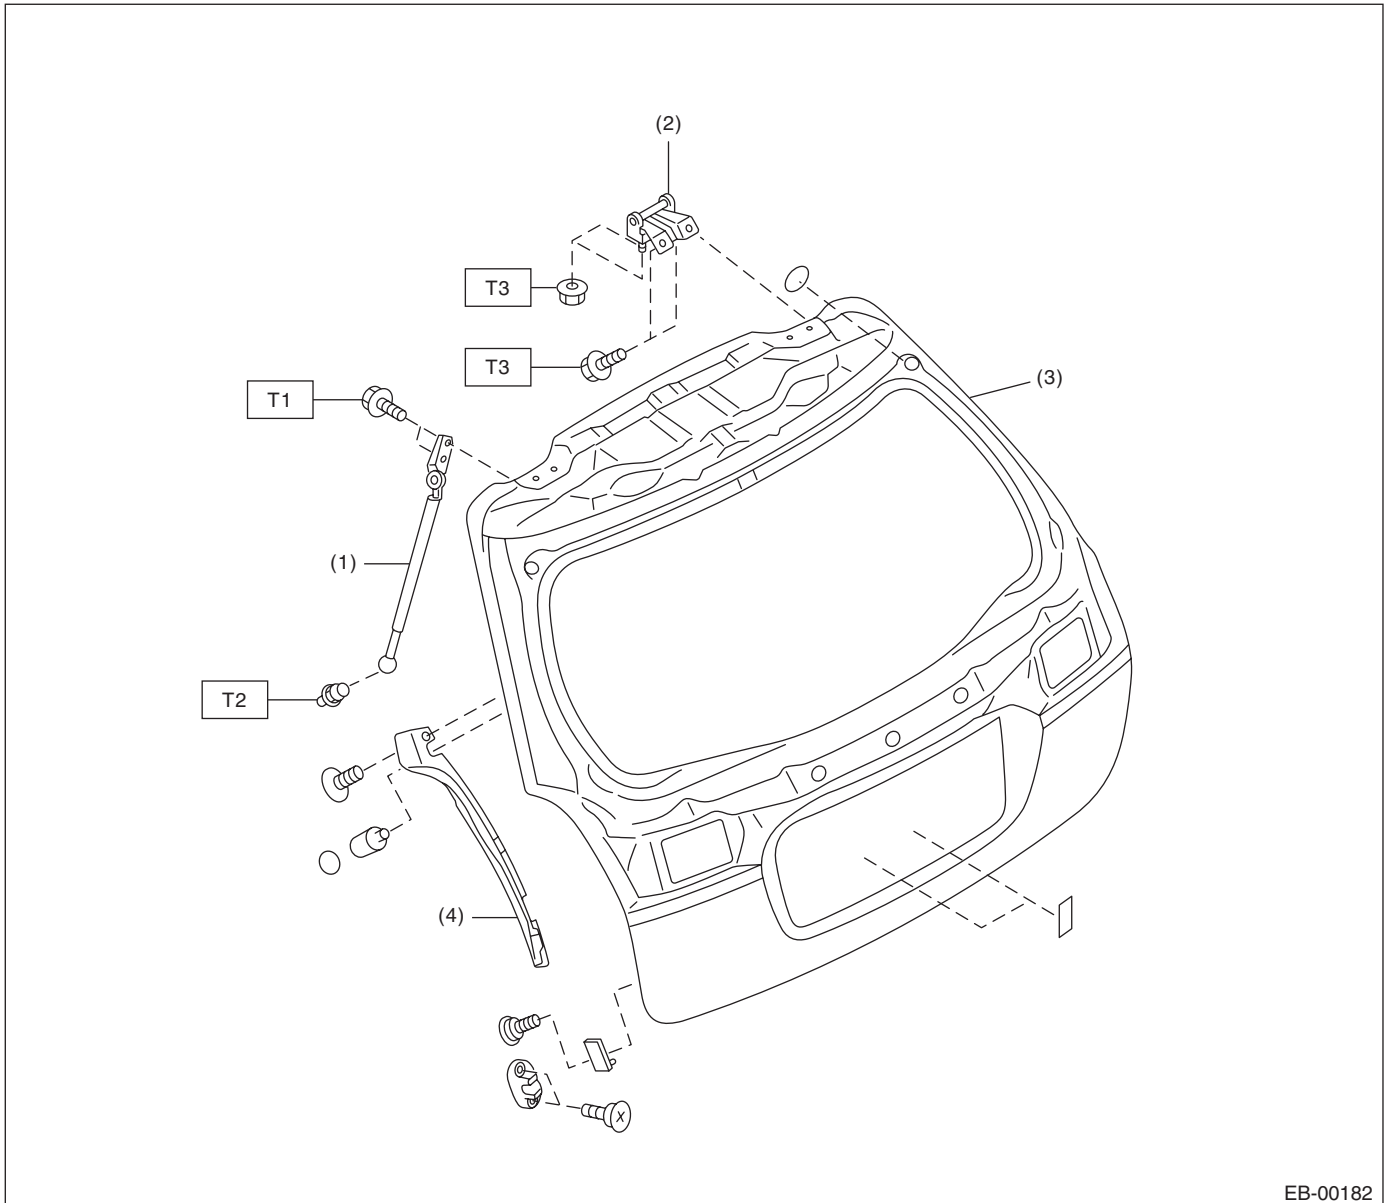

EB-00182

- | | |
|---------------------------|--------------------------------|
| (1) Rear gate damper stay | (3) Rear gate panel |
| (2) Hinge | (4) Rear gate side panel cover |

Tightening torque: N·m (kgf·m, ft·lb)***T1: 7.5 (0.76, 5.5)******T2: 14 (1.43, 10.3)******T3: 25 (2.6, 18.4)*****C: CAUTION**



- Exterior body panels are heavy. Do not drop and damage the panels. During removal and installation, do not damage the panel painting surface.
- While removing mounting bolts, using assistance devices such as a support jack will help support the panel.
- Be careful not to lose small parts.

General Description

EXTERIOR BODY PANELS

D: PREPARATION TOOL

1. SPECIAL TOOL

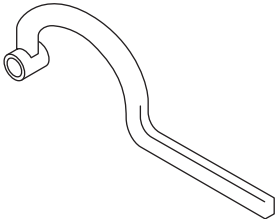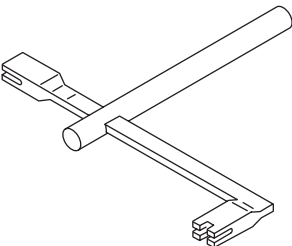ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-925610000	925610000	WRENCH	Used for removing and installing door hinge.
 ST-927780000	927780000	REMOVER	Used for removing and installing the trunk torsion bar.

2. GENERAL TOOL


TOOL NAME	REMARKS
Support jack	Used for supporting door panel.
Clip remover	Used for removing various types of clips

2. Front Hood

A: REMOVAL


1. FRONT HOOD INSULATOR

- 1) Open the front hood.
- 2) Release the clips to remove the front hood insulator.

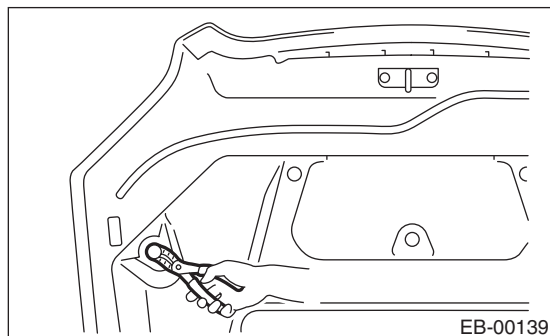

2. FRONT HOOD WEATHER STRIP


- 1) Open the front hood.
- 2) Remove the clips, and remove the front hood weather strip (A) and intake duct weather strip (B).

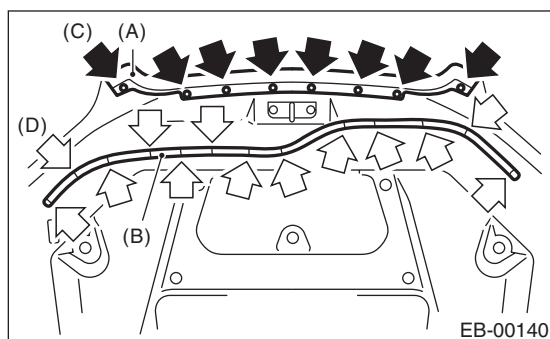

- (C) Clip
(D) Weather strip clip


NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

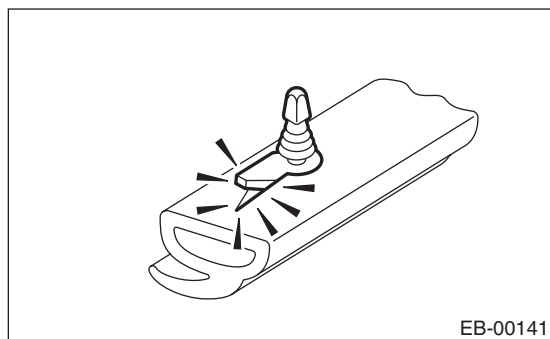


3. FRONT HOOD HINGE


- 1) Remove the bolt, and remove the front hood panel. <Ref. to EB-14, FRONT HOOD PANEL, REMOVAL, Front Hood.>

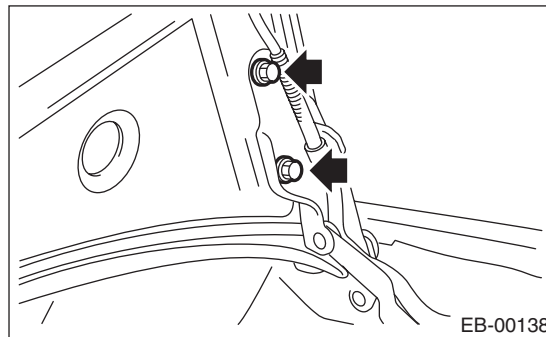

- 2) Remove the clip, and remove the cowl side panel front.

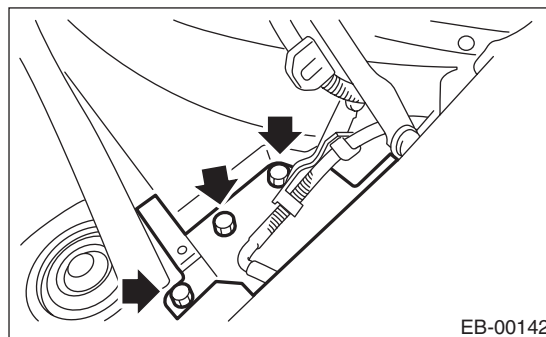


- 3) Remove clamp (A) of the window washer hose, and remove the bolt of the hinge.

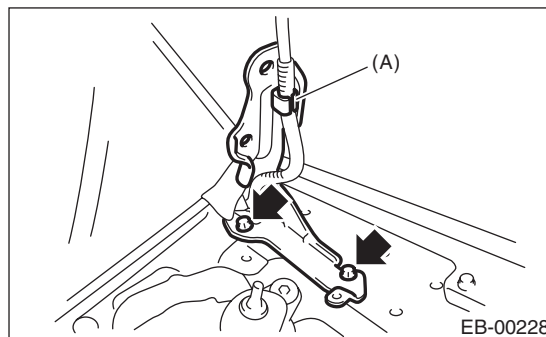

4. FRONT HOOD STRIKER

- 1) Open the front hood.
- 2) Remove the bolt, and remove the front hood striker.

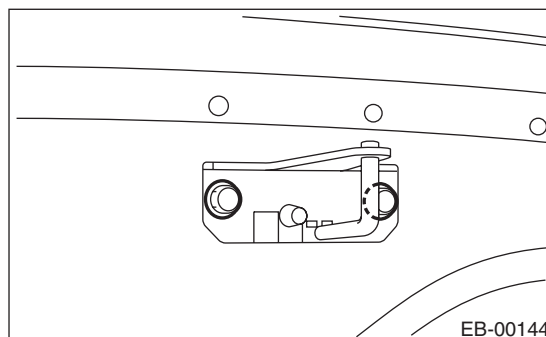


Front Hood


EXTERIOR BODY PANELS

5. FRONT HOOD PANEL

1) Open the front hood to remove the window washer hose.

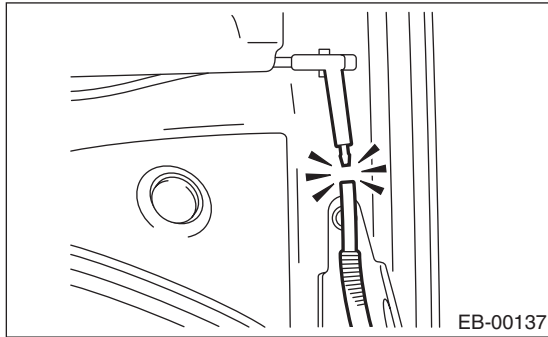

- 2) Remove the front hood insulator.
<Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>
- 3) Remove the front hood weather strip.
<Ref. to EB-13, FRONT HOOD WEATHER STRIP, REMOVAL, Front Hood.>
- 4) Remove the front hood striker.
<Ref. to EB-13, FRONT HOOD STRIKER, REMOVAL, Front Hood.>
- 5) Remove the front hood duct. (Turbo model) <Ref. to EI-25, REMOVAL, Front Hood Grille.>
- 6) Remove the window washer hose and nozzle.
<Ref. to WW-16, REMOVAL, Front Washer Nozzle.>
- 7) Remove the bolt, and remove the front hood panel from the front hood hinge.

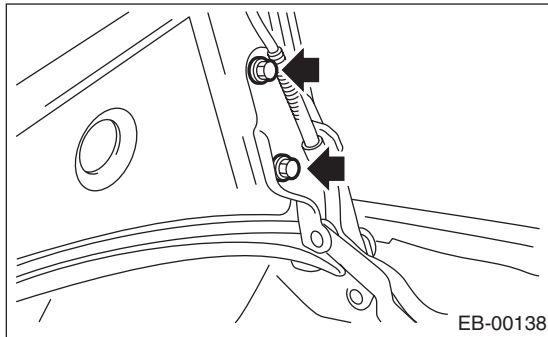

B: INSTALLATION

1. FRONT HOOD INSULATOR

Install in the reverse order of removal.

NOTE:

Be careful not to catch the window washer hose in.

2. FRONT HOOD WEATHER STRIP

Install in the reverse order of removal.

3. FRONT HOOD HINGE

Install in the reverse order of removal.

Tightening torque:

24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

4. FRONT HOOD STRIKER

Install in the reverse order of removal.

Tightening torque:

33 N·m (3.4 kgf-m, 24.5 ft-lb)

5. FRONT HOOD PANEL


Install in the reverse order of removal.

Tightening torque:


24.5 N·m (2.5 kgf-m, 18.1 ft-lb)

C: ADJUSTMENT

- 1) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>
- 2) Use the hinge mounting bolts to align the front hood longitudinal and lateral position.

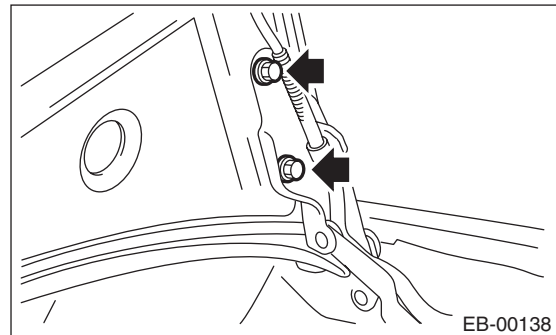


- 3) Adjust the height at the front end of hood. <Ref. to SL-46, ADJUSTMENT, Front Hood Lock Assembly.>
- 4) Rotate the hood buffer to adjust lateral height.

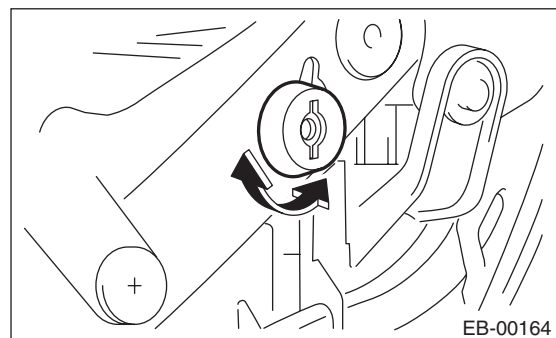


3. Front Fender

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the side sill spoilers. <Ref. to EI-41, REMOVAL, Side Sill Spoiler.>
- 3) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 4) Remove the front bumper face. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 5) Remove the headlight assembly. <Ref. to LI-11, REMOVAL, Headlight Assembly.>
- 6) Remove the mud guard. <Ref. to EI-29, REMOVAL, Mud Guard.>
- 7) Remove the cowl panel side.

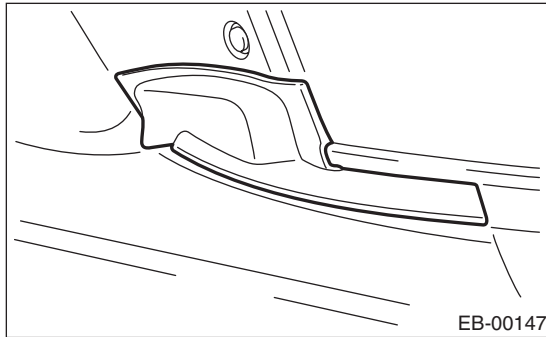

- 8) Remove the bolt, and remove the front fender panel.

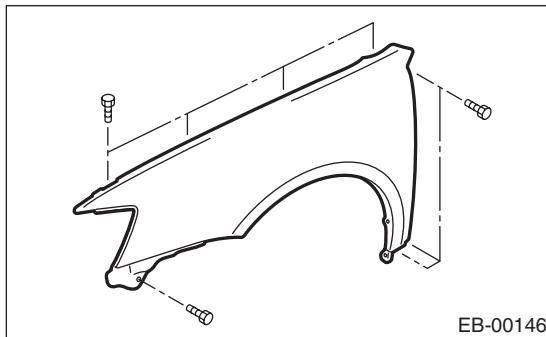

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Install with attention to make uniform clearance between front fender panel and front hood panel. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

Tightening torque:


7.4 N·m (0.75 kgf-m, 5.5 ft-lb)

4. Front Door


A: REMOVAL

1. FRONT DOOR PANEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the outer mirror assembly. <Ref. to GW-20, REMOVAL, Outer Mirror Assembly.>
- 4) Remove the front door speaker. <Ref. to ET-9, REMOVAL, Front Speaker.>
- 5) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 6) Remove the gusset and front door glass. <Ref. to GW-12, REMOVAL, Front Door Glass.>
- 7) Remove the door sash, and remove the front door regulator and motor. <Ref. to GW-17, REMOVAL, Front Regulator and Motor Assembly.>
- 8) Remove the front door latch assembly. <Ref. to SL-36, REMOVAL, Front Door Latch and Door Lock Actuator Assembly.>
- 9) Remove the front outer handle. <Ref. to SL-35, REMOVAL, Front Outer Handle.>
- 10) Remove the screw to remove the door trim bracket.

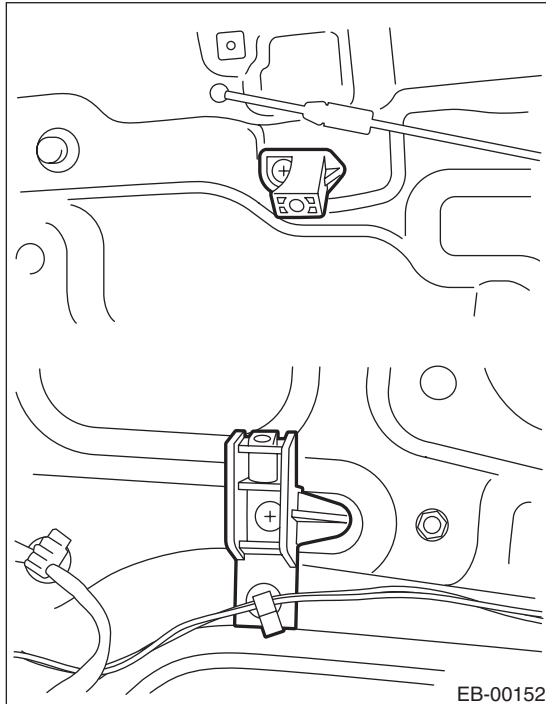


- 11) Remove the front door weather strip.

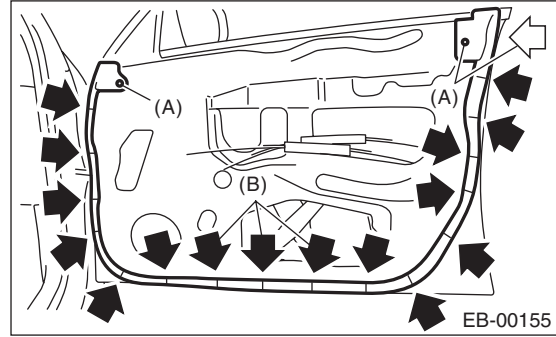


- (A) Pin clip
(B) Weather strip clip

NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

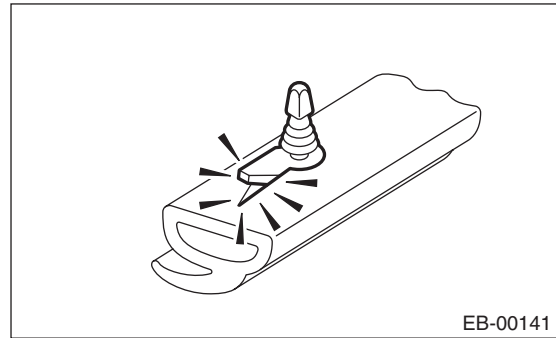


- 12) Remove the bolts and nuts to remove the door checker.

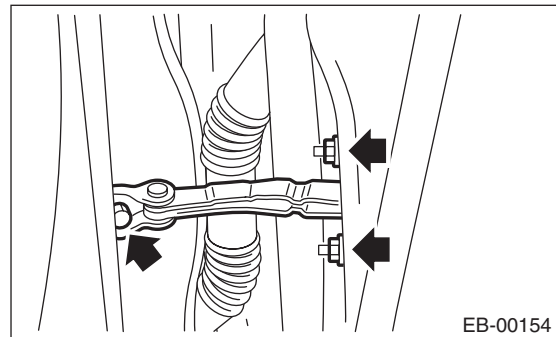


- 13) Remove the front door. <Ref. to EB-17, FRONT DOOR ASSEMBLY, REMOVAL, Front Door.>

2. FRONT DOOR ASSEMBLY


- 1) Disconnect the ground cable from battery.
- 2) Remove the front pillar lower trim. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>
- 3) Remove the instrument panel lower cover or glove box lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.> or <Ref. to EI-51, REMOVAL, Glove Box.>
- 4) Disconnect the connector of door harness from body harness.

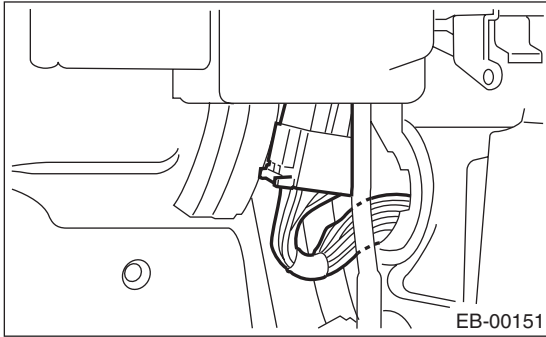


- 5) Put a wooden block on jack and place jack under the front door. Support the door with a jack to protect it from damage.

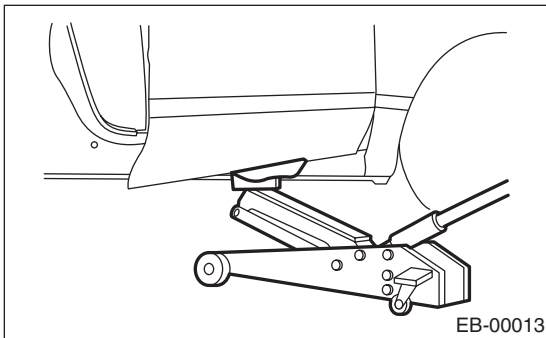

- 6) Remove the bolt from the door checker.

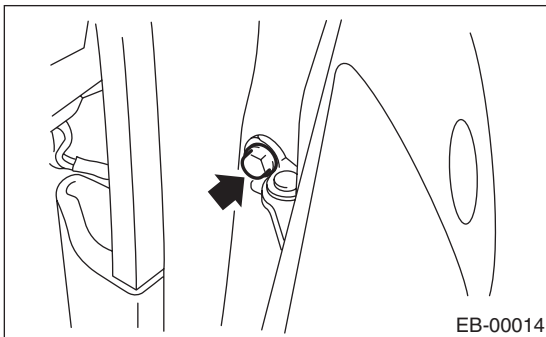

- 7) Remove the door-side bolts for upper and lower hinges to remove front door panel.

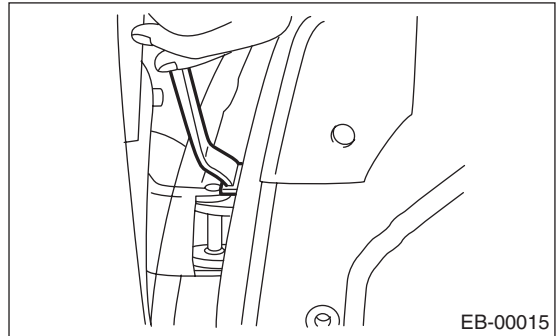

- 8) Remove the door hinge from vehicle.

B: INSTALLATION

1. FRONT DOOR PANEL

Install in the reverse order of removal.


Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to EB-8, FRONT DOOR PANEL, COMPONENT, General Description.>

2. FRONT DOOR ASSEMBLY

- 1) Put a wooden block on jack and place the front door on that.

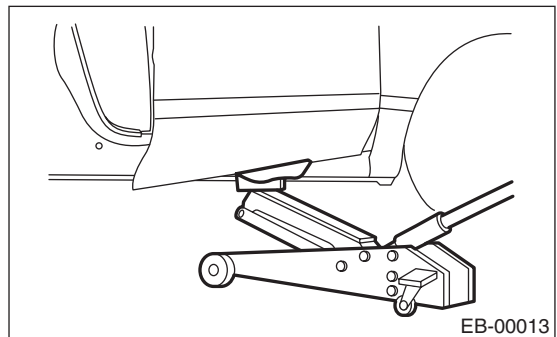

- 2) Apply grease to the sliding area of door hinges, and install the door hinge to vehicle.
- 3) Install the front door to upper hinge and lower hinge adjusting by jack.
- 4) Tighten bolt of door checker.
- 5) Connect door harness connector, and install the instrument panel lower cover.
- 6) Install the front pillar lower trim.

Tightening torque:


Refer to “COMPONENT” of “General Description”.

<Ref. to EB-8, FRONT DOOR PANEL, COMPONENT, General Description.>

C: ADJUSTMENT

1) Using the ST, loosen the body-side bolts of the upper and lower hinges to align the position for vertical and horizontal direction of the front door panel.


ST 925610000 DOOR HINGE WRENCH

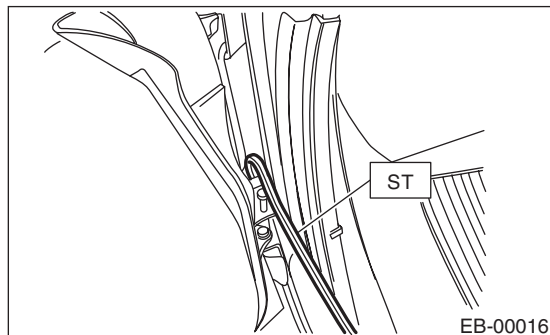

2) Loosen the screw (A) and tap striker (B) using plastic hammer to adjust the gap between rear end surface of front door panel and front end surface of rear door.

CAUTION:

Do not use an impact wrench. Welding area on the striker nut plate is easily broken.

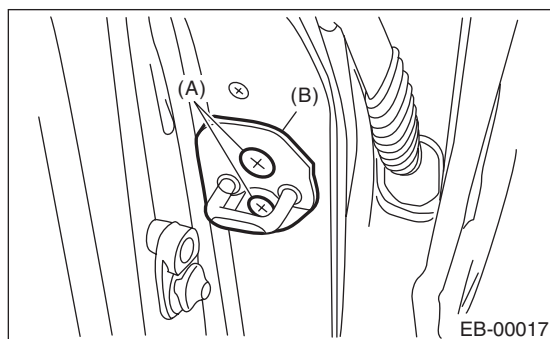


5. Front Sealing Cover

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the front speaker. <Ref. to ET-9, REMOVAL, Front Speaker.>
- 4) Remove the sealing cover.

NOTE:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.

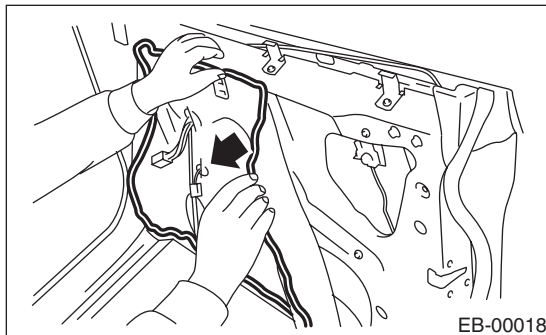

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When replacing the sealing cover, use the butyl tape.
- 3) Press the butyl tape-applied area firmly to prevent any floating on surface.

Butyl tape:

3M 8626 or equivalent

NOTE:

- Apply a uniform bead of butyl tape.
- Attach the sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

C: INSPECTION


If the sealing cover gets damaged, replace it with a new part.

6. Rear Door


A: REMOVAL

1. REAR DOOR PANEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the rear speaker. <Ref. to ET-11, REMOVAL, Rear Speaker.>
- 4) Remove the sealing cover. <Ref. to EB-23, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-24, REMOVAL, Rear Door Glass.>
- 6) Remove the door sash and rear door regulator and motor assembly. <Ref. to GW-26, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Remove the rear door latch. <Ref. to SL-40, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 8) Remove the rear outer handle. <Ref. to SL-39, REMOVAL, Rear Outer Handle.>
- 9) Remove the screw to remove the door trim bracket.

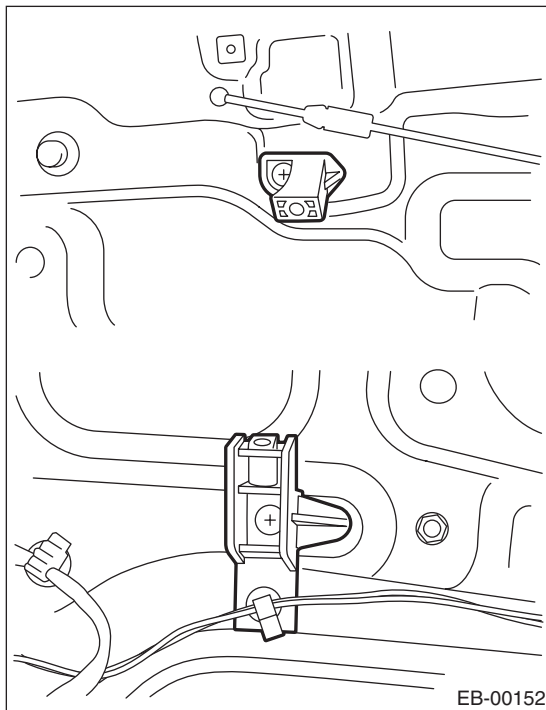


- 10) Remove the rear door inner weather strip.

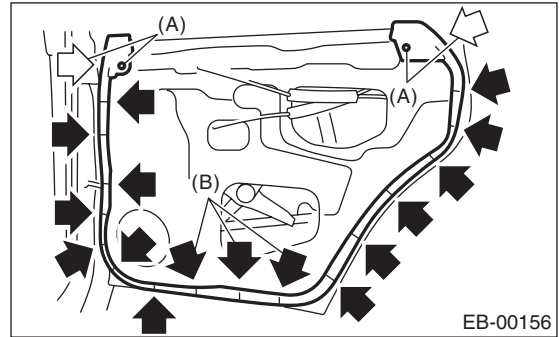


- (A) Pin clip
(B) Weather strip clip

NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

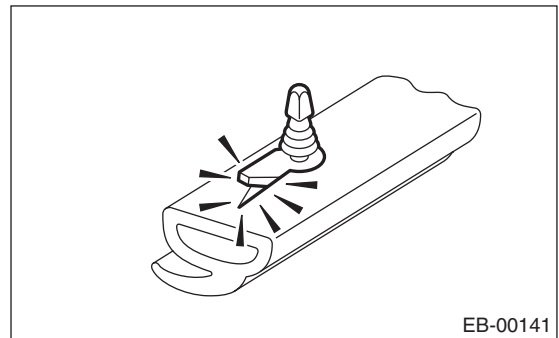


- 11) Remove the bolts and nuts to remove the door checker.

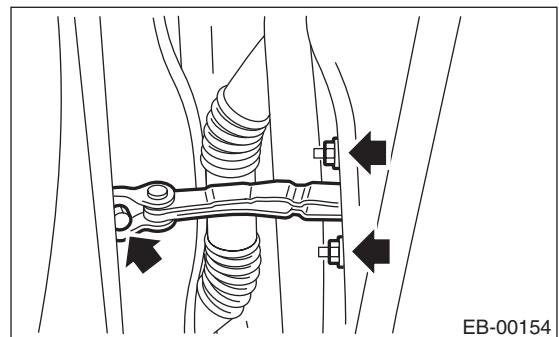


- 12) Remove the rear door. <Ref. to EB-21, REAR DOOR ASSEMBLY, REMOVAL, Rear Door.>

2. REAR DOOR ASSEMBLY


- 1) Disconnect the ground cable from battery.
- 2) Pull the door harness connector inside the center pillar, then disconnect the connector.

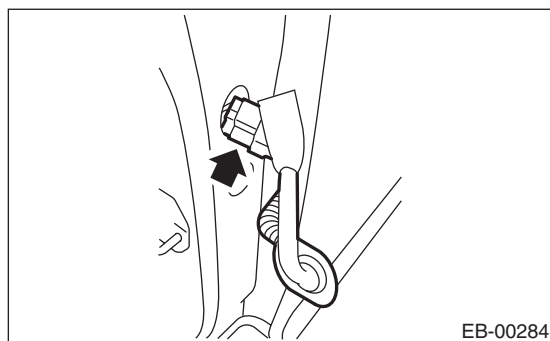


- 3) Put a wooden block on jack and place jack under the rear door. Support the rear door with the jack to protect it from damage.

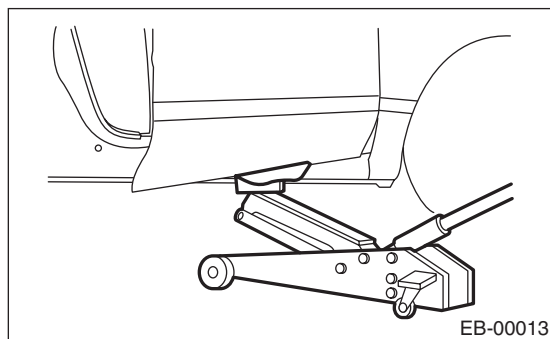

- 4) Remove the bolt from the door checker.

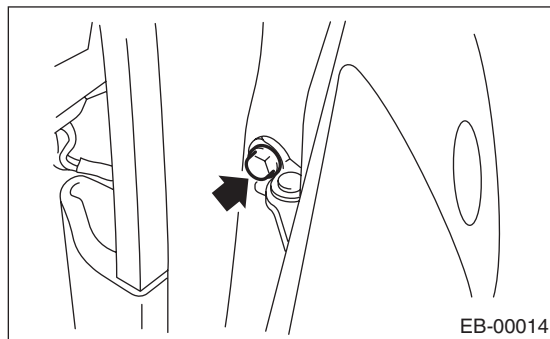

- 5) Remove the door-side bolts for upper and lower hinges to remove the rear door panel.

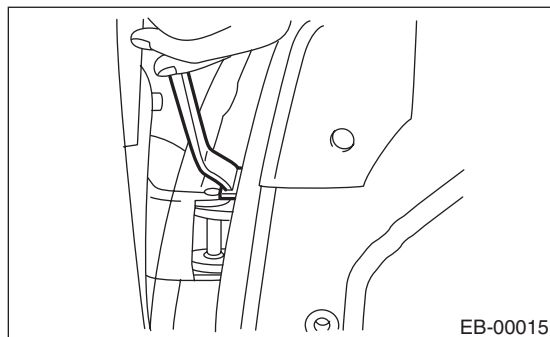

- 6) Remove the door hinge from vehicle.

B: INSTALLATION

1. REAR DOOR PANEL

Install in the reverse order of removal.


Tightening torque:

Refer to "COMPONENT" of "General Description".

<Ref. to EB-9, REAR DOOR PANEL, COMPONENT, General Description.>

2. REAR DOOR ASSEMBLY

- 1) Put a wooden block on jack and place the rear door on that.

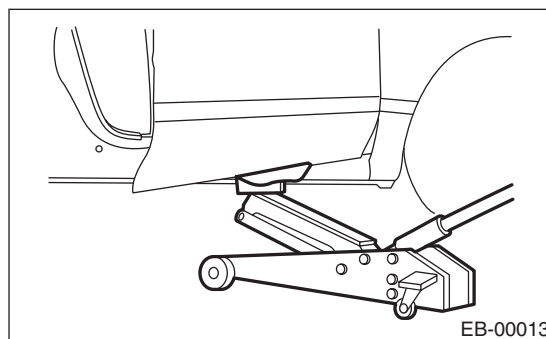

- 2) Apply grease to the moving part of door hinges.
- 3) Install the rear door to upper hinge and lower hinge adjusting by jack.
- 4) Tighten bolt of door checker.
- 5) Connect the door harness connector, and install the center pillar inner protector.
- 6) Install the center pillar lower trim.


Tightening torque:

Refer to "COMPONENT" of "General Description".

<Ref. to EB-9, REAR DOOR PANEL, COMPONENT, General Description.>

C: ADJUSTMENT


1) Open the rear door, loosen the door-side bolts of upper and lower hinges to align the position for vertical and horizontal direction of rear door panel.

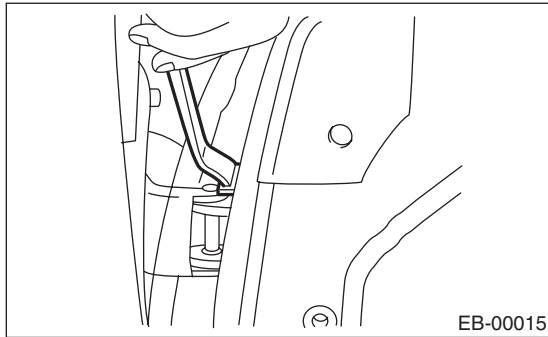

2) Loosen the screw (A) and tap striker (B) using plastic hammer to adjust the gap between rear end surface of rear door panel and body surface.

CAUTION:

Do not use an impact wrench. Welding area on the striker nut plate is easily broken.

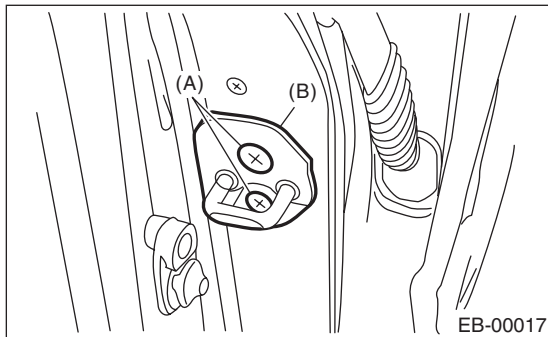


7. Rear Sealing Cover

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the sealing cover.

NOTE:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.

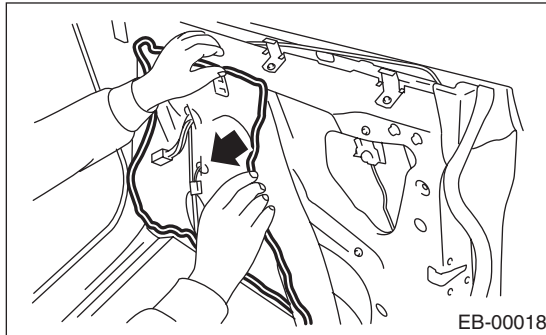

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When replacing the sealing cover, use the butyl tape.
- 3) Press the butyl tape-applied area firmly to prevent any floating on surface.

Butyl tape:

3M 8626 or equivalent

NOTE:

- Apply a uniform bead of butyl tape.
- Attach the sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

C: INSPECTION

If the sealing cover gets damaged, replace it with a new part.

8. Trunk Lid

A: REMOVAL


1. TORSION BAR

- 1) Open the trunk lid.
- 2) Using the ST, remove the torsion bar from the hinge link.

ST 927780000 REMOVER

CAUTION:


During removal and installation, handle the torsion bar carefully, because it will generate reactive force.

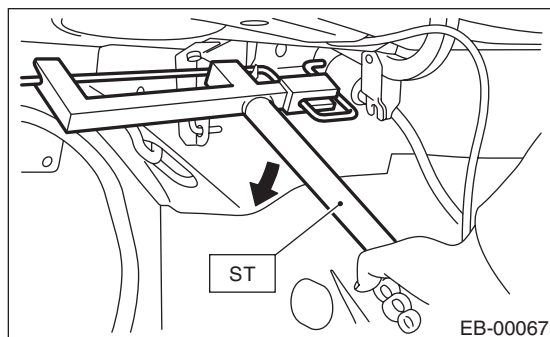

- 3) Remove the torsion bars RH/LH.


2. TRUNK LID ARM

- 1) Disconnect the ground cable from the battery.
- 2) Open the trunk lid to remove the trunk lid trim, trunk lid arm cover and trunk room trim. <Ref. to EI-68, REMOVAL, Trunk Room Trim.>
- 3) Disconnect the trunk lid release cable. <Ref. to SL-44, REMOVAL, Trunk Lid Lock Assembly.>
- 4) Disconnect the connectors, and remove the harness clip, etc.
- 5) Remove the trunk lid mounting bolts, to remove the trunk lid panel from the trunk lid arm.

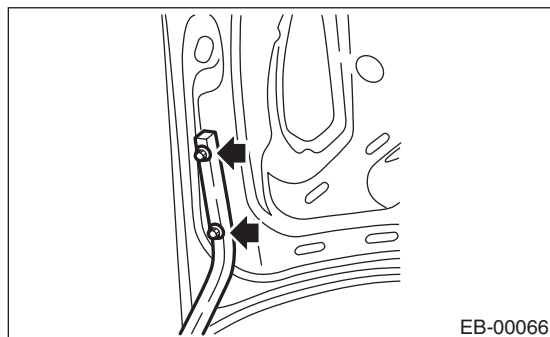


- 6) Remove the torsion bar from the trunk lid hinge link. <Ref. to EB-24, TORSION BAR, REMOVAL, Trunk Lid.>
- 7) Remove the rear shelf trim. <Ref. to EI-67, REMOVAL, Rear Shelf Trim.>

- 8) Remove the bolts, then remove the trunk lid arm.

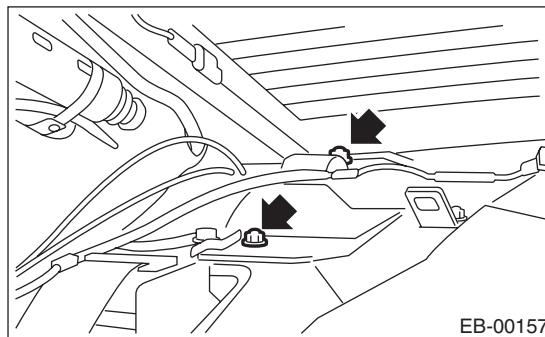


3. TRUNK LID PANEL

- 1) Disconnect the ground cable from the battery.
- 2) Open the trunk lid to remove the trunk lid trim and trunk lid arm cover. <Ref. to EI-68, TRUNK ROOM TRIM, REMOVAL, Trunk Room Trim.>
- 3) Disconnect the connector to remove the trunk lid harness.
- 4) Remove the trunk lid lock assembly. <Ref. to SL-44, REMOVAL, Trunk Lid Lock Assembly.>
- 5) Remove the trunk lid garnish. <Ref. to EI-72, REMOVAL, Trunk Lid Garnish.>
- 6) Remove the license plate light cover.

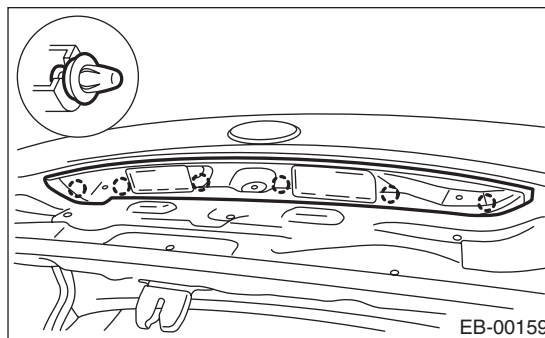

- 7) Remove the bolts, then remove the trunk lid panel from the trunk lid arm.

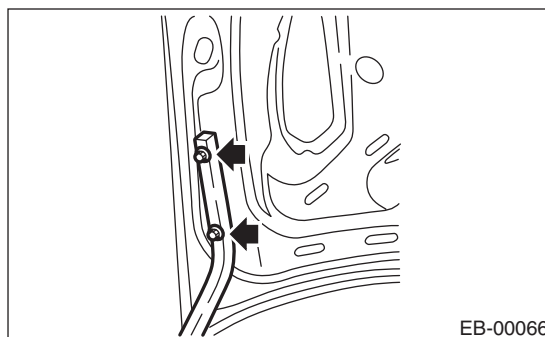

B: INSTALLATION**1. TORSION BAR**

- 1) Install in the reverse order of removal.
- 2) Apply grease to the rotating area of hinges and the torsion bar.

2. TRUNK LID ARM

Install in the reverse order of removal.

Tightening torque:

17.6 N·m (1.8 kgf-m, 12.9 ft-lb)

3. TRUNK LID PANEL

- 1) Install in the reverse order of removal.
- 2) Install while paying attention to make a uniform clearance around the trunk lid panel. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

Tightening torque:


14 N·m (1.43 kgf-m, 10.3 ft-lb)

9. Rear Gate

A: REMOVAL


1. REAR GATE PANEL

- 1) Disconnect the ground cable from battery.
- 2) Open the rear gate.
- 3) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 4) Remove the rear gate garnish. <Ref. to EI-73, REMOVAL, Rear Gate Garnish.>
- 5) Remove the rear wiper arm. <Ref. to WW-17, REMOVAL, Rear Wiper Arm.>
- 6) Remove the rear wiper motor. <Ref. to WW-18, REMOVAL, Rear Wiper Motor.>
- 7) Remove the rear gate outer handle. <Ref. to SL-42, REMOVAL, Rear Gate Outer Handle.>
- 8) Remove the rear gate latch assembly. <Ref. to SL-43, REMOVAL, Rear Gate Latch Assembly.>
- 9) Remove the roof spoiler. <Ref. to EI-40, REMOVAL, Roof Spoiler.>
- 10) Remove harness clip of each connector from the rear gate panel.
- 11) Remove the weather strip clip (A), and remove the rear gate panel weather strip.

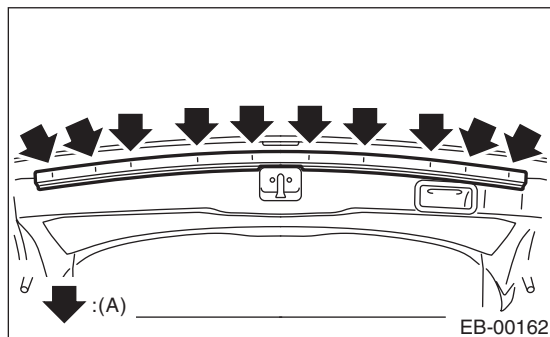


NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

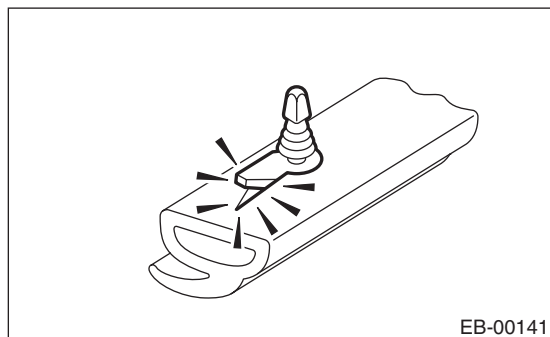


- 12) Remove the rubber duct (A) connection, and pull out the harness and washer hose from the rear gate.

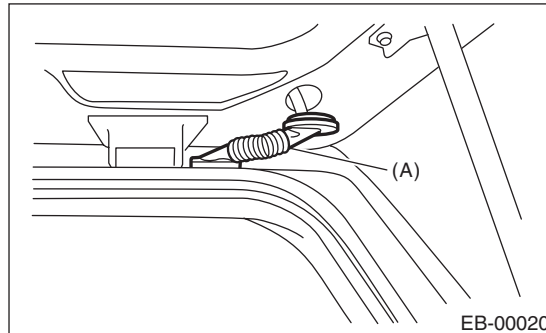


- 13) Before removing the rear gate damper stay, prevent the rear gate from closing using prop or the like.

CAUTION:


If the prop comes off, operators may get injured and vehicle may get damaged. Make sure to support the rear gate with secure material to prevent injury or damage.

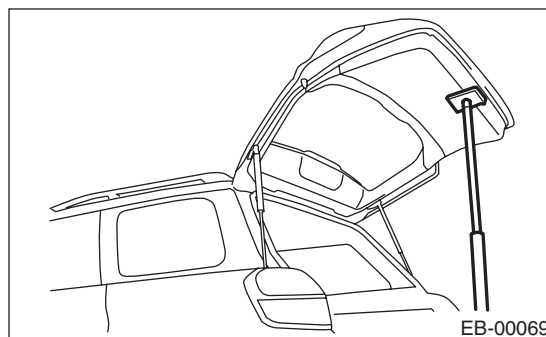

- 14) Remove the mounting bolt of rear gate damper stay.

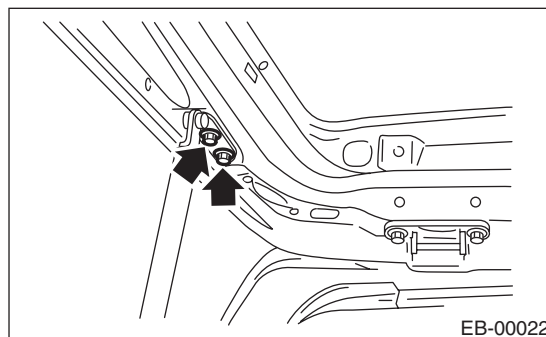

15) Remove the rear gate hinge bolt, and remove the rear gate panel.

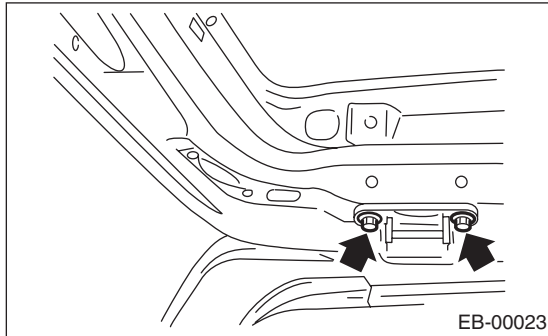

16) Remove the rear gate hinge from the vehicle.

2. REAR GATE DAMPER STAY

CAUTION:


- Do not damage piston rods and oil seals.
- Never disassemble cylinders: They contain gas.

1) Open the rear gate.


2) Before removing the rear gate damper stay, prevent the rear gate from closing using prop or the like.

CAUTION:


If the prop comes off, operators may get injured and vehicle may get damaged. Make sure to support the rear gate with secure material to prevent injury or damage.

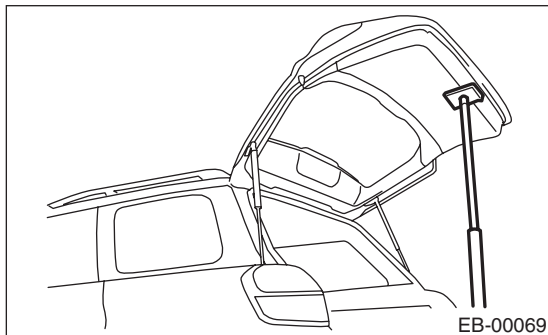


3) Remove the mounting bolt of rear gate damper stay.

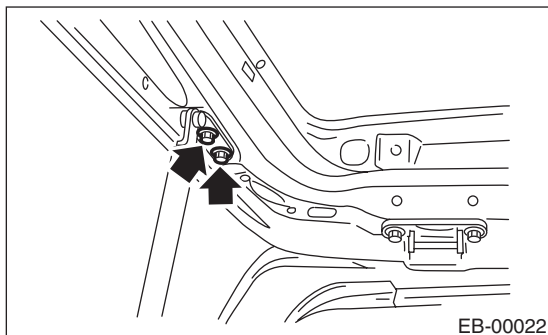

4) Remove the clips and detach the rear combination light covers.

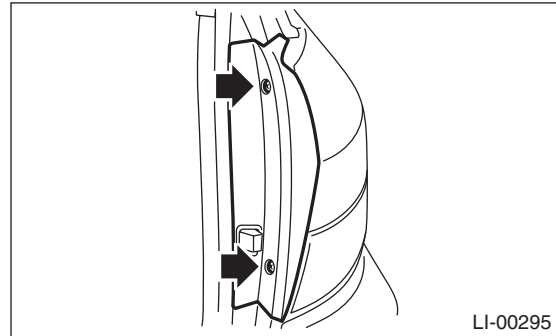

5) Remove mounting bolt (A), and remove the damper stay.

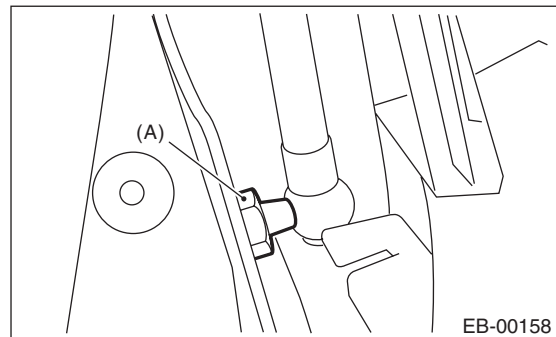

B: INSTALLATION

1. REAR GATE PANEL

- 1) Install in the reverse order of removal.
- 2) Install with attention to make uniform clearance between rear gate panel and body. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

Tightening torque:


25 N·m (2.6 kgf-m, 18.4 ft-lb)

2. REAR GATE DAMPER STAY

- 1) Prevent the rear gate from closing using prop or the like.

CAUTION:

If the prop comes off, operators may get injured and vehicle may get damaged. Make sure to support the rear gate with secure material to prevent injury or damage.

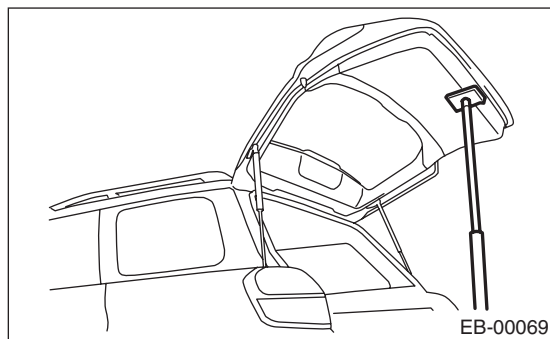

- 2) Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description".

<Ref. to EB-11, REAR GATE PANEL, COMPONENT, General Description.>


C: DISPOSAL

1. REAR GATE DAMPER STAY

CAUTION:

Gas is colorless, odorless, and harmless. However, gas pressure may spray cutting powder or oil. Be sure to wear dust-resistant goggles.

- 1) Cover with a vinyl sack as shown in the figure.

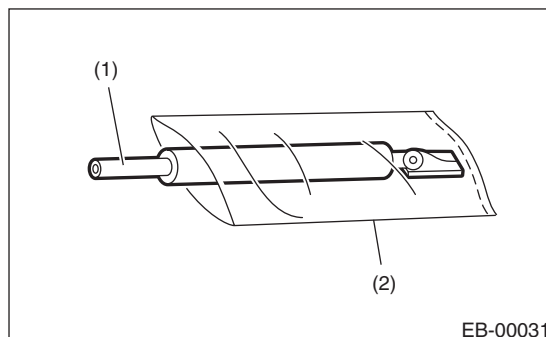


- (1) Rear gate damper stay
- (2) Vinyl sack

NOTE:

Prevent the vinyl sack from being caught by drill cutting edge

2) Lift the body side slightly with piston rods fully extended, and secure the body side with vise.

Drill a hole in 2 to 3 mm (0.08 to 0.12 in) diameter at a point 10 to 200 mm (0.39 to 7.87 in) from door side, and bleed rear gate damper stay gas stay completely.

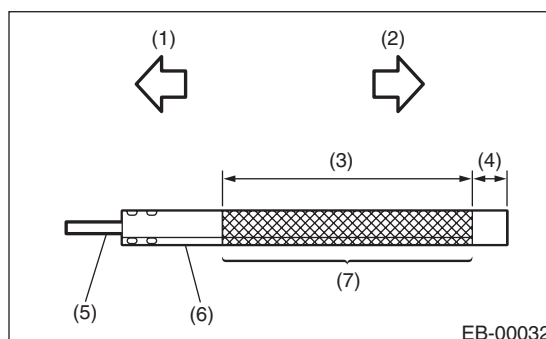

- (1) Body side
- (2) Door side
- (3) 190 mm (7.48 in)
- (4) 10 mm (0.39 in)
- (5) Piston rod
- (6) Cylinder
- (7) Portion to be drilled

CRUISE CONTROL SYSTEM

CC

	Page
1. General Description	2
2. Cruise Control Unit	4
3. Cruise Control Command Switch	5
4. Stop Light & Brake Switch	6
5. Clutch Switch	7
6. Inhibitor Switch	8
7. Neutral Position Switch	9


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT GRILLE

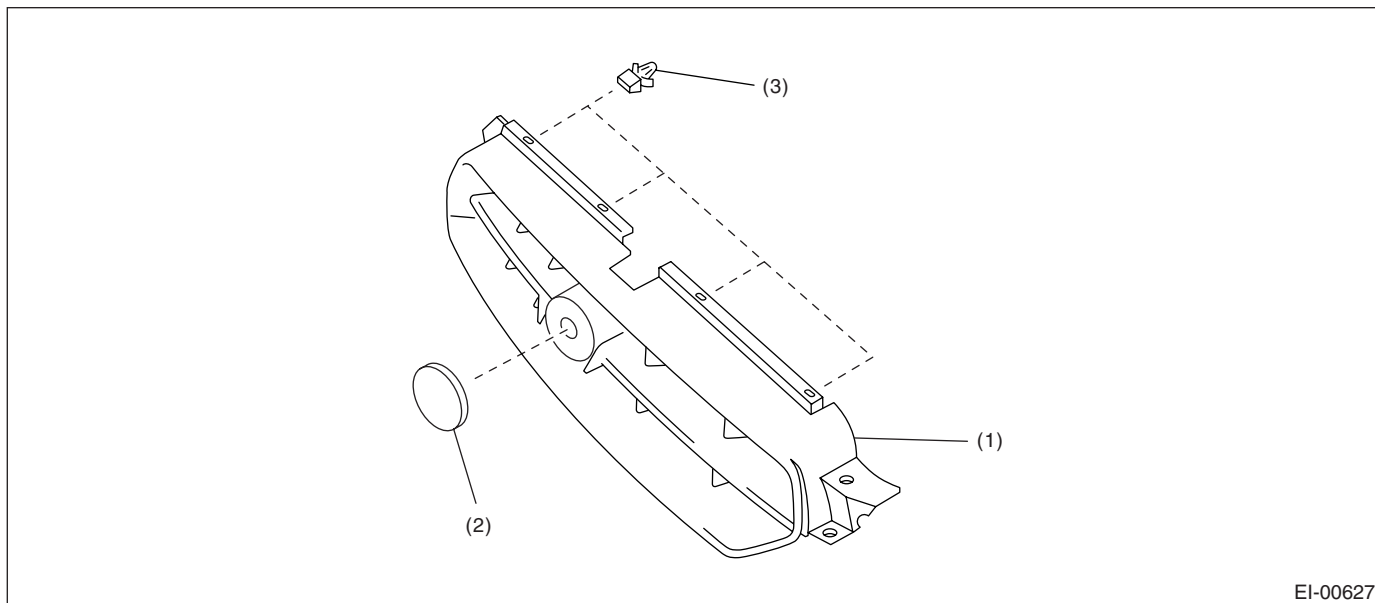


EI-00627

(1) Front grille

(2) Front grille emblem

(3) Front grille clip


2. UNDER COVER

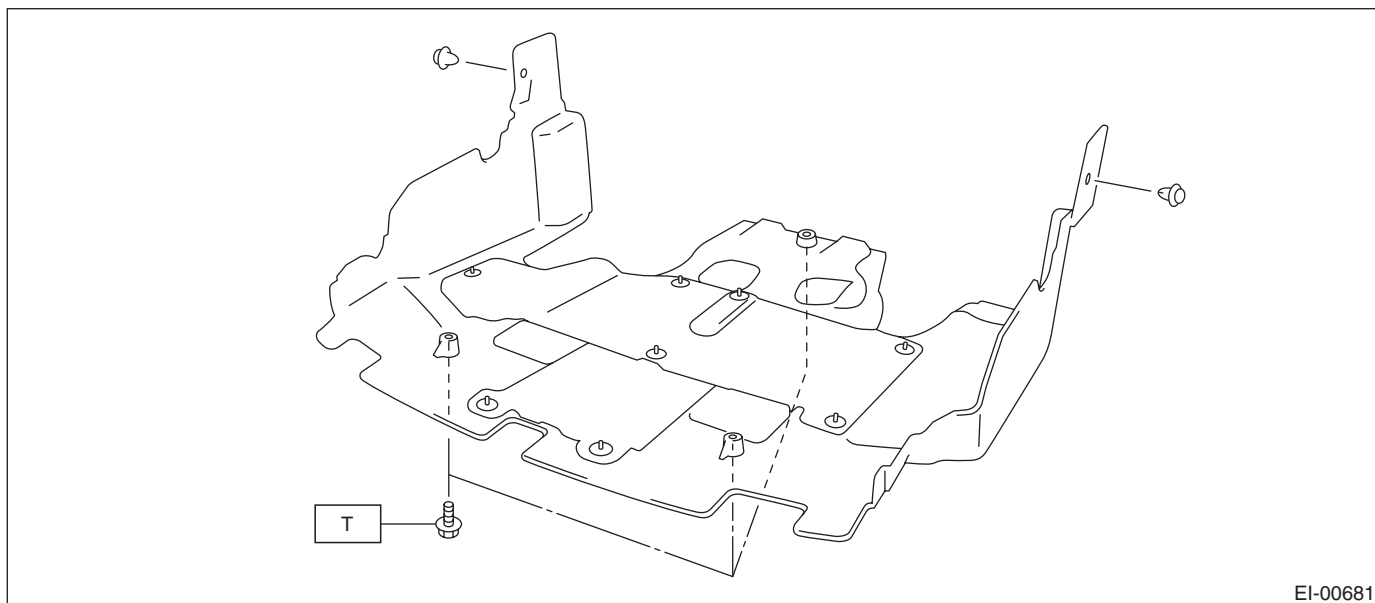

EI-00681

Tightening torque: N·m (kgf-m, ft-lb)
T: 14 (1.42, 10.3)

3. UNDER PROTECTOR

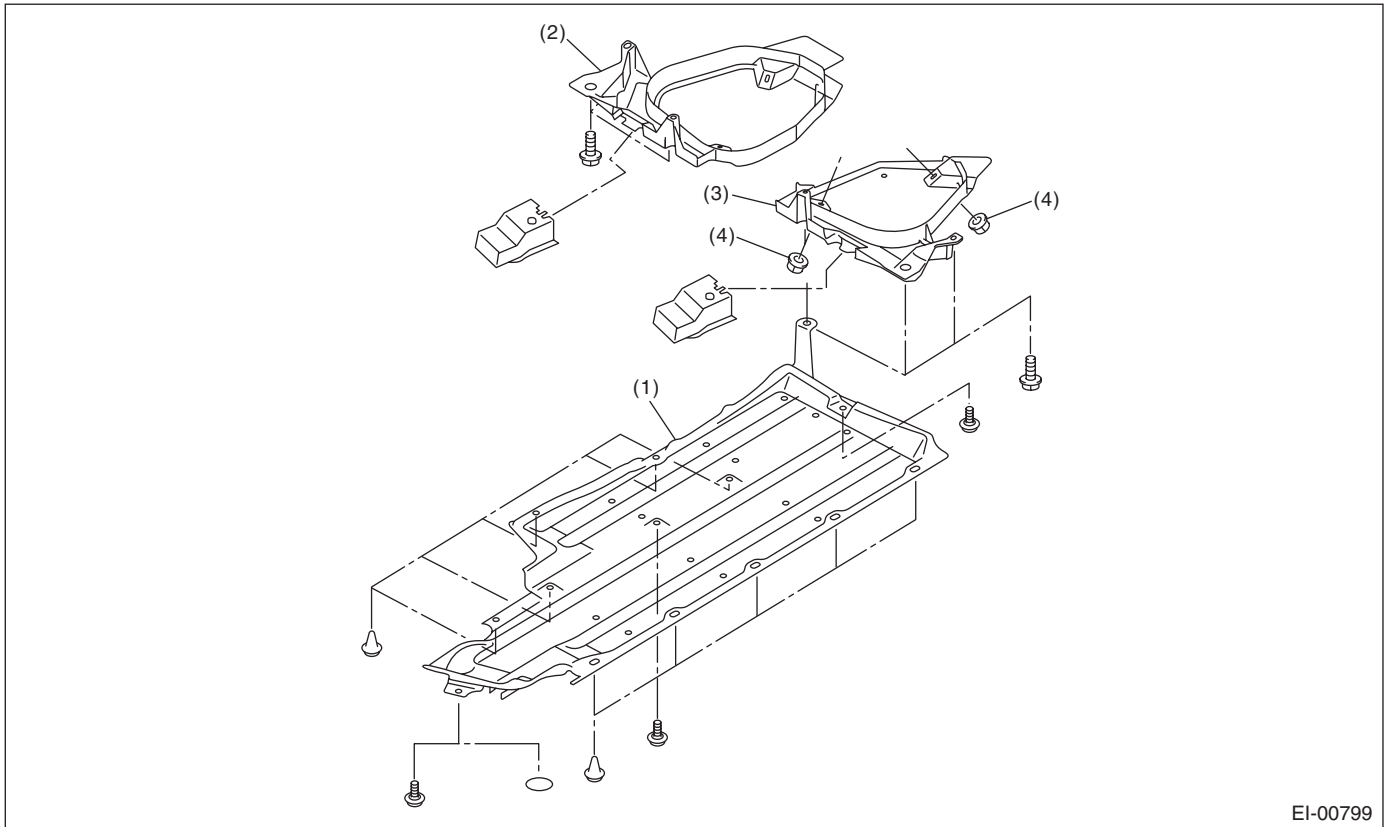

EI-00799

- (1) Floor under protector
- (2) Fuel tank protector RH


- (3) Fuel tank protector LH

- (4) Plastic nut

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT HOOD GRILLE

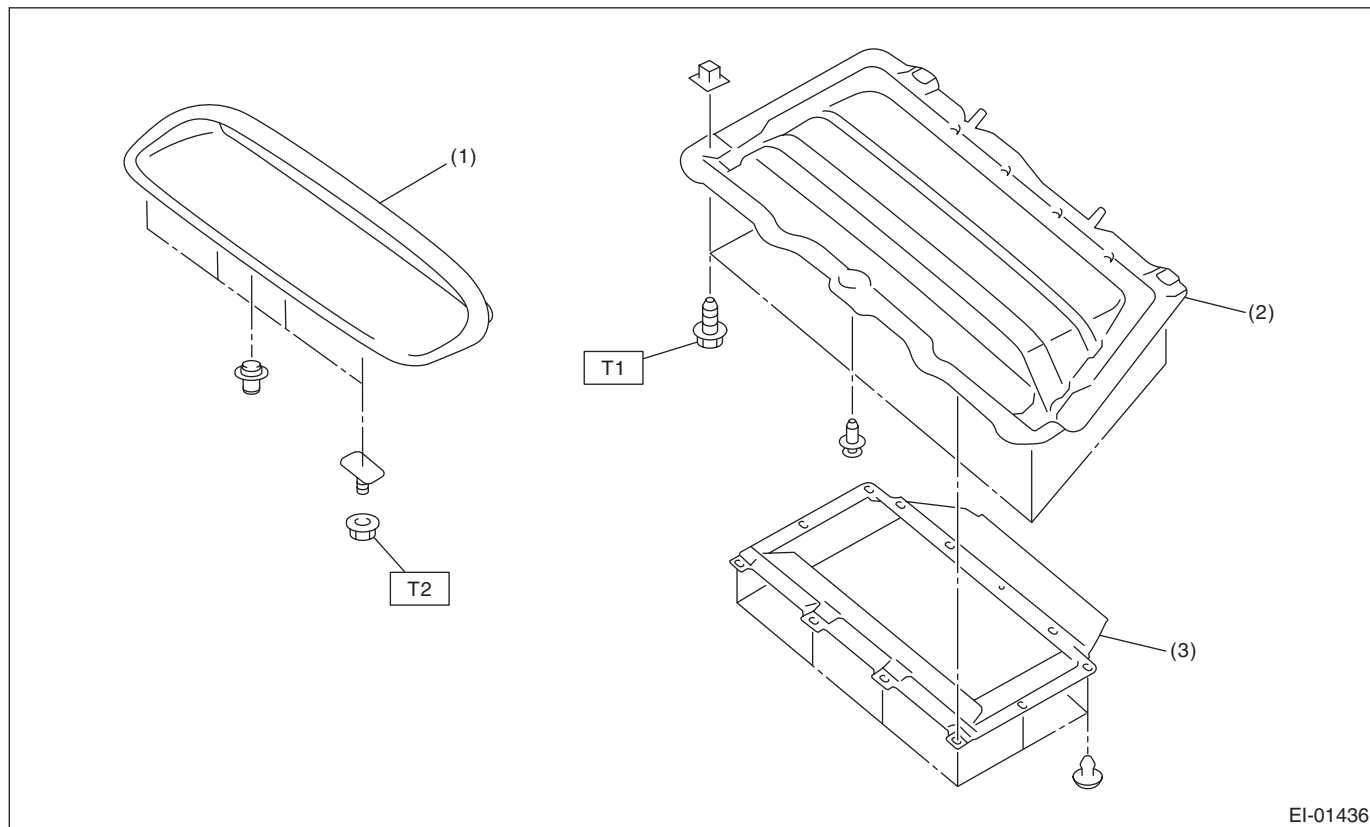

- (1) Front hood grille
(2) Grille duct upper


- (3) Grille duct lower

Tightening torque: N·m (kgf-m, ft-lb)

T1: 1.0 (0.1, 0.72)

T2: 4.4 (0.45, 3.18)

5. FRONT BUMPER

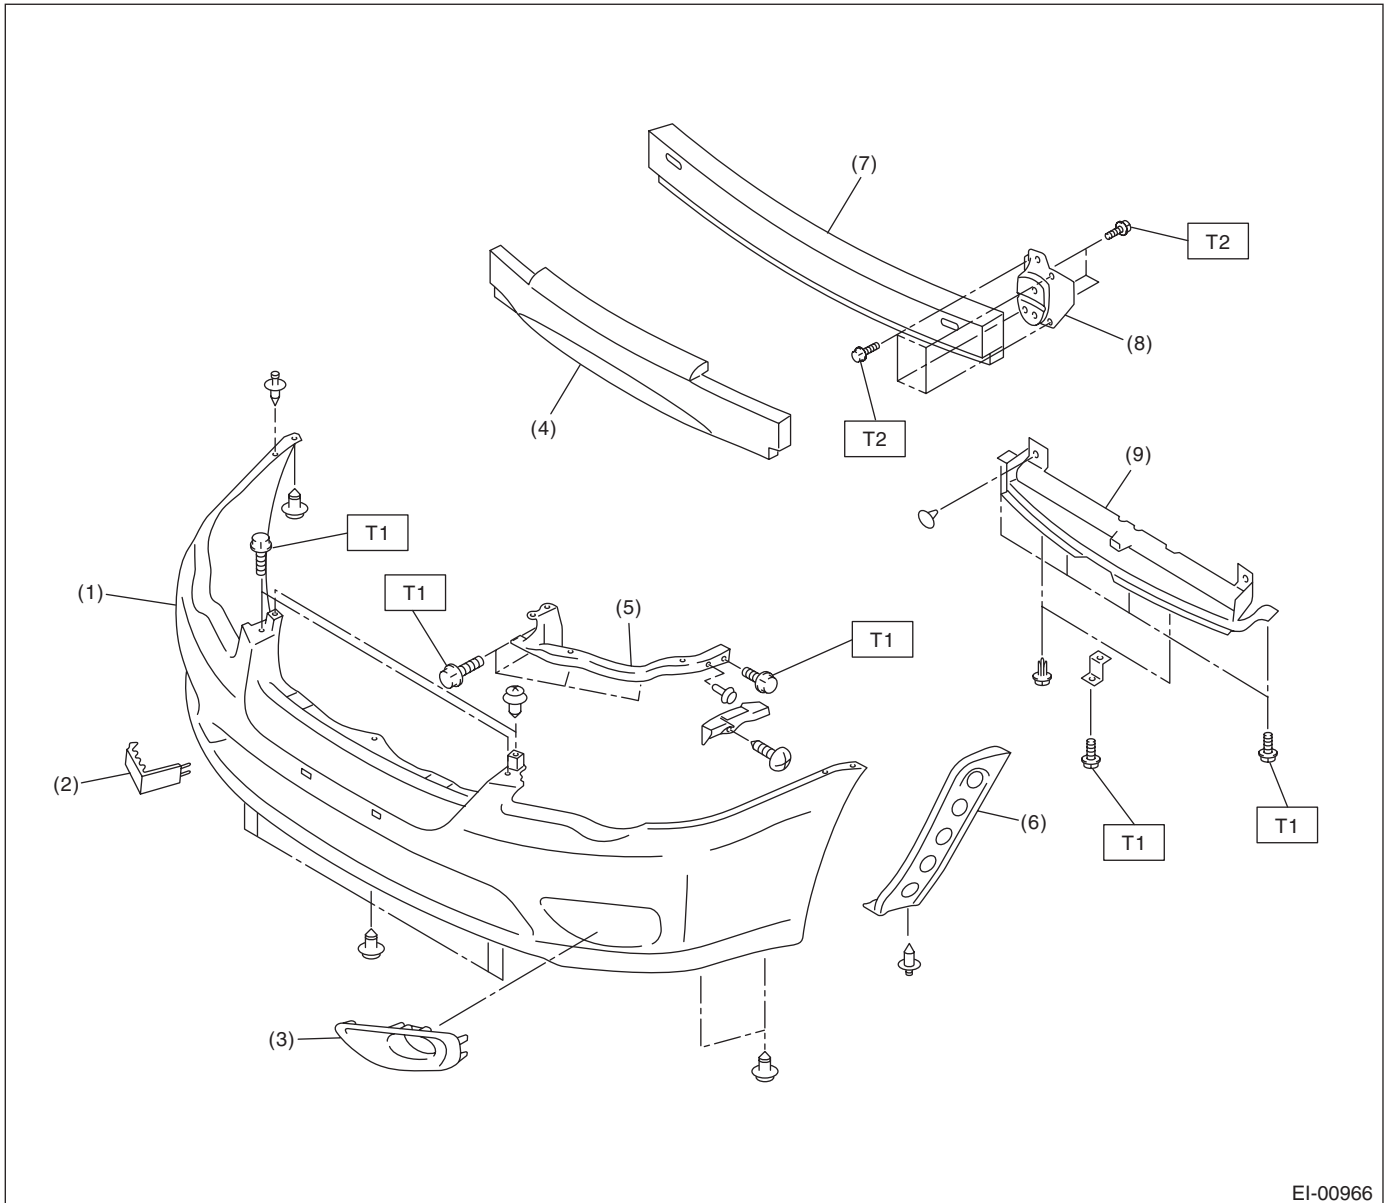

EI-00966

- | | |
|--------------------------|-------------------------------|
| (1) Bumper face | (6) Side bracket |
| (2) Towing hook cover | (7) Bumper beam reinforcement |
| (3) Fog light cover | (8) Bumper beam bracket |
| (4) Energy absorber foam | (9) Radiator guide |
| (5) Upper bracket | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.77, 5.53)

T2: 33 (3.4, 24)

General Description

EXTERIOR/INTERIOR TRIM

6. REAR BUMPER (SEDAN MODEL)

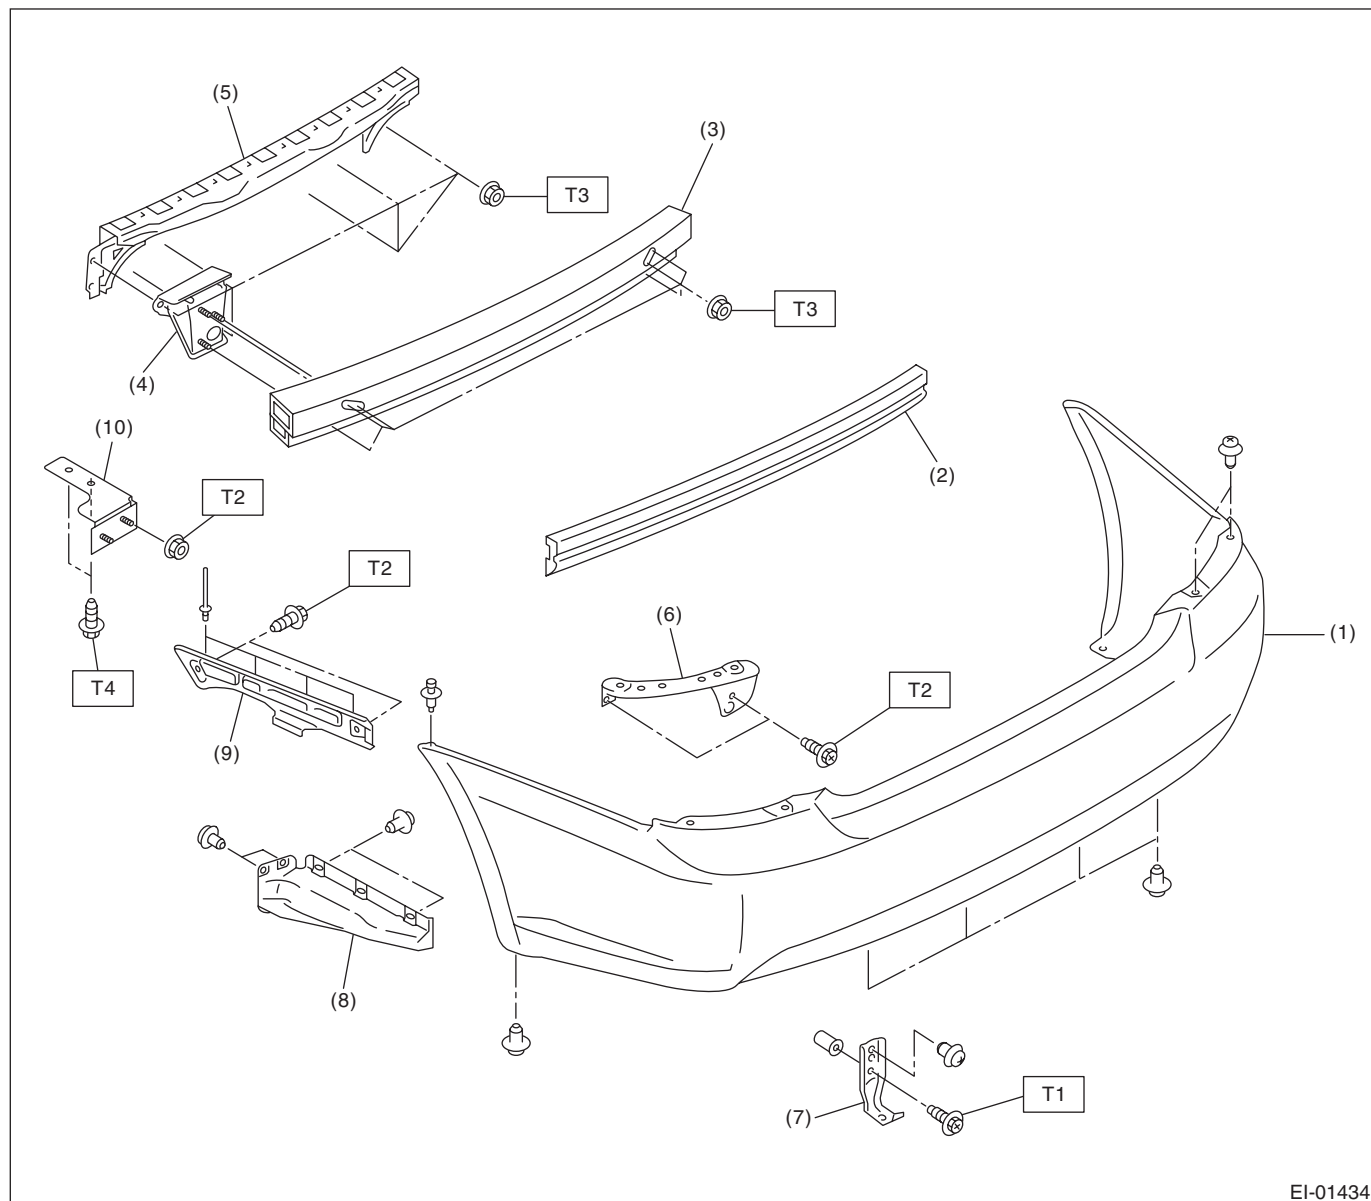

EI-01434

- | | |
|-------------------------------|--|
| (1) Bumper face | (7) Lower bracket |
| (2) Energy absorber foam | (8) Bumper side support lower |
| (3) Bumper beam reinforcement | (9) Bumper side support upper |
| (4) Bumper beam bracket | (10) Rear bumper gusset (for installing trailer hitch, OUTBACK only) |
| (5) Beam upper rear | |
| (6) Bracket corner | |

Tightening torque: N·m (kgf·m, ft·lb)


T1: 2 (0.2, 1.48)

T2: 7.5 (0.77, 5.53)

T3: 33 (3.4, 24)

T4: 72 (7.3, 53.1)

7. REAR BUMPER (WAGON MODEL)

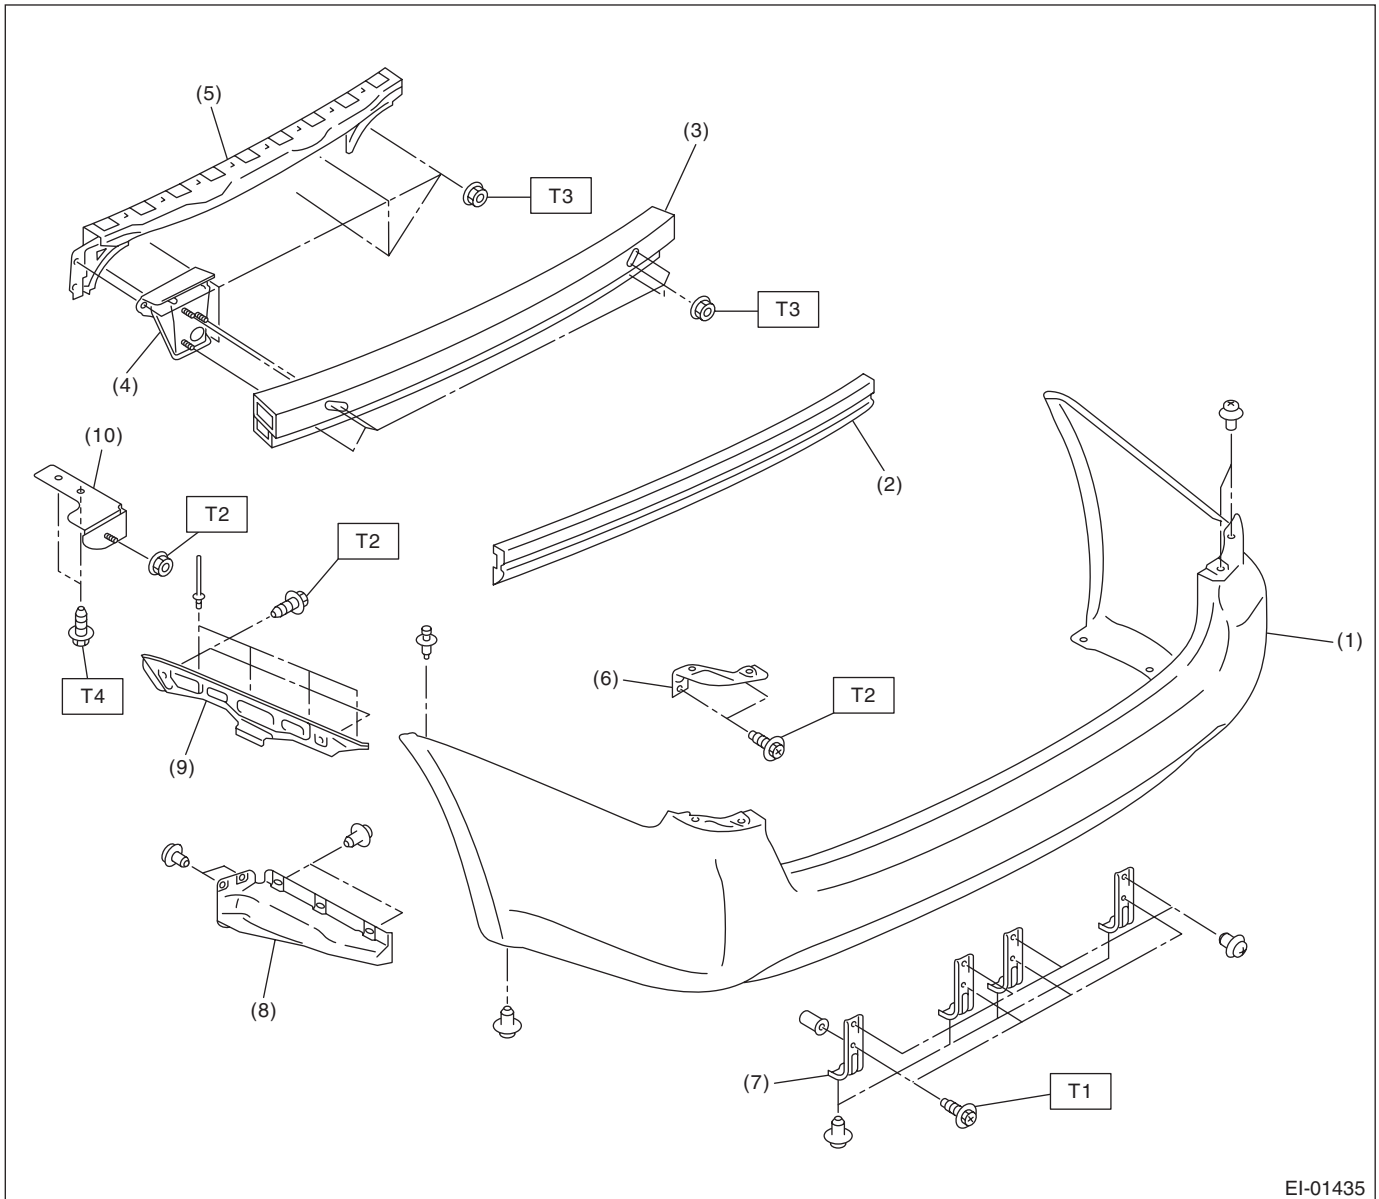

EI-01435

- | | |
|-------------------------------|--|
| (1) Bumper face | (7) Lower bracket |
| (2) Energy absorber foam | (8) Bumper side support lower |
| (3) Bumper beam reinforcement | (9) Bumper side support upper |
| (4) Bumper beam bracket | (10) Rear bumper gusset (for installing trailer hitch, OUTBACK only) |
| (5) Beam upper rear | |
| (6) Bracket corner | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 2 (0.2, 1.48)

T2: 7.5 (0.77, 5.53)


T3: 33 (3.4, 24)

T4: 72 (7.3, 53.1)

General Description

EXTERIOR/INTERIOR TRIM


8. MUD GUARD

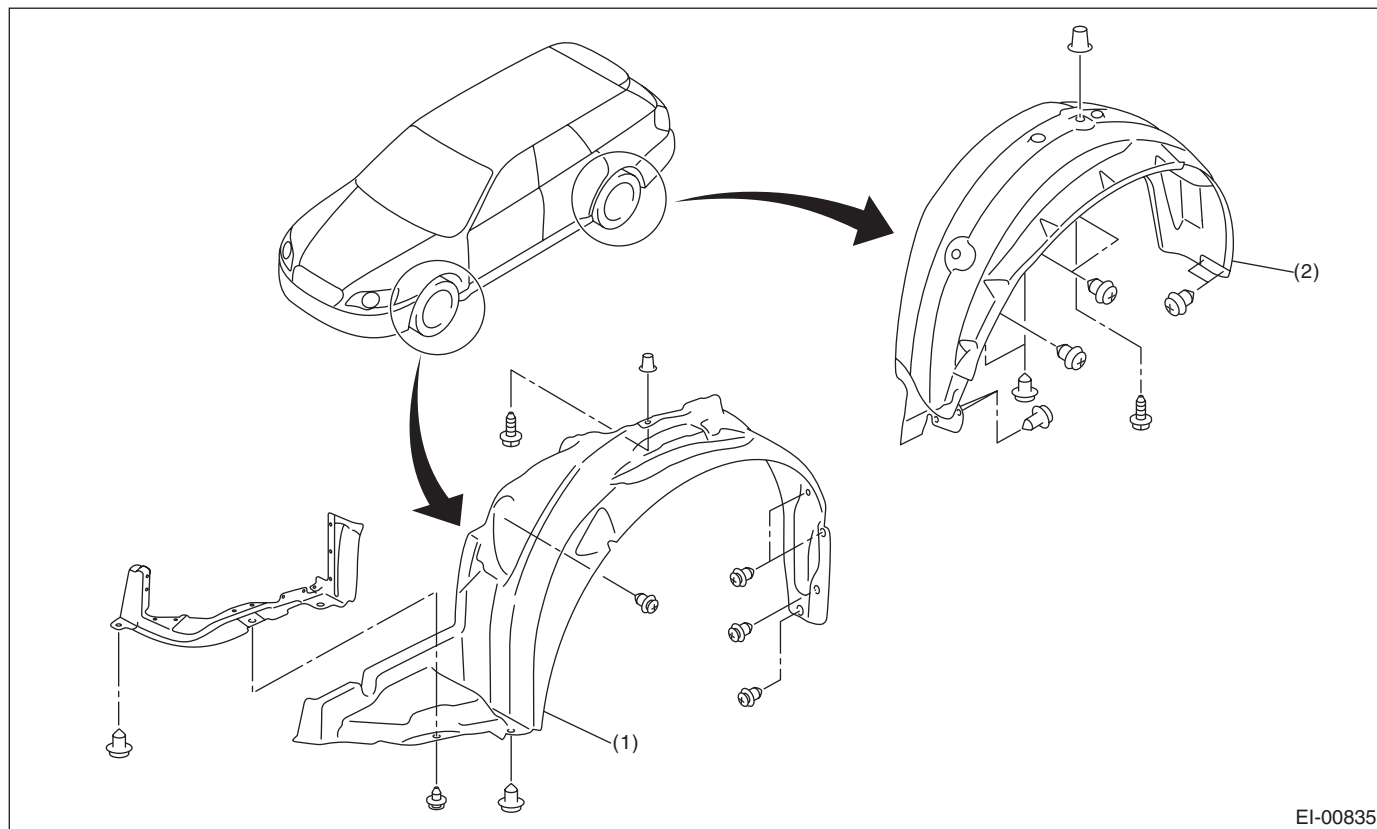

(1) Front mud guard

(2) Rear mud guard

9. COWL PANEL

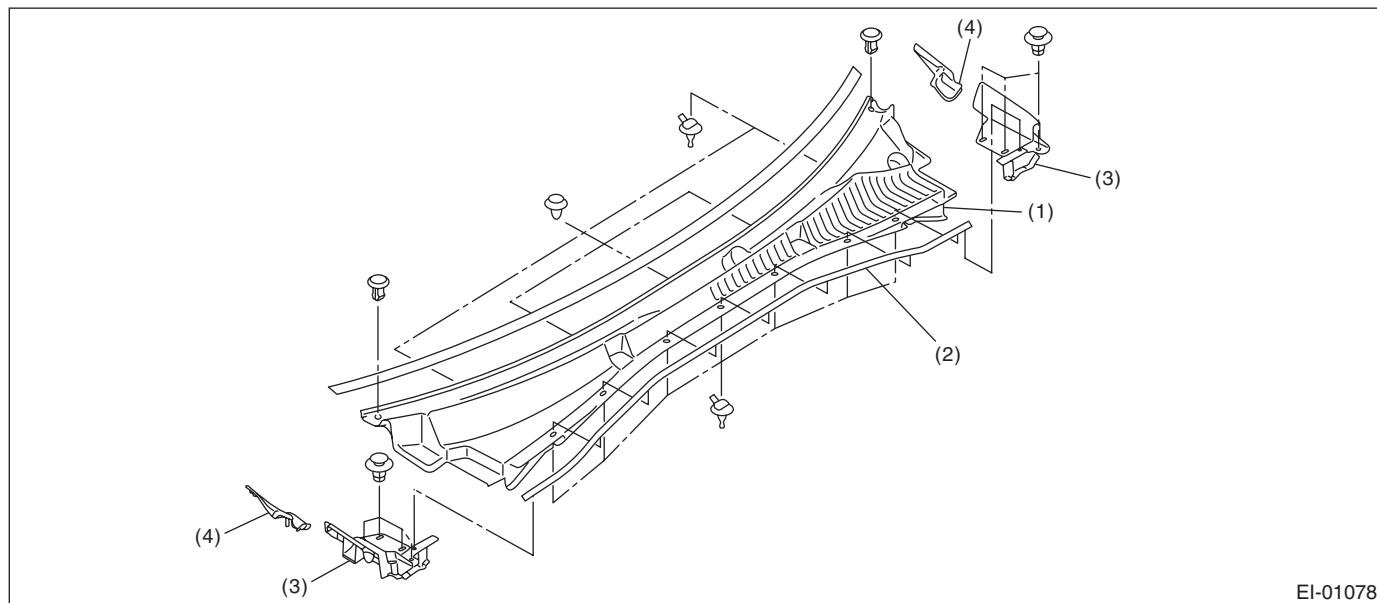


(1) Cowl panel

(2) Weather strip

(3) Cover cowl panel

(4) Cowl side panel

10.ROOF SPOILER

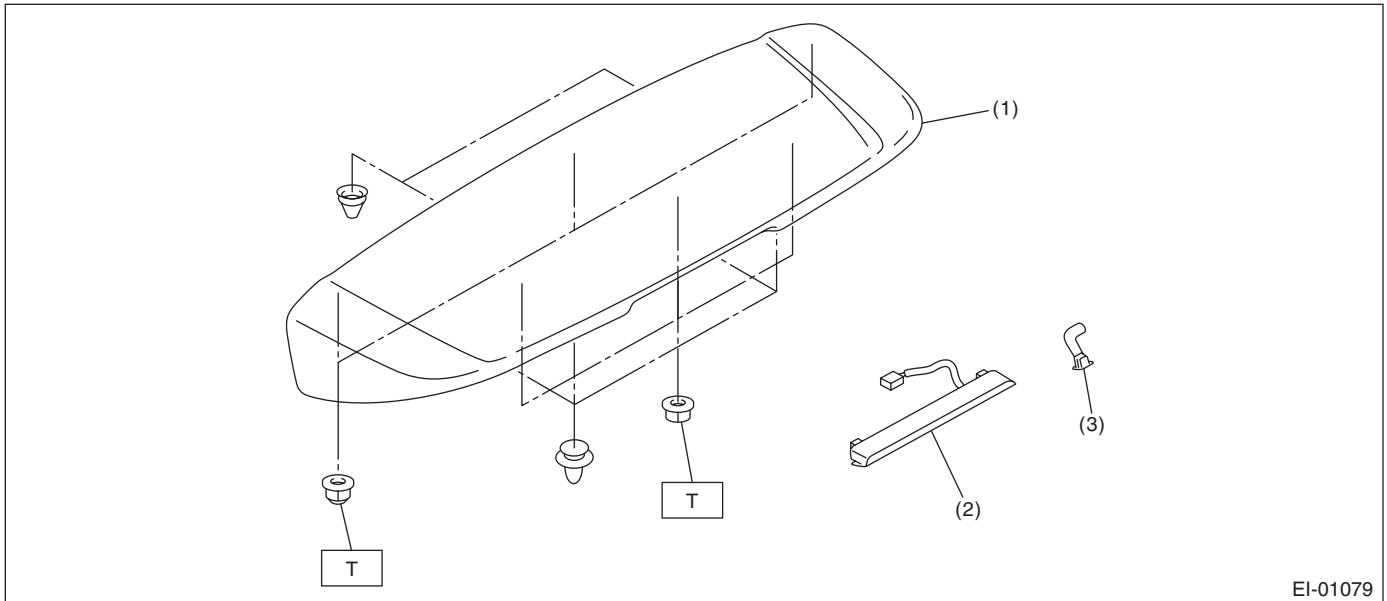


- (1) Roof spoiler
- (2) High-mounted stop light

- (3) Washer nozzle

Tightening torque: N·m (kgf-m, ft-lb)
T: 4.5 (0.46, 3.32)

11.SIDE SILL SPOILER

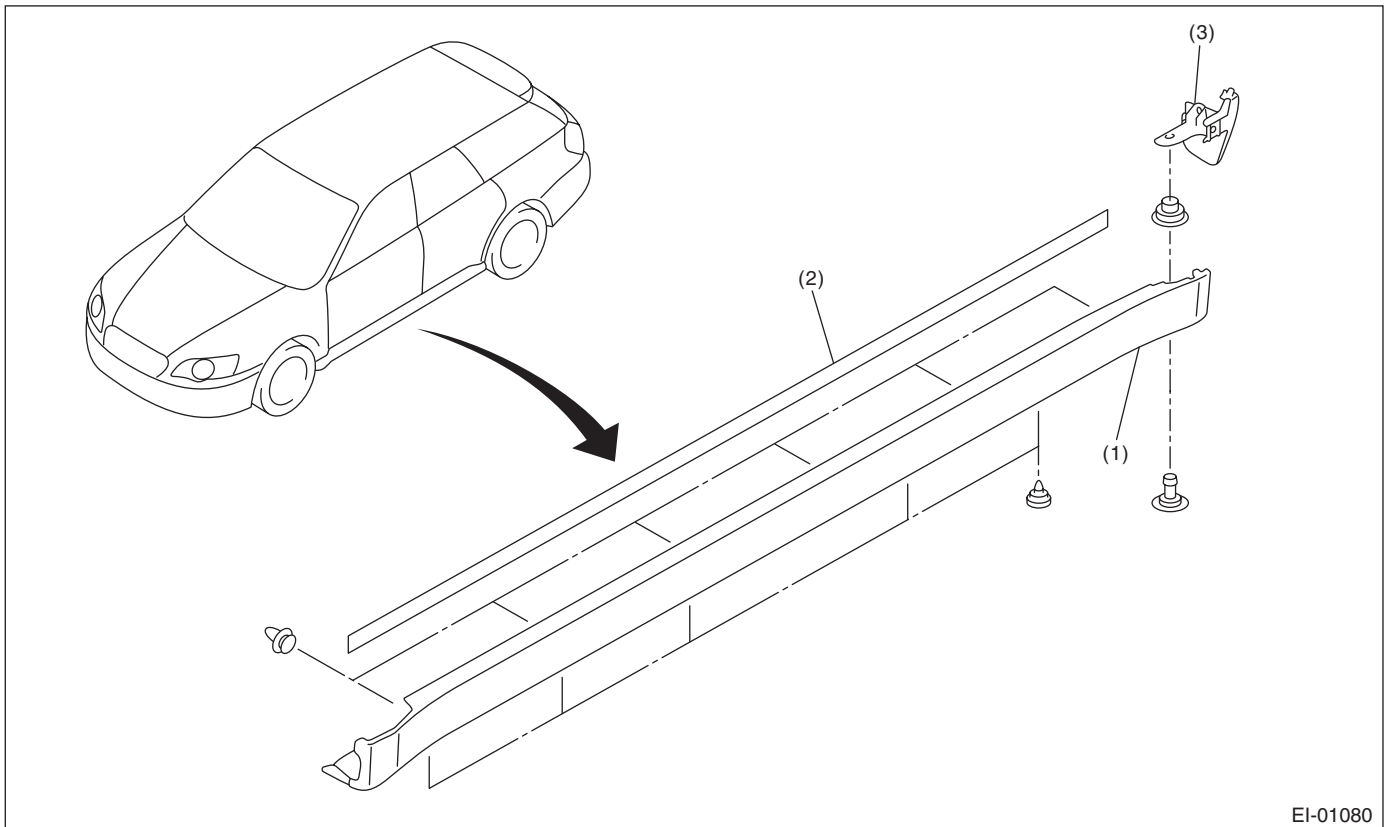

- (1) Side sill spoiler


- (2) Double-sided tape

- (3) Air flap side sill end

General Description


EXTERIOR/INTERIOR TRIM

12.ROOF RAIL

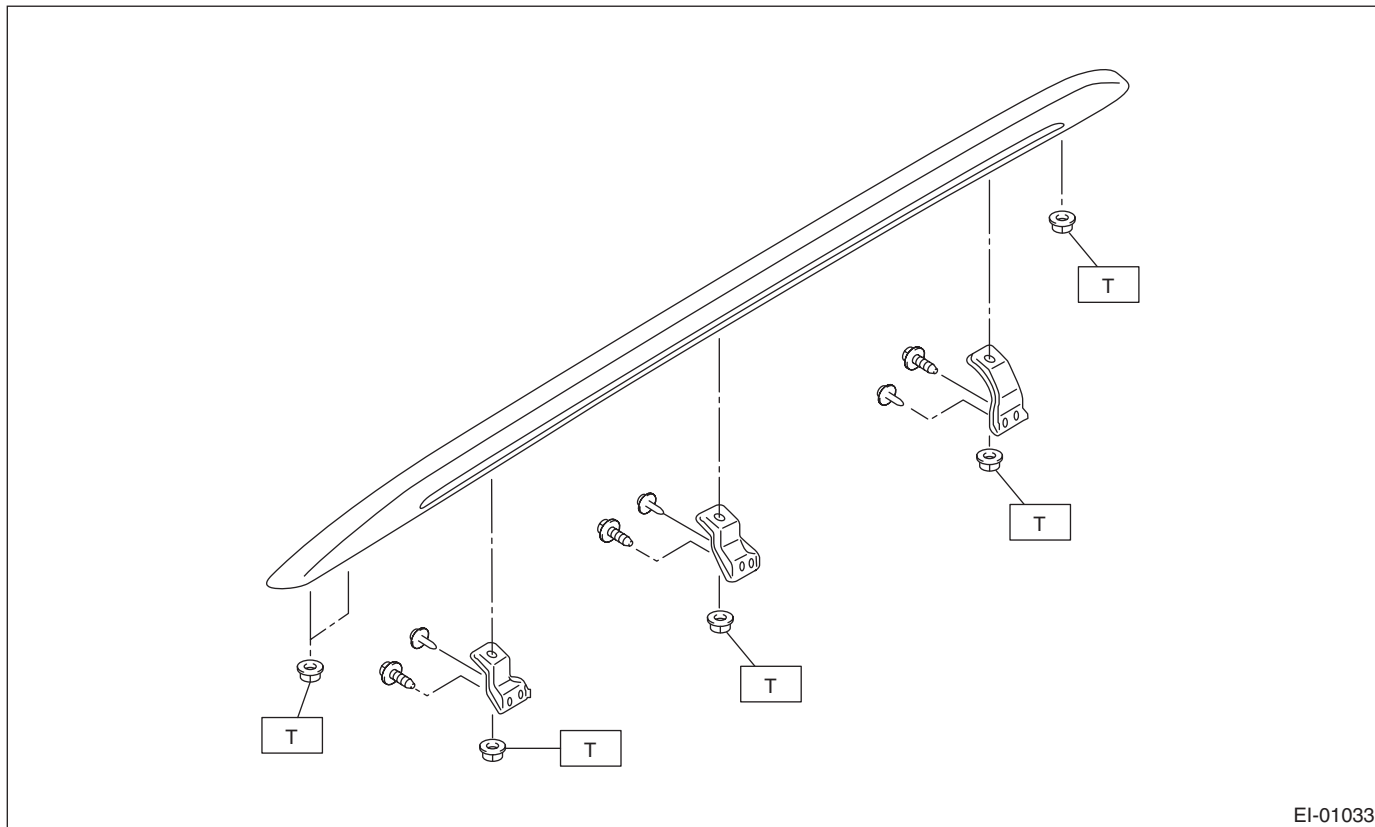

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.77, 5.53)


13.SIDE PROTECTOR

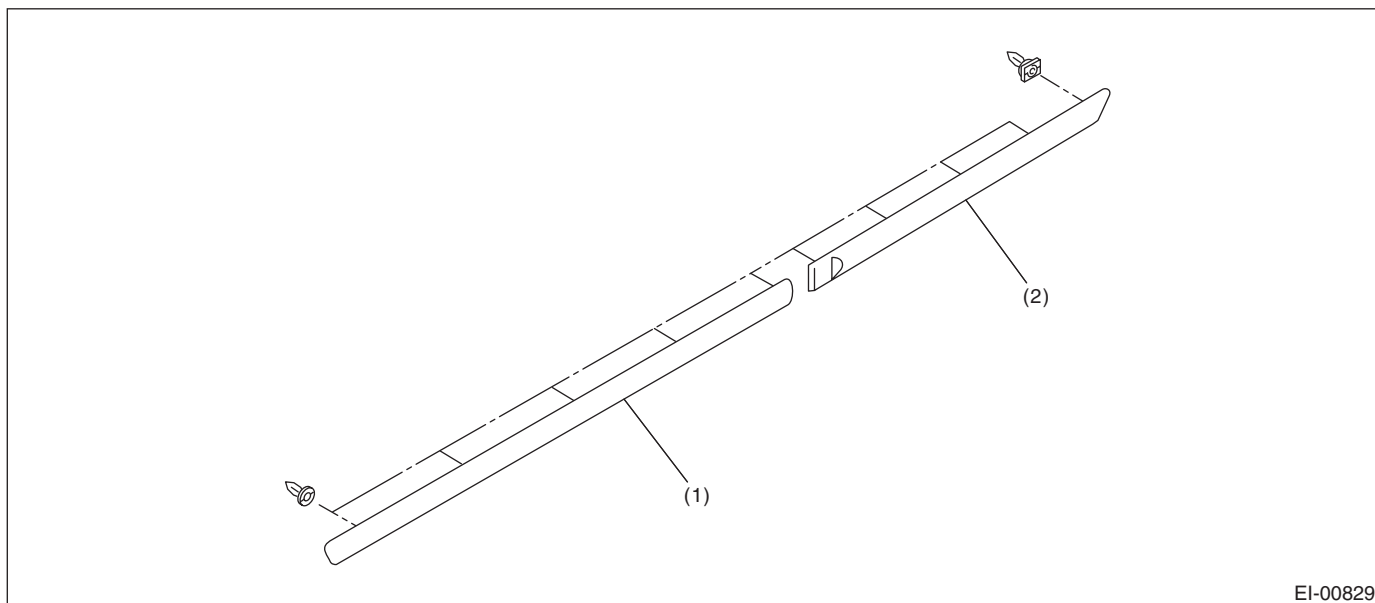

(1) Front door protector

(2) Rear door protector

14.SIDE GARNISH

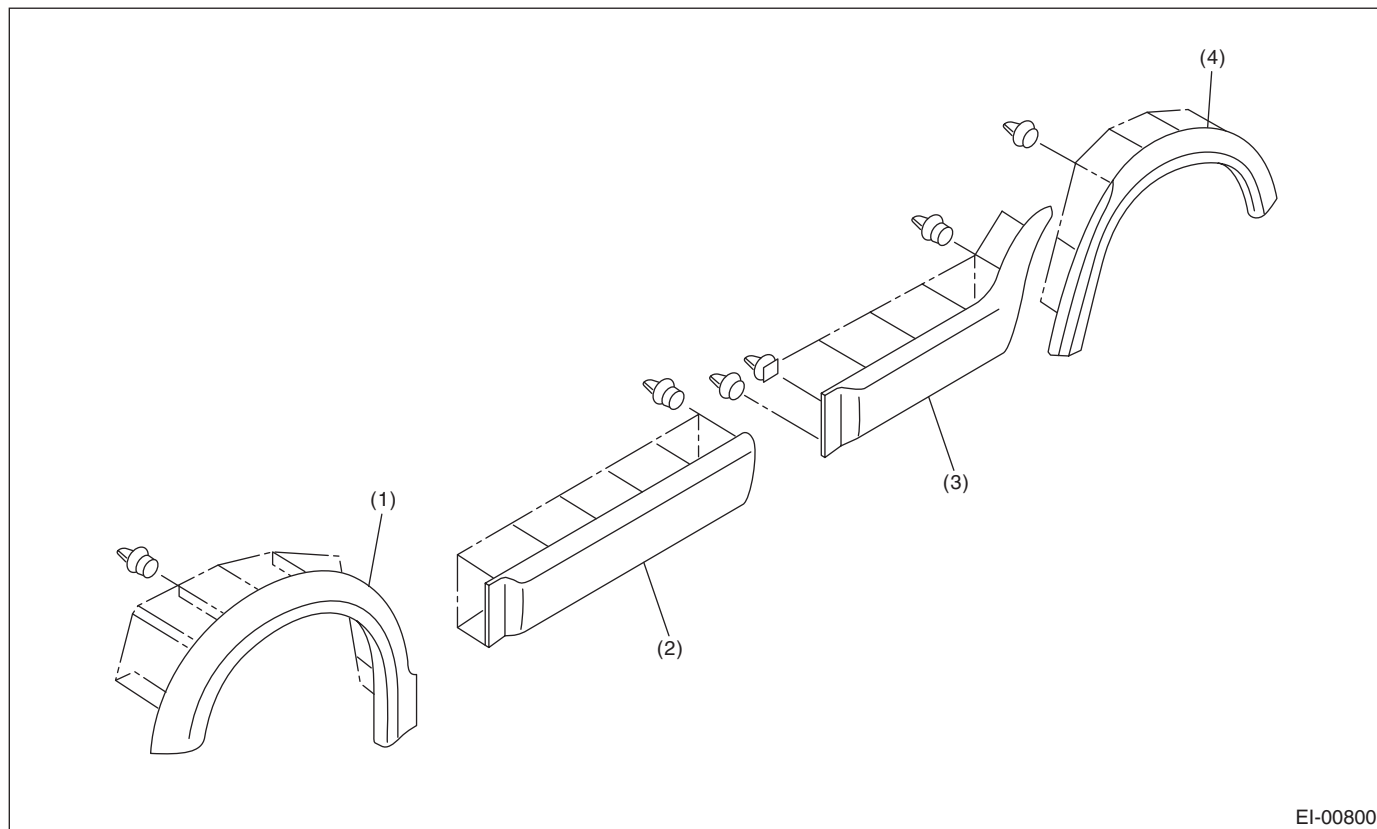


EI-00800

- (1) Front fender garnish
- (2) Front door garnish

- (3) Rear door garnish

- (4) Rear quarter garnish

15.TRUNK LID GARNISH

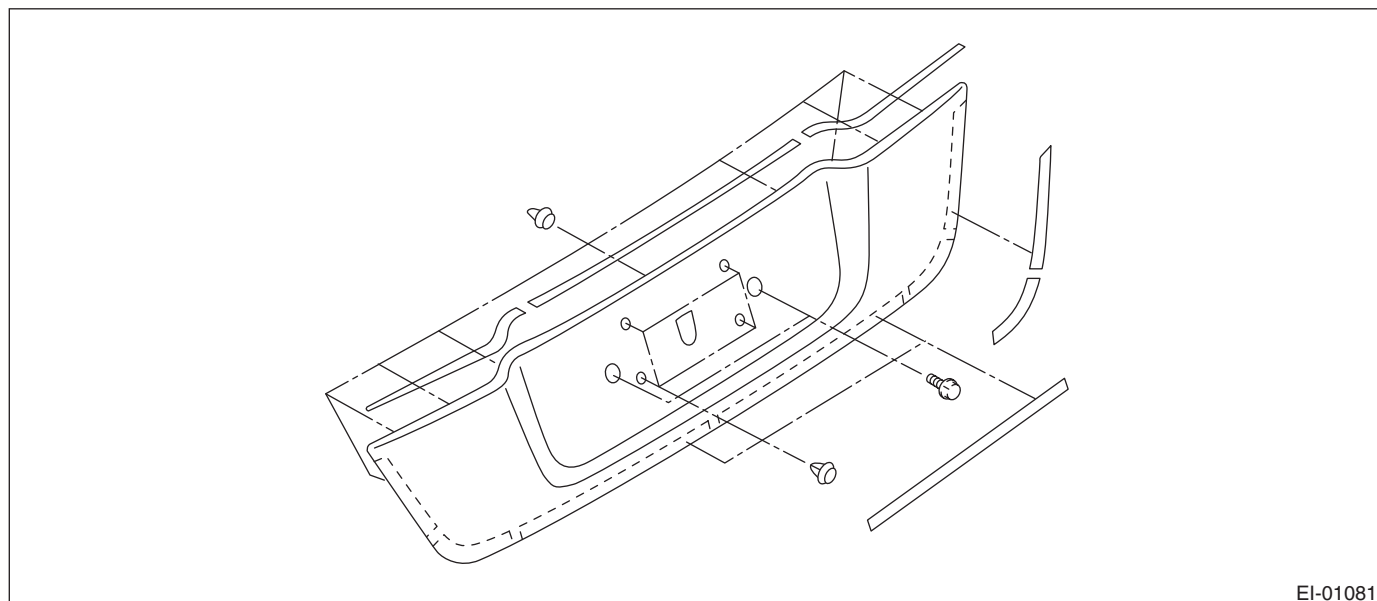


EI-01081

General Description

EXTERIOR/INTERIOR TRIM

16.REAR GATE GARNISH

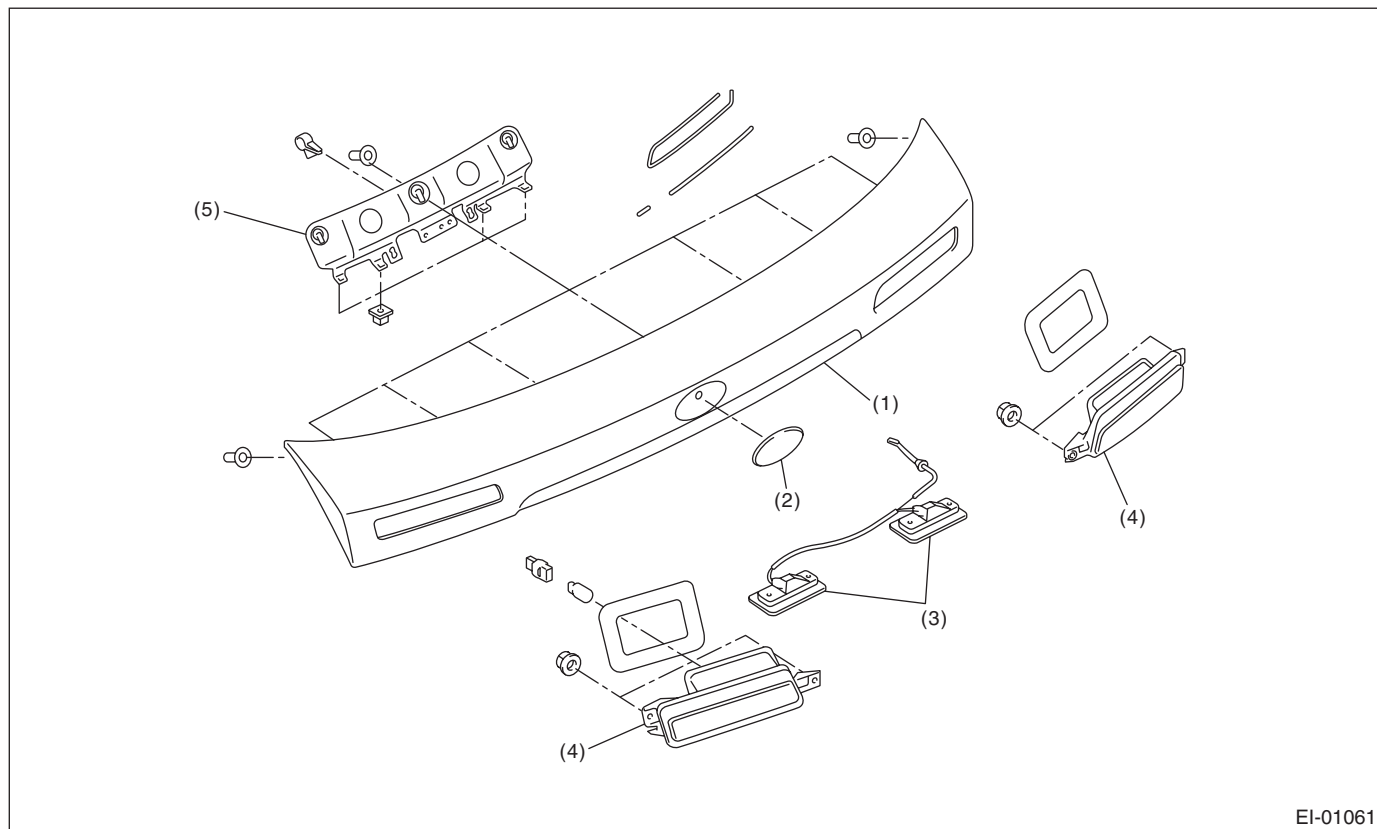


EI-01061

(1) Rear gate garnish
(2) Ornament

(3) License plate light
(4) Back-up light

(5) License plate light bracket

17.DOOR TRIM

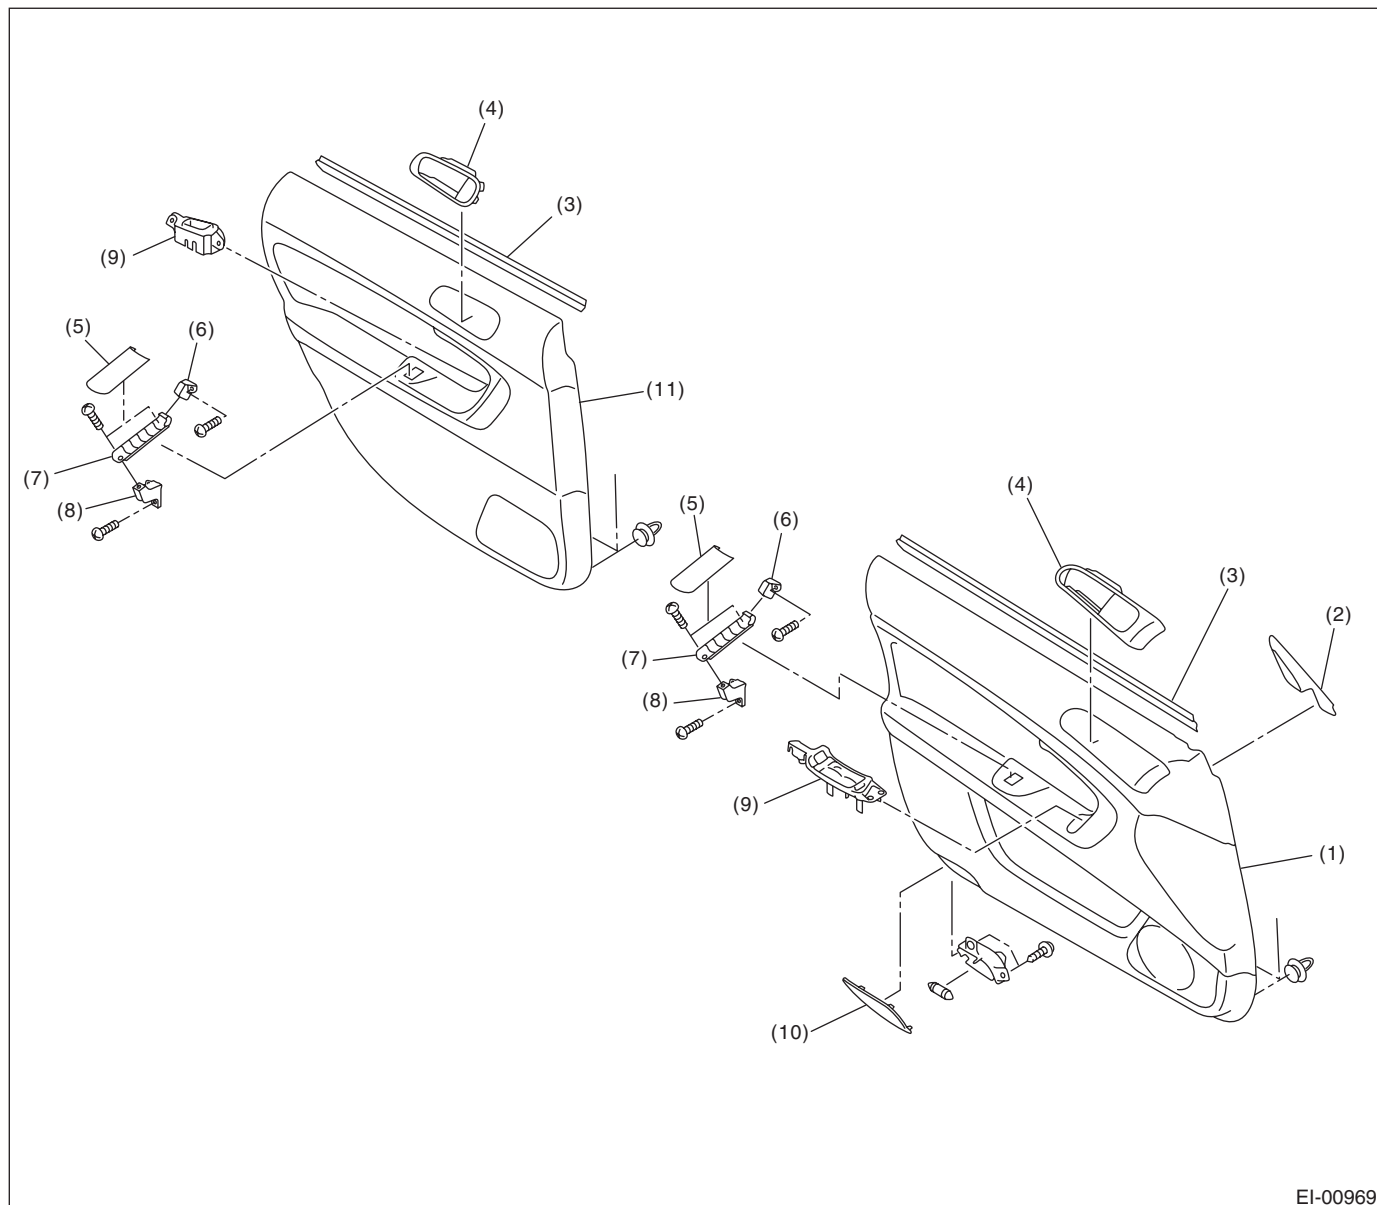


EI-00969

- | | | |
|-------------------------|-----------------------------|-------------------------|
| (1) Front door trim | (5) Door grip | (9) Power window switch |
| (2) Gusset cover | (6) Door grip bracket upper | (10) Step light cover |
| (3) Upper weather strip | (7) Door grip frame | (11) Rear door trim |
| (4) Inner remote cover | (8) Door grip bracket lower | |

General Description

EXTERIOR/INTERIOR TRIM


18.CONSOLE BOX

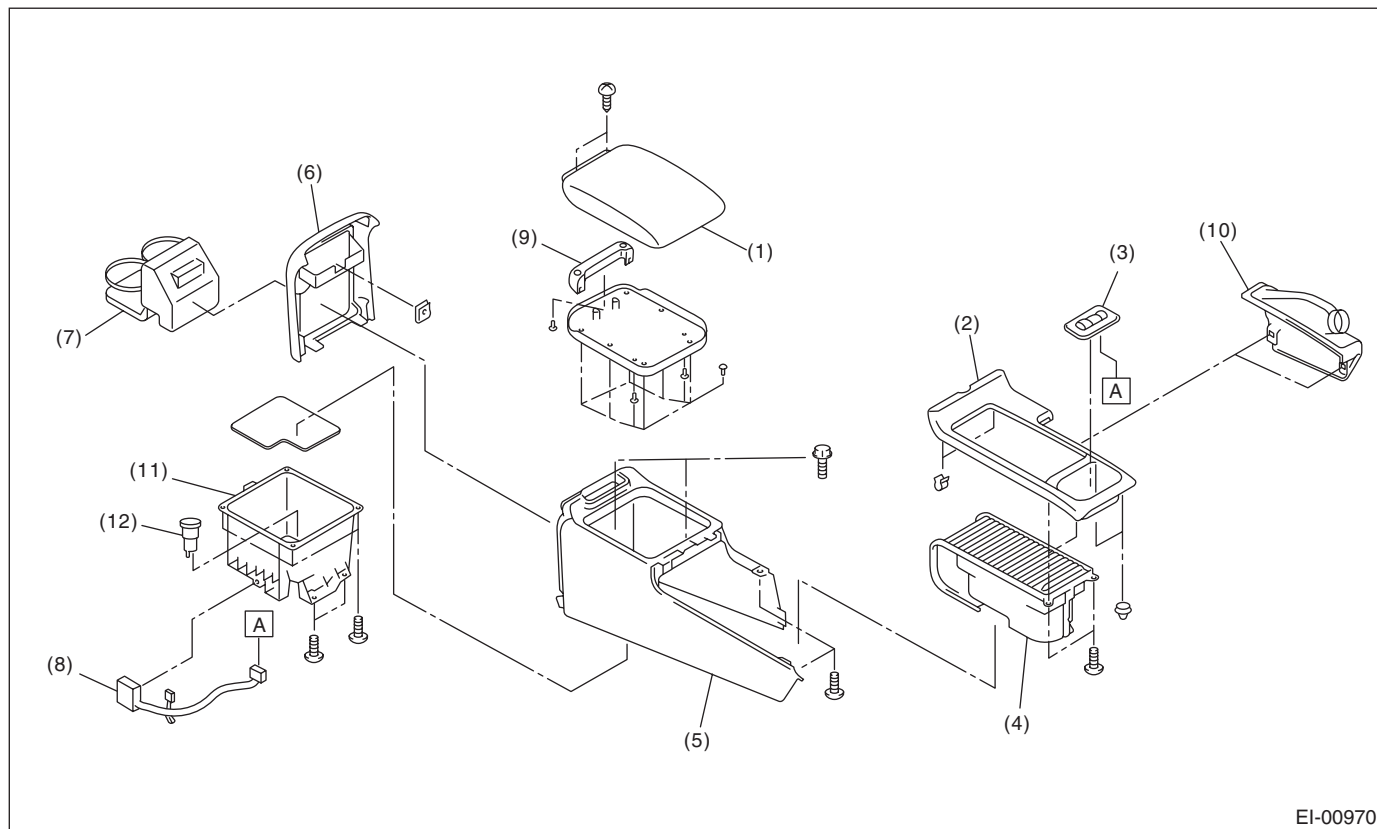

EI-00970

- | | | |
|------------------------|-------------------------|--|
| (1) Upper lid | (6) Rear lid | (10) Parking brake lever boot |
| (2) Console cover | (7) Rear cup holder | (11) Console pocket |
| (3) Seat heater switch | (8) Console box harness | (12) Front accessory power supply socket |
| (4) Front cup holder | (9) Lid hinge | |
| (5) Console box outer | | |

19. INSTRUMENT PANEL

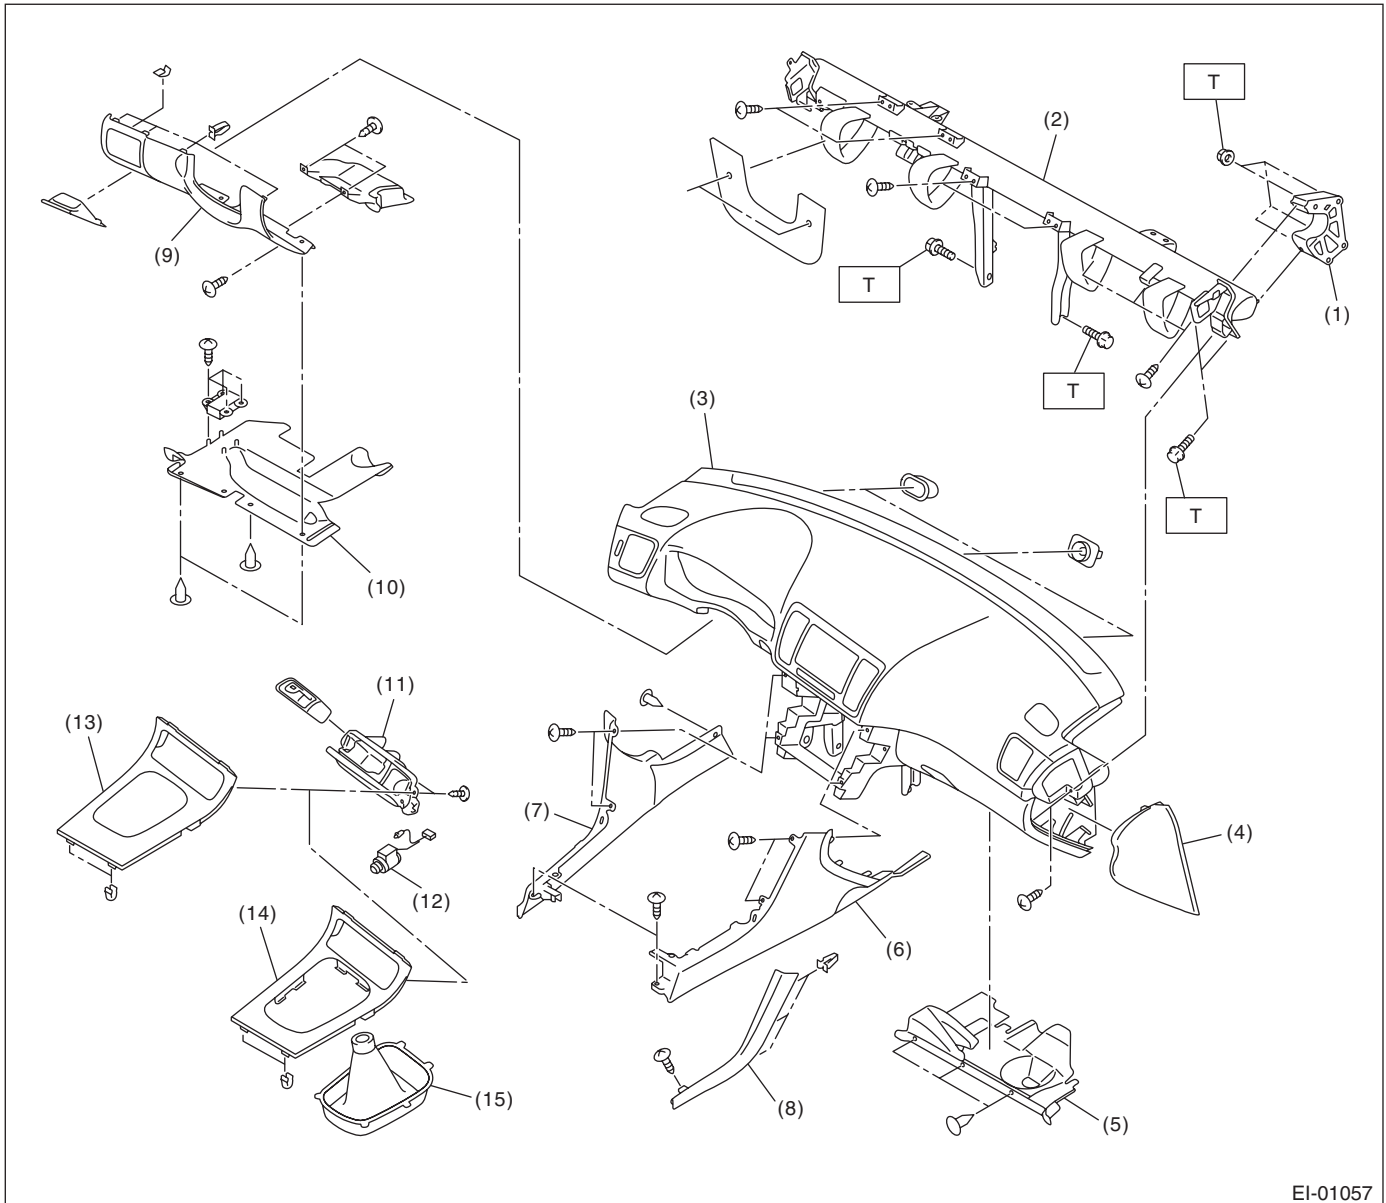

EI-01057

- (1) Steering support beam bracket
- (2) Steering support beam
- (3) Instrument panel pad & frame ASSY
- (4) Instrument panel side cover
- (5) Glove box lower cover
- (6) Console side panel RH
- (7) Console side panel LH

- (8) Console side garnish
- (9) Instrument panel lower cover upper
- (10) Instrument panel lower cover under
- (11) Ash tray holder
- (12) Front accessory power supply socket


- (13) Console front panel (AT model)
- (14) Console front panel (MT model)
- (15) Shift lever boot (MT model)

Tightening torque: N·m (kgf-m, ft-lb)

T: 25 (25.5, 18)

General Description


EXTERIOR/INTERIOR TRIM

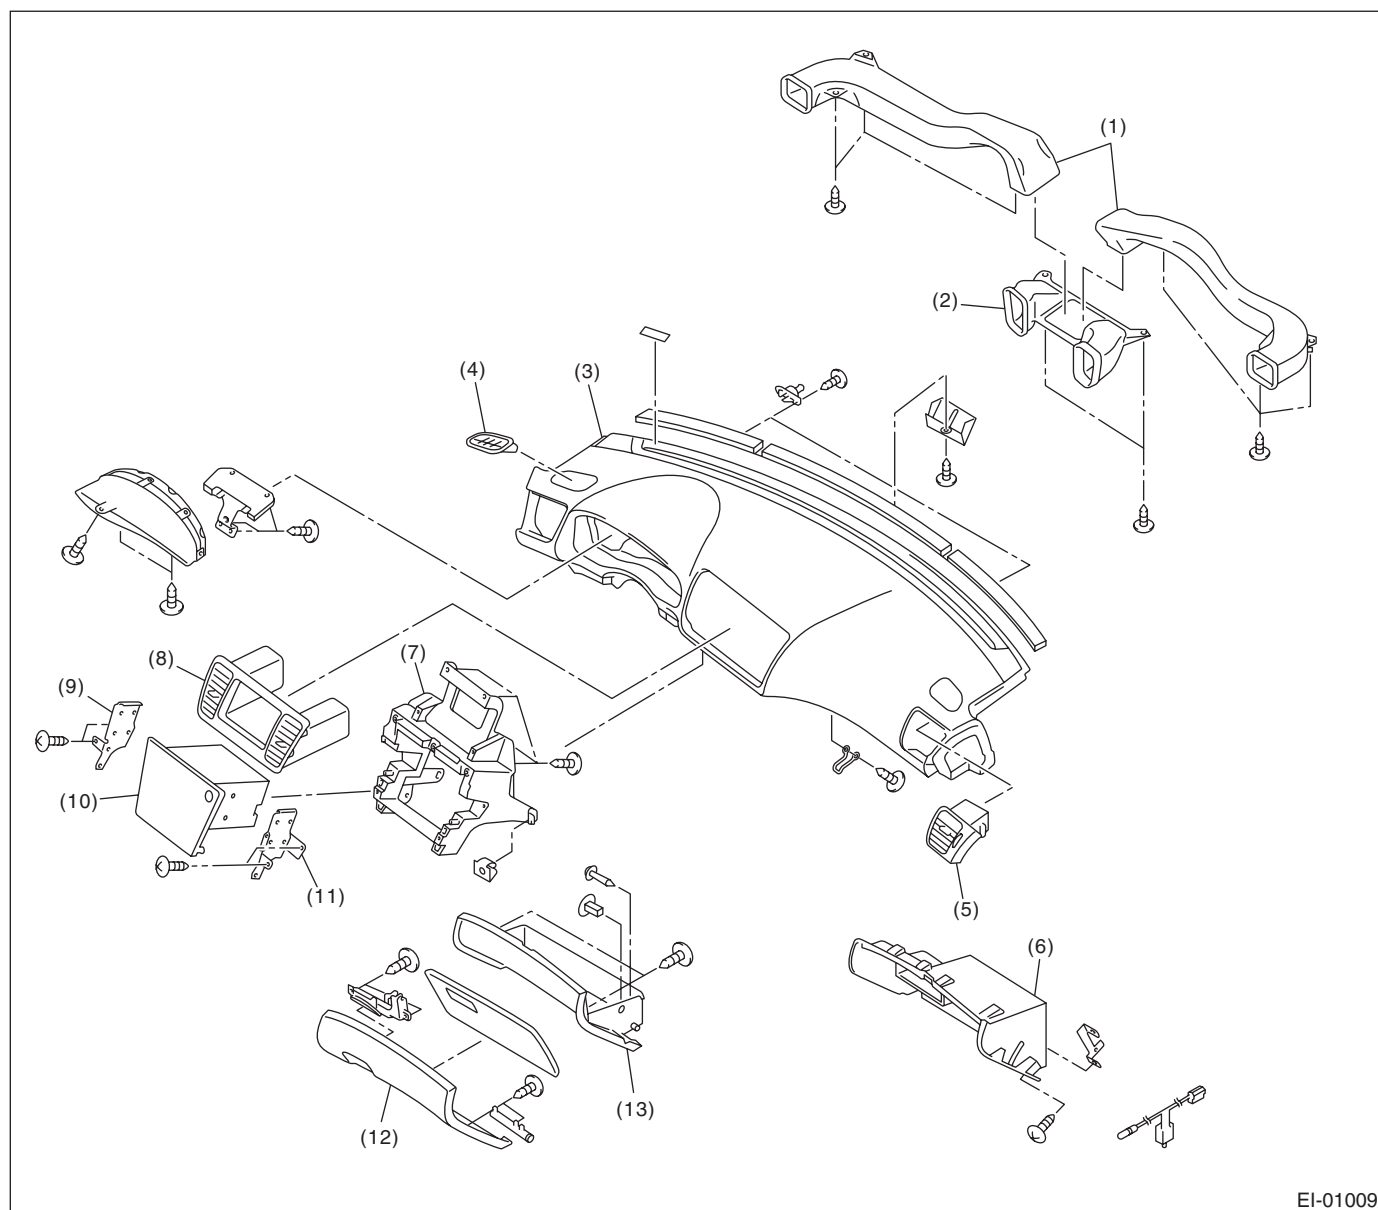

EI-01009

- | | | |
|----------------------------------|----------------------------|-------------------------|
| (1) Air vent side duct | (6) Glove box panel | (10) Center panel |
| (2) Air vent center duct | (7) Center console frame | (11) Audio bracket (RH) |
| (3) Instrument panel pad & frame | (8) Air vent center grille | (12) Glove box lid |
| (4) Air vent defroster grille | (9) Audio bracket (LH) | (13) Glove box |
| (5) Air vent side grille | | |

20.INNER TRIM (SEDAN MODEL)

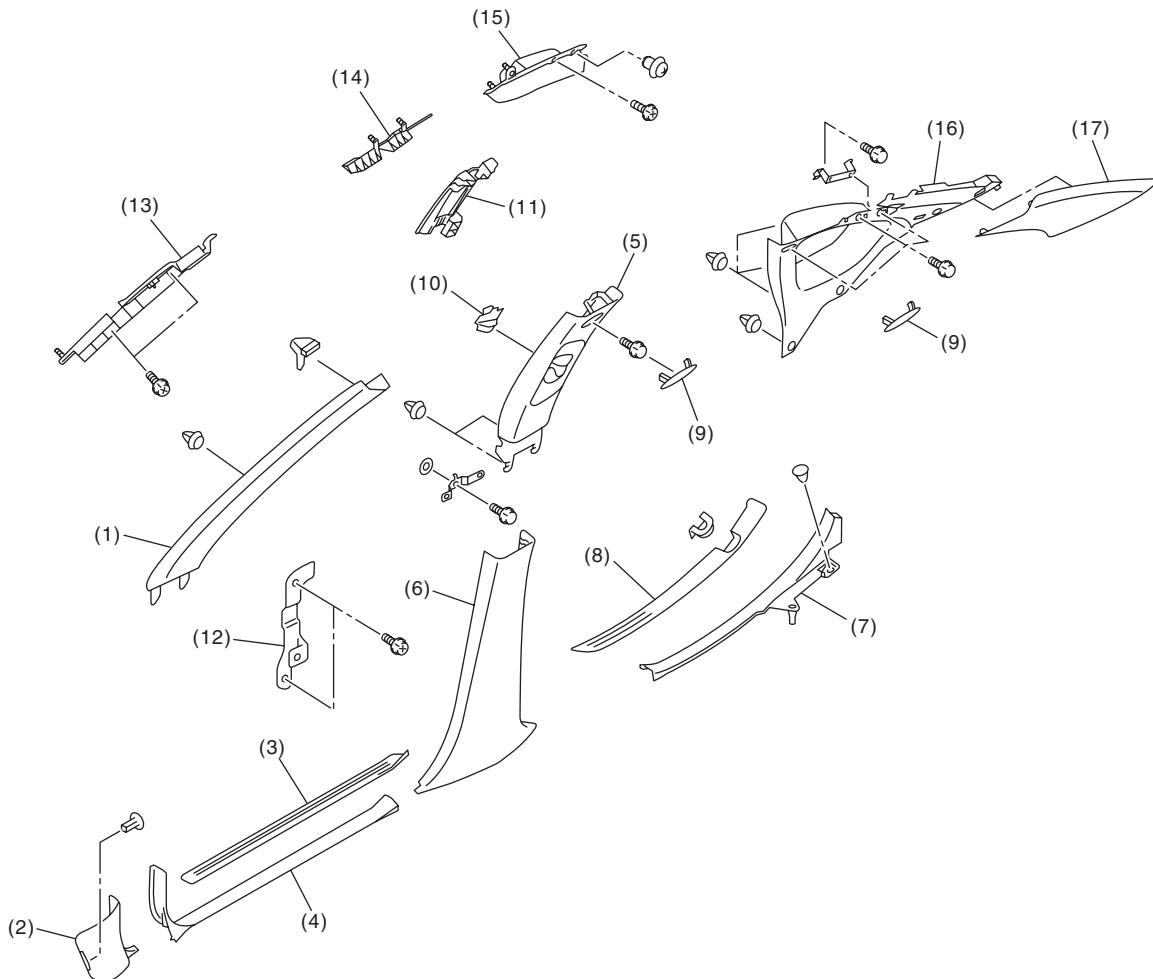


EI-01440

- | | | |
|-------------------------------|--|--|
| (1) Front pillar upper trim | (7) Rear inside scuff plate | (12) Center pillar inner protector lower |
| (2) Front pillar lower trim | (8) Rear outside scuff plate | (13) Curtain airbag guide front |
| (3) Front outside scuff plate | (9) Bolt cover | (14) Curtain airbag guide center |
| (4) Front inside scuff plate | (10) Seat belt shoulder anchor adjuster button | (15) Curtain airbag guide rear |
| (5) Center pillar upper trim | (11) Center pillar inner protector upper | (16) Rear quarter trim front |
| (6) Center pillar lower trim | | (17) Rear quarter trim rear |

General Description

EXTERIOR/INTERIOR TRIM


21.INNER TRIM (WAGON MODEL)

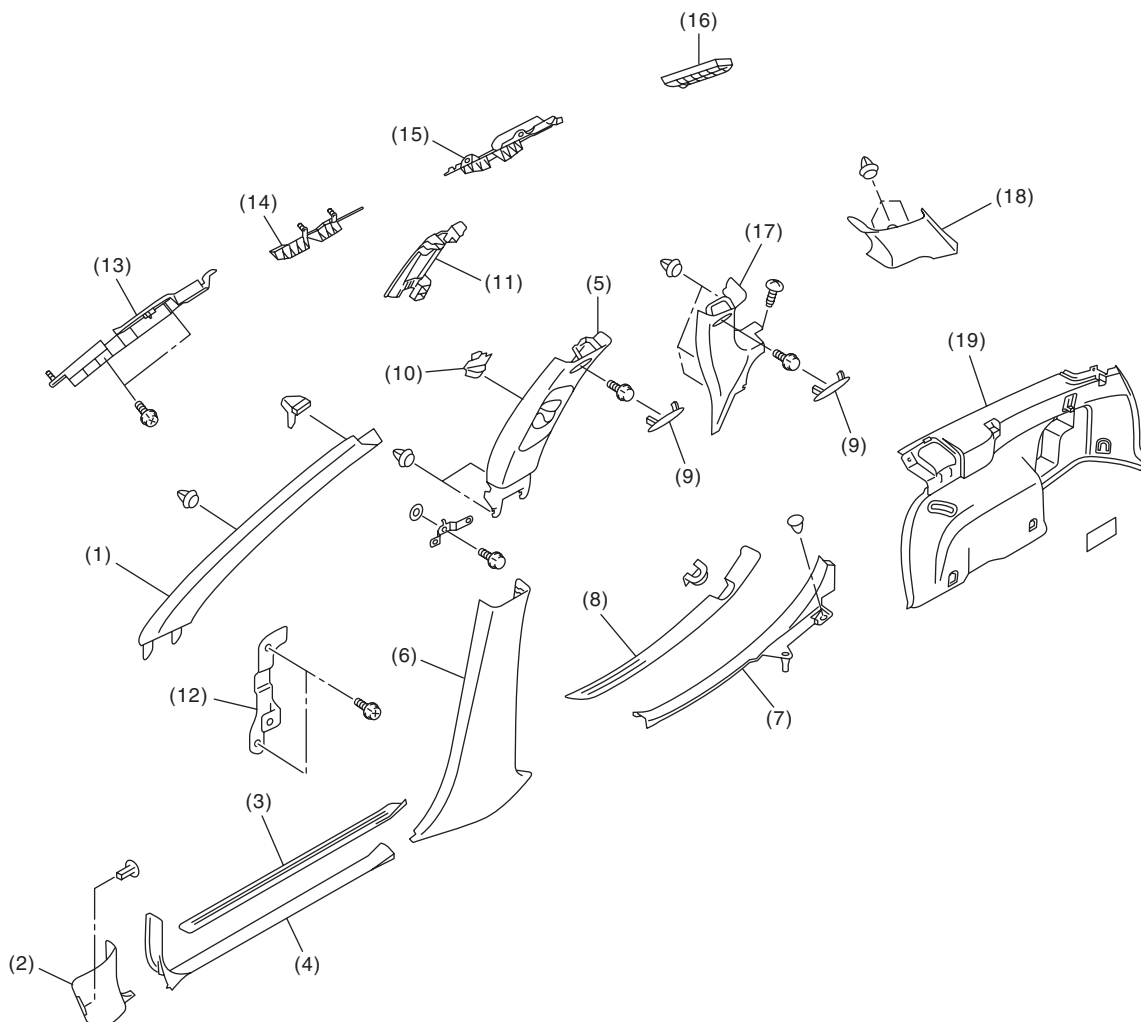

EI-01441

- | | | |
|-------------------------------|--|--------------------------------------|
| (1) Front pillar upper trim | (8) Rear outside scuff plate | (14) Curtain airbag guide center |
| (2) Front pillar lower trim | (9) Bolt cover | (15) Curtain airbag guide rear |
| (3) Front outside scuff plate | (10) Seat belt shoulder anchor adjuster button | (16) Curtain airbag module protector |
| (4) Front inside scuff plate | (11) Center pillar inner protector upper | (17) Rear quarter front pillar trim |
| (5) Center pillar upper trim | (12) Center pillar inner protector lower | (18) Rear quarter rear pillar trim |
| (6) Center pillar lower trim | (13) Curtain airbag guide front | (19) Rear quarter lower trim |
| (7) Rear inside scuff plate | | |

22.REAR GATE TRIM

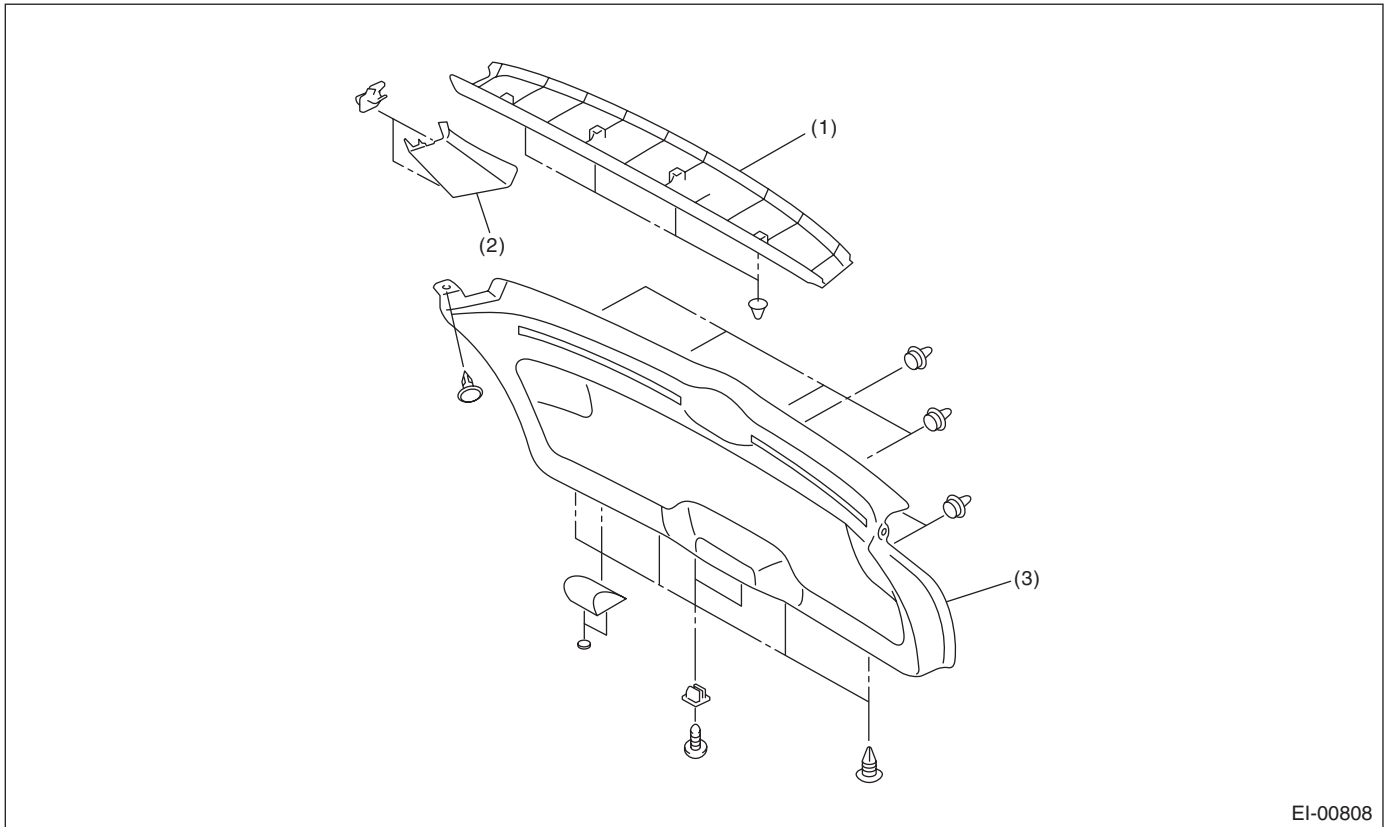


EI-00808

(1) Rear gate panel upper trim

(2) Rear gate panel pillar trim

(3) Rear gate panel lower trim

23.ROOF TRIM (SEDAN MODEL)

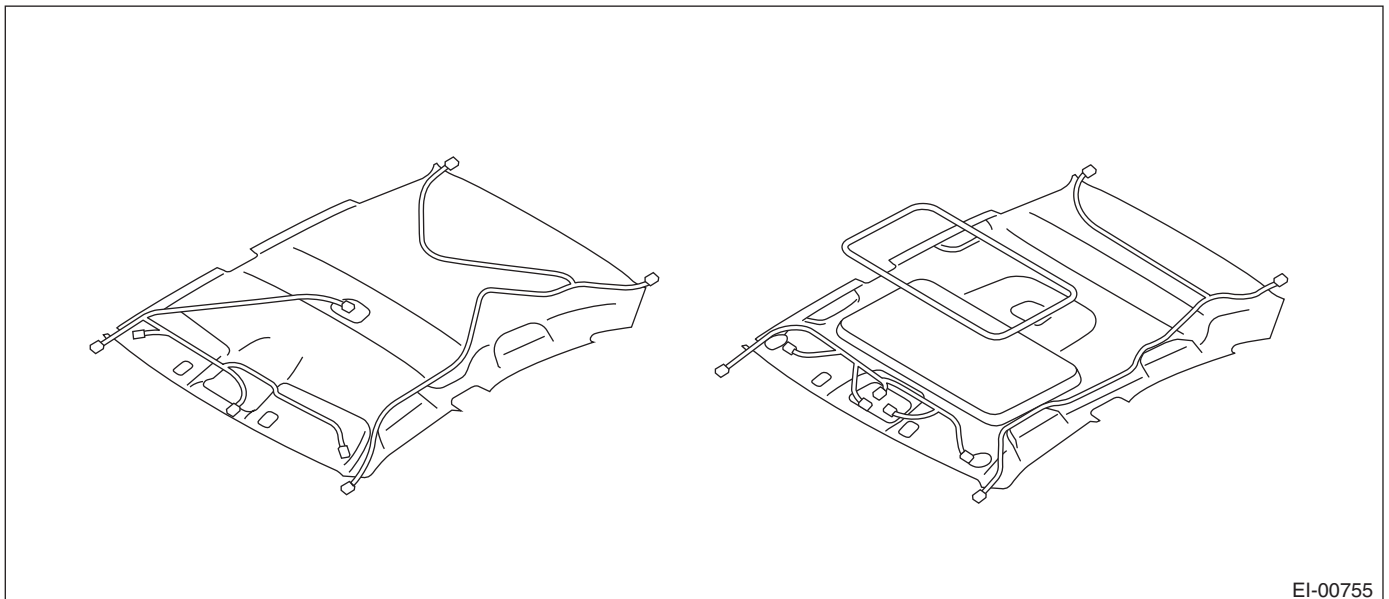


EI-00755


General Description

EXTERIOR/INTERIOR TRIM

24.ROOF TRIM (WAGON MODEL)

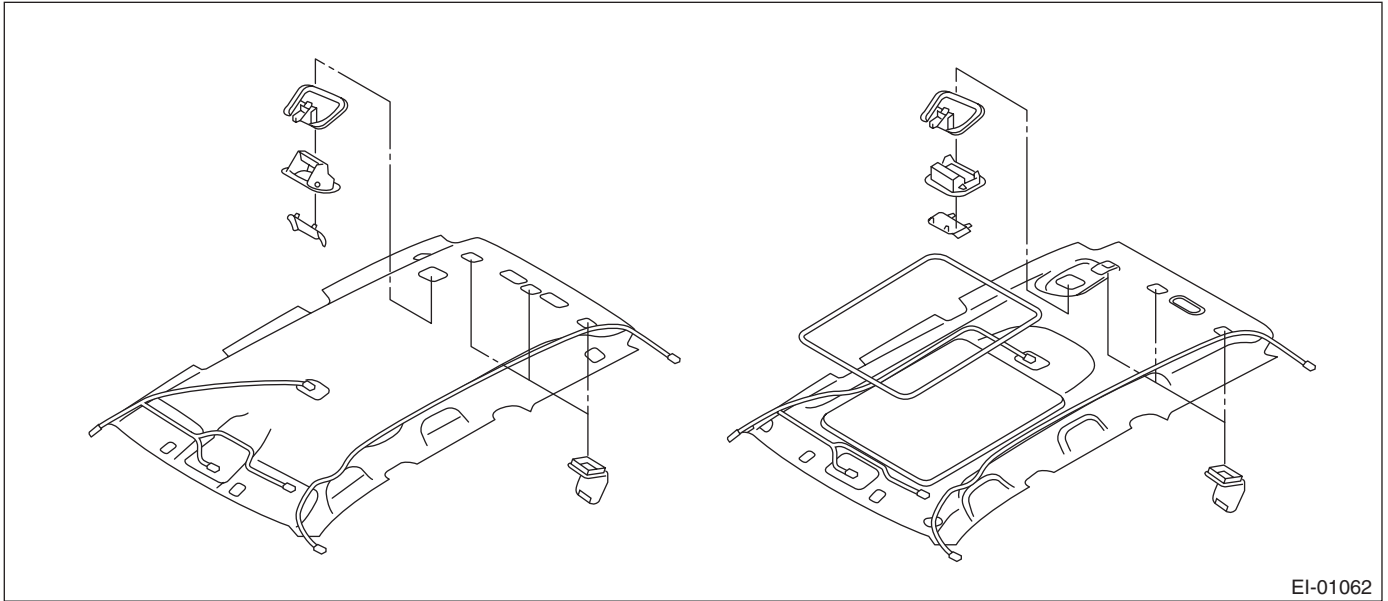

25.TRUNK ROOM TRIM

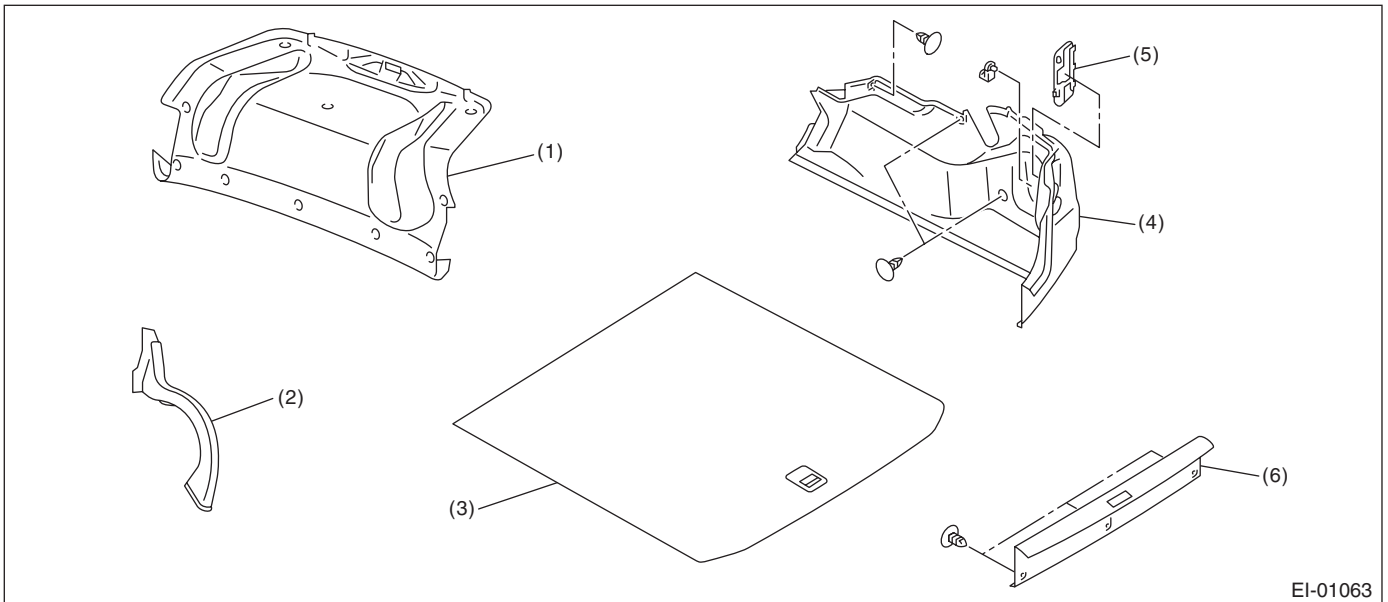


- (1) Trunk lid trim
- (2) Trunk lid arm cover

- (3) Trunk room mat
- (4) Trunk side trim

- (5) Combination light cover
- (6) Trunk room end cover

26.LUGGAGE FLOOR MAT

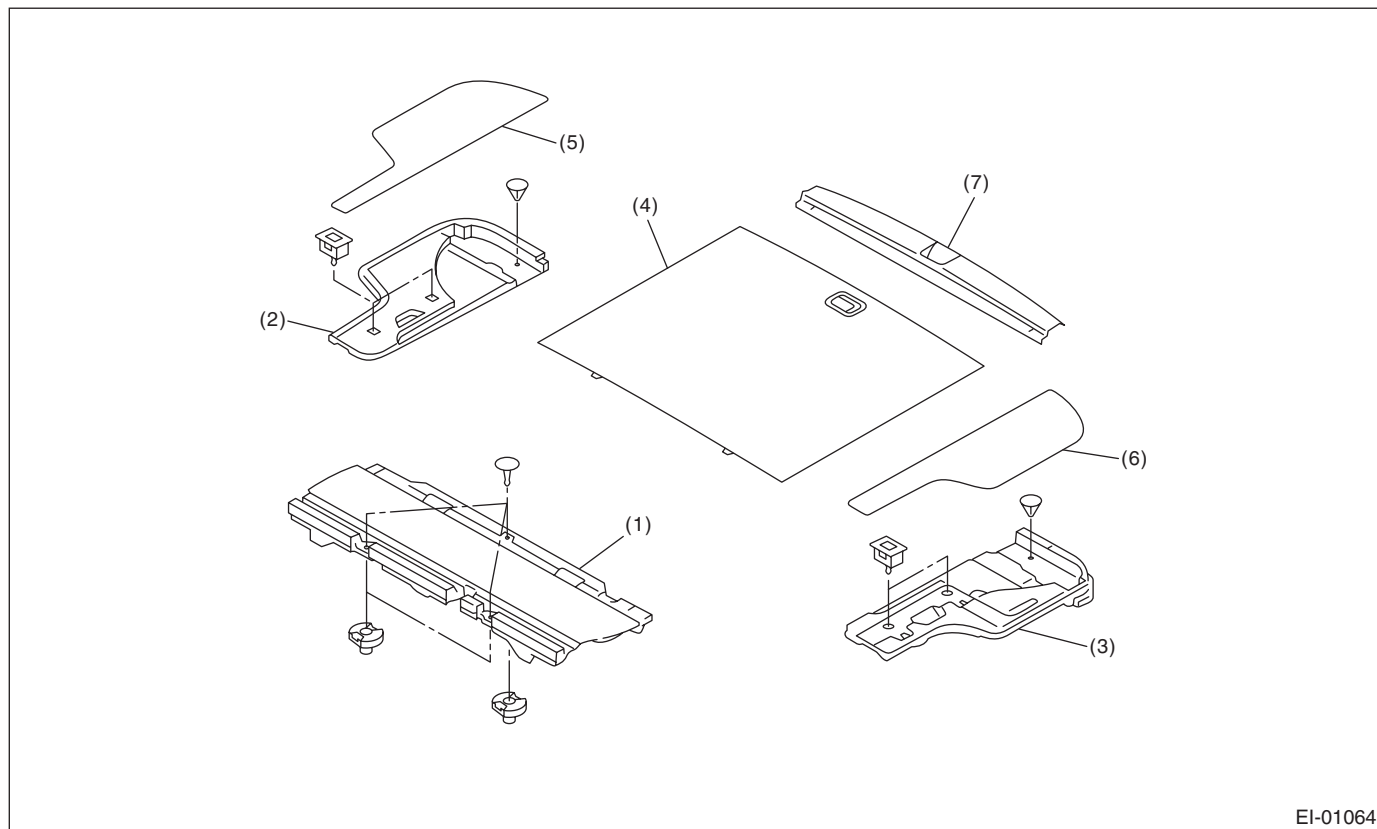

EI-01064

- (1) Front floor mat
- (2) Floor box (RH)
- (3) Floor box (LH)


- (4) Center floor mat
- (5) Side floor mat (RH)

- (6) Side floor mat (LH)
- (7) Luggage floor end cover

General Description

EXTERIOR/INTERIOR TRIM

27.ROOM INNER PARTS

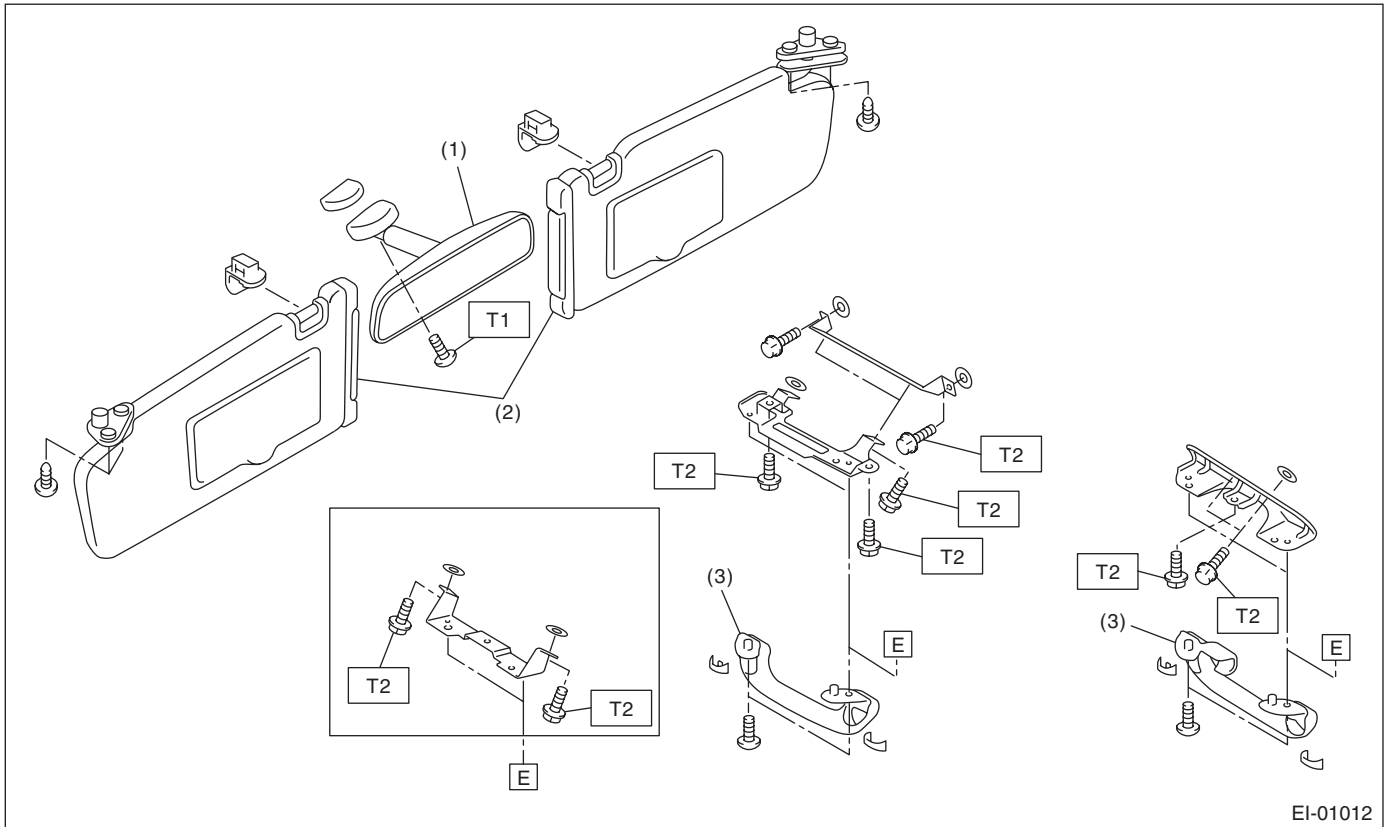

- (1) Room mirror
(2) Sun visor


- (3) Assist grip

Tightening torque: N·m (kgf·m, ft·lb)

T1: 2.0 (0.2, 1.48)

T2: 7.5 (0.77, 5.53)

28.HEAT SHIELD COVER

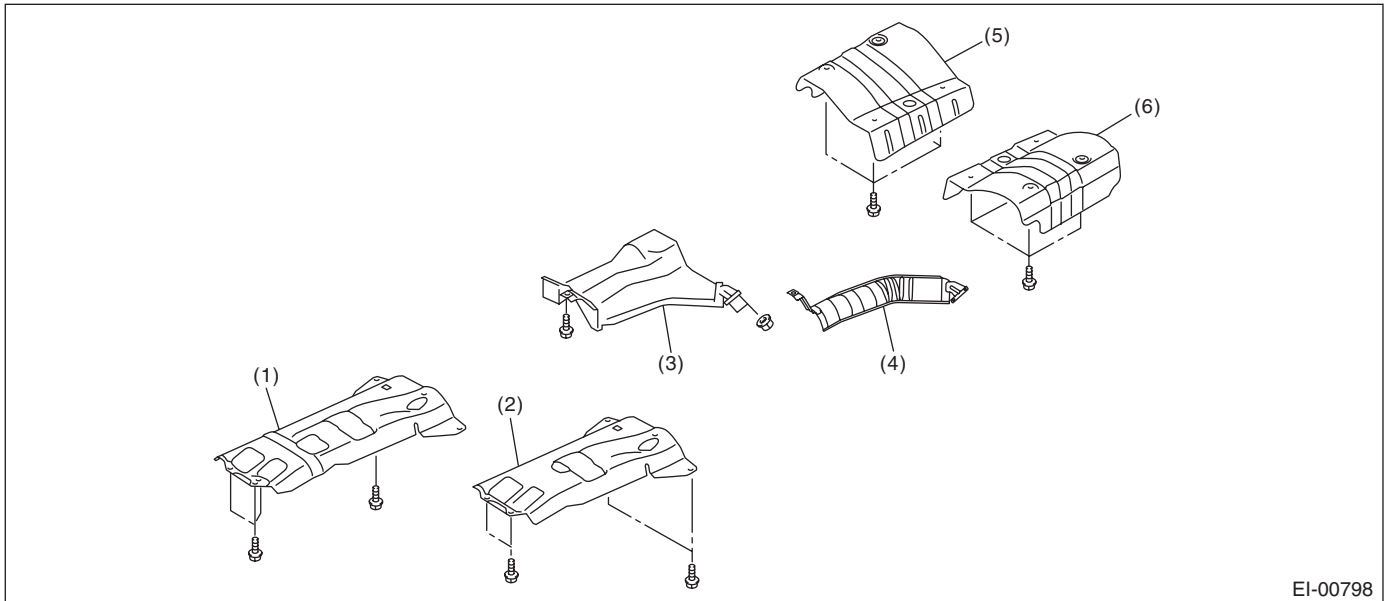

EI-00798

- | | | |
|--|--|-------------------------------|
| (1) Front heat shield cover (5AT model) | (3) Center heat shield cover (Turbo model) | (5) Rear heat shield cover RH |
| (2) Front heat shield cover (4AT model and MT model) | (4) Center heat shield cover (Non-turbo model) | (6) Rear heat shield cover LH |


B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.


2. Front Grille

A: REMOVAL

- 1) Open the front hood.
- 2) Remove push clips (A), front grille clips (B) and bolts (C) from each side of the front grille.

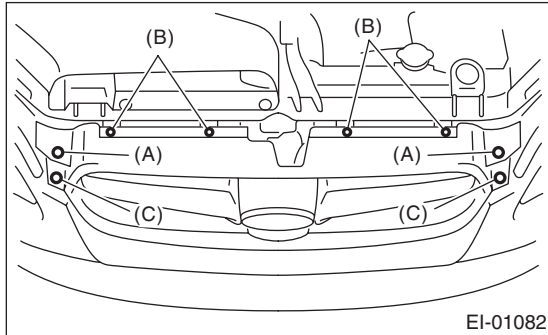

- 3) Pull the lower side of the front grille forward, remove hooks (A), and then remove the front grille from vehicle body.

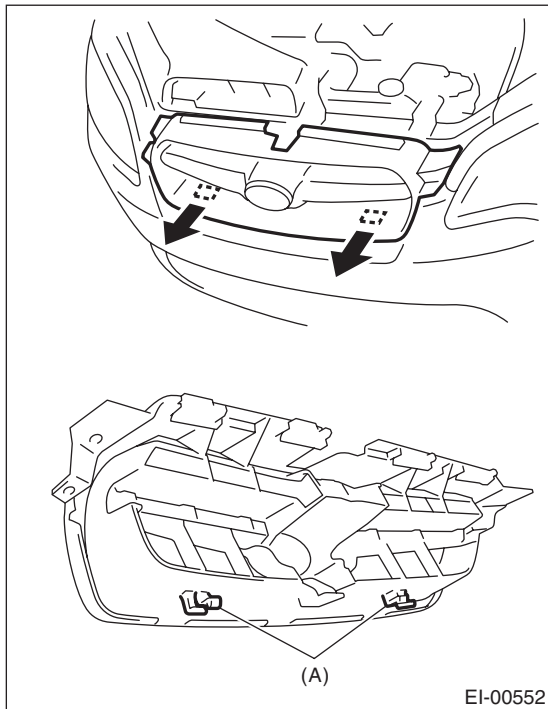


B: INSTALLATION

Install in the reverse order of removal.


3. Front Hood Grille

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the front hood insulator. <Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>
- 3) Remove screws (A) and clip (B), and remove the front hood duct.

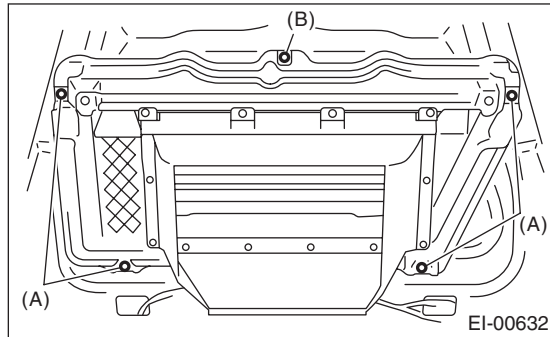


- 4) Loosen the nuts (A), remove the clip (B), and then remove the front hood grille.

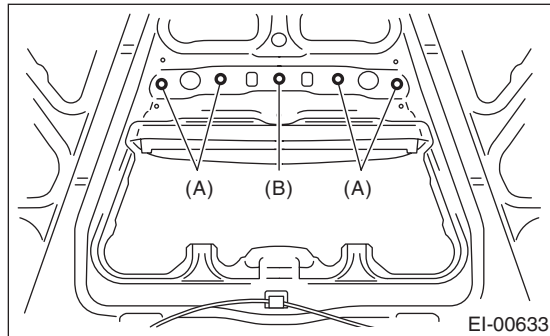

B: INSTALLATION


- 1) Fit the clip (B) of the front hood grille, and install the front hood grille using nuts (A).

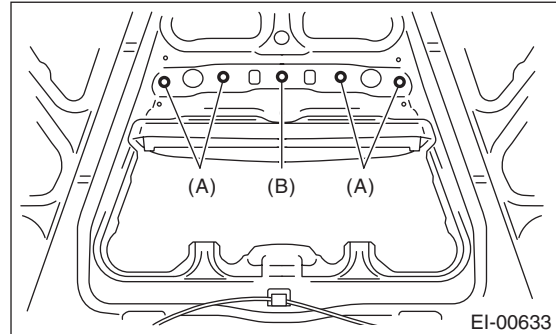


Tightening torque:

4.5 N·m (0.46 kgf-m, 3.32 ft-lb)

- 2) Insert the hooks (B) of the front hood duct into holes (A) of the front hood.

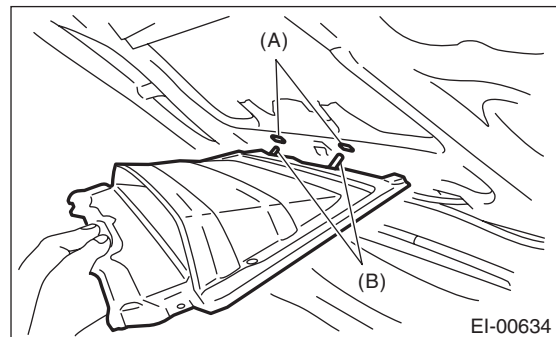

- 3) Install the front hood duct with screws (A) and clip (B).

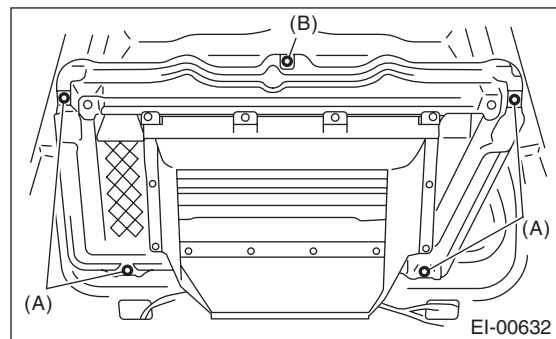


4. Front Under Cover


A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Remove clips (A) and bolts (B) in front fender, then remove the front under cover.

- Large type

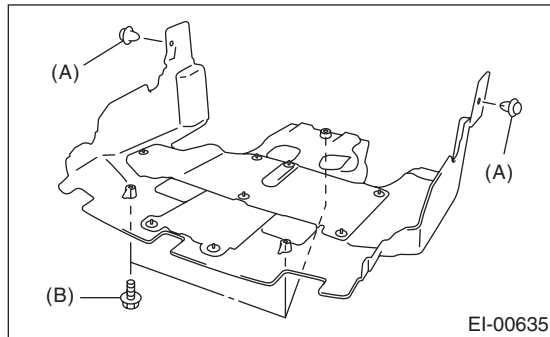

- Small type

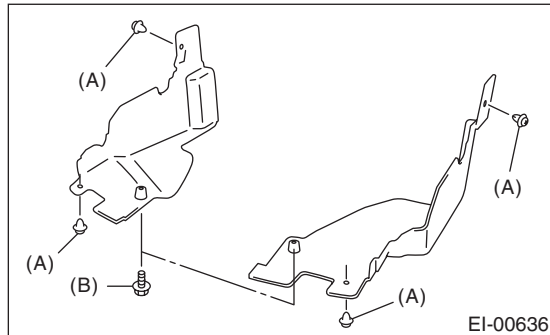

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

14 N·m (1.42 kgf-m, 10.3 ft-lb)

5. Floor Under Protector


A: REMOVAL

1) Lift-up the vehicle.

NOTE:

A plate type lift cannot be used.

2) Remove the push turn clips (A) and bolts (B), and remove the floor under protector.

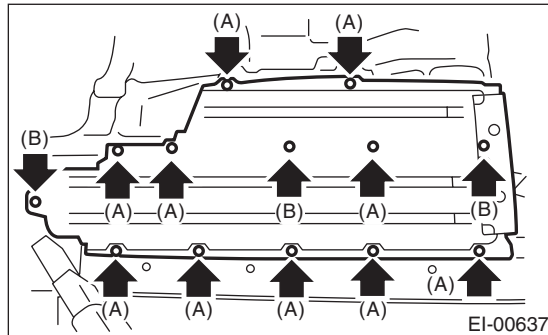


B: INSTALLATION

Install in the reverse order of removal.

6. Fuel Tank Protector

A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Remove the bolts (A) and plastic nuts (B), and then remove the fuel tank protector.

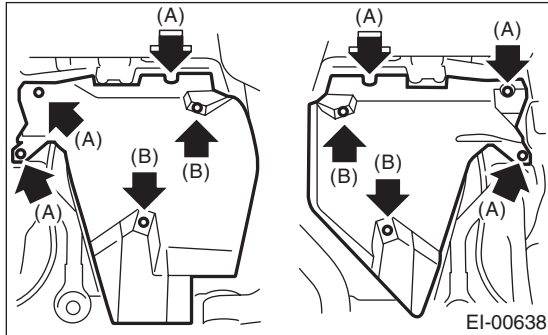

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Bolt


17.5 N·m (1.78 kgf-m, 12.9 ft-lb)

7. Mud Guard

A: REMOVAL


1. FRONT MUD GUARD

- 1) Jack-up the vehicle.
- 2) Remove the front wheels.
- 3) Loosen the screws and clips to remove mud guard.

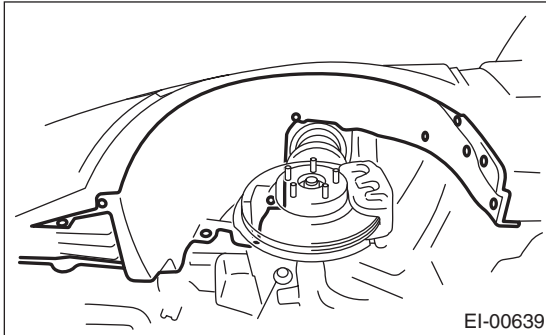

2. REAR MUD GUARD

- 1) Jack-up the vehicle.
- 2) Remove the rear wheels.
- 3) Loosen the screws and clips to remove the mud guard.

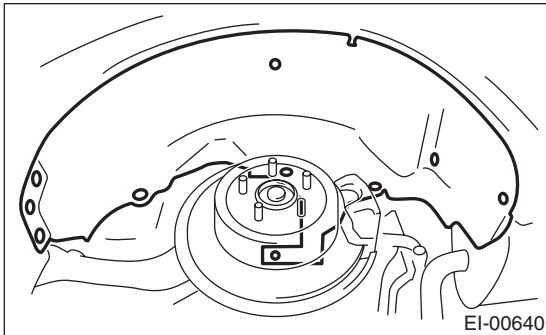

B: INSTALLATION


Install in the reverse order of removal.

8. Front Bumper


A: REMOVAL

1. FRONT BUMPER FACE

- 1) Disconnect the ground cable from battery.
- 2) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 3) Turn over the front mud guard, and remove the clips connecting the fender and bumper.

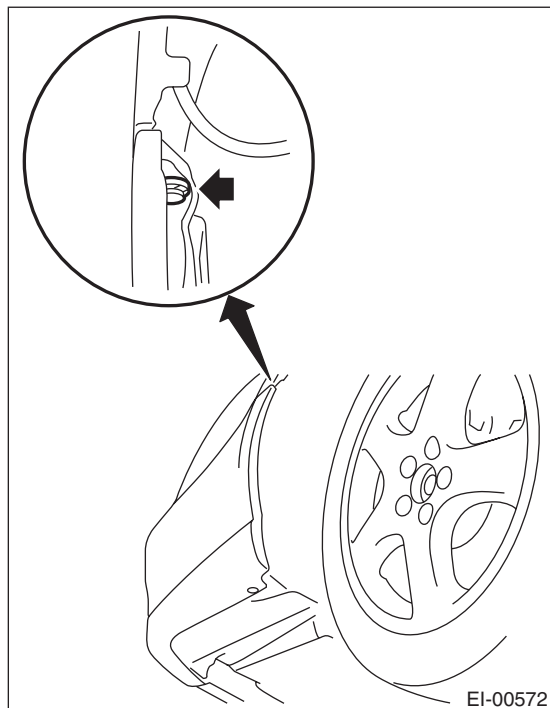


- 4) Remove the clips at the lower side of bumper.

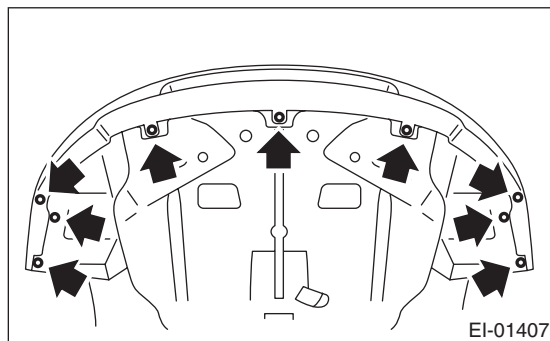


- 5) Disconnect the fog light connector. (Model with fog light)
- 6) Remove the bumper from the vehicle body.
- 7) Remove the fog light from bumper face. <Ref. to LI-17, REMOVAL, Front Fog Light Assembly.>

2. FRONT BUMPER BEAM ASSEMBLY

- 1) Disconnect the ground cable from battery.
- 2) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 3) Remove the front bumper face. <Ref. to EI-30, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the energy absorber foam from bumper beam.
- 5) Remove the upper bracket.

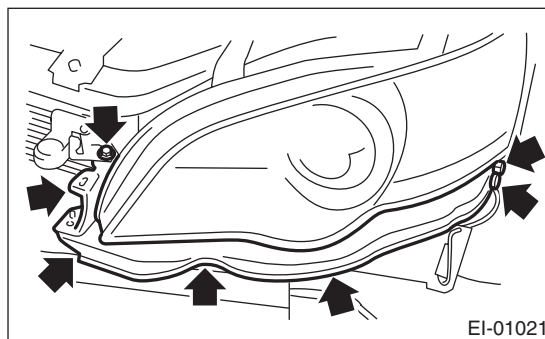


- 6) Remove the bolts, and remove the bumper beam assembly from vehicle body.

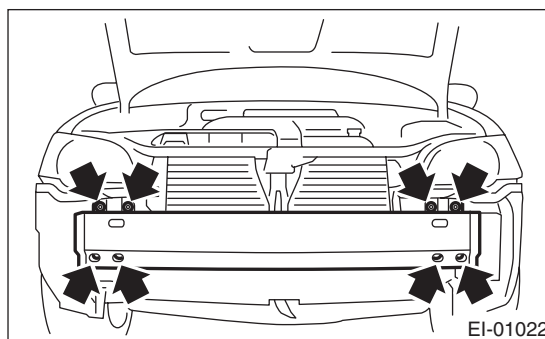

NOTE:


After all bolts are removed, raise the whole bumper beam a little to remove it from vehicle body.

- 7) Remove the bolts and nuts, and disassemble the bumper beam.

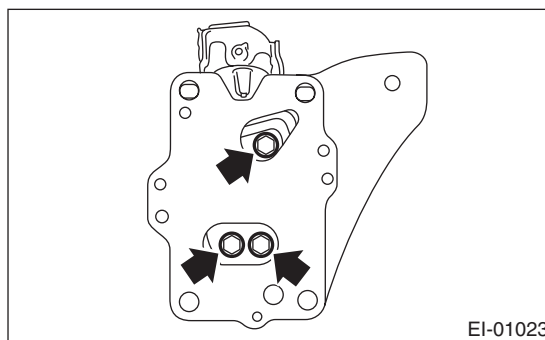

- 8) Remove the under cover.


- 9) Remove the bolts and clips, and remove the radiator guide.

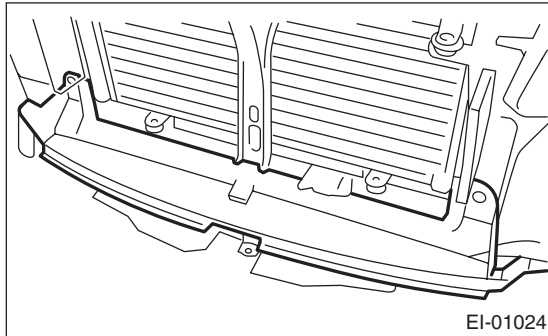

B: INSTALLATION

1. FRONT BUMPER FACE

- 1) Install in the reverse order of removal.
- 2) Fit the slider (A) to the guide plate (B) securely.

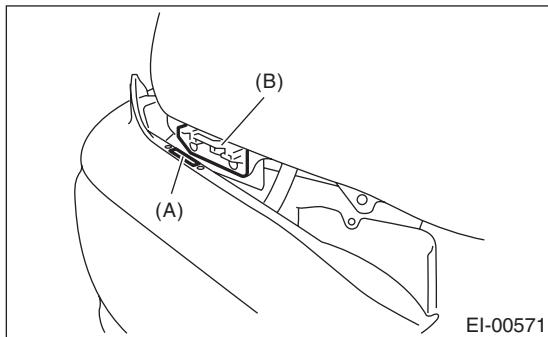

2. FRONT BUMPER BEAM ASSEMBLY

Install in the reverse order of removal.

Tightening torque:


Refer to “COMPONENT” of “General Description”. <Ref. to EI-5, FRONT BUMPER, COMPONENT, General Description.>

Front Bumper

EXTERIOR/INTERIOR TRIM

C: REPAIR

1. COATING METHOD FOR PP BUMPER

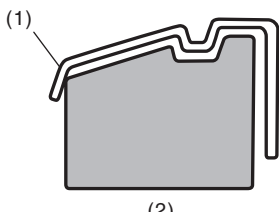Process No.	Process name	Job contents	
1	Bumper installation	Place the bumper on a paint worktable as required. Use the paint worktable conforming to inner shape of bumper if possible.	 (1) Bumper (2) Set bumper section EI-00234
2	Masking	Mask specified part (black base) with masking tape. Use masking tape for PP (example, Nichiban No. 533, etc.).	
3	Degreasing/cleaning	Clean all parts to be painted with white gasoline, normal alcohol, etc. to remove dirt, oil, fat, etc.	
4	Primer paint	Apply primer to all parts to be painted, using spray gun. Use primer (clear).	
5	Drying	Dry at normal temperature [10 — 15 min. at 20°C (68°F)]. In half-dried condition, PP primer paint is dissolved by solvent, e.g. thinner, etc. Therefore, if dust or dirt must be removed, use ordinary alcohol etc.	
6	Top coat paint (I)	Non-colored	Metallic paint
		Use section (block) paint for top coat. • Paint to be used (for each color): Solid paint Hardener PB Thinner T-301 • Mixture ratio: Main agent : Hardener = 4 : 1 • Viscosity: 10 — 13 sec./20°C (68°F) • Film thickness: 35 — 45 μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi)	Use section (block) paint for top coat. • Paint to be used (for each color): Metallic paint Hardener PB Thinner T-306 • Mixture ratio: Main agent : Hardener = 10 : 1 • Viscosity: 10 — 13 sec./20°C (68°F) • Film thickness: 15 — 20 μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi)
7	Drying	Not required.	Dry at normal temperature [at least 10 min. at 20°C (68°F)]. In half-dried condition, avoid dust, dirt.
8	Top coat paint (II)	Not required.	Apply a clear coat to parts with top coat paint (I), three times at 5 — 7 minutes intervals. • Paint to be used: Metallic paint Hardener PB Thinner T-301 • Mixture ratio: Clear coat : Hardener = 6 : 1 • Viscosity: 14 — 16 sec./20°C (68°F) • Film thickness: 25 — 30 μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi)
9	Drying	60°C (140°F), 60 min. or 80°C (176°F), 30 min. If higher than 80°C (176°F), PP may become be deformed. Keep maximum temperature below 80°C (176°F).	
10	Inspection	Check paint.	
11	Removal of masking	Remove the masking tape applied in procedure 2.	

2. REPAIR INSTRUCTIONS FOR COLORED PP BUMPER

NOTE:

All PP bumpers are provided with a grained surface, and if the surface is damaged, it cannot normally be restored to its former condition. Damages limited to the shallow scratches that cause only a change in the luster of the base material or coating, can be almost fully restored. Before repairing a damaged area, explain this point to the customer and obtain an understanding about the matter. Repair methods are outlined below, based on a classification of the extent of damage.

1) Minor damage causing only a change in the luster of the bumper due to a light touch
Almost restorable.

Process No.	Process name	Job contents	
1	Cleaning	Clean the area to be repaired using water.	
2	Sanding	Grind the repairing area with #500 sand paper in a “feathering” motion.	
3	Finish	Resin section	Coated section
		Repeatedly apply wax to the affected area using soft cloth (such as flannel). Recommended wax: NITTO KASEI Soft 99 TIRE WAX BLACK, or equivalent.	Perform either the same process as for the resin section or process No. 18 and subsequent in the 3) section, depending on the degree and nature of damage.
		Polish the waxed area with clean cloth after 5 — 10 minutes.	

2) Deep damage caused by scratching with fences etc.

A dent cannot be repaired but a whitened or swelled part can be removed.

Process No.	Process name	Job contents	
1	Cleaning	Clean the damaged area with water.	
2	Removal of damaged area	Cut off protruding area, if any, due to collision, using a putty knife.	
3	Sanding	Grind the affected area with #100 — #500 sand paper.	
4	Finish	Resin section	Coated section
		Same as step 3 in the “1)” section.	Perform step 12 and subsequent operations in the “3)” section.




Front Bumper

EXTERIOR/INTERIOR TRIM

3) Deep damage such as a break or hole that requires filling


Much of the peripheral grained surface must be sacrificed for repair. The degree of restoration is not really worth the expense. (The surface, however, will become almost flush with adjacent areas.)

Recommended repair kit: PP Part Repair Kit (NRM)

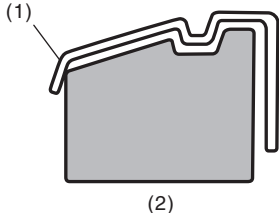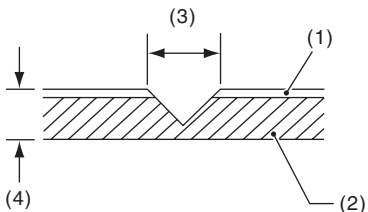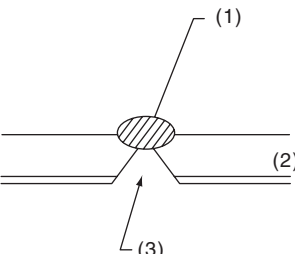Process No.	Process name	Job contents	
1	Bumper removal	Remove the bumper as required.	
2	Removal of parts	Remove the parts built into bumper as required.	
3	Bumper placement	Place the bumper on a paint worktable as required. It is recommended to use the paint worktable conforming to internal shape of bumper.	 (1) Bumper (2) Set bumper section EI-00234
4	Surface preparation	Remove dust, oil, etc. from areas to be repaired and surrounding areas, using a suitable solvent (NRM No. 900 Precleno, white gasoline, or alcohol, etc.).	
5	Cutting	If the damage is a crack or a hole, cut a guide slit of 20 to 30 mm (0.79 to 1.18 in) in length along the crack or hole up to the bumper base surface. Next, use a knife or grinder to carve a V-shaped groove in the area for repair.	 (1) Paint surface (2) PP base surface (3) 20 — 30 mm (0.79 — 1.18 in) (4) 3 mm (0.12 in) EI-00235
6	Sanding (I)	Grind beveled surface with sand paper (#40 — #60) to smooth finish.	
7	Cleaning	Clean the sanded surface with the same solvent as used in Procedure 4.	
8	Temporary welding	Grind the side just opposite the beveled area with sand paper (#40 — #60) and clean using a solvent. Temporarily spot-weld the side, using PP welding rod and heater gun.	 (1) Welded point (Use heater gun and PP welding rod) (2) PP base surface (3) Beveled section NOTE: - Do not melt welding rod until it flows out. This results in reduced strength. - Leave the welded spot unattended until it cools completely. EI-00236

Front Bumper

EXTERIOR/INTERIOR TRIM

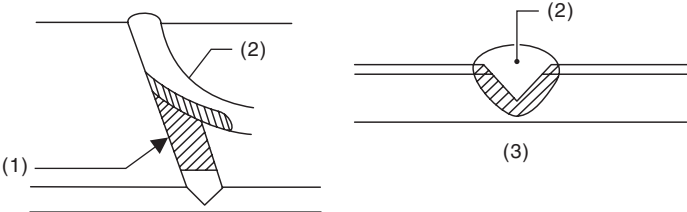Process No.	Process name	Job contents
9	Welding	Using a heater gun and PP welding rod, weld the beveled spot while melting both the rod and damaged area.
		 (1) Welding rod (2) Melt hatched area (3) Section NOTE: • Melt the sections indicated by hatched area. • Do not melt the welding rod until it flows out, in order to provide strength. • Always keep the heater gun 1 to 2 cm (0.4 to 0.8 in) away from the welding spot. • Leave the welded spot unattended until it cools completely. EI-00237
10	Sanding (II)	Remove excess part of weld with a putty knife. If a drill or disc wheel is used instead of the knife, operate it at a rate lower than 1,500 rpm and grind the excess part little by little. A higher rpm will cause the PP substrate to melt from the heat.
		 EI-00042 Sand the welded spot smooth with #240 sand paper.
11	Masking	Mask the black substrate section using masking tape. Recommended masking tape: Nichiban No. 533 or equivalent
12	Cleaning/degreasing	Completely clean the entire coated area, using solvent similar to that used in Procedure 4.
13	Primer coating	Apply a coat of primer to the repaired surface and its surrounding areas. Mask these areas, if necessary. Recommended primer: Mp/ 364 PP Primer NOTE: Be sure to apply a coat of primer using a spray gun at a pressure of 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi).
14	Leave unattended	Leave the repaired area unattended at 20°C (68°F) for 10 to 15 minutes until primer is half-dry. NOTE: If dirt or dust comes in contact with the coated area, wipe it off with a cloth dampened with alcohol. (Do not use thinner since the coated area tends to melt.)
15	Primer surfacer coating	Apply primer surfacer to the repaired area two or three times at an interval of 3 — 5 minutes. • Recommended surfacer: UPS 300 Flex Primer No. 303 UPS 300 Exclusive hardener NPS 725 Exclusive Reducer (thinner) • Mixture ratio: 2 : 1 (UPS 300 : No. 303) • Viscosity: 12 — 14 sec./20°C (68°F) • Coating film thickness: 40 — 50 μ
16	Drying	Allow the coated surface to dry for 20 minutes at 20°C (68°F) [or 30 minutes at 60°C (140°F)].
17	Sanding (III)	Sand the coated surface and its surrounding areas using #400 sand paper and water.

Front Bumper

EXTERIOR/INTERIOR TRIM


Process No.	Process name	Job contents	
18	Cleaning/degreasing	Same as Process No. 12.	
19	Top coat (I)	Non-colored	Metallic paint
		Use a "block" coating method. • Recommended paint: Suncryl (SC) No. 307 Flex Hardener SC Reducer (thinner) • Mixture ratio: Suncryl (SC) : No. 307 Flex Hardener = 3 : 1 • Viscosity: 11 — 13 sec./20°C (68°F) • Coating film thickness: 40 — 50 μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi)	Use a "block" coating method. • Recommended paint: Suncryl (SC) No. 307 Flex Hardener SC Reducer (thinner) • Mixture ratio: Suncryl (SC) : No. 307 Flex Hardener = 3 : 1 • Viscosity: 11 — 13 sec./20°C (68°F) • Coating film thickness: 20 — 30 μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi)
20	Leave unattended	Not required.	Leave unattended at 20°C (68°F) for at least 10 minutes until the topcoated area is half-dry. NOTE: Be careful to keep dust or dirt from coming in contact with the affected area.
21	Top coat (II)	Not required.	Apply a clear coat three times at an interval of 3 to 5 minutes. • Recommended paint: SC710 Overlay Clear No. 307 Flex Hardener SC Reducer (thinner) • Mixture ratio: Suncryl (SC) : No. 307 Flex Hardener = 3 : 1 • Viscosity: 10 — 13 sec./20°C (68°F) • Coating film thickness: 20 — 30 μ • Spraying pressure: 245 — 343 kPa (2.5 — 3.5 kg/cm ² , 36 — 50 psi)
22	Drying	Allow the coated surface to dry for two hours at 20°C (68°F) or 30 minutes at 60°C (140°F). NOTE: Do not allow the temperature to exceed 80°C (176°F) since this will deform the PP substrate.	
23	Inspection	Carefully check the condition of the repaired area.	
24	Removal of masking	Remove the masking tape applied in Process No. 11 and 13.	
25	Parts installation	Install parts on the bumper in reverse order of removal.	
26	Bumper installation	Install the bumper.	

9. Rear Bumper


A: REMOVAL

1. REAR BUMPER FACE


- 1) Disconnect the ground cable from battery.
- 2) Remove the rear combination light assembly.
<Ref. to LI-21, REMOVAL, Rear Combination Light Assembly.>
- 3) Remove the two clips.

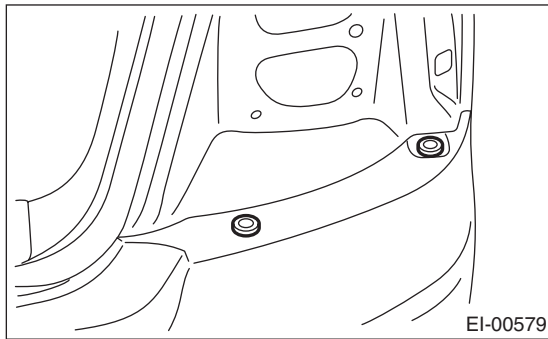

- 4) Turn over the mud guard, and remove the bolt (A) inside wheel house, and the clips (B) on the lower side of the bumper.

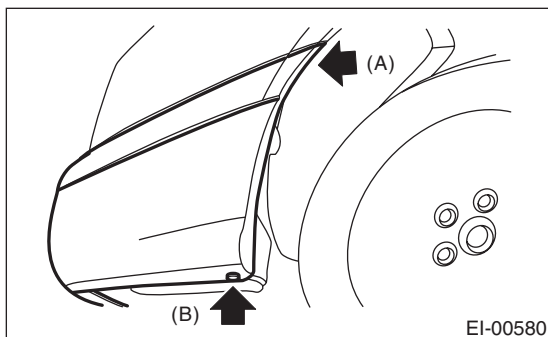


- 5) Remove the clips on the lower side of rear bumper.

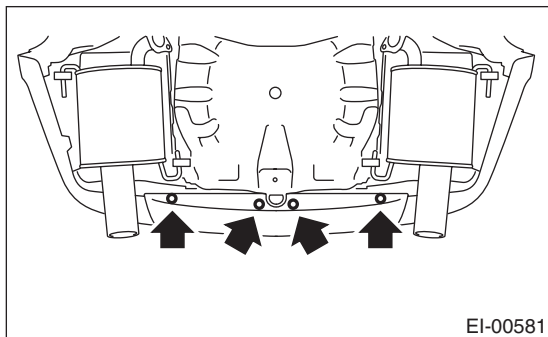


- 6) Remove the service hole cover, and remove the bolt.

- Sedan model: trunk side trim

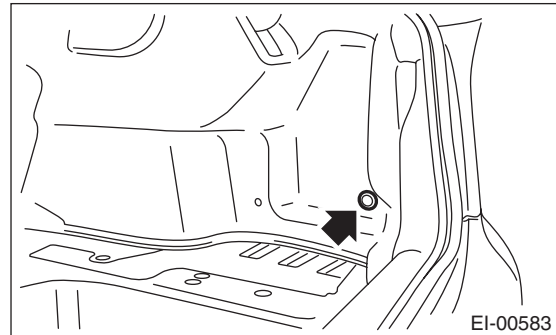


- Wagon model: rear quarter lower trim

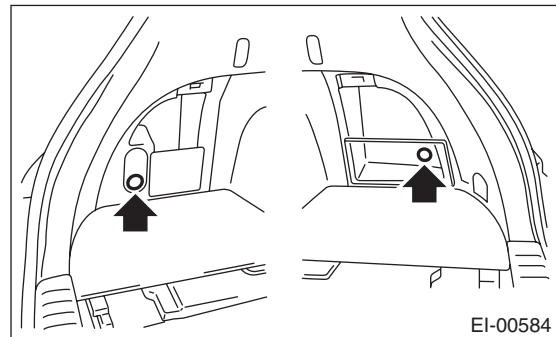


NOTE:

For models with woofers, remove the woofer cover.

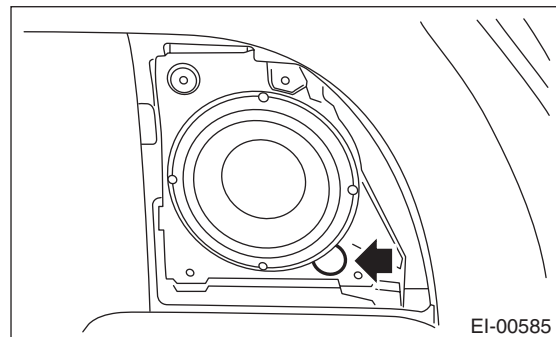

- 7) Remove the rear bumper from vehicle body.

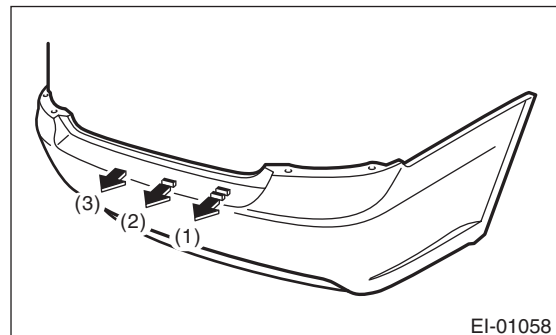

NOTE:


- Do not pull with a excessive force. Otherwise the bracket installation area may be damaged.
- When removing the bumper face from bracket, it is easier to remove from the end in order.

Rear Bumper

EXTERIOR/INTERIOR TRIM


2. REAR BUMPER BRACKET

- 1) Remove the rear bumper face from vehicle body.
- 2) Remove the rear bumper bracket corner from the vehicle body. (both sides)

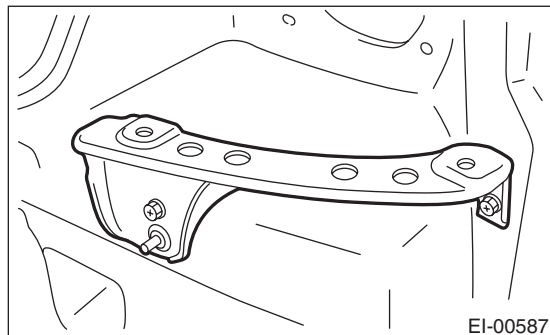


- 3) Remove the lower brackets from vehicle body.

- Sedan model: 2 locations

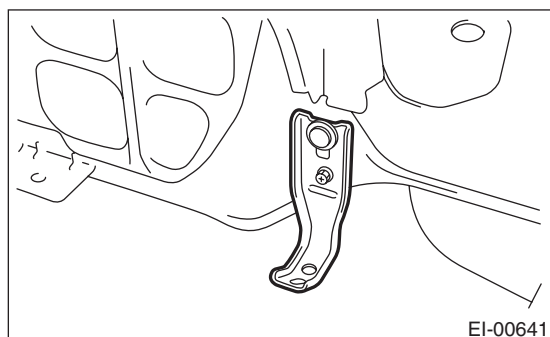


- Wagon model: 4 locations

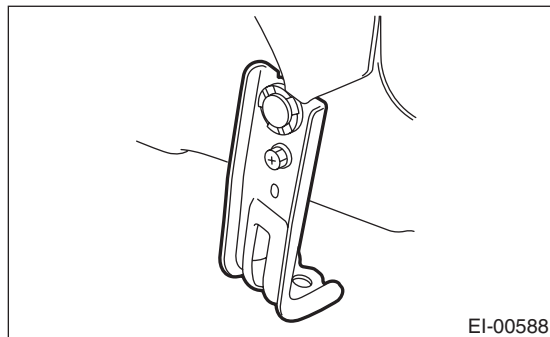


3. REAR BUMPER BEAM ASSEMBLY

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear bumper face. <Ref. to EI-37, REAR BUMPER FACE, REMOVAL, Rear Bumper.>
- 3) Remove the energy absorber foam.

- 4) Remove the nuts, and remove the beam main reinforcement from the vehicle body.

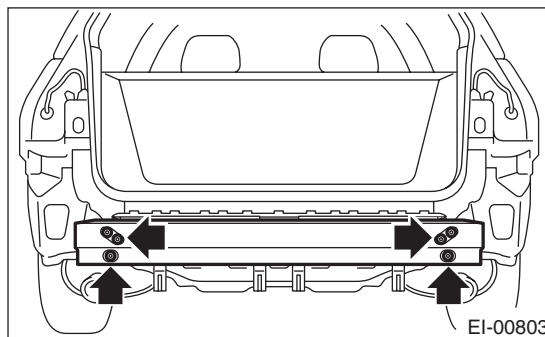

- 5) Remove the nuts, and remove the bumper beam bracket and beam upper rear from the vehicle body.

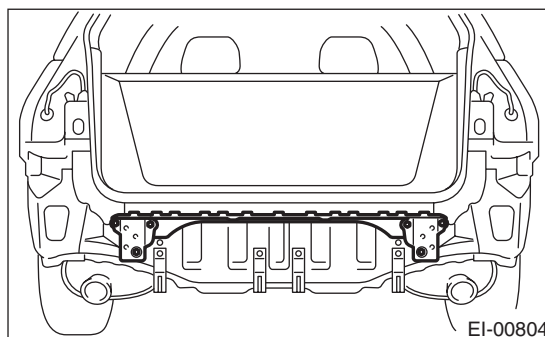

B: INSTALLATION

1. REAR BUMPER FACE

- 1) Install the beam upper rear to the vehicle body.
- 2) Install the bumper face to the vehicle body.

NOTE:

If the bumper face comes off easily from the beam upper rear, adjust the hook of the bracket side.

- 3) Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description".

<Ref. to EI-6, REAR BUMPER (SEDAN MODEL), COMPONENT, General Description.>

2. REAR BUMPER BRACKET

Install in the reverse order of removal.

3. REAR BUMPER BEAM ASSEMBLY

Install in the reverse order of removal.


C: REPAIR

Refer to front bumper repair. <Ref. to EI-30, REMOVAL, Front Bumper.>

10.Cowl Panel


A: REMOVAL

- 1) Open the front hood.
- 2) Remove the wiper arm. <Ref. to WW-14, REMOVAL, Front Wiper Arm.>
- 3) Remove the weather strip clips, and remove the weather strip.

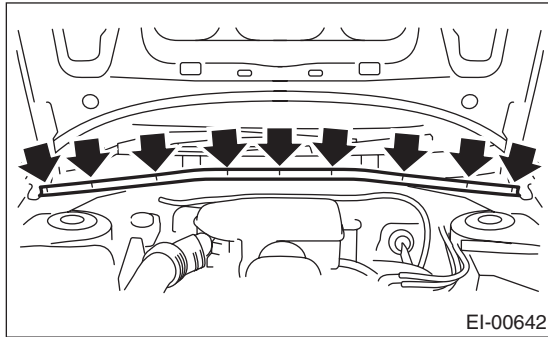


NOTE:


If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use a clip remover to remove.

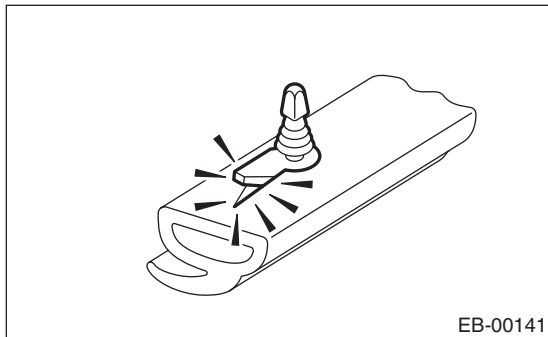


- 4) Remove the clip, and remove the cover cowl panel.

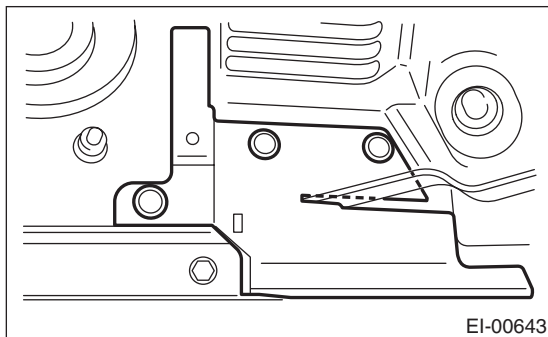

- 5) Remove the cowl panel side and clip (A).

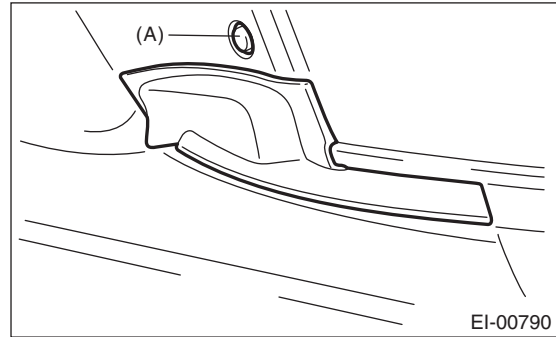

- 6) Remove the clips (A), and remove the cowl panel.

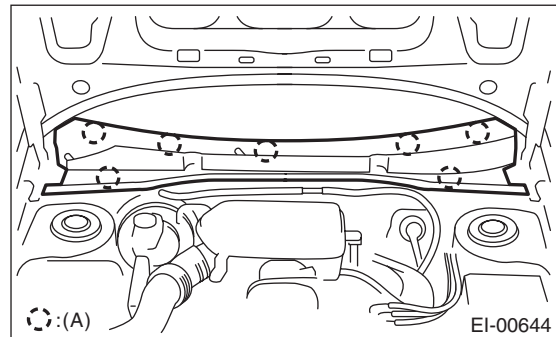


B: INSTALLATION

Install in the reverse order of removal.


11. Roof Spoiler

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the connector of high-mounted stop light and the washer hose of rear washer.
- 4) Remove the nut and plastic caps.

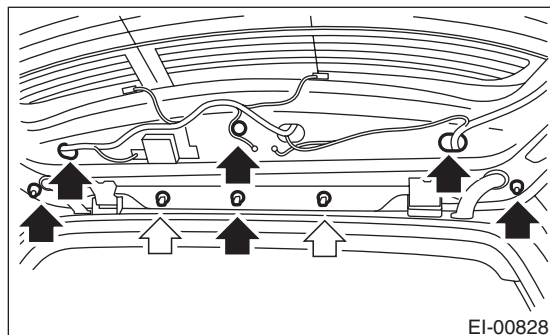

- 5) Remove the clips, and remove the roof spoiler.

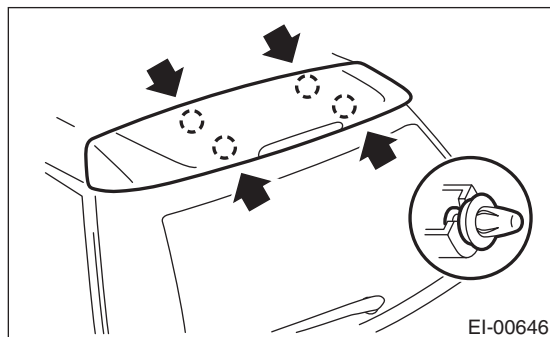

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

4.5 N·m (0.46 kgf-m, 3.32 ft-lb)

12.Side Sill Spoiler

A: REMOVAL

Remove the clips (two in the front fender arch, six for side sill spoiler lower area), and remove the side spoiler.

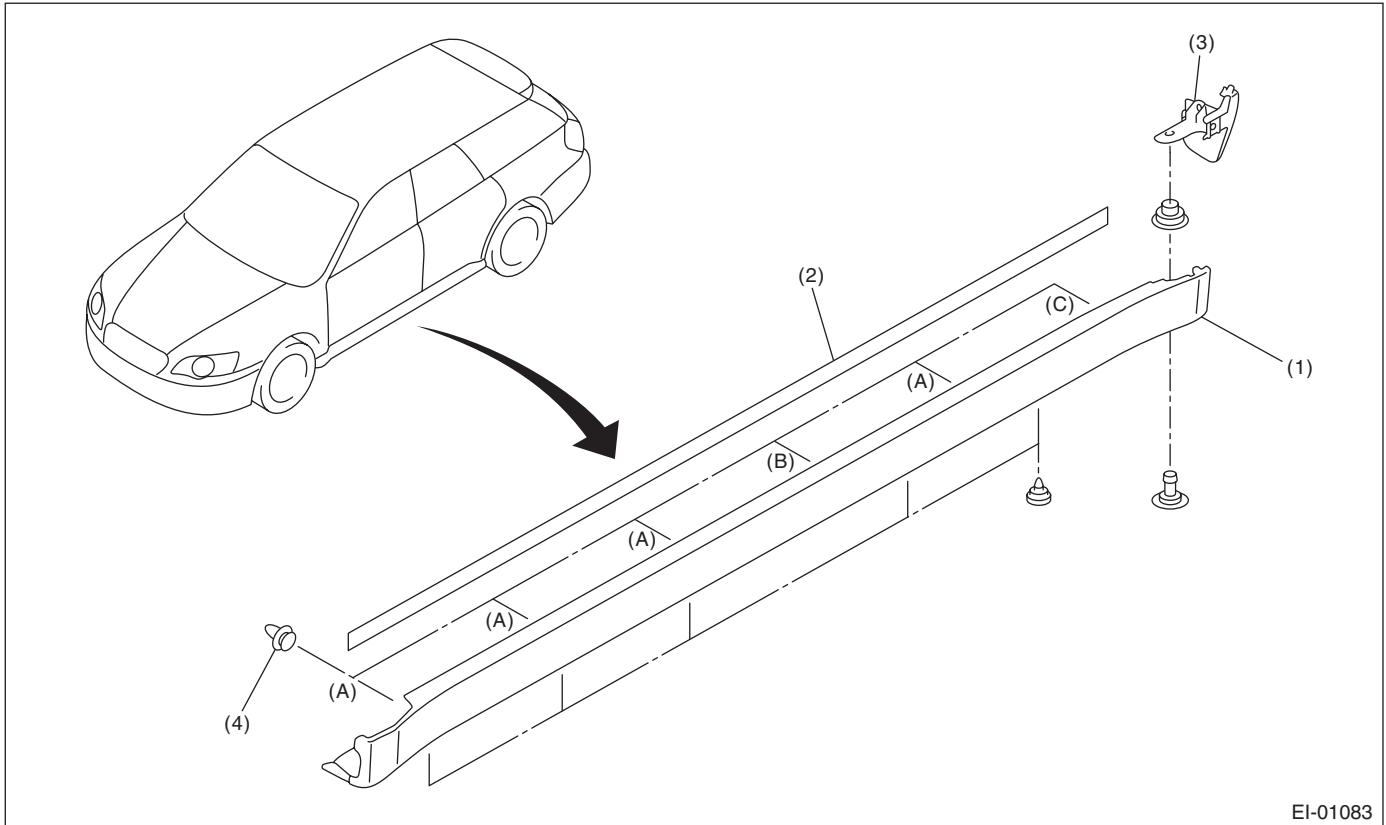

(1) Side sill spoiler
(2) Double-sided tape

(3) End cover

(4) Clip

(A) Gray clip

(B) Green clip

(C) Black clip

NOTE:


When peeling the double sided tape, refer to removal procedures for the side protector. <Ref. to EI-43, REMOVAL, Side Protector.>

B: INSTALLATION

Install in the reverse order of removal.

NOTE:


For the rearmost clip securing the side sill spoiler, install through the end cover.

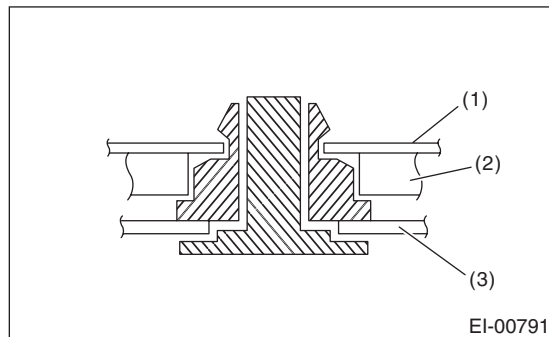

- (1) Vehicle body
- (2) End cover
- (3) Side sill spoiler

13.Side Protector

A: REMOVAL

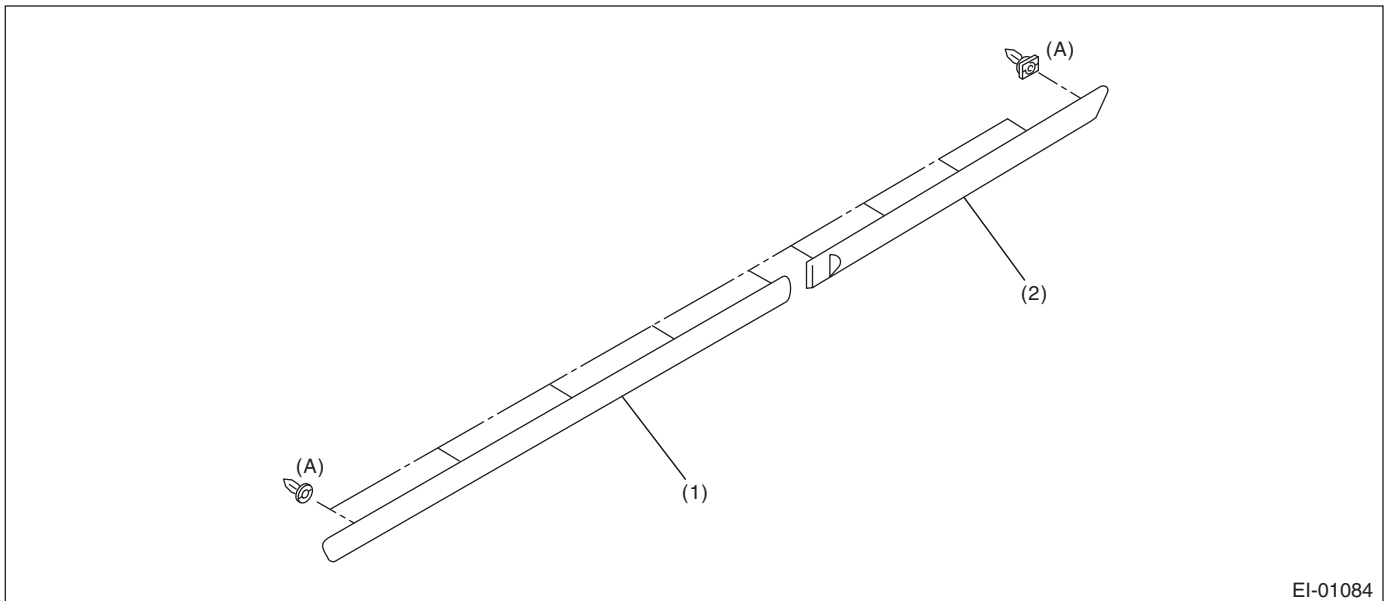


EI-01084

(1) Front door protector

(2) Rear door protector

(A) White clip


1) Slide in a thin thread (A) of 0.8 mm (0.031 in) diameter or less (fishing line etc.) between the body and the protector, and cut the double-sided tape. Pull the protector, and remove the clip using the clip remover.

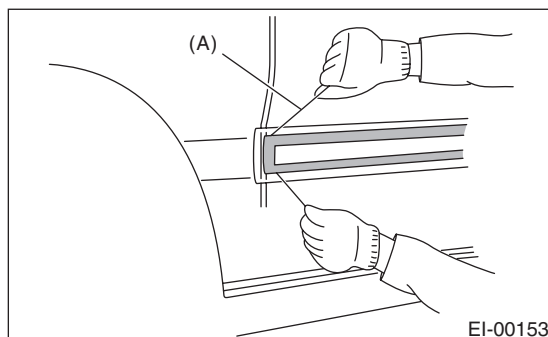

EI-00153

NOTE:

- To optimize the effect of solvent, slide the thread along body without removing the double-sided tape on the surface of body and spoiler.
- If it is difficult to remove the double-sided tape, warm it up to approx. 40°C (104°F).
- If the double-sided tape remains thick on the surface due to interfacial peeling, apply solvent after slicing off the double-sided tape using a cutter.

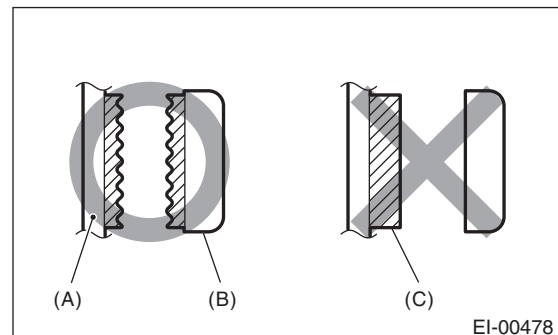

EI-00478

(A) Panel

(B) Side protector

(C) Double-sided tape

2) Apply masking tape around the double-sided tape remaining on the surface of body or spoiler.

3) Apply solvent uniformly on the double-sided tape using a brush.

CAUTION:

- Do not use solvent to the body which has been repaired with lacquer paint.
- Wipe off immediately when the solvent is attached on surface of the body or spoiler.



Solvent:

3M 8907 or equivalent

Side Protector

EXTERIOR/INTERIOR TRIM

4) Cover the area where solvent is applied using plastic wrap (A), and then heat the double-sided tape for 5 to 10 minutes in 40 — 60°C (104 — 140°F) using a heat light (B).

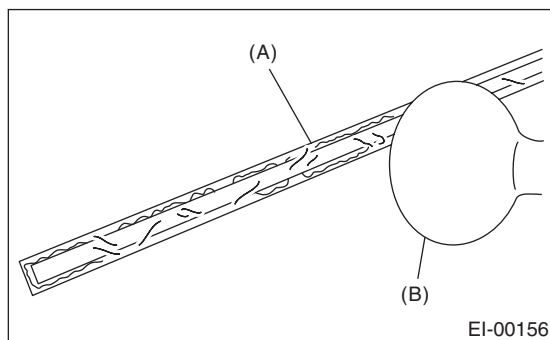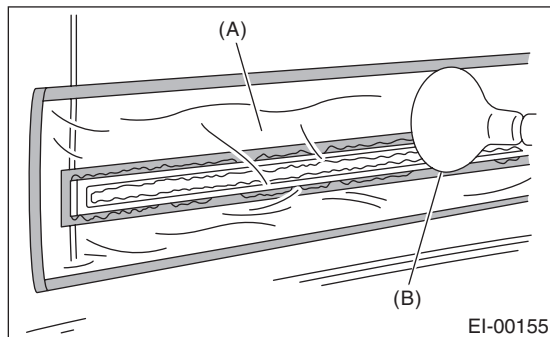

CAUTION:


Do not heat the double-sided tape until the surface becomes white and excessively dried.

5) Remove the double-sided tape using a plastic spatula.

6) After completely removing the double-sided tape, detach the masking tape and clean the surface using a cotton cloth damped with white gasoline.

B: INSTALLATION

1) Apply primer to the protector surface where the double-sided tape is to be adhered, and then adhere the double-sided tape as shown in the figure.

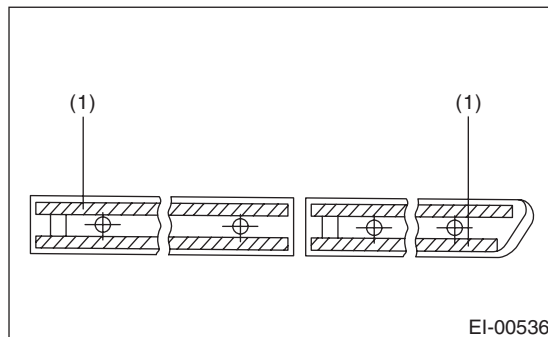

(1) Double-sided tape: thickness 1.2 mm (0.047 in), width 5mm (0.197 in)

Primer:

3M K-500 or equivalent

Double-sided tape:

3M 5531-5 or equivalent

2) Heat the adhering part using a heat light.

Body side: 40 — 60°C (104 — 140°F)

Protector side: 20 — 30°C (68 — 86°F)


3) Peel off the backing sheet of double-sided tape, align the clip position, and then adhere the tape to the body while taking care to avoid air entering.

CAUTION:

To keep the adhesion, do not wash the vehicle within 24 hours from installation.

14.Side Garnish

A: REMOVAL

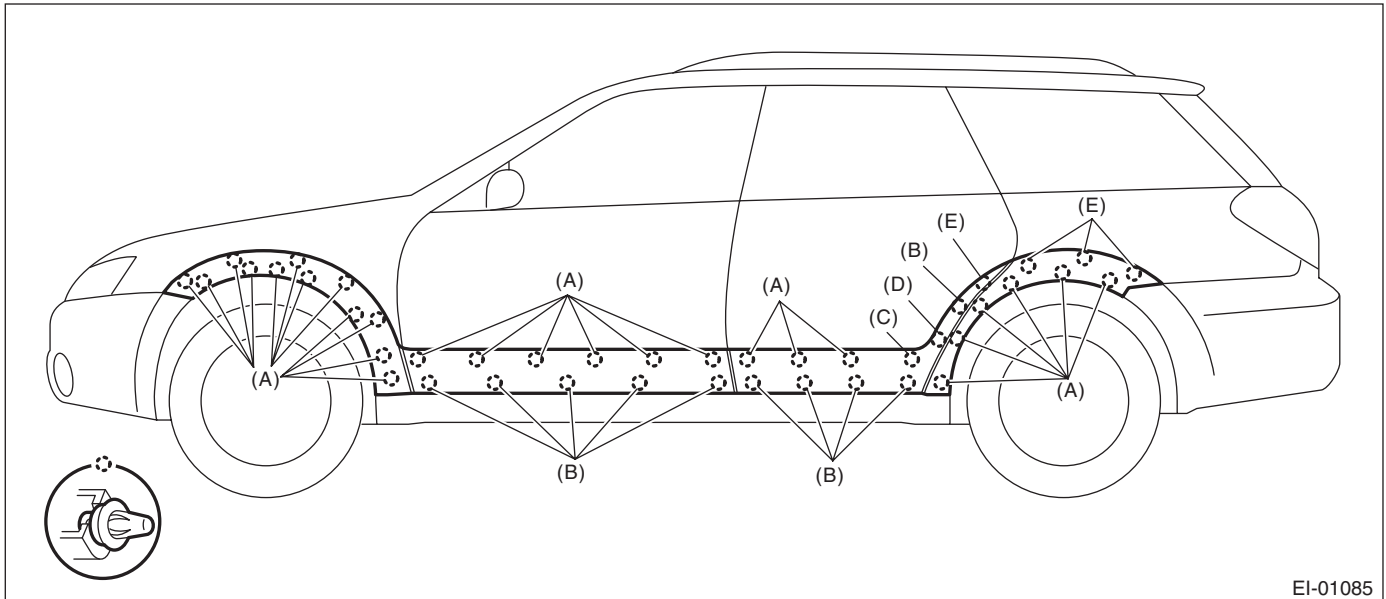

EI-01085

(A) Black clip
(B) White clip

(C) Pink clip
(D) Gray clip

(E) Green clip

- 1) Remove the side sill spoilers. <Ref. to EI-41, REMOVAL, Side Sill Spoiler.>
- 2) For removal of the side garnish, refer to the removal procedure of "Side Protector". <Ref. to EI-43, REMOVAL, Side Protector.>


B: INSTALLATION

Check the color of the clip, and install in the reverse order of removal.

15.Rear Quarter Protector

A: REMOVAL

- 1) Remove the side sill spoilers. <Ref. to EI-41, REMOVAL, Side Sill Spoiler.>
- 2) Remove clips (A) by rotating it rearward using the fender arch as a fulcrum, and then remove the rear quarter protector.

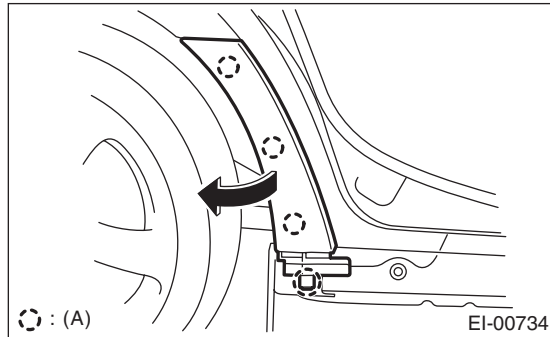


B: INSTALLATION

Install in the reverse order of removal.

16. Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-65, REMOVAL, Roof Trim.>
- 2) Remove the six nuts.

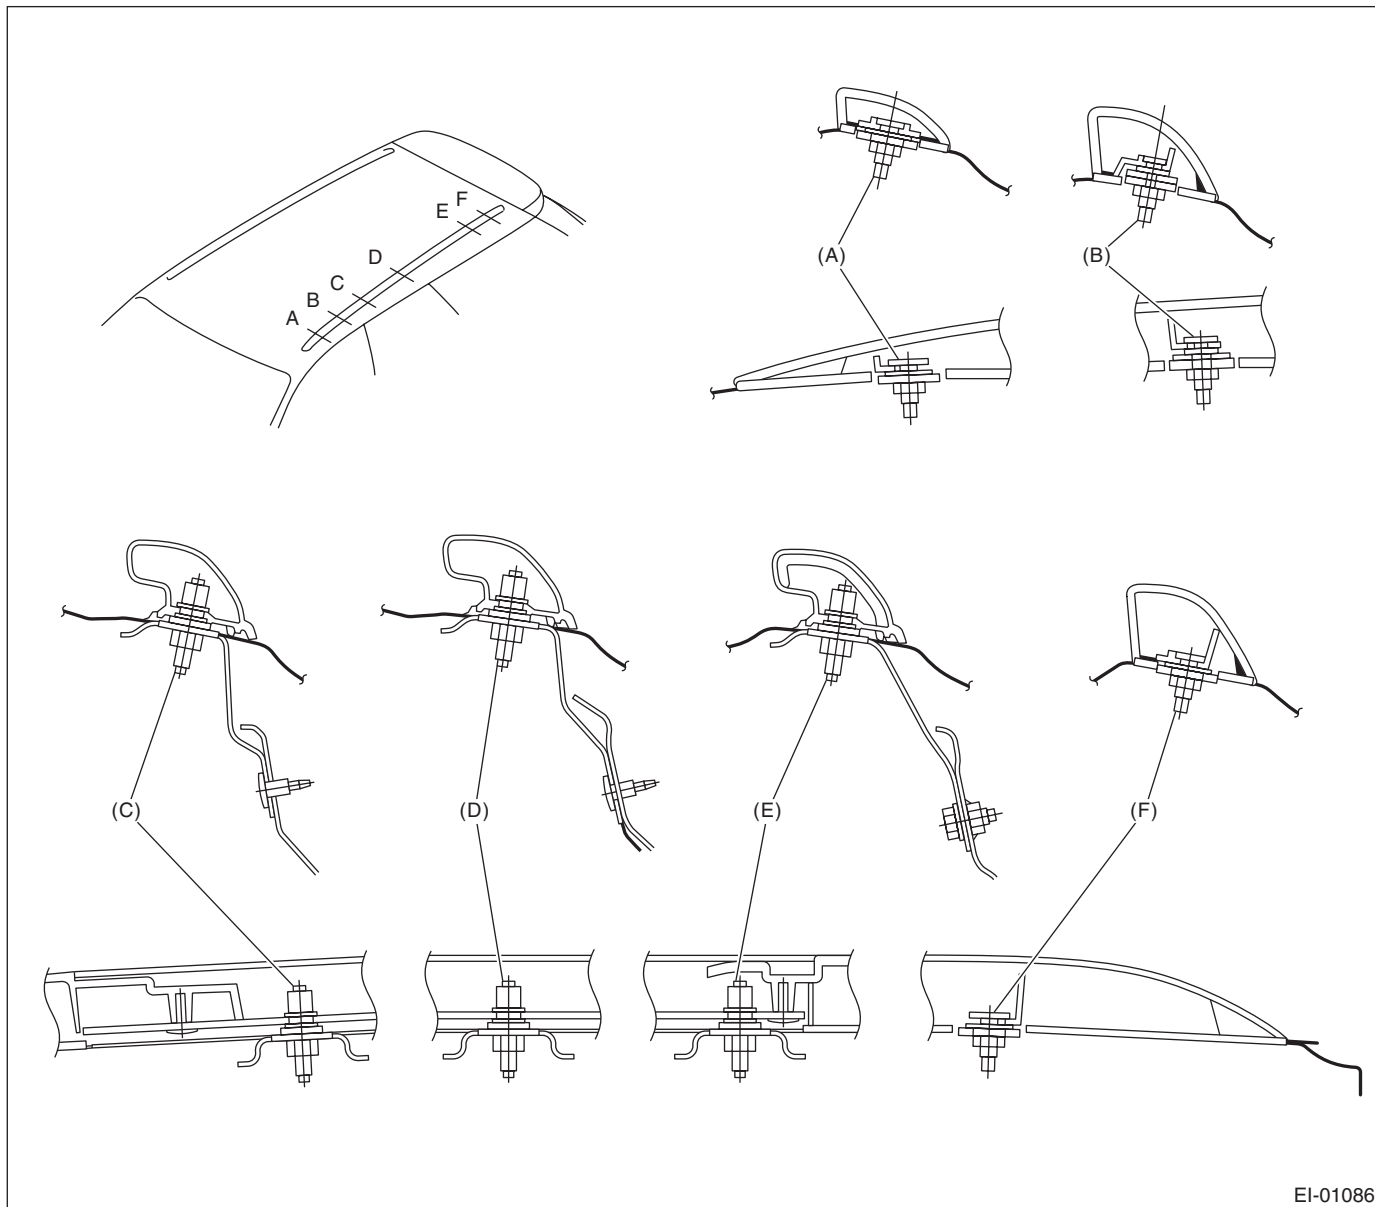

EI-01086

NOTE:

Perform the removal procedures by referring to above illustration. (OUTBACK model)

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of roof rail.


Tightening torque:

7.5 N·m (0.77 kgf-m, 5.53 ft-lb)


17. Door Trim

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover (A) at the inner remote area.

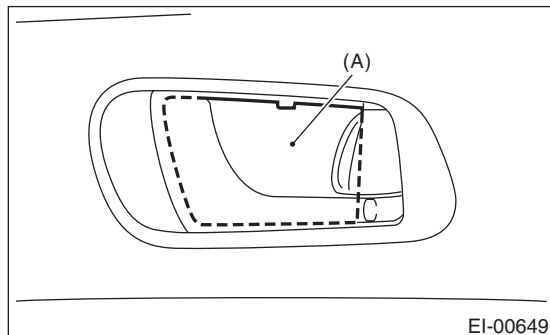


- 3) Push the root of hand grip upward, and remove the hand grip cover by twisting it towards the front of the vehicle.

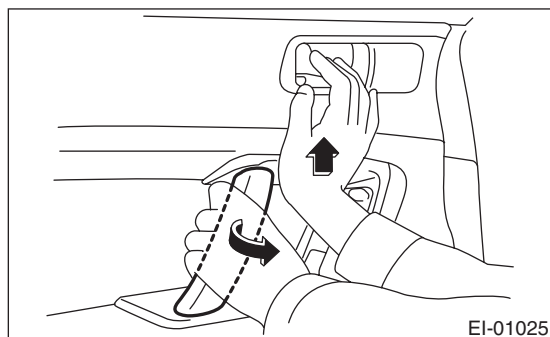


LH side: Counterclockwise
RH side: Clockwise

NOTE:

If it does not come off using the procedures above, apply protective tape to the tip of a flat tip screwdriver and the door trim, and pry out the upper side of the hand grip cover.

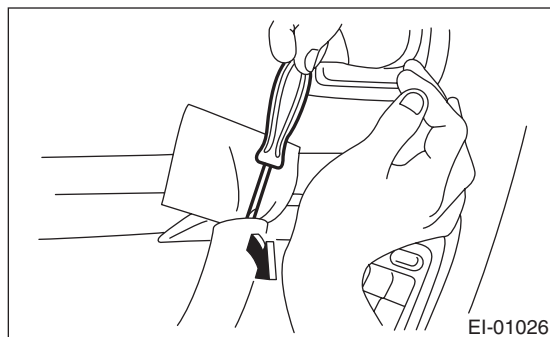


- 4) Loosen the screws.

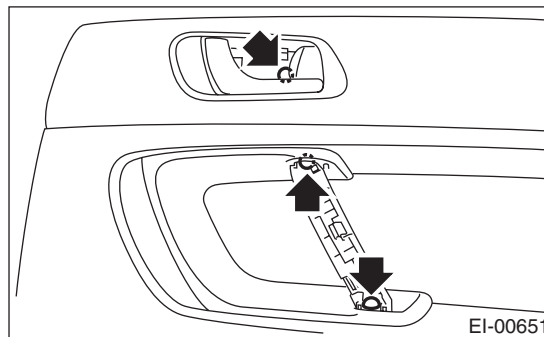


- 5) Remove the clips, and disconnect all connectors and wire cables to remove the door trim.

• Front door trim

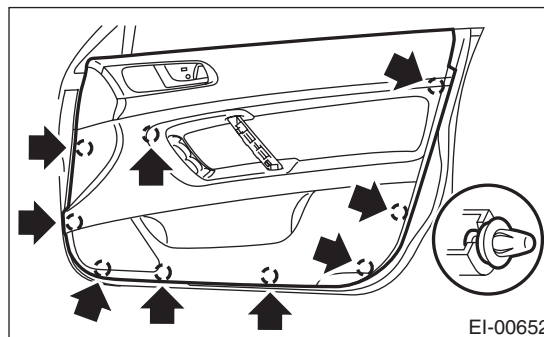

• Rear door trim

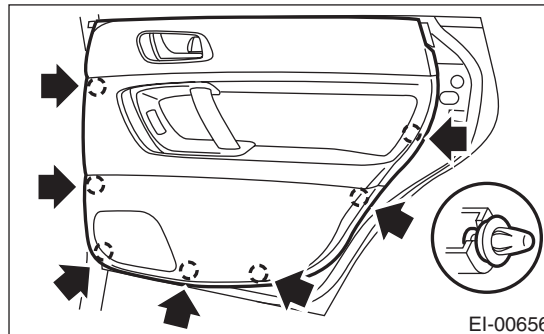

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Be careful not to install the hand grip cover and plate clip of the hand grip in the wrong direction.


- Hand grip cover (front and rear door)

The side with the protrusion is the upper side.


- The bottom clip of the rear door faces the opposite direction

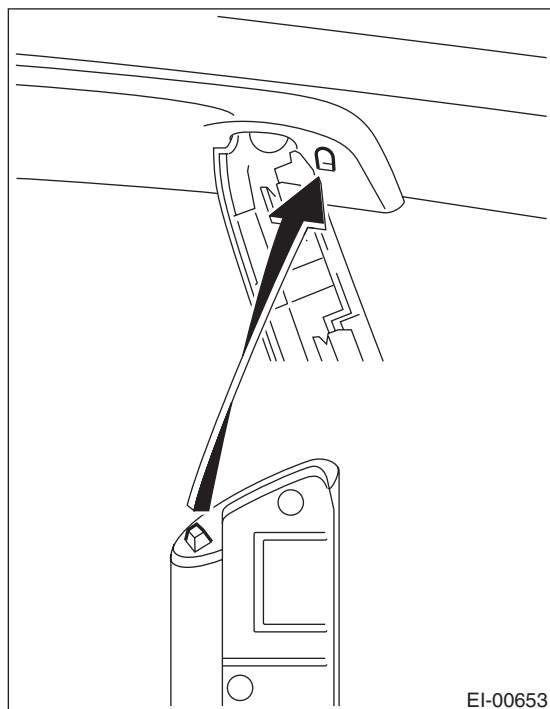

- Bottom clip of the front door faces the opposite direction

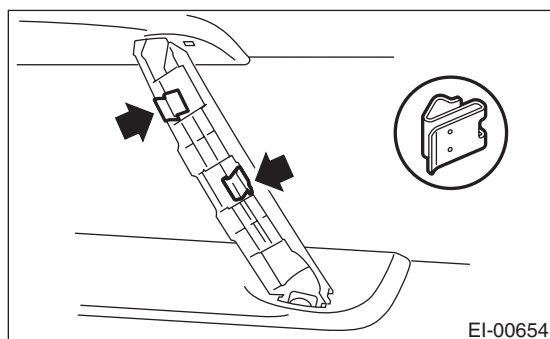


- Lower side of the hand grip cover for the front door has a claw.

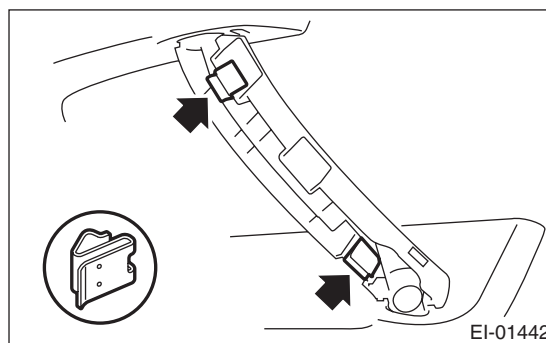


18. Instrument Panel Lower Cover

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the front door inside scuff plate (A) and front pillar lower trim (B) on the driver's side. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>

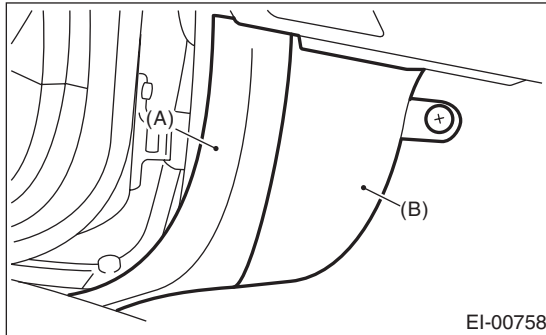

- 3) Remove the clips, and remove the instrument panel lower cover under.

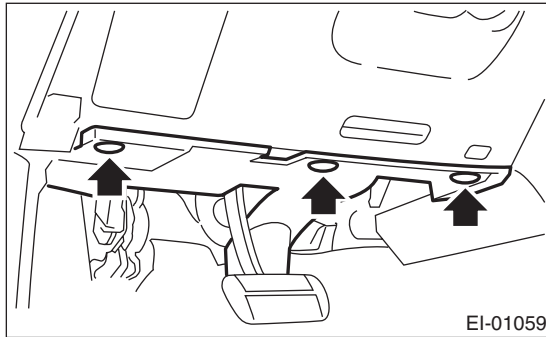

- 4) Loosen the screw (A), disconnect the connectors, and remove the instrument panel lower cover upper.

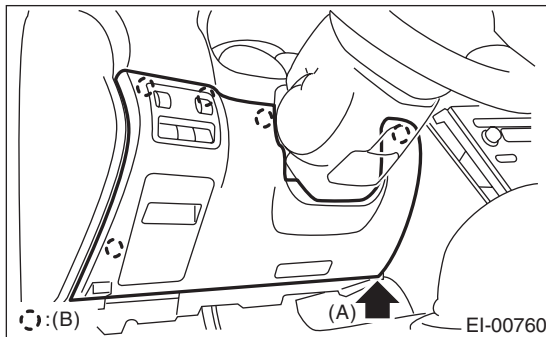

(B) Clip


B: INSTALLATION

Install in the reverse order of removal.

19. Glove Box

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 3) Remove the console front panel.

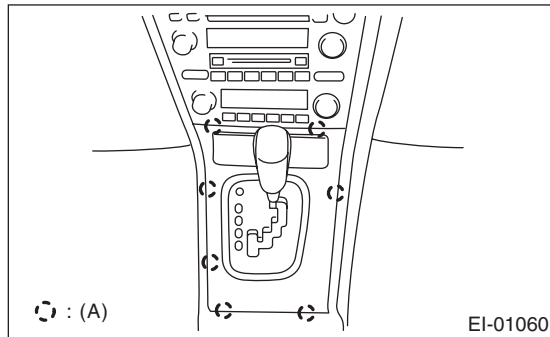


(A) Hook

NOTE:


For the AT model, remove the ring indicator.
For the MT model, remove the shift knob.

- 4) Remove the console side garnish.

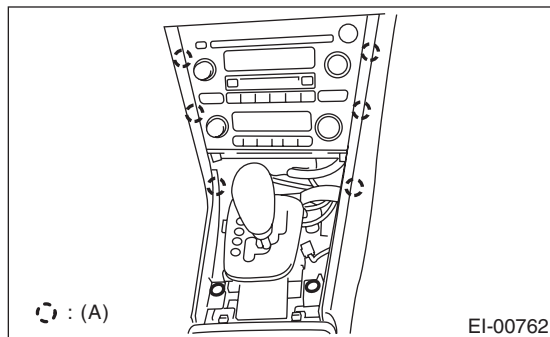


(A) Hook


- 5) Remove the front inside scuff plate (A) and front pillar lower trim (B). <Ref. to EI-59, REMOVAL, Lower Inner Trim.>

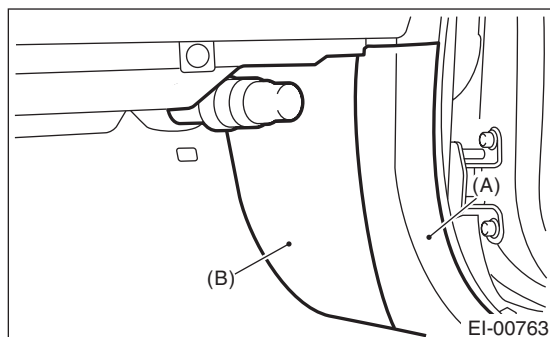


- 6) Remove the clips, and remove the glove box lower cover.

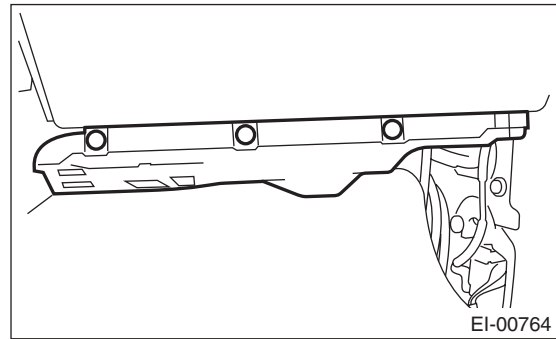

- 7) Remove the console side panel.

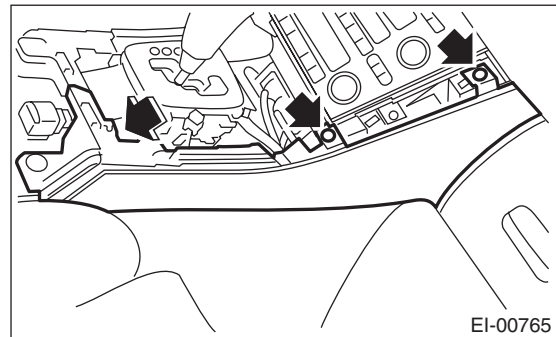


- 8) Remove the instrument panel side cover, and remove the clip.

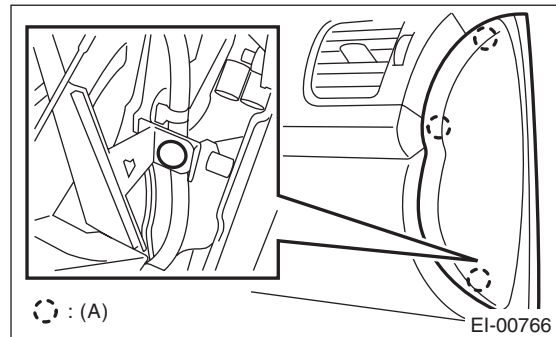

(A) Clip

- 9) Remove the screw, and remove the glove box.

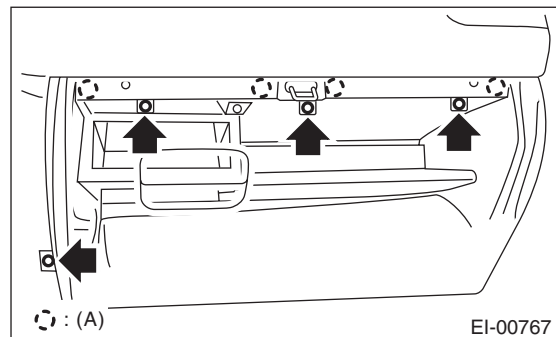

(A) Clip


B: INSTALLATION

Install in the reverse order of removal.


20. Console Box

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the parking brake lever cover.

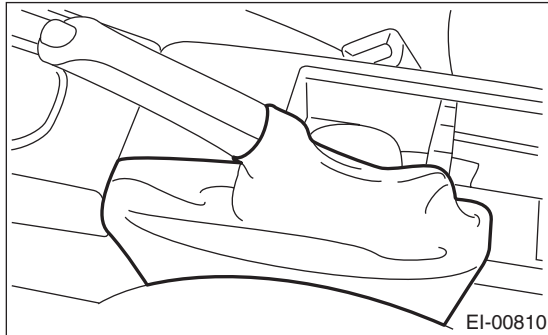

- 3) Remove the bolts and clips.

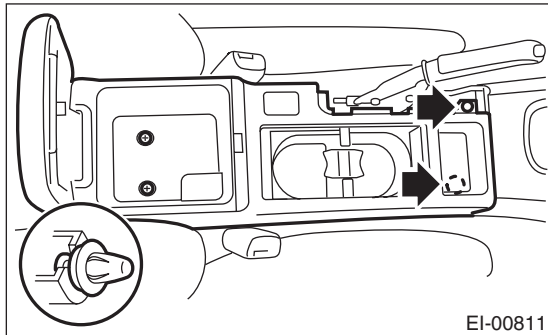

- 4) Disconnect the connector, and remove the console box.


B: INSTALLATION

Install in the reverse order of removal.

21.Center Console

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 3) Remove the console front panel.

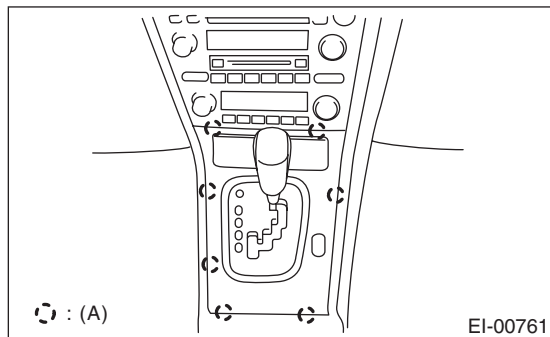


(A) Hook

NOTE:

For the AT model, remove the ring indicator.


For the MT model, remove the shift knob.

- 4) Loosen the screw, remove the hook, and remove the console side garnish.

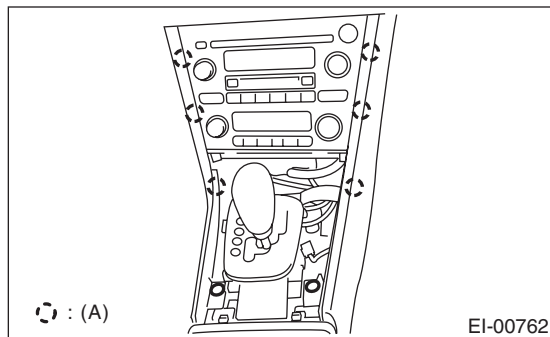


(A) Hook


- 5) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>

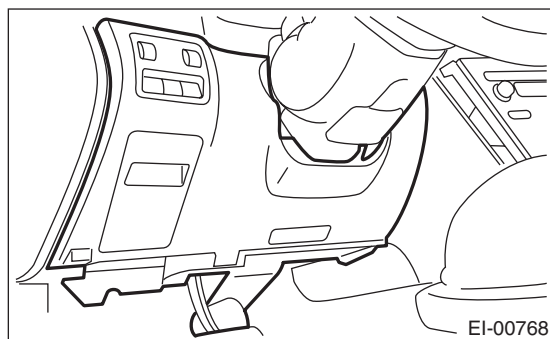


- 6) Remove the clip at the tip of the console side panel.

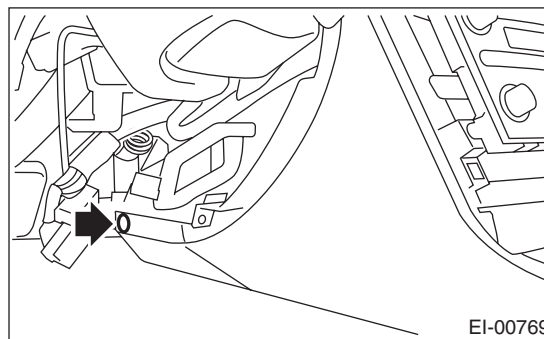

- 7) Remove the passenger's side front inside scuff plate (A) and front pillar lower trim (B). <Ref. to EI-59, REMOVAL, Lower Inner Trim.>

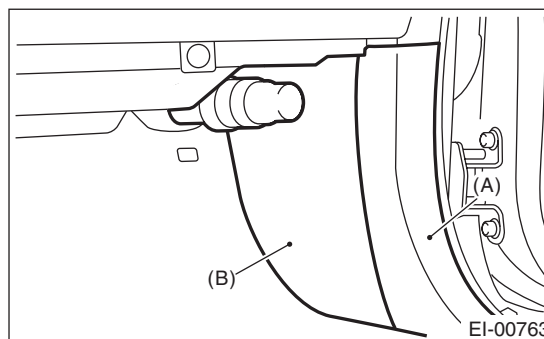


- 8) Remove the clips, and remove the glove box lower cover.

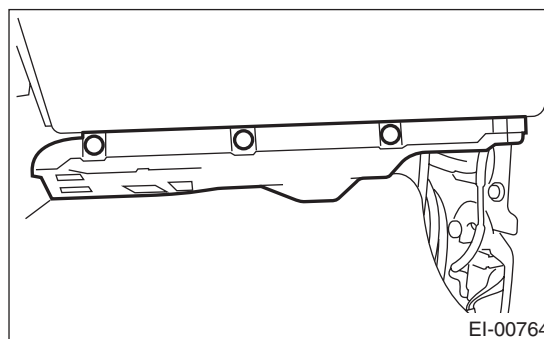


Center Console

EXTERIOR/INTERIOR TRIM

9) Remove the screws, and remove the console side panel.

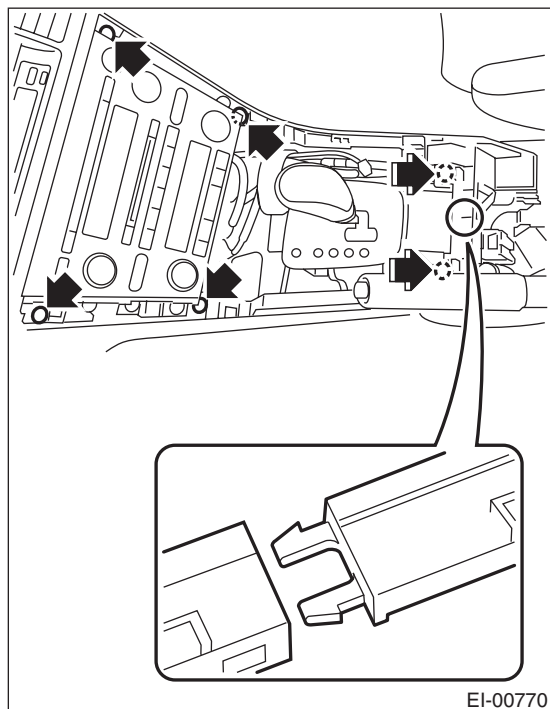

10) Loosen screws to pull out the audio unit assembly, and disconnect the connectors to remove.

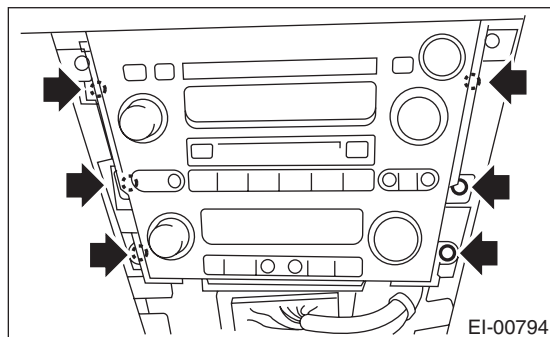

NOTE:

The audio unit assembly can be removed without removing the console side panel.

B: INSTALLATION

Install in the reverse order of removal.

22. Instrument Panel Assembly


A: REMOVAL

1. INSTRUMENT PANEL (EXCLUDING STEERING SUPPORT BEAM)


CAUTION:

Be careful not to damage the airbag system harness when servicing the instrument panel. Damage may cause the system to malfunction.


- 1) Disconnect the ground cable from battery.
- 2) Remove the front pillar upper trim. <Ref. to EI-60, REMOVAL, Upper Inner Trim.>
- 3) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 4) Remove the center console. <Ref. to EI-53, REMOVAL, Center Console.>
- 5) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 6) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 7) Remove the combination meter assembly. <Ref. to IDI-14, REMOVAL, Combination Meter.>
- 8) Remove the screws.

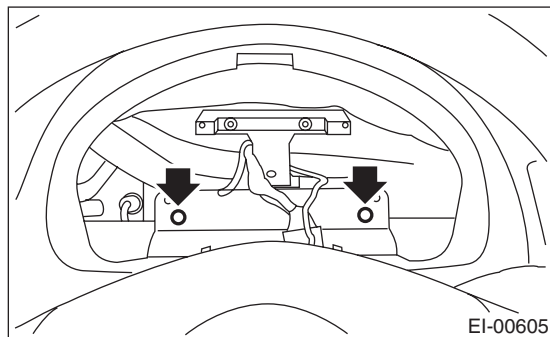


- 9) Remove the driver's side instrument panel side cover, and remove the screws.

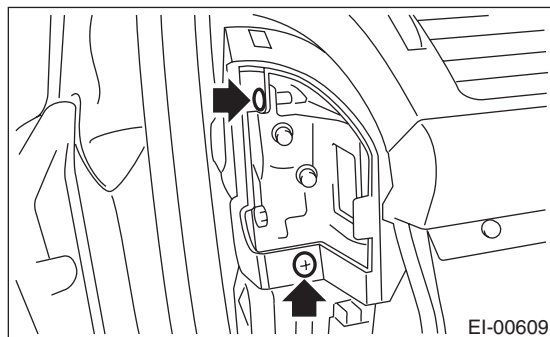


- 10) Remove the screw at the side of the center console.

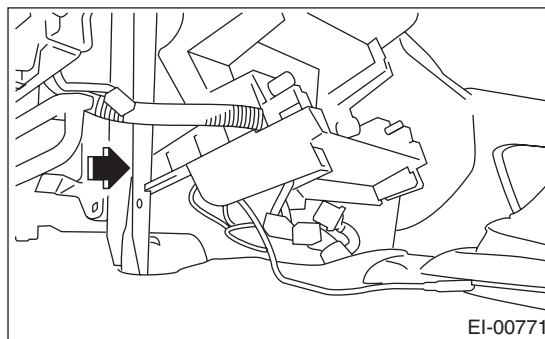


- 11) Remove the center air vent grille of the instrument panel. <Ref. to AC-45, CENTER GRILLE, REMOVAL, Air Vent Grille.>
- 12) Remove the screws.

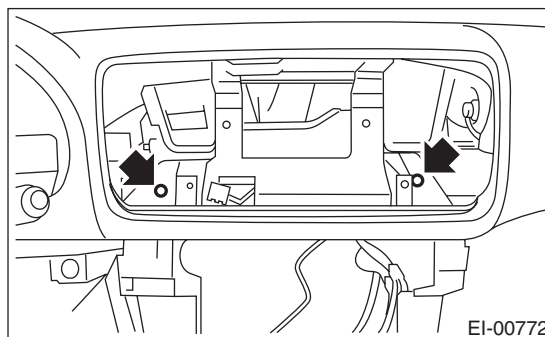

- 13) Remove the screws at the side of the passenger's side instrument panel.

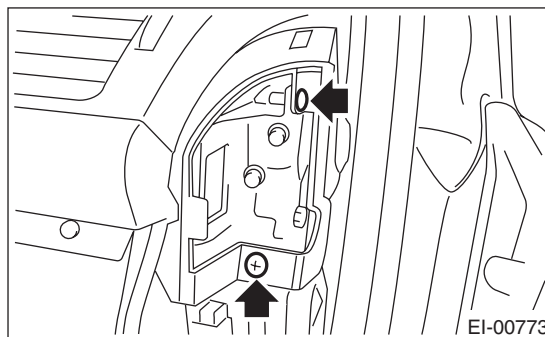

- 14) Remove the bolts securing the passenger's side airbag module to the steering support beam.

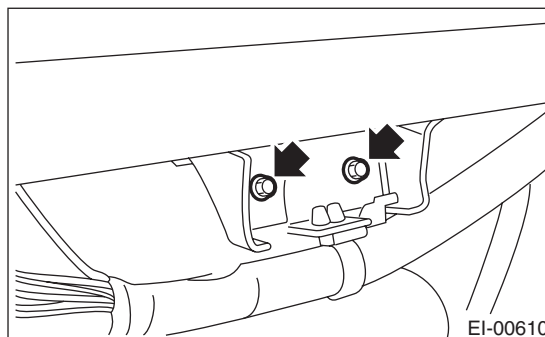

Instrument Panel Assembly

EXTERIOR/INTERIOR TRIM

15) Disconnect the connectors, and remove the instrument panel from vehicle body.


NOTE:

- If necessary, make matching marks for easy re-assembly.
- When storing the removed instrument panel, be sure to prepare a table or the like to place the instrument panel, in order to prevent scratches or other damage to the panel.


16) Remove the side air vent grille. <Ref. to AC-45, REMOVAL, Air Vent Grille.>

17) Remove the heater vent duct. <Ref. to AC-47, REMOVAL, Heater Vent Duct.>


18) Loosen the screws to remove the center console frame.

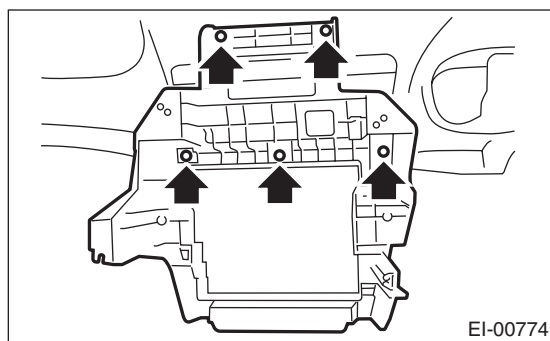


19) Loosen the screws to remove the meter bracket.

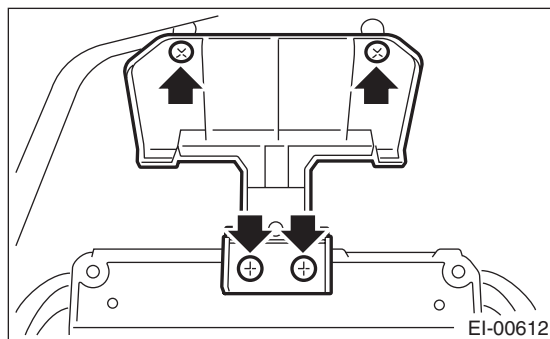


20) Loosen the screws to remove the instrument panel matching pins.

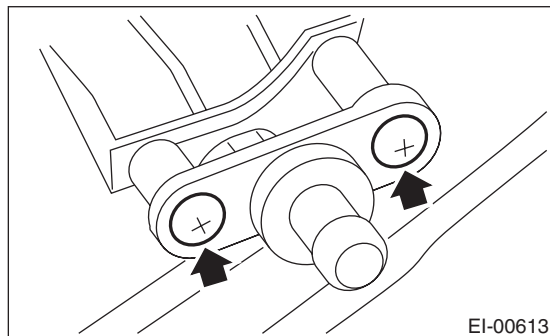

21) Loosen the screws to remove the glove box striker.

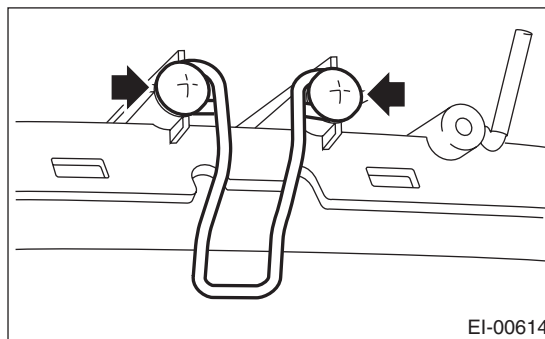

22) Remove the pawl, and remove the passenger's airbag module.

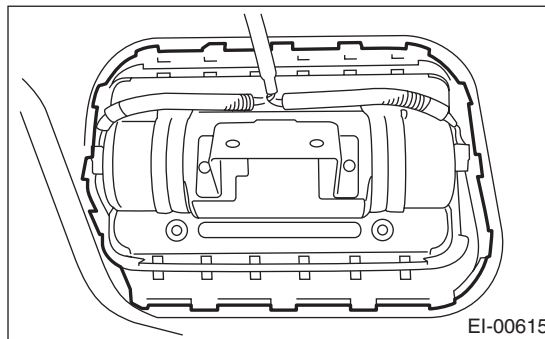

2. STEERING SUPPORT BEAM

1) Remove the instrument panel. <Ref. to EI-55, INSTRUMENT PANEL (EXCLUDING STEERING SUPPORT BEAM), REMOVAL, Instrument Panel Assembly.>


2) Remove the steering shaft assembly. <Ref. to PS-17, REMOVAL, Tilt Steering Column.>

3) Remove all harness clips, and remove the harness from the steering support beam.


NOTE:

If necessary, make matching marks for easy reassembly.

4) Remove the bolts and remove the steering support beam.

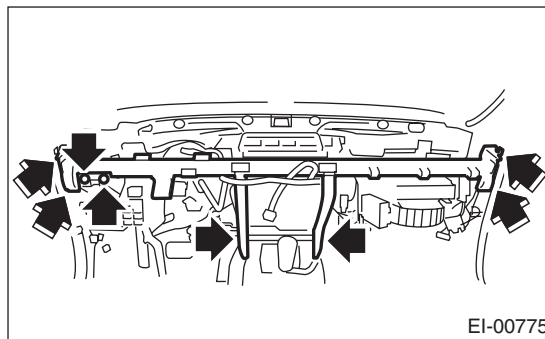

- 5) Remove the steering support beam bracket.

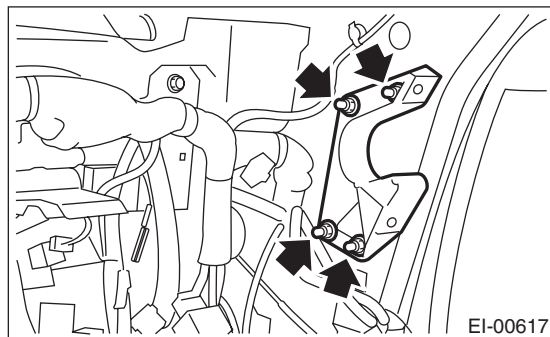


3. INSTRUMENT PANEL ASSEMBLY (INCLUDING STEERING SUPPORT BEAM)


CAUTION:

Be careful not to damage the airbag system harness when servicing the instrument panel. Damage may cause the system to malfunction.


- 1) Remove the front pillar upper trim. <Ref. to EI-60, REMOVAL, Upper Inner Trim.>
- 2) Remove the center console. <Ref. to EI-53, REMOVAL, Center Console.>
- 3) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 4) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 5) Remove the steering shaft assembly. <Ref. to PS-17, REMOVAL, Tilt Steering Column.>
- 6) Remove the driver's side instrument panel side cover, and remove the bolts.

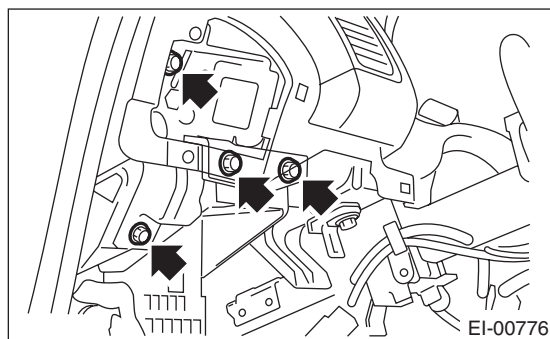

- 7) Remove the bolts at the side of the passenger's side instrument panel.

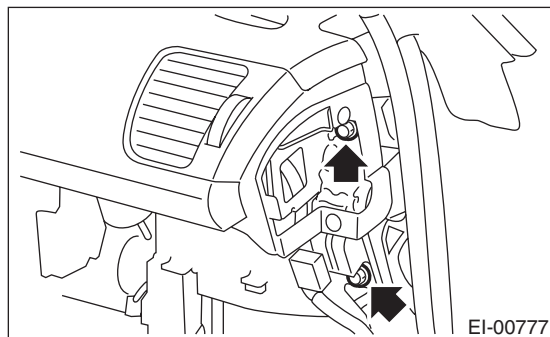

- 8) Loosen the bolts on the center console side.

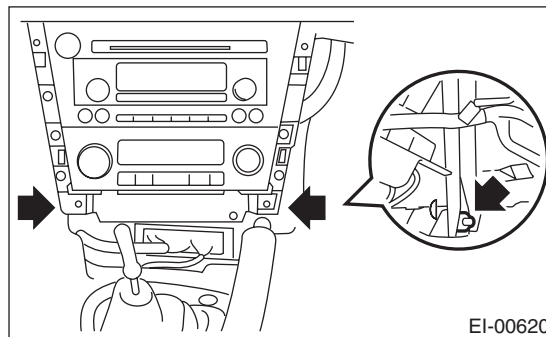

- 9) Disconnect the connectors, and remove the instrument panel assembly.


NOTE:

If necessary, make matching marks for easy reassembly.

B: INSTALLATION

1. INSTRUMENT PANEL (EXCLUDING STEERING SUPPORT BEAM)

- 1) Insert the matching pins (three places) on the instrument panel tip into the grommet (A) and (B) on the body panel side.

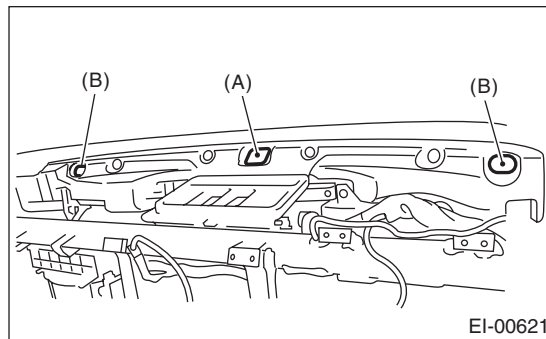

- 2) Check that the matching pins are inserted securely, and then route the harness.
- 3) Tighten the instrument panel with screws, and recheck the installation condition of instrument panel and harness routing.

Instrument Panel Assembly

EXTERIOR/INTERIOR TRIM

4) Install in the reverse order of removal.

NOTE:

How to install insulator and pad;


- Adhesive

Use polyurethane adhesive. When assembling the instrument panel assembly, wait until the adhesive has evaporated to prevent filling of the smell in the compartment.

- Double-sided tape

Use commercial double-sided tape. (Use strong double-sided adhesive tape.)

- Locations

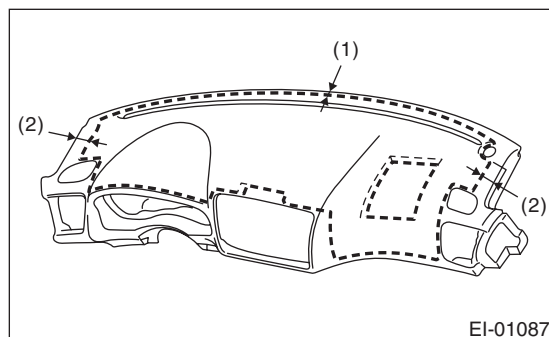

(1) 10 mm

(2) 40 mm

Apply at a position spaced by 10mm from the instrument panel front end, and 40 mm from the ends on both sides.

2. STEERING SUPPORT BEAM

1) Temporarily tighten the steering support beam with bolts, and then route the harness.

2) Make sure that there is no mutual interference in each pedal, and then tighten each bolt.


Tightening torque:

25 N·m (25.5 kgf-m, 18 ft-lb)

3) Install in the reverse order of removal.

3. INSTRUMENT PANEL ASSEMBLY (INCLUDING STEERING SUPPORT BEAM)

1) Insert the matching pins (three places) on the instrument panel tip into the grommet (A) and (B) on the body panel side.

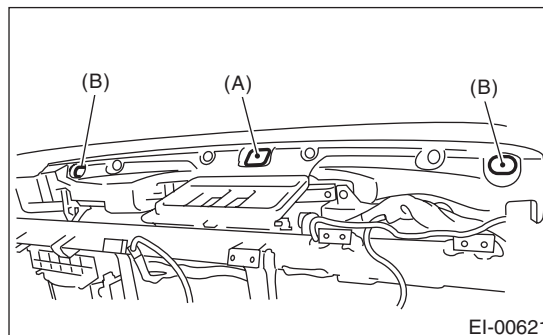

2) Check that the matching pins are inserted securely, and then route the harness.

3) Temporarily tighten the steering support beam with bolts, and then route the harness.

4) Make sure that there is no mutual interference in each pedal, and then tighten each bolt.

Tightening torque:


25 N·m (25.5 kgf-m, 18 ft-lb)

5) Install in the reverse order of removal.

23.Lower Inner Trim


A: REMOVAL

1) Remove the hook, and remove the inside scuff plate.

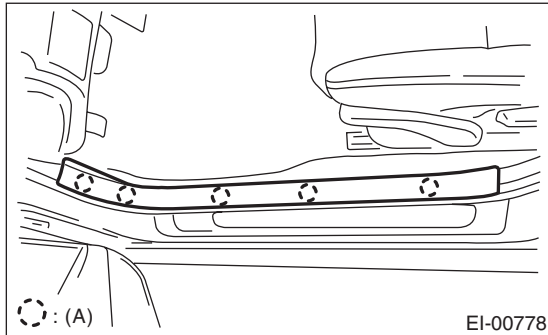


(A) Hook

2) Remove the door molding (A), and remove the outside scuff plate.

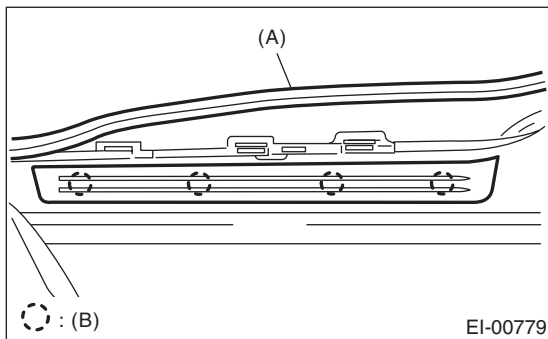


(B) Clip

3) Remove clip (A), and remove the front pillar lower trim.

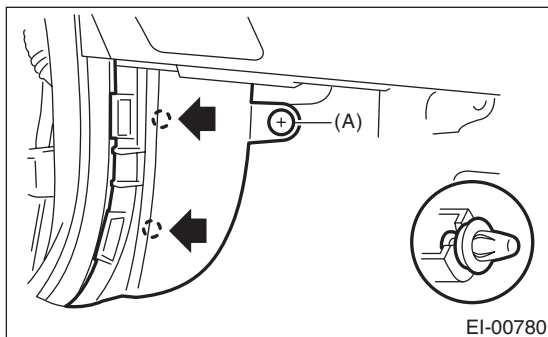


4) Remove the rear seat cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>

5) Remove clip (A), and remove the inside scuff plate.

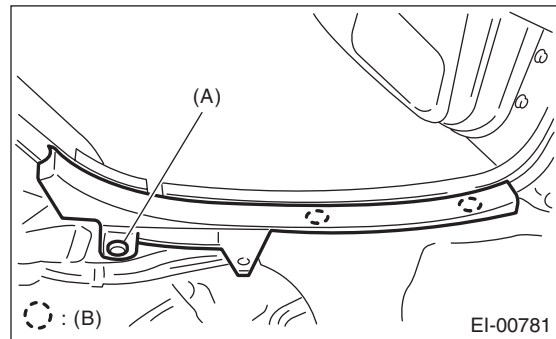

(B) Hook


6) Remove door molding (A) and door catcher cover (B), then remove the outside scuff plate.

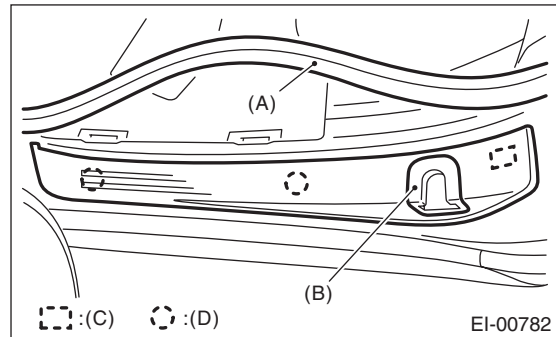

(C) Hook with plate clip

(D) Clip

7) Remove the clips of the center pillar lower trim.

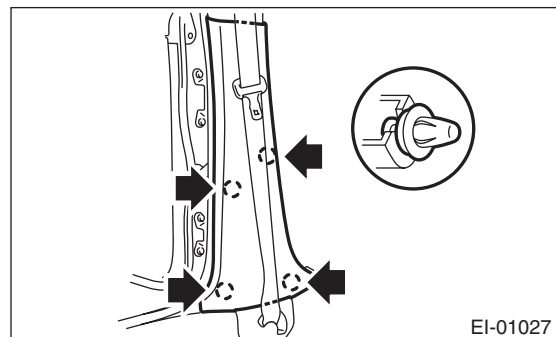


B: INSTALLATION

Install in the reverse order of removal.

24.Upper Inner Trim


A: REMOVAL

1) From the top side of the trim, remove the metal clip using a flat tip screwdriver.

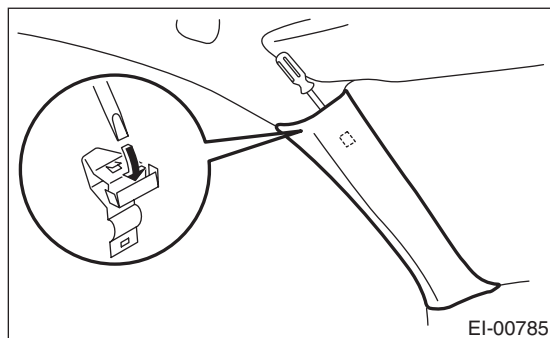


CAUTION:
When the metal clip comes off or becomes damaged, replace both trim and metal clips with new parts.

2) Remove the front pillar upper trim.

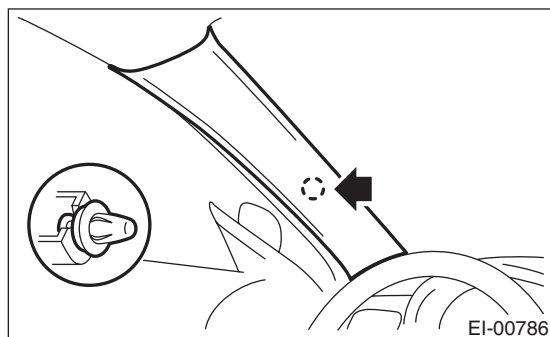


3) Remove the front inside scuff plate, rear inside scuff plate and center pillar lower trim. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>

4) Remove the cap on the upper side of the pillar trim, and remove the bolt inside.

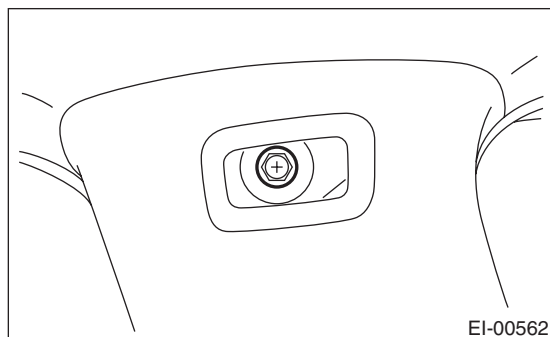

5) Remove the center pillar upper trim.

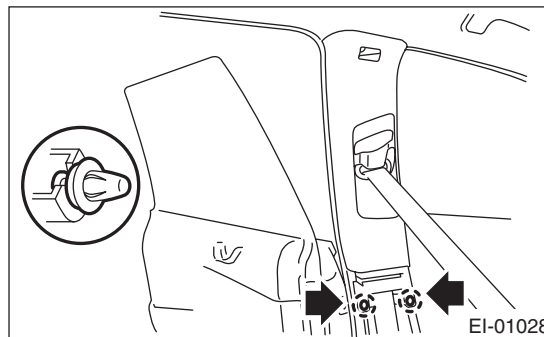

6) Remove the seat belt lower anchor bolt at the center pillar lower port. (Driver's seat)

7) Refer to the removal procedure of "Front Seat Belt" for the passenger's seat. <Ref. to SB-10, OUTER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>

B: INSTALLATION


Install in the reverse order of removal.

25. Rear Quarter Trim

A: REMOVAL

1. SEDAN MODEL

- 1) Remove the rear seat. <Ref. to SE-17, (SEDAN MODEL), REMOVAL, Rear Seat.>
- 2) Turn over the trim, and remove the quarter trim rear by pressing the claw (A) of the metal clip using a flat screwdriver, etc.

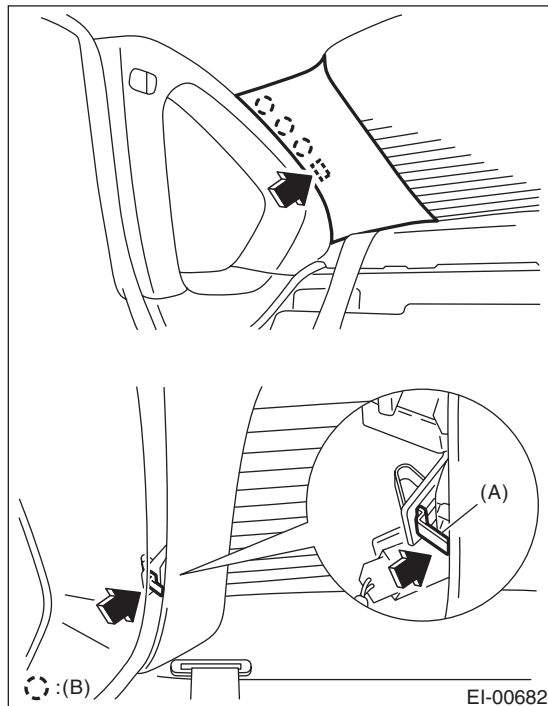


(B) Hook

CAUTION:


When the metal clip comes off or becomes damaged, replace both trim and metal clips with new parts.

- 3) Remove the cap on the upper side of the trim, and remove the bolt inside.

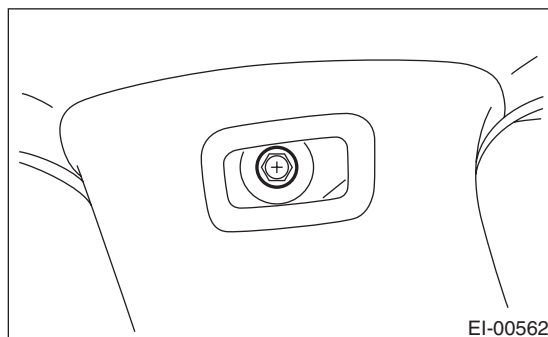

EI-00562


- 4) Remove the bolts (A), and remove the quarter trim (front).

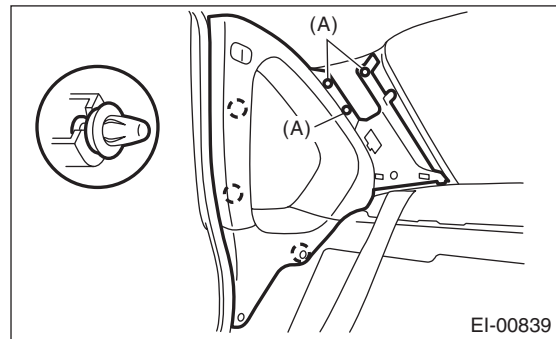

EI-00839


2. WAGON MODEL

- 1) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-17, (WAGON MODEL), REMOVAL, Rear Seat.>
- 2) Remove the cap on the upper side of the pillar trim, and remove the bolt inside.

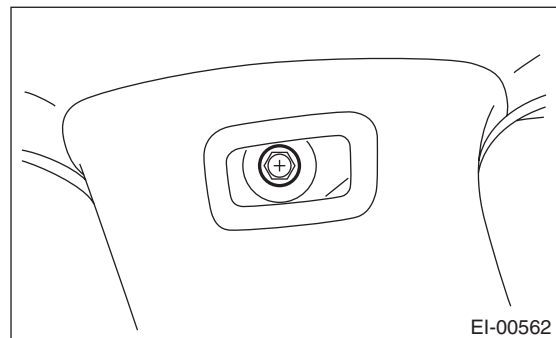


EI-00562

- 3) Remove the clip, and remove the quarter front pillar trim.

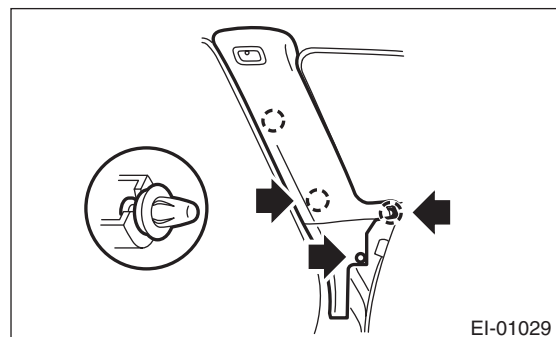

EI-01029

- 4) Remove the quarter rear pillar trim.

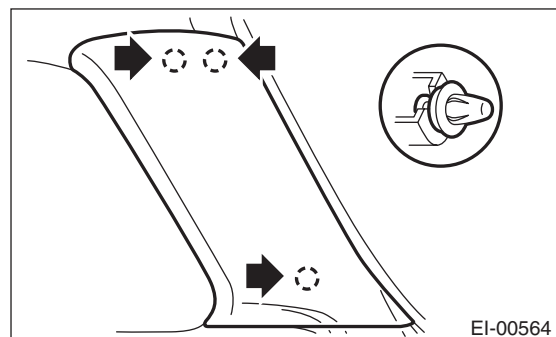


EI-00564

Rear Quarter Trim


EXTERIOR/INTERIOR TRIM

5) Remove the luggage floor box. <Ref. to EI-71, REMOVAL, Luggage Floor Box.>


6) Remove the luggage floor end cover.

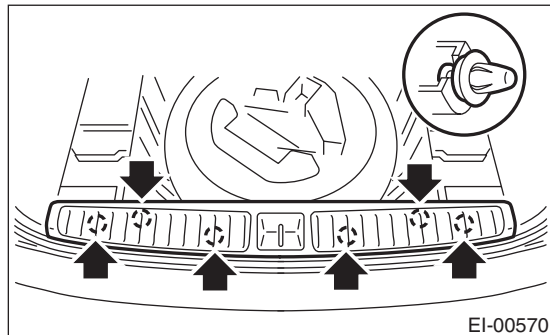

7) Remove the woofer cover. (Model with woofer)

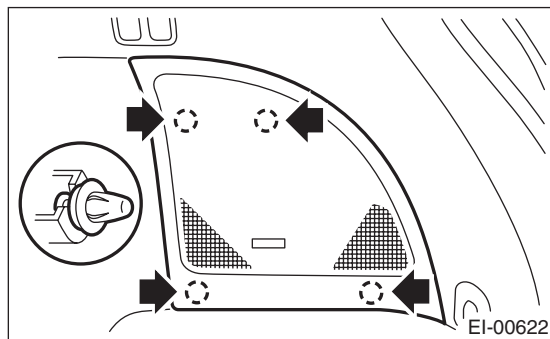

8) Remove the screws (A) and bolts (B), and remove the quarter lower trim.

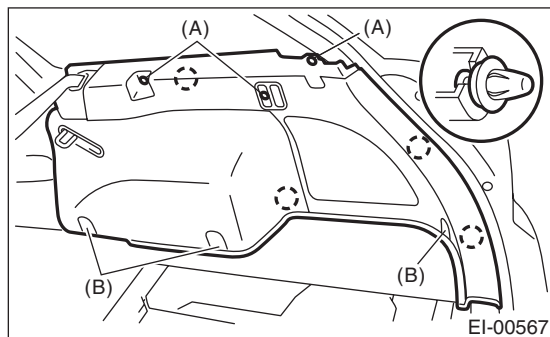

NOTE:

- Remove the screw cover on the tonneau cover installation area.
- Pull out the shopping bag hook, and remove the screw on the far end.


B: INSTALLATION

Install in the reverse order of removal.

26.Sun Visor


A: REMOVAL

1) Remove the cover, loosen the mounting screws, and remove the sun visor.

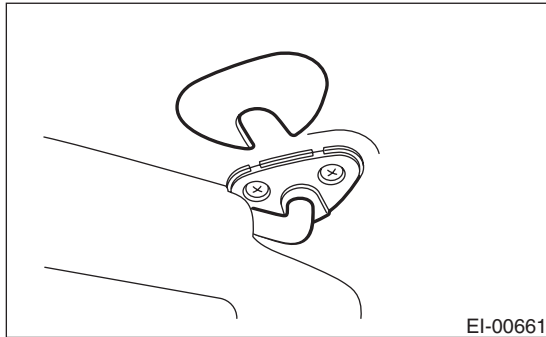

2) Disconnect the connector. (Model with vanity mirror light)

3) While pressing the (A) on the both side using flat tip screwdriver, pull the sun visor hook to remove it.

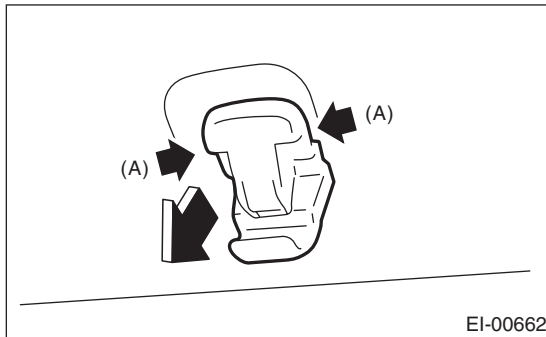


B: INSTALLATION

Install in the reverse order of removal.


27.Assist Grip

A: REMOVAL

- 1) Remove the screw cover, and remove the screw inside.
- 2) Pull the left side of assist grip, and rotate the right side of it counterclockwise to remove.

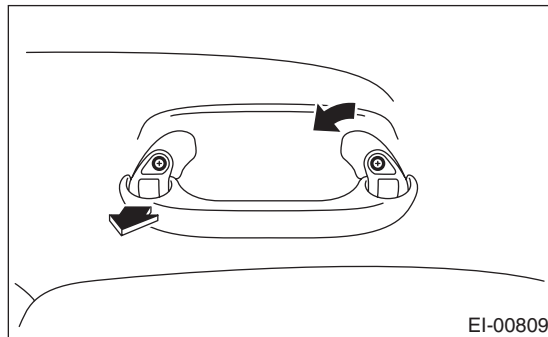

- 3) Remove the roof trim. <Ref. to EI-65, REMOVAL, Roof Trim.>
- 4) Remove the bolts, and remove the assist grip bracket.

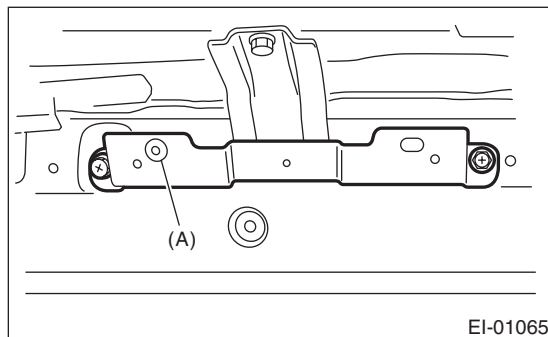

(A) Grommet

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to install the grommet to assist grip bracket.


When the assist grip is installed with no grommet, it will cause the grip to not return properly.

28. Roof Trim


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 3) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 4) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 5) Remove the center console. <Ref. to EI-53, REMOVAL, Center Console.>
- 6) Remove the select lever. (AT model)
<Ref. to CS-19, REMOVAL, Select Lever.>
- 7) Remove the spot map light. <Ref. to LI-30, REMOVAL, Spot Map Light.>
- 8) Remove the room light. <Ref. to LI-31, REMOVAL, Room Light.>
- 9) Remove the sun visor. <Ref. to EI-63, REMOVAL, Sun Visor.>
- 10) Remove the assist grip. <Ref. to EI-64, REMOVAL, Assist Grip.>
- 11) Remove the upper inner trim. <Ref. to EI-60, REMOVAL, Upper Inner Trim.>
- 12) Remove the rear quarter trim. <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 13) Remove the sunroof opening trim. (Models with sunroof)

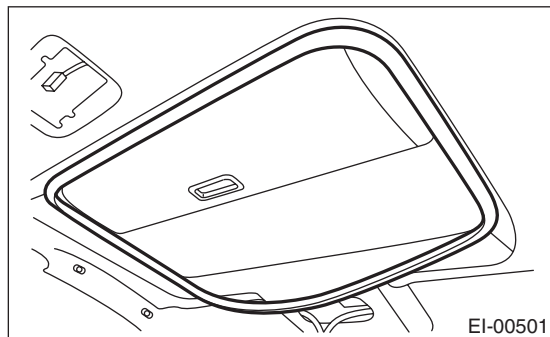

- 14) Remove the clips and each harness, and remove the roof trim.
- 15) Pull out the roof trim from the vehicle.

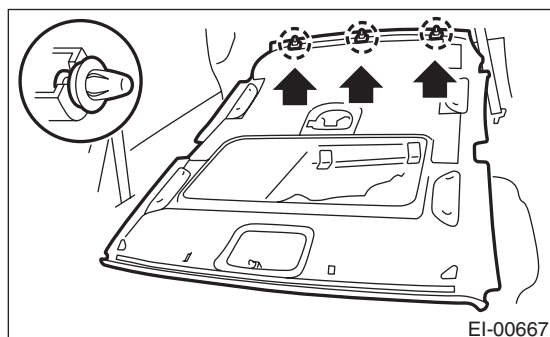


2. WAGON MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the spot map light. <Ref. to LI-30, REMOVAL, Spot Map Light.>
- 3) Remove the room light. <Ref. to LI-31, REMOVAL, Room Light.>
- 4) Remove the luggage room light. <Ref. to LI-32, REMOVAL, Luggage Room Light.>
- 5) Remove the sun visor. <Ref. to EI-63, REMOVAL, Sun Visor.>
- 6) Remove the assist grip. <Ref. to EI-64, REMOVAL, Assist Grip.>
- 7) Remove the upper inner trim. <Ref. to EI-60, REMOVAL, Upper Inner Trim.>
- 8) Remove the rear quarter trim. <Ref. to EI-61, WAGON MODEL, REMOVAL, Rear Quarter Trim.>

CAUTION:

Do not remove the roof end trim with excessive force. Otherwise the roof trim may become damaged. Roof trim and roof end trim are fastened by rivets.


- 9) Remove the sunroof opening trim. (Models with sunroof)

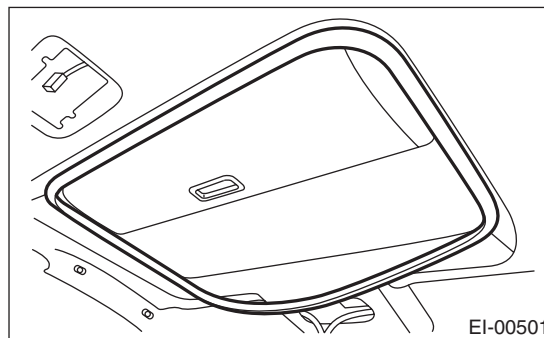

- 10) Remove the clips and each harness, pull out the rear center seat belt, and remove the roof trim.

CAUTION:

Do not remove the roof end trim with excessive force. Otherwise the roof trim may become damaged.

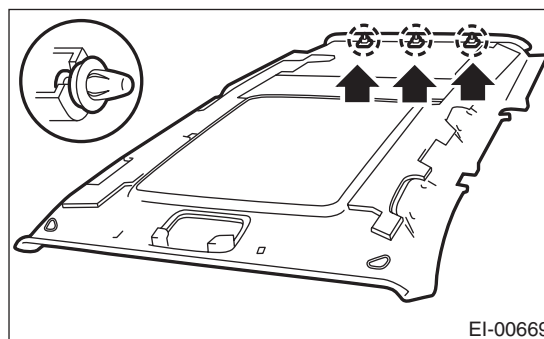

B: INSTALLATION

Install in the reverse order of removal.


Rear Gate Trim

EXTERIOR/INTERIOR TRIM


29.Rear Gate Trim

A: REMOVAL

1) Remove clips (A), and remove the rear gate pillar trim.

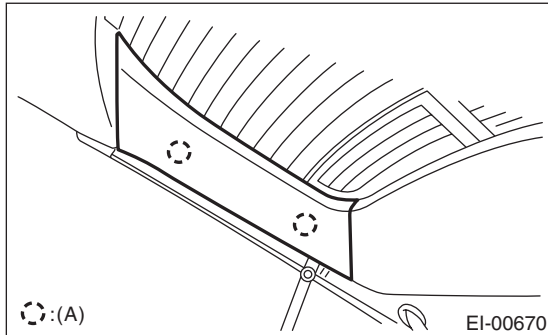


2) Remove the clips, and remove the rear gate upper trim.

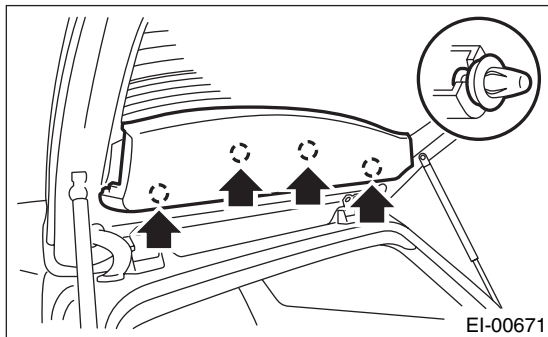


3) Remove the cover in the inner handle, and loosen the inside screw.


4) Turn over the weather strip, and remove the clips.

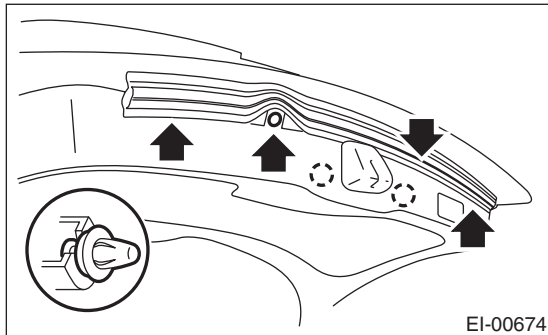

5) Remove the clips (A), and remove the rear gate lower trim.

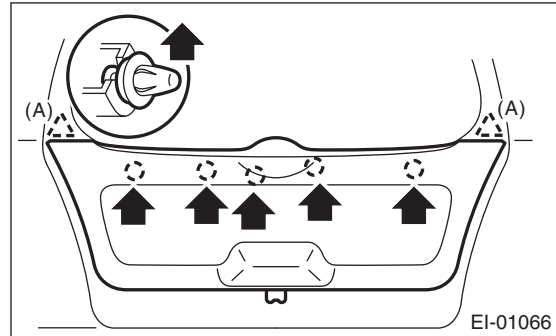


6) Remove the rear gate weather strip.

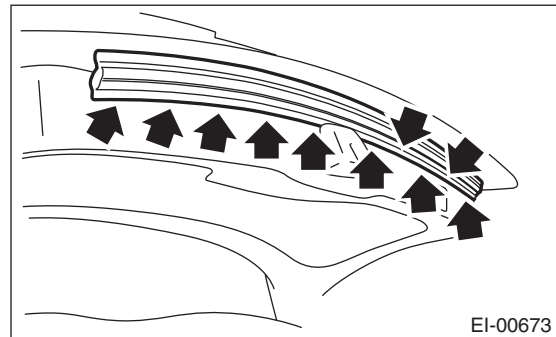

NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use a clip remover to remove.

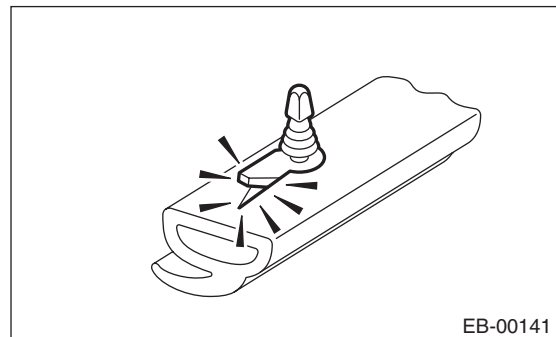


B: INSTALLATION

Install in the reverse order of removal.


30.Rear Shelf Trim

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim. <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Remove the high-mounted stop light. <Ref. to LI-29, REMOVAL, High-mounted Stop Light.>
- 4) Remove the rear seat cushion. <Ref. to SE-17, (WAGON MODEL), REMOVAL, Rear Seat.>
- 5) Remove the lower anchor bolt of the rear center seat belt.

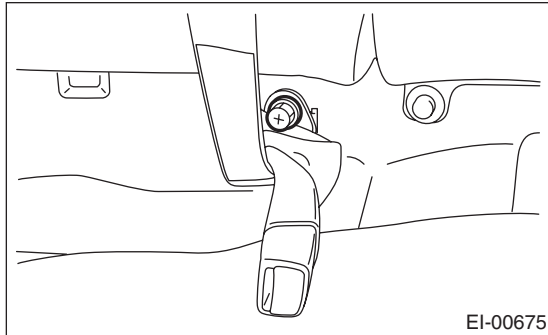

- 6) After disconnecting the high-mounted stop light harness connector (A) and removing the five clips, remove the rear shelf trim by pulling it frontward.

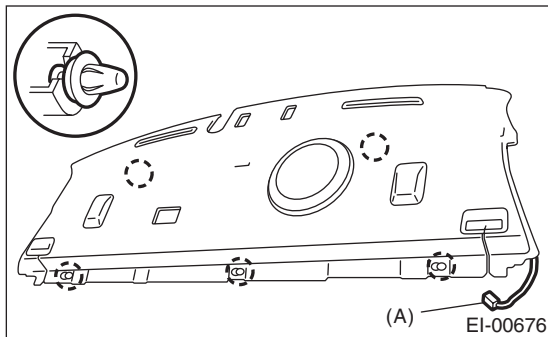


B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Securely insert the vehicle body panel into the hook of the rear shelf trim center, and install the rear shelf trim.

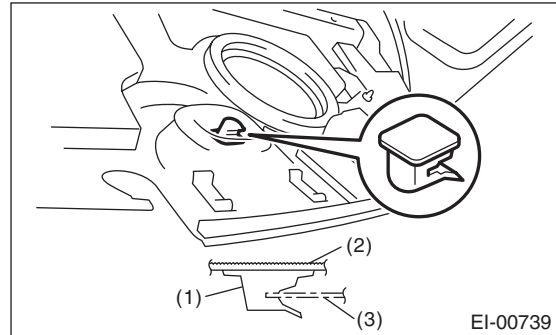


- (1) Hook
- (2) Rear Shelf Trim
- (3) Vehicle body panel

31.Trunk Room Trim


A: REMOVAL

1. TRUNK LID TRIM

1) Remove the trim clips and stopper rubber, and remove the trunk lid trim.

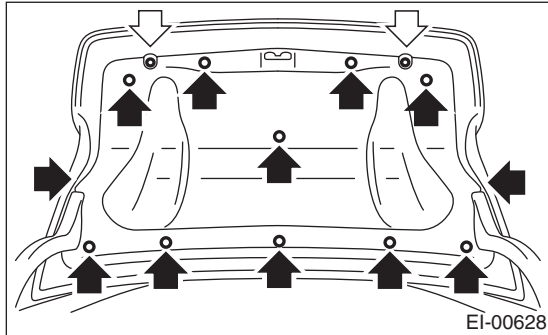


2) Remove the four claws, and remove the trunk handle cover (1).

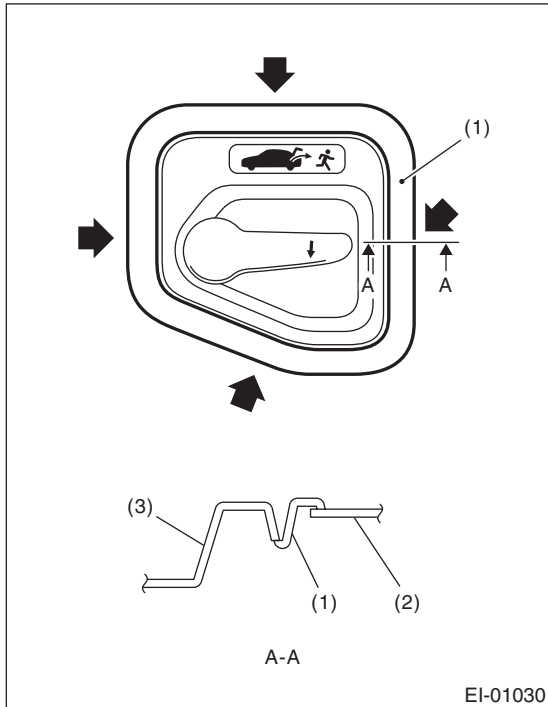


- (1) Trunk handle cover
- (2) Trunk lid trim
- (3) Trunk release handle

3) Remove clip (A) of the trunk side trim, and remove the trunk lid arm cover.

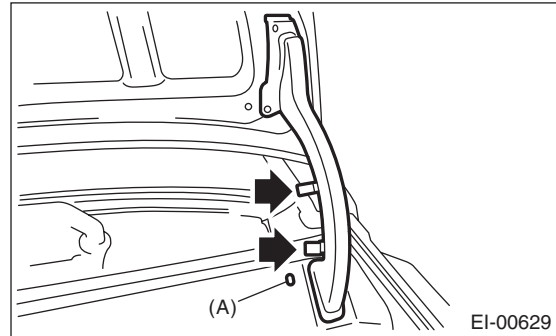


2. TRUNK ROOM TRIM

1) Remove the trunk room mat.

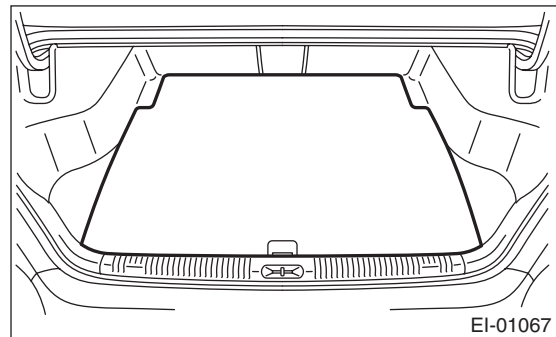


2) Remove the trim clips (A), and remove the trunk room end cover.

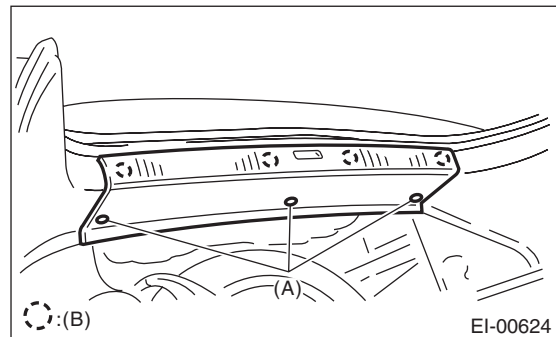


(B) Clip


3) Remove the rear seat backrest, and remove the trim clips at the front side of the trunk side trim.
<Ref. to SE-17, (WAGON MODEL), REMOVAL, Rear Seat.>

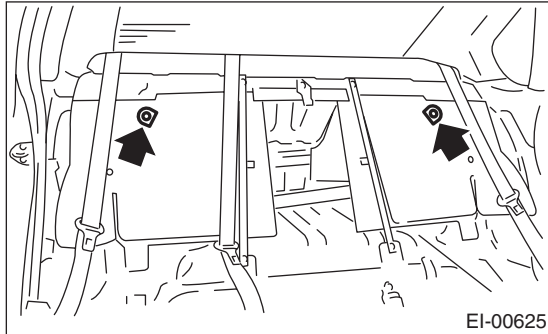

4) Insert the flat tip screwdriver from the lower side of the trunk hook, and then remove the trunk hook by rotating it 90°.

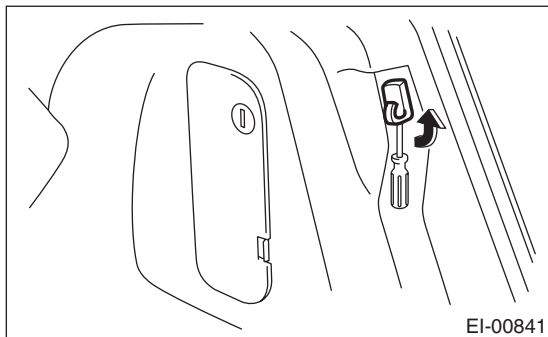

5) Remove the trim clips, and remove the trunk side trim.

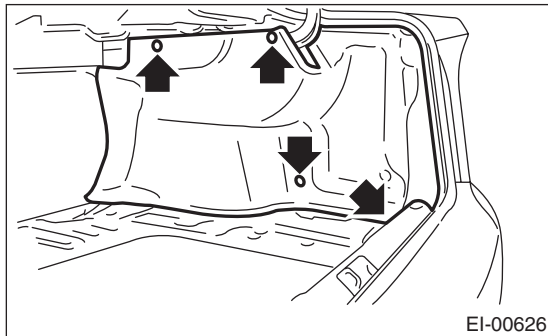


B: INSTALLATION

Install in the reverse order of removal.

32.Floor Mat

A: REMOVAL

- 1) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 2) Remove the rear seat cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 3) Remove the console box. <Ref. to EI-52, Console Box.>
- 4) Remove the console side panel. <Ref. to EI-53, REMOVAL, Center Console.>
- 5) Remove the lower inner trim. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>
- 6) Remove the clips from the floor mat.
- 7) Remove the mat hook on both sides.
- 8) Remove the mat from toe board area.
- 9) Remove the mat from rear heater duct.
- 10) Roll the mat, and then take it out of opened rear door.

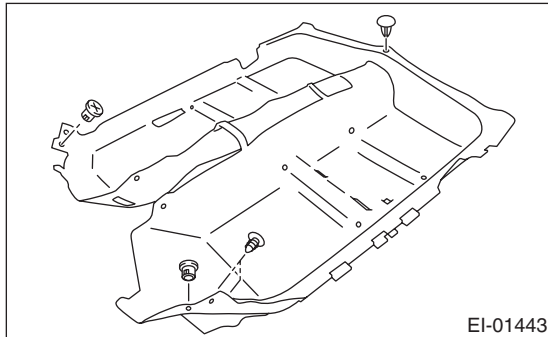

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Secure the mat firmly with hook and clip.
- Insert the mat edge firmly into the groove of side sill cover.

33.Luggage Floor Box

A: REMOVAL

- 1) Remove the luggage floor mat.
- 2) Remove the clips, and remove the luggage floor box.

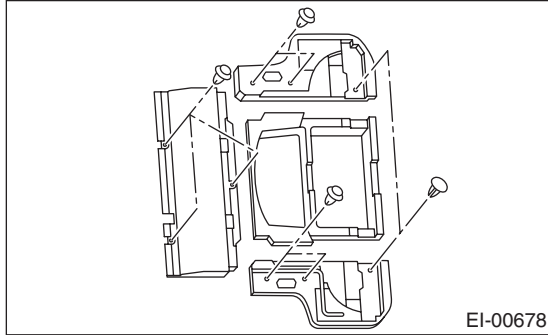


B: INSTALLATION

Install in the reverse order of removal.


34.Trunk Lid Garnish

A: REMOVAL


1) Remove the license plate, and loosen bolts (A).

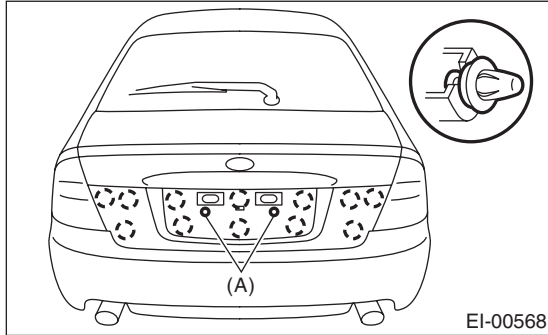

2) Remove the clip in the upper corner of the trunk lid garnish.

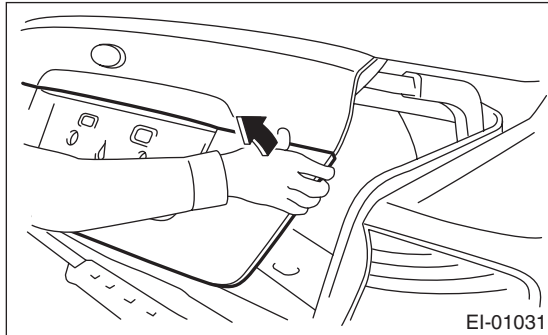

3) Place your hands between the trunk lid garnish and the trunk lid panel, and remove the trunk lid garnish starting from the edge, in order.

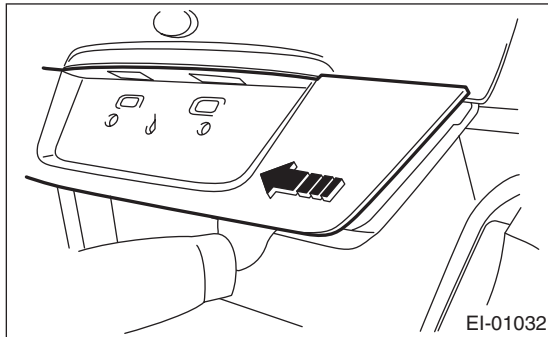

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

7.5 N·m (0.77 kgf-m, 5.53 ft-lb)


35.Rear Gate Garnish

A: REMOVAL


- 1) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 2) Remove clip (A), and remove the rear gate panel side cover.

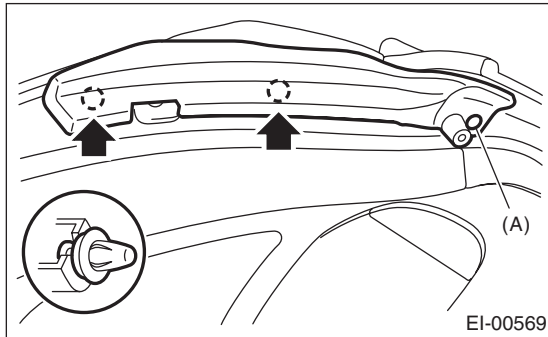

- 3) Remove the hexagon cap nut.

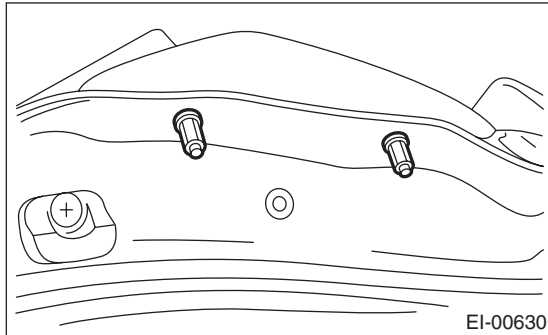

- 4) Remove the nuts, disconnect each connector, and remove the rear gate garnish.

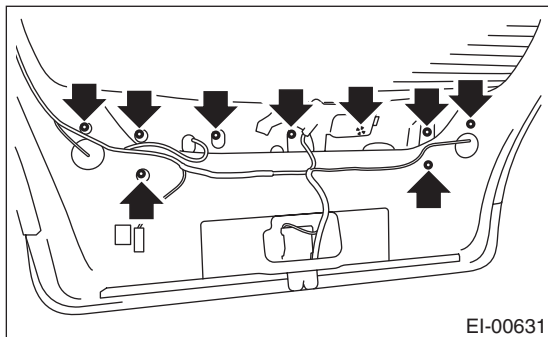

B: INSTALLATION


Install in the reverse order of removal.

36.Heat Shield Cover

A: REMOVAL

1. FRONT HEAT SHIELD COVER


Remove the four bolts to remove the front heat shield cover.

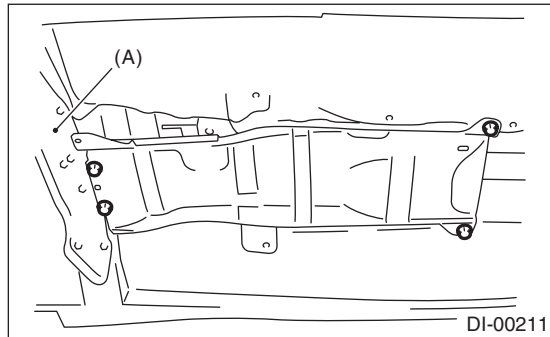

(A) Transmission mount

2. CENTER HEAT SHIELD COVER


Remove the nut and bolt to remove center heat shield cover.

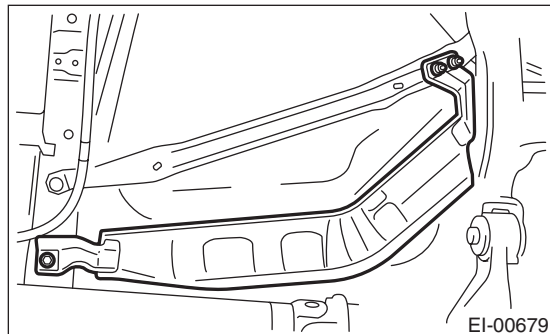

3. REAR HEAT SHIELD COVER

1) Remove the muffler. <Ref. to EX(H4SO)-10, REMOVAL, Muffler.> <Ref. to EX(H4DOTC)-13, REMOVAL, Muffler.>

2) Remove the four bolts to remove the rear heat shield cover.

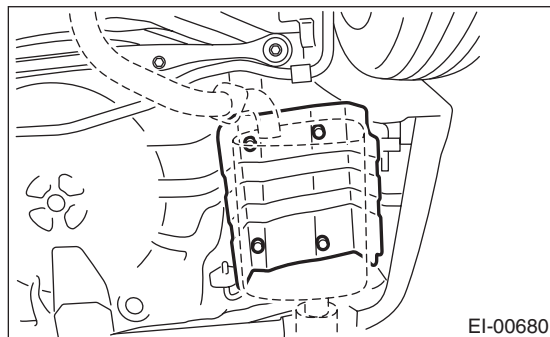

B: INSTALLATION

Install in the reverse order of removal.


37.Ornament

A: INSTALLATION

1. LETTER MARK

Adhere the letter mark according to the following measurements.

- Sedan model

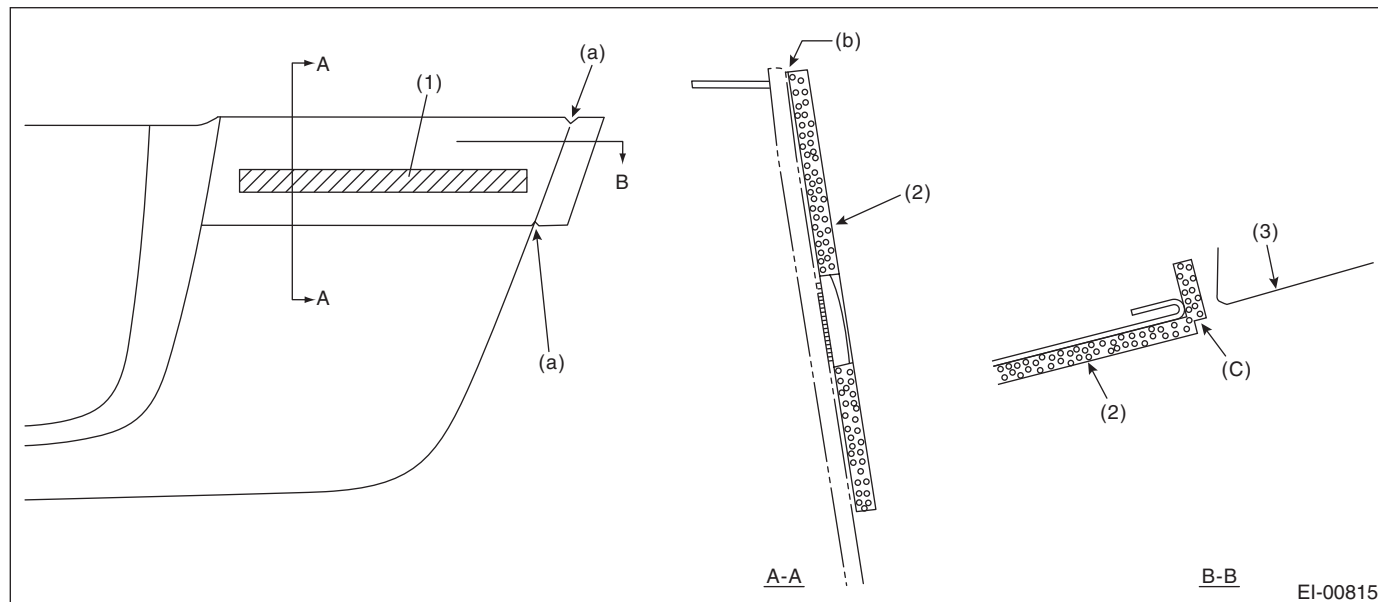

EI-00815

(a) Apply the application tape by aligning the cut out to the edge of the trunk lid garnish.

(b) Apply the application tape by aligning with the end of the radius, at the upper edge of the trunk lid garnish.

(c) Align the slit of the application tape to the panel end.

(1) Letter mark


(2) Application tape

(3) Rear combination light

Ornament

EXTERIOR/INTERIOR TRIM

• Wagon model

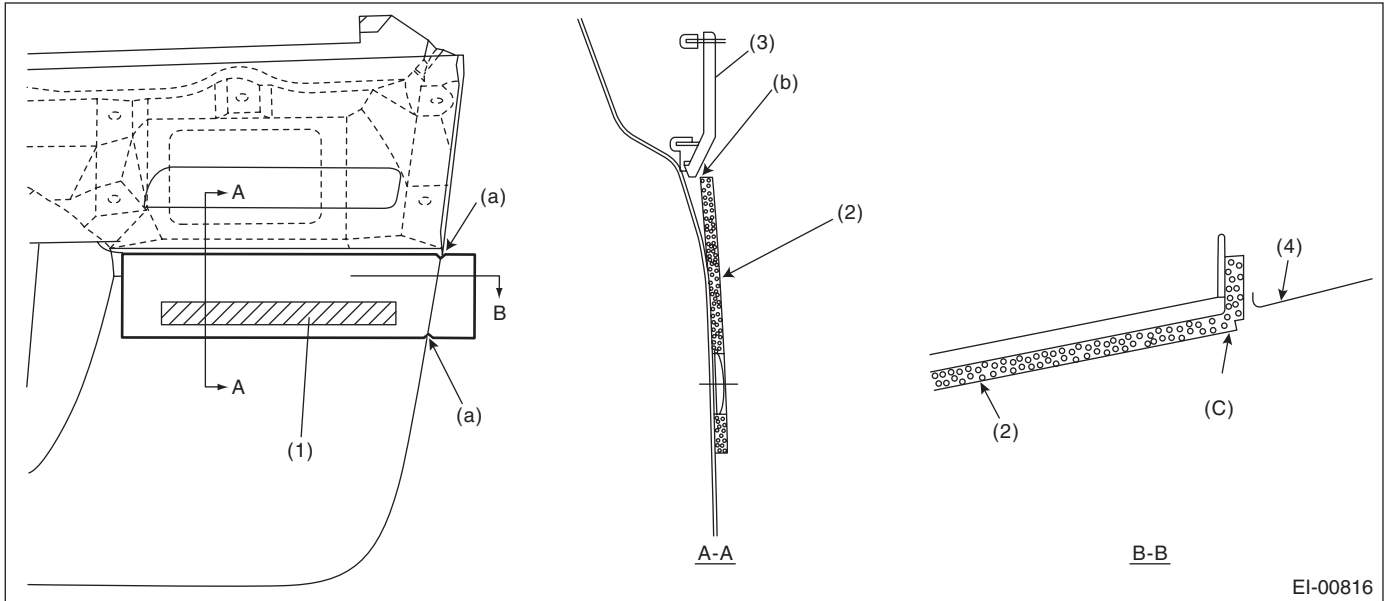

(a) Apply the application tape by aligning the cut out to the edge of the rear gate panel.

(b) Apply the application tape by aligning it with the outer bottom end of the rear gate garnish.

(c) Align the slit of the application tape to the panel end.

(1) Letter mark

(3) Rear gate garnish


(4) Rear combination light

(2) Application tape

2. AWD STICKER

Apply the AWD sticker from inside of the glass according to the following dimensions.

• Sedan model

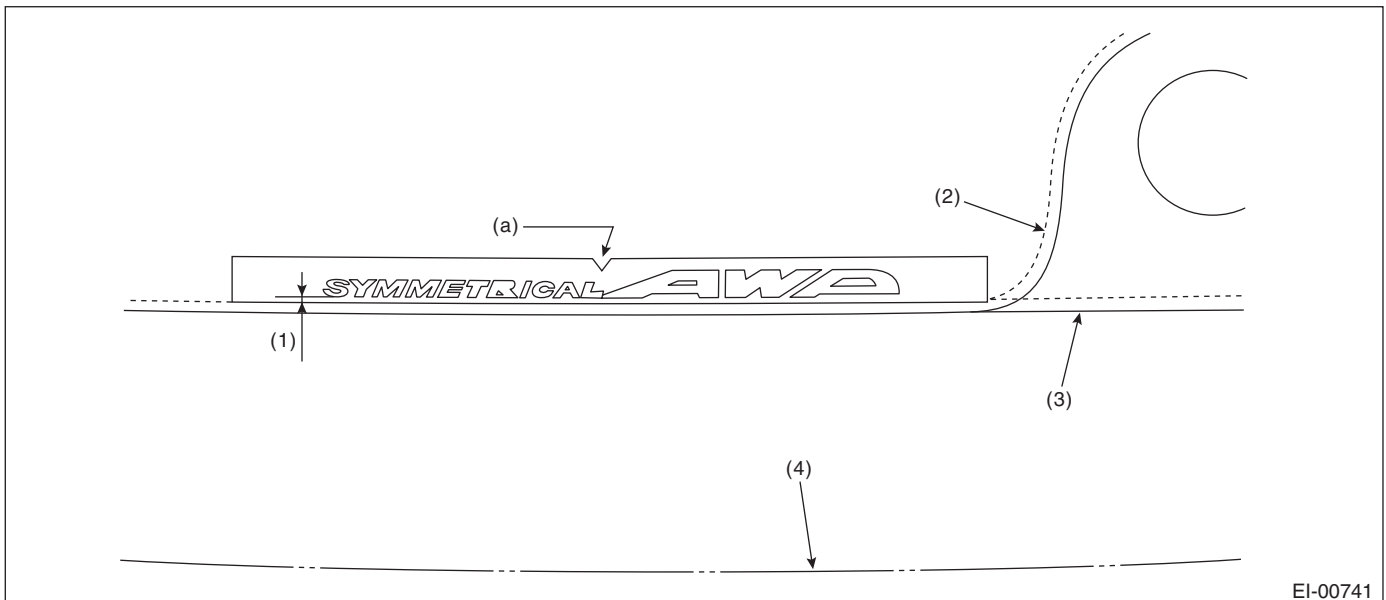

(a) Apply the application tape by aligning the cut out to the edge of the rear glass center.


(1) 1 mm (0.04 in)

(3) Gradation end of the ceramic print (without rear wiper)

(4) End of rear glass


(2) Gradation end of the ceramic print (with rear wiper)

- Wagon model (RH side)

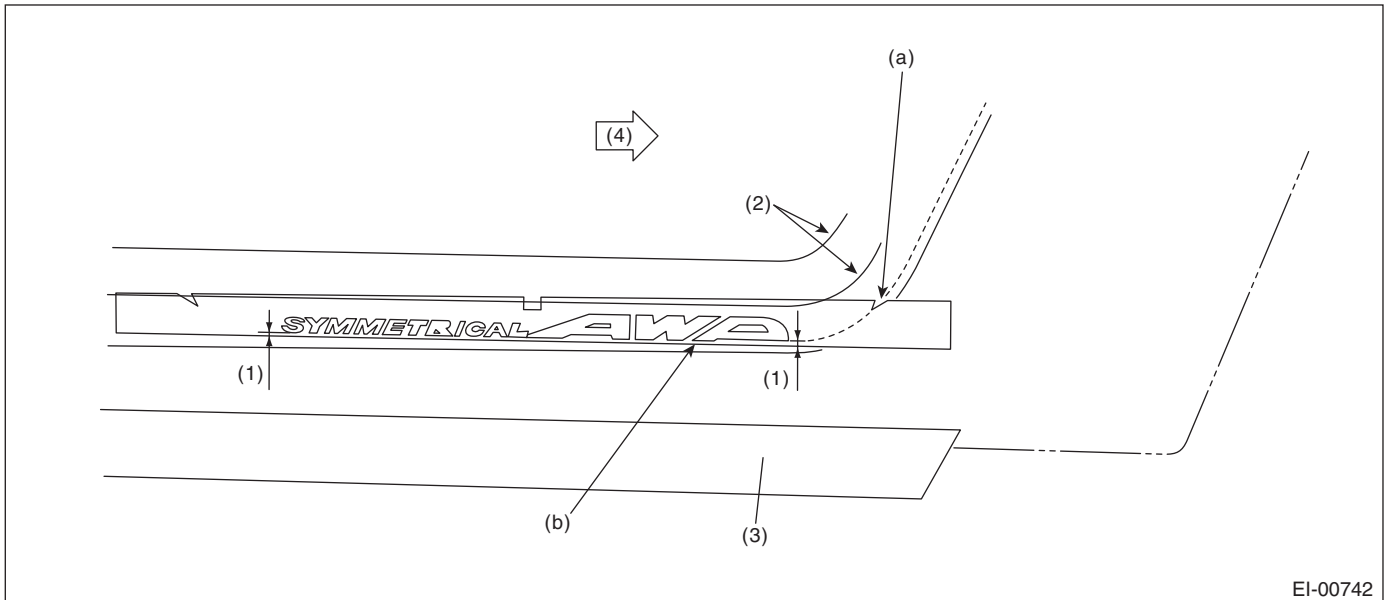

EI-00742

- Wagon model (LH side)

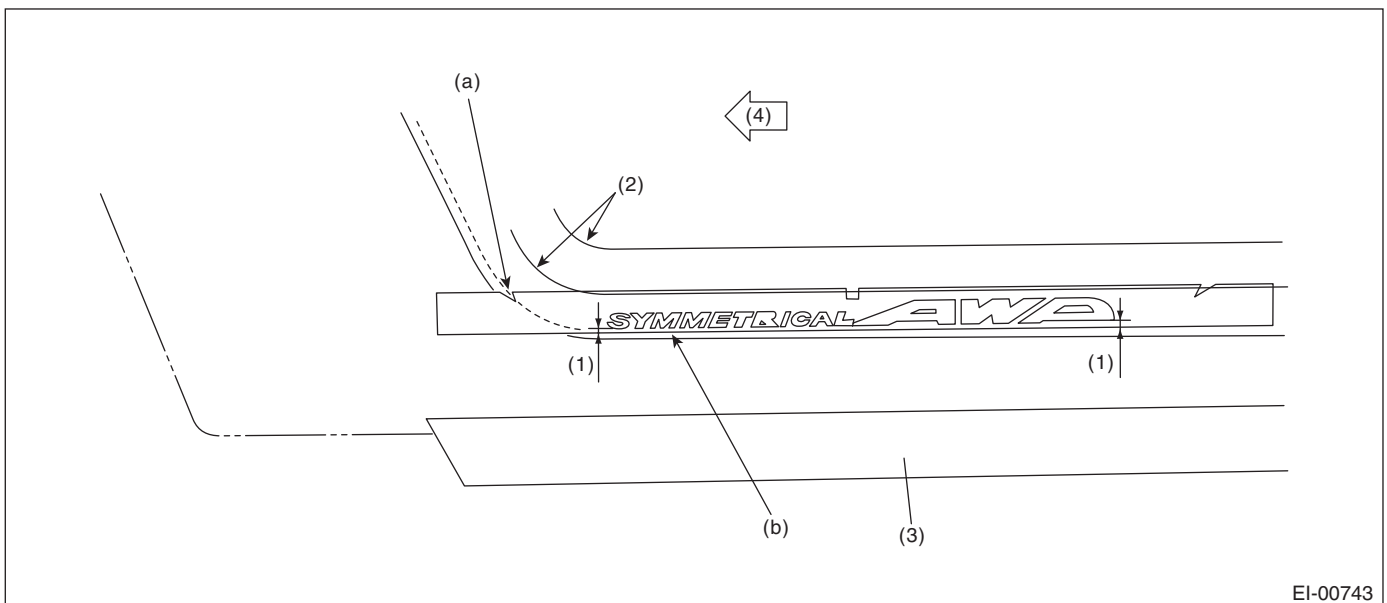

EI-00743

(a) Apply the application tape by aligning the cut out to the ceramic print.

(b) Gradation end of the ceramic print

(1) 1 mm (0.04 in)

(3) Molding

(4) Front side of vehicle

(2) Glass antenna wire

EXTERIOR BODY PANELS



	Page
1. General Description	2
2. Front Hood	13
3. Front Fender	15
4. Front Door	16
5. Front Sealing Cover	19
6. Rear Door	20
7. Rear Sealing Cover	23
8. Trunk Lid	24
9. Rear Gate	26


General Description

GLASS/WINDOWS/MIRRORS

1. General Description

A: COMPONENT


1. FIXED GLASS (SEDAN MODEL)

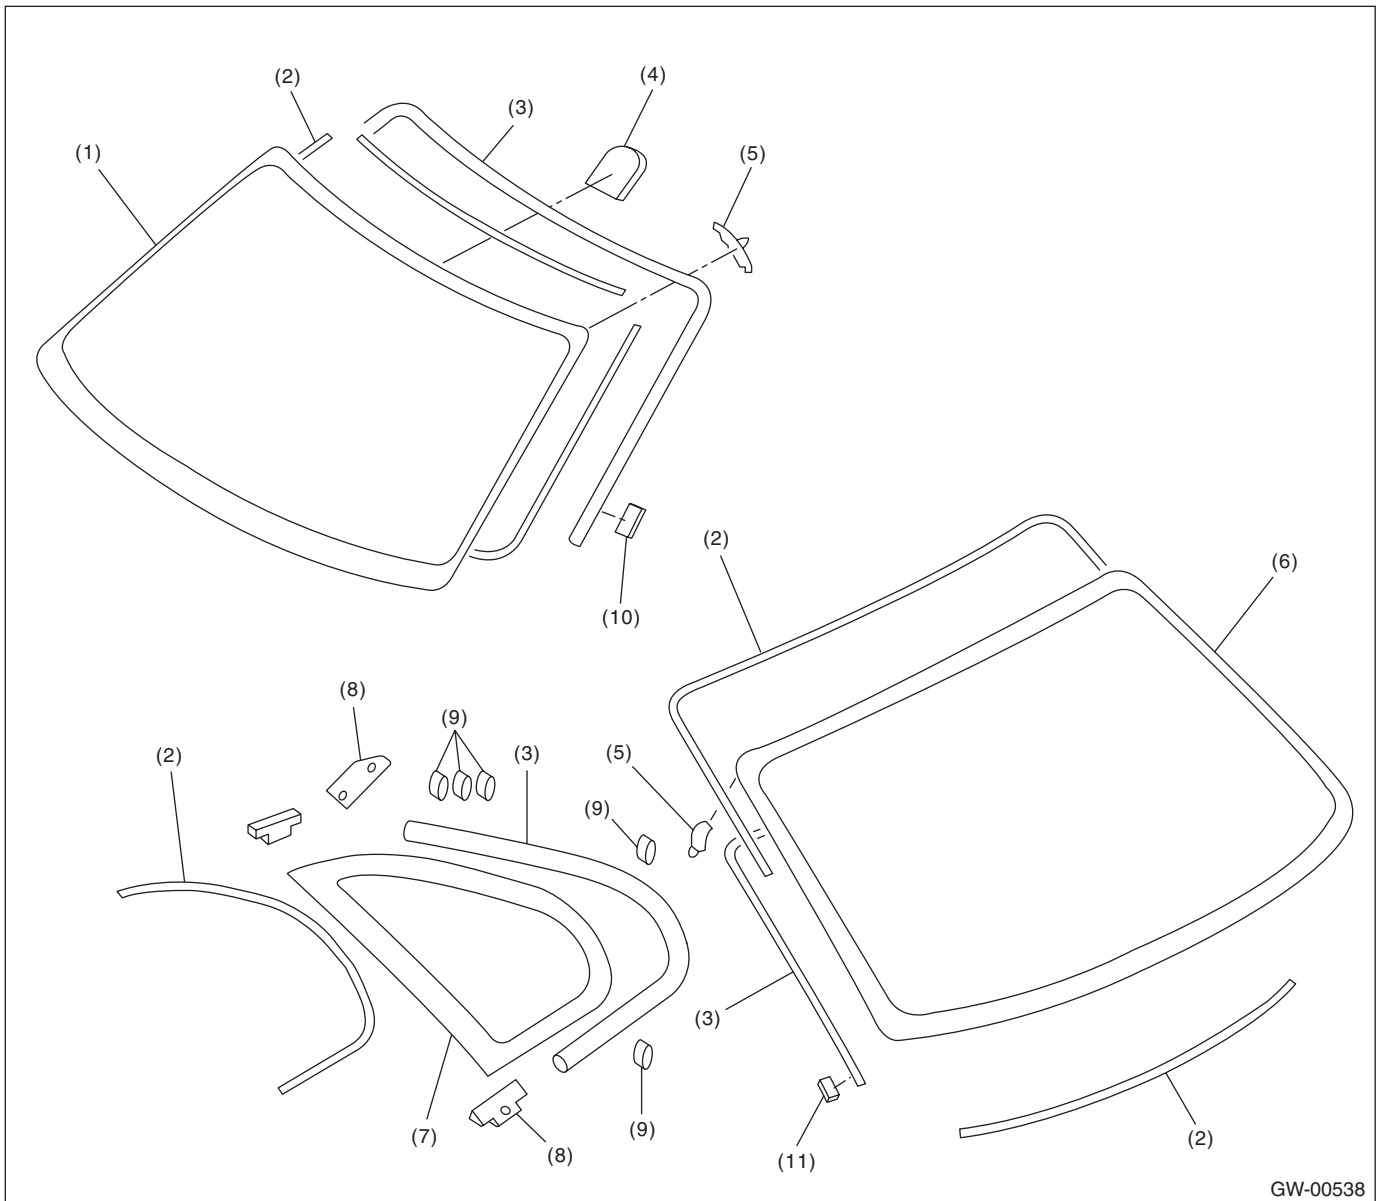

GW-00538

- | | | |
|---------------------------|-----------------------|-------------|
| (1) Windshield glass | (5) Locating pin | (9) Clip |
| (2) Dam rubber | (6) Rear window glass | (10) Seal |
| (3) Molding | (7) Six light glass | (11) Spacer |
| (4) Rearview mirror mount | (8) Bracket | |

2. FIXED GLASS (WAGON MODEL)

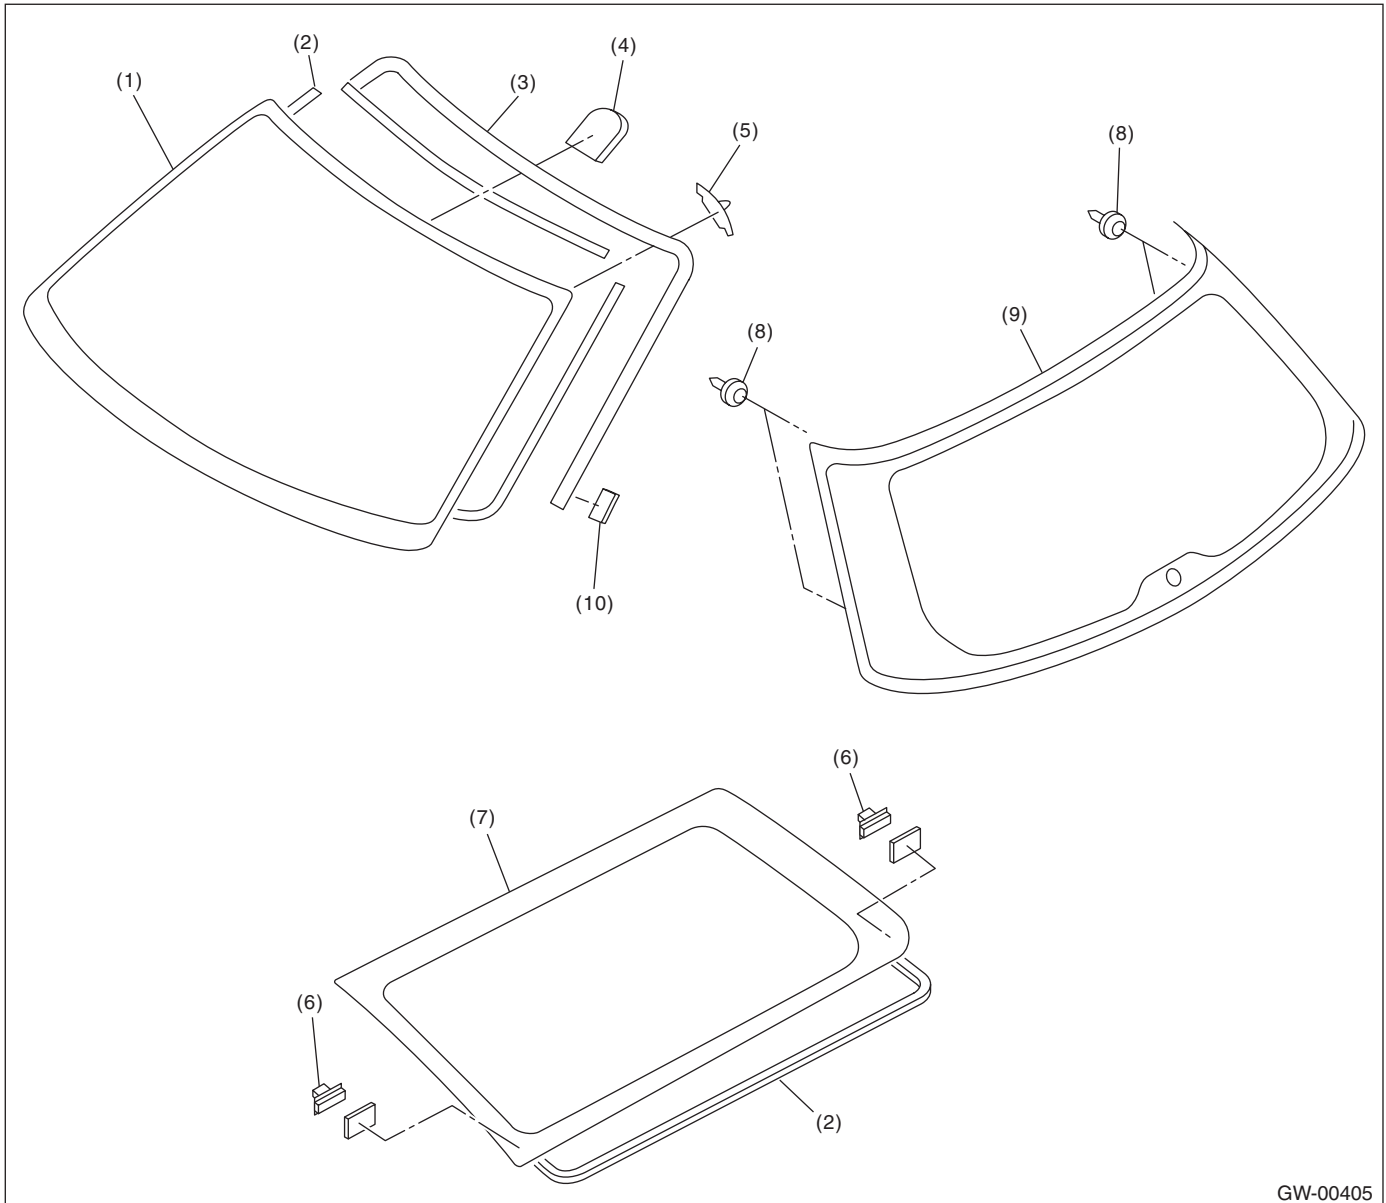


GW-00405

- | | | |
|---------------------------|------------------------|---------------------|
| (1) Windshield glass | (5) Locating pin | (8) Locating pin |
| (2) Dam rubber | (6) Fastener | (9) Rear gate glass |
| (3) Molding | (7) Rear quarter glass | (10) Seal |
| (4) Rearview mirror mount | | |

General Description

GLASS/WINDOWS/MIRRORS

3. FRONT DOOR GLASS

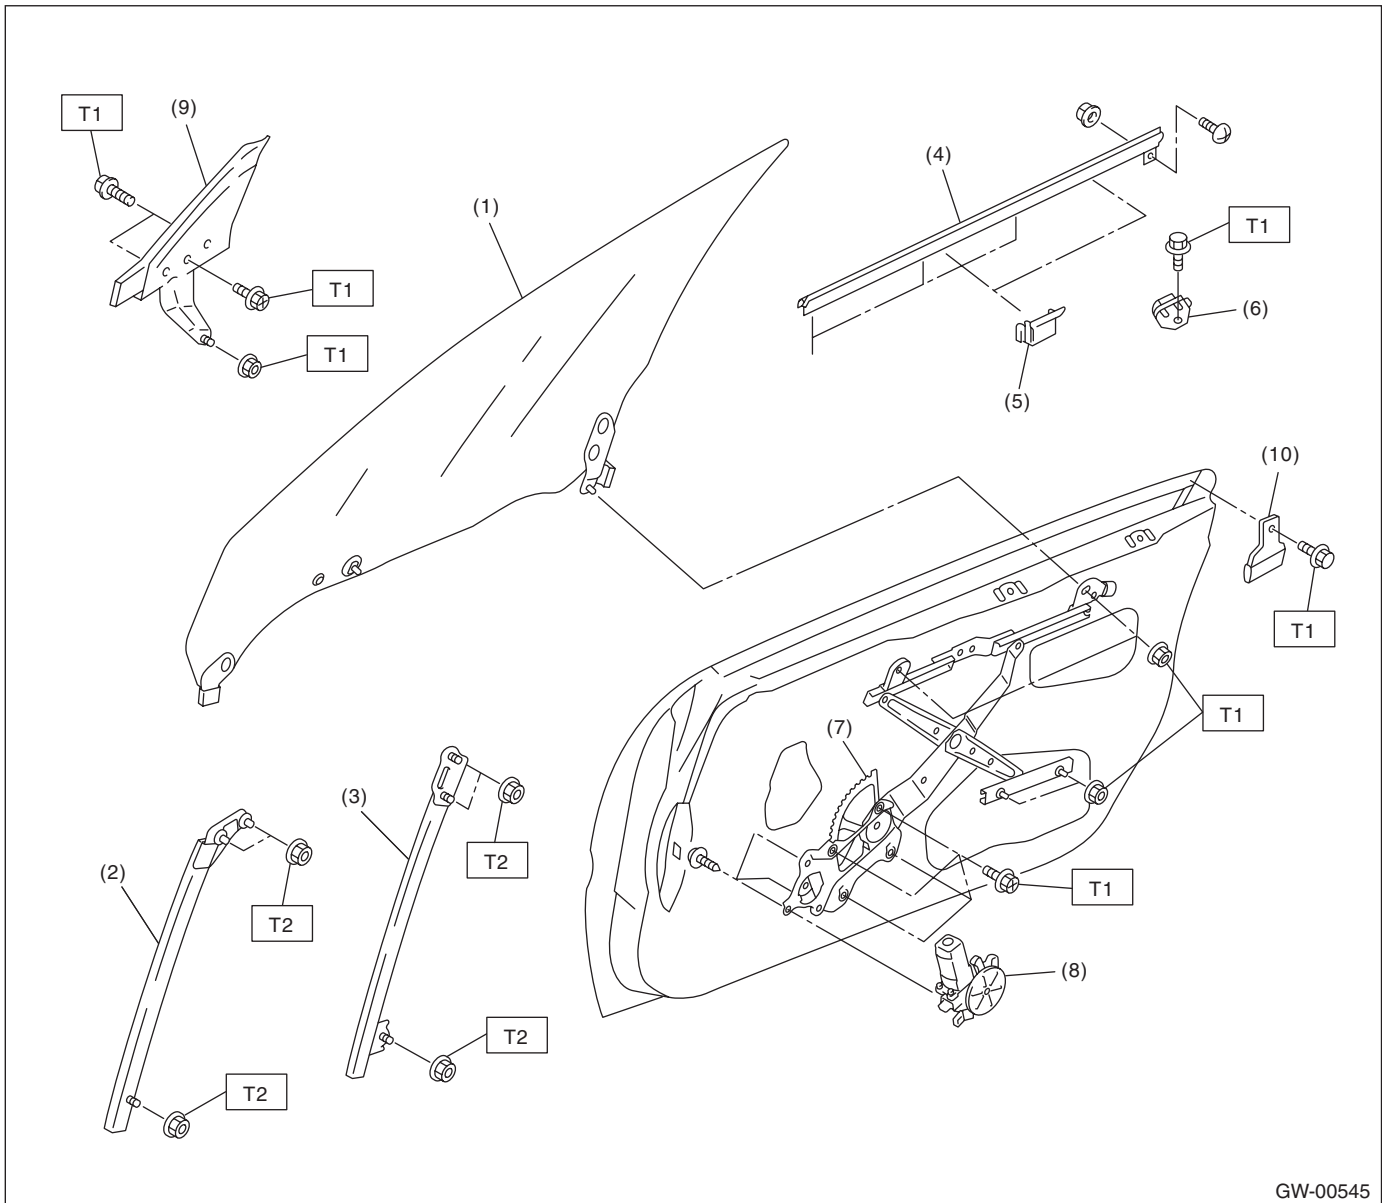


- | | |
|------------------------|------------------------|
| (1) Glass | (6) Stabilizer (inner) |
| (2) Door sash (Front) | (7) Regulator ASSY |
| (3) Door sash (Rear) | (8) Motor ASSY |
| (4) Weather strip | (9) Mirror gusset |
| (5) Stabilizer (outer) | (10) Guide ASSY |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.4 (0.75, 5.5)

T2: 13.7 (1.4, 10.1)

4. REAR DOOR GLASS

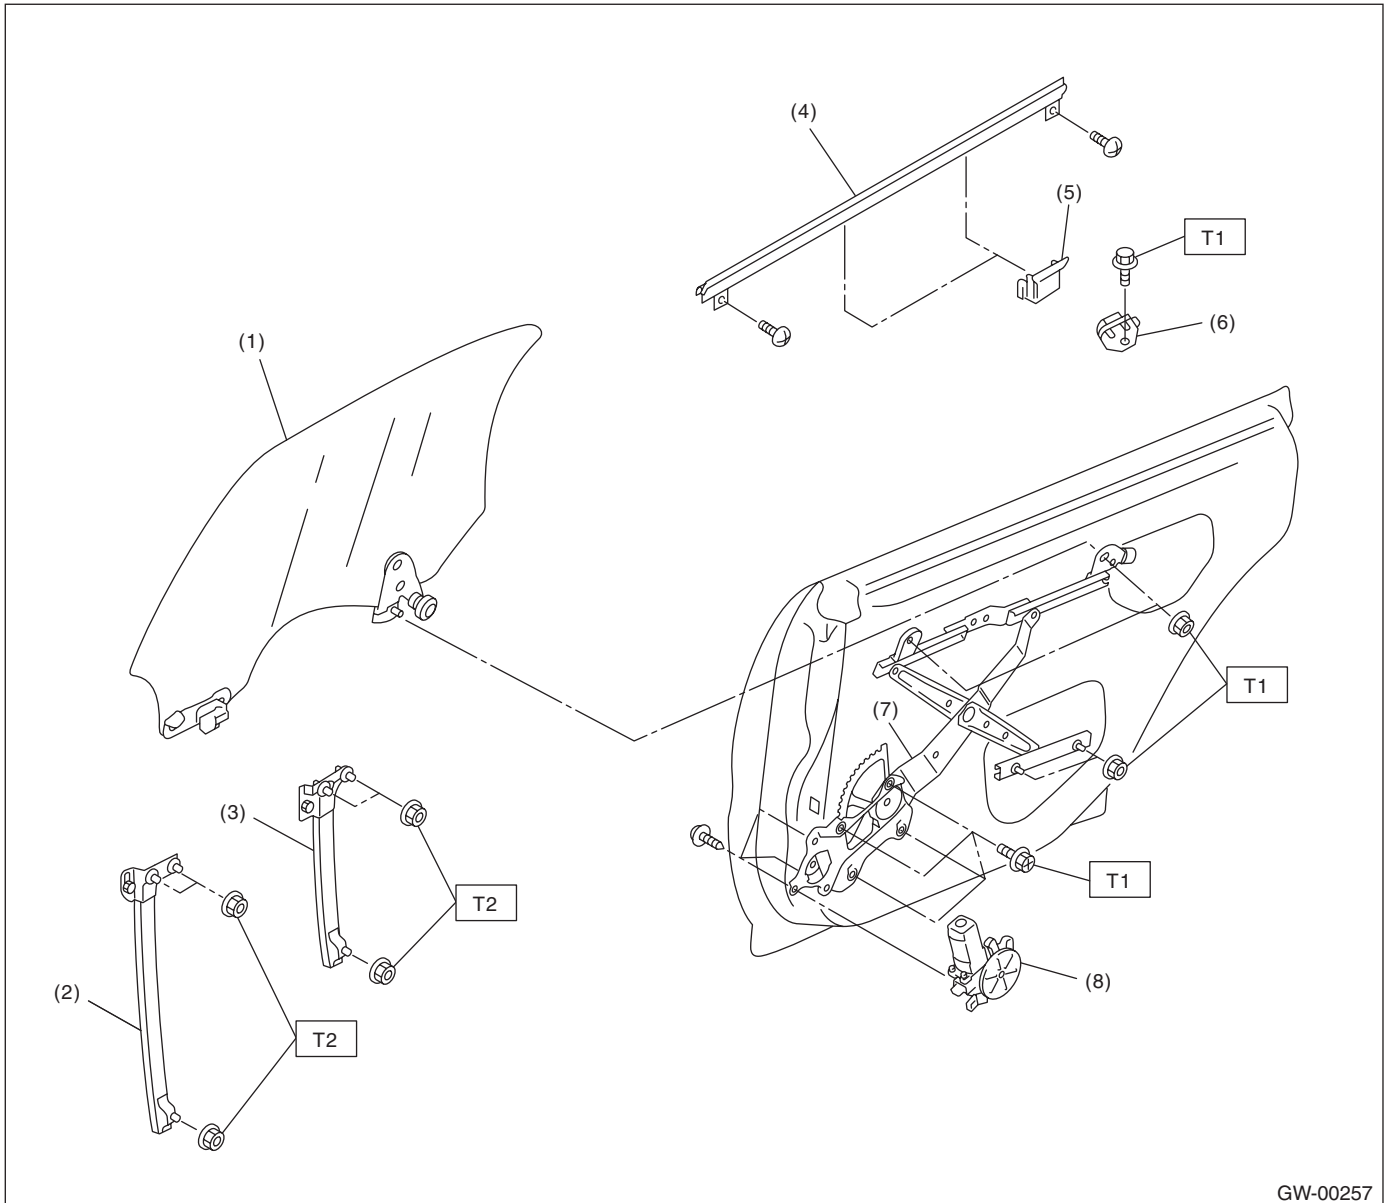

GW-00257

- | | |
|-----------------------|------------------------|
| (1) Glass | (5) Stabilizer (outer) |
| (2) Door sash (Front) | (6) Stabilizer (inner) |
| (3) Door sash (Rear) | (7) Regulator ASSY |
| (4) Weather strip | (8) Motor ASSY |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.4 (0.75, 5.5)

T2: 13.7 (1.4, 10.1)

General Description

GLASS/WINDOWS/MIRRORS

5. MIRROR

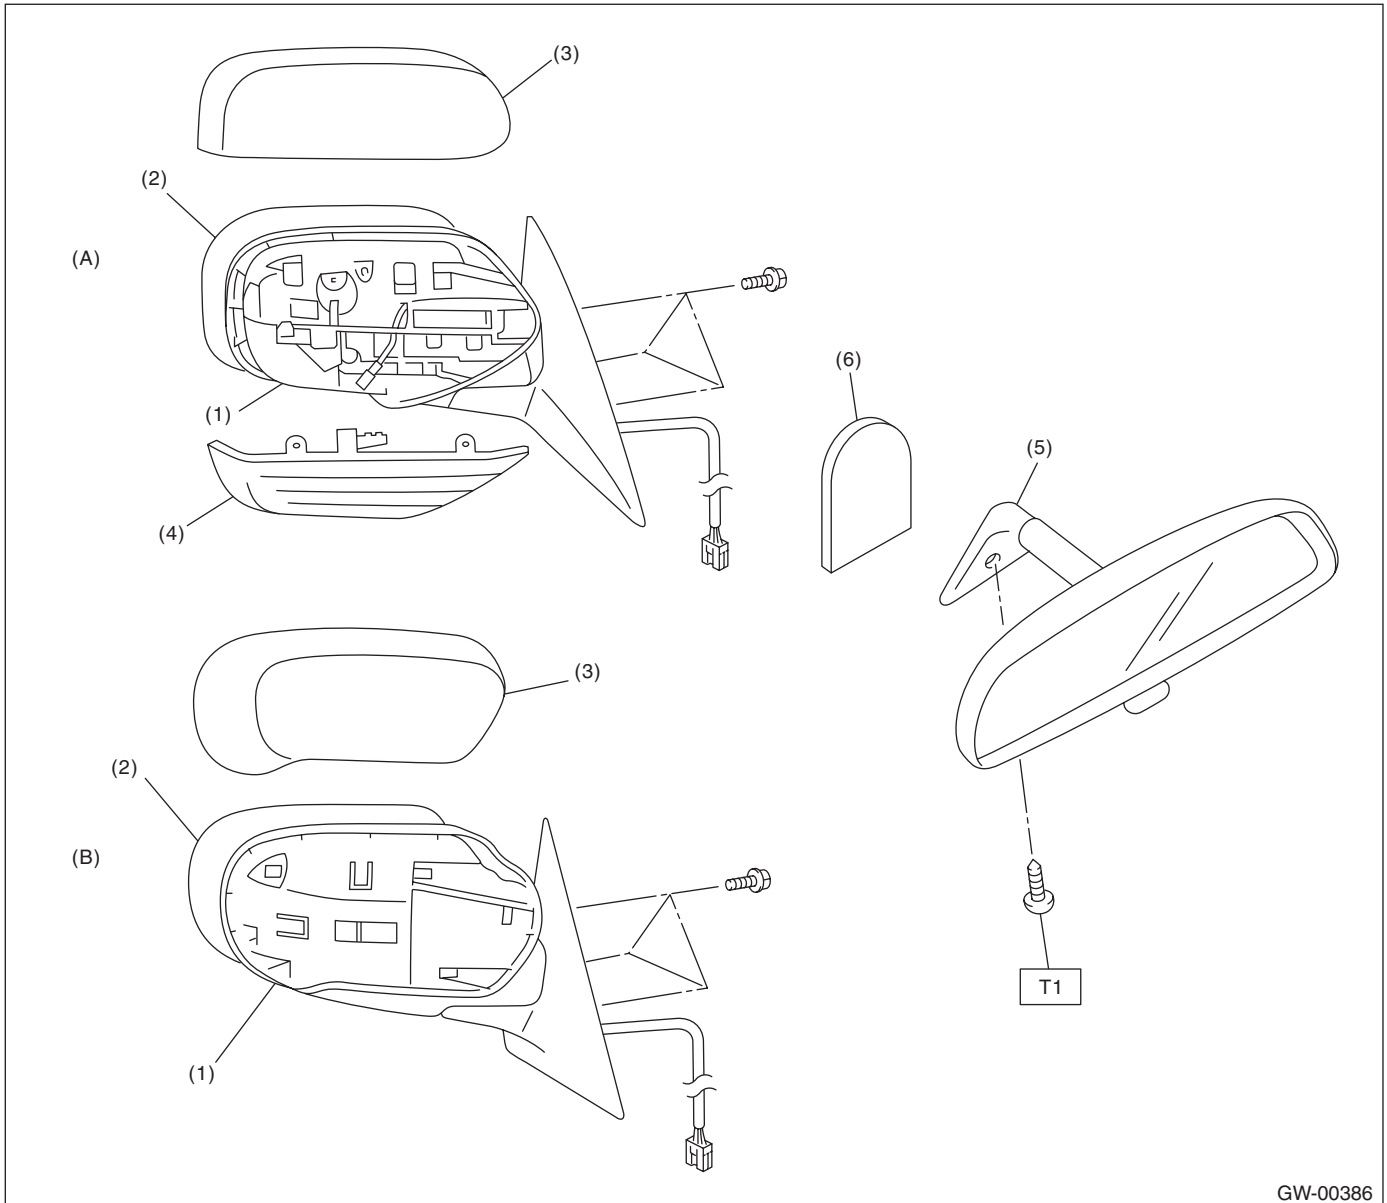

GW-00386

(A) Model with side turn signal light

(B) Model without side turn signal light

(1) Outer mirror

(2) Mirror

(3) Scalp cap

(4) Side turn signal light

(5) Rearview mirror

(6) Mount

Tightening torque: N·m (kgf-m, ft-lb)

T1: 1.9 (0.19, 1)

B: CAUTION



- When electrical connectors are disconnected, always conduct an operational check after connecting them again.
- Avoid impact and damage to the glass.

General Description

GLASS/WINDOWS/MIRRORS

C: PREPARATION TOOL

1. SPECIAL TOOL

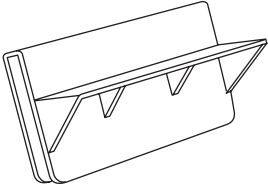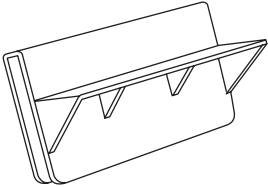ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST61299AE000	61299AE000	SPACER	Used for adjusting the upper end position of the front door glass. (Glass thickness: 5 mm (0.197 in))
 ST61299AE010	61299AE010	SPACER	Used for adjusting the upper end position of rear door glass. (Glass thickness: 4 mm (0.157 in))

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for checking voltage and continuity.
Piano wire	Used for removing the window glass.
Windshield glass knife	Used for removing the window glass.
TORX®T20	Used for removing and installing the rearview mirror.

Power Window System

GLASS/WINDOWS/MIRRORS

2. Power Window System

A: WIRING DIAGRAM

<Ref. to WI-144, Power Window System.>

B: INSPECTION


Symptom	Repair order
All power windows do not operate.	1. Fuse (SBF-4) 2. Power window circuit breaker 3. Power window relay 4. Wiring harness 5. Body integrated unit
Particular window does not operate.	1. Power window main switch 2. Power window sub-switch 3. Power window motor 4. Wiring harness
"Window Lock" does not operate.	Power window main switch

3. Power Window Control Switch

A: REMOVAL


1. MAIN SWITCH

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim.
<Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Disconnect the harness connector.
- 4) Remove the screws from the reverse side of the front door trim to remove the power window main switch.

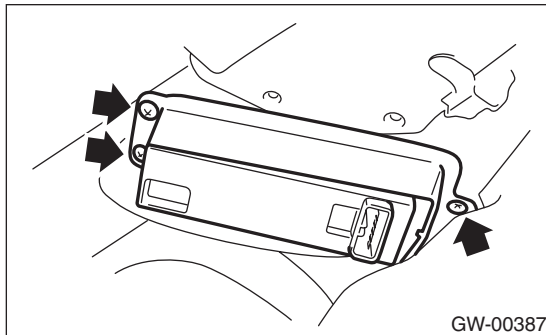

2. SUB-SWITCH

- 1) Disconnect the ground cable from battery.
- 2) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Disconnect the connector.
- 4) Remove the screws from the reverse side of door trim to remove the power window sub-switch.

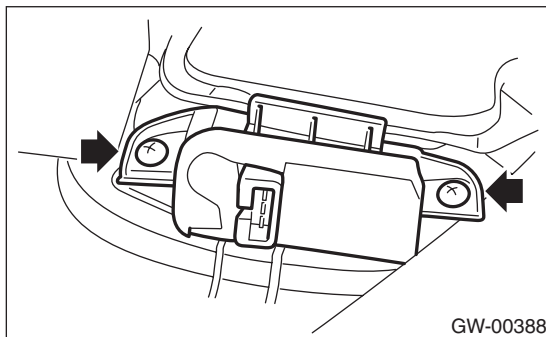

B: INSTALLATION

Install in the reverse order of removal.


Power Window Control Switch

GLASS/WINDOWS/MIRRORS

C: INSPECTION

1. MAIN SWITCH

Measure the switch resistance.

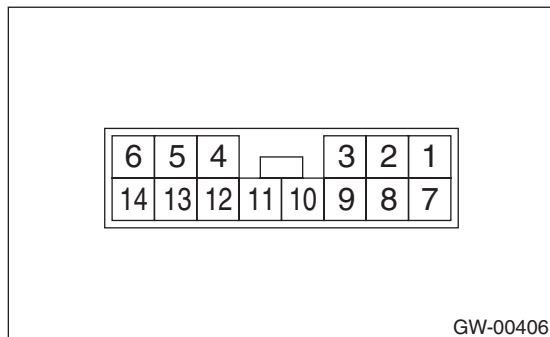

	Switch position	Terminal No.	Standard
Driver's side	UP	10 and 2, 7 and 1	Less than 1 Ω
	OFF	2 and 7, 1 and 2	Less than 1 Ω
	DOWN	10 and 1, 7 and 2	Less than 1 Ω
	AUTO DOWN	10 and 1, 7 and 2	Less than 1 Ω

	Switch position	Terminal No.	Standard
Passenger's side	UP	10 and 14, 7 and 11	Less than 1 Ω
	OFF	7 and 14, 7 and 11	Less than 1 Ω
	DOWN	10 and 11, 7 and 14	Less than 1 Ω


	Switch position	Terminal No.	Standard
Rear RH seat	UP	10 and 13, 7 and 12	Less than 1 Ω
	OFF	7 and 13, 7 and 12	Less than 1 Ω
	DOWN	10 and 12, 7 and 13	Less than 1 Ω

	Switch position	Terminal No.	Standard
Rear LH seat	UP	10 and 8, 7 and 9	Less than 1 Ω
	OFF	7 and 8, 7 and 9	Less than 1 Ω
	DOWN	9 and 10, 7 and 8	Less than 1 Ω

Replace the main switch if faulty.

2. SUB-SWITCH

Measure the switch resistance.

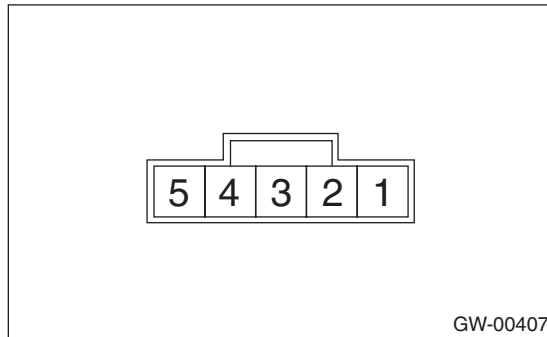


	Switch position	Terminal No.	Standard
Passenger's seat and rear seat	UP	2 and 3, 4 and 5	Less than 1 Ω
	OFF	1 and 2, 4 and 5	Less than 1 Ω
	DOWN	1 and 2, 3 and 4	Less than 1 Ω

Replace the sub-switch if faulty.


4. Front Door Glass

A: REMOVAL


- 1) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 3) Remove the outer mirror assembly. <Ref. to GW-20, REMOVAL, Outer Mirror Assembly.>
- 4) Remove clip (A), and remove the front end of the weather strip.

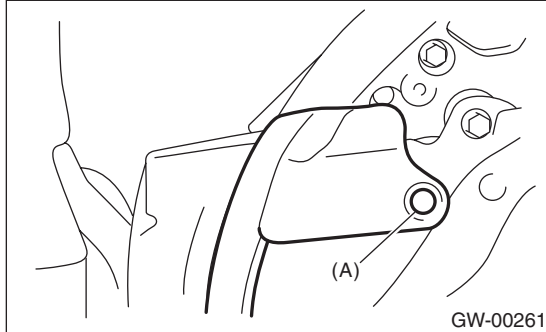


- 5) Remove the gusset.

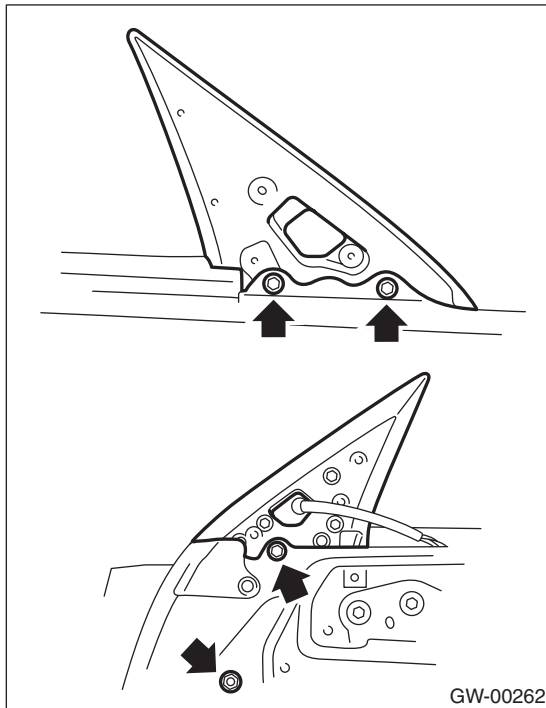


- 6) Remove the stabilizers.

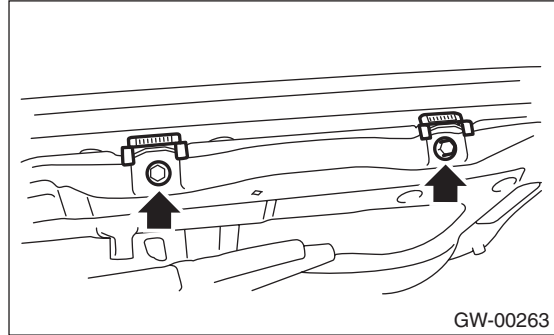


- 7) Remove clips (A), and remove the rear end of the weather strip.

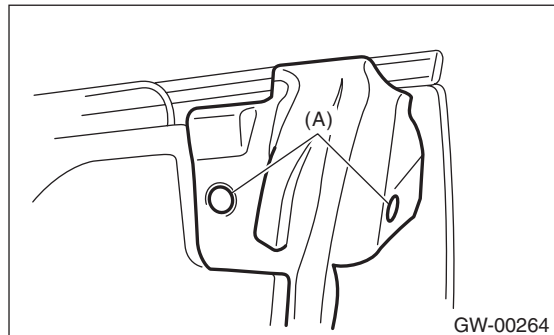


- 8) Remove screw (A) from the rear end of the weather strip outer, to remove the weather strip outer.

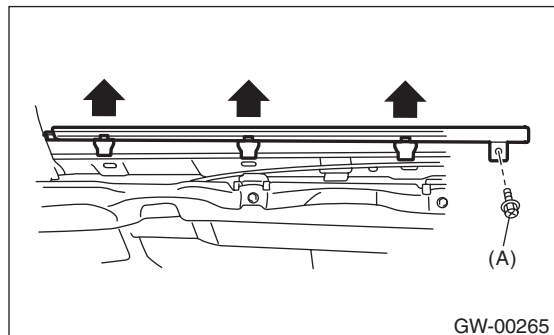

- 9) Remove the screws to remove the guide assembly.
- 10) Operate the power window switch to move the glass to the position shown in the figure, then remove the two nuts through the service holes.

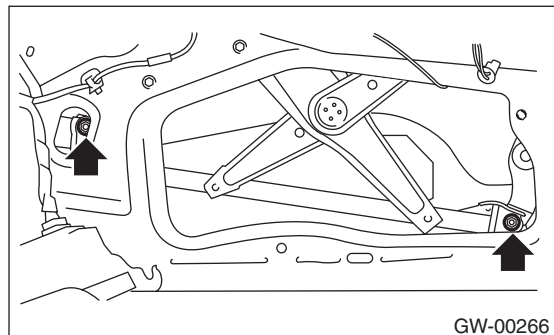

11) Remove the door glass.

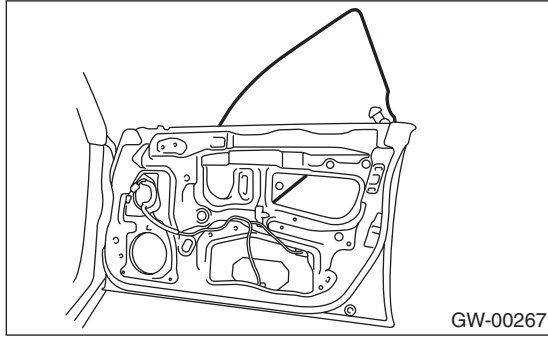

CAUTION:

- Since the gear may be disengaged, do not turn regulator in the closing direction after removing glass.
- Avoid impact and damage to the glass.

B: INSTALLATION

1) Install in the reverse order of removal.

CAUTION:

Make sure that the glass stay is placed securely in sash.

2) Adjust the front door glass. <Ref. to GW-13, ADJUSTMENT, Front Door Glass.>

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>

C: ADJUSTMENT


NOTE:

Before adjustment, ensure that all adjusting bolts of stabilizer, upper stopper and sash are loose and door glass rises until it makes contact with the weather strip.

1) Temporarily tighten the adjusting bolt on one side of the rear sash, at the midpoint of the slotted hole in the inner panel.


2) Temporarily tighten the regulator B channel at the top position of slotted hole.

3) Lower the door glass 10 — 15 mm (0.39 — 0.59 in) from fully closed position. While applying an outward pressure (F) of 45.0 ± 5.0 N (4.5 ± 0.5 kgf, 9.9 ± 1.1 lb) to the upper edge of the glass above the midpoint of the two outer stabilizers, press the inner stabilizer to the glass at a pressure of 25 ± 5 N (2.5 ± 0.5 kgf, 5.5 ± 1.1 lb) to secure it.

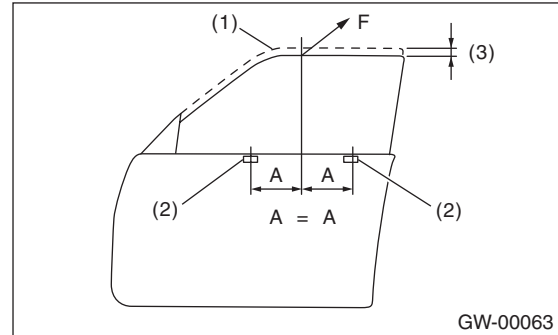


- (1) Fully closed position
- (2) Stabilizer
- (3) 10 — 15 mm (0.39 — 0.59 in)

4) To adjust the clearance between front glass and center pillar cover, loosen nuts (A), and move the glass sash back and forth until the clearance becomes the value shown.

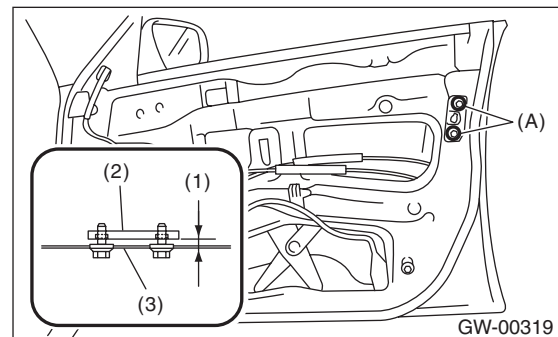

- (1) Adjust the lines parallel
- (2) Sash
- (3) Inner panel


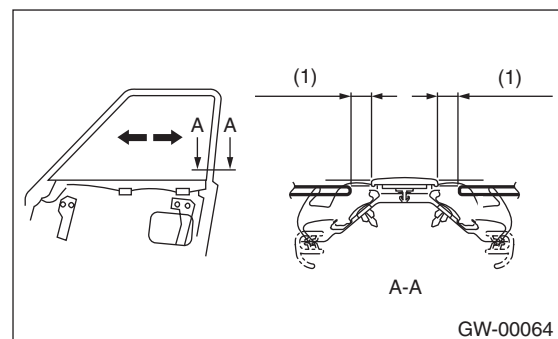


- (1) 11 mm (0.433 in)


Front Door Glass

GLASS/WINDOWS/MIRRORS

5) To adjust the upper end and lower end of the center pillar, loosen the stopper bolt (A) or nut (B) securing the door sash (front, rear), and move the stopper position until the clearance between center pillar cover is equal.

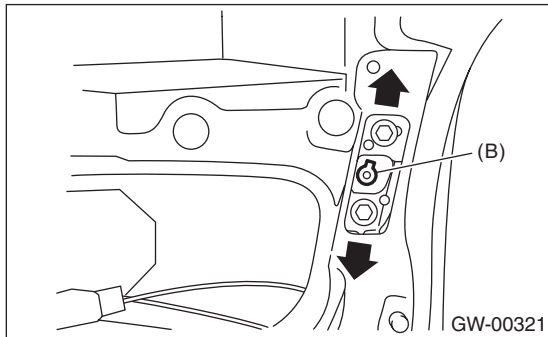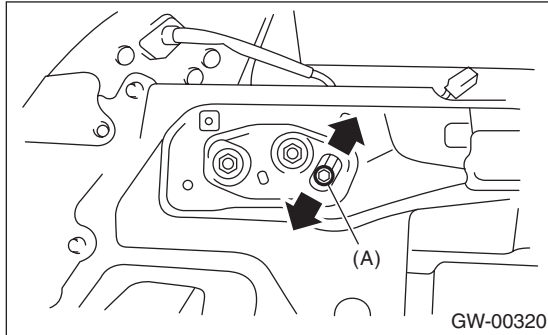


CAUTION:
Measure the clearance between center pillar at 50 mm (1.969 in) from upper end of window glass.

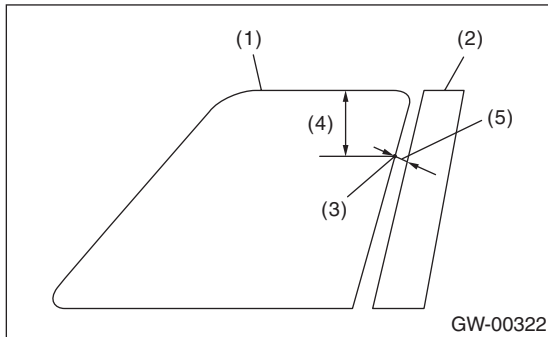


- (1) Glass
- (2) Center pillar cover
- (3) Check point
- (4) 50 mm (1.969 in)
- (5) 11 mm (0.433 in)

6) Adjust so that the upper and lower ends of the center pillar are the same size.

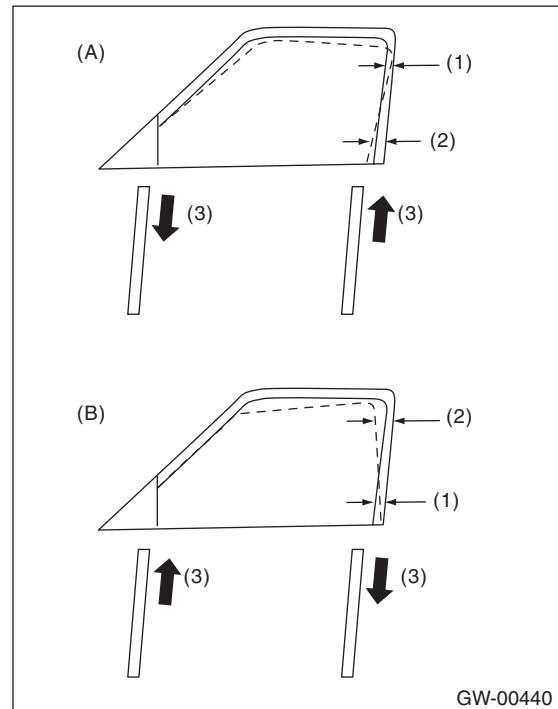

- (A) Glass tilts too far rearward
- (B) Glass tilts too far forward
- (1) Narrow
- (2) Wide
- (3) Stopper adjusting direction


7) After adjusting the clearance between the center pillar, raise and lower the glass several times to check glass contact to the stopper when the glass is fully closed. Adjust the center pillar clearance to contact the front and rear stopper simultaneously.

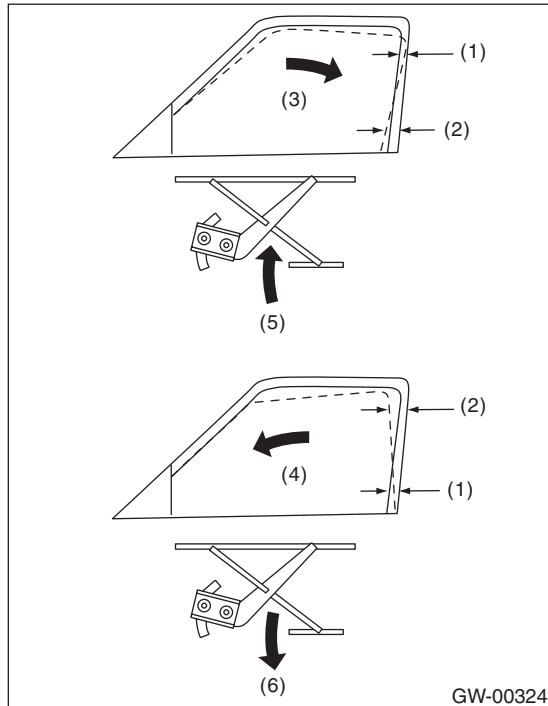

- (1) Narrow
- (2) Wide
- (3) When the stopper of the door sash (front) contacts first
- (4) When the stopper of the door sash (rear) contacts first
- (5) Raise B channel
- (6) Lower B channel


8) For glass stroke adjustment, attach special tool to the glass, close door, and raise the glass to the top edge using regulator until positional relationship between glass and weather strip becomes as shown. And secure the glass so that the upper stopper touches the glass holder without fail.

ST 61299AE000 SPACER (Glass thickness: 5 mm (0.197 in) for front door glass)

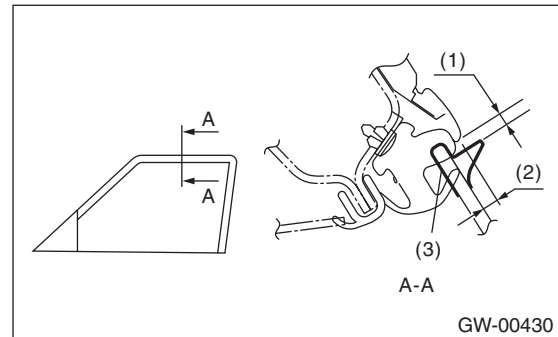

- (1) 3.2 — 4.8 mm (0.126 — 0.189 in)
- (2) When re-using weather strip: 5.5 mm (0.217 in)
When replacing the weather strip: 3 mm (0.118 in)
- (3) ST

For preventing wind noise, adjust the glass at the position where the tip of the gusset is raised up slightly.

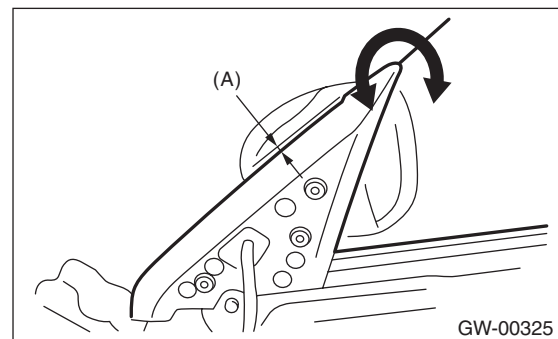

- (A) 0 — 1.5 mm (0 — 0.059 in)

9) After stabilizer adjustment, carry out glass cohesion adjustment. First, visually ensure the positional relationship between the retainer & molding and the glass of the roof side, then start the rear sash adjustment. Attach the ST to the glass and adjust two adjusting bolts alternately step by step, to obtain dimensions shown below (cross-section A).

NOTE:


If two nuts are loosened at the same time, the sash moves back and forth. Therefore, when one nut is adjusted, secure the other.

Front Door Glass

GLASS/WINDOWS/MIRRORS

10) Make the same adjustment of two adjusting bolts of rear sash.


ST 61299AE000 SPACER (Glass thickness: 5 mm (0.197 in) for front door glass)

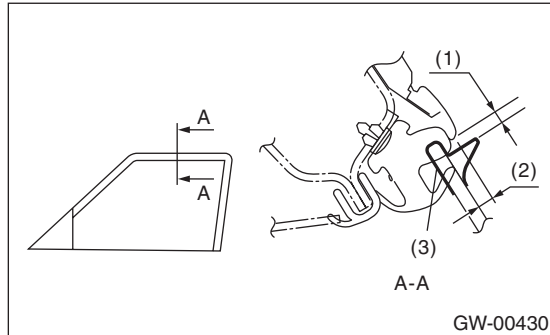

- (1) 3.2 — 4.8 mm (0.126 — 0.189 in)
- (2) When re-using weather strip: 5.5 mm (0.217 in)
When replacing the weather strip: 3 mm (0.118 in)
- (3) ST

NOTE:

Do not tilt the sash bracket to inner panel during adjustment. If tilting, the regulator does not operate smoothly.

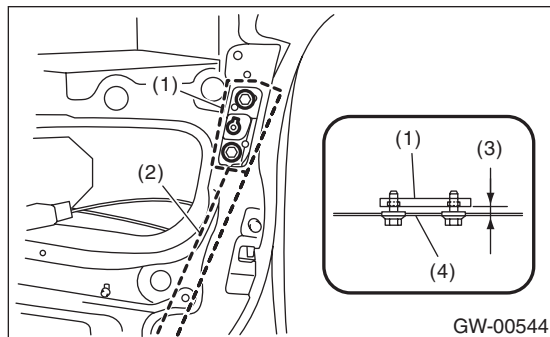

- (1) Sash bracket
- (2) Rear sash
- (3) Adjust the lines parallel
- (4) Inner panel

11) Make adjustment of front sash in the same manner as that of rear sash.


NOTE:

Although front and rear sashes must, as a rule, be adjusted in the same manner, in some door installation, the adjustment in a different manner may be required. However, adjustment of one sash to the maximum amount and the other to the minimum amount is not permitted. Such adjustment may result in applying excessive load against regulator.

12) After adjustments, tighten the nuts.

13) After adjustment of the glass, close the door. If there is a gap between outer lip of gusset and glass surface, adjust the gap by adjusting bolt (A) at the attachment hardware at the lower side of the gusset to prevent generation of wind noise.

14) During adjustment, loosen the other three clamping bolts.

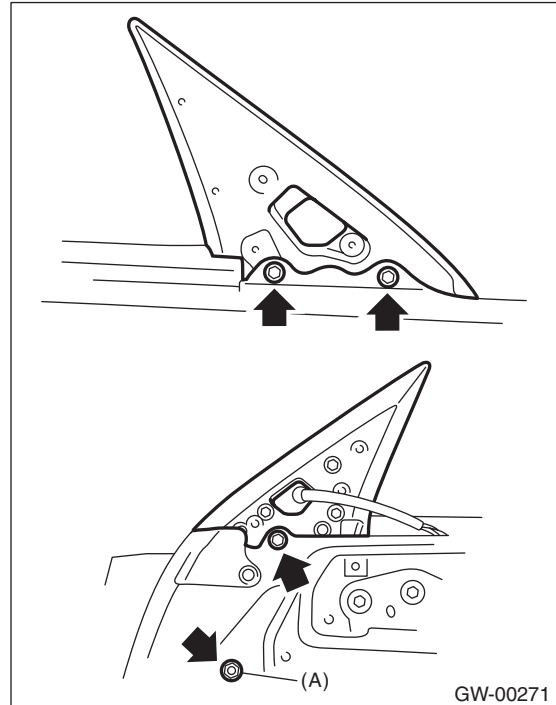


15) After adjustment, tighten the bolts and nuts.


5. Front Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the door glass. <Ref. to GW-12, REMOVAL, Front Door Glass.>
- 2) Disconnect the motor connector.
- 3) Remove the four bolts and two nuts to remove regulator assembly.

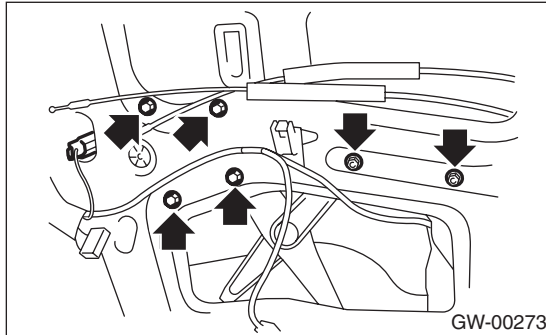

- 4) Remove the screws to remove motor assembly.

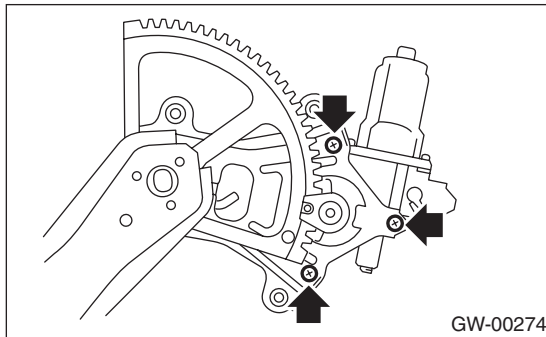

NOTE:

When removing the motor assembly, secure the arm correctly. Otherwise the regulator arm moves with the force of balancing spring.

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the front door glass. <Ref. to GW-13, ADJUSTMENT, Front Door Glass.>

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Make sure that the power window motor rotates properly when the battery voltage is applied to the terminals of motor connector.
- 2) Change polarity of battery connection to terminals to ensure that the motor rotates in reverse direction.

Remote Control Mirror System

GLASS/WINDOWS/MIRRORS

6. Remote Control Mirror System

A: WIRING DIAGRAM

<Ref. to WI-148, Remote Control Mirror System.>

B: INSPECTION


Symptom	Repair order
All function does not operate.	1. Fuse (F/B No. 6) 2. Mirror switch 3. Wiring harness
One side of the mirror motor does not operate.	1. Mirror switch 2. Mirror motor 3. Wiring harness
Mirror heater does not operate.	1. Mirror switch 2. Mirror heater 3. Wiring harness

7. Scalp Cap


A: REPLACEMENT

1. MODEL WITH SIDE TURN SIGNAL LIGHT


- 1) Remove the mirror. <Ref. to GW-22, REPLACEMENT, Outer Mirror.>
- 2) Press-in the upper side clips (A) from inside of outer mirror.

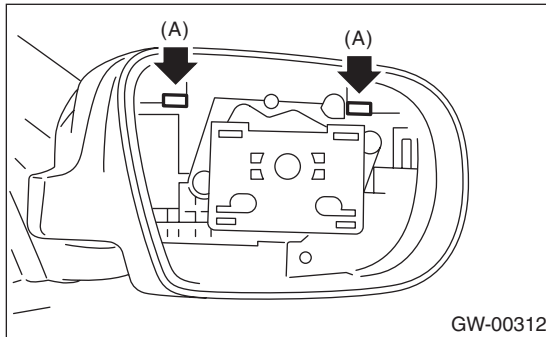

- 3) Pull the scalp cap frontward of outer mirror, remove the upper side clips (A) and lower side hooks (B), and then remove the scalp cap.

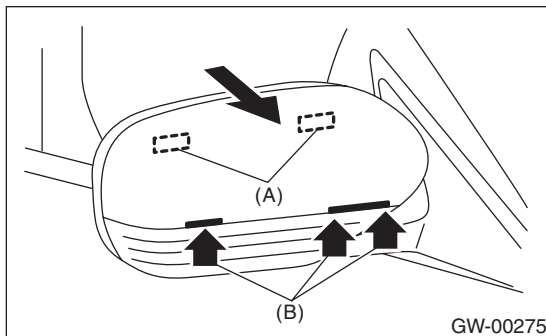

- 4) Insert the lower hooks (B) of scalp cap to the outer mirror and push the upper clips (A) in.

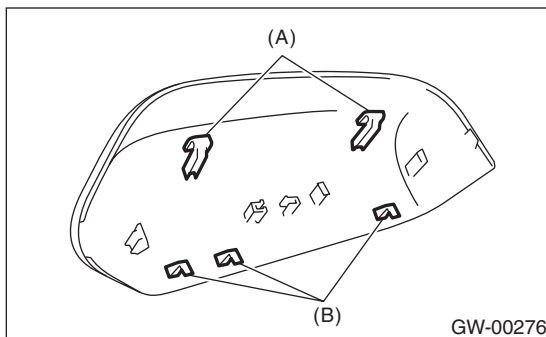


- 5) Install the scalp cap securely.

CAUTION:

Do not remove the scalp cap forcibly. The lower hooks may be damaged.


2. MODEL WITHOUT SIDE TURN SIGNAL LIGHT

- 1) Remove the mirror. <Ref. to GW-22, REPLACEMENT, Outer Mirror.>
- 2) Press-in the clips (A) from inside of outer mirror.

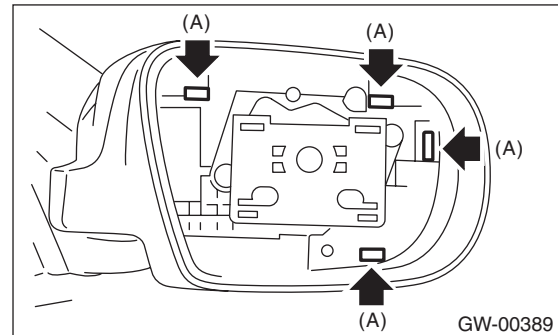

- 3) Pull the scalp cap towards the front of the outer mirror, then remove the scalp cap.

- 4) Align clip (A) on the reverse side of the scalp cap and the clip attachment hole of the outer mirror, and push the scalp cap in.

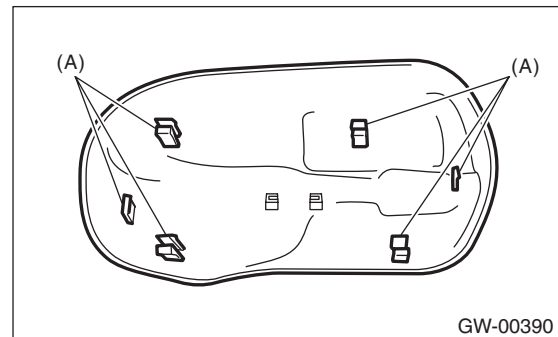


- 5) Install the scalp cap securely.

8. Outer Mirror Assembly

A: REMOVAL

1) Remove the mirror gusset cover.

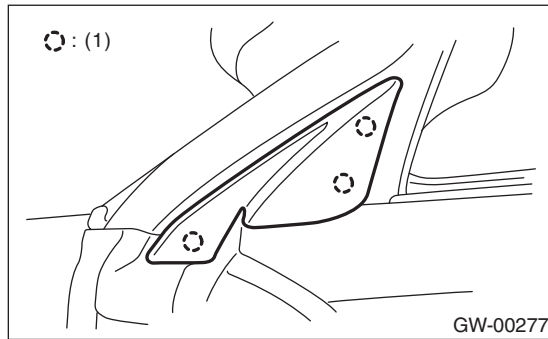


(1) Hook

2) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>

3) Disconnect the outer mirror connector.

4) Remove the screws to remove outer mirror assembly.

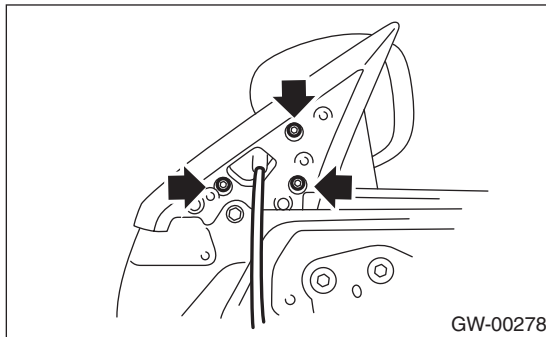


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

- Model with side turn signal light

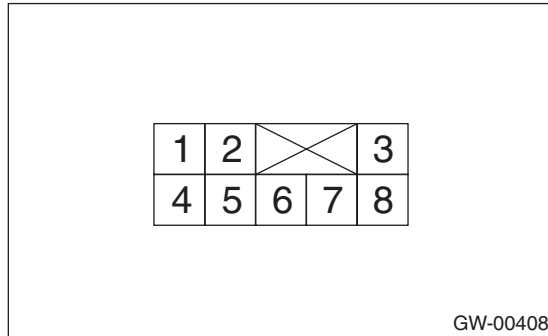

Switch position	Terminal No.
OFF	—
UP	6 (+) and 3 (–) or 8 (–)
DOWN	3 (+) or 8 (+) and 6 (–)
LEFT	7 (+) and 3 (–) or 8 (–)
RIGHT	3 (+) or 8 (+) and 7 (–)

- Model without side turn signal light

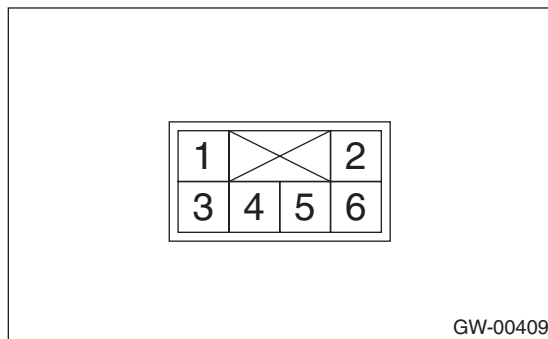


Switch position	Terminal No.
OFF	—
UP	4 (+) and 2 (–) or 6 (–)
DOWN	2 (+) or 6 (+) and 4 (–)
LEFT	5 (+) and 6 (–) or 2 (–)
RIGHT	6 (+) or 2 (+) and 5 (–)

Replace the outer mirror assembly if defective.


9. Outer Mirror

A: REPLACEMENT


- 1) Face the mirror upward.
- 2) Use a flat tip screwdriver to remove clip (A).
- 3) Lift the lower mirror up to remove hooks (B).

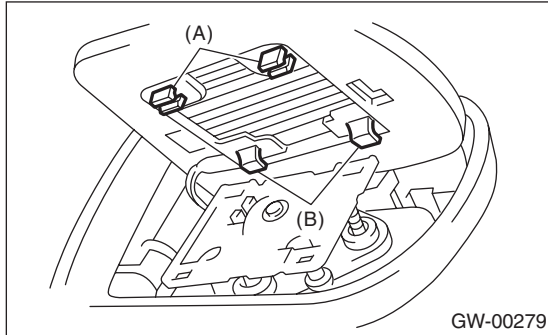

- 4) Disconnect the mirror heater connector from side of the mirror. (Model with mirror heater)

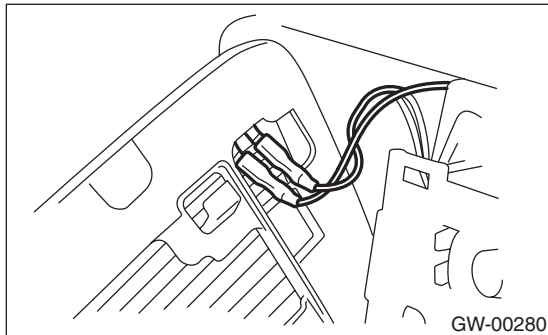

- 5) Catch the hooks (B) and install clips (A).

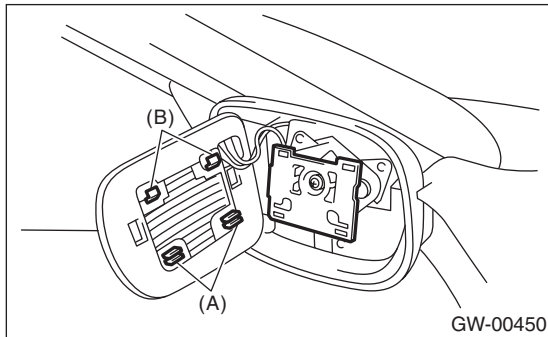


CAUTION:

- When removing the mirror, be careful not to damage the back surface of mirror with a flat tip screwdriver.
- When installing the mirror, insert the hook and clip securely.

10.Remote Control Mirror Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the connector.

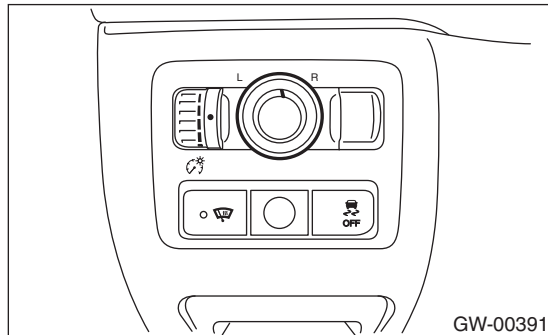

- 3) Remove the remote control mirror switch from instrument panel lower cover.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. REMOTE CONTROL MIRROR SWITCH

Move the remote control mirror switch to each position and check continuity between terminals.

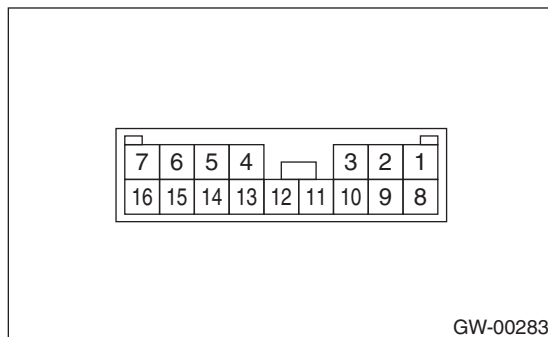

- Change over switch R

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	10 and 12, 15 and 14	Less than 1 Ω
DOWN	10 and 15, 12 and 14	Less than 1 Ω
LEFT	10 and 11, 15 and 14	Less than 1 Ω
RIGHT	10 and 15, 11 and 14	Less than 1 Ω

- Change over switch L


Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	10 and 8, 15 and 14	Less than 1 Ω
DOWN	10 and 15, 8 and 14	Less than 1 Ω
LEFT	10 and 9, 15 and 14	Less than 1 Ω
RIGHT	10 and 15, 9 and 14	Less than 1 Ω

Replace the remote control mirror switch if defective.


11.Rear Door Glass

A: REMOVAL


- 1) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-23, REMOVAL, Rear Sealing Cover.>
- 3) Remove the stabilizers.

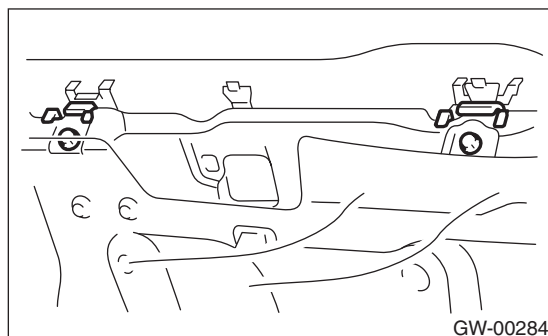


- 4) Remove clips (A), and remove the front end and rear end of the weather strip.

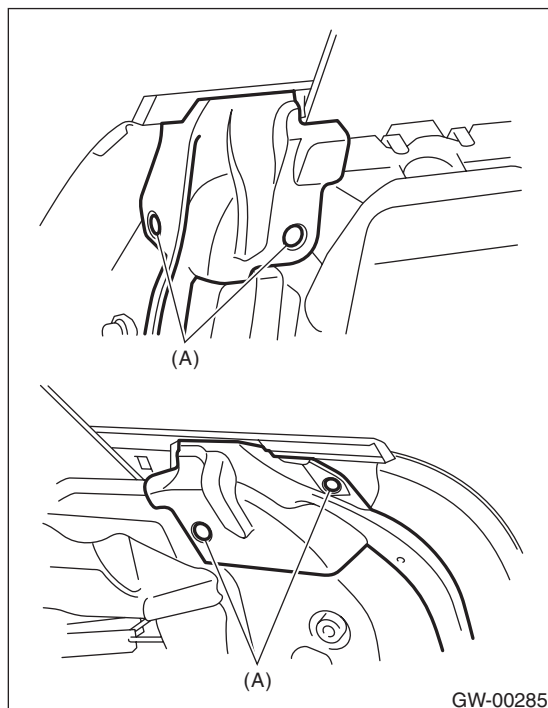


- 5) Remove the two screws to remove the weather strip outer.

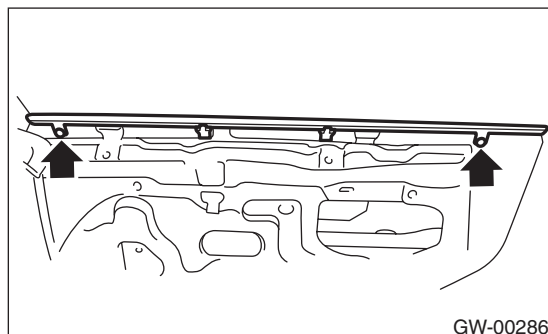

- 6) Operate the power window switch to move the glass to the position shown in the figure, then remove the two nuts through the service holes.

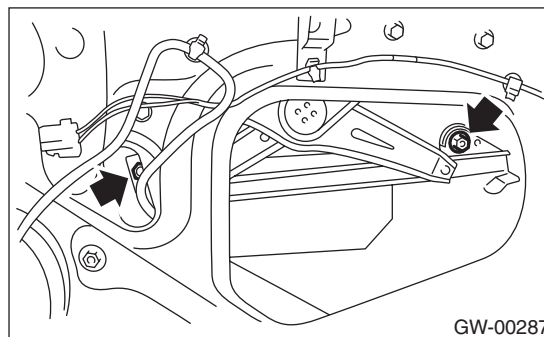

- 7) Remove the rear sash retaining nuts (A) and move the rear sash (B) rearward.

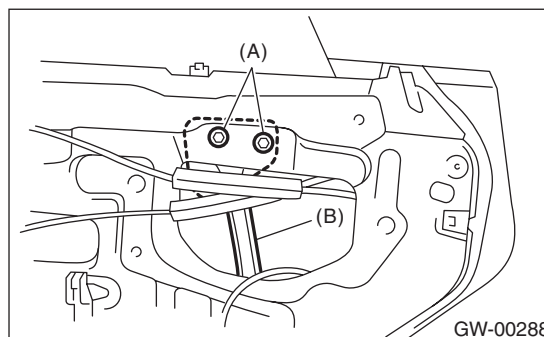

- 8) Remove the door glass.

CAUTION:

- Since the gear may be disengaged, do not turn regulator in the closing direction after removing glass.
- Avoid impact and damage to the glass.

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Make sure that the glass stay is placed securely in sash.

- 2) Adjust the rear door glass. <Ref. to GW-25, ADJUSTMENT, Rear Door Glass.>

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: ADJUSTMENT

NOTE:

The rear door glass, as a rule, should be adjusted in the same manner as the front door glass, although they are different in dimension. <Ref. to GW-13, ADJUSTMENT, Front Door Glass.>

1) Adjust the glass position using the dimensions in the figure as a guide.

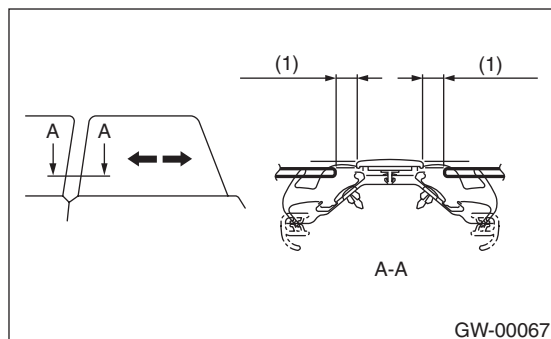


(1) 11 mm (0.433 in)

NOTE:

- If dimensions are smaller than the given dimensions, glass may get caught in weather strip during lifting/lowering operation and may not be fully open.
- After adjustment, move the glass up and down to check whether it is caught.

2) Attach the special tool to the glass, and adjust the glass adhesion until the dimensional value becomes as shown below.

ST 61299AE010 SPACER (Glass thickness: 4 mm (0.157 in) for rear door glass)

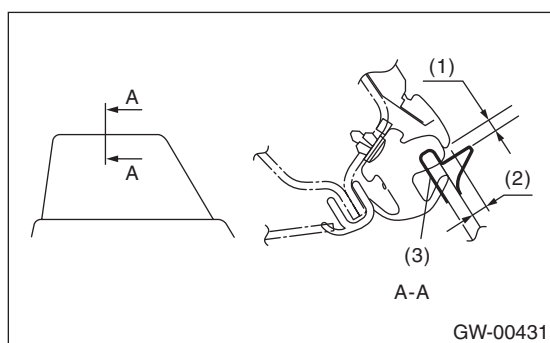

- (1) 3.2 — 4.8 mm (0.126 — 0.189 in)
- (2) When re-using weather strip: 5.5 mm (0.217 in)
When replacing the weather strip: 5.0 mm (0.179 in)
- (3) ST


NOTE:

- If rear glass adhesion is higher than necessary, glass may get caught in weather strip of center pillar corner, resulting in early wear of weather strip. Be careful when adjusting.
- After adjustment, move the glass up and down to check whether it is caught.


12. Rear Regulator and Motor Assembly

A: REMOVAL


- 1) Remove the rear door glass. <Ref. to GW-24, REMOVAL, Rear Door Glass.>
- 2) Remove the nut (A) to remove the front sash.

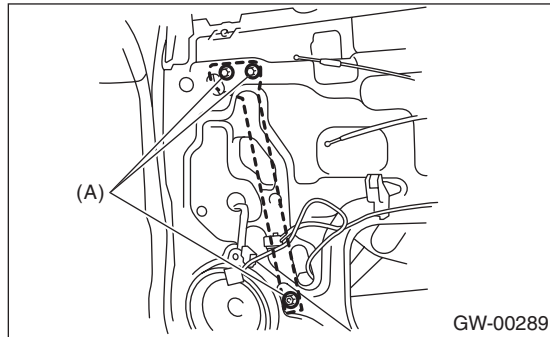

- 3) Disconnect the motor connector.
- 4) Remove the four bolts and two nuts to remove regulator assembly.

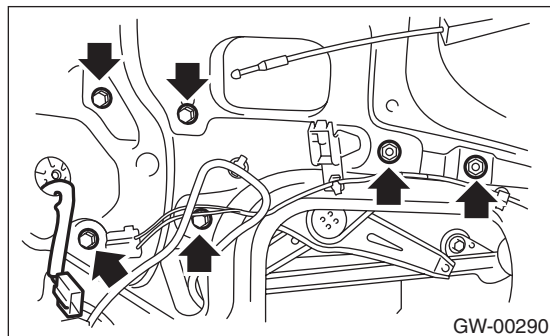

- 5) Remove the screws to remove motor assembly.

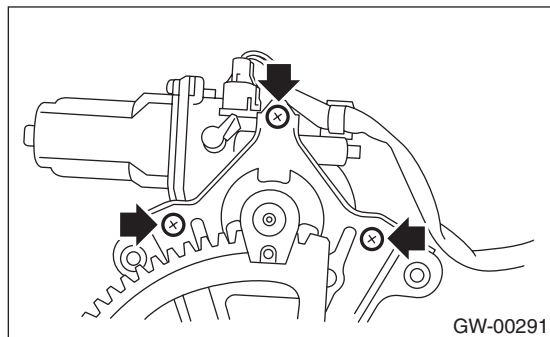

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the rear door glass. <Ref. to GW-25, ADJUSTMENT, Rear Door Glass.>

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Make sure that the power window motor rotates properly when the battery voltage is applied to the terminals of motor connector.
- 2) Change polarity of battery connection to terminals to ensure that the motor rotates in reverse direction.

13. Windshield Glass


A: REMOVAL

1. USING WINDSHIELD GLASS KNIFE

- 1) Remove the cowl panel.
<Ref. to EI-39, REMOVAL, Cowl Panel.>
- 2) Remove the molding.
- 3) Tape the body side of the circumference of windshield glass for protection.
- 4) Apply sufficient amount of soapy water to the adhesive part.
- 5) Insert the windshield glass knife into the adhesive.
- 6) While holding the knife edge and windshield glass edge at a right angle, move the windshield glass knife parallel to the windshield glass edge along the surface and edge of windshield glass to cut the adhesive.


NOTE:

- Do not twist the windshield glass knife.
- Cutting of adhesive part shall be started with wider gap between windshield glass and body.

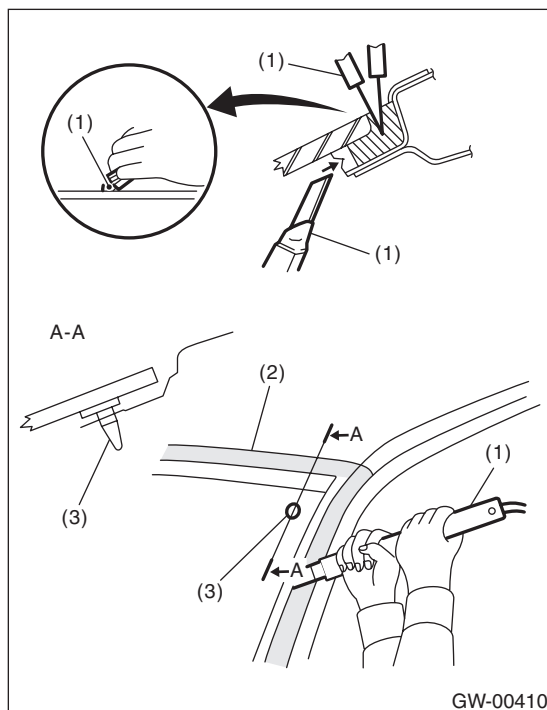

- (1) Windshield glass knife
- (2) Tape for protection
- (3) Locating pin


- The locating pins are bonded to the corners of glass. Use piano wire to disconnect the pins.

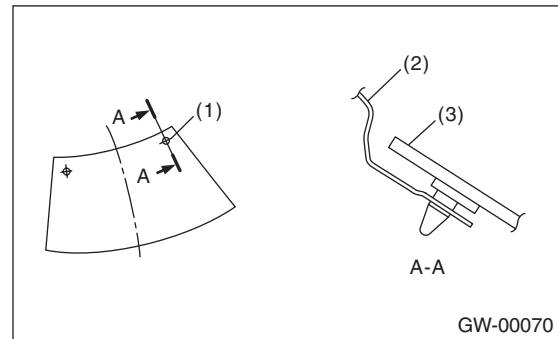

- (1) Locating pin
- (2) Body panel
- (3) Windshield glass

2. USING PIANO WIRE

- 1) Remove the cowl panel.
<Ref. to EI-39, REMOVAL, Cowl Panel.>
- 2) Remove the molding.
- 3) Tape the body side of the circumference of windshield glass for protection.
- 4) Make a hole in the adhesive part using drill or knife.
- 5) Pass the piano wire through the hole, and attach both the wire ends securely to pieces of wood.

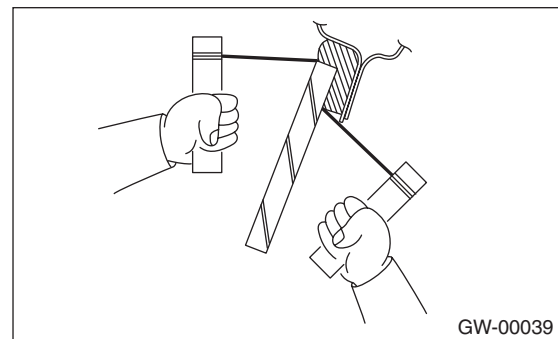

- 6) Pull the wire ends alternately to cut off the adhesive part.

CAUTION:

- Do not tightly pull the piano wire against the windshield glass edge.
- Be careful not to damage interior and exterior parts.
- When removal is made with area close to instrument panel, place a protection plate over it. Pay particular attention to the removal.
- Do not cross piano wires. Otherwise they may be cut.

Windshield Glass


GLASS/WINDOWS/MIRRORS

B: INSTALLATION

- 1) Clean the external circumference of windshield glass with alcohol or white gasoline.
- 2) Remove the adhesive layer on the body using cutter knife to obtain smooth face of 2 mm (0.08 in) thick.


CAUTION:

Be careful not to damage the body and paint surface.

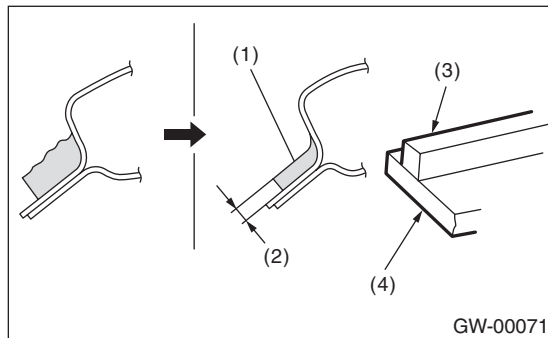

- (1) Adhesive
- (2) 2 mm (0.08 in)
- (3) Dam rubber
- (4) Glass

- 3) Clean the body with alcohol or white gasoline to eliminate cutting powder, dust and dirt completely from body.
- 4) Install the dam rubber.
- 5) Fit the mark (B) on molding to the notch (A) of glass side, and install the molding to entire perimeter of glass.

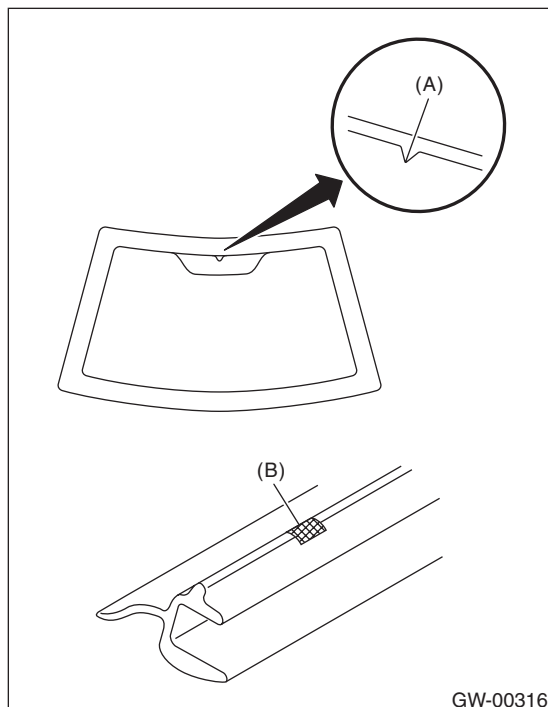

- 6) Apply two types of primers to the adhesive layer of glass using sponge.

Glass primer:

**Dow Automotive
ESSEX U-401, U-402**


- 7) Apply the primer to the adhesive layer of body.

Painted surface primer:

**Dow Automotive
ESSEX U-413**


NOTE:

- Primer once attached to the painted surface of the body and internal trim is hard to wipe off. Mask the circumference of such area.
- Let primer dry for about ten minutes before installing the glass.
- Do not touch the surface coated with primer.

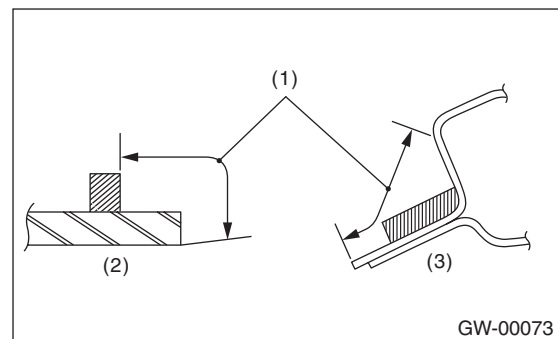

- (1) Application of primer
- (2) Glass side
- (3) Body side

- 8) Cut off the cartridge nozzle tip as shown and set it in sealant gun.

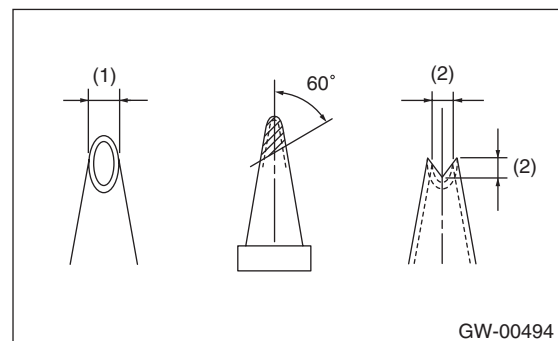


- (1) 10 mm (0.39 in)
- (2) 15 mm (0.59 in)

9) Apply adhesive to the glass end surface as shown.


Adhesive:

**Dow Automotive
ESSEX U-400HV or equivalent**

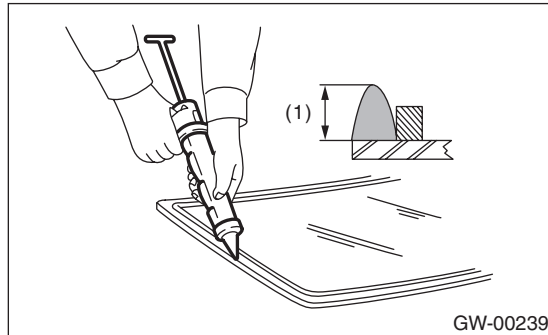

(1) 9 — 12 mm (0.35 — 0.47 in)

10) Fit the locating pins, and install windshield glass using suction rubber cup.

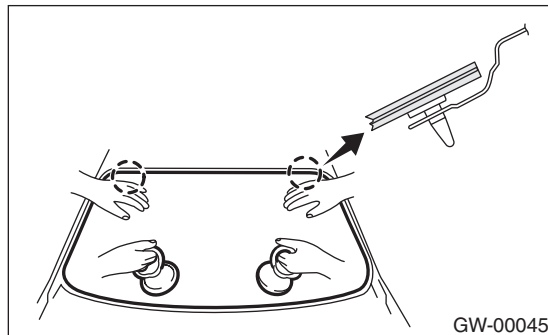

- 11) Lightly press the windshield glass for tight fit.
12) Make flush the adhesive surface juttred out using spatula.
13) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:

- When door is opened/closed after glass is bonded, always lower the door glass first, and then open/close it carefully.
- Move the vehicle slowly.
- For minimum drying time and vehicle standing time before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

14) After curing of adhesive, pour the water on external surface of vehicle to check that there are no water leaks.

NOTE:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

15) Install the cowl panel.

<Ref. to EI-39, INSTALLATION, Cowl Panel.>

14.Rear Gate Glass

A: REMOVAL

- 1) Remove the rear wiper motor.
<Ref. to WW-18, REMOVAL, Rear Wiper Motor.>
- 2) Disconnect the electrical connectors from rear defogger terminal.
- 3) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-27, REMOVAL, Windshield Glass.>


B: INSTALLATION

- 1) Apply adhesive in the same procedure as for windshield glass. <Ref. to GW-28, INSTALLATION, Windshield Glass.>
- 2) Insert the glass clip pin into rear gate hole, push on the area around the clip pin to secure it, and then push lightly all around the area to seal it.
- 3) About one hour after installation, conduct a leak test.

- 4) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:

- When door is opened/closed after glass is bonded, always lower the door glass first, and then open/close it carefully.
 - Move the vehicle slowly.
 - For minimum drying time and vehicle standing time before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.
 - When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.
- 5) Connect the rear defogger terminals.
 - 6) Install the rear wiper.
<Ref. to WW-18, INSTALLATION, Rear Wiper Motor.>

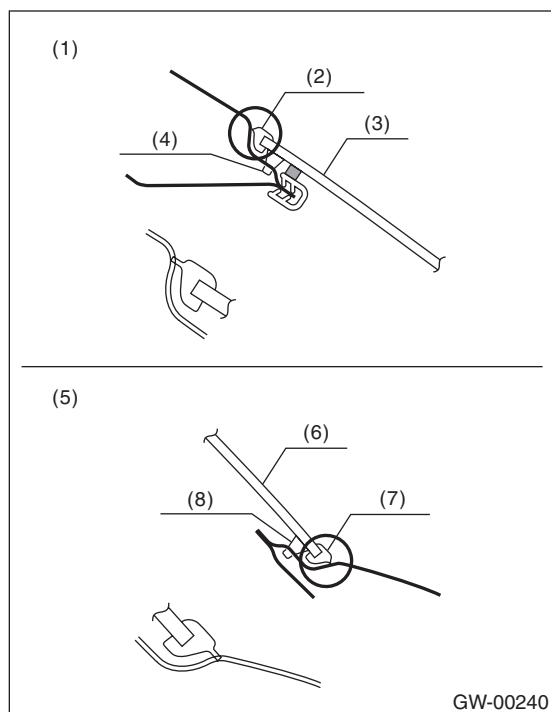

- (1) Upside
- (2) Molding
- (3) Glass
- (4) Adhesive
- (5) Downside
- (6) Glass
- (7) Molding
- (8) Adhesive


15.Rear Window Glass

A: REMOVAL

- 1) Disconnect the electrical connectors from rear defogger terminal.
- 2) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-27, REMOVAL, Windshield Glass.>

B: INSTALLATION

- 1) Adhere the dam rubber.

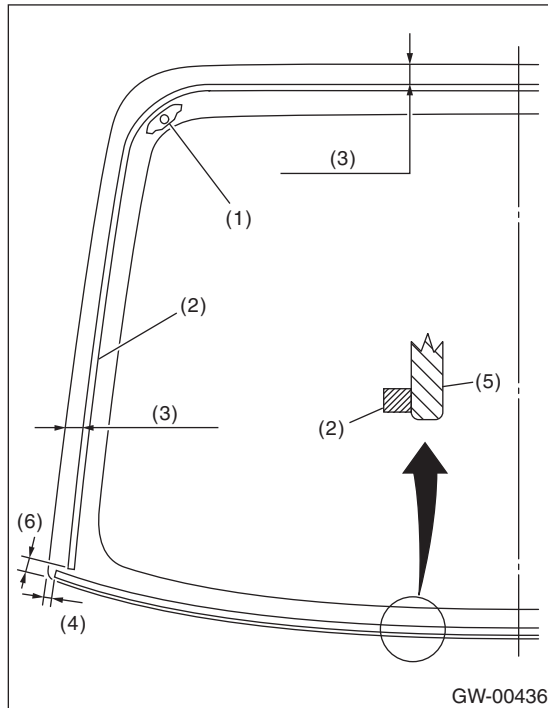

- (1) Locating pin (adhered)
- (2) Dam rubber
- (3) 11 mm (0.433 in)
- (4) 4 mm (0.157 in)
- (5) Rear window glass
- (6) 40 mm (1.575 in)

- 2) Install the glass in the same procedure as for windshield glass. <Ref. to GW-28, INSTALLATION, Windshield Glass.>
- 3) Connect the rear defogger and antenna terminal connectors.

- 4) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:

- When door is opened/closed after glass is bonded, always lower the door glass first, and then open/close it carefully.
- Move the vehicle slowly.
- For minimum drying time and vehicle standing time before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

- 5) After curing of adhesive, pour the water on external surface of vehicle to check that there are no water leaks.

NOTE:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

Rear Window Defogger System

GLASS/WINDOWS/MIRRORS

16.Rear Window Defogger System

A: WIRING DIAGRAM

<Ref. to WI-149, Rear Defogger System.>

B: INSPECTION

Symptom	Repair order
Rear window defogger does not operate.	1. Fuse (M/B No. 10) (F/B No. 22) 2. Rear defogger relay 3. Defogger switch 4. Rear defogger condenser 5. Defogger wire 6. Wiring harness 7. Body integrated unit

NOTE:

Rear window defogger system can be customized on the Subaru Select Monitor.

System name	Initial setting	Customize setting
Rear window defogger timer	OFF after 15 min.	Repeat 15 min. operation and 2 min. stop.

17.Rear Window Defogger

A: INSPECTION

1. CHECK WITH SUBARU SELECT MONITOR

CAUTION:

Check that the rear window defogger timer is in initial setting or customize setting before performing inspection.


Step	Check	Yes	No
1 CHECK INPUT SIGNAL TO BODY INTEGRATED UNIT. Check the input signal when the rear window defogger switch is operated using Subaru Select Monitor. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from the «main menu». 4) Select the {Current Data Display & Save}. 5) Check the input signal when the rear window defogger switch is set to ON.	After rear defogger switch is set to ON, does it turn to OFF in 15 minutes? Or does it repeat 15 minutes operation and 2 minutes stop?	END.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>

2. HEAT WIRE INSPECTION

CAUTION:

Use a dry and soft cloth when wiping dirt off the glass. Move the cloth along the heat wire to avoid damaging it.


- 1) Turn the ignition switch to ON.
- 2) Turn the defogger switch to ON.
- 3) Wrap the tips of tester probe with aluminum foil to avoid damage to heat wire.

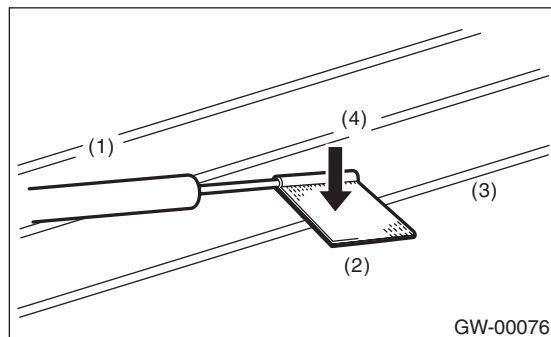

- (1) Tester probe
- (2) Aluminum foil
- (3) Heat wire
- (4) Press

- 4) Measure the voltage at heat wire center with DC voltmeter.

Standard voltage:
Approx. 6 V

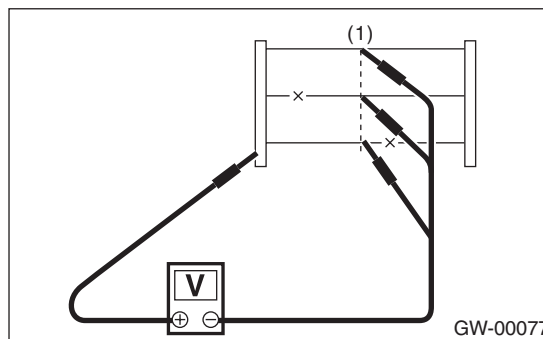

- (1) Center of heat wire

Voltage	Criteria
Approx. 6 V	Normal operation
Approx. 12 V or 0 V	Open

NOTE:

- If the measured value is 12 volts, heat wire is open between heat wire center and positive (+) terminal of tester probe.
- If it is 0 V, the circuit is open between heat wire center and ground.


5) Connect the tester probe of positive lead of voltmeter to positive terminal of heat wire and move tester probe of negative lead along the heat wire up to the negative terminal end. If voltage changes from zero to several volts during movement of tester probe, heat wire is open at the voltage change point.

Rear Window Defogger

GLASS/WINDOWS/MIRRORS

B: REPAIR

- 1) Clean the broken portion with alcohol or white gasoline.
- 2) Mask both side of wire with thin film.
- 3) Apply the conductive silver composition (DUPONT No. 4817) to the broken portion.

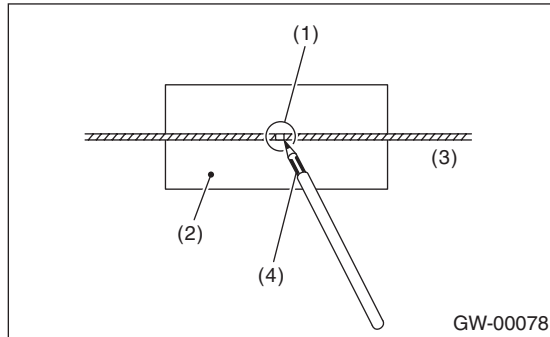


- (1) Broken portion
- (2) Thin film
- (3) Broken wire
- (4) Conductive silver composition (DUPONT No. 4817)

- 4) After repair, check the wire.

18.Rear Quarter Glass

A: REMOVAL


Remove the glass in the same procedure as for windshield glass. <Ref. to GW-27, REMOVAL, Windshield Glass.>

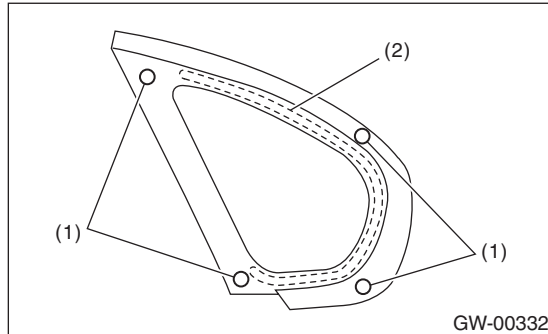

- (1) Locating pin
- (2) Dam rubber


B: INSTALLATION

1) Install the dam rubber.

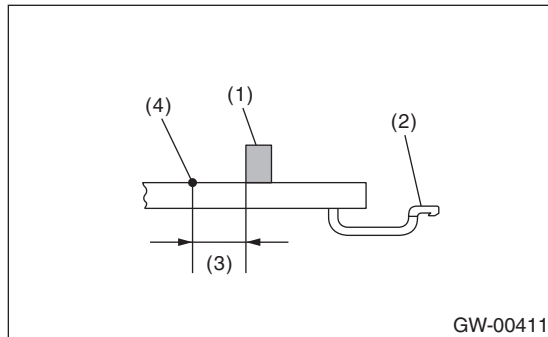

- (1) Dam rubber
- (2) Molding
- (3) 10.5 mm (0.413 in) (constant)
- (4) Ceramic terminal

2) Cut out the nozzle head and apply adhesive to the glass end surface as shown.

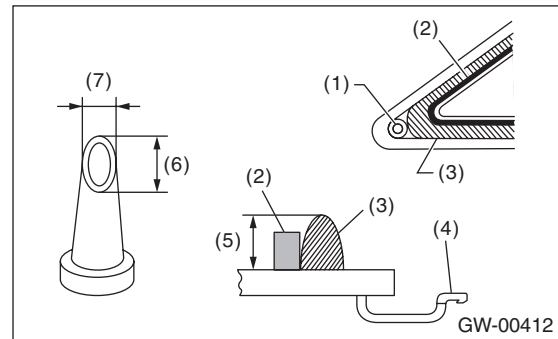

- (1) Locating pin
- (2) Dam rubber
- (3) Adhesive
- (4) Molding
- (5) 8 — 10 mm (0.31 — 0.39 in)
- (6) 15 mm (0.59 in)
- (7) 10 mm (0.39 in)

3) Install the glass in the same procedure as for windshield glass. <Ref. to GW-28, INSTALLATION, Windshield Glass.>

4) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:

- When door is opened/closed after glass is bonded, always lower the door glass first, and then open/close it carefully.
- Move the vehicle slowly.
- For minimum drying time and vehicle standing time before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

5) After curing of adhesive, pour the water on external surface of vehicle to check that there are no water leaks.

NOTE:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.

19.Sunroof Glass

A: REMOVAL

<Ref. to SR-6, REMOVAL, Glass Lid.>

B: INSTALLATION

<Ref. to SR-7, INSTALLATION, Glass Lid.>


C: ADJUSTMENT

<Ref. to SR-7, ADJUSTMENT, Glass Lid.>

20. Rearview Mirror

A: REMOVAL

- 1) Remove the TORX® screw (1).
- 2) Slide the rearview mirror (2) to the upper side (A) of the windshield glass (3), and remove the rearview mirror from the button (4).

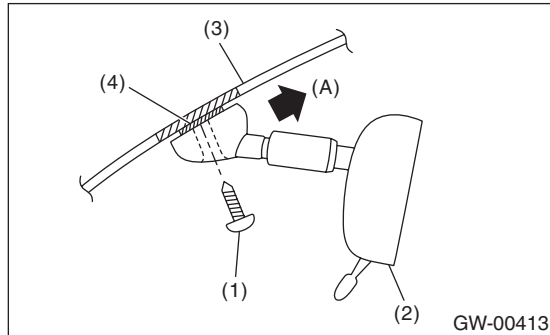

CAUTION:

- Be careful not to damage the mirror surface.
- Be careful not to damage the windshield glass.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-6, MIRROR, COMPONENT, General Description.>

CAUTION:

When tightening the mounting TORX® screw, be sure to observe the tightening torque. Otherwise, the mount may be damaged in over-torque conditions.

C: INSPECTION

Check that the mirror is not damaged.
Check that the spring is not damaged.

Wiper Deicer System

GLASS/WINDOWS/MIRRORS

21. Wiper Deicer System

A: WIRING DIAGRAM

<Ref. to WI-135, Wiper Deicer System.>

B: INSPECTION

Symptom	Repair order
Wiper deicer does not operate.	1. Fuse (F/B No. 4, 9) 2. Wiper deicer relay 3. Wiper deicer switch 4. Wiring harness 5. Body integrated unit

Refer to “Rear Window Defogger” for inspection.

<Ref. to GW-33, INSPECTION, Rear Window Defogger.>

NOTE:

Wiper deicer system can be customized on the Subaru Select Monitor.

System name	Initial setting	Customize setting
Wiper deicer timer	OFF after 15 min.	Continuous operation*

*: When one of the following conditions occurs, continuous operation is suspended and turned off after 15 min.

- Ambient temperature at 5°C (41°F) or more continues for 10 sec.
- Malfunction occurs on ambient sensor.
- Vehicle speed below 15 km/h (9 MPH) continues 15 min.
- Malfunction occurs in CAN communication.

C: REPAIR


Refer to “Rear Window Defogger” for repair.

<Ref. to GW-34, REPAIR, Rear Window Defogger.>

22. Wiper Deicer Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the harness connector and remove wiper deicer switch.

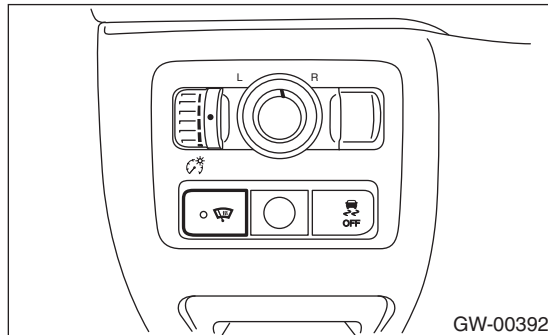

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK WITH SUBARU SELECT MONITOR

CAUTION:

Check whether the wiper deicer timer is in initial setting or customize setting before performing inspection.


Step	Check	Yes	No
1 CHECK INPUT SIGNAL TO BODY INTEGRATED UNIT. Check the input signal when the wiper deicer switch is operated using Subaru Select Monitor. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from the «main menu». 4) Select the {Current Data Display & Save}. 5) Check the input signal when the wiper deicer switch is set to ON.	After the wiper deicer switch is set to ON, does it turn to OFF in 15 minutes? Or does it operate continuously?	END.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>

Wiper Deicer Switch

GLASS/WINDOWS/MIRRORS

2. CHECK SWITCH

Remove the wiper deicer switch, and measure the switch resistance.

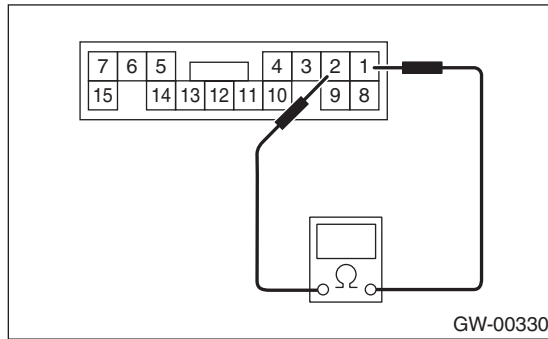

Switch position	Terminal No.	Standard
OFF	1 and 2	1 MΩ or more
ON		Less than 1 Ω

Replace the wiper deicer switch if faulty.

BODY STRUCTURE

BS

	Page
1. General Description	2
2. Datum Dimensions	3
3. Plastic Parts and Materials	24
4. List of Plastic Material Notations	27
5. Body Sealing	28
6. Anticorrosion Wax	35
7. Under Coat	41
8. Anti Chipping Coat	45
9. Stone Guard Coat	46
10. Galvanized Sheet Metal	47
11. Aluminium Sheet Metal	48

Basic Diagnostic Procedure

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

Step	Check	Yes	No
1 START INSPECTIONS. 1) Perform the pre-inspection. <Ref. to AC(diag)-3, INSPECTION, General Description.> 2) Perform the self-diagnosis. <Ref. to AC(diag)-9, OPERATION, Diagnostic Chart for Self-diagnosis.>	Does the self-diagnosis operate?	Go to step 2.	<Ref. to AC(diag)-14, A/C OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE, Diagnostics for A/C System Malfunction.>
2 IDENTIFY MALFUNCTION PART. Identify the malfunction part with self-diagnosis.	Can the malfunction part be confirmed?	Repair the malfunctioning part in accordance with each diagnostic chart.	Go to step 3.
3 CHECK COMPARTMENT TEMPERATURE. 1) Turn on the A/C switch. 2) Turn the temperature control dial at maximum cool position. 3) Check the compartment temperature change.	Does the compartment temperature change?	Go to step 4.	<Ref. to AC(diag)-18, COMPARTMENT TEMPERATURE DOES NOT CHANGE, OR A/C SYSTEM DOES NOT RESPOND PROMPTLY., Diagnostics for A/C System Malfunction.>
4 CHECK A/C SYSTEM RESPONSE. Change the temperature setting, and check the response of A/C system.	Does the A/C system respond quickly?	A/C system is normal.	<Ref. to AC(diag)-18, COMPARTMENT TEMPERATURE DOES NOT CHANGE, OR A/C SYSTEM DOES NOT RESPOND PROMPTLY., Diagnostics for A/C System Malfunction.>

2. General Description

A: CAUTION

- 1) Never connect the battery in reverse polarity.
 - Doing so may immediately damage the auto A/C control module.
- 2) Do not disconnect the battery terminals while the engine is running.
 - A large counter electromotive force will be generated in the generator, and this voltage may damage electronic parts such as auto A/C control module etc.
- 3) Before disconnecting the connectors of sensors and the auto A/C control module, be sure to turn off the ignition switch.
 - Auto A/C control module may be damaged.
- 4) Every A/C-related part is a precision part. Do not drop them.
- 5) Airbag system wiring harness is routed near the A/C control panel and junction box.

CAUTION:

- The airbag system wiring harnesses and connectors are all yellow in color. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the A/C control panel and junction box.

B: INSPECTION

Before performing the diagnosis, check the following items which may cause problems in the A/C system.

1. BATTERY

- 1) Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260


- 2) Check the condition of the fuses for A/C system power supply and other fuses.
- 3) Check the condition of harness and harness connector connections.

2. ASPIRATOR HOSE

- 1) Turn the ignition switch to ON, and press the A/C switch.
- 2) Turn the temperature control dial to maximum hot position.
- 3) Turn the air flow control dial to "DEF" position.
- 4) Turn the fan speed control dial to 4th position.
- 5) Put a strip of paper close to the front side of in-vehicle sensor suction port (A) located in the driver's side console side panel, and check that air is being sucked into the port by seeing the paper moving towards the port.

NOTE:


Be careful not to let the paper get sucked into the port.

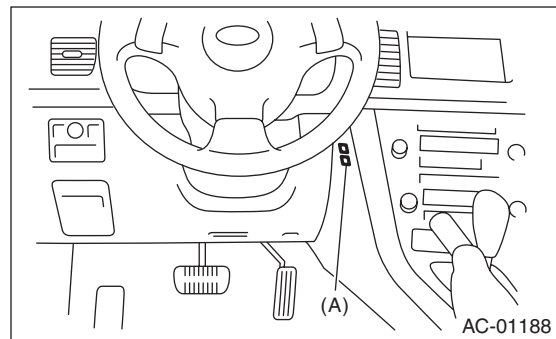

- 6) If the paper does not move at all, remove the driver's side console side panel <Ref. to EI-53, REMOVAL, Center Console.> and check for improper connection of the aspirator hose, in-vehicle sensor and heater unit, and repair them if necessary.

3. A/C LINE

Check the connection for A/C line (A) and lower side high-pressure pipe.

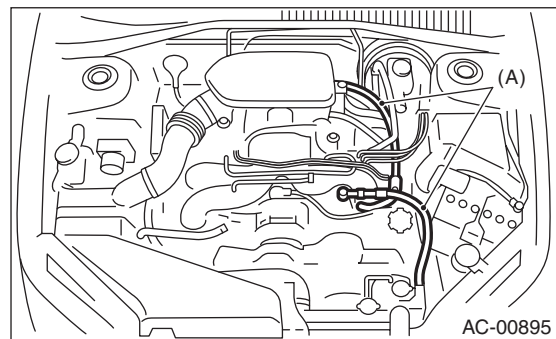

4. CONTROL LINKAGE

- 1) Check the state of mode door linkage.
- 2) Check the state of air mix door linkage.
- 3) Check the state of RESH/RECIRC door linkage.

General Description

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

5. CONTROL SWITCHES

Start the engine and warm-up completely.

1) Inspection using switches

No.	Point to check	Switch operation	Judgment standard
1	OFF switch	Press the OFF switch.	Setting temperature display goes out. • Blower fan: OFF • Inlet opening: FRESH • Compressor: OFF
2	AUTO switch, driver's side temperature control dial and passenger's side temperature control dial	1) Press the AUTO switch. 2) Turn the temperature control dial to the left fully, and set to 18°C (65°F) (maximum cool position).	AUTO display illuminates. • Outlet air temperature: COOL • Blower fan: HI (AUTO) • Outlet opening: FACE • Inlet opening: AUTO • Compressor: AUTO
		3) Turn the temperature control dial to the right slowly, and change the setting from 18°C (65°F) (maximum cool position) to 32°C (90°F).	• Outlet air temperature: COOL → HOT • Blower fan: AUTO • Outlet opening: FACE → B/L → FOOT • Inlet opening: AUTO • Compressor: AUTO
		4) Turn the temperature control dial to the right fully, and set to 32°C (90°F) (maximum hot position).	• Outlet air temperature: HOT • Blower fan: HI (AUTO) • Outlet opening: FOOT • Inlet opening: FRESH (AUTO) • Compressor: AUTO
3	Defroster switch	Press the defroster switch.	Defroster switch indicator illuminates. • Outlet air temperature: AUTO • Blower fan: AUTO • Outlet opening: DEF • Inlet opening: FRESH • Compressor: ON
4	FRESH/RECIRC switch	Press the FRESH/RECIRC switch.	Inlet opening switches RECIRC → FRESH or FRESH → RECIRC each time pressing the switch.
5	MODE switch	Press the MODE switch.	Outlet opening switches FACE → B/L → FOOT → F/D each time pressing the switch.
6	FAN switch	Press the FAN (+) switch.	Inlet opening switches LO → M1 → M2 → M3 → M4 → HI each time pressing the switch.

2) Compressor operation inspection

No.	Point to check	Switch operation	Judgment standard
1	COMPRESSOR	1) Turn the A/C switch to ON. 2) Set the FAN switch between LO and HI.	Compressor: ON

3) Inspection of illumination control

No.	Point to check	Switch operation	Judgment standard
1	Illumination	Turn the lighting switch to ON.	Illumination comes on.


Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION





1. ENGINE COMPARTMENT

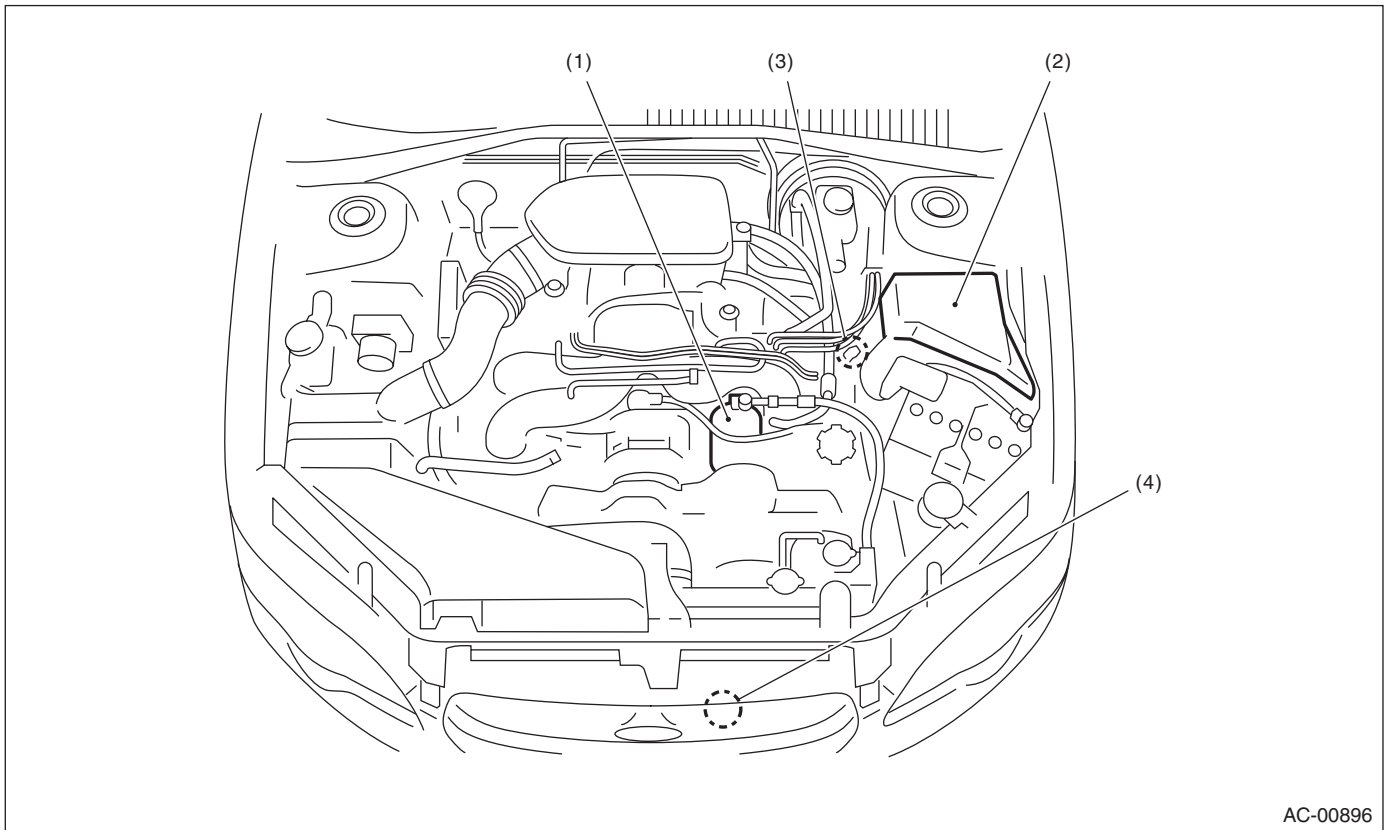

- (1) A/C compressor
(2) A/C relay

- (3) Pressure switch


- (4) Ambient sensor

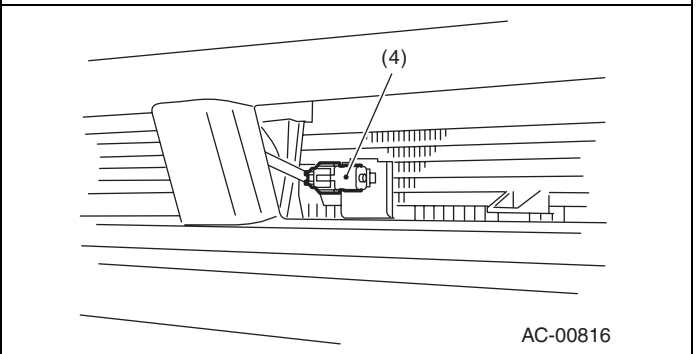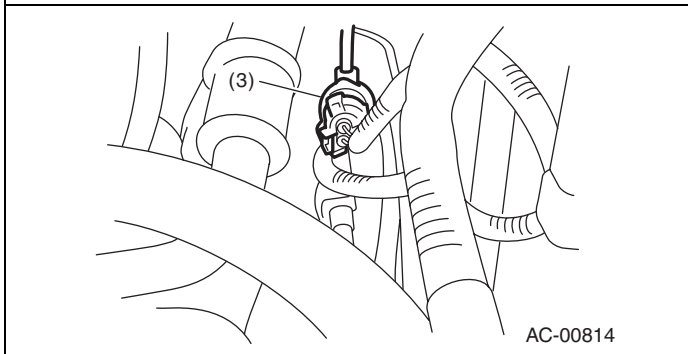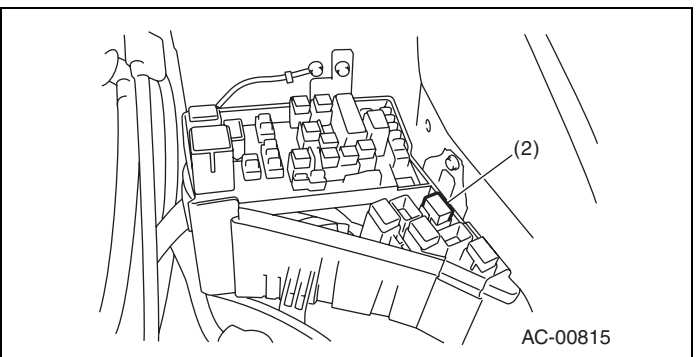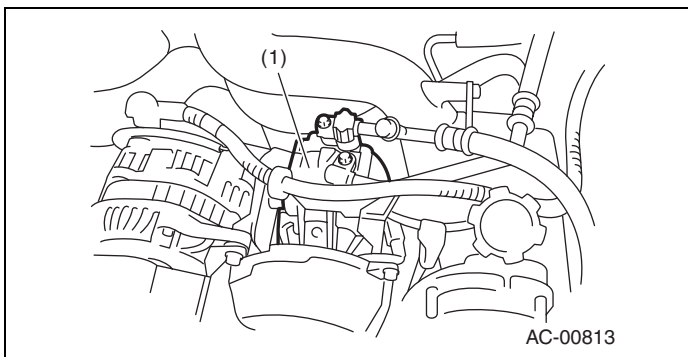





Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. PASSENGER COMPARTMENT

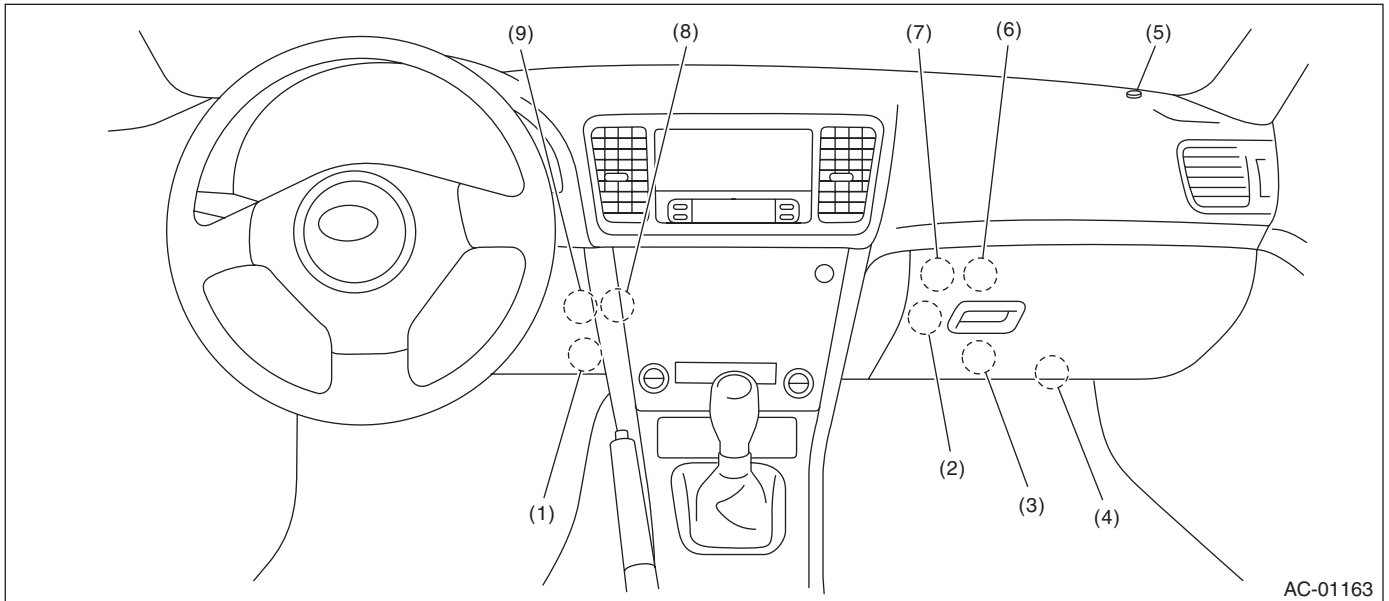

- | | | |
|--|--------------------------|---|
| (1) Evaporator sensor | (4) Blower motor | (7) Mode door actuator |
| (2) Passenger's side air mix door actuator | (5) Sunload sensor | (8) In-vehicle sensor |
| (3) Auto A/C control module | (6) Intake door actuator | (9) Driver's side air mix door actuator |

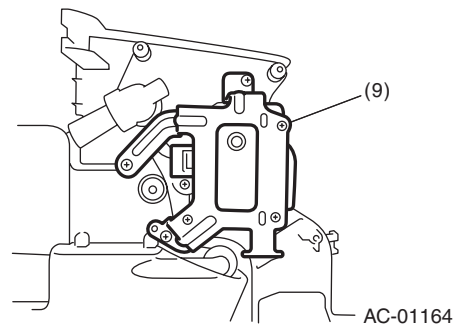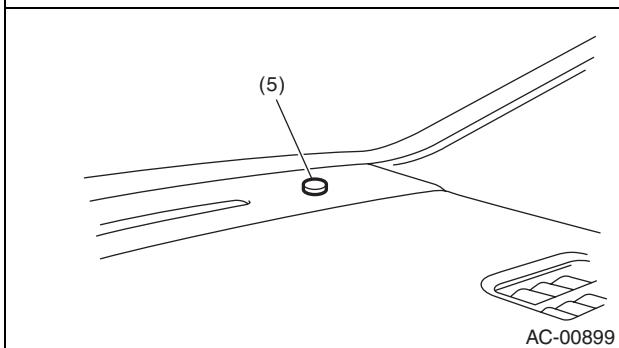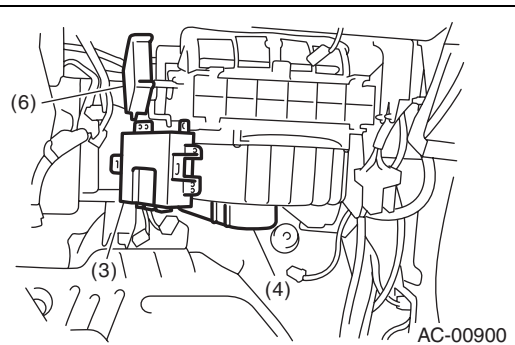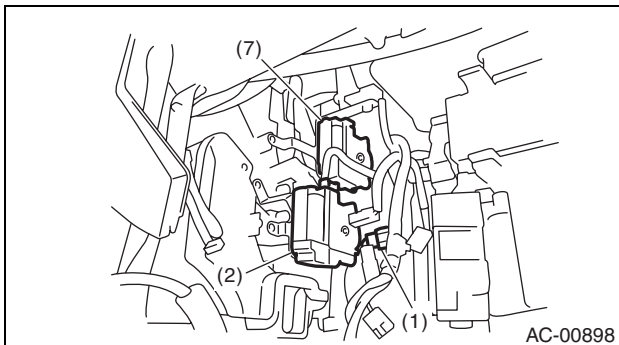


Auto A/C Control Module I/O Signal


HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

4. Auto A/C Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

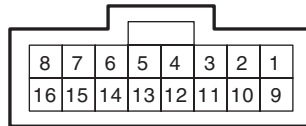

To A: (B282)

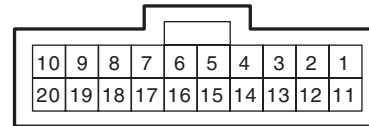

To B: (B283)

AC-00735

Terminal No.	Remarks	Measuring condition	Standard
A1	Battery power supply	Ignition switch: OFF	Battery voltage
A2	ACC power supply	Ignition switch: ACC	Battery voltage
A3	Mode door actuator position signal	Mode door: FACE position	4 V
		Mode door: DEF position	1 V
A4	Passenger's side air mix door actuator position signal	Air mix door: Maximum cool position	4 V
		Air mix door: Maximum hot position	1 V
A5	In-vehicle sensor	Ignition switch: ON	Less than 5 V
A6	Sunload sensor	Ignition switch: ON, With sunload (No sunload: 0 V)	3 V
A8	Sensor power supply	Ignition switch: ON	5 V
A9	Ignition power supply	Ignition switch: ON	Battery voltage
A10	A/C cut signal	Ignition switch: ON	Battery voltage
		When pressure SW is operating	0 V
A12	Driver's side air mix door actuator position signal	Air mix door: Maximum cool position	4 V
		Air mix door: Maximum hot position	1 V
A13	Evaporator sensor	Ignition switch: ON	Less than 5 V
A14, A16	Ground	Continuity to chassis ground	0 Ω
A15	Sensor ground	Continuity to chassis ground	0 Ω
B1, B11	Ambient sensor, engine coolant temperature sensor	—	*1
B2	Blower motor control	Ignition switch : ON, Blower switch : ON	0.45 V
B3	Blower motor control	Ignition switch : ON, Blower switch : ON	9.05 V
B4	RAM monitor	—	*1
B5	RAM monitor	—	*1
B6	A/C ON signal	A/C: ON (A/C OFF: 0 V)	7 — 14 V
B7	Mode door actuator power supply	When switching mode door from DEF → FACE	Battery voltage
B17		When switching mode door from FACE → DEF	Battery voltage
B8	Passenger's side air mix door actuator power supply	When switching air mix door from HOT → COOL	Battery voltage
B18		When switching air mix door from COOL → HOT	Battery voltage
B9	Driver's side air mix door actuator power supply	When switching air mix door from HOT → COOL	Battery voltage
B19		When switching air mix door from COOL → HOT	Battery voltage

Auto A/C Control Module I/O Signal

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Terminal No.	Remarks	Measuring condition	Standard
B10	Intake door actuator	FRESH (RECIRC: Battery voltage)	0 V
B20		RECIRC (FRESH: Battery voltage)	0 V
B13	Blower fan ON signal	When blower fan is rotating (Not rotating: Battery voltage)	0 V
B14	RAM monitor	—	*1
B15, B16	Control panel	—	*1

*1: Unable to measure the voltage for digital signal.

B: WIRING DIAGRAM

1. AIR CONDITIONER AUTO A/C MODEL


<Ref. to WI-101, WIRING DIAGRAM, Air Conditioning System.>

Diagnostic Chart for Self-diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

5. Diagnostic Chart for Self-diagnosis

A: OPERATION

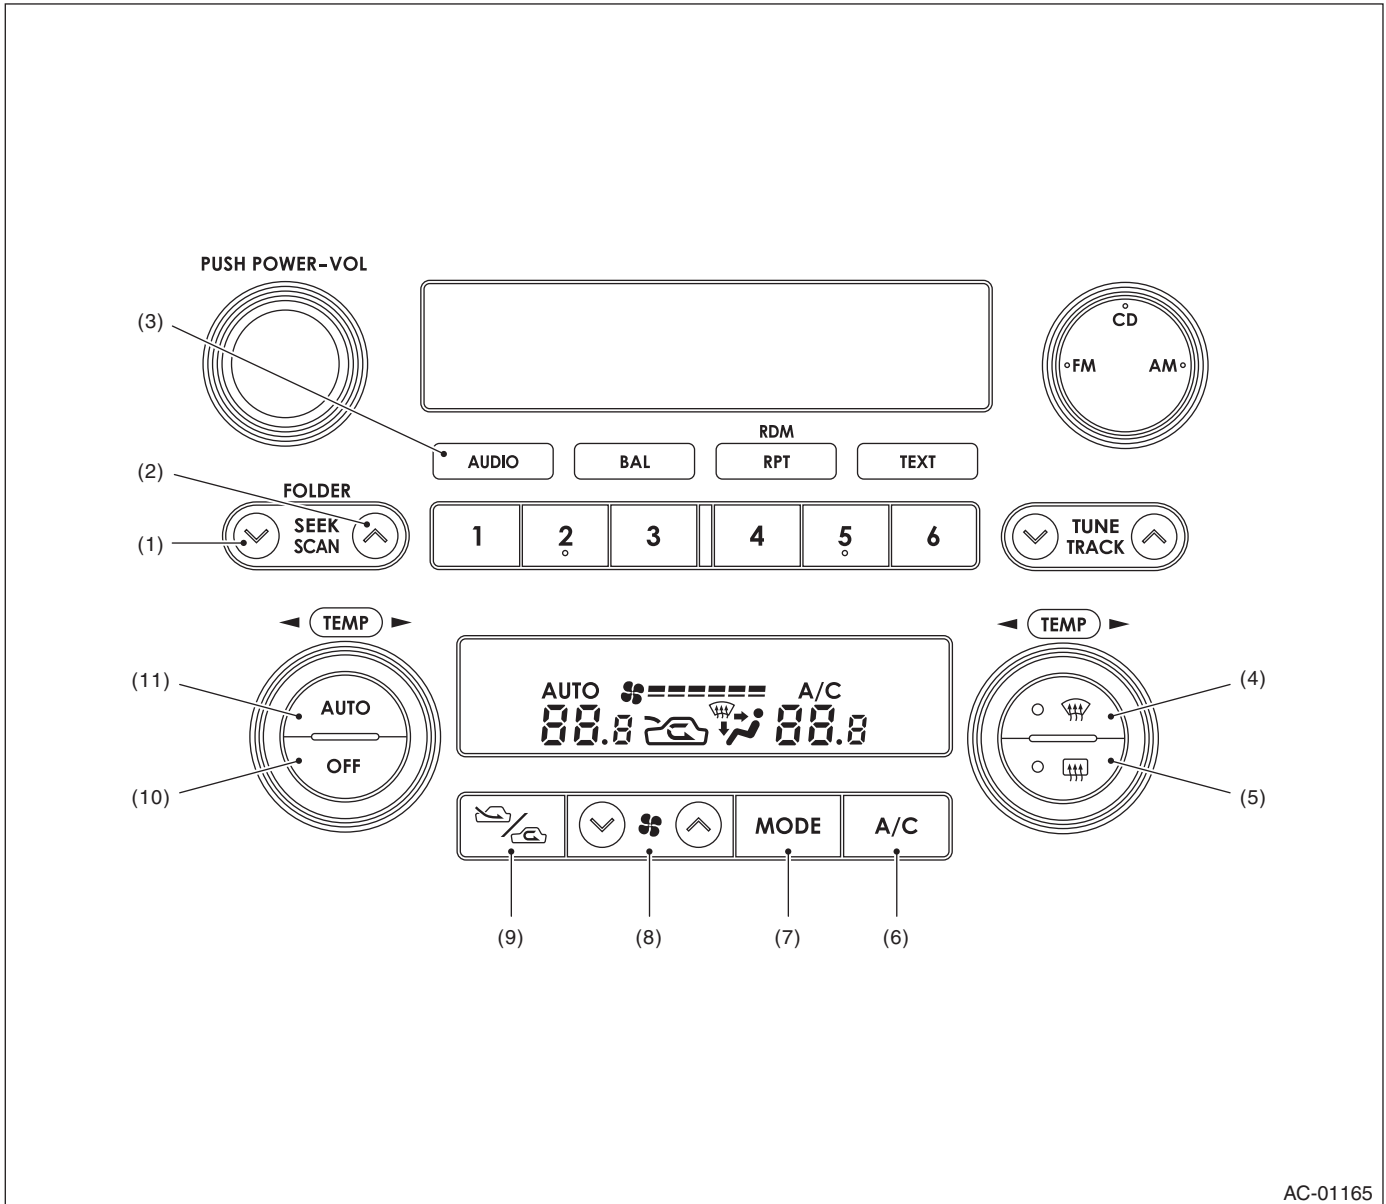

AC-01165

- | | | |
|----------------------|---------------------------------|-------------------------|
| (1) SEEK DOWN switch | (5) Rear window defogger switch | (9) FRESH/RECIRC switch |
| (2) SEEK UP switch | (6) A/C switch | (10) OFF switch |
| (3) AUDIO switch | (7) Air flow control switch | (11) AUTO switch |
| (4) Defroster switch | (8) FAN switch | |

NOTE:

For A/C system self-diagnosis, there is one that checks the control panel, and the other that checks the whole control system (sensor, actuator, blower motor, etc.). Perform the self-diagnosis for control panel first, and then perform the self-diagnosis for control system.

Diagnostic Chart for Self-diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)


1. A/C CONTROL PANEL SELF-DIAGNOSIS

	Step	Check	Yes	No
1	SET SELF-DIAGNOSIS MODE BY OPERATING A/C CONTROL PANEL. 1) Turn the ignition switch from OFF to ACC, and wait for 2 seconds. 2) Turn the ignition switch to ON with the AUTO switch and SEEK UP switch pressed. 3) The screen display and indicator illuminate.	Does the self-diagnosis function operate?	Go to step 2.	<Ref. to AC(diag)-14, A/C OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE, Diagnostics for A/C System Malfunction.>
2	CHECK DISPLAY AND INDICATOR. Check if all the screen display and indicators come on and then go off. NOTE: "11" — "14" is displayed on the screen when malfunction occurs.	Do all the screen display and indicators come on then go off?	Go to step 3.	Replace the A/C control panel.
3	CHECK SWITCH AND TEMPERATURE CONTROL DIAL INPUT. According to the switch check table, press each switch or turn the temperature control dial, and check the relative screen display and indicators illuminate. <Ref. to AC(diag)-11, SWITCH CHECK TABLE, OPERATION, Diagnostic Chart for Self-diagnosis.>	Does the screen display related to each switch and dial input illuminate?	Go to step 4.	Replace the A/C control panel.
4	CHECK A/C CONTROL PANEL COMMUNICATION. 1) Turn the ignition switch to OFF. 2) Disconnect the auto A/C control module harness connector. 3) Using a suitable lead wire, short the terminal No. 15 and No. 16 of auto A/C control module harness connector (B283). 4) Turn the ignition switch from OFF to ACC, and wait for 2 seconds. 5) Turn the ignition switch to ON with the AUTO switch and SEEK DOWN switch pressed. 6) When no malfunction occurs in the control panel communication, "CL" is displayed in the screen; and when malfunction occurs, "OP" is displayed.	Is "CL" displayed on the screen?	A/C control panel is normal. Turn the ignition switch to OFF, and connect the auto A/C control module harness connector.	Replace the A/C control panel.

Diagnostic Chart for Self-diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. SWITCH CHECK TABLE

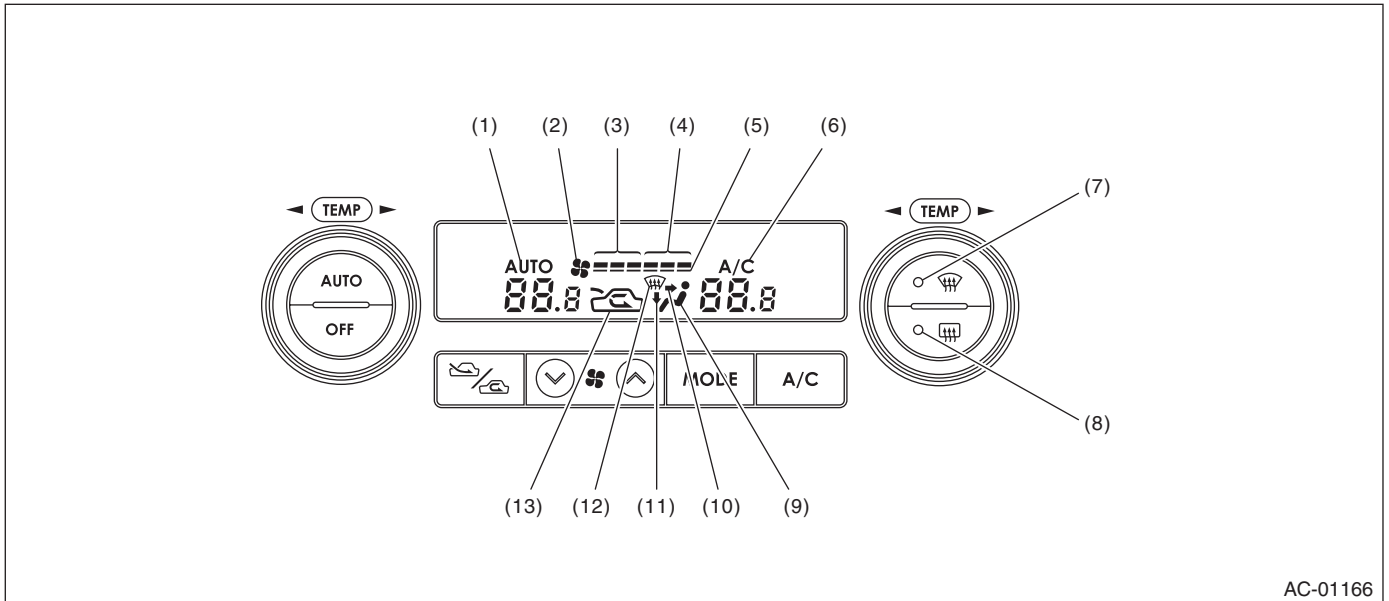

AC-01166

Switch	Display screen	Switch	Display screen
A/C switch	(6)	FAN switch (+)	(4)
AUTO switch	(1)	FAN switch (-)	(3)
Air flow control switch	(9)	Driver's side temperature control dial	(10) (12)
FRESH/RECIRC	(13)	Passenger's side temperature control dial	(11) (12)
Defroster switch	(7)	OFF switch	(2) (5)
Rear defogger switch	(8)		

Diagnostic Chart for Self-diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. A/C CONTROL SYSTEM SELF-DIAGNOSIS

Step	Check	Yes	No
1 SET SELF-DIAGNOSIS MODE BY OPERATING A/C CONTROL PANEL. 1) Turn the ignition switch from OFF to ACC, and wait for 2 seconds. 2) Start the engine with the auto switch and FRESH/RECIRC switch pressed. NOTE: Self-diagnosis can also be performed with ignition switch ON, but start the engine because observing the magnet clutch operation is difficult. 3) All the indicators blink four times.	Does the self-diagnosis function operate?	Go to step 2.	<Ref. to AC(diag)-14, A/C OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE, Diagnostics for A/C System Malfunction.>
2 CHECK EACH SENSOR AND POTENTIOMETER. 1) After the indicators stop blinking, automatically change to the Inspection Mode of sensor and potentiometer. NOTE: Display items can be changed each time the A/C switch is pressed. (Step Operation) 2) When malfunction occurs in each sensor and potentiometer, codes are displayed on the screen. When no malfunction occurs in each sensor and potentiometer, code "20" is displayed on the screen. 3) Identify the defective sensor according to the sensor check table. <Ref. to AC(diag)-13, SENSOR CHECK TABLE, OPERATION, Diagnostic Chart for Self-diagnosis.>	Are other codes except 20 displayed?	Repair the defective sensor. <Ref. to AC(diag)-29, Diagnostic Procedure for Sensors.>	Go to step 3.
3 CHECK EACH ACTUATOR, BLOWER FAN AND MAGNET CLUTCH. 1) After completing each sensor and potentiometer inspection, change to the Inspection Mode of actuator, blower fan and magnet clutch by pressing the defroster switch. 2) Each mode will change and operate automatically every four seconds. NOTE: Operation mode items can be changed each time the A/C switch is pressed. (Step Operation) 3) Check the operation of actuator, blower fan and magnet clutch in each mode according to the operating mode table. <Ref. to AC(diag)-13, OPERATING MODE TABLE, OPERATION, Diagnostic Chart for Self-diagnosis.>	Do the actuator, blower fan and magnet clutch operate as described in the operating mode table?	A/C control system is normal. Press the OFF switch and complete the self-diagnosis function.	Repair the defective part in accordance with each diagnostic chart. <Ref. to AC(diag)-14, Diagnostics for A/C System Malfunction.> or <Ref. to AC(diag)-22, Diagnostic Procedure for Actuators.>

Diagnostic Chart for Self-diagnosis

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

4. SENSOR CHECK TABLE

NOTE:

When the sunload sensor check is performed indoors or in the shade, it could be diagnosed as having an open circuit. Always check the sunload sensor with the sun shining on it.

Display screen (Malfunction at present) *1	SENSOR	Trouble contents
21/AUTO Blink	In-vehicle sensor	Open
–21/AUTO Blink		Short
22/AUTO Blink	Ambient sensor	Sensor trouble or communication failure
23/AUTO Blink	Evaporator sensor	Open
–23/AUTO Blink		Short
24/AUTO Blink	Engine coolant temperature sensor	Sensor trouble or communication failure
25 Blink	Sunload sensor	Open *2
–25/AUTO Blink		Short
26/AUTO Blink	Driver's side air mix door actuator potentiometer	COOL
27/AUTO Blink		HOT
–26/AUTO Blink	Passenger's side air mix door actuator potentiometer	COOL
–27/AUTO Blink		HOT
28/AUTO Blink	Mode door actuator potentiometer	FACE
29/AUTO Blink		DEF
20 Blink	When all conditions are normal	

*1: AUTO display does not blink when past malfunction occurred. Past malfunction means that abnormal signals were continuously input for a certain time in the past.

*2: Present malfunction only is displayed for sunload sensor open circuit.

5. OPERATING MODE TABLE

Display screen	FRESH/RECIRC door	Mode door	Air mix door*	Blower fan	A/C compressor (Magnet clutch)
31	FRESH	FACE	Maximum cool	LO	OFF
32	RECIRC	FACE	Maximum cool	LO	ON
33	RECIRC	FACE	Maximum cool	M1	ON
34	FRESH	B/L	50%	M1	ON
35	FRESH	FOOT	50%	M1	ON
36	FRESH	FOOT	Maximum hot	M3	ON
37	FRESH	F/D	Maximum hot	M3	ON
38	FRESH	DEF	Maximum hot	HI	ON

*Same opening angle for both driver's and passenger's side

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

 

6. Diagnostics for A/C System Malfunction

A: A/C OR SELF-DIAGNOSIS SYSTEMS DO NOT OPERATE

TROUBLE SYMPTOM:

- Set temperature is not indicated on the display, switch LEDs are faulty and switches do not operate.
- Self-diagnosis system does not operate.

WIRING DIAGRAM:

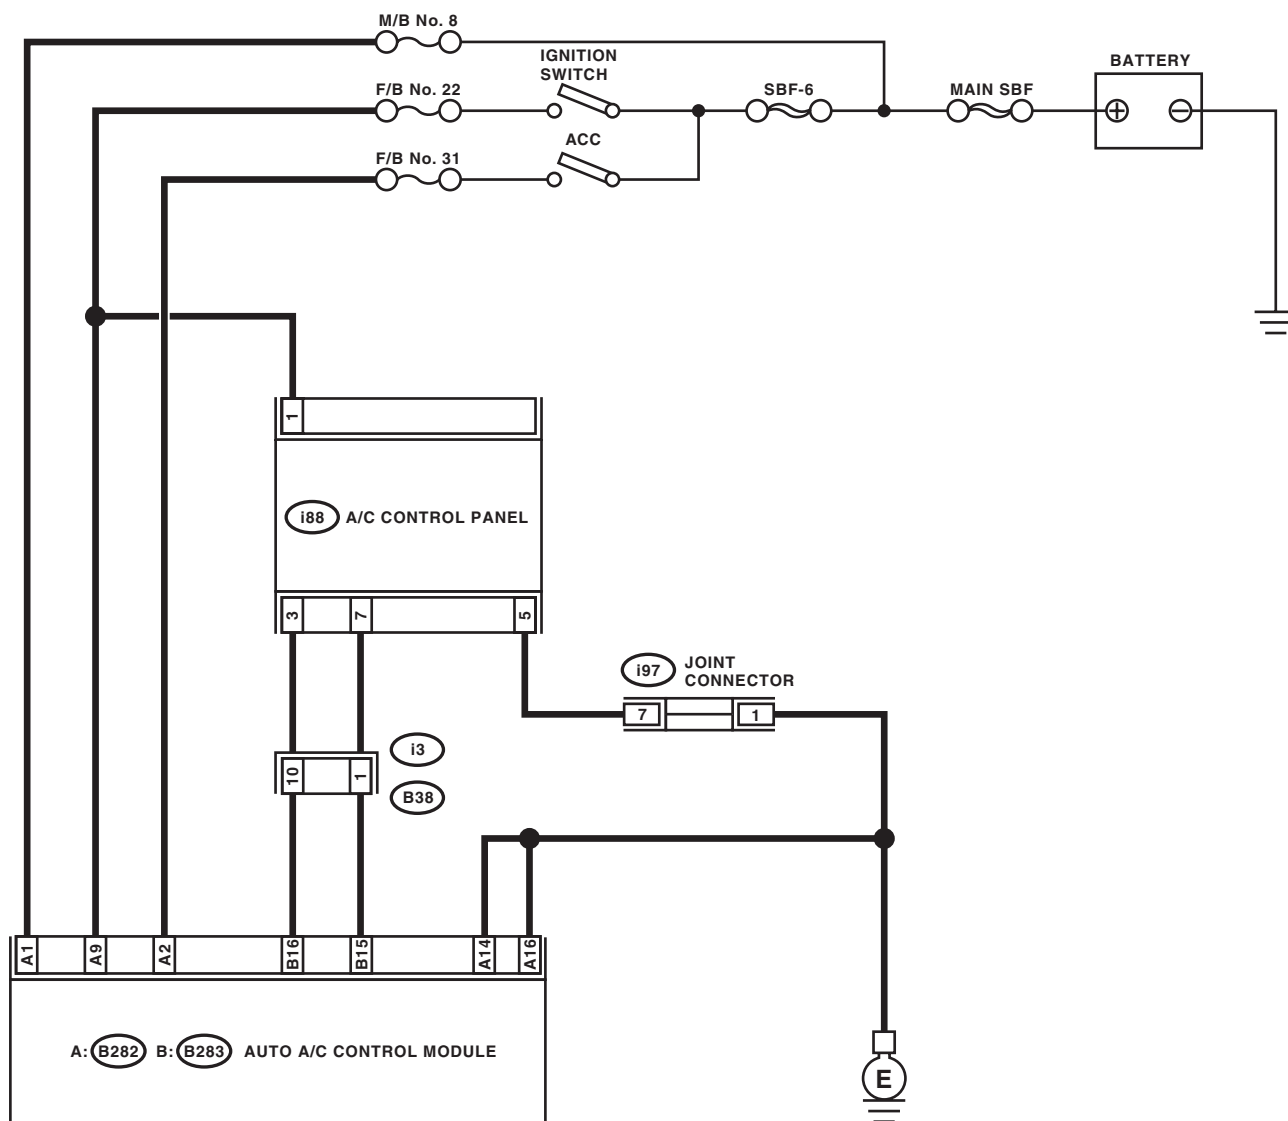

AC-01167

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No	
1	CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove the fuse No. 8 from main fuse box. 3) Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step 2.
2	CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove the fuse No. 22 and No. 31 from fuse & relay box. 3) Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step 3.
3	CHECK A/C CONTROL PANEL POWER CIRCUIT. Measure the voltage between A/C control panel harness connector terminal and chassis ground after turning the ignition switch to ON. Connector & terminal (i88) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 4.	Check for open or short circuit in the harness between A/C control panel and fuse.
4	CHECK A/C CONTROL PANEL GROUND POWER CIRCUIT. Measure the resistance of harness between A/C control panel and chassis ground after turning the ignition switch to OFF. Connector & terminal (i88) No. 5 — Chassis ground:	Is the resistance less than 10 Ω?	Go to step 5.	Repair the harness for ground line.
5	CHECK AUTO A/C CONTROL MODULE POWER CIRCUIT. Measure the voltage between auto A/C control module connector terminal and chassis ground after turning the ignition switch OFF. Connector & terminal (B282) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 6.	Check open or short circuit of harness between auto A/C control module and fuse.
6	CHECK AUTO A/C CONTROL MODULE POWER CIRCUIT. Measure the voltage between auto A/C control module connector terminal and chassis ground after turning the ignition switch to ACC. Connector & terminal (B282) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 7.	Check open or short circuit of harness between auto A/C control module and fuse.
7	CHECK AUTO A/C CONTROL MODULE POWER CIRCUIT. Measure the voltage between auto A/C control module connector terminal and chassis ground after turning the ignition switch to the ON position. Connector & terminal (B282) No. 9 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 8.	Check open or short circuit of harness between auto A/C control module and fuse.
8	CHECK AUTO A/C CONTROL MODULE GROUND CIRCUIT. Measure the resistance of harness between auto A/C control module and chassis ground. Connector & terminal (B282) No. 14, No. 16 — Chassis ground:	Is the resistance less than 5 Ω?	Go to step 9.	Repair the harness for ground line.
9	CHECK COMMUNICATION CIRCUIT. Measure the resistance of harness between A/C control panel and auto A/C control module. Connector & terminal (i88) No. 3 — (B283) No. 16: (i88) No. 7 — (B283) No. 15:	Is the resistance less than 1 Ω?	Go to step 10.	Repair the harness.
10	CHECK POOR CONTACT. Check poor contact of auto A/C control module connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

Diagnostics for A/C System Malfunction


HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

B: BLOWER FAN DOES NOT ROTATE.

TROUBLE SYMPTOM:

- Blower motor does not rotate.
- Blower motor does not rotate in "HI".

WIRING DIAGRAM:

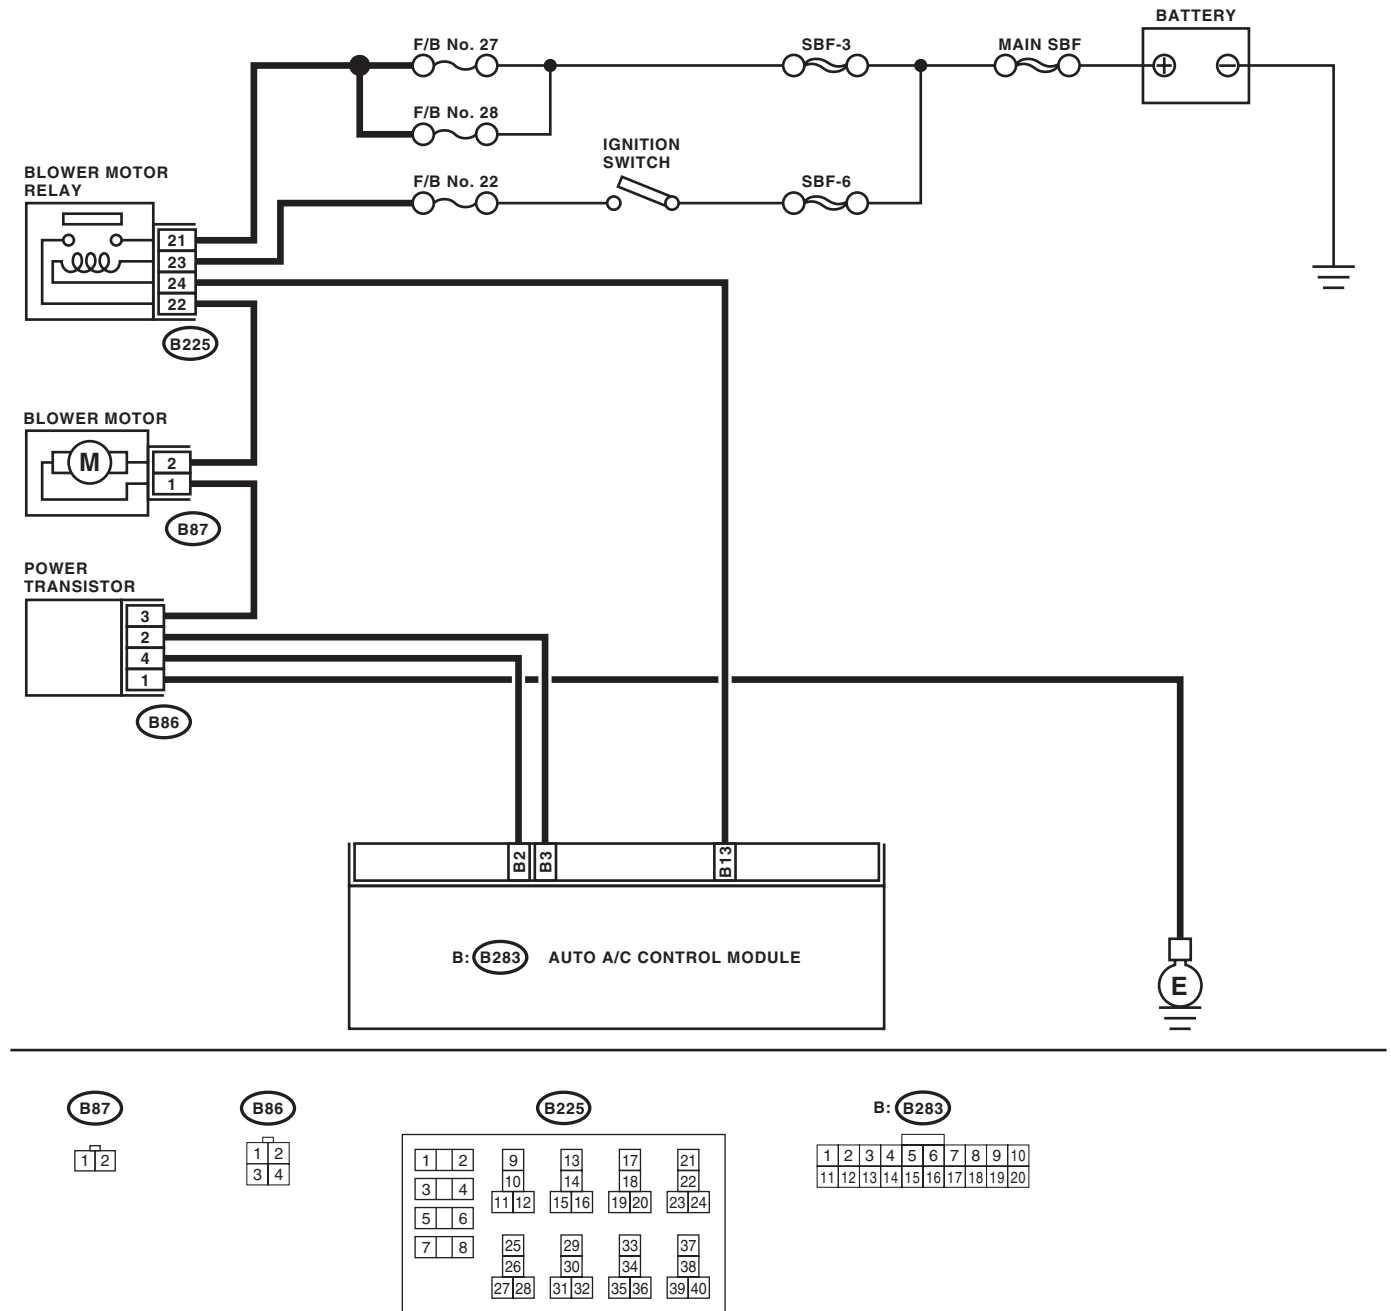

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)



Step	Check	Yes	No
1 CHECK FUSE. 1) Remove fuse No. 22, 27 and 28 from fuse & relay box. 2) Check the condition of fuse.	Is any fuse blown out?	Replace the fuse.	Go to step 2.
2 CHECK POWER SUPPLY FOR BLOWER MOTOR. 1) Turn the ignition switch to ON. 2) Turn the blower switch to ON. 3) Measure the voltage between blower motor and chassis ground. Connector & terminal (B87) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Repair the open circuit of blower motor power supply line harness.
3 CHECK BLOWER MOTOR RELAY. 1) Turn the ignition switch to OFF. 2) Remove the blower motor relay. 3) Connect the battery positive (+) terminal to terminal No. 23 of blower motor relay, and negative (-) terminal to terminal No. 24. 4) Measure the resistance between terminals No. 21 and No. 22. Terminal (B225) No. 21 — (B225) No. 22:	Is the resistance less than 1 Ω ?	Go to step 4.	Replace the blower motor relay.
4 CHECK BLOWER MOTOR. 1) Disconnect the connector from the blower motor. 2) Connect the battery positive (+) terminal to terminal No. 2 of blower motor connector, and negative (-) terminal to terminal No. 1. 3) Make sure the blower motor runs.	Does the blower motor run?	Go to step 5.	Replace the blower motor.
5 CHECK POOR CONTACT. Check poor contact of auto A/C control module connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

C: COMPARTMENT TEMPERATURE DOES NOT CHANGE, OR A/C SYSTEM DOES NOT RESPOND PROMPTLY.

WIRING DIAGRAM:

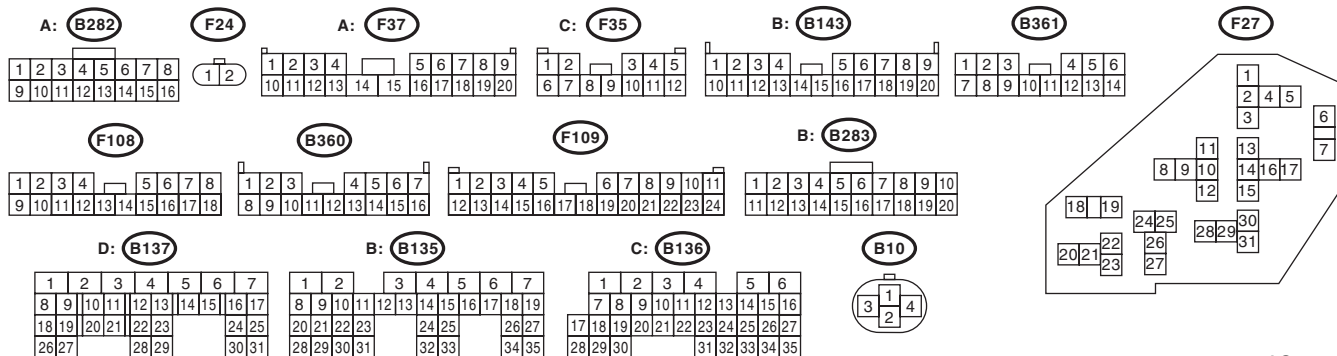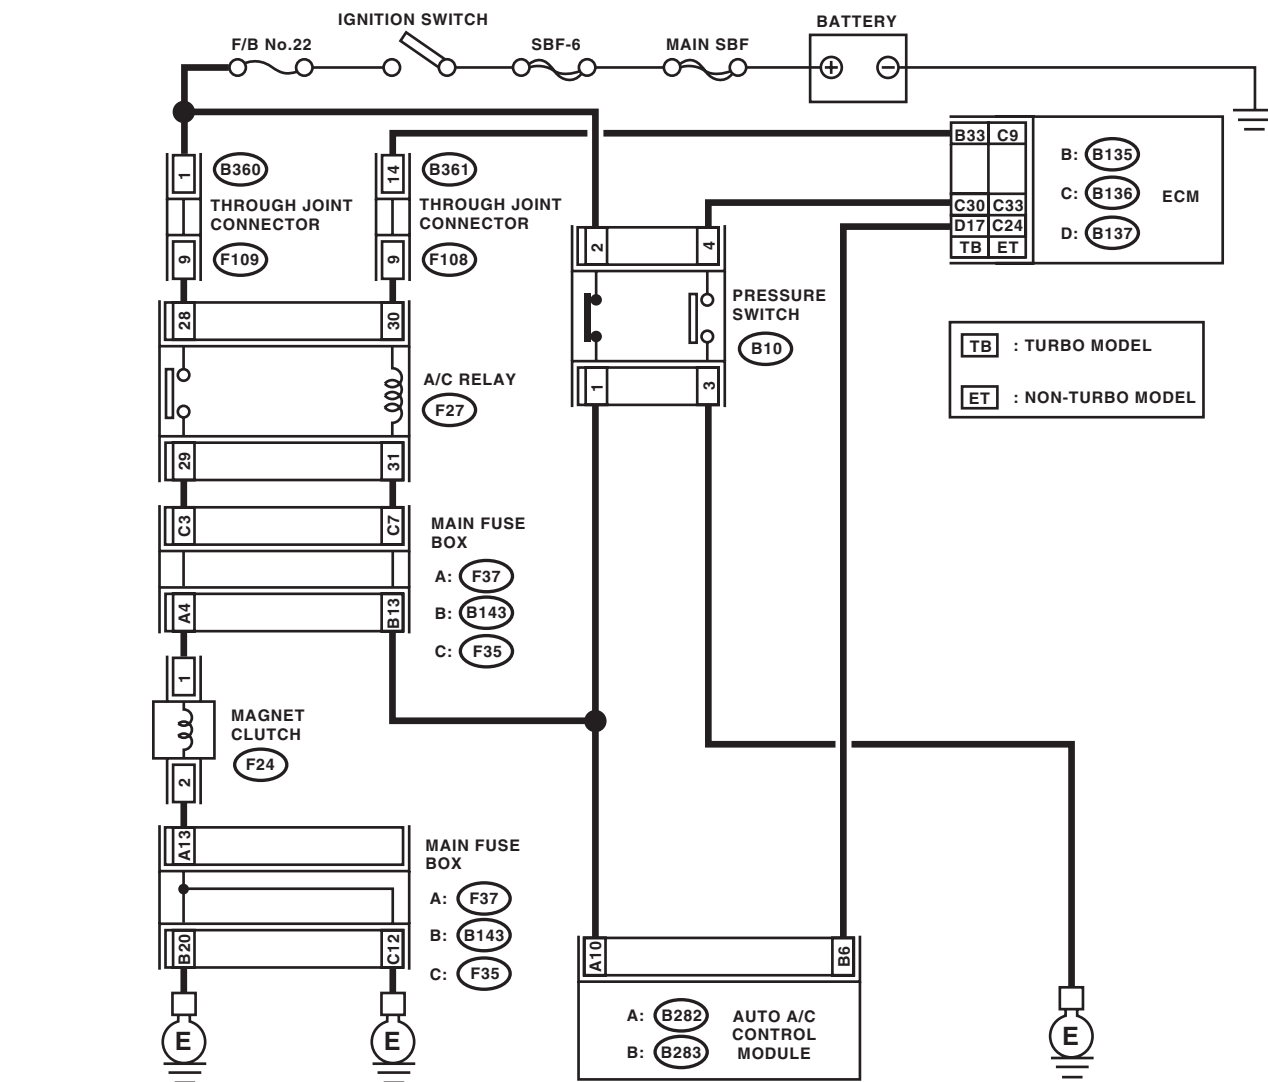

AC-01416

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove the fuse No. 22 from fuse & relay box. 3) Check the condition of fuse.	Is the fuse blown out?	Replace the fuse.	Go to step 2.
2 CHECK SIGNAL TO A/C RELAY AND A/C CONTROL MODULE. 1) Disconnect the A/C relay and auto A/C control module harness connector. 2) Turn the ignition switch to ON. 3) Measure the voltage between A/C relay connector terminal and chassis ground. 4) Measure the voltage between auto A/C control module harness connector terminal and chassis ground. Connector & terminal (F27) No. 31 (+) — Chassis ground (-): (B282) No. 10 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 5.	Go to step 3.
3 CHECK POWER SUPPLY FOR PRESSURE SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the pressure switch harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between pressure switch harness connector terminal and chassis ground. Connector & terminal (B10) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 4.	Check for open or short circuit in the harness between fuse and pressure switch.
4 CHECK HARNESS BETWEEN PRESSURE SWITCH AND A/C RELAY, AUTO A/C CONTROL MODULE. 1) Turn the ignition switch to OFF. 2) Measure the resistance of harness between pressure switch connector and A/C relay connector. 3) Measure the resistance of harness between pressure switch connector and auto A/C control module connector. Connector & terminal (B10) No. 1 — (F27) No. 31: (B10) No. 1 — (B282) No. 10:	Is the resistance less than 1 Ω ?	Check the pressure switch. <Ref. to AC-40, INSPECTION, Pressure Switch (Triple Pressure Switch).>	Repair the harness.
5 CHECK POWER SUPPLY FOR A/C RELAY. Measure the voltage between A/C relay connector terminal and chassis ground. Connector & terminal (F27) No. 28 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 6.	Check open or short circuit of harness between fuse and A/C relay.
6 CHECK A/C RELAY. Check the A/C relay. <Ref. to AC-39, INSPECTION, Relay and Fuse.>	Is there a malfunction in the A/C relay?	Replace the A/C relay.	Go to step 7.

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK A/C ON SIGNAL. 1) Turn the ignition switch to OFF. 2) Connect the A/C relay and all disconnected connectors. 3) Start the engine and turn the AUTO switch to ON. 4) Turn the temperature control dial at maximum cool position. 5) Measure the voltage between auto A/C control module harness connector terminal and chassis ground. Connector & terminal (B283) No. 6 (+) — Chassis ground (-):	Is the voltage more than 5.5 V?	Go to step 9.	Go to step 8.
8 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND ECM. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of auto A/C control module and ECM. 3) Measure the resistance of harness between auto A/C control module connector and ECM connector. Connector & terminal Turbo model (B283) No. 6 — (B137) No. 17: without turbo model (B283) No. 6 — (B136) No. 24:	Is the resistance less than 1 Ω ?	Replace the auto A/C control module.	Repair the harness.
9 CHECK MAGNET CLUTCH ON SIGNAL. 1) Stop the engine, and turn the AUTO switch to OFF. 2) Turn the ignition switch to ON. 3) Measure the voltage between ECM connector terminal and chassis ground. Connector & terminal Turbo model (B135) No. 33 (+) — Chassis ground (-): without turbo model (C136) No. 9 — Chassis ground:	Is the voltage more than 10 V?	Go to step 10.	Check for open or short circuit in the harness between A/C relay and ECM.
10 CHECK MAGNET CLUTCH ON SIGNAL. 1) Start the engine and turn the AUTO switch to ON. 2) Turn the temperature control dial at maximum cool position. 3) Measure the voltage between ECM connector terminal and chassis ground. Connector & terminal Turbo model (B135) No. 33 (+) — Chassis ground (-): without turbo model (C136) No. 9 — Chassis ground:	Is the voltage 0 V?	Go to step 11.	Replace the ECM.

Diagnostics for A/C System Malfunction

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
11 CHECK POWER SUPPLY FOR MAGNET CLUTCH. 1) Stop the engine, and turn the AUTO switch to OFF. 2) Disconnect the harness connector of magnet clutch. 3) Start the engine and turn the AUTO switch to ON. 4) Turn the temperature control dial at maximum cool position. 5) Measure the voltage between magnet clutch harness connector terminal and chassis ground. Connector & terminal (F24) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 12.	Check for open or short circuit in the harness between A/C relay and magnet clutch.
12 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND ECM. 1) Stop the engine, and turn the AUTO switch to OFF. 2) Measure the resistance between magnet clutch harness connector terminal and chassis ground. Connector & terminal (F24) No. 2 — Chassis ground:	Is the resistance less than 1 Ω ?	Inspect the compressor. <Ref. to AC-33, INSPECTION, Compressor.>	Repair the harness.

Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

 

7. Diagnostic Procedure for Actuators

A: INTAKE DOOR ACTUATOR

TROUBLE SYMPTOM:

FRESH/RECIRC mode is not changed.

WIRING DIAGRAM:

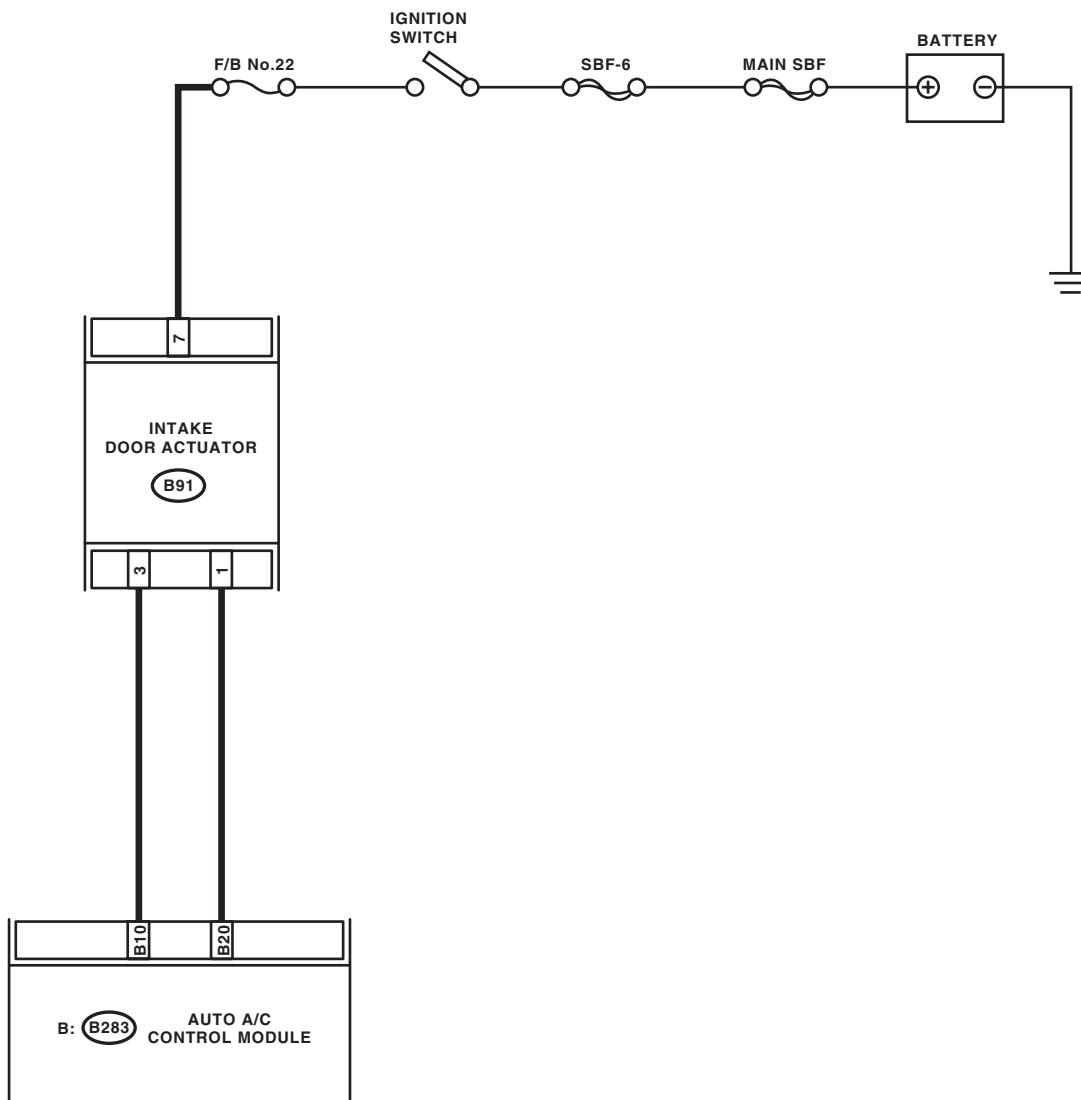

AC-01192

Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POWER SUPPLY FOR INTAKE DOOR ACTUATOR. 1) Turn the ignition switch to OFF. 2) Disconnect the intake door actuator connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between intake door actuator connector and chassis ground. Connector & terminal (B91) No. 7 (+) — Chassis ground (-):	Is the voltage 7 V (at normal temperature)?	Go to step 2.	Check for open or short circuit in the harness between intake door actuator and fuse.
2 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND INTAKE DOOR ACTUATOR. 1) Turn the ignition switch to OFF. 2) Disconnect the auto A/C control module connector. 3) Measure the resistance between intake door actuator connector and auto A/C control module connector. Connector & terminal (B283) No. 10 — (B91) No. 3: (B283) No. 20 — (B91) No. 1:	Is the resistance less than 1 Ω ?	Go to step 3.	Repair the harness between auto A/C control module and intake door actuator.
3 CHECK OPERATION OF INTAKE DOOR ACTUATOR. 1) Connect the intake door actuator connector. 2) Ground the auto A/C control module connector with a suitable wire. 3) Turn the ignition switch to ON, and check the operation of intake door actuator. Connector & terminal (B283) No. 10 — Chassis ground:	Does the actuator move to the FRESH side?	Go to step 4.	Replace the intake door actuator.
4 CHECK OPERATION OF INTAKE DOOR ACTUATOR. 1) Turn the ignition switch to OFF. 2) Ground the auto A/C control module connector with a suitable wire. 3) Turn the ignition switch to ON, and check the operation of intake door actuator. Connector & terminal: (B283) No. 20 — Chassis ground:	Does the actuator move to the RECIRC side?	Replace the auto A/C control module.	Replace the intake door actuator.

Diagnostic Procedure for Actuators

 
 
 

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

B: MODE DOOR ACTUATOR

TROUBLE SYMPTOM:

Air flow outlet is not changed.

WIRING DIAGRAM:

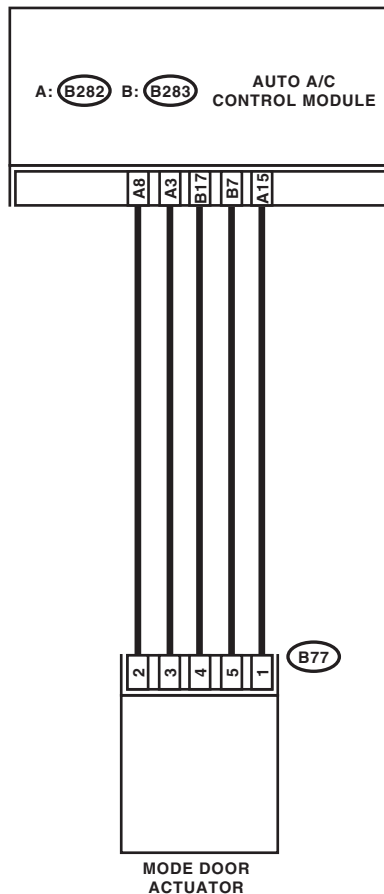

AC-00827

Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POWER SUPPLY FOR MODE DOOR ACTUATOR POSITION SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the mode door actuator connector. 3) Turn the ignition switch and AUTO switch to ON. 4) Measure the voltage between auto A/C control module connector terminals. <i>Connector & terminal</i> <i>(B282) No. 8 (+) — (B282) No. 15 (-):</i>	Is the voltage approx. 5 V?	Go to step 2.	Replace the auto A/C control module.
2 CHECK POWER SUPPLY FOR MODE DOOR ACTUATOR. Measure the voltage between auto A/C control module connector and chassis ground after turning the air flow control switch to FACE position. <i>Connector & terminal</i> <i>(B283) No. 7 (+) — Chassis ground (-):</i>	Is the voltage 7 V (at normal temperature)?	Go to step 3.	Replace the auto A/C control module.
3 CHECK POWER SUPPLY FOR MODE DOOR ACTUATOR. Measure the voltage between auto A/C control module connector and chassis ground after turning the air flow control switch to DEF position. <i>Connector & terminal</i> <i>(B283) No. 17 (+) — Chassis ground (-):</i>	Is the voltage 7 V (at normal temperature)?	Go to step 4.	Replace the auto A/C control module.
4 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND MODE DOOR ACTUATOR. 1) Turn the A/C and ignition switch to OFF. 2) Disconnect the auto A/C control module connector. 3) Measure the resistance between auto A/C control module and mode door actuator connector. <i>Connector & terminal</i> <i>(B77) No. 1 — (B282) No. 15:</i> <i>(B77) No. 2 — (B282) No. 8:</i> <i>(B77) No. 3 — (B282) No. 3:</i> <i>(B77) No. 4 — (B283) No. 17:</i> <i>(B77) No. 5 — (B283) No. 7:</i>	Is the resistance less than 1 Ω ?	Go to step 5.	Repair the harness between auto A/C control module and mode door actuator.
5 CHECK MODE DOOR ACTUATOR POSITION SWITCH SIGNAL. 1) Connect the connector of auto A/C control module and mode door actuator. 2) Turn the ignition switch and AUTO switch to ON. 3) Check the voltage between auto A/C control module connector terminals while changing the mode between DEF and FACE. <i>Connector & terminal</i> <i>(B282) No. 3 (+) — (B282) No. 15 (-):</i>	Does the voltage change between 1 V (DEF) and 4 V (FACE)?	Go to step 6.	Replace the mode door actuator.
6 CHECK POOR CONTACT. Check poor contact of auto A/C control module and connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

Diagnostic Procedure for Actuators

 
 


HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

C: AIR MIX DOOR ACTUATOR

TROUBLE SYMPTOM:

Outlet air temperature does not change.

WIRING DIAGRAM:

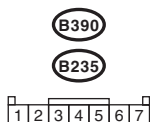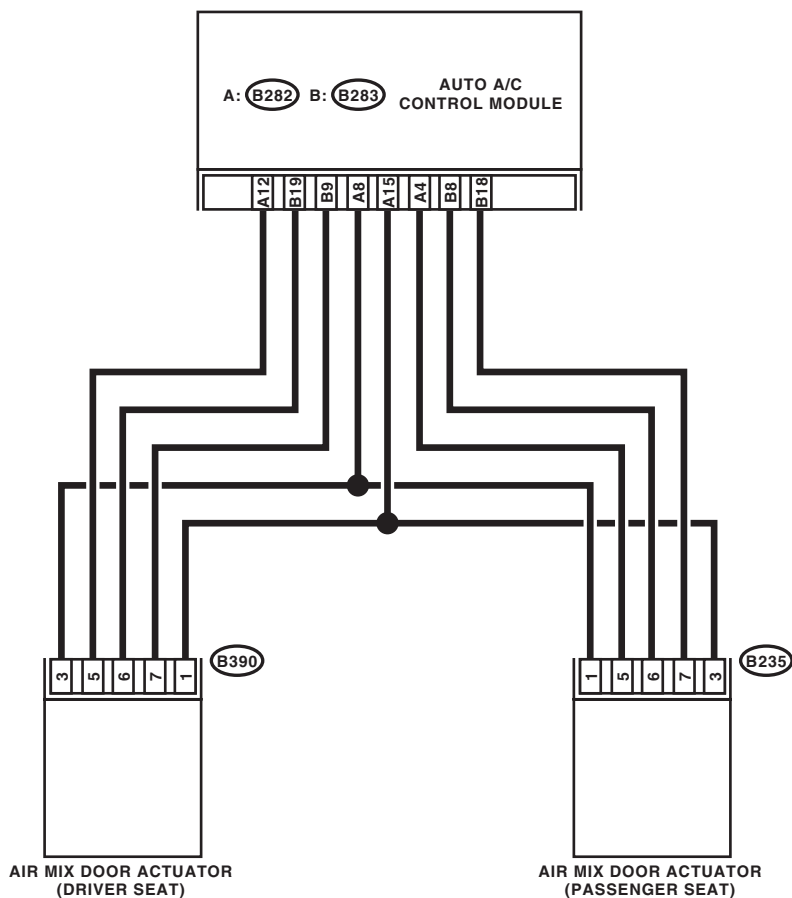

AC-01170

Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POWER SUPPLY FOR AIR MIX DOOR ACTUATOR POSITION SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the air mix door actuator connector. 3) Turn the ignition switch and AUTO switch to ON. 4) Measure the voltage between auto A/C control module connector terminals. Connector & terminal (B282) No. 8 (+) — (B282) No. 15 (-):	Is the voltage approx. 5 V?	Go to step 2.	Replace the auto A/C control module.
2 CHECK POWER SUPPLY FOR AIR MIX DOOR ACTUATOR. Measure the voltage between auto A/C control module connector and chassis ground after turning the temperature control dial to maximum COOL position. Connector & terminal Driver's side (B283) No. 9 (+) — Chassis ground (-): Passenger's side (B283) No. 8 (+) — Chassis ground (-):	Is the voltage 7 V (at normal temperature)?	Go to step 3.	Replace the auto A/C control module.
3 CHECK POWER SUPPLY FOR AIR MIX DOOR ACTUATOR. Measure the voltage between auto A/C control module connector and chassis ground after turning the temperature control dial to maximum HOT position. Connector & terminal Driver's side (B283) No. 19 (+) — Chassis ground (-): Passenger's side (B283) No. 18 (+) — Chassis ground (-):	Is the voltage 7 V (at normal temperature)?	Go to step 4.	Replace the auto A/C control module.
4 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND AIR MIX DOOR ACTUATOR. 1) Turn the A/C and ignition switch to OFF. 2) Disconnect the auto A/C control module connector. 3) Measure the resistance between auto A/C control module and air mix door actuator connector. Connector & terminal Driver's side (B390) No. 1 — (B282) No. 15: (B390) No. 3 — (B282) No. 8: (B390) No. 5 — (B282) No. 12: (B390) No. 6 — (B283) No. 19: (B390) No. 7 — (B283) No. 9: Passenger's side (B235) No. 1 — (B282) No. 8: (B235) No. 3 — (B282) No. 15: (B235) No. 5 — (B282) No. 4: (B235) No. 6 — (B283) No. 8: (B235) No. 7 — (B283) No. 18:	Is the resistance less than 1 Ω ?	Go to step 5.	Repair the harness between auto A/C control module and air mix door actuator.

Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
5 CHECK AIR MIX DOOR ACTUATOR POSITION SWITCH SIGNAL. 1) Connect the connector of auto A/C control module and air mix door actuator. 2) Turn the ignition switch and AUTO switch ON. 3) Check the voltage between auto A/C control module connector terminals while changing the setting temperature between maximum COOL and maximum HOT. Connector & terminal Driver's side (B282) No. 12 (+) — (B282) No. 15 (-): Passenger's side (B282) No. 4 (+) — (B282) No. 15 (-):	Does the voltage change between 1 V (Max. HOT) and 4 V (Max. COOL)?	Go to step 6.	Replace the air mix door actuator.
6 CHECK POOR CONTACT. Check poor contact of auto A/C control module and connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

 
 
 
 
 

8. Diagnostic Procedure for Sensors

A: AMBIENT SENSOR

TROUBLE SYMPTOM:

Fan speed is not switched when the fan speed control dial is in AUTO position.

WIRING DIAGRAM:

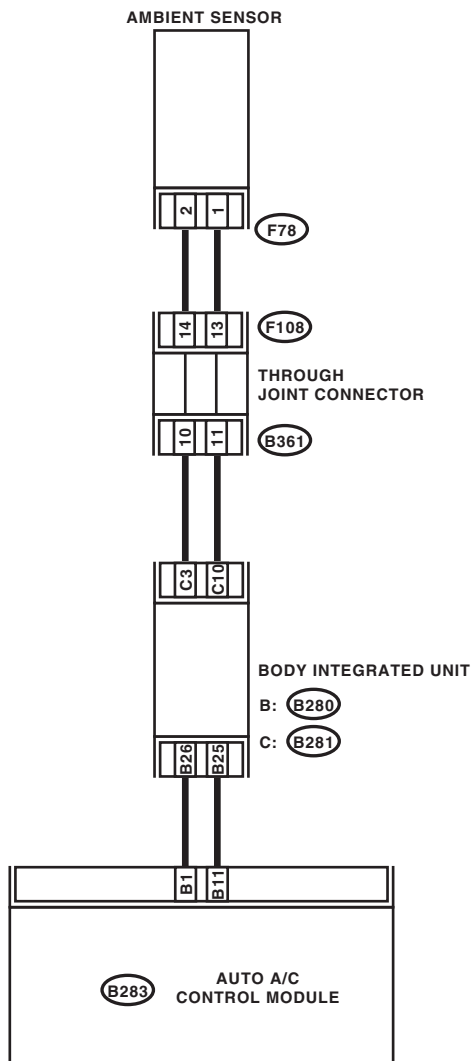

AC-00829

Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK AMBIENT SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ambient sensor. 3) Measure the resistance between connector terminals of ambient sensor. <i>Terminal</i> <i>No. 1 — No. 2:</i>	Is the resistance approximately 2.2 k Ω at 25°C (77°F)?	Go to step 2.	Replace the ambient sensor.
2 CHECK INPUT SIGNAL FOR AMBIENT SENSOR. 1) Turn the ignition ON. 2) Measure the voltage between connector (F78) terminals. <i>Connector & terminal</i> <i>(F78) No. 1 (+) — No. 2 (-):</i>	Is the voltage approx. 5 V?	Go to step 6.	Go to step 3.
3 CHECK OUTPUT SIGNAL OF BODY INTEGRATED UNIT. 1) Turn the ignition switch to OFF. 2) Draw out the body integrated unit. 3) Disconnect the connector from ambient sensor. 4) Turn the ignition switch to ON. 5) Measure the voltage between connector terminals of body integrated unit. <i>Connector & terminal</i> <i>(B281) No. 3 (+) — No. 10 (-):</i>	Is the voltage approx. 5 V?	Go to step 4.	Go to step 6.
4 CHECK HARNESS CONNECTOR BETWEEN BODY INTEGRATED UNIT AND AMBIENT SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from body integrated unit. 3) Measure the resistance of harness between body integrated unit and ambient sensor. <i>Connector & terminal</i> <i>(F78) No. 1 — (B281) No. 10:</i>	Is the resistance less than 1 Ω ?	Go to step 5.	Repair the open circuit of harness between body integrated unit and ambient sensor.
5 CHECK HARNESS CONNECTOR BETWEEN BODY INTEGRATED UNIT AND AMBIENT SENSOR. Measure the resistance of harness between body integrated unit and ambient sensor. <i>Connector & terminal</i> <i>(F78) No. 2 — (B281) No. 3:</i>	Is the resistance less than 1 Ω ?	Go to step 6.	Repair the open circuit of harness between body integrated unit and ambient sensor.
6 CHECK COMMUNICATION ERROR DISPLAY. 1) Connect the connectors of body integrated unit and ambient sensor as originally connected. 2) Check if “Er xx” is displayed on the Odo/Trip meter in combination meter after turning the ignition switch to ON.	Is “Er xx” displayed?	Check the communication circuit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Go to step 7.
7 CHECK POOR CONTACT. Check poor contact of auto A/C control module connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

Diagnostic Procedure for Sensors

 
 

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

B: IN-VEHICLE SENSOR

TROUBLE SYMPTOM:

Blower fan speed, outlet port and inlet port do not change after turning the AUTO switch ON

WIRING DIAGRAM:


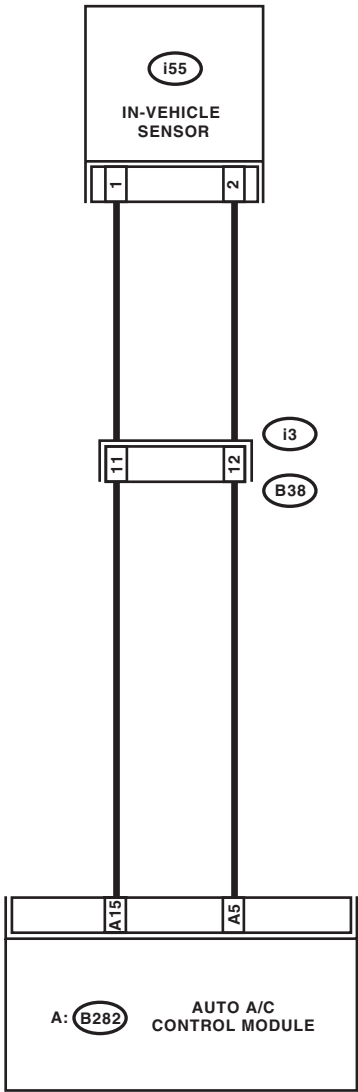


Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK IN-VEHICLE SENSOR. 1) Turn the ignition switch to OFF. 2) Remove the driver side lower cover. 3) Disconnect the connector from in-vehicle sensor. 4) Measure the resistance between connector terminals of in-vehicle sensor. Terminal No. 1 — No. 2:	Is the resistance approximately 2.7 k Ω at 20°C (68°F)?	Go to step 2.	Replace the in-vehicle sensor.
2 CHECK INPUT SIGNAL FOR IN-VEHICLE SENSOR. 1) Turn the ignition switch to ON. 2) Measure the voltage between in-vehicle sensor harness connector terminal and chassis ground. Connector & terminal (i55) No. 2 (+) — No. 1 (-):	Is the voltage approx. 5 V?	Go to step 6.	Go to step 3.
3 CHECK AUTO A/C CONTROL MODULE OUTPUT SIGNAL. 1) Turn the ignition switch to OFF. 2) Remove the auto A/C control module. 3) Turn the ignition switch to ON. 4) Measure the voltage between connector terminals of auto A/C control module. Connector & terminal (B282) No. 5 (+) — (B282) No. 15 (-):	Is the voltage approx. 5 V?	Go to step 4.	Go to step 6.
4 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND IN-VEHICLE SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from the auto A/C control module. 3) Measure the resistance of harness between auto A/C control module and in-vehicle sensor. Connector & terminal (i55) No. 2 (B282) No. 5:	Is the resistance less than 1 Ω ?	Go to step 5.	Repair the harness between auto A/C control module and in-vehicle sensor.
5 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND IN-VEHICLE SENSOR. Measure the resistance of harness between auto A/C control module and in-vehicle sensor. Connector & terminal (i55) No. 1 (B282) No. 15:	Is the resistance less than 1 Ω ?	Go to step 6.	Repair the harness between auto A/C control module and in-vehicle sensor.
6 CHECK POOR CONTACT. Check poor contact of auto A/C control module connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

 C: EVAPORATOR SENSOR
WIRING DIAGRAM:

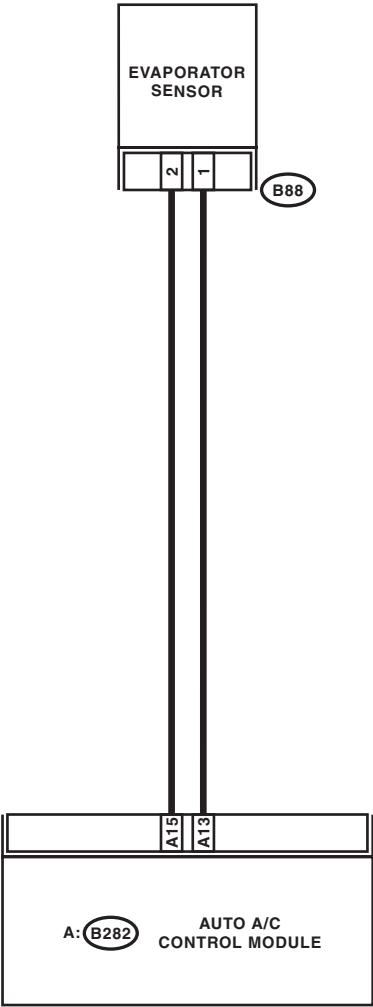

Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK EVAPORATOR SENSOR. 1) Turn the ignition switch to OFF. 2) Remove the glove box. 3) Disconnect the connector from evaporator sensor. 4) Measure the resistance between connector terminals of the evaporator sensor. <i>Terminal</i> No. 1 — No. 2:	Is the resistance approximately 3.3 k Ω at 20°C (68°F)?	Go to step 2.	Replace the evaporator sensor.
2 CHECK INPUT SIGNAL FOR EVAPORATOR SENSOR. 1) Turn the ignition switch to ON. 2) Measure the voltage between connector (B88) terminal and chassis ground. <i>Connector & terminal</i> (B88) No. 1 (+) — No. 2 (-):	Is the voltage approx. 5 V?	Go to step 6.	Go to step 3.
3 CHECK AUTO A/C CONTROL MODULE OUTPUT SIGNAL. 1) Turn the ignition switch to OFF. 2) Remove the auto A/C control module. 3) Turn the ignition switch to ON. 4) Measure the voltage between connector terminals of auto A/C control module. <i>Connector & terminal</i> (B282) No. 13 (+) — No. 15 (-):	Is the voltage approx. 5 V?	Go to step 4.	Go to step 6.
4 CHECK HARNESS CONNECTOR BETWEEN AUTO A/C CONTROL MODULE AND EVAPORATOR SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from the auto A/C control module. 3) Measure the resistance of harness between auto A/C control module and evaporator sensor. <i>Connector & terminal</i> (B88) No. 2 — (B282) No. 15:	Is the resistance less than 1 Ω ?	Go to step 5.	Repair the open circuit of harness between auto A/C control module and evaporator sensor.
5 CHECK HARNESS CONNECTOR BETWEEN AUTO A/C CONTROL MODULE AND EVAPORATOR SENSOR. Measure the resistance of harness between auto A/C control module and evaporator sensor. <i>Connector & terminal</i> (B88) No. 1 — (B282) No. 13:	Is the resistance less than 1 Ω ?	Go to step 6.	Repair the open circuit of harness between auto A/C control module and evaporator sensor.
6 CHECK POOR CONTACT. Check poor contact of auto A/C control module connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.

Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

D: SUNLOAD SENSOR

 
 

TROUBLE SYMPTOM:

- Sensor identifies that sunlight is at maximum. Then, A/C system is controlled to COOL side.
- Sensor identifies that sunlight is at minimum. Then, A/C system is controlled to HOT side.

NOTE:

When the sunload sensor check is performed indoors or in the shade, it could be diagnosed as having an open circuit. Always check the sunload sensor with the sun shining on it.

WIRING DIAGRAM:

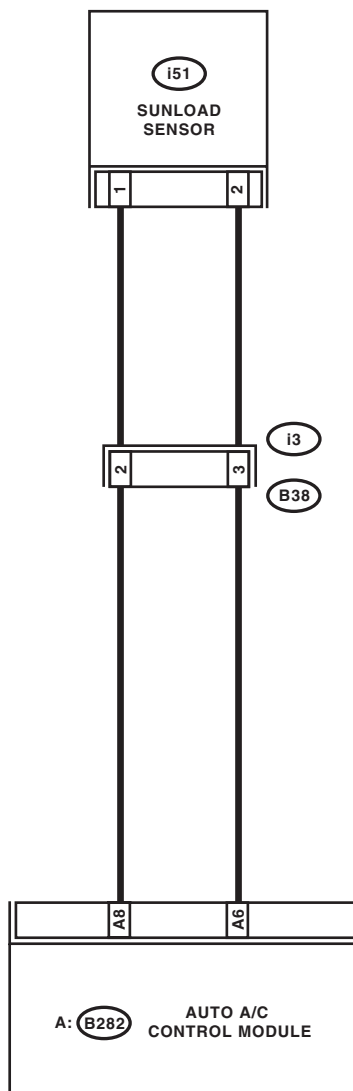

Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POWER SUPPLY VOLTAGE FOR SUNLOAD SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from sunload sensor. 3) Turn the ignition switch to ON. 4) Measure the power supply voltage for sunload sensor. Connector & terminal (i51) No. 1 (+) — No. 2 (-):	Is the voltage approx. 5 V?	Go to step 4.	Go to step 2.
2 CHECK HARNESS CONNECTOR BETWEEN AUTO A/C CONTROL MODULE AND SUNLOAD SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from the auto A/C control module. 3) Measure the resistance of the harness between the auto A/C control module and sunload sensor. Connector & terminal (i51) No. 2 — (B282) No. 6:	Is the resistance less than 1 Ω ?	Go to step 3.	Repair the harness between auto A/C control module and sunload sensor.
3 CHECK HARNESS CONNECTOR BETWEEN AUTO A/C CONTROL MODULE AND SUNLOAD SENSOR. Measure the resistance of the harness between the auto A/C control module and sunload sensor. Connector & terminal (i51) No. 1 — (B282) No. 8:	Is the resistance less than 1 Ω ?	Go to step 4.	Repair the harness between auto A/C control module and sunload sensor.
4 CHECK INPUT VOLTAGE FOR AUTO A/C CONTROL MODULE. 1) Connect the connectors of sunload sensor and auto A/C control module. 2) Turn the ignition switch to ON. 3) Measure the voltage between connector terminals of auto A/C control module. Connector & terminal (B282) No. 8 (+) — (B282) No. 6 (-):	Is the voltage approx. 2.5 V?	Go to step 5.	Replace the sunload sensor.
5 CHECK POOR CONTACT. Check poor contact of auto A/C control module connector.	Is there poor contact in the connector?	Repair the connector.	Replace the auto A/C control module.


Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

E: A/C LOCK SENSOR

H6 model

WIRING DIAGRAM:

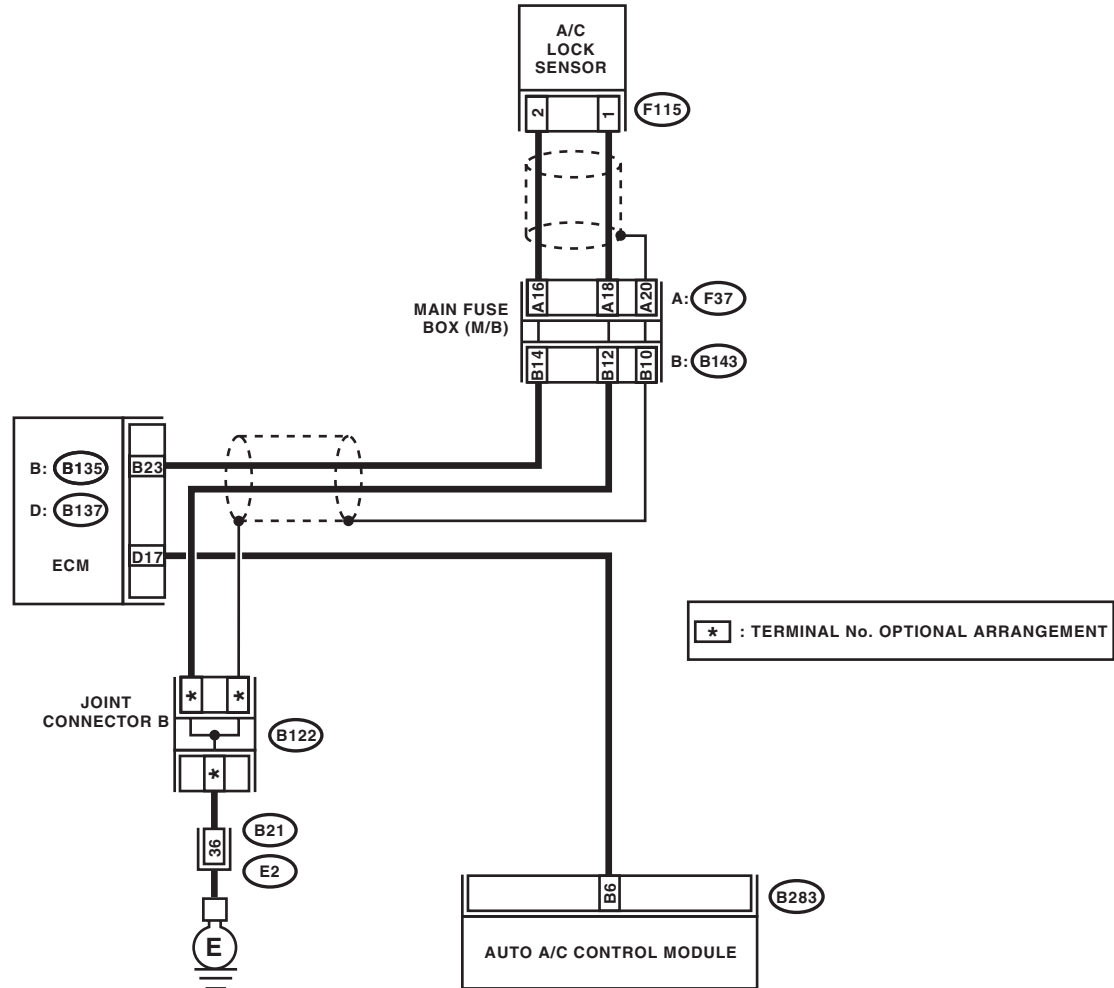

F115

1 2

B: B283

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

B: B143

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18

A: F37

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18

D: B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

B: B135

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

AC-01255

Diagnostic Procedure for Sensors

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK A/C LOCK SENSOR SIGNAL. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to the data link connector. 3) Start the engine and turn the A/C switch ON. 4) Read the data of A/C lock signal using Subaru Select Monitor. NOTE: • Subaru Select Monitor For detailed operation procedure, refer to "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO) (diag)-28, READ CURRENT DATA FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>	Is the A/C lock signal switch ON?	Go to step 4.	Go to step 2.
2 A/C LOCK SENSOR SIGNAL INSPECTION. 1) Start the engine and turn the A/C switch ON. 2) Measure the voltage between auto A/C control module harness connector and chassis ground. Connector & terminal (B283) No. 6 (+) — Chassis ground (-):	Is the voltage 7 — 14 V?	Replace the auto A/C control module.	Go to step 3.
3 CHECK ECM. Measure the voltage between ECM and chassis ground. Connector & terminal (B136) No. 24 (+) — Chassis ground (-):	Is the voltage 7 — 14 V?	Repair the harness between the ECM and the auto A/C control module connector.	Replace the ECM.
4 CHECK A/C LOCK SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance between ECM connector and chassis ground. Connector & terminal (B135) No. 14 — Chassis ground:	Is the resistance between 240 and 290 Ω ?	Replace the ECM.	Go to step 5.
5 CHECK A/C LOCK SENSOR. 1) Turn the ignition switch to OFF. 2) Disconnect the main fuse box harness connector. 3) Measure the resistance between main fuse box terminal. Connector & terminal (F37) No. 16 — No. 18:	Is the resistance between 240 and 290 Ω ?	Go to step 7.	Go to step 6.
6 A/C LOCK SENSOR INSPECTION. 1) Turn the ignition switch to OFF. 2) Disconnect the A/C lock sensor connector. 3) Measure the resistance between A/C lock sensor terminals. Connector & terminal (F115) No. 1 — No. 2:	Is the resistance between 240 and 290 Ω ?	Repair or Replace harness between A/C lock sensor and main fuse box.	Replace the A/C compressor assembly. (A/C lock switch malfunction)
7 CHECK MAIN FUSE BOX. 1) Turn the ignition switch to OFF. 2) Disconnect the connector and then measure the resistance between main fuse box terminal. Connector & terminal (F37) No. 16 — (F143) No. 12: (F37) No. 18 — (F143) No. 14:	Is the resistance less than 10 Ω ?	Repair or Replace the harness between A/C lock sensor and main fuse box.	Replace the main fuse box.

9. Diagnostics with Phenomenon

A: INSPECTION

Symptom	Problem parts
A/C system fails to operate.	• Fuse (M/B No. 8, F/B No. 22, 31) • Connector (Poor contact) • Ground • Auto A/C control module • Blower fan motor • Blower fan relay • A/C relay • Compressor (Magnet clutch) • Evaporator sensor
Fuse is blown out.	• Fuse (M/B No. 8, F/B No. 22, 31) • Connector (Poor contact)
Illumination cannot dim.	• Fuse (M/B No. 8, F/B No. 22, 31) • Connector (Poor contact) • Auto A/C control module • Body integrated unit
Blower fan does not rotate or fan speed cannot be controlled.	• Fuse (F/B No. 22, 27, 28) • Connector (Poor contact) • Ground • Auto A/C control module • Blower fan motor • Blower fan relay
Unable to switch suction vents.	• Connector (Poor contact) • Auto A/C control module • Intake door actuator
Unable to switch vents.	• Connector (Poor contact) • Auto A/C control module • Mode door actuator
The compartment temperature does not rise. (Warm air does not come out.)	• Connector (Poor contact) • Auto A/C control module • Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
The compartment temperature does not lower. (Cold air does not come out.)	• Connector (Poor contact) • Auto A/C control module • Air mix door actuator • A/C relay • Compressor (Magnet clutch) • Radiator fan motor • Radiator fan relay • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
Compartment temperature is higher or lower than setting temperature.	• Auto A/C control module • Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
Compartment temperature does not quickly respond to setting temperature.	• Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sunload sensor • In-vehicle sensor aspirator hose
Radiator fan does not rotate during A/C operation.	• Radiator fan motor • Radiator fan relay

Diagnostics with Phenomenon

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

AIRBAG SYSTEM

AB

	Page
1. General Description	2
2. Airbag Connector	11
3. Inspection Locations After a Collision	14
4. Driver's Airbag Module	17
5. Passenger's Airbag Module	18
6. Side Airbag Module	19
7. Curtain Airbag Module	21
8. Airbag Control Module	23
9. Side Airbag Sensor	24
10. Curtain Airbag Sensor	25
11. Roll Connector	26
12. Front Sub Sensor	27

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

1. General Description

A: SPECIFICATION

1. HEATER SYSTEM

Item		Specification	On condition
Heating capacity		5.2 kW (4,471 kcal/h, 17,743 BTU/h) or more	- Mode selector switch: HEAT - Temperature control switch: FULL HOT - Temperature difference between hot water and inlet air: 65°C (149°F) - Hot water flow rate: 360 ℓ (95.1 US gal, 79.2 Imp gal)/h
Air flow rate		320 m ³ (11,301 cu ft)/h	Heat mode (FRESH), FULL HOT at 12.5 V
Max air flow rate		460 m ³ (16,245 cu ft)/h	- Temperature control switch: FULL COLD - Blower fan speed: Auto A/C: 6th position Manual A/C: 4th position - Mode selector lever: RECIRC
Heater core size (height × length × width)		264 × 110 × 27 mm (10.4 × 4.33 × 1.06 in)	—
Blower motor	Type	Magnet motor 220 W or less	12 V
	Fan type and size (diameter × width)	Sirocco fan type 150 × 75 mm (5.91 × 2.95 in)	—


2. A/C SYSTEM

- Auto A/C model

Item		Specification
Type of air conditioner		Reheat air-mix type
Cooling capacity		5.3 kW (4,557 kcal/h, 18,084 BTU/h)
Refrigerant		HFC-134a (CH ₂ FCF ₃) [0.4±0.03 kg (0.88±0.07 lb)]
Compressor	Type	Scroll, constant volume (SCSA 08C)
	Discharge	74.5 cc (4.55 cu in)/rev
	Max. permissible speed	9,000 rpm
Magnet clutch	Type	Dry, single-disc type
	Power consumption	35 W
	Type of belt	2.5 L SOHC Non-turbo and 2.5 L DOHC Turbo model: V-belt 4 PK 3.0 L DOHC Non-turbo model: V-belt 6 PK
	Pulley dia. (effective dia.)	93 mm (3.7 in)
	Pulley ratio	1.43
Condenser	Type	Corrugated fin (Sub cool type)
	Core face area	0.193 m ² (2.077 sq ft)
	Core thickness	16 mm (0.63 in)
	Radiation area	5.72 m ² (61.57 sq ft)
Receiver drier	Effective inner capacity	190 cm ³ (11.6 cu in)
Expansion valve	Type	Externally equalizing
Evaporator	Type	Single tank
	Dimensions (W × H × T)	298.6 × 151 × 38 mm (11.76 × 5.94 × 1.50 in)
Blower fan	Fan type	Sirocco fan
	Outer diameter × width	150 × 75 mm (5.91 × 2.95 in)
	Power consumption	220 W

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

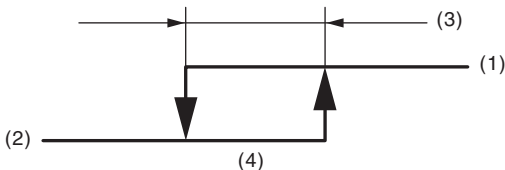
Item		Specification
Condenser fan (Sub fan)	Motor type	Magnet
	Power consumption	2.5 L SOHC Non-turbo model: 90 W 2.5 L DOHC Turbo model: 120 W 3.0 L DOHC Non-turbo model: 160 W
	Fan outer diameter	2.5 L SOHC Non-turbo model: 300 mm (11.8 in) 2.5 L DOHC Turbo and 3.0 L DOHC Non-turbo model: 320 mm (12.6 in)
Radiator fan (Main fan)	Motor type	Magnet
	Power consumption	2.5 L SOHC Non-turbo model: 90 W 2.5 L DOHC Turbo model: 120 W 3.0 L DOHC Non-turbo model: 160 W
	Fan outer diameter	2.5 L SOHC Non-turbo model: 300 mm (11.8 in) 2.5 L DOHC Turbo and 3.0 L DOHC Non-turbo model: 320 mm (12.6 in)
Idling speed (A/C ON)		MPFI model 800±100 rpm
Triple switch (Pressure switch)	Low-pressure switch operating pressure	ON → OFF 196±20 kPa (2.00±0.20 kg/cm ² , 28.4±2.9 psi)
		OFF → ON 225 ⁺²⁵ ₋₂₉ kPa (2.29 ^{+0.25} _{-0.30} kg/cm ² , 32.6 ^{+3.6} _{-4.2} psi)
	High-pressure switch operating pressure	ON → OFF 3,140 ⁺⁵⁰ ₋₂₀₀ kPa (32.02 ^{+0.51} _{-2.04} kg/cm ² , 455.4 ^{+7.25} _{-29.0} psi)
		OFF → ON 2,550±200 kPa (26.00±2.04 kg/cm ² , 369.8±29.0 psi)
	Middle-pressure switch operating pressure	ON → OFF 1,370±120 kPa (13.97±1.22 kg/cm ² , 198.65±17.35 psi)
		OFF → ON 1,770±100 kPa (18.05±1.02 kg/cm ² , 256.81±14.50 psi)
Thermo-control amplifier working temperature (Evaporator outlet air)		 AC-00601 (1) ON (2) OFF (3) 1±0.5°C (33.8±0.9°F) (4) 4 ^{+1.5}₀°C (39.2 ^{+2.7}₀°F)

• Manual A/C model

Item		Specification
Type of air conditioner		Reheat air-mix type
Cooling capacity		5.3 kW (4,557 kcal/h, 18,084 BTU/h)
Refrigerant		HFC-134a (CH ₂ FCF ₃) [0.4±0.03 kg (0.88±0.07 lb)]
Compressor	Type	Scroll, constant volume (SCSA 08C)
	Discharge	74.5 cc (4.55 cu in)/rev
	Max. permissible speed	9,000 rpm

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

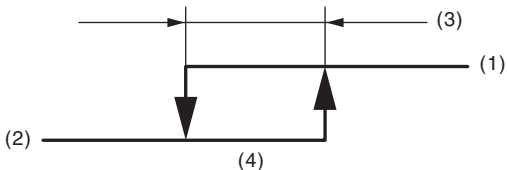Item			Specification
Magnet clutch		Type	Dry, single-disc type
		Power consumption	35 W
		Type of belt	V-belt 4 PK
		Pulley dia. (effective dia.)	93 mm (3.7 in)
		Pulley ratio	1.43
Condenser		Type	Corrugated fin (Sub cool type)
		Core face area	0.193 m ² (2.077 sq ft)
		Core thickness	16 mm (0.63 in)
		Radiation area	5.7 m ² (61.57 sq ft)
Receiver drier		Effective inner capacity	190 cm ³ (11.6 cu in)
Expansion valve		Type	Externally equalizing
Evaporator		Type	Single tank
		Dimensions (W × H × T)	298.6 × 151 × 38 mm (11.7 × 5.94 × 1.50 in)
Blower fan		Fan type	Sirocco fan
		Outer diameter × width	150 × 75 mm (5.91 × 2.95 in)
		Power consumption	220 W
Condenser fan (Sub fan)		Motor type	Magnet
		Power consumption	90 W
		Fan outer diameter	300 mm (11.8 in)
Radiator fan (Main fan)		Motor type	Magnet
		Power consumption	90 W
		Fan outer diameter	300 mm (11.8 in)
Idling speed (A/C ON)		MPFI model	800±100 rpm
Triple switch (Pressure switch)	Low-pressure switch operating pressure	ON → OFF	196±20 kPa (2.00±0.20 kg/cm ² , 28.4±2.9 psi)
		OFF → ON	225 ⁺²⁵ ₋₂₉ kPa (2.29 ^{+0.25} _{-0.30} kg/cm ² , 32.6 ^{+3.6} _{-4.2} psi)
	High-pressure switch operating pressure	ON → OFF	3,140 ⁺⁵⁰ ₋₂₀₀ kPa (32.02 ^{+0.51} _{-2.04} kg/cm ² , 455.4 ^{+7.25} _{-29.0} psi)
		OFF → ON	2,550±200 kPa (26.00±2.04 kg/cm ² , 369.8±29.0 psi)
	Middle-pressure switch operating pressure	ON → OFF	1,370±120 kPa (13.97±1.22 kg/cm ² , 198.65±17.35 psi)
		OFF → ON	1,770±100 kPa (18.05±1.02 kg/cm ² , 256.81±14.50 psi)
Thermo control amplifier working temperature (Evaporator outlet air)		 AC-00601 (1) ON (2) OFF (3) 1±0.5°C (33.8±0.9°F) (4) 4 ^{+1.5}₀ °C (39.2 ^{+2.7}₀ °F)	

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

1. HEATER COOLING UNIT

- [illegible]

AC-5

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(1) Heater unit case LH	(10) Grommet	(19) Heater pipe clamp
(2) Separator	(11) Pipe cover	(20) Foot duct LH
(3) Mode door RR	(12) Drain hose	(21) Heater core cover
(4) Mode door FR	(13) Air mix door actuator RH	(22) Air mix door actuator LH
(5) Air mix door LH	(14) Foot duct RH	(23) Aspirator
(6) Air mix door RH	(15) Expansion valve	
(7) Heater unit case RH	(16) Evaporator sensor	
(8) Mode door actuator	(17) Evaporator	
(9) Evaporator cover	(18) Heater core	

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

- | | | |
|-------------------------|------------------------|---------------------------|
| (1) Heater unit case LH | (9) Pipe cover | (17) Foot duct LH |
| (2) Mode door RR | (10) Drain hose | (18) Heater core cover |
| (3) Mode door FR | (11) Foot duct RH | (19) Clip |
| (4) Air mix door | (12) Expansion valve | (20) Air mix door linkage |
| (5) Heater unit case RH | (13) Thermo amplifier | |
| (6) Mode door actuator | (14) Evaporator | |
| (7) Evaporator cover | (15) Heater core | |
| (8) Grommet | (16) Heater pipe clamp | |

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

2. BLOWER MOTOR UNIT

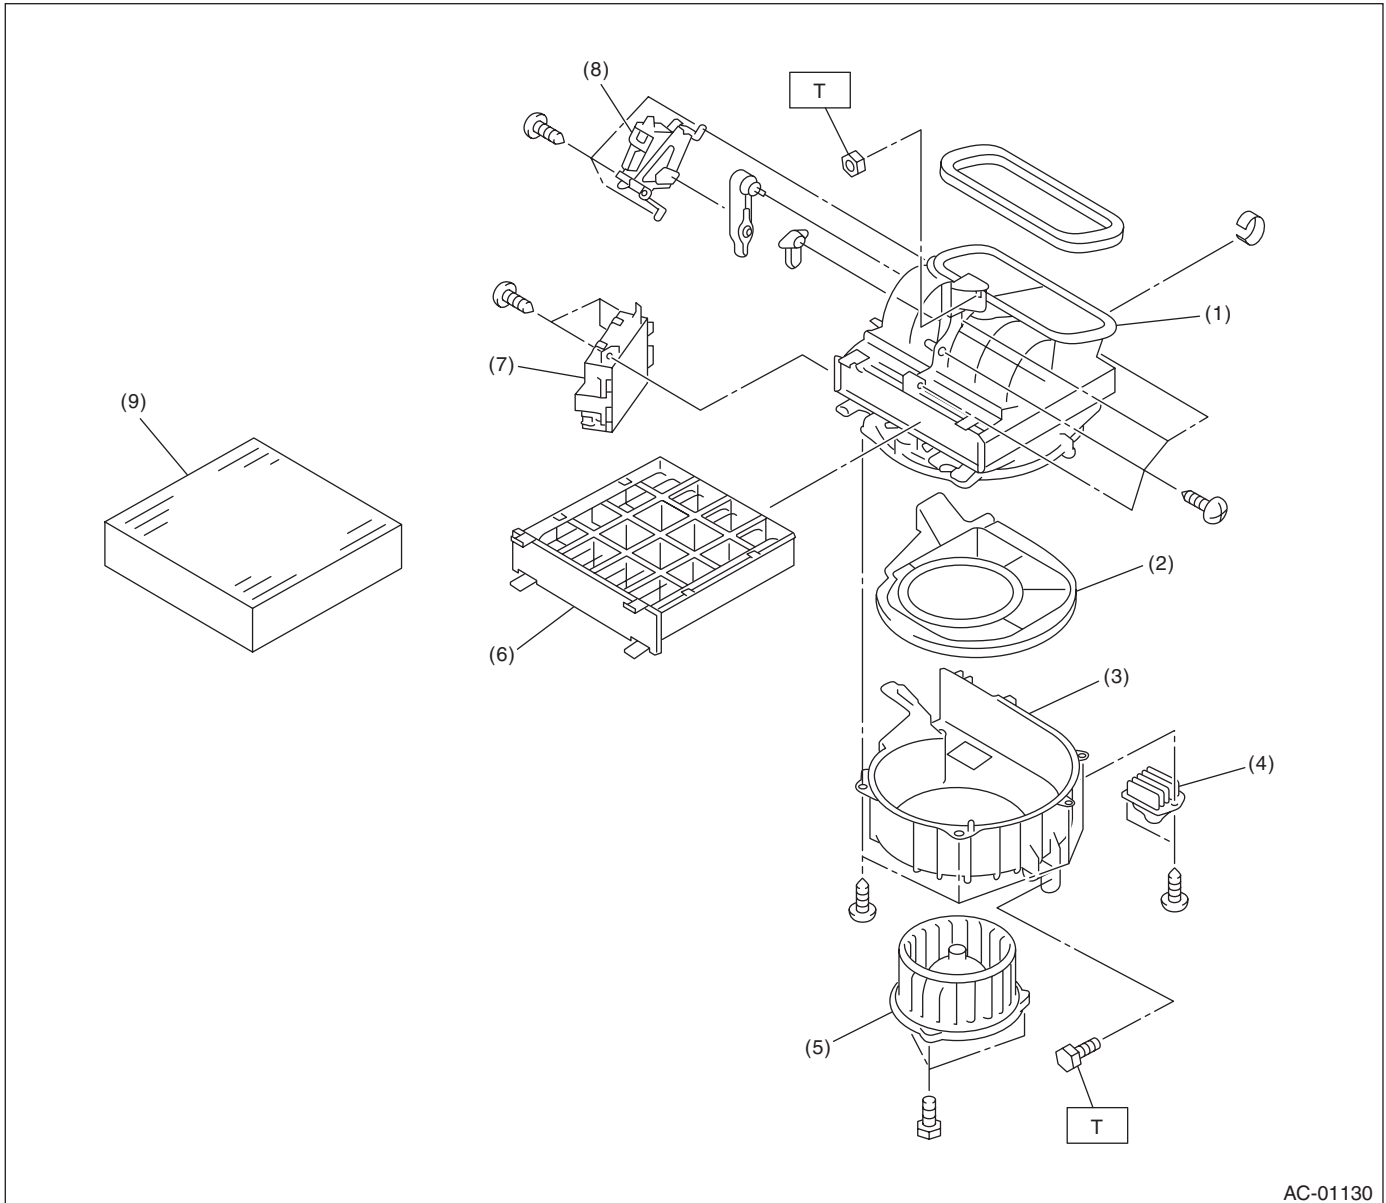

AC-01130

- | | | |
|--|-----------------------------------|---------------------|
| (1) Upper case | (5) Blower motor | (9) Filter (Option) |
| (2) Blower plate | (6) Filter cover | |
| (3) Lower case | (7) Control unit (Auto A/C model) | |
| (4) Power Transistor (Auto A/C Model)
Blower Resistor
(Manual A/C Model) | (8) Intake door actuator | |

Tightening torque: N·m (kgf-m, ft-lb)


T: 7.5 (0.76, 5.5)

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

3. CONTROL PANEL

- Auto A/C model

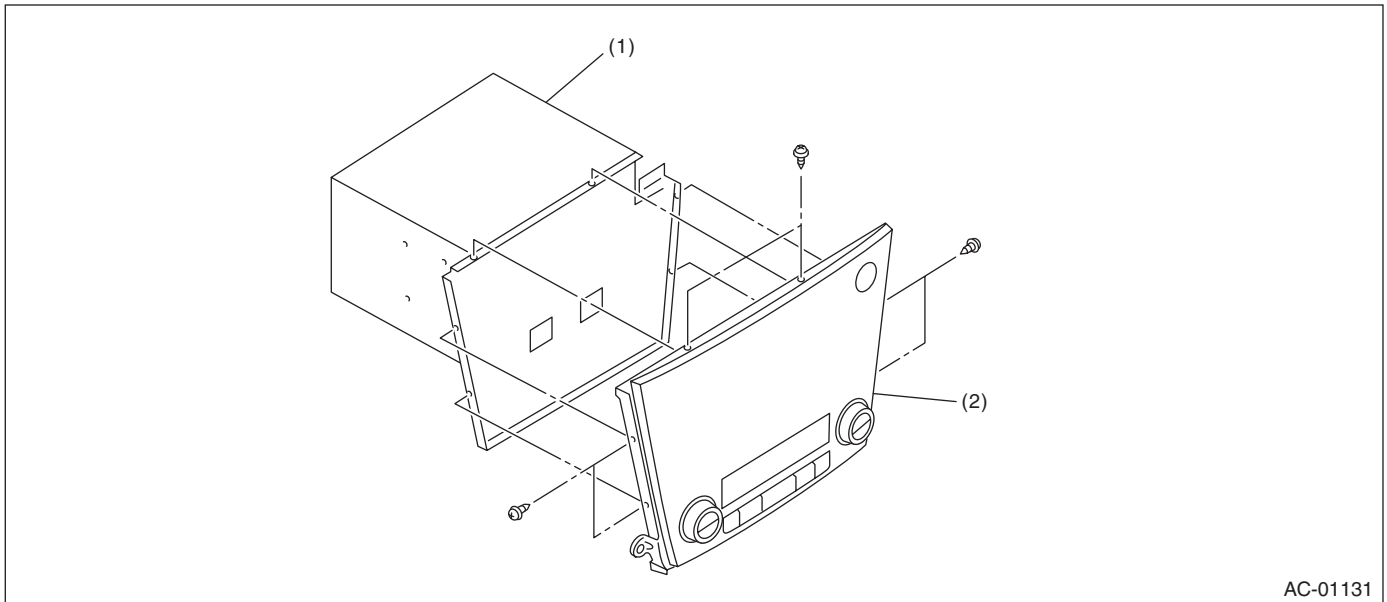


AC-01131

(1) Audio ASSY

(2) Control panel

- Manual A/C model

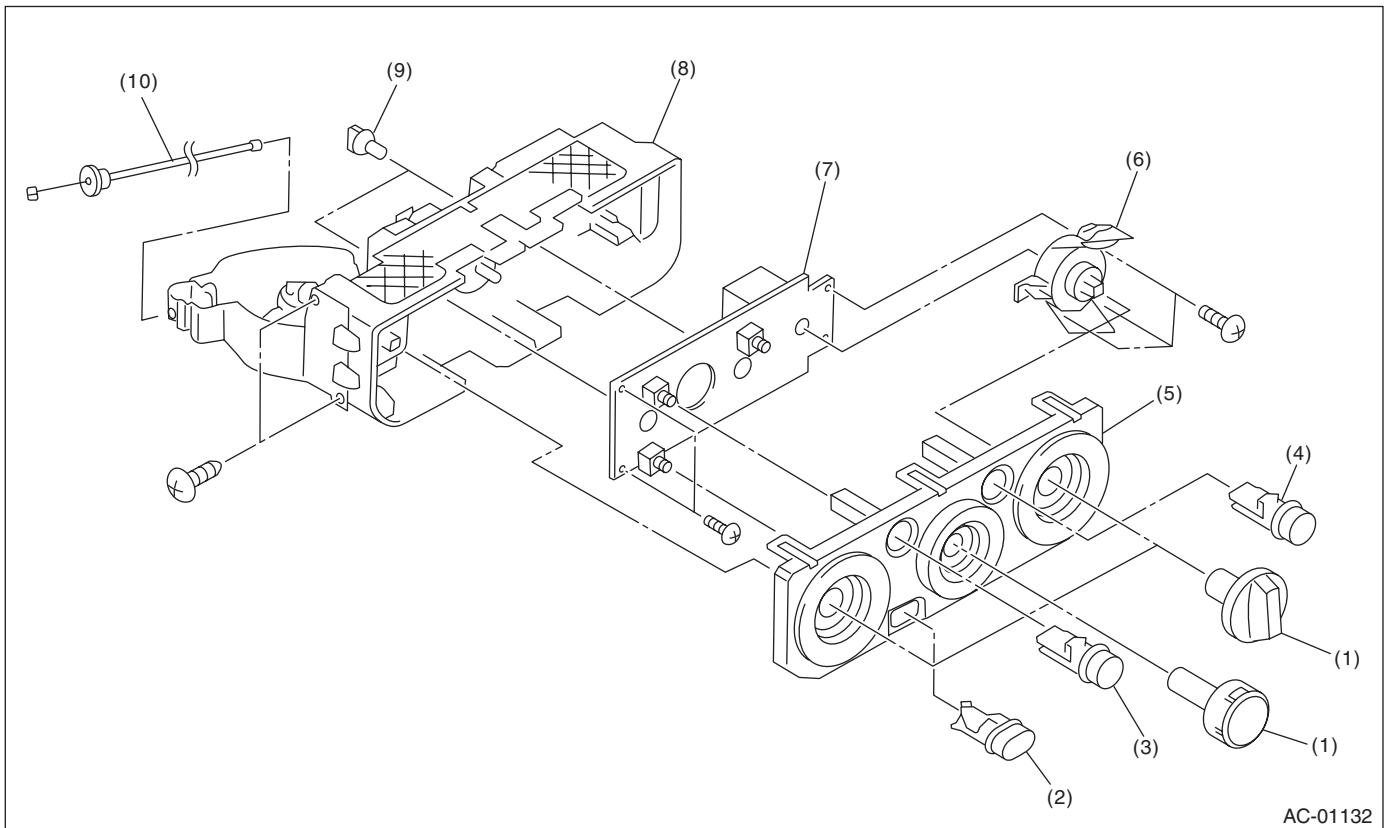

AC-01132

(1) Dial

(2) A/C switch

(3) FRESH/RECIRC switch

(4) Rear window defogger switch

(5) Heater control panel

(6) Air flow control switch

(7) Switch board

(8) Heater control base


(9) Light

(10) Temperature control cable

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

4. AIR CONDITIONING UNIT

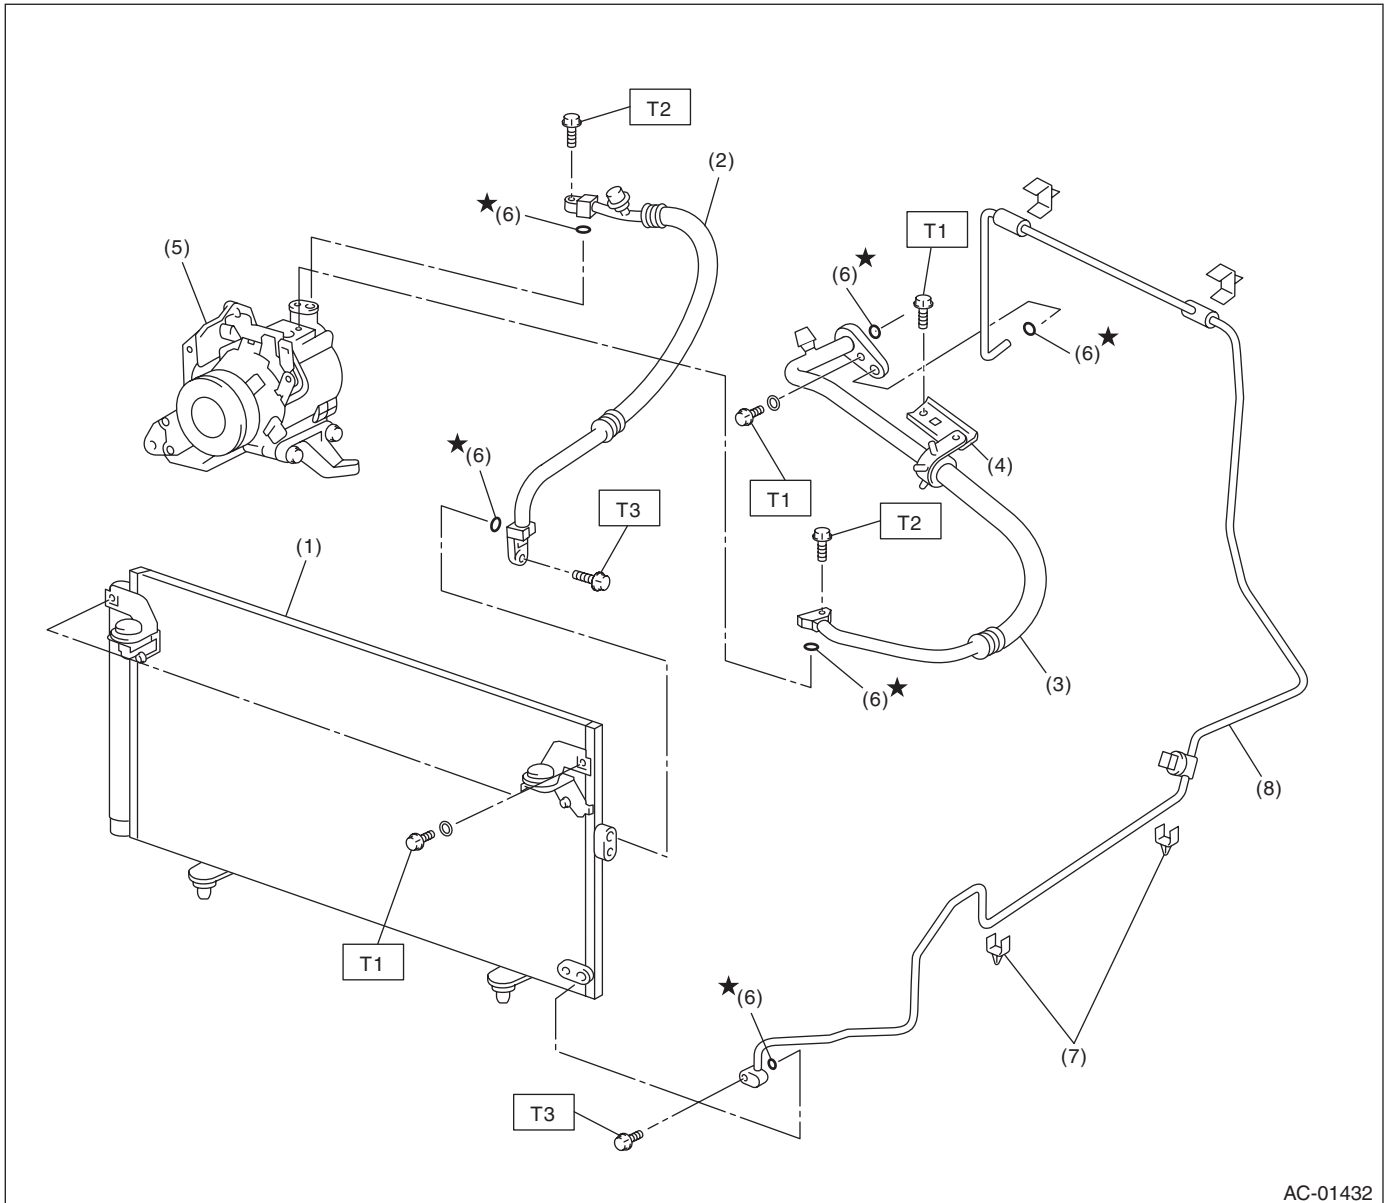

AC-01432

- | | |
|--------------------------|----------------|
| (1) Condenser | (5) Compressor |
| (2) Hose (High-pressure) | (6) O-ring |
| (3) Hose (Low-pressure) | (7) Clamp |
| (4) Bracket | (8) Tube |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)

T2: 10 (1.0, 7.4)


T3: 5 (0.5, 3.7)

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

5. COMPRESSOR

- H4 model

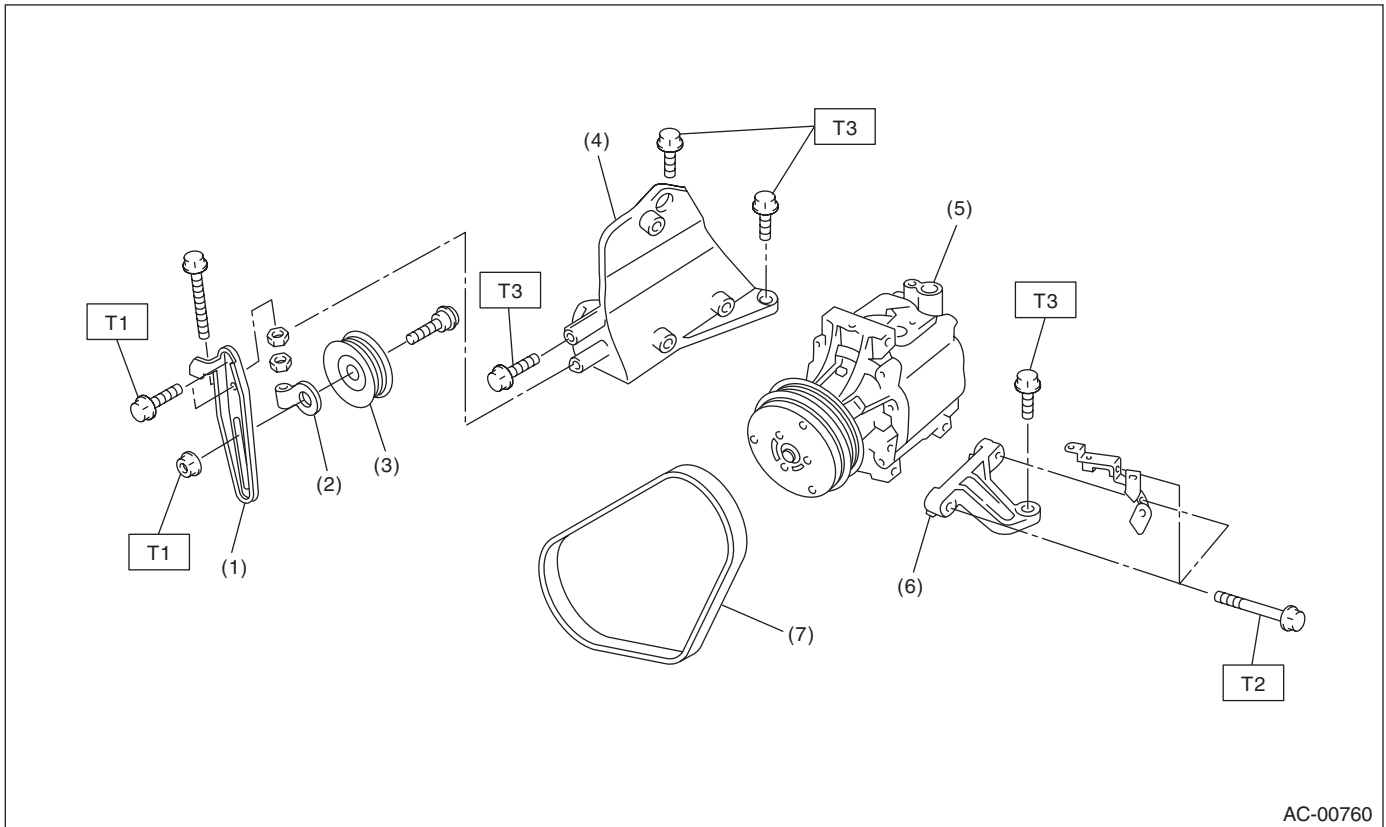

AC-00760

- (1) Idler pulley bracket
- (2) Idler pulley adjuster
- (3) Idler pulley
- (4) Compressor upper bracket

- (5) Compressor
- (6) Compressor lower bracket
- (7) V-belt

Tightening torque: N·m (kgf·m, ft·lb)

T1: 23.0 (2.35, 17.0)


T2: 28.9 (2.95, 21.3)

T3: 36 (3.7, 26.6)

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

- H6 model

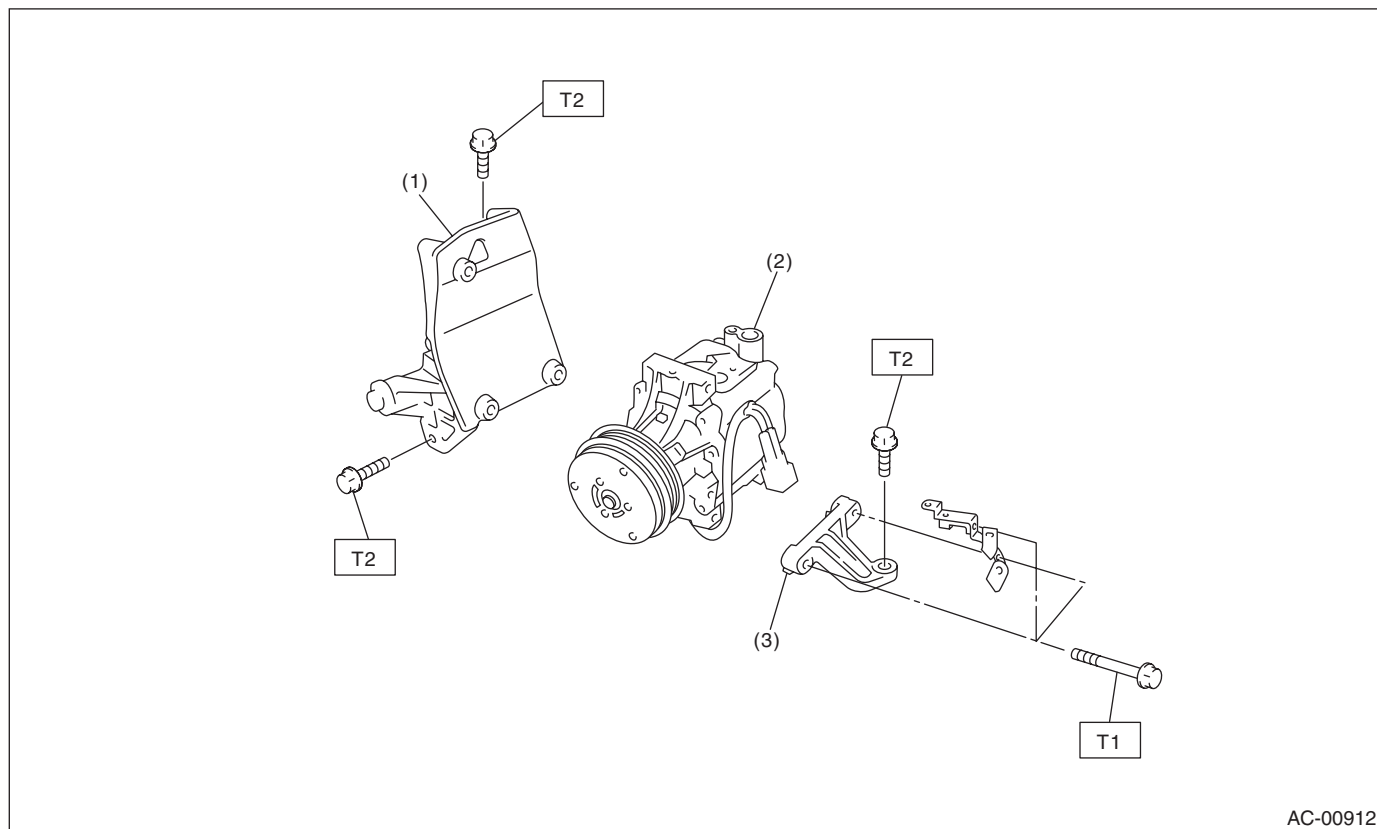

(1) Compressor upper bracket

(3) Compressor lower bracket

(2) Compressor

Tightening torque: N·m (kgf-m, ft-lb)


T1: 28.9 (2.95, 21.3)

T2: 36 (3.7, 26.6)

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

6. HEATER DUCT

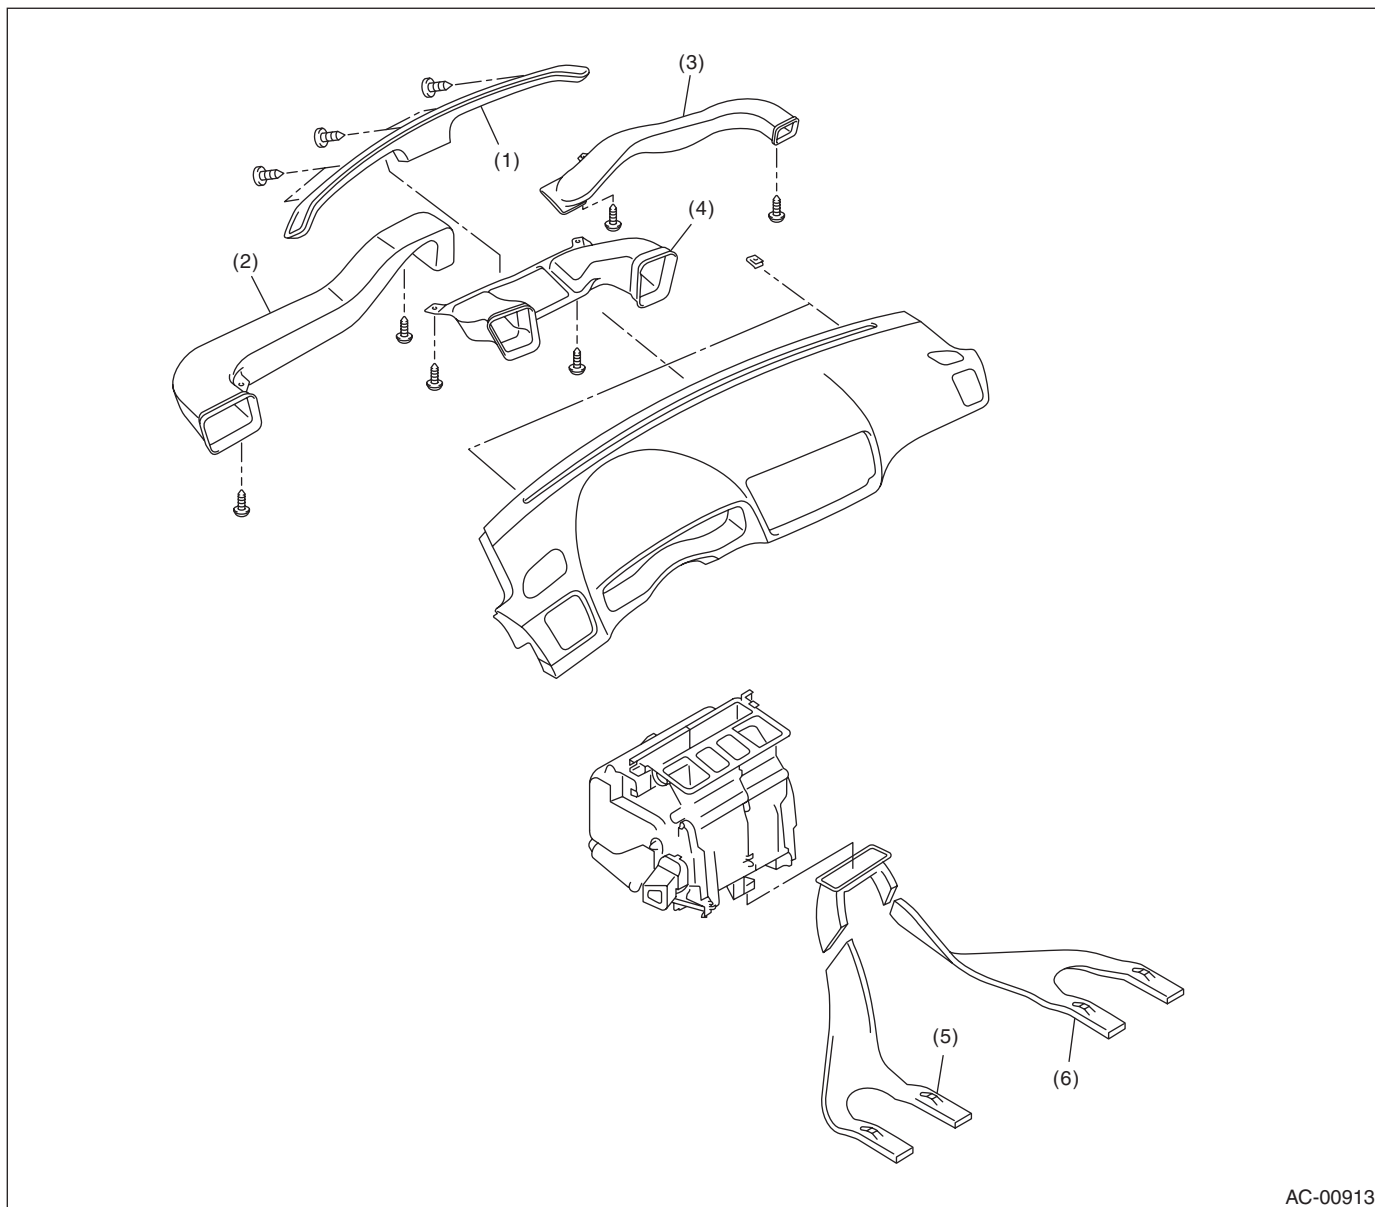

AC-00913

- (1) Front defroster nozzle
- (2) Side ventilation duct (LH)

- (3) Side ventilation duct (RH)
- (4) Center ventilation duct

- (5) Rear heater duct (LH)
- (6) Rear heater duct (RH)


General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: CAUTION

1. HFC-134A A/C SYSTEM

- The cooling system components for the HFC-134a system such as the refrigerant and compressor oil are different from the conventional CFC-12 system components and they are incompatible with each other.
- Vehicles with the HFC-134a system can be identified by the label (A) attached to the vehicle. Before maintenance, check which A/C system is installed to the vehicle.

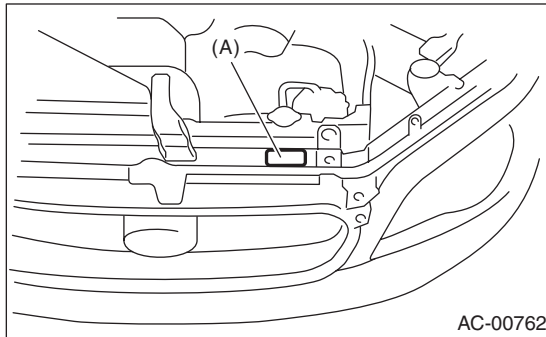

2. COMPRESSOR OIL


- HFC-134a compressor oil has no compatibility with that of CFC-12 system.
 - Use only Denso Oil 8, the manufacturer-authorized compressor oil for the HFC-134a system.
 - Do not mix multiple compressor oils.
- If CFC-12 compressor oil is used in the HFC-134a A/C system, the compressor may become stuck due to poor lubrication, or the refrigerant may leak due to swelling of rubber parts.
- On the other hand, if HFC-134a compressor oil is used in a CFC-12 A/C system, the durability of the A/C system will be lowered.
- HFC-134a compressor oil is very hygroscopic. When replacing or installing/removing A/C parts, immediately isolate the oil from atmosphere using a plug or tape. In order to avoid moisture, store the oil in a container with its cap tightly closed.

3. REFRIGERANT

- CFC-12 refrigerant cannot be used in a HFC-134a A/C system. HFC-134a refrigerant, also cannot be used in a CFC-12 A/C system.
- If an incorrect or no refrigerant is used, it will result in poor lubrication and the compressor itself may be damaged.

4. HANDLING OF REFRIGERANT

- The refrigerant boils at approx. -30°C (-22°F). When handling it, be sure to wear protective goggles and protective gloves. Direct contact of the refrigerant with skin may cause frostbite. If the refrigerant gets into your eye, avoid rubbing your eyes with your hands. Wash your eye with plenty of water, and receive medical treatment from an eye doctor.
- Do not heat a service can. If a service can is directly heated, or put into boiling water, the inside pressure will become extremely high. This may cause the can to explode. If a service can must be warmed up, use warm water of 40°C (104°F) or less.
- Do not drop or impact a service can. (Observe the precautions and operation procedure described on the refrigerant can.)
- When the engine is running, do not open the high-pressure valve of manifold gauge. The high-pressure gas will back-flow resulting in an explosion of the can.
- Provide good ventilation and do not work in a closed area.
- In order to prevent global warming, avoid releasing HFC-134a into the atmosphere. Using a refrigerant recovery system, discharge and recycle the gas.

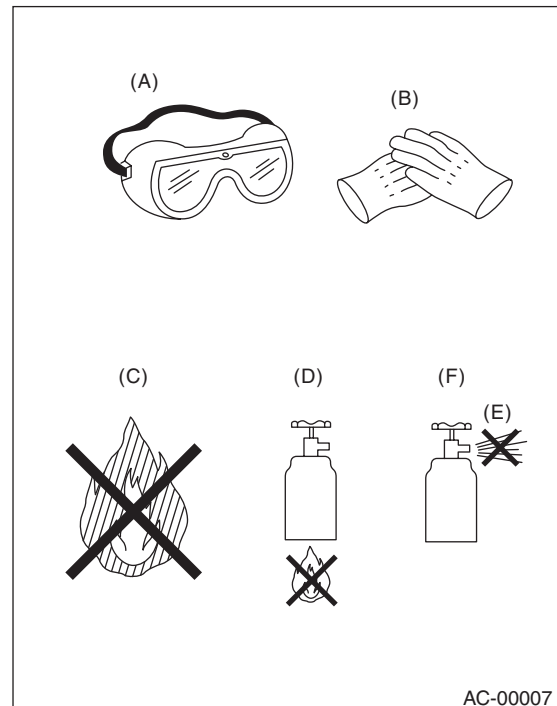


- (A) Goggles
- (B) Gloves
- (C) Avoid open flame
- (D) No direct heat on container
- (E) Do not discharge
- (F) Loosen

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


5. O-RING CONNECTIONS

- Always use a new O-ring.
- In order to keep the O-rings free of lint which will cause a refrigerant gas leak, perform work without using gloves or waste cloths.
- Apply compressor oil to O-rings to avoid sticking, before installation.
- Use a torque wrench to tighten the O-ring fittings. Over-tightening will result in damage of the O-ring and deformation of the tube end.
- If the work is interrupted before completing pipe connections, recap the tubes, components and fittings with a plug or tape to prevent foreign matter from entering.

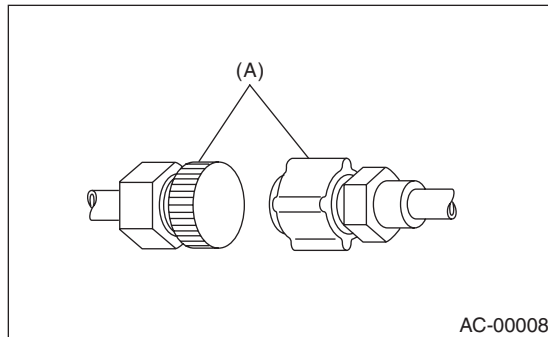

(A) Seal

- Visually check the surfaces and mating surfaces of O-rings, threads and connecting points. If a failure is found, replace the applicable parts.
- Install the O-rings at a right angle to tube beads.

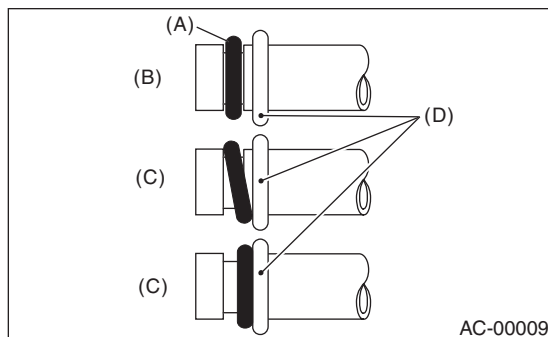


- (A) O-ring
(B) OK
(C) NG
(D) Groove

- Use compressor oil specified in the service manual to lubricate the O-rings.

Apply oil to the top and sides of O-rings before installation.

Apply compressor oil to grooves of the tube.

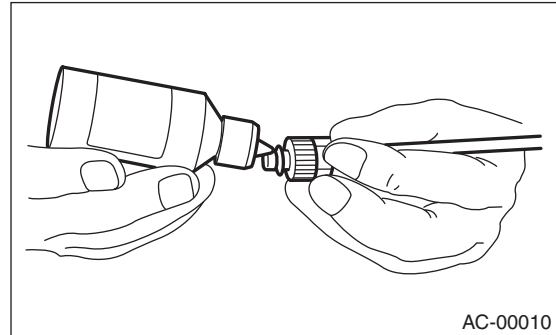

- After tightening, use a clean cloth to remove excess compressor oil from the connections and any oil which may have run on the vehicle body or other parts.

- If any leakage is suspected after tightening, do not tighten the connections further, but disconnect the connections, remove the O-rings, and check the O-rings, threads, and connections.

D: PREPARATION TOOL






CAUTION:

When working on vehicles with HFC-134a system, only use HFC-134a specified tools and parts. Do not mix CFC-12 tools and parts. If HFC-134a and CFC-12 refrigerant or compressor oil is mixed, it will result in poor lubrication and the compressor itself may be damaged. In order to prevent the mixture of HFC-134a and CFC-12 parts and liquid, the tool and screw type and the type of service valves used are different. The gas leak detectors for the HFC-134a and CFC-12 systems must also not be interchanged.

	HFC-134a	CFC-12
Tool & screw type	Millimeter size	Inch size
Valve type	Quick joint type	Screw-in type






General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

 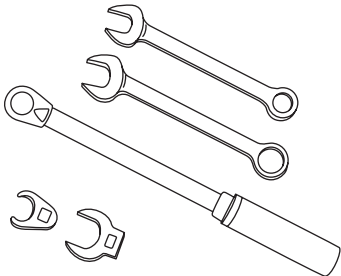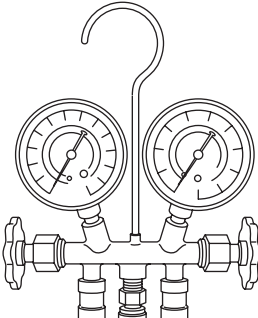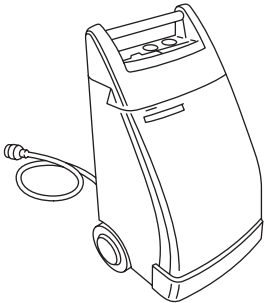 ILLUSTRATION	Tools and Equipment
 AC-00213	Wrench Various WRENCHES will be required to service any A/C system. A 7 to 40 N·m (0.7 to 4.1 kg-m, 5 to 30 ft-lb) torque wrench and various crow-foot wrenches will be needed. Open end or flare nut wrenches will be needed to hold the tube and hose fittings.
 AC-00012	Applicator bottle A small APPLICATOR BOTTLE is recommended to apply compressor oil to the various parts. It can be available at a hardware or drug store.
 AC-00013	Manifold gauge set A MANIFOLD GAUGE SET (with hoses) is be available at either a refrigerant supplier or an automotive equipment supplier.
 AC-00014	Refrigerant recovery system A REFRIGERANT RECOVERY SYSTEM is used for the recovery and reuse of A/C system refrigerant after contaminants and moisture have been removed from the refrigerant.
 AC-00015	Syringe A graduated plastic SYRINGE will be needed to add oil into the system again. A syringe can be available at a pharmacy or drug store.

General Description

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

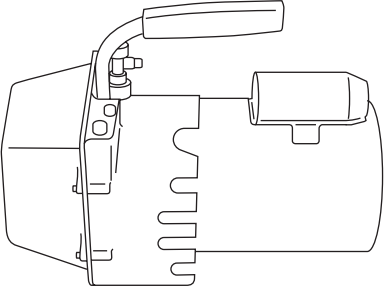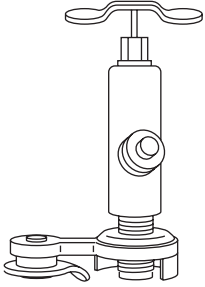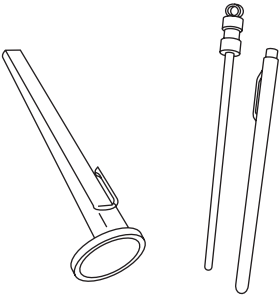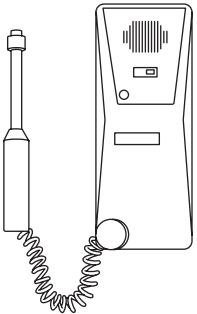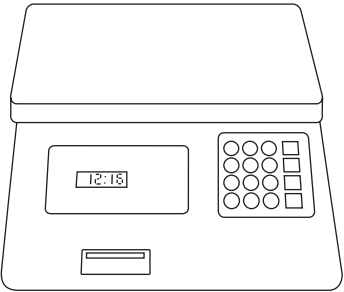ILLUSTRATION	Tools and Equipment
 AC-00016	Vacuum pump A VACUUM PUMP is necessary (for a good working condition), and may be available at either a refrigerant supplier or an automotive equipment supplier.
 AC-00017	Can tap A CAN TAP for the 397 g (14 oz.) can is available at an automotive equipment supplier.
 AC-00018	Thermometer A Pocket THERMOMETER is available at either a industrial hardware store or a refrigerant supplier.
 AC-00019	Electronic leak detector An ELECTRONIC LEAK DETECTOR can be available at either a specialty tool supplier or an A/C equipment supplier.
 AC-00020	Weight scale A WEIGHT SCALE such as an electronic charging scale or a bathroom scale with digital display will be needed, if a 13.6 kg (30 lb) refrigerant container is used.

Refrigerant Pressure with Manifold Gauge Set

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

2. Refrigerant Pressure with Manifold Gauge Set

A: PROCEDURE

- 1) Place the vehicle in the shade and windless condition.
- 2) Connect the manifold gauge set.
- 3) Open the front windows and close all doors.
- 4) Open the front hood.
- 5) Increase the engine to 1,500 rpm.
- 6) Turn on the A/C switch.
- 7) Turn the temperature control switch to MAX COOL.
- 8) Put in RECIRC position.
- 9) Turn the blower control switch to HI.
- 10) Read the gauge.

Standard:

Low pressure: 127 — 196 kPa (1.3 — 2.0 kg/cm², 18 — 28 psi)

High pressure: 1,471 — 1,667 kPa (15 — 17 kg/cm², 213 — 242 psi)

Ambient temperature: 30 — 35°C (86 — 95°F)

B: INSPECTION

Symptom	Probable cause	Repair order
High-pressure side is unusually high.	• Defective condenser fan motor • Clogged condenser fin • Too much refrigerant • Air inside the system • Defective receiver dryer	• Replace the fan motor. • Clean the condenser fin. • Discharge refrigerant. • Replace the receiver dryer. • After evacuating again, charge an appropriate amount of refrigerant.
High-pressure side is unusually low.	• Defective compressor • Not enough refrigerant • Clogged expansion valve • Expansion valve frozen temporarily by moisture.	• Replace the compressor. • Check for leaks. • Replace the expansion valve. • Fully evacuate the expansion valve.
Low-pressure side is unusually high.	• Defective compressor • Defective expansion valve • Too much refrigerant	• Replace the compressor. • Replace the expansion valve. • Discharge refrigerant.
Low-pressure side is unusually low.	• Not enough refrigerant • Clogged expansion valve • Expansion valve frozen temporarily by moisture. • Saturated receiver dryer	• Check for leaks. • Replace the expansion valve. • Replace the receiver dryer.

Refrigerant Recovery Procedure

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


3. Refrigerant Recovery Procedure

A: PROCEDURE

CAUTION:


- During operation, be sure to wear protective goggles and protective gloves.
- Connect the refrigerant recovery system with the manifold gauge set to discharge the refrigerant from the A/C system and recycle the gas.
- When recycling the discharged refrigerant, keep service cans on hand. Because the recovery rate with the recovery system is approx. 90%, service cans are necessary to charge the refrigerant.
- Follow the detailed operation procedure described in the operation manual attached to the refrigerant recovery system.

- 1) Perform the compressor oil return operation.
<Ref. to AC-24, PROCEDURE, Compressor Oil.>
- 2) Stop the engine.
- 3) Make sure the valves on low-/high-pressure sides of manifold gauge set are fully closed.

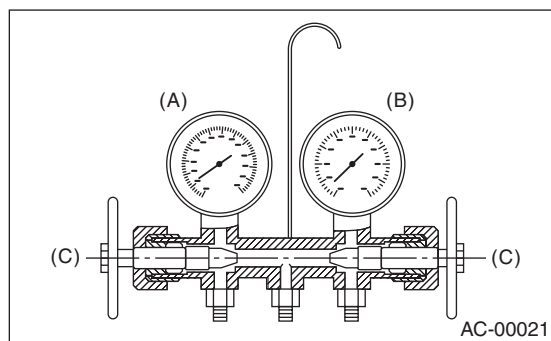

- (A) Low-pressure gauge
(Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close

- 4) Install the low-/high-pressure hoses to the service ports on the low-/high-pressure sides of the vehicle respectively.

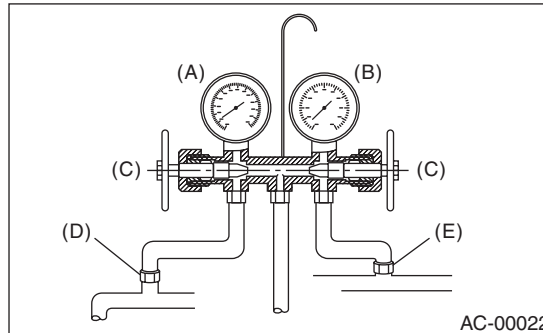

- (A) Low-pressure gauge
(Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close
- (D) Low-pressure side service port
- (E) High-pressure side service port

- 5) Connect the center hose to the refrigerant recovery system.

- 6) Follow the operation manual to activate the refrigerant recovery system.

Refrigerant Charging Procedure

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

4. Refrigerant Charging Procedure

A: PROCEDURE

CAUTION:


- During operation, be sure to wear protective goggles and protective gloves.
- Before charging the refrigerant, evacuate the system to remove small amounts of moisture remaining in the system.

The moisture in the system can be completely evacuated only under the minimum vacuum level. The minimum vacuum level affects the temperature in the system.

- The list below shows the vacuum values necessary to boil water at various temperatures. In addition, the vacuum levels indicated on the gauge are approx. 3.3 kPa (25 mmHg, 0.98 inHg) lower than those measured at 304.8 m (1,000 ft) above sea level.

Vacuum level required to boil water (at sea level)	
Temperature	Vacuum
1.7°C (35°F)	100.9 kPa (757 mmHg, 29.8 inHg)
7.2°C (45°F)	100.5 kPa (754 mmHg, 29.7 inHg)
12.8°C (55°F)	99.8 kPa (749 mmHg, 29.5 inHg)
18.3°C (65°F)	99.2 kPa (744 mmHg, 29.3 inHg)
23.9°C (75°F)	98.5 kPa (739 mmHg, 29.1 inHg)
29.4°C (85°F)	97.2 kPa (729 mmHg, 28.7 inHg)
35°C (95°F)	95.8 kPa (719 mmHg, 28.3 inHg)

1) Close the valves on low-/high-pressure sides of the manifold gauge.

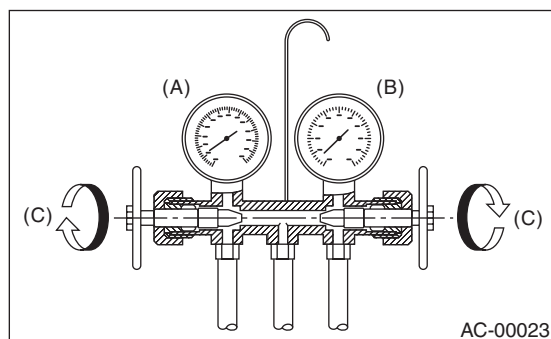


- (A) Low-pressure gauge (Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close

2) Install the low-/high-pressure hoses to the corresponding service ports on the vehicle.


3) Connect the center hose of the manifold gauge set with the vacuum pump.

4) Carefully open the valves on the low-/high-pressure sides to activate the vacuum pump.

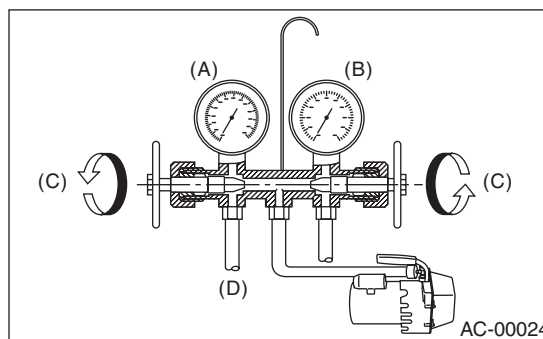


- (A) Low-pressure gauge (Compound pressure gauge)
- (B) High-pressure gauge
- (C) Slowly open
- (D) Vacuum pump turn on

5) After the low-pressure gauge reaches 100.0 kPa (750 mmHg, 29.5 inHg) or higher, evacuate the system for approx. 15 minutes. (Continue evacuation).

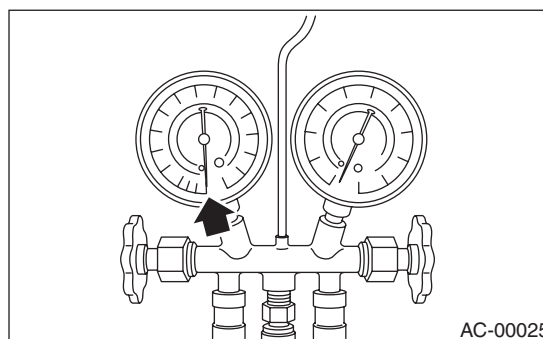

6) After 15 minutes of evacuation, if the reading shows 100.0 kPa (750 mmHg, 29.5 inHg) or higher, close the valves on the both sides to stop the vacuum pump.

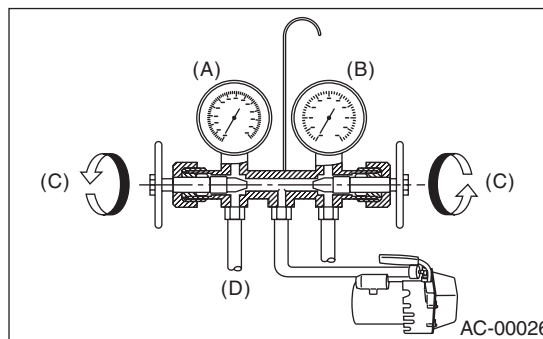


- (A) Low-pressure gauge (Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close
- (D) Vacuum pump turn off

Refrigerant Charging Procedure


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

7) Note the low-pressure gauge reading.

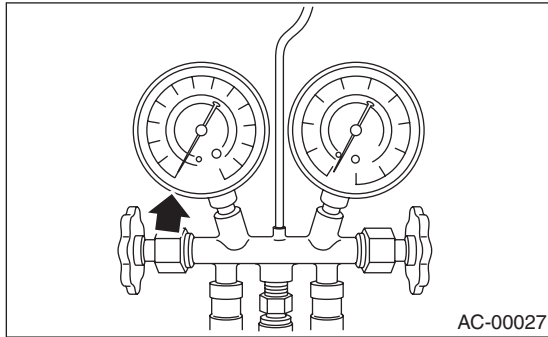

8) Leave it at least 5 minutes, and then check the low-pressure gauge reading for any changes. If the gauge indicator shows near zero point, it is a sign of leakage. Check pipe connector points, repair them, and make sure there is no leakage.


9) Follow the can tap operation manual, install to the refrigerant can.

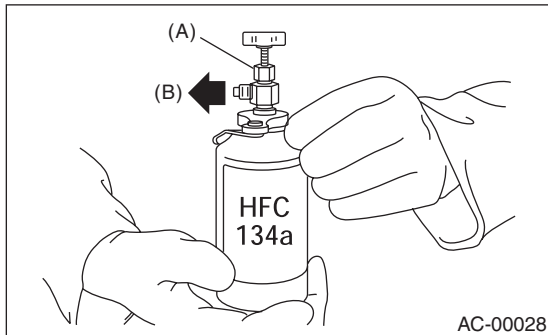

- (A) Tap valve
- (B) Center manifold hose


10) Disconnect the center manifold hose from the vacuum pump, and connect the hose to the tap valve.

11) When a 13.6 kg (30 lb) refrigerant container is used, measure the weight of the refrigerant amount to use using a scale.

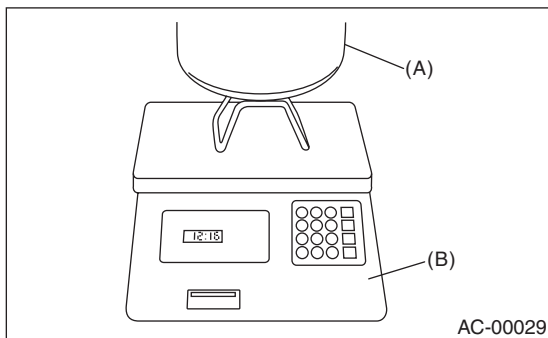

- (A) Refrigerant container (HFC-134a)
- (B) Weight scale

12) Confirm that all the 3 hoses are connected securely to the manifold gauge set.

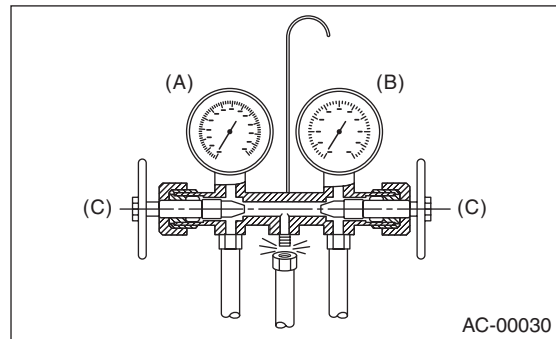

- (A) Low-pressure gauge
(Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close


13) Open the valve on the HFC-134a source.

14) Loosen the center hose connection on the manifold gauge set (if applicable, press a purge valve on the manifold gauge set) for a few seconds to allow the air in the center hose to escape by the refrigerant pressure.

15) Stop the engine and carefully open the high-pressure valve.

CAUTION:

Do not open the low-pressure valve.

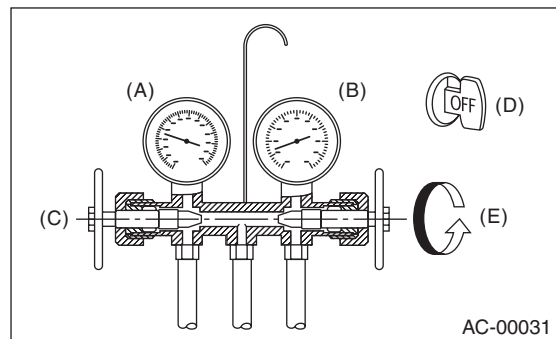

- (A) Low-pressure gauge
(Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close
- (D) Ignition switch OFF
- (E) Slowly open

CAUTION:

Never run the engine while charging from the high-pressure side.

16) Close the high-pressure valve when the low-pressure gauge reaches 98 kPa (1 kg/cm², 14 psi). Using a leak tester, check the system for leaks. If any leakage is found after the refrigerant recovery is completed, repair the applicable area.

Refrigerant Charging Procedure

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


17) After confirming that there are no leaks with the leak test, charge the required amount of refrigerant.

CAUTION:


Never run the engine while charging from the high-pressure side.

18) Close the high-pressure valve when;

- the readings of low- / high-pressure gauges become almost equal, after the charging speed is reduced,
- the HFC-134a source becomes empty, or the system is full with the gas.

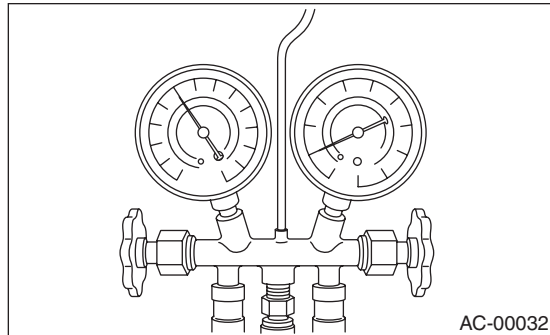

19) If the HFC-134a source is empty, close the high-pressure valve, close the valve on the can tap, and replace the HFC-134a source with a new part to restart the operation.

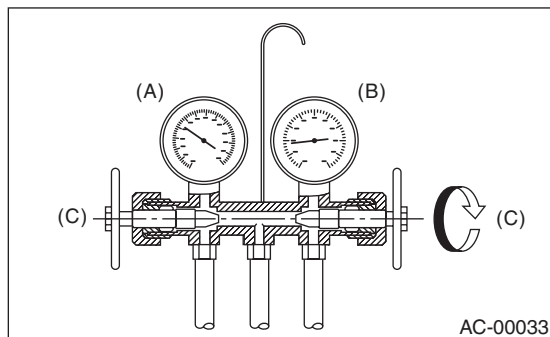

- (A) Low-pressure gauge
(Compound pressure gauge)
- (B) High-pressure gauge
- (C) Close

20) Confirm that both the low- / high-pressure valves can be closed. Start the engine with the A/C switch OFF.

21) Quickly repeat ON-OFF cycles a few times to prevent initial compressor damage.


22) Set up the vehicle to the following status:

- A/C switch ON
- Engine running at 1,500 rpm
- Blower speed setting to "HI"
- Temperature setting to "MAX COOL"
- Air inlet setting to "RECIRC"
- Window open

23) While reading the low-pressure gauge, carefully open the low-pressure valve with the refrigerant source connected and the service hose purged.

CAUTION:

Never open the high-pressure valve with the engine running. The high-pressure gas will back-flow resulting in an explosion of the can.

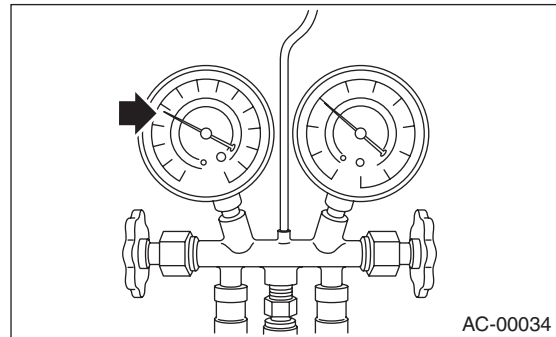

24) Adjust the refrigerant flow to maintain the pressure on the low-pressure side at 276 kPa (2.81 kg/cm², 40 psi) max.

25) After the system is fully charged, close the low-pressure valve.

26) Close the valve on the refrigerant source.

Refrigerant amount		
Refrigerant	Minimum	Maximum
HFC-134a	370 g (0.82 lb)	430 g (0.95 lb)

27) Disconnect the hose from the service port, and install the service port cap.

Refrigerant Leak Check

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

5. Refrigerant Leak Check

A: INSPECTION

1) Operate the A/C system for approx. 10 minutes, and check that the high-side pressure shows at least 690 kPa (7.03 kg/cm², 100 psi). Then stop the engine to start the leak test.

2) Starting from the connection between high-pressure pipe and evaporator, check the system for leaks along the high-pressure side through the compressor. The following items must be checked thoroughly.

3) Check the joint and seam between pressure switch (dual switch) and high-pressure pipe.

4) Check the connections between condenser and pipes, and welded joints on the condenser.

The leak tester may detect the oil on the condenser fins as a leak.

5) Check the joint between compressor and hoses.


6) Check the machined area of the compressor and other joints on the compressor.

7) Check the compressor shaft seal at the area near the center of compressor clutch pulley.

Some shaft seals will show a slight amount of leakage, about 3 g (0.1 oz) per year. This is not a problem.

8) Starting from the connection between low-pressure pipe and evaporator, check the system for leakage along the low-pressure side through the compressor. The following items must be checked thoroughly.

- Connection between 2 parts
- Connection between pipe and plate

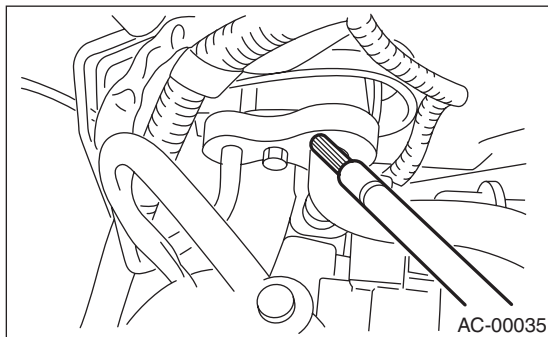


9) Visually check the rubber area of the flexible hose for cracks.

Check the entire length of the flexible hose, especially the connection with the metal hose end.

CAUTION:

Carefully check the external surface of hoses and tubes at approx. 25 mm (0.98 in) per second.

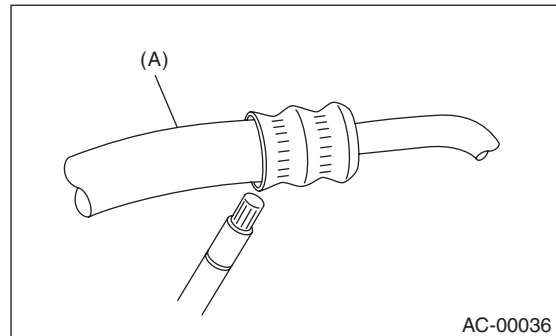


(A) Flexible hose

10) Disconnect the drain hose from the heater case, and check the hose end for at least 10 seconds.


After the test is finished, reconnect the drain hose.

11) Turn the ignition key to the ON position, and run the blower at high speed for approx. 1 minute. Stop the blower to check the ventilation grille on the instrument panel. While moving the tester closer to the grille, run the blower for 1 or 2 seconds, then stop it. Check the grille at that position for at least 10 seconds.

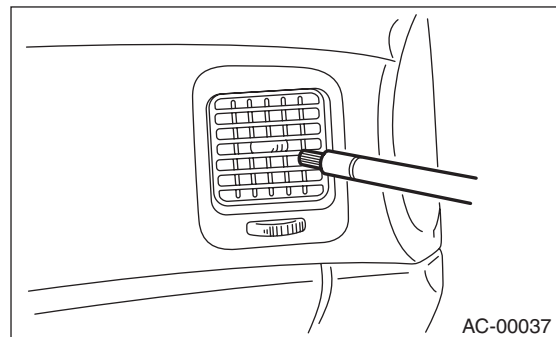

12) Check the valve in the service port.

13) Visually check the rubber seal in the service port cap.

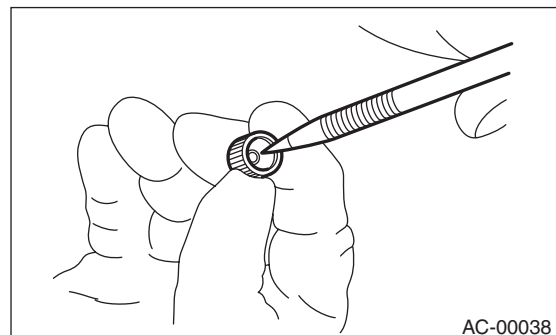

6. Compressor Oil

A: PROCEDURE

NOTE:

Before making repairs, perform the oil return operation to return the compressor oil in circulation with the refrigerant to the compressor.

- 1) Increase the engine to 1,500 rpm.
- 2) Turn on the A/C switch.
- 3) Turn the temperature control switch to MAX COOL.
- 4) Put in RECIRC position.
- 5) Turn the blower control switch to HI.
- 6) Leave in this condition for 10 minutes.

B: REPLACEMENT


NOTE:

- If a component has been replaced, add an appropriate amount of compressor oil (same as the amount of remaining oil in removed component).
- When replacing the compressor, the new compressor will already have the specified amount of oil in it. Install the new compressor after removing the same amount of oil that is remaining in the compressor removed.

7. Blower Motor Unit Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Disconnect the connectors of the A/C control module, intake door actuator, blower motor, power transistor and blower resistor.
- 4) Loosen the bolt and nut to remove blower motor unit assembly.

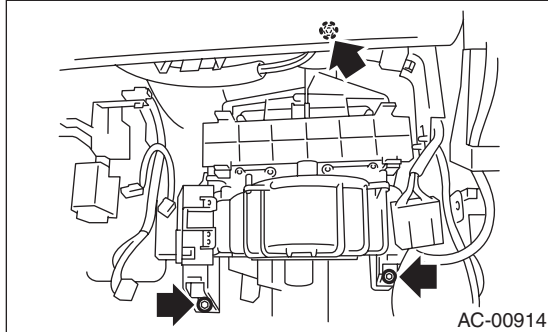

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

***Refer to “COMPONENT” of “General Description”. <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.>
<Ref. to AC-8, BLOWER MOTOR UNIT, COMPONENT, General Description.>***


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

8. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box lower cover. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Disconnect the connector of the blower motor.
- 4) Loosen the screw to remove the blower motor.

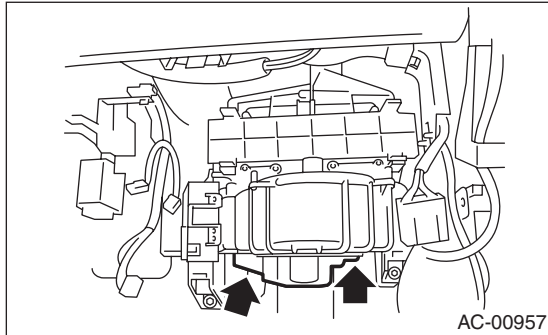


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


Connect the battery positive (+) terminal to terminal No. 2 of blower motor connector, and negative (-) terminal to terminal No. 1. Check the blower motor for smooth rotation.

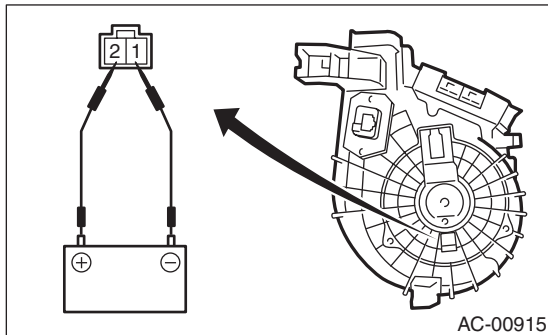

9. Power Transistor (Auto A/C Model)

A: REMOVAL

- 1) Remove the glove box lower cover on passenger side. <Ref. to EI-51, REMOVAL, Glove Box.>
- 2) Disconnect the power transistor connector.
- 3) Remove the two screws and remove the power transistor.

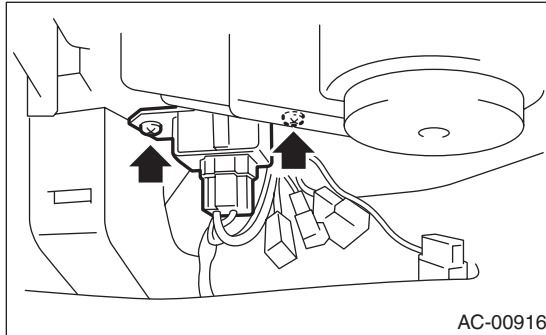

B: INSTALLATION

Install in the reverse order of removal.


Blower Resistor (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Blower Resistor (Manual A/C Model)

A: REMOVAL


- 1) Remove the glove box lower cover on passenger side. <Ref. to EI-51, REMOVAL, Glove Box.>
- 2) Disconnect the blower resistor connector.
- 3) Remove the two screws and remove the blower resistor.

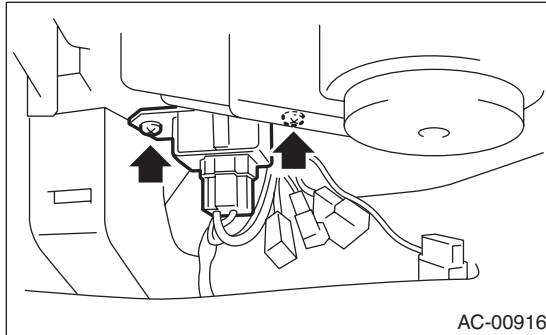

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

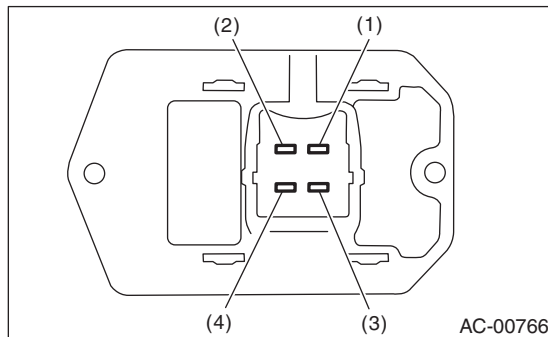

Measure the blower resistor resistance.


Terminal No.	Standard
4 and 2	Approx. 0.44 Ω
4 and 3	Approx. 1.12 Ω
4 and 1	Approx. 2.92 Ω

If NG, replace the blower resistor.


11.Heater Core

A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-36, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the screws and remove the heater core cover and pipe clamp.

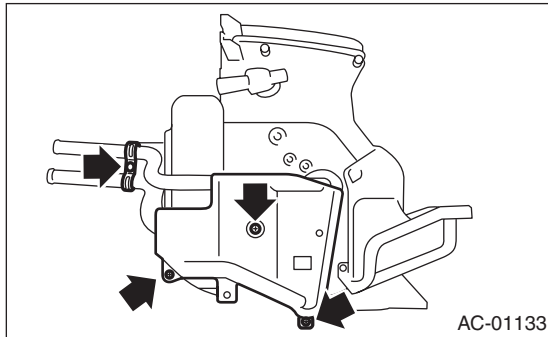

- 3) Remove the heater core (A).

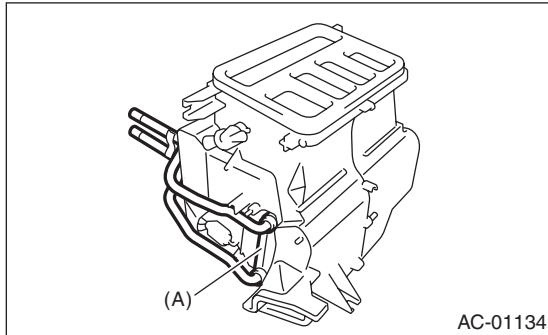

B: INSTALLATION

Install in the reverse order of removal.

Control Panel (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


12. Control Panel (Auto A/C Model)

A: REMOVAL


- 1) Remove the audio assembly. <Ref. to ET-8, REMOVAL, Audio.>
- 2) Remove the six screws.

NOTE:

When working with the removed audio assembly with its back facing down, place wooden blocks between the audio assembly and the workbench to prevent the ground terminal from folding.

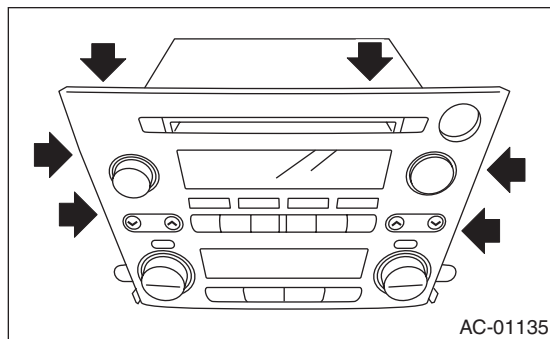

- 3) Use a fine flat tip screwdriver to lift the hooks in 10 locations gradually. Starting from the sides, proceed to loosen the lower hooks, then the upper hooks, then remove.

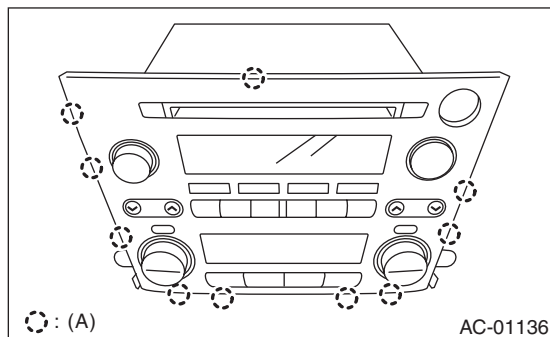

(A) Hook

- 4) Pull the panel straight out to remove.

CAUTION:

Be careful not to touch the circuitboard of the panel to prevent damage by static electricity.


B: INSTALLATION

- 1) After attaching the hooks, push the center of the panel by hand and secure the connection between the circuitboard and the connector.
- 2) Install in the reverse order of removal.

13. Control Unit (Manual A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the control wires.

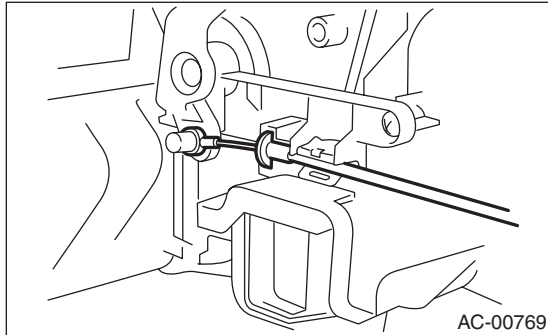

- 4) Remove the audio assembly. <Ref. to ET-8, REMOVAL, Audio.>
- 5) Loosen the screw to remove the control unit from the bracket.

B: INSTALLATION

Install in the reverse order of removal.


Control Unit (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

14. Control Unit (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Remove the screw, disconnect the connector and remove the control unit.

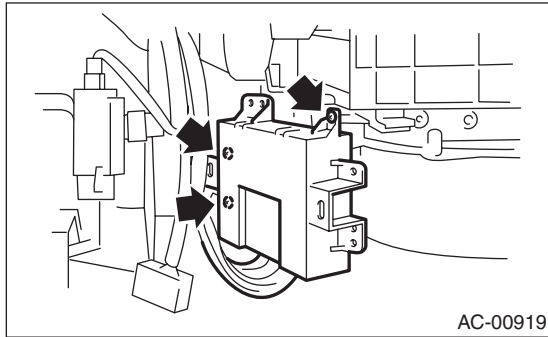

B: INSTALLATION

Install in the reverse order of removal.

15. Compressor

A: INSPECTION

1. MAGNETIC CLUTCH CLEARANCE


Check the clearance of the entire circumference around the drive plate and pulley.

Standard:

$0.45 \pm 0.15 \text{ mm } (0.0177 \pm 0.0059 \text{ in})$

2. MAGNETIC CLUTCH OPERATION


- 1) Disconnect the compressor connector.
- 2) Connect the battery positive (+) terminal to terminal No. 1 of the compressor connector, and the negative (-) terminal to terminal No. 2.

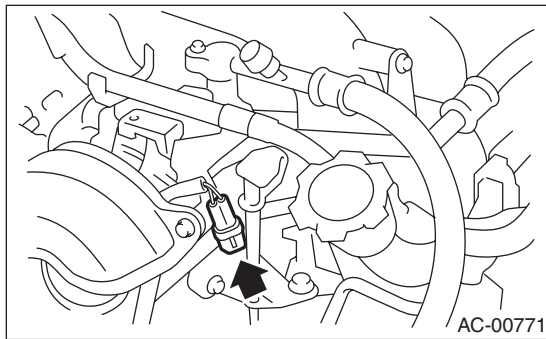

- 3) Check the magnet clutch engagement. If there is a problem, replace the compressor.

B: REMOVAL


- 1) Perform the compressor oil return operation. <Ref. to AC-24, PROCEDURE, Compressor Oil.>
- 2) Turn the A/C switch to OFF and stop the engine.
- 3) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-19, PROCEDURE, Refrigerant Recovery Procedure.>
- 4) Disconnect the ground cable from battery.
- 5) Remove the V-belts. <Ref. to ME(H4SO)-36, REMOVAL, V-belt.> <Ref. to ME(H4DOTC)-36, REMOVAL, V-belt.> <Ref. to ME(H6DO)-32, REMOVAL, V-belt.>
- 6) Remove the generator. <Ref. to SC(H4SO)-21, REMOVAL, Generator.>
- 7) Remove the bolt and remove the low-pressure hose and high-pressure hose.

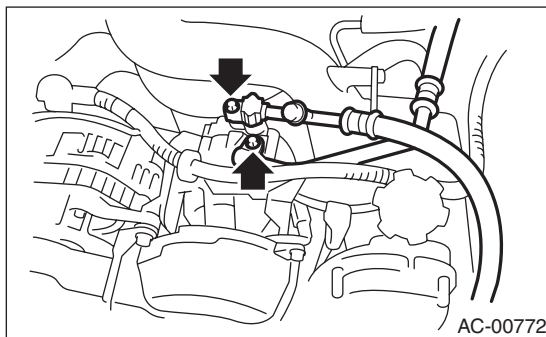


- 8) Disconnect the compressor harness from body harness.

- 9) Remove the bolts and remove the compressor bracket.


- H4 model

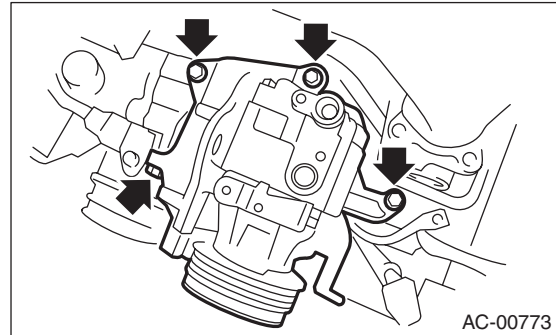

- H6 model

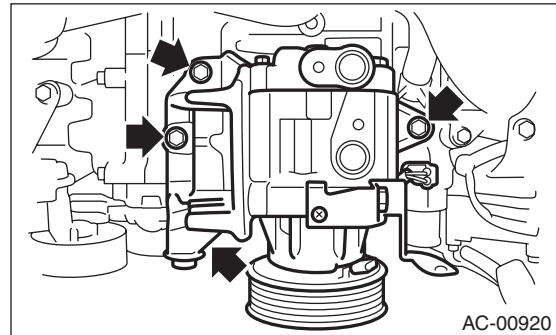

- 10) Remove the bolts, then remove the bracket from the compressor.

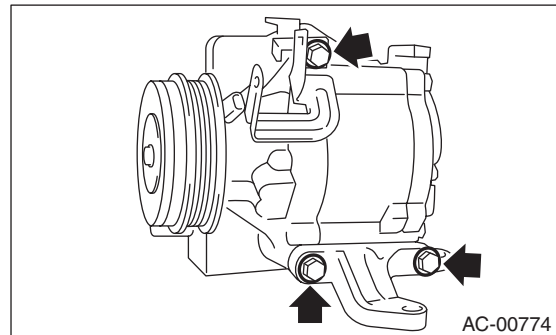

C: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Replace the O-rings on low-/high-pressure hoses with new parts, then apply compressor oil.
- 3) After replacing the compressor, adjust the amount of compressor oil. <Ref. to AC-24, PROCEDURE, Compressor Oil.>
- 4) Charge refrigerant. <Ref. to AC-20, PROCEDURE, Refrigerant Charging Procedure.>

Tightening torque:

***Refer to “COMPONENT” of “General Description”. <Ref. to AC-10, AIR CONDITIONING UNIT, COMPONENT, General Description.>
<Ref. to AC-11, COMPRESSOR, COMPONENT, General Description.>***


Condenser

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


16. Condenser

A: REMOVAL


- 1) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-19, PROCEDURE, Refrigerant Recovery Procedure.>
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the pressure hose and pipe from the condenser.

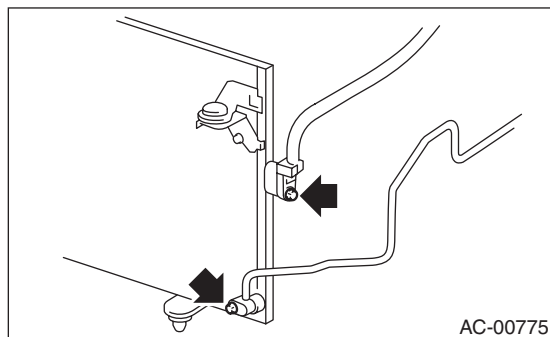

- 4) Remove the radiator bracket (A) and hood stay (B).

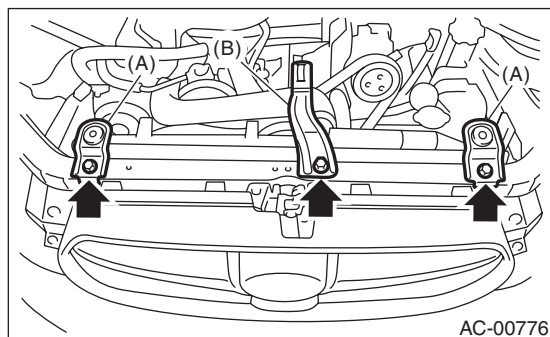

- 5) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 6) Remove two bolts. While lifting the condenser, pull out through space between the radiator and the radiator panel.

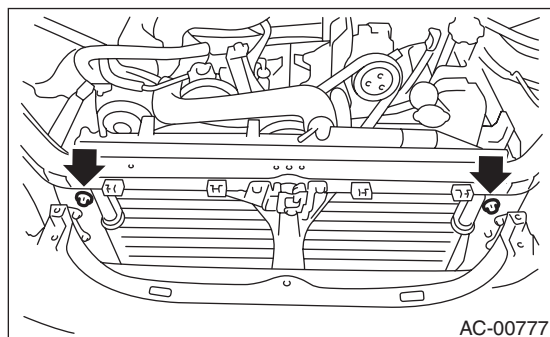

CAUTION:


- Be careful not to damage the condenser fins. If a damaged fin is found, repair it using a thin screwdriver.
- If the condenser is replaced, add an appropriate amount of compressor oil to the compressor. <Ref. to AC-24, REPLACEMENT, Compressor Oil.>

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Replace the O-rings on hoses or pipes with new parts, and then apply compressor oil. Confirm that lower guide (A) of condenser fits into holes on radiator panel.

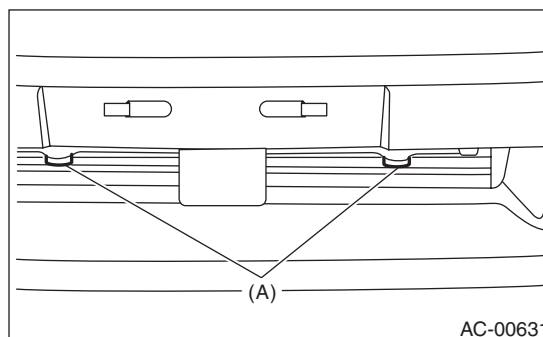

- 2) Charge refrigerant. <Ref. to AC-20, PROCEDURE, Refrigerant Charging Procedure.>

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to AC-10, AIR CONDITIONING UNIT, COMPONENT, General Description.> <Ref. to CO(H4SO)-5, RADIATOR & RADIATOR FAN, COMPONENT, General Description.>

C: INSPECTION

- 1) Check to see that the condenser fins are not clogged with debris or insects. Blow with compressed air or flush fins with water as needed.
- 2) Inspect for oil leakage from the condenser. If a failure is found, replace the condenser with a new part.


17.Heater and Cooling Unit

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-19, PROCEDURE, Refrigerant Recovery Procedure.>
- 3) Drain engine coolant from the radiator.
- 4) Remove the bolts securing expansion valve and pipe in engine compartment. Release the heater hose clamps in engine compartment to remove the hoses.



- 5) Remove the instrument panel. <Ref. to EI-55, REMOVAL, Instrument Panel Assembly.>
- 6) Remove the support beam.
- 7) Remove the blower motor unit assembly. <Ref. to AC-25, REMOVAL, Blower Motor Unit Assembly.>
- 8) Disconnect the actuator connector.
- 9) Remove the bolt and nuts and remove the heater and cooling unit.

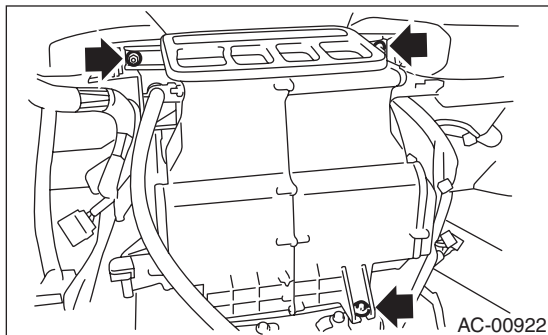

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Charge refrigerant. <Ref. to AC-20, PROCEDURE, Refrigerant Charging Procedure.>

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.>


Evaporator

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


18.Evaporator

A: REMOVAL


- 1) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-19, PROCEDURE, Refrigerant Recovery Procedure.>
- 2) Disconnect the ground cable from battery.
- 3) Remove the blower motor unit assembly. <Ref. to AC-25, REMOVAL, Blower Motor Unit Assembly.>
- 4) Disconnect the connector, remove the screw and then remove the air-mix door actuator and mode door actuator.

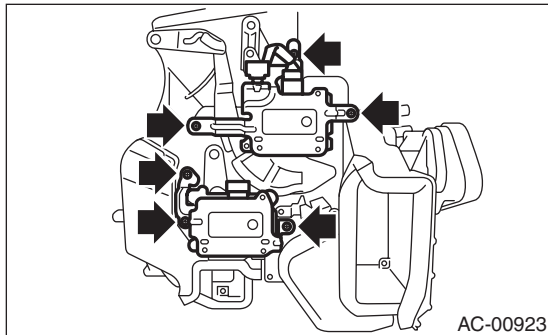


- 5) Disconnect the connector, remove the pipe cover and evaporator sensor.

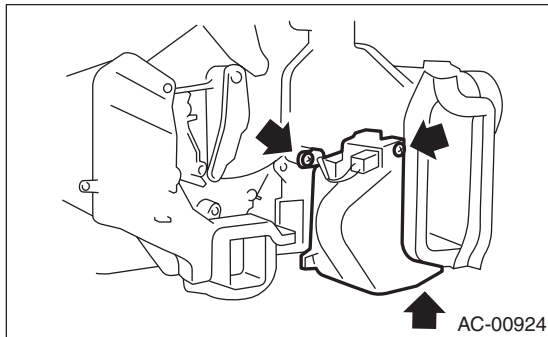


- 6) Remove the bolts securing expansion valve and pipe in engine compartment.

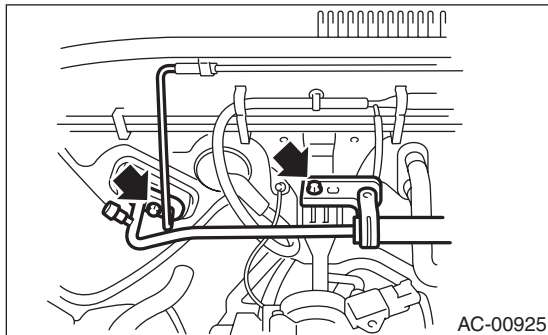


- 7) Remove the bolt which holds the pipe to the evaporator.

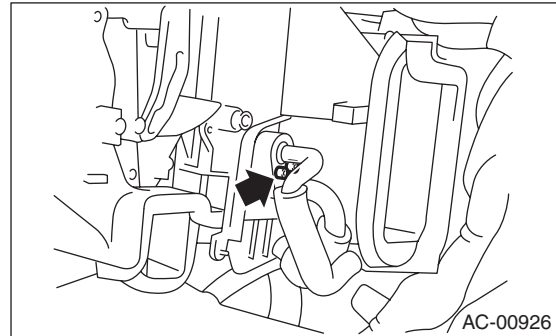

- 8) Remove the screws and clip to remove the evaporator cover.

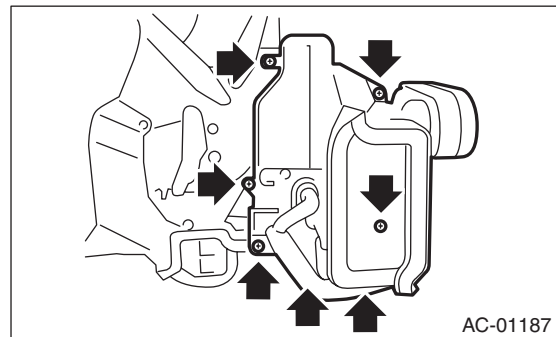

- 9) Pull out the evaporator (A) in the direction of the arrow.

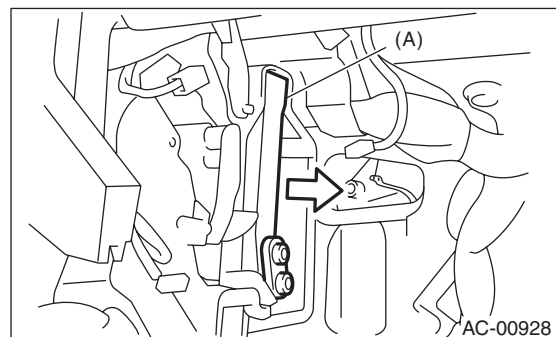

CAUTION:

If the evaporator is replaced, add an appropriate amount of compressor oil to evaporator. <Ref. to AC-24, REPLACEMENT, Compressor Oil.>

B: INSTALLATION

Install in the reverse order of removal.

Hose and Tube

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

19.Hose and Tube


A: REMOVAL

CAUTION:

- When disconnecting/connecting hoses, do not apply an excessive force to them. After installing, check that no torsion or excessive tension applied to the hoses.
- Seal the disconnected hose with a plug or vinyl tape to prevent foreign matter from entering.

- 1) Disconnect the ground cable from battery.
- 2) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-19, PROCEDURE, Refrigerant Recovery Procedure.>
- 3) Remove the evaporator unit mounting bolt (A) and low-pressure hose bracket bolt (B).
- 4) Remove the low-pressure hose attaching bolts (C).
- 5) Disconnect the low-pressure hose from evaporator unit.
- 6) Disconnect the low-pressure hose from compressor.
- 7) Remove the low-pressure hose from vehicle.
- 8) Remove the high-pressure hose attaching bolt (D).
- 9) Disconnect the high-pressure hose from compressor.
- 10) Disconnect the high-pressure hose from condenser.
- 11) Remove the high-pressure hose from vehicle.
- 12) Remove the high-pressure tube attaching bolt (E).

- 13) Remove the high-pressure tube from vehicle.

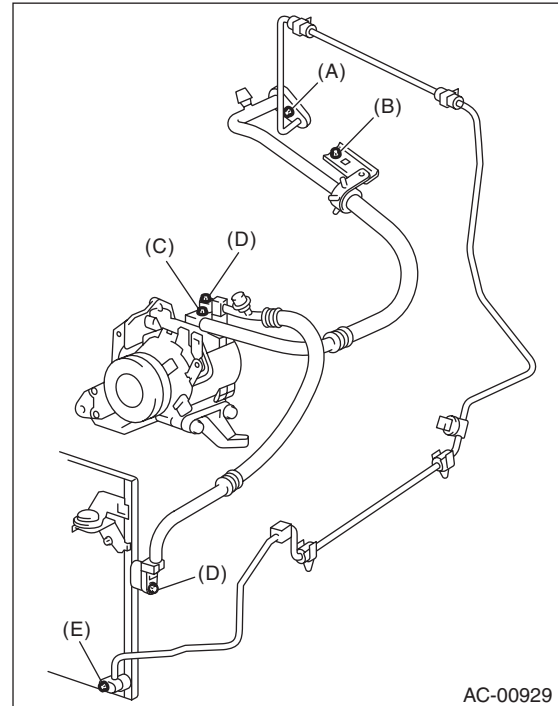

B: INSTALLATION

CAUTION:

- When disconnecting or connecting the hoses, do not apply excessive force. After installing, check that no torsion or excessive tension applied to the hoses.
- Seal the disconnected hose with a plug or vinyl tape to prevent foreign matter from entering.

- 1) Install in the reverse order of removal.
- 2) Charge refrigerant. <Ref. to AC-20, PROCEDURE, Refrigerant Charging Procedure.>

Tightening torque:


Refer to “COMPONENT” of “General Description”. <Ref. to AC-10, AIR CONDITIONING UNIT, COMPONENT, General Description.>

C: INSPECTION

Check the hoses for cracks, damage and expansion. If any fault is found, replace with new parts.

20. Relay and Fuse


A: LOCATION

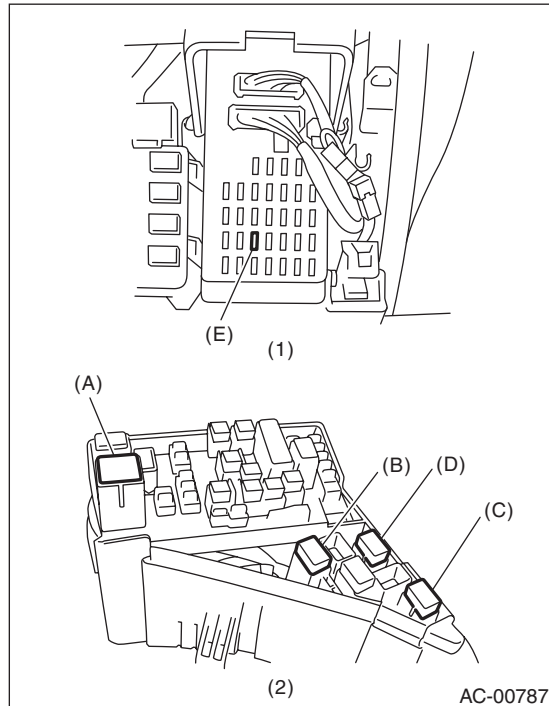

- (1) Joint box
(2) Main fuse box

Main fan relay 1	(A)
Main fan relay 2	(B)
Sub fan relay	(C)
A/C relay	(D)
A/C Fuse	(E)

B: INSPECTION

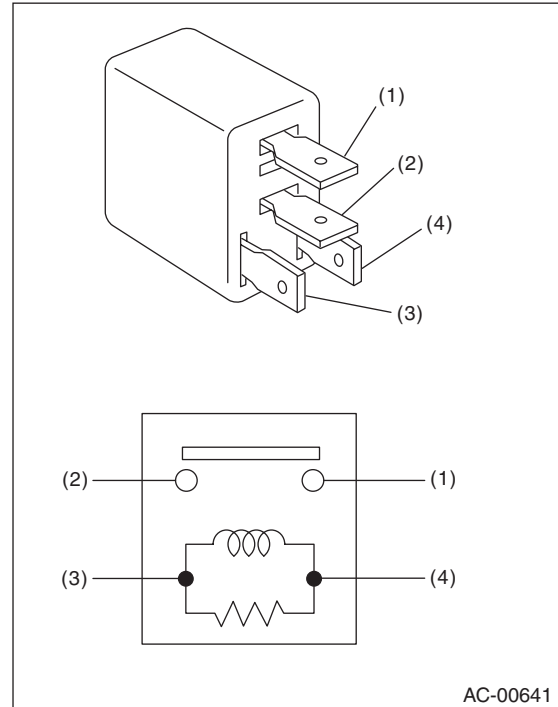

- (3) — (4): Continuity exists
(1) — (2): Continuity does not exist

While applying battery voltage to the terminal between (3) and (4), check for continuity between (1) and (2).

If no continuity exists, replace the relay with a new part.


Pressure Switch (Triple Pressure Switch)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

21. Pressure Switch (Triple Pressure Switch)

A: INSPECTION

- 1) Connect the manifold gauge to the service valve on the high-pressure side.
- 2) Start the air conditioner, and check the operating pressure of switch by turning the compressor (magnet clutch) to ON/OFF. Operation of each switch is as follows.

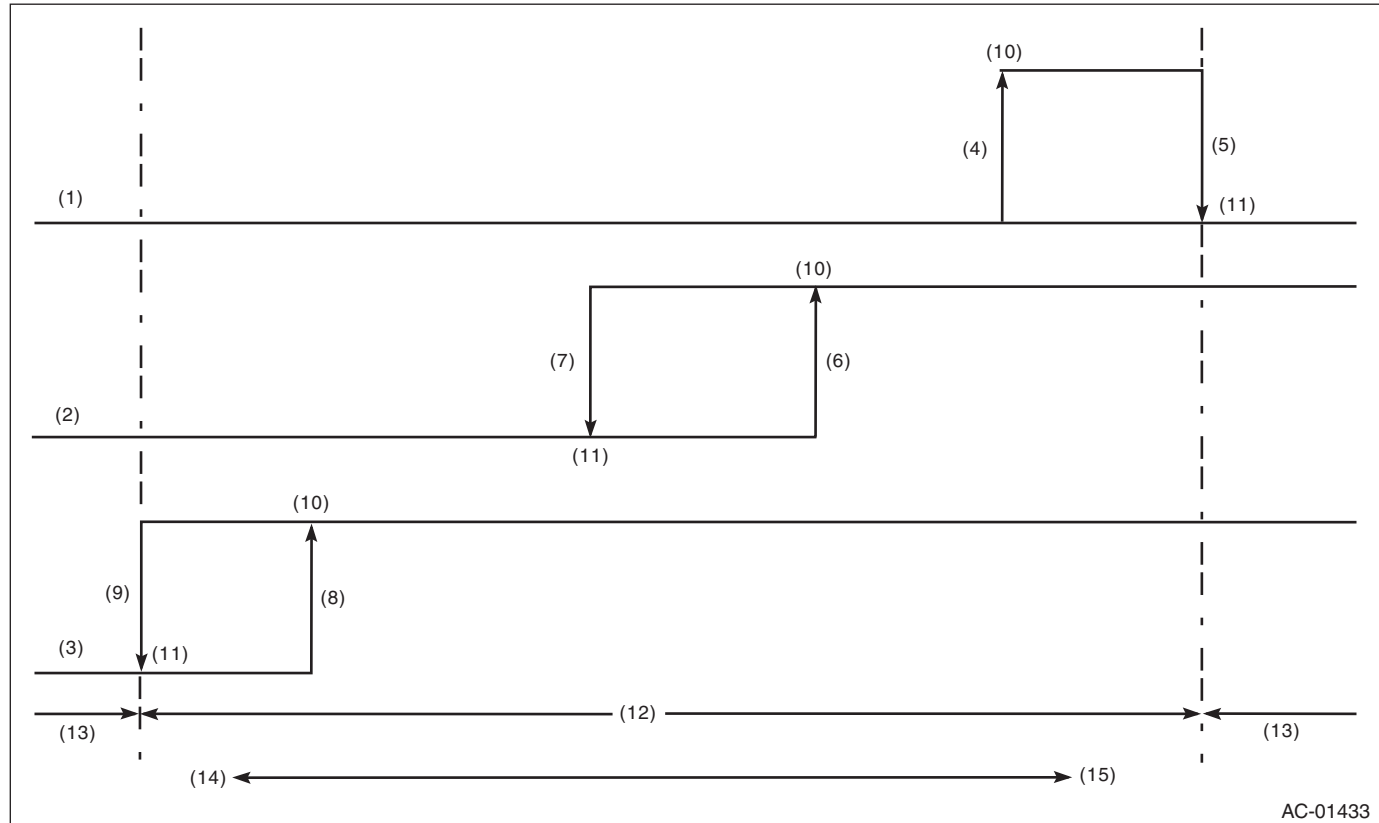

AC-01433

(1) High pressure switch	(6) 1770 ± 100 kPa (18.05 ± 1.02 kg/cm ² , 256.81 ± 14.5 psi)	(9) 196 ± 20 kPa (2.0 ± 0.2 kg/cm ² , 28.4 ± 2.9 psi)
(2) Middle pressure switch	(7) 1370 ± 120 kPa (13.97 ± 1.22 kg/cm ² , 198.65 ± 14.5 psi)	(10) ON
(3) Low pressure switch	(8) 225^{+25}_{-29} kPa ($2.99^{+0.25}_{-0.3}$ kg/cm ² , $3.6^{+32.6}_{-4.2}$ psi)	(11) OFF
(4) 2550 ± 200 kPa (24 ± 2 kg/cm ² , 341 ± 28 psi)		(12) Operative range of compressor
(5) 3140 ± 200 kPa ($32.02^{+0.51}_{-2.04}$ kg/cm ² , $455.4^{+72.5}_{-29.0}$ psi)		(13) Inoperative range of compressor
		(14) Low pressure
		(15) High pressure

NOTE:


- High pressure switch turns the compressor (magnet clutch) to OFF when the refrigerant pressure becomes extremely high to prevent the evaporator, air conditioner piping and expansion valve from getting damaged or frozen.
- Middle pressure switch effectively controls the radiator fan output by judging height load/low load in normal range.
- Low pressure switch turns the compressor (magnet clutch) to OFF, judging as low refrigerant level when the refrigerant pressure becomes extremely low, to prevent the possible seizure if the compressor rotates.

22. Actuator


A: REMOVAL

1. MODE DOOR ACTUATOR

Disconnect the connector, remove the screw, and then remove the mode door actuator from the heater and cooling unit.

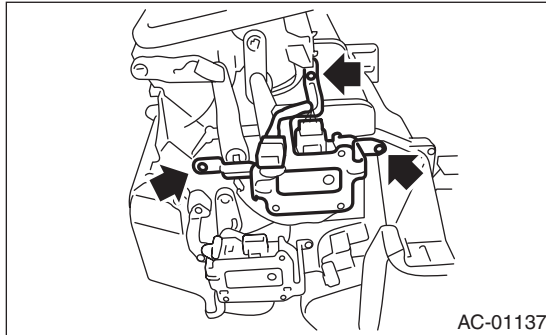

- Passenger's side

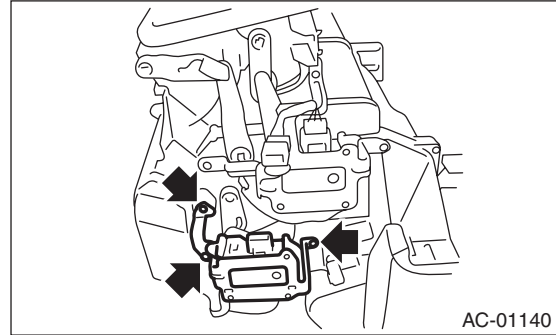


B: INSTALLATION

Install in the reverse order of removal.

2. INTAKE DOOR ACTUATOR


Disconnect the connector, remove the screw, and then remove the intake door actuator from the blower motor unit.

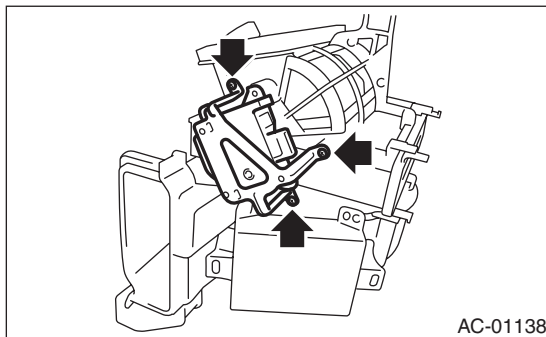

3. AIR MIX DOOR ACTUATOR (AUTO A/C MODEL)

Disconnect the connector, remove the screw, and then remove the air mix door actuator from the heater and cooling unit.

- Driver's side

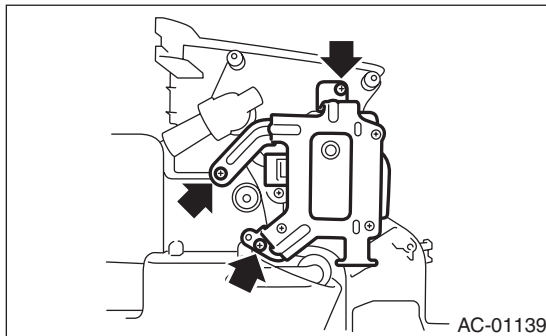


Ambient Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

23. Ambient Sensor (Auto A/C Model)

A: REMOVAL

- 1) Open the front hood.
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the ambient sensor connector.
- 4) Remove the ambient sensor from the radiator lower panel.

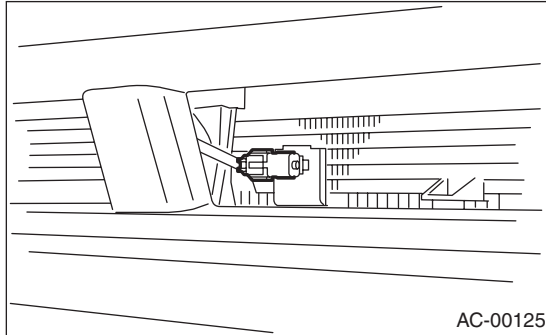

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

<Ref. to AC(diag)-29, AMBIENT SENSOR, Diagnostic Procedure for Sensors.>

24. Sunload Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector and remove the sunload sensor.

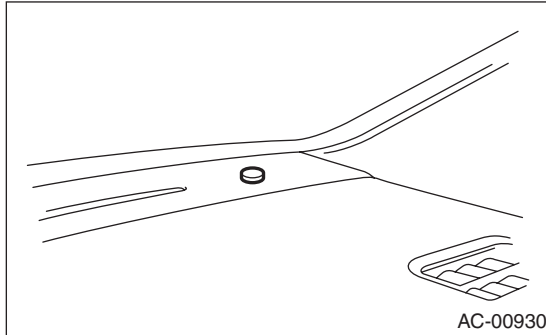

CAUTION:

Be careful not to damage the interior trims when removing the sensor.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC(diag)-35, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>

In-vehicle Sensor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

25. In-vehicle Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console side panel of the driver's side. <Ref. to EI-53, REMOVAL, Center Console.>
- 3) Disconnect the connector and aspirator hose, remove the claw and remove the in-vehicle sensor from the center console frame.

CAUTION:

Be careful not to damage the sensors and interior trims when removing.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


<Ref. to AC(diag)-31, IN-VEHICLE SENSOR, Diagnostic Procedure for Sensors.>

26. Air Vent Grille

A: REMOVAL


1. CENTER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the three claws and connector to remove center air vent grill.

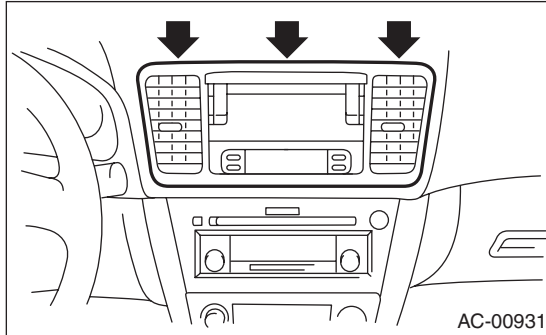

2. SIDE GRILLE

Remove the catch in 2 locations to remove the side air vent grill.

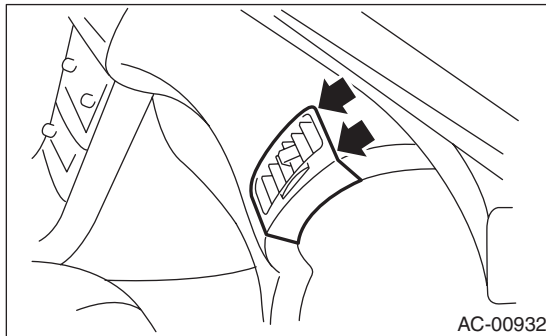

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


- 1) Check that the direction and amount of air can be adjusted smoothly.
- 2) Check that the adjustment can be maintained in each position.

27.Heater Duct

A: REMOVAL


1. FRONT HEATER DUCT

- 1) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screws and detach the front heater duct (A).

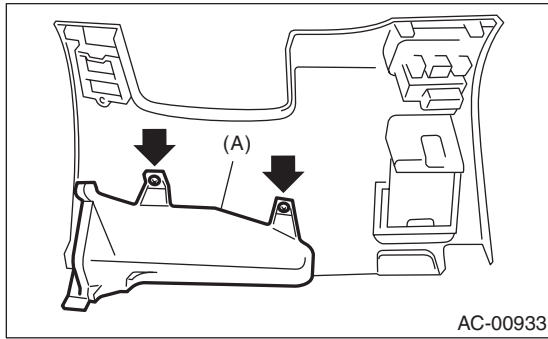

2. REAR HEATER DUCT

- 1) Remove the heater cooling unit. <Ref. to AC-36, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 3) Remove the front side sill cover.
- 4) Pull off the floor mat to remove the rear center heater duct (A) and rear heater duct LH, RH (B).

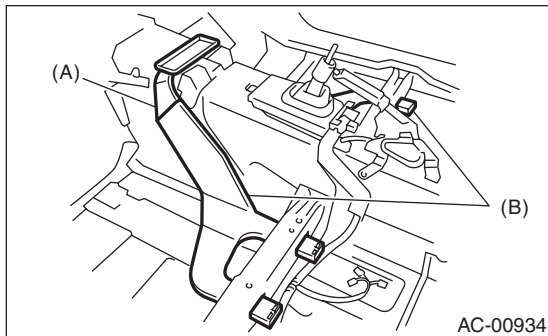


B: INSTALLATION

Install in the reverse order of removal.

28.Heater Vent Duct

A: REMOVAL

- 1) Remove the instrument panel. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screws and detach the center vent duct (A).
- 3) Remove the screws and detach the side vent duct (B).
- 4) Remove the insulator, remove the screws and detach the defroster duct.

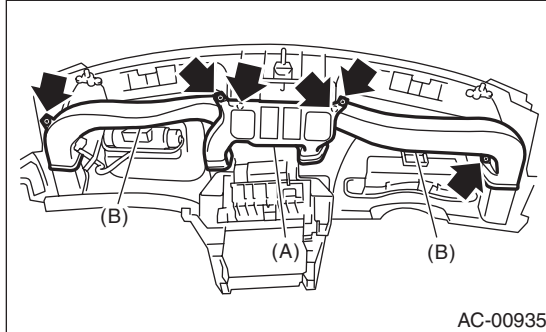


B: INSTALLATION

Install in the reverse order of removal.


29.A/C Filter

A: REPLACEMENT

1) Remove the instrument panel side cover.


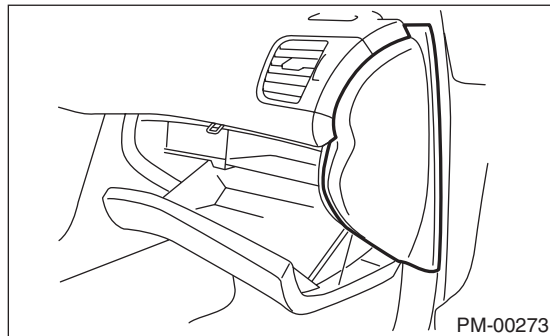


2) Remove the clip and the damper (string).

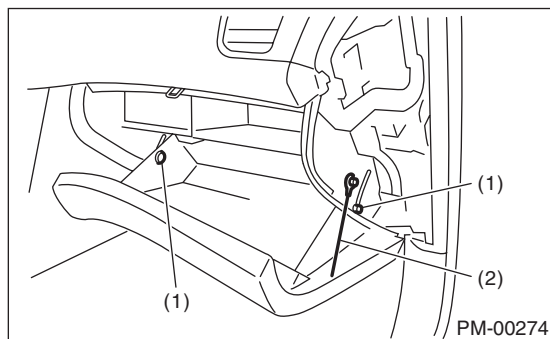


- (1) Clip
- (2) Damper

3) Remove the screws, and then remove the upper storage box.

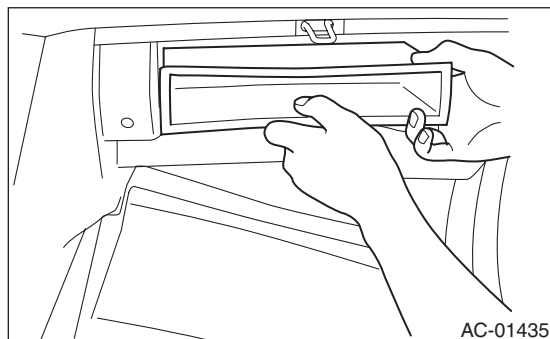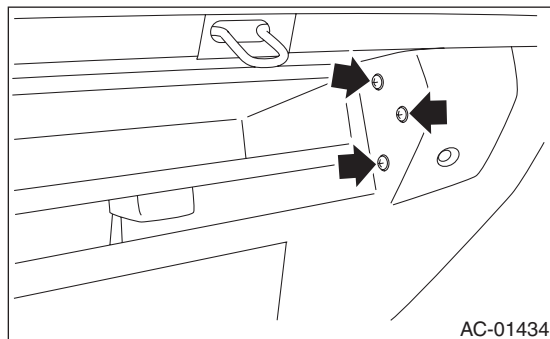


4) Remove the screws to take out the bracket from hole where the storage box was removed.

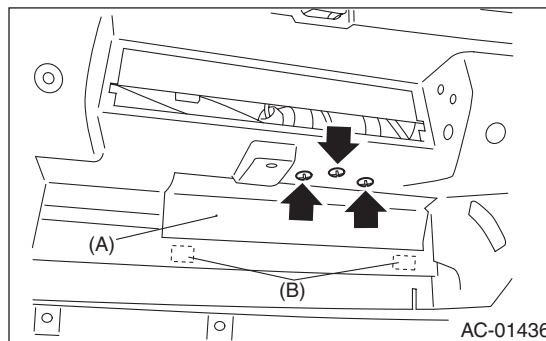

5) Peel off Velcro tape (B) attaching the insulator, and push up the insulator (A).

6) Remove the A/C filter.

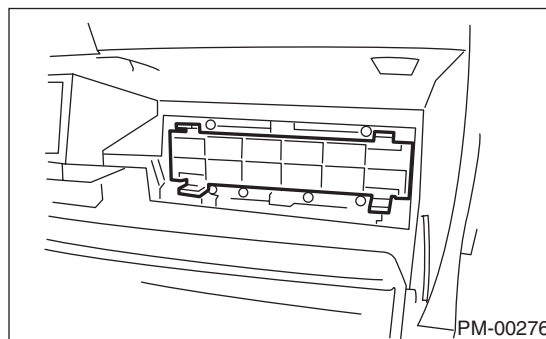

7) Install in the reverse order of removal.

General Diagnostic Table

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

30.General Diagnostic Table

A: INSPECTION

Symptom		Repair order
Blower motor	Does not operate.	Fuse
		Blower motor relay
		Blower motor
		Blower motor resistor
		Blower switch
		Wiring harness
	Noise	Blower motor
Compressor	Does not operate.	Refrigerant
		Fuse
		Air conditioning relay
		Magnet clutch
		Compressor
		Pressure switch
		A/C switch
		Blower switch
		Wiring harness
	Noise	V-belt
		Magnet clutch
		Compressor
Cold air not emitted.		Refrigerant
		V-belt
		Magnet clutch
		Compressor
		Pressure switch
		A/C switch
		Blower switch
		Wiring harness
		Heater duct
		Heater vent duct
Warm air not emitted.		Engine coolant
		Blower switch
		Heater core
		Heater cock solenoid valve
Temperature of air from vents does not change.		Engine coolant
		Air mix door actuator (Auto A/C)
		Wiring harness (Auto A/C)
		Temperature control cable (Manual A/C)
Unable to switch blow vents.		Mode door actuator
		Air flow switch
		Wiring harness
Unable to switch suction vents.		Air inlet select switch
		Intake door actuator
		Wiring harness

General Diagnostic Table

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

AC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	3
3. Electrical Component Location	5
4. Auto A/C Control Module I/O Signal	7
5. Diagnostic Chart for Self-diagnosis	9
6. Diagnostics for A/C System Malfunction	14
7. Diagnostic Procedure for Actuators	22
8. Diagnostic Procedure for Sensors	29
9. Diagnostics with Phenomenon	39

Basic Diagnostic Procedure

IMMOBILIZER (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE


Step	Check	Yes	No
1 CHECK SECURITY INDICATOR LIGHT. 1) Turn the ignition switch to "OFF" or "ACC". 2) Wait at least 60 seconds.	Does the security indicator light blink?	Go to step 2.	Check the security indicator light circuit. <Ref. to IM(diag)-10, CHECK SECURITY INDICATOR LIGHT CIRCUIT, INSPECTION, Diagnostics Chart for Security Indicator Light.>
2 CHECK KEY SWITCH. Remove the key from ignition switch.	Does the security indicator light blink within 1 second after removing the key?	Go to step 3.	Check the key switch circuit. <Ref. to IM(diag)-12, CHECK KEY SWITCH CIRCUIT, INSPECTION, Diagnostics Chart for Security Indicator Light.>
3 CHECK SECURITY INDICATOR LIGHT. Turn the ignition switch to ON.	Does the security indicator light go off?	Go to step 5.	Go to step 4.
4 CHECK ENGINE START. Turn the ignition switch to START.	Does the starter operate?	Check the LAN communication circuit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the DTC display (body integrated unit). Go to step 7.
5 CHECK ENGINE START. Turn the ignition switch to START.	Does the starter operate?	Go to step 6.	Check the LAN communication circuit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
6 CHECK ENGINE START. Turn the ignition switch to START.	Does the engine start?	Immobilizer system is normal.	Check the DTC display (ECM). Go to step 7.
7 CHECK ANY OTHER DTC ON DISPLAY. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to the data link connector. <Ref. to IM(diag)-7, Subaru Select Monitor.> 3) Turn the ignition switch and Subaru Select Monitor switch to ON. 4) Read DTC's on the display.	Is the DTC displayed on screen?	Go to step 8.	Repair the related parts.
8 PERFORM DIAGNOSIS. 1) Inspect using the "Diagnostic Procedure with Diagnostic Trouble Code (DTC)." <Ref. to IM(diag)-16, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> 2) Repair the trouble cause. 3) Perform the Clear Memory Mode. 4) Read DTC's again.	Is the DTC displayed on screen?	Inspect using the "Diagnostic Procedure with Diagnostic Trouble Code (DTC)." <Ref. to IM(diag)-16, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Finish the diagnosis.

2. General Description


A: CAUTION

CAUTION:


- The airbag system wiring harnesses and connectors are yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness.
- While diagnostic items are being checked, do not operate radios, portable telephones, etc. which emit electromagnetic waves near or inside the vehicle.

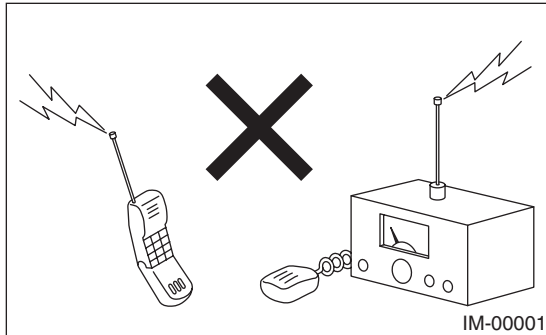

- When turning the ignition switch to ON or OFF while diagnostic items are being checked, do not allow keys with different ID codes close to the ignition switch. If the ignition key is on a key holder, remove it from the key holder before performing diagnoses.

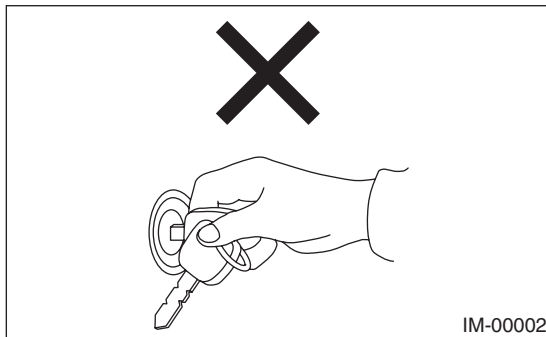

- When repeatedly turning the ignition switch to ON or OFF while diagnostic items are being checked, it should be switched in cycles of "ON" for at least 5 seconds → "OFF" for at least 8 seconds.

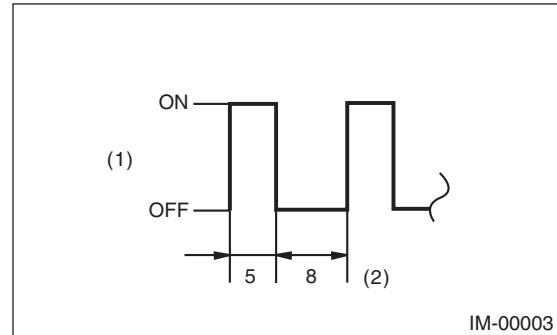

(1) Ignition switch position

(2) Sec.


- If the engine fails to start with a registered ignition key, detach the ignition key from ignition switch and wait for approx. 1 second until security indicator light begins to flash. And then start the engine again.
- Before performing the diagnostics, obtain all keys for the vehicle from the owner.
- Do not install or register a body integrated unit already registered to another vehicle to diagnose failures or inspect functions.

General Description

IMMOBILIZER (DIAGNOSTICS)

B: PREPARATION TOOL

1. SPECIAL TOOL

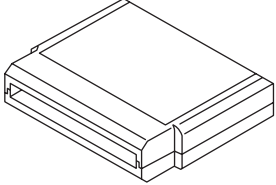
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18482AA010	18482AA010	CARTRIDGE	Troubleshooting for the electrical system.
 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.

3. Electrical Component Location

A: LOCATION

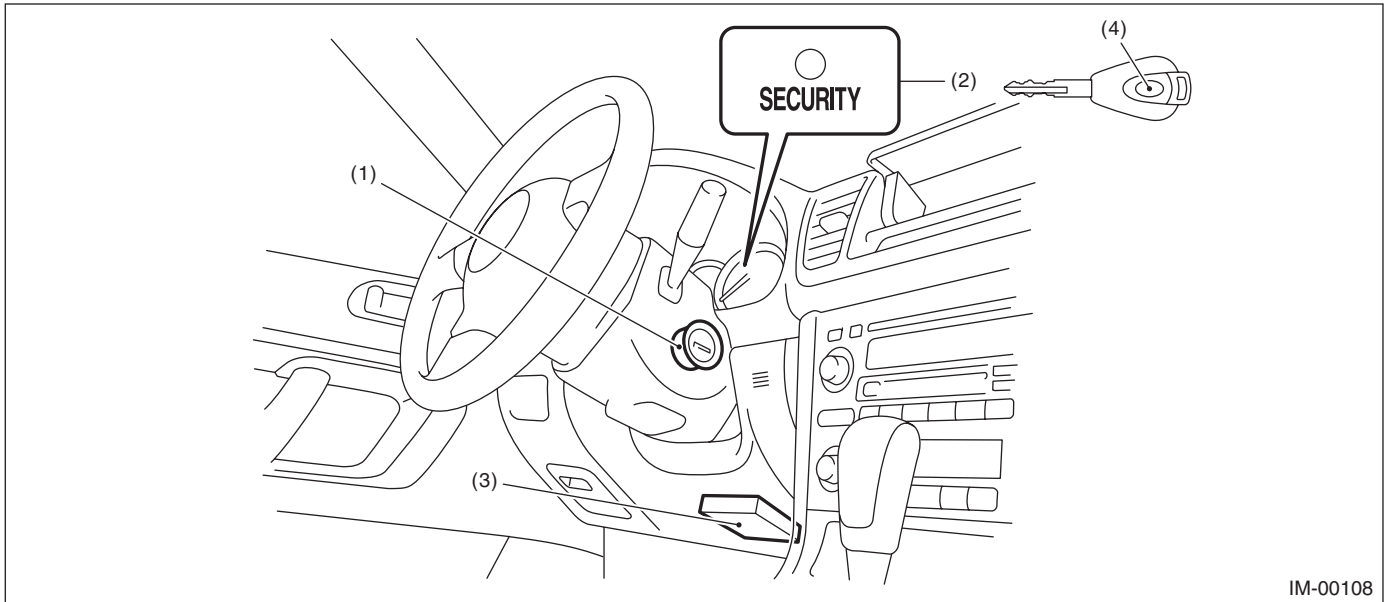

(1) Antenna

(3) Body integrated unit

(4) Transponder

(2) Security indicator light (LED bulb)

Immobilizer Control Module I/O Signal

IMMOBILIZER (DIAGNOSTICS)

4. Immobilizer Control Module I/O Signal

A: WIRING DIAGRAM

1. IMMOBILIZER

<Ref. to WI-165, WIRING DIAGRAM, Immobilizer
System.>

5. Subaru Select Monitor

A: OPERATION


1. HOW TO USE THE SUBARU SELECT MONITOR

- 1) Prepare the Subaru Select Monitor kit.




- 2) Connect the diagnosis cable to the Subaru Select Monitor.

- 3) Insert the cartridge to the Subaru Select Monitor.

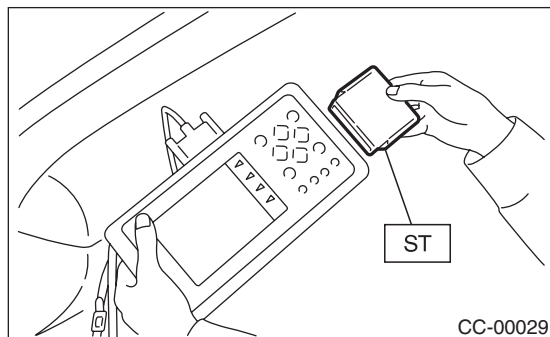

- 4) Connect the Subaru Select Monitor to the data link connector.

(1) Data link connector is located in the lower portion of the instrument panel (on the driver's side).

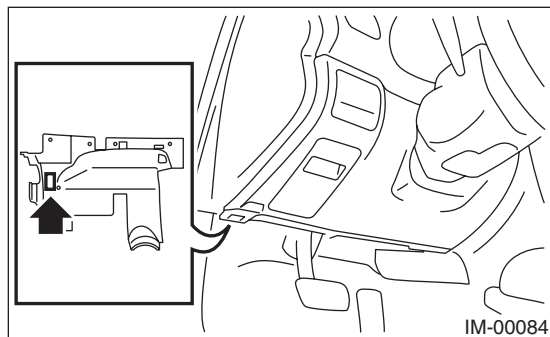


- (2) Connect the diagnosis cable to the data link connector.

CAUTION:

Do not connect the scan tools other than the Subaru Select Monitor.

- 5) Turn the ignition switch to ON (engine is OFF), and the Subaru Select Monitor switch ON.

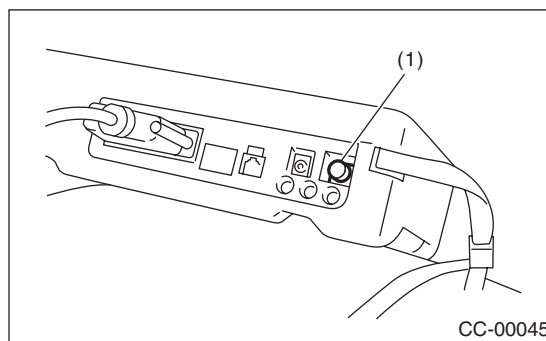

- (1) Power switch

- 6) Using the Subaru Select Monitor, call up DTCs and various data, then record them.

2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE AND BODY INTEGRATED UNIT

Refer to "Read Diagnostic Trouble Code" for information about how to indicate DTC. <Ref. to IM(diag)-8, Read Diagnostic Trouble Code (DTC).>

3. COMMUNICATION LINE CHECK

NOTE:

The communication line between ECM and body integrated unit can be checked in "System Operation Check Mode". This is referred to as "Communication line check".

- 1) Connect the Subaru Select Monitor.
- 2) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 3) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 4) Press the [YES] key after the information of engine type is displayed.
- 5) On the «Engine Diagnosis» display screen, select the {System Operation Check Mode} and press the [YES] key.
- 6) On the «System operation check mode» display, select the {security system}.
- 7) Start the communication line check.
- 8) Is «OK» displayed on screen?
If displayed, go to step 9).
If not, go to step 10).
- 9) After diagnostic results, it is determined that the circuit is not shorted. Finish the communication line check.
- 10) If a problem is detected, repair the trouble cause. <Ref. to IM(diag)-20, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. ECM

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type is displayed.
- 4) On the «Engine Diagnosis» screen, select {DTC Display}, and then press the [YES] key.
- 5) On the «Diagnostic Code(s) Display» screen, select {Current Diagnostic Code(s)} or {History Diagnostic Code(s)}, and then press the [YES] key.

NOTE:

- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.
- For detailed concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>

2. BODY INTEGRATED UNIT

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
- 3) Press the [YES] key after the {Integ. unit mode} is displayed.
- 4) On the «Integ. unit failure diag» display screen, select the {Diagnostic Code(s) Display} and press the [YES] key.

NOTE:

- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.
- For detailed concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>

7. Clear Memory Mode

A: OPERATION

1. ECM

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type is displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
- 5) When the “Done” is shown on the display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:

- After the memory has been cleared, the idle air control solenoid valve must be initialized. To execute this procedure, turn the ignition switch to ON. Wait for 3 seconds before starting the engine.
- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

2. BODY INTEGRATED UNIT

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
- 3) Press the [YES] key after the {Integ. unit mode} is displayed.
- 4) On the «Integ. unit mode failure diag» display screen, select the {Clear Memory} and press the [YES] key.
- 5) When “Done” is shown on the display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:

For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

Diagnostics Chart for Security Indicator Light

 
 

 
 

IMMOBILIZER (DIAGNOSTICS)

8. Diagnostics Chart for Security Indicator Light

A: INSPECTION

1. CHECK SECURITY INDICATOR LIGHT CIRCUIT

WIRING DIAGRAM:

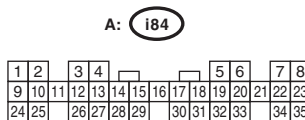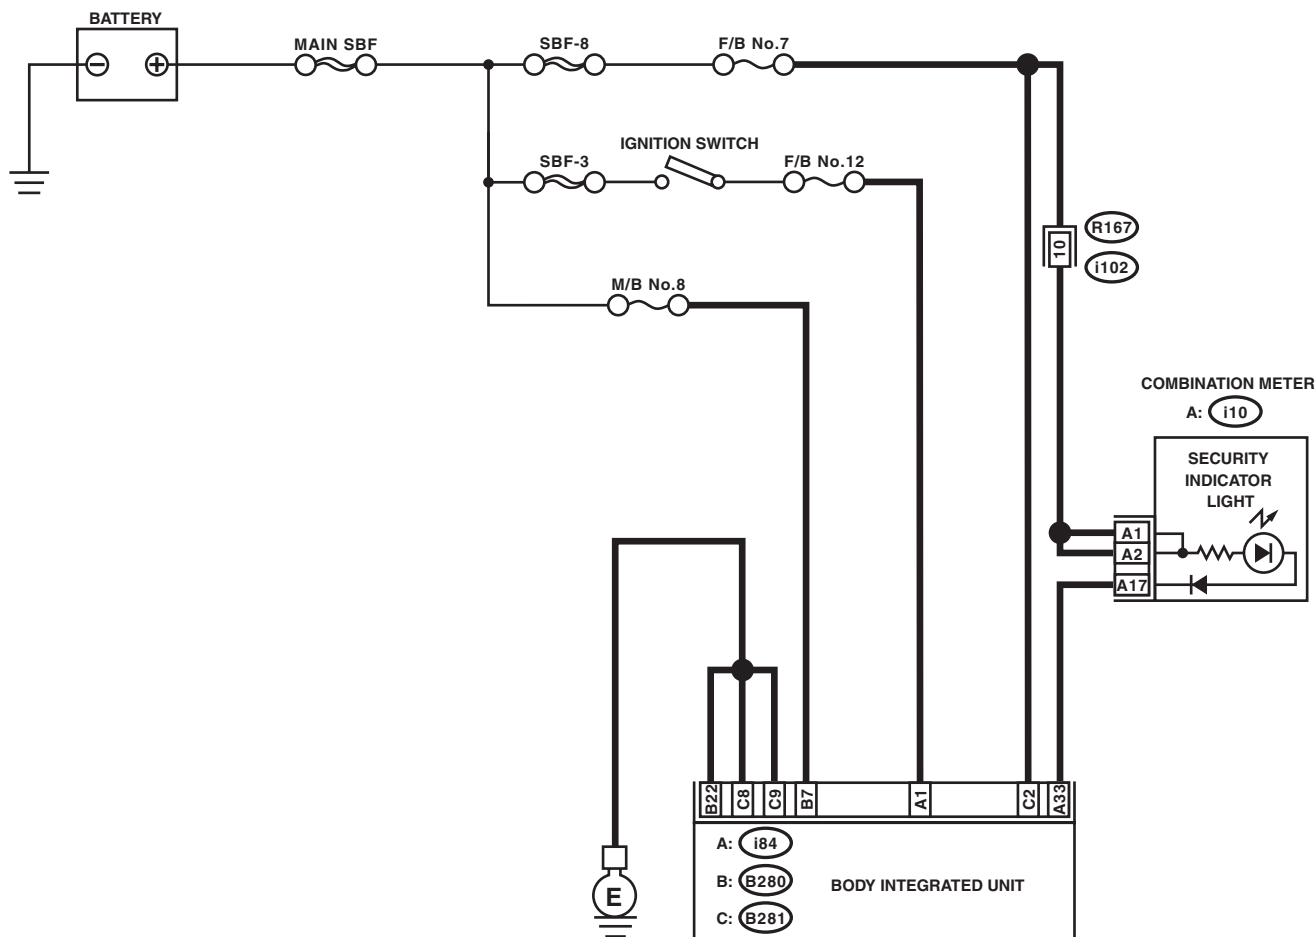

IM-00109

Diagnostics Chart for Security Indicator Light

IMMOBILIZER (DIAGNOSTICS)



Step	Check	Yes	No
1 CHECK SECURITY INDICATOR LIGHT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector from body integrated unit. 3) Connect the resistor (100 Ω) between the body integrated unit harness connector terminal (i84) No. 33 and chassis ground.	Does the security indicator light illuminate?	Go to step 2.	Go to step 5.
2 CHECK BODY INTEGRATED UNIT GROUND CIRCUIT. Measure the resistance between body integrated unit harness connector terminal and chassis ground. Connector & terminal (B280) No. 22 — Chassis ground: (B281) No. 8, No. 9 — Chassis ground:	Is the resistance less than 10 Ω?	Go to step 3.	Repair the open circuit of body integrated unit ground circuit.
3 CHECK BODY INTEGRATED UNIT IGNITION CIRCUIT. 1) Turn the ignition switch to ON. (Engine OFF) 2) Measure the voltage between body integrated unit harness connector terminal and chassis ground. Connector & terminal (i84) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 4.	Check the harness for open or short circuit between body integrated unit and ignition switch.
4 CHECK BODY INTEGRATED UNIT POWER SUPPLY CIRCUIT. 1) Turn the ignition switch to OFF. 2) Measure the voltage between body integrated unit harness connector terminal and chassis ground. Connector & terminal (B280) No. 7 (+) — Chassis ground (-): (B281) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Check the harness for open or short circuits between the body integrated unit and fuse.
5 CHECK COMBINATION METER CIRCUIT. 1) Remove the combination meter. <Ref. to IDI-14, Combination Meter.> 2) Measure the voltage between combination meter harness connector terminal and chassis ground. Connector & terminal (i10) No. 1, No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 6.	Check the harness for open or short between combination meter and fuse.
6 CHECK COMBINATION METER CIRCUIT. Measure the resistance between the body integrated unit harness connector terminal and combination meter harness connector terminal. Connector & terminal (i84) No. 33 — (i10) No. 17:	Is the resistance less than 10 Ω?	LED bulb malfunction. Replace the combination meter assembly. <Ref. to IDI-15, DISASSEMBLY, Combination Meter.>	Repair the harness or connector.

Diagnostics Chart for Security Indicator Light

IMMOBILIZER (DIAGNOSTICS)

2. CHECK KEY SWITCH CIRCUIT

 WIRING DIAGRAM:

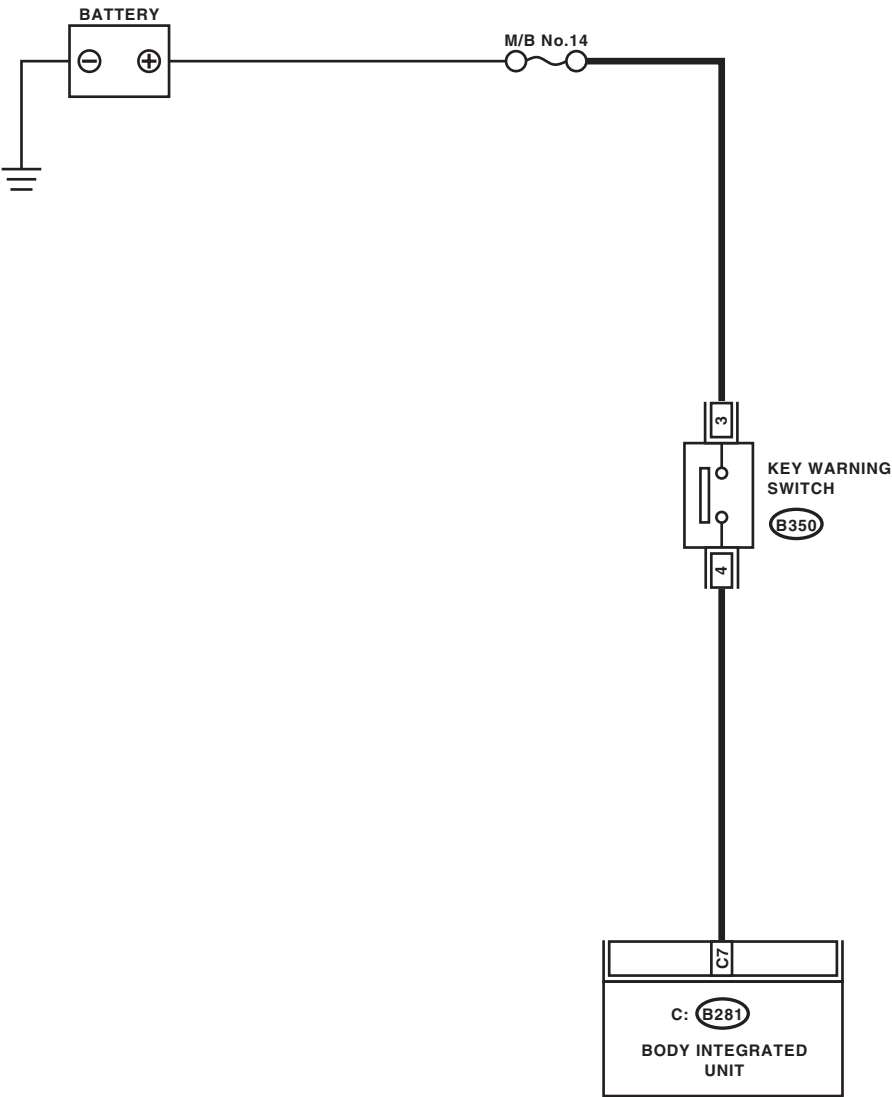

IM-00078

Diagnostics Chart for Security Indicator Light

IMMOBILIZER (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK POWER SUPPLY CIRCUIT. 1) Disconnect the harness connector from key warning switch. 2) Turn the ignition switch to "ACC" or "LOCK" (with key inserted). 3) Measure the voltage between key warning switch harness connector terminal and chassis ground. Connector & terminal (B350) No. 3 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Check the harness for an open or short between the key warning switch and fuse.
2 CHECK KEY WARNING SWITCH. 1) Insert the ignition key into the ignition switch. (OFF or ACC) 2) Measure the resistance between key warning switch connector terminals. Connector & terminal No. 3 — No. 4:	Is the resistance less than 1 Ω ?	Go to step 3.	Replace the key warning switch.
3 CHECK KEY WARNING SWITCH. 1) Remove the ignition key from the ignition switch. 2) Measure the resistance between key warning switch connector terminals. Connector & terminal No. 3 — No. 4:	Is the resistance more than 1 M Ω ?	Go to step 4.	Replace the key warning switch.
4 CHECK HARNESS BETWEEN KEY WARNING SWITCH AND BODY INTEGRATED UNIT. 1) Disconnect the harness connector from key warning switch. 2) Disconnect the harness connector from body integrated unit. 3) Measure the resistance between key warning switch harness connector terminal and body integrated unit harness connector terminal. Connector & terminal (B350) No. 4 — (B281) No. 7:	Is the resistance less than 10 Ω ?	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Repair the harness between key warning switch and body integrated unit.

List of Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

9. List of Diagnostic Trouble Code (DTC)

A: LIST

1. ECM

DTC	Item	Contents of diagnosis	Index No.
P0513	Incorrect Immobilizer Key	Incorrect immobilizer key (Use of unregistered key in body integrated unit)	<Ref. to IM(diag)-16, DTC P0513 INCORRECT IMMOBILIZER KEY, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1570	Antenna	Faulty antenna	<Ref. to IM(diag)-17, DTC P1570 ANTENNA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1571	Reference Code Incompatibility	Reference code incompatibility between body integrated unit and ECM	<Ref. to IM(diag)-19, DTC P1571 REFERENCE CODE INCOMPATIBILITY, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1572	EGI — Immobilizer Communication (Excluding Antenna Circuit)	Communication failure between body integrated unit and ECM	<Ref. to IM(diag)-20, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1574	Key — Immobilizer Communication	Failure of body integrated unit to verify key (transponder) ID code	<Ref. to IM(diag)-22, DTC P1574 KEY COMMUNICATION FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1576	EGI Control Module EEPROM	ECM malfunctioning	<Ref. to IM(diag)-23, DTC P1576 EGI CONTROL MODULE EEPROM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1577	IMM Control Module EEPROM	Body integrated unit malfunctioning	<Ref. to IM(diag)-24, DTC P1577 IMM CONTROL MODULE EEPROM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1578	Meter Failure	Reference code incompatibility between body integrated unit and combination meter	<Ref. to IM(diag)-24, DTC P1578 METER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

NOTE:

Perform diagnosis of engine DTC when a DTC other than an immobilizer DTC is detected. <Ref. to EN(H4DOTC)(diag)-68, List of Diagnostic Trouble Code (DTC).> <Ref. to EN(H6DO) (diag)-70, List of Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

2. BODY INTEGRATED UNIT

DTC	Item	Contents of diagnosis	Index No.	Relation between ECM and DTC
B0401	M Collation NG	Reference code incompatibility between body integrated unit and combination meter	<Ref. to IM(diag)-24, DTC P1578 METER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	P1578
B0402	Immobilizer Key Collation NG	- Incorrect immobilizer key (Use of unregistered key in body integrated unit) - Faulty antenna	<Ref. to IM(diag)-16, DTC P0513 INCORRECT IMMOBILIZER KEY, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> <Ref. to IM(diag)-17, DTC P1570 ANTENNA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> or <Ref. to IM(diag)-22, DTC P1574 KEY COMMUNICATION FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	- P0513 - P1570 - P1574
B0403	E/G Request NG	Communication failure between body integrated unit and ECM	<Ref. to IM(diag)-20, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	P1572

NOTE:

- In immobilizer system, performing the starter relay control. When the body integrated unit detect the inconformity of reference code, immediately out put the starter relay cut signal to ECM, and then ECM stop the starter relay operation. In this case, engine does not start, and DTC is not recorded in ECM. Check that the engine does not start on the DTC of body integrated unit.
- DTC B0401 and B0402 are recorded as freeze frame data when the ignition switch becomes OFF. Therefore, if the engine is attempted to be started with an immobilizer key that is not registered, the DTC will not appear in the Subaru Select Monitor immediately. Turn the ignition switch to OFF, and turn it back to ON to check the DTC. At this time (when turning the ignition switch to ON again), note that the DTC is displayed as freeze frame data even when using a registered immobilizer key.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

10. Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC P0513 INCORRECT IMMOBILIZER KEY

DTC DETECTING CONDITION:

Incorrect immobilizer key (Use of unregistered key in body integrated unit)


Step		Check	Yes	No
1	PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	END	Replace ignition keys (including transponder) which cannot be registered. Go to step 2.
2	PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	END	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

B: DTC P1570 ANTENNA

DTC DETECTING CONDITION:

Faulty antenna

WIRING DIAGRAM:

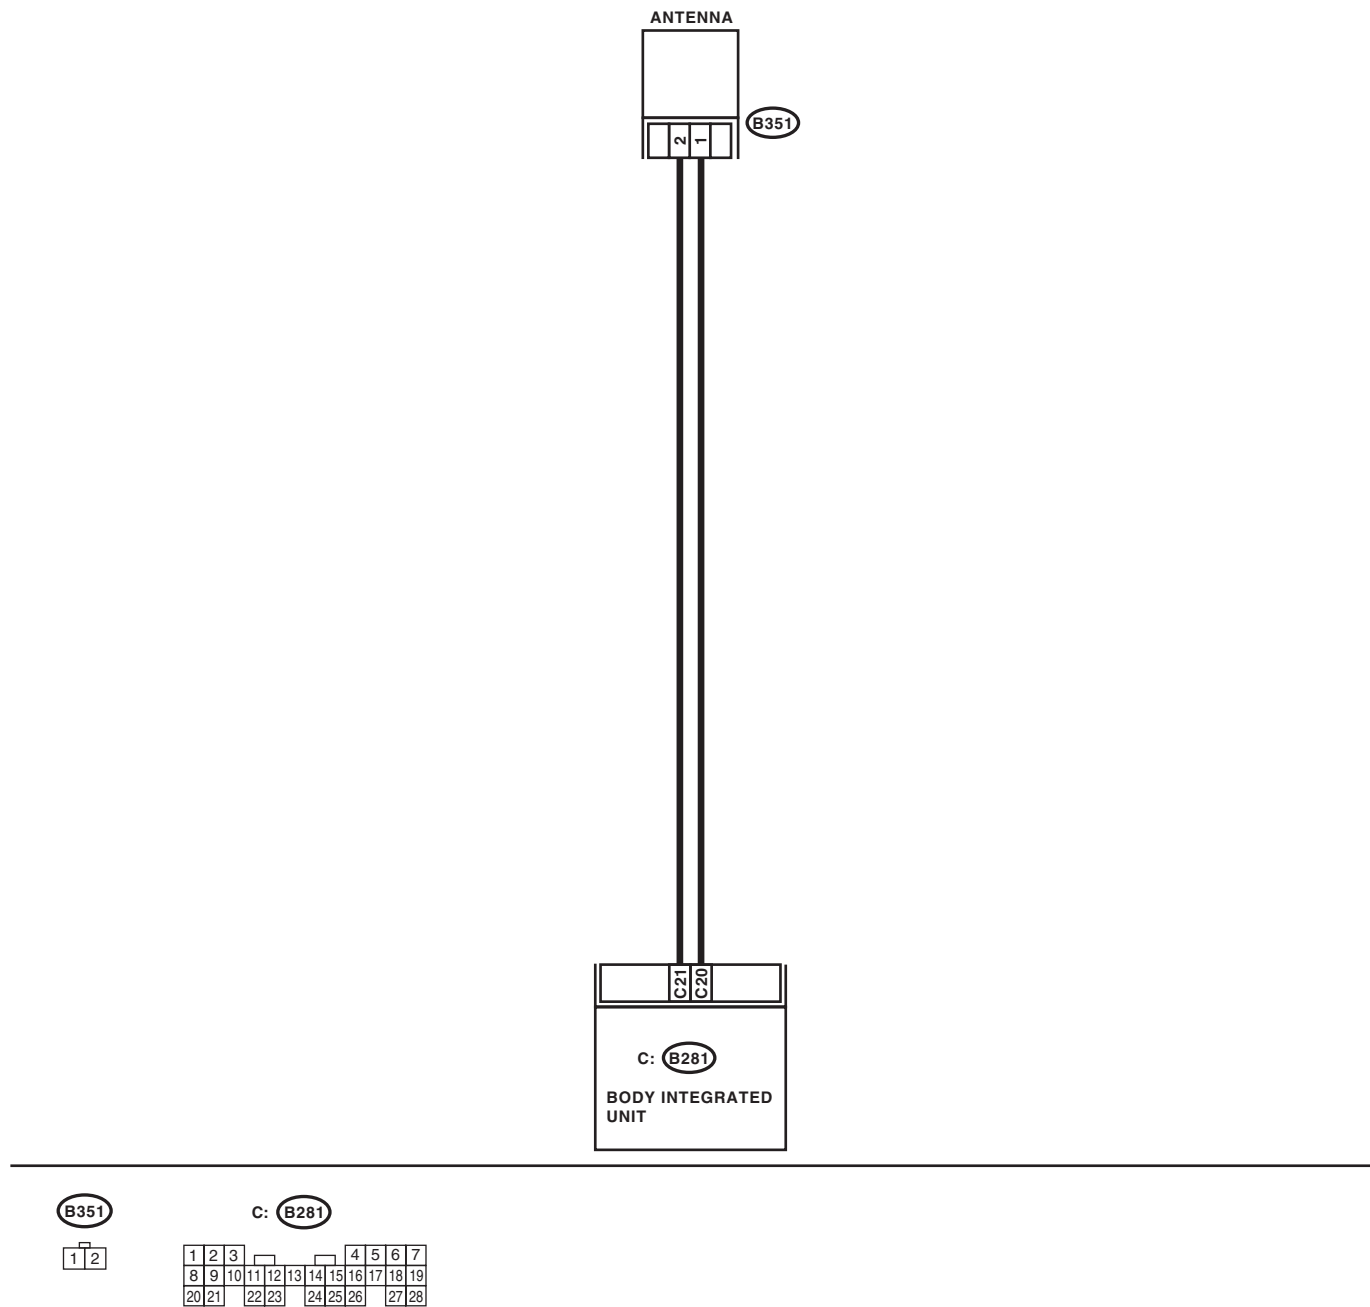

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK ANTENNA CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector from the antenna. <Ref. to SL-58, Immobilizer Antenna.> 3) Measure the resistance of the antenna circuit. Connector & terminal (B351) No. 1 — No. 2:	Is the resistance less than 10 Ω ?	Go to step 2.	Replace the antenna. <Ref. to SL-58, Immobilizer Antenna.>
2 CHECK ANTENNA CIRCUIT. 1) Disconnect the harness connector from body integrated unit. 2) Measure the resistance between harness connector and chassis ground. Connector & terminal (B281) No. 21 — Chassis ground:	Is the resistance less than 10 Ω ?	Repair the harness.	Go to step 3.
3 CHECK ANTENNA CIRCUIT. Measure the resistance between harness connector and chassis ground. Connector & terminal (B281) No. 20 — Chassis ground:	Is the resistance less than 10 Ω ?	Repair the harness.	Go to step 4.
4 CHECK ANTENNA CIRCUIT. 1) Turn the ignition switch to ON. (engine OFF) 2) Measure the voltage between harness connector and chassis ground. Connector & terminal (B281) No. 21 (+) — Chassis ground (-):	Is the voltage 0 V?	Go to step 5.	Repair the harness.
5 CHECK ANTENNA CIRCUIT. Measure the voltage between harness connector and chassis ground. Connector & terminal (B281) No. 20 (+) — Chassis ground (-):	Is the voltage 0 V?	Go to step 6.	Repair the harness between body integrated unit and antenna, because there is short circuit with battery voltage line or ignition switch "ON" line.
6 CHECK BODY INTEGRATED UNIT FUNCTION. 1) Turn the ignition switch to OFF. 2) Connect the harness connector to body integrated unit. 3) Insert the key into the ignition switch, then measure changes in voltage between the antenna harness connectors. Connector & terminal (B281) No. 20 (+) — No. 21 (-):	Is the voltage -30 to 30 V? (Approx. 0.1 second after inserting the key) Is the voltage 0 V? (Approx. 1 second after inserting the key)	Go to step 7.	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK IGNITION KEY (TRANSPONDER). 1) Remove the key from ignition switch. 2) Start the engine using other key which is already registered.	Does the engine start?	Replace the ignition key (including the transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

C: DTC P1571 REFERENCE CODE INCOMPATIBILITY

DTC DETECTING CONDITION:

Reference code incompatibility between body integrated unit and ECM

Step	Check	Yes	No
1 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	END	Go to step 2.
2 CHECK ANY OTHER DTC ON DISPLAY.	Is any other immobilizer DTC displayed?	Check the appropriate DTC using the "List of Diagnostic Trouble Code (DTC)". Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER". <Ref. to IM(diag)-14, List of Diagnostic Trouble Code (DTC).>	Replace the ECM. <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).> Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

Diagnostic Procedure with Diagnostic Trouble Code (DTC)


IMMOBILIZER (DIAGNOSTICS)

D: DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT)

DTC DETECTING CONDITION:

Communication failure between body integrated unit and ECM

WIRING DIAGRAM:

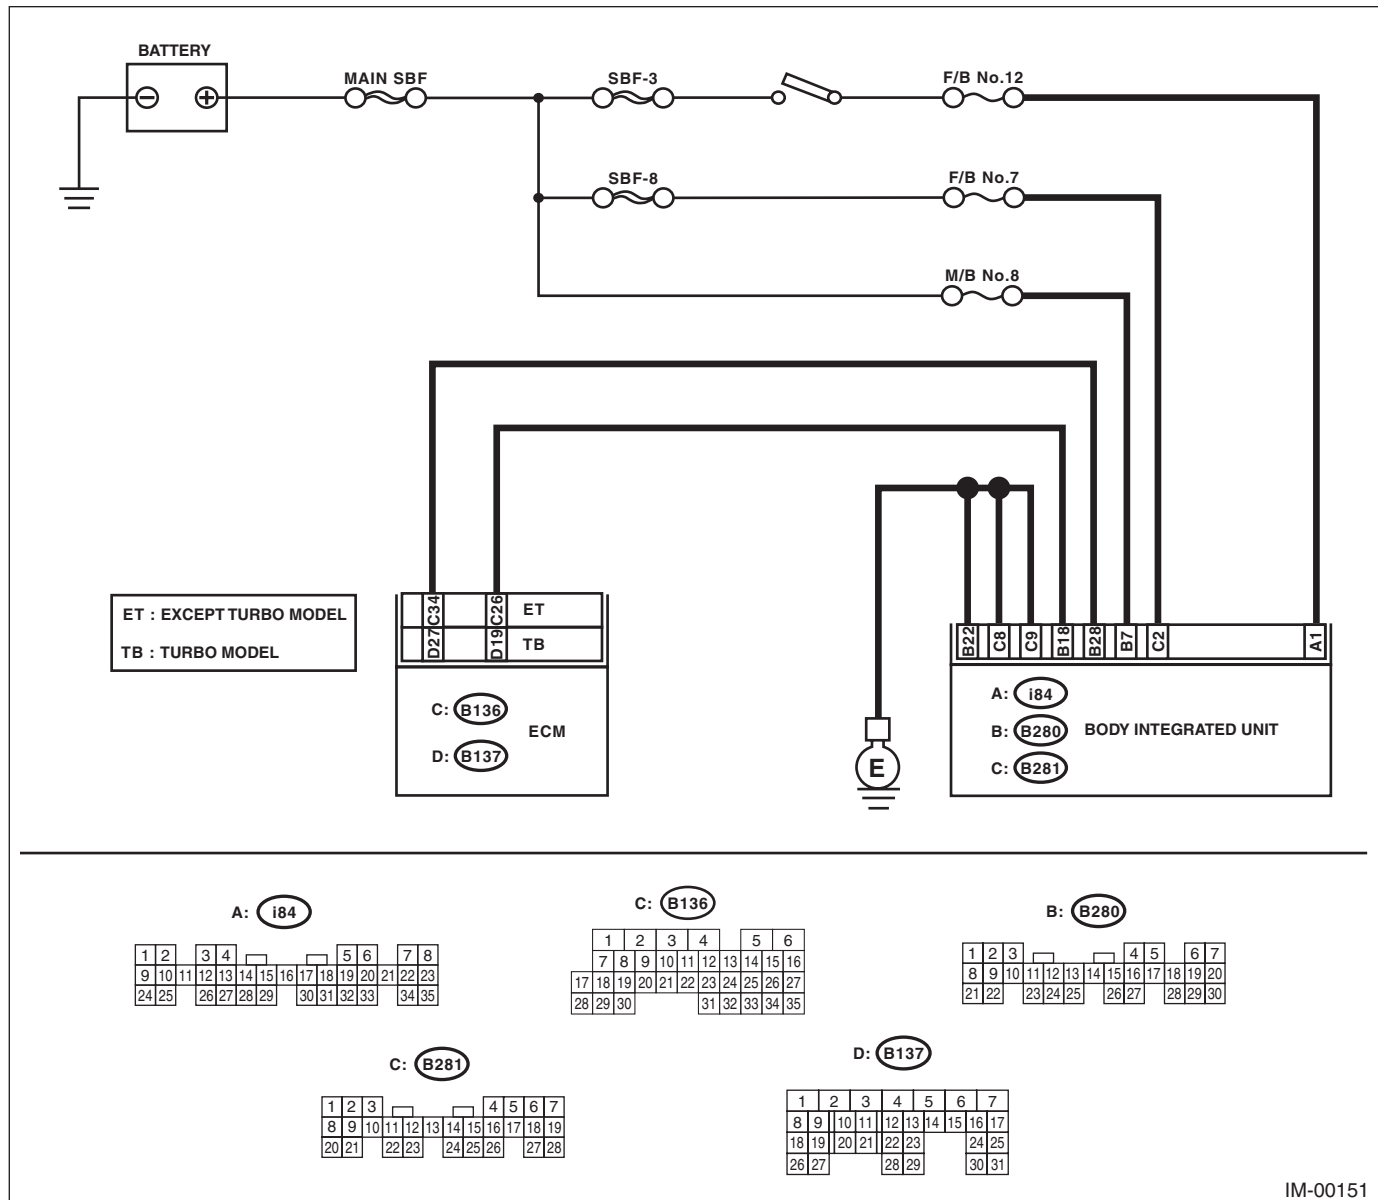

IM-00151

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK BODY INTEGRATED UNIT POWER SUPPLY CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector from body integrated unit. 3) Measure the voltage between body integrated unit harness connector terminal and chassis ground. Connector & terminal (B280) No. 7 (+) — Chassis ground (-): (B281) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Check the harness for open or short circuits between the body integrated unit and fuse.
2 CHECK BODY INTEGRATED UNIT POWER SUPPLY CIRCUIT. 1) Turn the ignition switch to ON. (Engine OFF) 2) Measure the voltage between body integrated unit harness connector terminal and chassis ground. Connector & terminal (i84) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open or short circuit between body integrated unit and ignition switch.
3 CHECK BODY INTEGRATED UNIT GROUND CIRCUIT. 1) Turn the ignition switch to OFF. 2) Measure the resistance between body integrated unit harness connector terminal and chassis ground. Connector & terminal (B280) No. 22 — Chassis ground: (B281) No. 8, No. 9 — Chassis ground:	Is the resistance less than 10 Ω ?	Go to step 4.	Repair the open circuit of body integrated unit ground circuit.
4 CHECK HARNESS BETWEEN BODY INTEGRATED UNIT AND ECM. 1) Disconnect the harness connector from body integrated unit and ECM. 2) Measure the resistance between body integrated unit harness connector terminal and ECM harness connector terminal. Connector & terminal Turbo model (B280) No. 18 — (B137) No. 19: Excluding turbo models (B280) No. 18 — (B136) No. 26:	Is resistance less than 10 Ω ?	Go to step 5.	Repair the open circuit of harness between body integrated unit and ECM.
5 CHECK HARNESS BETWEEN BODY INTEGRATED UNIT AND ECM. Measure the resistance between body integrated unit harness connector terminal and ECM harness connector terminal. Connector & terminal Turbo model (B280) No. 28 — (B137) No. 27: Excluding turbo models (B280) No. 28 — (B136) No. 34:	Is resistance less than 10 Ω ?	Go to step 6.	Repair the open circuit of harness between body integrated unit and ECM.
6 CHECK HARNESS OF COMMUNICATION LINE. 1) Turn the ignition switch to ON. (engine OFF) 2) Measure the voltage between body integrated unit harness connector terminal and chassis ground. Connector & terminal (B280) No. 18, No. 28 (+) — Chassis ground (-):	Is the voltage 0 V?	Go to step 7.	Repair the harness between body integrated unit and ECM, because there is short circuit with battery voltage line or ignition switch "ON" line.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

Step	Check	Yes	No
7 CHECK HARNESS OF COMMUNICATION LINE. Measure voltage between the ECM harness connector terminal and engine ground. Connector & terminal Turbo model (B137) No. 19, No. 27 (+) — Engine ground (-): Excluding turbo models (B136) No. 26, No. 34 (+) — Engine ground (-):	Is the voltage 0 V?	Go to step 8.	Repair the harness between body integrated unit and ECM, because there is short circuit with battery voltage line or ignition switch "ON" line.
8 CHECK ECM BY COMMUNICATION LINE CHECK. 1) Connect the harness connector to ECM. 2) Disconnect the harness connector from body integrated unit. 3) Start the communication line check. <Ref. to IM(diag)-7, COMMUNICATION LINE CHECK, OPERATION, Subaru Select Monitor.>	Does "Communication Line not Shorted" appear on the screen?	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Replace the ECM. <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).> Perform the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

E: DTC P1574 KEY COMMUNICATION FAILURE

DTC DETECTING CONDITION:

Failure of body integrated unit to verify key (transponder) ID code

Step	Check	Yes	No
1 CHECK BODY INTEGRATED UNIT FUNCTION. Insert the key into the ignition switch (LOCK position), then measure changes in voltage between the antenna connectors. Connector & terminal (B142) No. 1 (+) — No. 2 (-):	Is the voltage -30 to 30 V? (Approx. 0.1 second after inserting the key) Is the voltage 0 V? (Approx. 1 second after inserting the key)	Go to step 2.	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".
2 CHECK IGNITION KEY (TRANSPONDER). 1) Remove the key from ignition switch. 2) Start the engine using other key which is already registered.	Does the engine start?	Replace the ignition key (including the transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Replace the body integrated unit <Ref. to SL-55, Body Integrated Unit.> and replace all the ignition keys (including transponder). Execute the registration procedure next. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

F: DTC P1576 EGI CONTROL MODULE EEPROM

DTC DETECTING CONDITION:

- ECM malfunctioning
- Inaccessible ROM in ECM during key registration.

Step	Check	Yes	No
1 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	Make sure it is possible to start the engine with all keys that have been taught. This completes the work.	Go to step 2.
2 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	Make sure it is possible to start the engine with all keys that have been taught. This completes the work.	<Ref. to IM(diag)-23, DTC P1576 EGI CONTROL MODULE EEPROM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
3 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	Make sure it is possible to start the engine with all keys that have been taught. This completes the work.	Replace the ECM. <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

G: DTC P1577 IMM CONTROL MODULE EEPROM

DTC DETECTING CONDITION:

- Body integrated unit malfunctioning
- Failed to access the ROM inside the body integrated unit.

Step	Check	Yes	No
1 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	Make sure it is possible to start the engine with all keys that have been taught. This completes the work.	Go to step 2.
2 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	Make sure it is possible to start the engine with all keys that have been taught. This completes the work.	<Ref. to IM(diag)-24, DTC P1577 IMM CONTROL MODULE EEPROM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
3 PERFORM REGISTRATION ON IGNITION KEY. Perform registration on all keys of the vehicle. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".	Is registration for all keys complete?	Make sure it is possible to start the engine with all keys that have been taught. This completes the work.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>

H: DTC P1578 METER FAILURE

DTC DETECTING CONDITION:

Reference code incompatibility between body integrated unit and combination meter

1. CHECK LAN COMMUNICATION SYSTEM.

Inspect the LAN communication system in the following cases. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>

- DTC of body integrated unit B0300, B0301, B0302, B0111 or B0321 is displayed.
- "Er IU" or "Er LC" is displayed in combination meter odometer/trip meter.

2. REPLACE COMBINATION METER.

Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>Next, perform the registration procedure for all immobilizer parts (combination meter and etc.). Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

NOTE:

When the combination meter has been replaced, be sure to perform the registration procedure of immobilizer.

LAN SYSTEM (DIAGNOSTICS)

LAN(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	5
4. Electrical Component Location	7
5. Control Module I/O Signal	9
6. Subaru Select Monitor	12
7. Read Diagnostic Trouble Code (DTC)	25
8. Clear Memory Mode	26
9. Read Current Data	27
10. Function Setting (Customize)	28
11. List of Diagnostic Trouble Code (DTC)	29
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	32
13. General Diagnostic Table	85

General Description

INSTRUMENTATION/DRIVER INFO

1. General Description

A: SPECIFICATION

Combination meter	Speedometer	Stepping motor type
	Tachometer	
	Engine coolant temperature gauge	
	Fuel gauge	
	Malfunction indicator light	LED
	Oil pressure warning light	
	ABS warning light	
	Airbag warning light	
	Seat belt warning light	
	Door open warning light	
	Brake fluid and parking brake warning light	
	Low fuel warning light	
	Charge warning light	
	AT OIL TEMP warning light	
	AWD warning light	
	Tire pressure warning light	
	Vehicle dynamics control (VDC) warning light	
	Vehicle dynamics control (VDC) indicator light	
	Turn signal indicator light	
	HI-beam indicator light	
	Security indicator light	
	Cruise indicator light	
	Cruise set indicator light	
	Front fog light indicator light	
	SPORT indicator light	
	AT select lever position indicator light	
	Light illumination indicator light	
	Meter illumination light	
	LCD back light	
	Odo/Trip indicator	LCD
	SPORT shift indicator	

B: CAUTION

- Be careful not to damage the meters and instrument panel.
- Be careful not to damage the meter glass.
- Make sure electrical connectors are connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on glass surfaces and meter surfaces.
- Do not apply an excessive force on the printed circuit.
- Do not drop or otherwise apply impact.
- When the combination meter of model with immobilizer has been replaced, be sure to perform the registration of immobilizer.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.

2. Combination Meter System

A: WIRING DIAGRAM

1. COMBINATION METER

<Ref. to WI-150, WIRING DIAGRAM, Combination Meter System.>

B: INSPECTION

1. SELF-DIAGNOSIS

The self-diagnosis (checking of each meter, warning light, indicator, illumination, LCD, buzzer sound) of combination meter can be performed in the following procedure.

- 1) Turn the ignition switch to ON while turning the small light to OFF.
- 2) Turn the small light switch to ON within 3 seconds after step 1), then press the odometer/tripmeter knob three times.
- 3) Turn the small light switch to OFF, and press the odometer/trip knob three times.
- 4) Turn the small light switch to ON, and press the odometer/trip knob three times.

NOTE:

- Perform the steps described in 2) and 4) within 10 seconds after the ignition switch is turned to ON.
- When pressing the odometer/trip meter knob four times, the display changes to DTC display mode (ECM, TCM, ABSCM/VDCCM). <Ref. to IDI-11, DTC DISPLAY MODE, INSPECTION, Combination Meter System.>When the self-diagnosis function operates, the warning light, indicator, and LCD display checks are performed. After this, operation checks are performed in the order of meter, illumination, and buzzer for each press of the odometer/trip meter knob button. <Ref. to IDI-4, LIST OF SELF-DIAGNOSIS MODE OPERATION, INSPECTION, Combination Meter System.> Turn the ignition switch to OFF to cancel the self-diagnosis function.
- When the engine starts during diagnosis, the self-diagnosis function is not cancelled, however, once the vehicle starts driving, the self-diagnosis function is cancelled automatically for safety.

Combination Meter System

INSTRUMENTATION/DRIVER INFO

2. LIST OF SELF-DIAGNOSIS MODE OPERATION

Speedometer, tachometer, fuel gauge, engine coolant temperature gauge	Microcomputer running type warning light, indicator light	AT select lever position indicator light	Odo/Trip indicator	SPORT shift indicator	Illumination (indicator needle, plate, ring, LCD)	Buzzer (SPORT shift buzzer)
Step 0. Processing to self-diagnosis function						
Operating initial operation	Initial illuminating	Normal	Normal	Initial illuminating	Initial illuminating	Not beep.
Step 1-1. Check each indication after initial operation						
Repeat the sweep operation (After holding on lowest position for one second, reaches to highest position within 5 seconds, and after holding on highest position for one second, reaches to lowest position within 5 seconds).	Light ON	With the highest brightness, illuminate the position sequentially at a cycle of 1.5 seconds.	Perform the segment check. For the illumination order, refer to the illumination order table.	Perform the segment check. For the illumination order, refer to the illumination order table.	Light at the highest brightness.	Not beep.
Step 1-2. Press the trip knob (trip knob input is not accepted till the meter indicator needle reaches the highest position): sweep complete, AT select lever position indicator display is set						
After completing sweep in step 1-1, back to lowest position.	Light ON	Keep the position indicated when the trip knob is pressed.	Underbar “_” is displayed.	“1” is displayed.	Light at the highest brightness.	Not beep.
Step 2-1. Press the trip knob, and hold it: Check each meter						
All meters are moved simultaneously in every 0.5 sec. from the lowest position to highest position. Speedometer/ Tachometer: Approx. 5 degrees at every movement. Water temperature /Fuel gauge: Moves approx. 2 degrees at a time.	Light OFF	Keep the position indicated that set in step 1-2.	Display the current meter directing angle on odometer. Ex.) When the speedometer/tachometer: 135 degrees and water temperature gauge/fuel gauge: 54 degrees, displays “135054”.	“▼2” is displayed.	Light at the highest brightness.	Not beep.
Step 2-2. Release the trip knob: Specifying the meter directing position						
Stop at directing position when the trip knob is released.	Light OFF	Keep the position indicated that set in step 1-2.	Display the current meter directing angle on odometer.	“2” is displayed.	Light at the highest brightness.	Not beep.

Combination Meter System

INSTRUMENTATION/DRIVER INFO

Speedometer, tachometer, fuel gauge, engine coolant temperature gauge	Microcomputer running type warning light, indicator light	AT select lever position indicator light	Odo/Trip indicator	SPORT shift indicator	Illumination (indicator needle, plate, ring, LCD)	Buzzer (SPORT shift buzzer)
Step 3-1. Press the trip knob, and hold it: Check illumination						
Keep the position that specified at step 2-2.	Light OFF	Varying from the highest brightness (ILL6) to the lowest luminescence (ILL1) every second. After reaching at ILL1, repeat it from ILL6.	Illumination brightness is displayed. (From ILL6 to ILL1)	“▼ 3” is displayed.	Varying from the highest brightness (ILL6) to the lowest luminescence (ILL1) every second. After reaching at ILL1, repeat it from ILL6.	Not beep.
Step 3-2. Release the trip knob: Specifying the illumination brightness						
Keep the position that specified at step 2-2.	Light OFF	Keep the brightness at the time when the trip knob is released.	Displays the brightness level at the time when the trip knob was released.	“3” is displayed.	Keep the brightness at the time when the trip knob is released.	Not beep.
Step 4-1. Press the trip knob: Check the beeping of SPORT shift buzzer (For AT model)						
All meter indicator needle returns to lowest position.	Light OFF	Light at the highest brightness. Keep the position indicated that set in step 1-2.	Illumination brightness is displayed.	“▲▼ 8” is displayed. Blinks with buzzer.	Light at the highest brightness.	SPORT shift buzzer beeps.
Step 4-2. Press the trip knob: Check the VDC indicator light (Model with VDC)						
All meter indicator needle returns to lowest position.	VDC warning light and VDC operation indicator light blink.	Light at the highest brightness. Keep the position indicated that set in step 1-2.	Illumination brightness is displayed.	“4” is displayed.	Light at the highest brightness.	Not beep.
Step5. Press the trip knob: Complete the self-diagnosis 1 cycle						
All meter indicator needle returns to lowest position, and go back to step 1 after completion.						

• Illuminating order table

Illuminating order	1	2	3	4	5	6	7	8	9	10	11	Go back to 1 and repeat
Trip meter A/B	AB	A	B	A	B	A	B	A	B	A	B	
Odo/trip meter	8888.8 888888	00000 000000	1111.1 111111	22222 222222	3333.3 333333	44444 444444	5555.5 555555	66666 666666	7777.7 777777	88888 888888	9999.9 999999	
SPORT shift indicator	8	1	2	3	4	5	1	2	3	4	5	
												
AT select lever position indicator	P	P	R	R	R	N	N	N	D	D	D	
Display time (sec.)	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	

Combination Meter System

INSTRUMENTATION/DRIVER INFO

3. SYMPTOM CHART

Symptom	Repair order	Reference
Combination meter assembly does not operate.	1. Power supply 2. Ground circuit 3. Combination meter	<Ref. to IDI-7, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Combination Meter System.>
Speedometer does not operate.	1. ABSCM or VDCCM 2. Harness 3. Combination meter	<Ref. to IDI-7, CHECK ABSCM OR VDCCM, INSPECTION, Combination Meter System.>
Tachometer does not operate.	1. ECM 2. Harness 3. Combination meter	<Ref. to IDI-7, CHECK ENGINE CONTROL MODULE (ECM), INSPECTION, Combination Meter System.>
Fuel gauge does not operate.	1. Communication circuit 2. Fuel level sensor 3. Harness 4. Combination meter	<Ref. to IDI-9, CHECK FUEL LEVEL SENSOR, INSPECTION, Combination Meter System.>
Engine coolant temperature gauge does not operate.	1. Communication circuit 2. Engine coolant temperature sensor 3. Harness 4. Combination meter	<Ref. to IDI-10, CHECK ENGINE COOLANT TEMPERATURE SENSOR., INSPECTION, Combination Meter System.>
Error display is shown on the odo/trip meter.	Communication circuit	<Ref. to IDI-10, COMMUNICATION ERROR DISPLAY, INSPECTION, Combination Meter System.>

CAUTION:

When measuring the voltage and resistance of each control module or sensor, use a tapered pin with a diameter of less than 0.64 mm (0.025 in) in order to avoid poor contact. Do not insert the pin more than 2 mm (0.08 in).

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Step	Check	Yes	No
1 CHECK POWER SUPPLY FOR COMBINATION METER. 1) Remove the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.> 2) Disconnect the combination meter harness connector. 3) Turn the ignition switch to ON. 4) Measure the voltage between combination meter connector and chassis ground. Connector & terminal (i10) No. 3, 4 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Check the harness for open or short between the ignition switch and combination meter.
2 CHECK POWER SUPPLY FOR COMBINATION METER. Measure the voltage between combination meter connector and chassis ground. Connector & terminal (i10) No. 1, 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open or short between the fuse and combination meter.
3 CHECK GROUND CIRCUIT OF COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Measure the resistance of harness between combination meter connector and chassis ground. Connector & terminal (i10) No. 11, 12 — Chassis ground:	Is the resistance less than 10 Ω ?	Replace the meter case assembly.	Repair the wiring harness.

5. CHECK ABSCM OR VDCCM

Step	Check	Yes	No
1 CHECK VEHICLE SPEED SIGNAL. 1) Lift up the vehicle and support it with rigid racks. 2) Drive the vehicle faster than 10 km/h (6 MPH). WARNING: Be careful not to get caught in the running wheels. 3) Measure the voltage between combination meter connector and chassis ground. Connector & terminal (i10) No. 19 (+) — Chassis ground (-):	Is the voltage less than 1 V $\longleftrightarrow$ 5 V or more?	Replace the meter case assembly.	Go to step 2.
2 CHECK HARNESS BETWEEN ABSCM OR VDCCM AND COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ABSCM or VDCCM and combination meter. 3) Measure the resistance between ABSCM or VDCCM harness connectors and the combination meter harness connector. Connector & terminal Model without VDC (B301) No. 23 — (i10) No. 19: Model with VDC (B310) No. 36 — (i10) No. 19:	Is the resistance less than 10 Ω ?	Model without VDC: Check the ABSCM. <Ref. to ABS(diag)-2, Basic Diagnostic Procedure.> Model with VDC: CHECK THE VDCCM. <Ref. to VDC(diag)-2, Basic Diagnostic Procedure.>	Repair the wiring harness.

6. CHECK ENGINE CONTROL MODULE (ECM)

Combination Meter System

INSTRUMENTATION/DRIVER INFO

Step	Check	Yes	No
1 CHECK ECM SIGNAL. 1) Start the engine. 2) Measure the voltage between ECM connector and chassis ground. Connector & terminal (B134) No. 23 (+) — Chassis ground (-):	Is the voltage 0 $\longleftrightarrow$ 14 V or more?	Go to step 2.	Inspect the ECM. <Ref. to EN(H4SO)(diag)-2, Basic Diagnostic Procedure.> <Ref. to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.> <Ref. to EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>
2 CHECK HARNESS BETWEEN COMBINATION METER AND ECM. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM and combination meter. 3) Measure the resistance between ECM harness connector and combination meter harness connector. Connector & terminal (B134) No. 23 — (i10) No. 20:	Is the resistance less than 10 Ω ?	Replace the meter case assembly.	Repair the wiring harness.

7. CHECK FUEL LEVEL SENSOR

Step	Check	Yes	No
1 CHECK COMMUNICATION ERROR DISPLAY. 1) Turn the ignition switch to ON. 2) Check that the error code is displayed in odo/trip meter.	Is the error code "Er xx" displayed on odo/trip meter?	Check the communication circuit. <Ref. to IDI-10, COMMUNICATION ERROR DISPLAY, INSPECTION, Combination Meter System.>	Go to step 2.
2 CHECK FUEL LEVEL SENSOR. 1) Remove the fuel level sensor. <Ref. to FU(H4SO)-52, REMOVAL, Fuel Level Sensor.> <Ref. to FU(H4DOTC)-55, REMOVAL, Fuel Level Sensor.> <Ref. to FU(H6DO)-51, REMOVAL, Fuel Level Sensor.> 2) Measure the resistance between fuel level sensor terminals when the float is in FULL or EMPTY position. Terminals No. 1 — No. 4:	Is the resistance 1.0 to 3.0 Ω (FULL) and 31 to 33 Ω (EMPTY)?	Go to step 3.	Replace the fuel level sensor.
3 CHECK FUEL SUB LEVEL SENSOR. 1) Remove the fuel sub level sensor. <Ref. to FU(H4SO)-53, REMOVAL, Fuel Sub Level Sensor.> <Ref. to FU(H4DOTC)-56, REMOVAL, Fuel Sub Level Sensor.> <Ref. to FU(H6DO)-52, REMOVAL, Fuel Sub Level Sensor.> 2) Measure the resistance between fuel sub level sensor terminals when the float is in FULL or EMPTY position. Terminals No. 1 — No. 2:	Is the resistance 1.0 to 3.0 Ω (FULL) and 61 to 63 Ω (EMPTY)?	Go to step 4.	Replace the fuel sub level sensor.
4 CHECK HARNESS BETWEEN FUEL SUB-LEVEL SENSOR AND BODY INTEGRATED UNIT. 1) Disconnect the connector from body integrated unit. 2) Measure the resistance between fuel sub level sensor harness connector terminal and body integrated unit harness connector terminal. Connector & terminal (R59) No. 1 — (B281) No. 19:	Is the resistance less than 10 Ω ?	Go to step 5.	Repair the wiring harness.
5 CHECK HARNESS BETWEEN FUEL LEVEL SENSOR AND FUEL SUB LEVEL SENSOR. Measure the resistance between fuel level sensor harness connector terminal and fuel sub level sensor harness connector terminal. Connector & terminal (R58) No. 1 — (R59) No. 2:	Is the resistance less than 10 Ω ?	Go to step 6.	Repair the wiring harness.
6 CHECK FUEL LEVEL SENSOR GROUND CIRCUIT. Measure the resistance between fuel level sensor harness connector terminal and chassis ground. Connector & terminal (R58) No. 4 — Chassis ground:	Is the resistance less than 10 Ω ?	Replace the meter case assembly.	Repair the wiring harness.

Combination Meter System


INSTRUMENTATION/DRIVER INFO

8. CHECK ENGINE COOLANT TEMPERATURE SENSOR.

Step	Check	Yes	No
1 CHECK COMMUNICATION ERROR DISPLAY. 1) Turn the ignition switch to ON. 2) Check that the error code is displayed in odo/trip meter.	Is the error code "Er xx" displayed on odo/trip meter?	Check the communication circuit. <Ref. to IDI-10, COMMUNICATION ERROR DISPLAY, INSPECTION, Combination Meter System.>	Go to step 2.
2 CHECK ENGINE COOLANT TEMPERATURE SENSOR. Check the engine coolant temperature sensor. <Ref. to EN(H4SO)(diag)-2, Basic Diagnostic Procedure.> <Ref. to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.> <Ref. to EN(H6DO) (diag)-2, Basic Diagnostic Procedure.>	Is the engine coolant temperature sensor OK?	Replace the meter case assembly.	Replace the engine coolant temperature sensor.

9. COMMUNICATION ERROR DISPLAY

When the following error code is displayed in the odo/trip meter, inspect the communication circuit since the communication malfunction is generated between each control module. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>

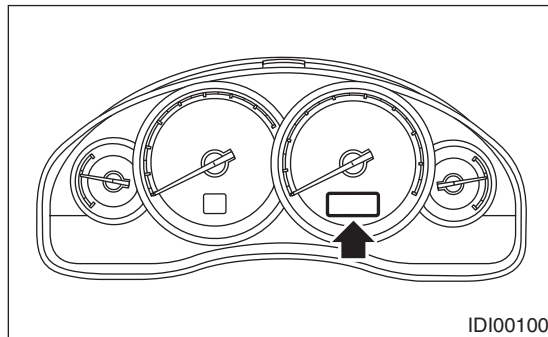

Error code	Remarks
Er IU	Malfunction in integrated module
Er —	Simultaneous malfunction of high/low speed CAN communication
Er HC	High speed CAN communication failure
Er LC	Malfunction of low-speed CAN communication
Er EG	EGI Communication failure
Er TC	TCM Communication failure
Er Ab	ABSCM/VDCCM communication malfunction
Er SP	ABSCM/VDCCM DTC information and vehicle speed pulse malfunction
Er SS	Wheel speed data malfunction

10.DTC DISPLAY MODE

When the DTC display mode operates, {ECM}, {TCM}, {ABSCM/VDCCM} is displayed cyclically in this order for every press of the trip knob. DTC is displayed in the following table according to type of control module, receiving DTC, DTC detected, No DTC. If CAN communication has some trouble, “-----” is displayed.

Control module	Condition	Display
ECM	Receiving DTC	Trip “A” + “P (Blink)”
	DTC detected	Trip “A” + “P xxxx”
	No DTC	Trip “A” + “P ----”
TCM	Receiving DTC	Trip “B” + “P (Blink)”
	DTC detected	Trip “B” + “P xxxx”
	No DTC	Trip “B” + “P ----”
ABSCM/VDCCM	Receiving DTC	Trip “A” + “C (Blink)”
	DTC detected	Trip “A” + “C xxxx”
	No DTC	Trip “A” + “C ----”
When CAN communication error is occurred	—	“-----”

Clock System

INSTRUMENTATION/DRIVER INFO

3. Clock System

A: WIRING DIAGRAM

1. CLOCK

<Ref. to WI-155, WIRING DIAGRAM, Clock System.>

B: INSPECTION

1. SYMPTOM CHART

Symptom	Repair order	Reference
No display is shown.	1. Power supply 2. Clock body	<Ref. to IDI-12, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Clock System.>
Illumination does not illuminate.	1. Illumination power supply 2. Clock body	<Ref. to IDI-13, CHECK ILLUMINATION CIRCUIT, INSPECTION, Clock System.>
“Acc” or “ign” is displayed.	ACC or ignition power supply	<Ref. to IDI-13, CHECK ACC OR IGNITION POWER SUPPLY, INSPECTION, Clock System.>
“Err” is displayed in all items.	1. Communication circuit between combination meter and clock 2. Clock body	<Ref. to IDI-13, CHECK COMMUNICATION CIRCUIT, INSPECTION, Clock System.>
“Err” is displayed when a particular item is selected.	Communication circuit between combination meter and individual control modules	<Ref. to IDI-10, COMMUNICATION ERROR DISPLAY, INSPECTION, Combination Meter System.>

2. CHECK POWER SUPPLY AND GROUND CIRCUIT

Step	Check	Yes	No
1 CHECK CLOCK POWER SUPPLY. 1) Disconnect the clock harness connector. 2) Measure the voltage between the clock harness connector and chassis ground. Connector & terminal (i59) No. 10 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Check the harness for a open or short between the fuse and clock.
2 CHECK CLOCK GROUND CIRCUIT. 1) Turn the ignition switch to OFF. 2) Measure the resistance between the clock harness connector and chassis ground. Connector & terminal (i59) No. 6 — Chassis ground:	Is the resistance less than 10 Ω ?	Replace the clock body.	Repair the wiring harness.

3. CHECK ILLUMINATION CIRCUIT

Step	Check	Yes	No
1 CHECK ILLUMINATION CIRCUIT POWER SUPPLY. 1) Turn the ignition switch to OFF. 2) Disconnect the clock harness connector. 3) Turn the ignition switch and lighting switch to ON. 4) Measure the voltage between the clock harness connector and chassis ground. Connector & terminal (i59) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Replace the clock body.	Check the harness for a open or short between the fuse and clock.

4. CHECK ACC OR IGNITION POWER SUPPLY

Step	Check	Yes	No
1 CHECK ACC POWER SUPPLY. 1) Turn the ignition switch to OFF. 2) Disconnect the clock harness connector. 3) Turn the ignition switch to ACC. 4) Measure the voltage between the clock harness connector and chassis ground. Connector & terminal (i59) No. 9 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Check for open circuits in the harness between the fuse and the clock.
2 CHECK THE IGNITION POWER SUPPLY. 1) Turn the ignition switch to ON. 2) Measure the voltage between the clock harness connector and chassis ground. Connector & terminal (i59) No. 8 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Replace the clock body.	Check for open circuits in the harness between the fuse and the clock.


5. CHECK COMMUNICATION CIRCUIT

Step	Check	Yes	No
1 CHECK THE HARNESS BETWEEN CLOCK AND COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of the clock and the combination meter. 3) Measure the resistance between the harness connector of the clock and the combination meter. Connector & terminal (i59) No. 5 — (i10) No. 18:	Is the resistance less than 10 Ω ?	Go to step 2.	Repair the wiring harness.
2 CHECK COMMUNICATION ERROR DISPLAY. 1) Connect all the disconnected connectors. 2) Turn the ignition switch to ON. 3) Check that the error code is displayed in odo/trip meter.	Is the error code "Er xx" displayed on odo/trip meter?	Check the communication circuit. <Ref. to IDI-10, COMMUNICATION ERROR DISPLAY, INSPECTION, Combination Meter System.>	Replace the clock body.

4. Combination Meter

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Set the tilt steering at the lowest position.
- 3) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 4) Remove the screws of the combination meter (one on the upper side, two on lower side) and pull while tilting the meter towards yourself.

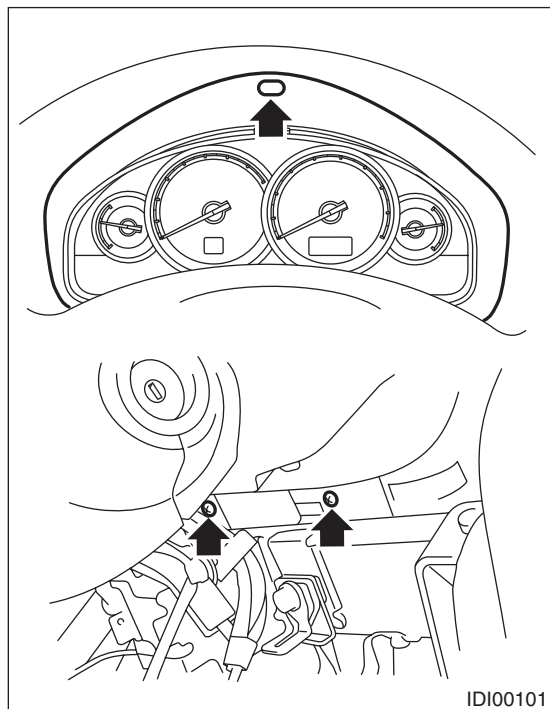

- 5) Disconnect the connector in the rear side of combination meter to remove meter.

CAUTION:

- Be careful not to damage the meter or instrument panel.
- Pay particular attention to avoid damaging the meter glass.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:


- Make sure the electrical connector is connected securely.
- Make sure that each meter operates normally.
- When the combination meter of model with immobilizer has been replaced, be sure to perform the registration of immobilizer.

C: DISASSEMBLY

CAUTION:

- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Be careful not to apply excessive force to the trip knob.
- Be sure not to touch the meter indicator needle.

Disengage claw (A), and remove the meter glass assembly (B) and meter panel assembly (C) from the meter case assembly (D).

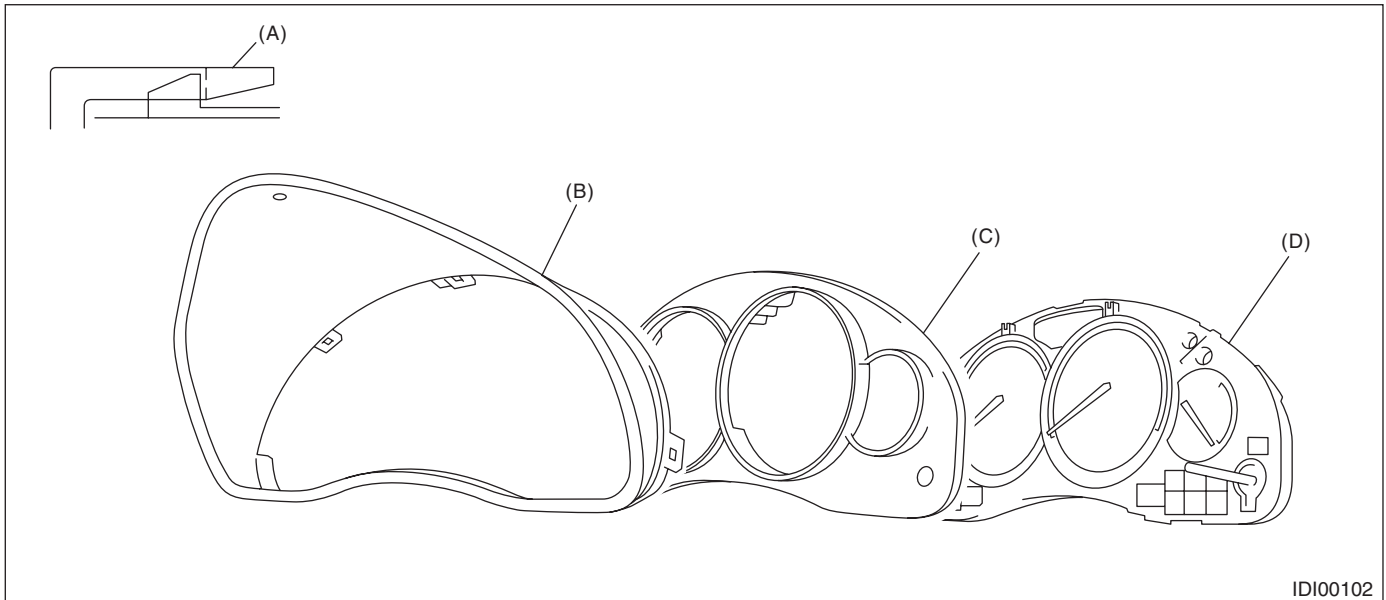

1. BULB REPLACEMENT

LEDs are used for all of warning lights and indicator lights of combination meters, replace the meter case assembly if faulty.

D: ASSEMBLY

Assemble in the reverse order of disassembly.

5. Speedometer

A: SPECIFICATION

Since the meter case assembly cannot be disassembled, do not remove or inspect the speedometer alone. (Do not remove the cover on the back side.)

6. Tachometer

A: SPECIFICATION

Since the meter case assembly cannot be disassembled, do not remove or inspect the tachometer alone. (Do not remove the cover on the back side.)

7. Fuel Gauge

A: SPECIFICATION

Since the meter case assembly cannot be disassembled, do not remove or inspect the fuel gauge alone. (Do not remove the cover on the back side.)

8. Engine Coolant Temperature Gauge


A: SPECIFICATION

Since the meter case assembly cannot be disassembled, do not remove or inspect the engine coolant temperature gauge alone. (Do not remove the cover on the back side.)

9. Clock

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center air vent grille. <Ref. to AC-45, REMOVAL, Air Vent Grille.>
- 3) Loosen the screws, and remove clock (B) from center air vent grille (A).

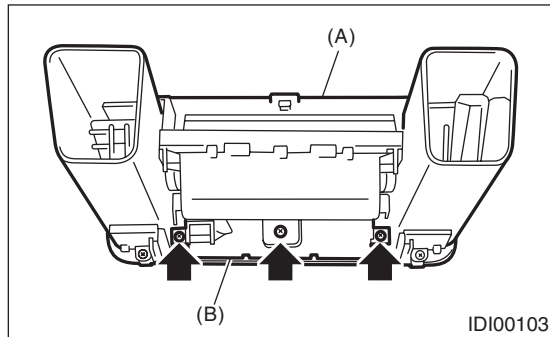

B: INSTALLATION

Install in the reverse order of removal.

SEATS

SE

	Page
1. General Description	2
2. Front Seat	9
3. Rear Seat	17
4. Seat Heater System	22



Basic Diagnostic Procedure

LAN SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

1. WITH SUBARU SELECT MONITOR

CAUTION:

- Subaru Select Monitor is required for reading DTC, performing diagnosis and reading current data.
- Remove foreign matter (dust, water, oil, etc.) from the body integrated unit connector during removal and installation.
- For model with immobilizer, registration of immobilizer may be needed after the replacement of controller etc. For detailed procedure, refer to the REGISTRATION MANUAL FOR IMMOBILIZER.

NOTE:

- To check harness the for open or short circuits, shake the suspected trouble spot or connector.
- Check List for Interview <Ref. to LAN(diag)-3, Check List for Interview.>

Step	Check	Yes	No
1 CHECK PRE-INSPECTION. 1) Ask the customer when and how the trouble occurred using the interview check list. <Ref. to LAN(diag)-3, Check List for Interview.> 2) Check the display of communication error display. (Combination meter, odo/trip meter)	Is the communication error displayed?	Go to step 3.	Go to step 2.
2 BASIC INSPECTION. Check components which might affect body control. <Ref. to LAN(diag)-5, INSPECTION, General Description.>	Is the component that might influence the body control problem normal?	Go to step 3.	Repair or replace each component.
3 CHECK INDICATION OF DTC. 1) Read the DTC. <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> NOTE: If the communication function of the Subaru Select Monitor cannot be executed properly, check the communication circuit. <Ref. to LAN(diag)-32, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> 2) Record all DTC.	Is DTC displayed?	Go to step 5.	Go to step 4.
4 PERFORM GENERAL DIAGNOSTICS. Inspect using the "General Diagnostics Table". <Ref. to LAN(diag)-85, General Diagnostic Table.>	Is result of inspection OK?	LAN system is normal.	Go to step 5.
5 PERFORM DIAGNOSIS. 1) Correct the cause of trouble. 2) Perform Clear Memory Mode. <Ref. to LAN(diag)-21, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.> 3) Read the DTC. <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC displayed?	Repeat step 5 until DTC is not shown.	Finish the diagnosis.

2. Check List for Interview

A: CHECK

Inspect the following item about the vehicle's state.

1. DISPLAY OF COMMUNICATION ERROR

Communication error is displayed in odo/trip meter.	When and how often are they displayed? ☐ Always ☐ Sometimes ☐ Only once Which communication error is displayed? (Record them all) ☐ Er IU (Fail in the body integrated unit) ☐ Er HC (Fail of high-speed CAN) ☐ Er LC (Fail of low-speed CAN) ☐ Er — (Fails of both high-speed and low-speed CAN) ☐ Er EG (Fail of EGI communication data) ☐ Er TC (fail of TCM communication data) ☐ Er Ab (Fail of vehicle dynamics control (VDC)/ABS communication data)
Ignition key position	☐ OFF ☐ ACC ☐ ON (Before starting engine) ☐ START ☐ ON (After starting Engine, engine running) ☐ ON (After starting Engine, engine stopped)
Timing	☐ Immediately after turning the ignition to ON. ☐ Immediately after turning the ignition to START.

2. DISPLAY STATUS IN THE COMBINATION METER

Display status in the combination meter	a) Engine coolant temperature gauge display	☐ OK / ☐ NG
	b) Fuel gauge display	☐ OK / ☐ NG
Display of other indicators	c) Malfunction indicator light	☐ ON / ☐ OFF
	d) SPORT indicator light (AT warning light)	☐ ON / ☐ OFF
	e) ABS warning light/Vehicle dynamics control (VDC) warning light	☐ ON / ☐ OFF
	f) Security indicator light	☐ ON / ☐ Blink / ☐ OFF
	g) Seat belt warning light (Driver's seat)	☐ ON / ☐ OFF
	h) Seat belt warning light (Passenger's seat)	☐ ON / ☐ OFF

Check List for Interview

LAN SYSTEM (DIAGNOSTICS)

3. SYMPTOMS

Vehicle condition	a) Lighting adjustment is not possible by the illumination volume control.	☐ Yes / ☐ No
	b) Rear wiper does not operate.	☐ Yes / ☐ No
	c) Wiper de-icer does not operate.	☐ Yes / ☐ No
	d) Rear defogger does not operate.	☐ Yes / ☐ No
	e) Door lock does not operate.	☐ Yes / ☐ No
	f) Trunk/rear gate lock does not operate.	☐ Yes / ☐ No
	g) Drivers door lock does not operate.	☐ Yes / ☐ No
	h) Shift lock does not operate.	☐ Yes / ☐ No
	i) Key illumination blinks.	☐ Yes / ☐ No

4. CONDITIONS UNDER TROUBLE OCCURRENCE

Driving condition	☐ At standstill (While idling)			
	☐ When the vehicle is running	Vehicle speed	km/h (MPH)	
	☐ When accelerating	Acceleration	km/h (MPH) to	km/h (MPH)
	☐ Decelerating (With braking)	Deceleration	km/h (MPH) to	km/h (MPH)
	☐ Decelerating (Without braking)	Deceleration	km/h (MPH) to	km/h (MPH)
	☐ Flat road			
	☐ Uphill			
	☐ Downhill			
	☐ Gravel road			
	☐ Bumpy road			
☐ Snowy road				
Does it occur when operating any part?				
Operated part:				
Trouble Symptom:				
Are there any other troubles occurred?				
From where:				
Trouble Symptom:				

3. General Description

A: CAUTION

1. SUPPLEMENTAL RESTRAINT SYSTEM “AIRBAG”


Airbag system wiring harness is routed near the body integrated unit and twisted pair line.

CAUTION:

- All airbag system wiring harness and connectors are colored yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the body integrated unit and LAN system.


2. LAN SYSTEM

- Bus line of LAN system is twisted pair line. Be careful not to bypass or partly unbind the twisted pair line.
- Do not make clearance between bus lines (CAN High, CAN Low).
- Difference of bus line length should be within 10 cm (3.94 in).
- Fray near the connector should be within 8 cm (3.14 in).

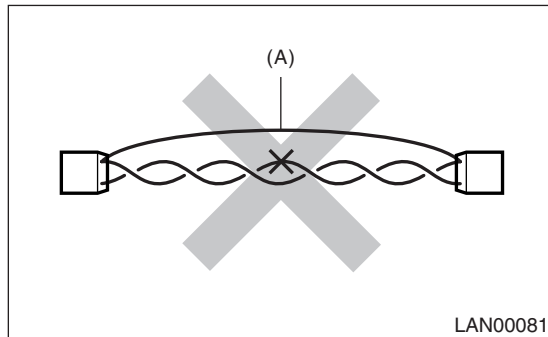

(A) Bypass wire connection

- If the characteristics of the twisted pair line are changed, it may extremely weaken against noise.
- When repairing the harness, connect the wires using soldering and protect it with insulating tape etc.

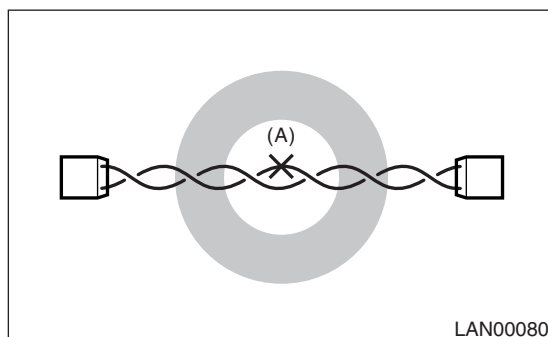

(A) Soldering and protection with insulating tape

B: INSPECTION

Before performing diagnostics, check the following item which might affect body integrated unit malfunctions.

- 1) Measure the battery voltage and check electrolyte.

Standard voltage: 12 V or more

Specific gravity: Above 1.260

- 2) Check the fuse condition.

Make sure that ampere of the fuse is setting value, and it is not blown out.

- 3) Check the connecting condition of harness and harness connector.

- 4) Confirm that a setting that does not match the vehicle equipment, is not set in the body integrated unit. <Ref. to LAN(diag)-19, REGISTRATION BODY INTEGRATED UNIT (EQUIPMENT SETTING), OPERATION, Subaru Select Monitor.>

- 5) Make sure that a setting that does not match the vehicle equipment, is not set in the function setting (ECM customizing) of the body integrated unit. <Ref. to LAN(diag)-22, FUNCTION SETTING (ECM CUSTOMIZING), OPERATION, Subaru Select Monitor.>

- 6) Confirm “Factory initial setting” of body integrated unit registrations is “Market”.


- 7) Confirm key illumination does not blink with ignition switch turned to ON.

General Description

LAN SYSTEM (DIAGNOSTICS)

C: PREPARATION TOOL

1. SPECIAL TOOL

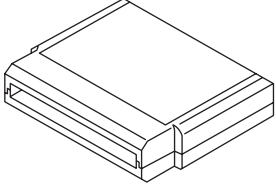
ILLUSTRATION	TOOL NUMBER	Description	REMARKS
 ST18482AA010	18482AA010	CARTRIDGE	Troubleshooting for the electrical system.
 ST22771AA030	22771AA030	Subaru Select Monitor KIT	Troubleshooting for the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.

4. Electrical Component Location

A: LOCATION









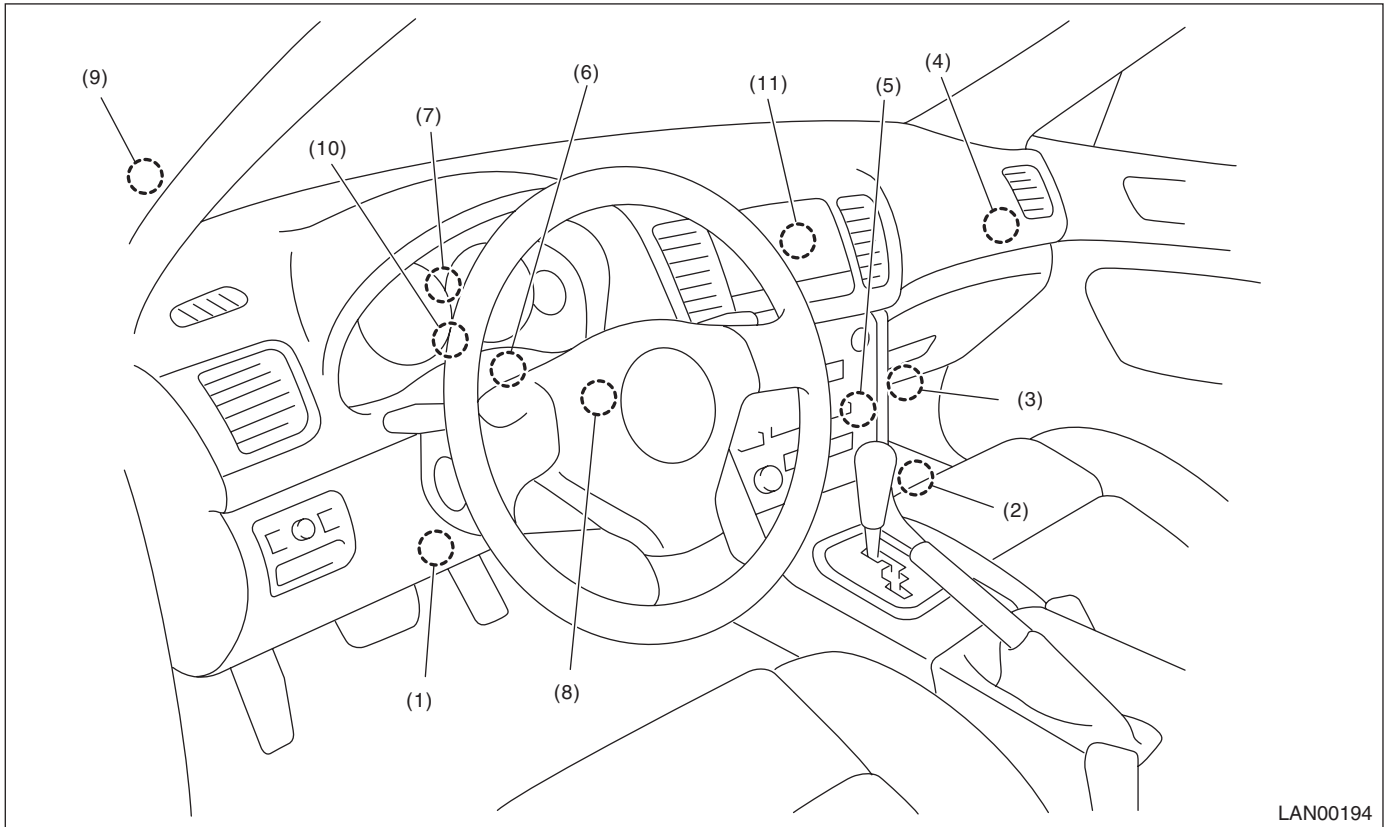


LAN00194

- | | | |
|---|--|--|
| (1) Body integrated unit | (5) A/C control panel | (9) ABSCM&H/U or VDCCM&H/U
(inside engine room) |
| (2) Engine control module (ECM) | (6) Transmission control module
(TCM) | (10) Odo/trip meter |
| (3) Auto A/C control module | (7) Combination meter | (11) Center display |
| (4) Keyless entry control module
(Antenna) | (8) Steering angle sensor | |


Electrical Component Location

LAN SYSTEM (DIAGNOSTICS)

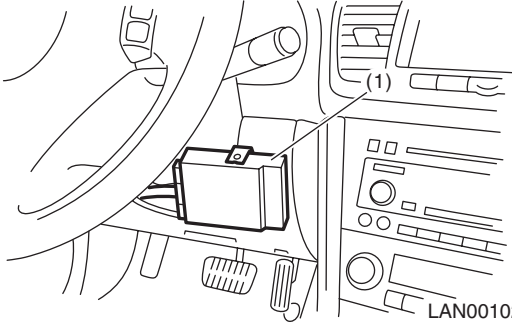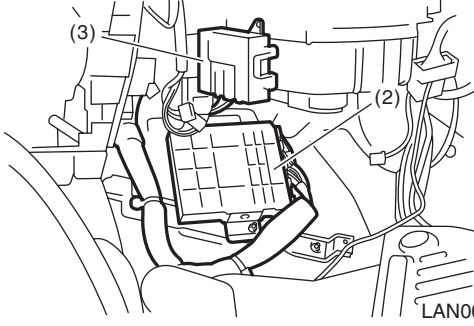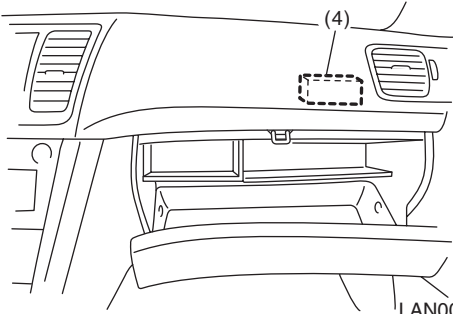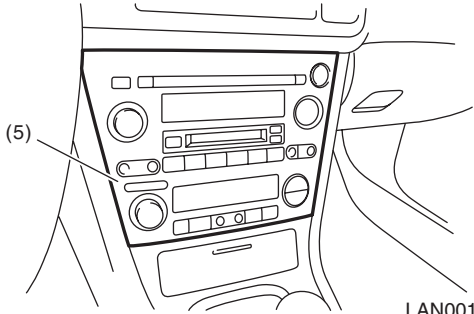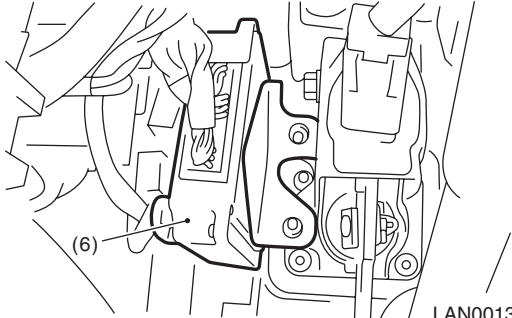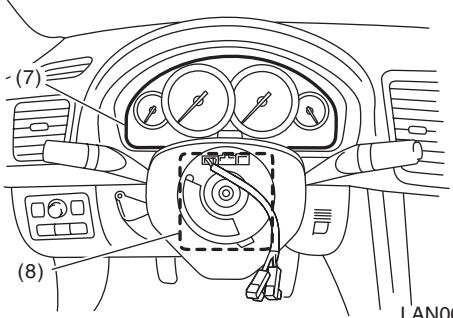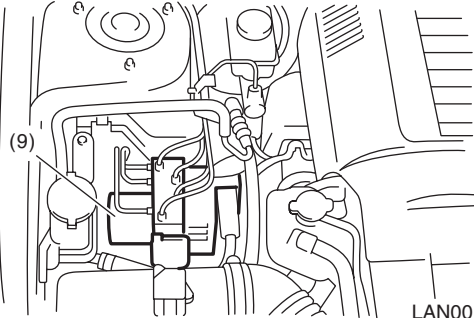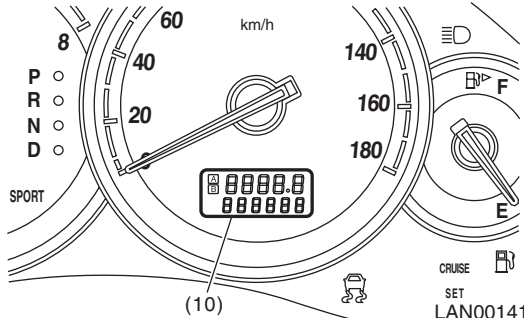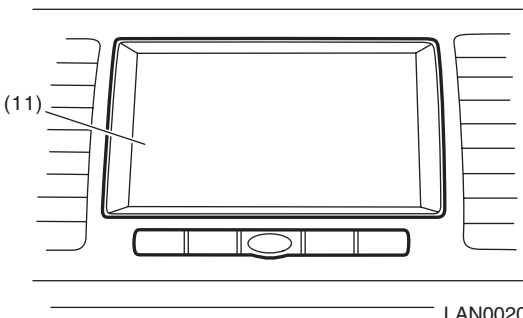 LAN00102	 LAN00103
 LAN00136	 LAN00137
 LAN00138	 LAN00139
 LAN00140	 LAN00141
 LAN00202	SUBARU.

5. Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

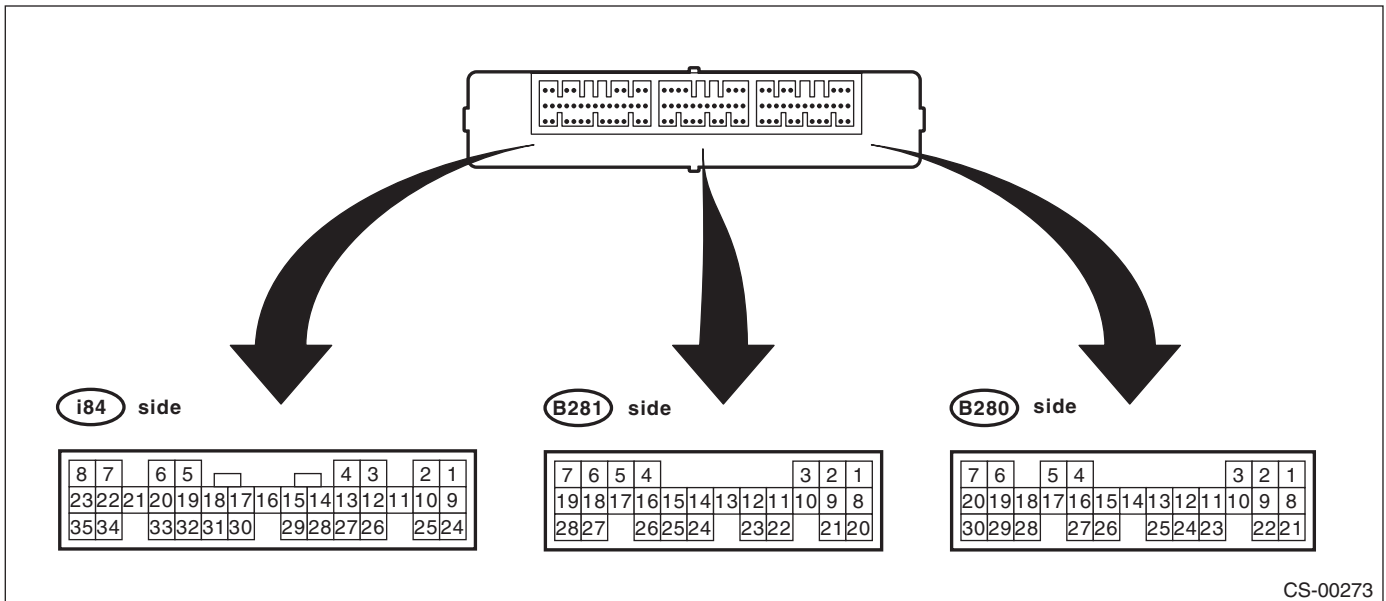

Description	Connector No.	Terminal No.	Signal (V)	Note
			Ignition switch ON (engine OFF)	
System control power supply	B281	C2	10 — 13 V	Always
Backup power supply	B280	B7	10 — 13 V	Always
Ignition power supply	i84	A1	10 — 13 V	Ignition ON
ACC power supply	i84	A24	10 — 13 V	ACC ON
Ground	i84	A21	0 V	Always
	B281	C9		
	B281	C8		
	B280	B22		
Key warning switch	B281	C7	10 — 13 V	When ignition key inserted
Stop light switch	B281	C23	10 — 13 V	When brake pedal depressed
Illumination control switch (Bright switch)	i84	A30	10 — 13 V (at dimmer ON)	Cancel the extinction of the clock and audio illumination
Illumination volume (Vi1)	i84	A10	4.5 — 5.5 V	Small light ON
Illumination volume (Vi2)	i84	A2	0.5 — 4.5 V	—
Illumination volume (Vi3)	i84	A25	0 V	Ground circuit
Illumination output	i84	A5	10 — 13 V	Small light ON
Front fog light input	B281	C17	10 — 13 V	Front fog light ON
Door switch input Driver's seat	i84	A19	Less than 1 V (10 — 13 V at OFF)	Driver's door open (ON)
Door switch input Passenger's seat	i84	A32	Less than 1 V (10 — 13 V at OFF)	Passenger's door open (ON)
Door switch input Rear RH seat	i84	A18	Less than 1 V (10 — 13 V at OFF)	Rear RH door open (ON)
Door switch input Rear LH seat	i84	A31	Less than 1 V (10 — 13 V at OFF)	Rear LH door open (ON)
Door switch Trunk/Rear gate	i84	A17	Less than 1 V (10 — 13 V at OFF)	Trunk/Rear gate open (ON)
Manual switch (LOCK)	i84	A15	Less than 1 Ω	Door lock switch ON

Control Module I/O Signal

LAN SYSTEM (DIAGNOSTICS)

Description	Connector No.	Terminal No.	Signal (V)	Note
			Ignition switch ON (engine OFF)	
Manual switch (UNLOCK)	i84	A29	Less than 1 Ω	Door unlock switch ON
Door lock power supply	i84	A34	10 — 13 V	Always
All door lock output	i84	A7	10 — 13 V	Manual lock switch, door key switch ON
Driver's door UNLOCK output	i84	A23	10 — 13 V	Driver's seat unlock signal ON
All door UNLOCK output	i84	A8	10 — 13 V	All door unlock signals ON
Rear gate UNLOCK output	i84	A22	10 — 13 V	When the rear gate release switch is ON with all seats unlocked
Key/shift lock power supply	B281	C1	10 — 13 V	Always
Shift lock output	B280	B6	10 — 13 V	Ignition switch ON, shift position "P" range, foot brake ON (Only AT)
Key locking output	B280	B5	10 — 13 V	Other than "P" range, ignition switch ON
Wiper deicer switch	i84	A14	0 V	Wiper deicer switch ON
Wiper deicer relay output	B280	B14	0 V	Wiper deicer relay ON
Rear defogger switch	i84	A28	0 V	Rear defogger switch ON
Rear defogger relay output	B281	B16	0 V	Rear defogger relay ON
Shift switch (ON)	B281	C26	0 V	At Manual mode
Shift switch (UP)	B281	C15	0 V	At Manual mode UP
Shift switch (DOWN)	B281	C25	0 V	At Manual mode DOWN
P range switch	B281	C13	0 V	Shift range P position
Impact sensor	B281	C5	8 V or more	Impact sensor ON (Model with impact sensor)
Fuel level sensor	B281	C19	0 — 102.3 Ω	Resistance differs according to the fuel level (displays resistance combining level gauge main and sub)
Ambient sensor	B281	C3	0.5 — 4.5 V	SIG
	B281	C10	0 V	GND
Seat belt switch (driver's seat)	i84	A4	0 V	When driver's seat belt is worn
Seat belt switch (Passenger's seat)	i84	A13	0 V	When passenger's seat belt is worn
Seat belt warning light (driver's seat)	i84	A20	0 V	When driver's seat belt is worn
Seat belt warning light (Passenger's seat)	B281	C24	0 V	When passenger's seat belt is worn
Rear wiper switch (ON)	B281	C6	0 V	Rear wiper switch ON
Rear wiper switch (INT)	B281	C18	0 V	Rear wiper switch ON
Rear washer switch	B281	C27	0 V	Rear washer switch ON
Rear wiper power supply	B280	B21	10 — 13 V	Ignition switch ON
Rear wiper ON output	B280	B1	10 — 13 V	Rear wiper switch ON
Rear wiper return	B280	B8	0 V	At wiper reversing
		B1 — B8	0 V	
Room light output	B280	B3	0 V	When LOCK, UNLOCK with keyless entry

Control Module I/O Signal

LAN SYSTEM (DIAGNOSTICS)

Description	Connector No.	Terminal No.	Signal (V)	Note
			Ignition switch ON (engine OFF)	
Key ring illumination output	B280	B4	0 V	Ignition key removed, driver's door open
Turn hazard output	B280	B12	0 V	When operating keyless entry answer back
Keyless buzzer output	i84	A6	10 — 13 V	When operating keyless entry answer back
Security horn output	B280	B11	0 V	When operating security horn
Security indicator light	i84	A33	0 V	At ignition key removed, immobilizer operating
TPMS registration check signal input	B281	C4	0 V	When inputting registration check signal
Keyless communication	i84	A9	Serial communication	At keyless entry signal received
High speed CAN circuit	B280	B20	Between B20 — B30 Serial communication	At communicating (sending and receiving)
High speed CAN circuit	B280	B30		
Low-speed CAN circuit 1	i84	A27	Between A26 — A27 Serial communication	At communicating (sending and receiving)
Low-speed CAN circuit 1	i84	A26		
Low-speed CAN circuit 2	B280	B26	Between B25 — B26 Serial communication	At communicating (sending and receiving) (Model with auto A/C)
Low-speed CAN circuit 2	B281	B24		
Immobilizer antenna	B281	C20 — C21	Serial communication	
Immobilizer communication (Main)	B280	B18 (Back-up B28)	Serial communication	
Subaru Select Monitor communication	B280	B19	Serial communication	

B: WIRING DIAGRAM

<Ref. to WI-176, WIRING DIAGRAM, CAN Communication System.> <Ref. to WI-104, AUTO A/C MODEL, WIRING DIAGRAM, Air Conditioning System.>

6. Subaru Select Monitor

A: OPERATION

1. READ DIAGNOSTIC TROUBLE CODE (DTC)

NOTE:


- DTC is displayed in the sequence of inputting. (When entering two DTCs or more simultaneously, they are displayed in the sequence of priority.)
- When more than two DTCs are displayed, perform the diagnosis of top one.

1) Prepare the Subaru Select Monitor kit.




2) Connect the diagnosis cable to the Subaru Select Monitor.

3) Insert the cartridge into the Subaru Select Monitor. <Ref. to LAN(diag)-6, SPECIAL TOOL, PREPARATION TOOL, General Description.>

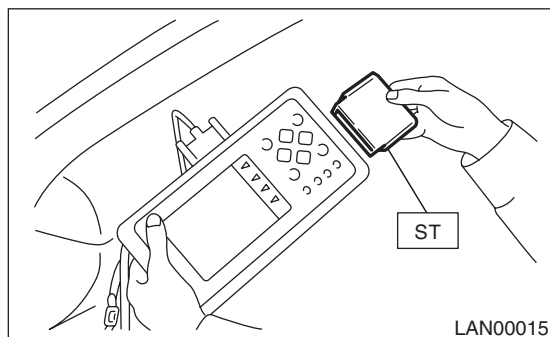

4) Connect the Subaru Select Monitor to the data link connector.


The data link connector is located in the lower portion of the instrument panel (on the driver's side).

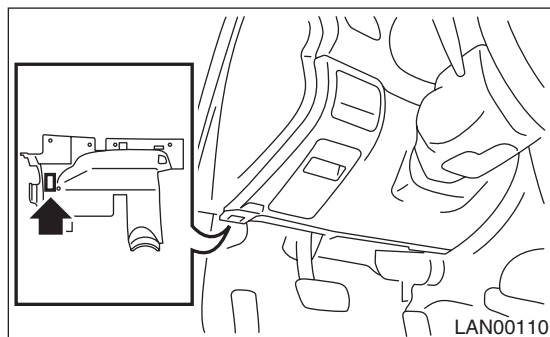

CAUTION:

Do not connect the scan tools except for Subaru Select Monitor.

5) Turn the ignition switch to ON (engine OFF) and turn the Subaru Select Monitor switch ON.

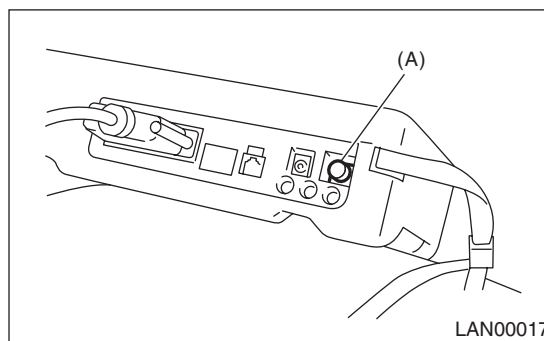

(A) Power switch

6) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.

7) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.

8) On the «Integ. unit mode failure diag» display screen, select the {Diagnostic Code(s) Display} and press the [YES] key.

NOTE:

- For details concerning the operation procedures, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".
- For details concerning DTCs, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to LAN(diag)-29, List of Diagnostic Trouble Code (DTC).>

2. READ CURRENT DATA

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
 - 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
 - 3) On the «Integ. unit mode failure diag» display screen, select the {Current Data Display & Save} and press the [YES] key.
 - 4) On the «Current Data Display & Save» display screen, select the {12 Data Display} and press the [YES] key.
 - 5) Using the scroll key, scroll the display screen up or down until the desired data is shown.
- A support list contains both of analog and digital data, and they are shown in the following table.

3. DISPLAY OF ANALOG DATA

Items to be displayed	Unit of measure	Remarks	Note
BATT Voltage (Control)	10 — 15 V	Body integrated unit input value	Always
BATT Voltage (BACK UP)	10 — 15 V	Body integrated unit input value	Always
IG Power Supply Voltage	10 — 15 V	Body integrated unit input value	Ignition switch ON
ACC voltage	10 — 15 V	Body integrated unit input value	Ignition switch ACC
Illumination VR voltage	0 — 5 V	Body integrated unit output value	Small light switch ON
Illumi. output d-ratio	0 — 100%	Body integrated unit input value	Small light ON Illumination volume is other than bright.
Ambient temp sensor V	0 — 5 V	Body integrated unit output value	Ignition switch ON
Ambient temperature	−40 — 87.5°C	Body integrated unit output value	Ignition switch ON
Fuel level voltage	0 — 8 V	Body integrated unit input value	Ignition switch ON
Fuel level resistance	0 — 102.3 Ω	Body integrated unit input value	Ignition switch ON
key-lock solenoid V	6 — 12 V	Body integrated unit output value	Other than parking range Ignition ON
number of regist.	0 — 4	Key No. to register	
Front Wheel Speed	km/h	CAN data input value	Reception from VDC unit
VDC/ABS latest f-code	DTC display (Temporarily)	CAN data input value	It is normal when DTC is not been input even if this code is displayed. Reception from VDC
Blower fan steps	0 — 2 levels	CAN data input value	0: OFF, 1: Low, 2: 2 levels or more Reception from air conditioner ECM
Fuel level resistance2	0 — 102.3 Ω	CAN data output value	Reception from body integrated unit
Fuel consumption	cc/s	CAN data input value	Reception from ECM and transmission to center monitor
Engine coolant temperature	−40 — 130°C	CAN data input value	Reception from ECM
Vehicle lateral G	m/s ²	CAN data input value	Reception from VDC unit
SPORT Shift Stages	0 — 7 levels	CAN data input value	(0: Light OFF; 1 — 5: Gear display; 6: Fail; 7: ATF temperature High/Low) Reception from TCM
Shift Position	0 — 7 levels	CAN data input value	0: 1; 1: 2; 2: 3; 3: 4; 4: D; 5: N; 6: R; 7: P shift position (There is no 8 input.) Reception from TCM
Off delay time	OFF, Short, Normal, Long	Body integrated unit setting items	Customize setting
Auto lock time	20, 30, 40, 50, 60 seconds	Body integrated unit setting items	Customize setting

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

4. DISPLAY OF ON/OFF DATA

Items to be displayed	Unit of measure	Remarks	Note
key-lock warning SW	ON/OFF	Body integrated unit input value	On when ignition key is inserted
Stop Light SW	ON/OFF	Body integrated unit input value	On when brake pedal is depressed
Front fog light SW input	ON/OFF	Body integrated unit input value	ON when Front fog light is ON.
Rear fog light SW input	ON/OFF	Body integrated unit input value	Not supported by North American specifications
TPMS Input	ON/OFF	Body integrated unit input value	On when TPMS registration completed
lighting SW input	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Door key-lock SW input	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Door unlock SW input	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Driver's door SW input	ON/OFF	Body integrated unit input value	On when driver's door is open
P-door SW input	ON/OFF	Body integrated unit input value	On when passenger's door is open
Rear right door SW input	ON/OFF	Body integrated unit input value	On when rear right door is open
Rear left door SW input	ON/OFF	Body integrated unit input value	On when rear left door is open
R Gate SW input	ON/OFF	Body integrated unit input value	On when trunk/rear gate is open
Manual lock SW input	ON/OFF	Body integrated unit input value	Manual lock switch ON
Manual unlock SW input	ON/OFF	Body integrated unit input value	Manual unlock switch ON
Lock SW (front hood)	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Bright SW input	ON/OFF	Body integrated unit input value	Except automatic A/C
Tiptronic Mode Switch	ON/OFF	Body integrated unit input value	SPORT shift mode ON
TIP UP SW input	ON/OFF	Body integrated unit input value	SPORT shift on and On at up operation
TIP DOWN SW input	ON/OFF	Body integrated unit input value	SPORT shift on and On at down operation
P SW	ON/OFF	Body integrated unit input value	On when shift range is in parking
R wiper ON SW input	ON/OFF	Body integrated unit input value	Rear wiper switch ON
R wiper INT SW input	ON/OFF	Body integrated unit input value	On when rear wiper switch is in INT
R washer SW input	ON/OFF	Body integrated unit input value	Rear washer switch ON
wiper deicer SW input	ON/OFF	Body integrated unit input value	Wiper deicer switch ON
Rear defogger SW	ON/OFF	Body integrated unit input value	Rear defogger switch ON
Driver's seat belt SW input	ON/OFF	Body integrated unit input value	Driver's seat buckle switch ON
P seatbelt SW input	ON/OFF	Body integrated unit input value	Passenger's seat buckle switch ON

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

Items to be displayed	Unit of measure	Remarks	Note
Fr wiper input	ON/OFF	Body integrated unit input value	On when front wiper is operating
Registration SW input	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Identification SW input	ON/OFF	Body integrated unit input value	On for wagon
R defogger output	ON/OFF	Body integrated unit output value	On when rear defogger relay is operating
Door lock actuator LOCK output	ON/OFF	Body integrated unit output value	On when lock signal is output
All seat UNLOCK output	ON/OFF	Body integrated unit output value	On when unlock signal is output
D-seat UNLOCK output	ON/OFF	Body integrated unit output value	On when unlock signal is output
R gate/trunk UNLK output	ON/OFF	Body integrated unit output value	On when rear gate/trunk unlock signal is output
Double lock output	ON/OFF	Body integrated unit output value	Not supported by North American specifications
R wiper output	ON/OFF	Body integrated unit output value	On when rear wiper is operating
Shift Lock Solenoid	ON/OFF	Body integrated unit output value	On when shift lock solenoid is operating
Key locking output	ON/OFF	Body integrated unit output value	On when key lock solenoid is operating
wiper deicer SW input	ON/OFF	Body integrated unit output value	On when wiper deicer is operating
Starter cutting output	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Hazard Output	ON/OFF	Body integrated unit output value	On when keyless lock/unlock signal is received (when keyless switch connector is removed)
Keyless Buzzer Output	ON/OFF	Body integrated unit output value	On when keyless lock/unlock signal is received (when keyless switch connector is removed)
Horn Output	ON/OFF	Body integrated unit output value	On when security warning is operating
Siren Output	ON/OFF	Body integrated unit output value	On when siren is installed, customize settings are enabled, and security warning is operating
D-belt warning light O/P	ON/OFF	Body integrated unit output value	On when Ignition switch is turned to ON, and buckle switch is turned off
P-belt warning light O/P	ON/OFF	Body integrated unit output value	On when Ignition switch is turned to ON, occupant is seated, and buckle switch is turned off
Illumination light O/P	ON/OFF	Body integrated unit output value	On when illumination is illuminated
Room light output	ON/OFF	Body integrated unit output value	On when keyless lock/unlock signal is received (when keyless switch connector is removed)
key illumi. light o/p	ON/OFF	Body integrated unit output value	On when key illumination light is illuminated
R fog light output	ON/OFF	Body integrated unit output value	Not supported by North American specifications
R fog light monitor	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Immobilizer light output	ON/OFF	Body integrated unit output value	On when immobilizer pilot light blinks

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

Items to be displayed	Unit of measure	Remarks	Note
Keyless operation 1	Registration/Normal	Body integrated unit input value	Not supported by North American specifications
Keyless operation 2	Clear/Normal	Body integrated unit input value	Not supported by North American specifications
CC Main Light	On/Off	CAN data input value	Cruise control switch on Reception from ECM and transmission to combination meter
CC Set Light	On/Off	CAN data input value	On when cruise control vehicle speed is set Reception from ECM and transmission to combination meter
SPORT Light	On/Off	CAN data input value	SPORT mode switch ON Reception from TCM and transmission to combination meter
SPORT Blink	Blink/Off	CAN data input value	TCM error signal reception ON Reception from TCM and transmission to combination meter
ATF temperature light	On/Off	CAN data input value	ATF oil temperature rise ON Reception from TCM and transmission to combination meter
ATF Blink	Blink/Off	CAN data input value	Not supported by North American specifications
Tire diameter abnormal 1	On/Off	CAN data input value	Not supported by North American specifications
Tire diameter abnormal 2	Blink/Off	CAN data input value	ON when difference in rotation between front and rear wheels is 4% or more Reception from TCM and transmission to combination meter
SPORT Shift (UP)	UP/OFF	Body integrated unit input value	ON when shift lever can be operated up
SPORT Shift (DOWN)	DOWN/OFF	Body integrated unit input value	ON when shift lever can be operated down
SPORT Shift (buzzer 1)	ON/OFF	CAN data input value	Reception from TCM and transmission to combination meter
SPORT Shift (buzzer 2)	ON/OFF	CAN data input value	Not supported by North American specifications
ABS/VDC Judging	ABS/VDC	CAN data input value	Transmission from vehicle dynamic control (VDC) to high speed control module
ADA Existence Judging	Yes/No	CAN data input value	Not supported by North American specifications
Small light SW	ON/OFF	Body integrated unit input value	On when small light is illuminated
Headlight	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Headlight HI	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Turn signal LH	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Turn signal RH	ON/OFF	Body integrated unit output value	Not supported by North American specifications
R defogger SW	ON/OFF	Body integrated unit output value	Rear defogger switch ON
Australia Judging Flag	Australia/Others	Body integrated unit output value	North American specifications have others
Large diameter tires	Large diameter/others	Body integrated unit output value	Reception from combination meter
Number of cylinders	4 cylinders/6 cylinders	CAN data input value	—
E/G cam shaft specification	SOHC/DOHC	CAN data input value	—

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

Items to be displayed	Unit of measure	Remarks	Note
E/G Turbo	Turbo/Non-turbo	CAN data input value	—
E/G displacement (2.5 L)	2.5 L/ OFF	CAN data input value	—
E/G displacement (3.0 L)	3.0 L/ OFF	CAN data input value	—
AT Model ID Signal	AT model / MT model	CAN data input value	—
E/G cooling fan	ON/OFF	CAN data input value	Not supported by North American specifications
Heater cock valve output	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Power window (Up)	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Power window (Down)	ON/OFF	Body integrated unit output value	Not supported by North American specifications
Keyless buzzer	ON/OFF	Body integrated unit output value	On when keyless answer-back buzzer operates (when keyless switch connector is removed)
P/W ECM Failure	NG/OK	CAN data input value	Not supported by North American specifications
Keyless Hook SW	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Door lock SW (Open)	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Door lock SW (Close)	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Door Key SW (Open)	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Door Key SW (Close)	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Under hook registration	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Hook registration end	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Unlock request	ON/OFF	Body integrated unit input value	Not supported by North American specifications
Center display failure	OK/NG	CAN data input value	Reception from center display (NAVI monitor)
NAVI Failure	OK/NG	CAN data input value	Reception from Center Display
IE Bus failure	Can not use	CAN data input value	Reception from Center Display
Auto A/C failure	OK/NG	CAN data input value	Reception from auto A/C module
EBD Warning Light	OK/OFF	CAN data input value	Reception from VDC/ABS and transmission to combination meter
ABS Warning Light	OK/OFF	CAN data input value	Reception from VDC/ABS and transmission to combination meter
VDC OFF flag	ON/OFF	CAN data input value	Reception from VDC/ABS and transmission to combination meter
VDC/ABS OK B	OK/NG	CAN data input value	Reception from VDC/ABS (When an error is detected in either of the yaw rate, G sensor, steering sensor, or pressure sensor)
VDC/ABS condition	0 — 4	CAN data input value	Reception from VDC/ABS and transmission to combination meter
Destination	0 — 16	CAN data input value	Reception from combination meter
Touch SW	0 — 64	CAN data input value	Received from the monitor

NOTE:

For details concerning the operation procedures, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

5. CONFIRMATION OF CURRENT SETTING

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
- 3) On the «Integ. unit mode failure diag» display screen, select the {Current Data Display & Save} and press the [YES] key.
- 4) On the «Current Data Display & Save» display screen, select the {12 Data Display} and press the [YES] key.
- 5) Using the scroll key, scroll the display screen up or down until the desired data is shown.
- 6) Display the following item and record the settings.

Required items for new registration (Except for system not equipped)

Contents	Item to confirm				REMARKS
Key No. to register	1	2	3	4	Registered ID type
Off delay	OFF	Long	Normal	Short	Setting for lighting off time
Auto-lock	60, 50, 40, 30, 20		OFF		Not supported by North American specifications (Unit sec.)
Rr defogger op. mode	Normal		Continuous		Normal: Off at 15 minutes of operation Continuous: Operations from switch on to off
Wiper deicer op. mode	Normal		Continuous		Normal: Off at 15 minutes of operation Continuous: Operations from switch ON to OFF, repeats ON for 15 minutes, OFF for 2 minutes
Security Alarm Setup	ON		OFF		ON: Warning device operation possible OFF: Warning device does not operate
Impact Sensor Setup	ON		OFF		ON: Impact sensor operation possible OFF: Impact sensor does not operate Turn OFF for vehicles not equipped with an Impact Sensor
Alarm monitor delay setting	ON		OFF		ON: Monitor after a fixed period of time from reception of the keyless lock signal OFF: Monitor after reception of the keyless lock signal
Lockout prevention	ON		OFF		ON: Lockout prevention operation OFF: Lockout prevention not operated
Impact Sensor	Yes		No		Yes: Impact sensor equipped No: Impact sensor not equipped Always set to no for vehicles not equipped with the impact sensor.
Siren setting	Yes		No		Yes: Vehicle equipped with siren No: Vehicle not equipped with siren The horn does not honk when the warning operates if the vehicle not equipped with a siren is set to 'Yes'.
Answer-back buzzer setup	ON		OFF		ON: Answer-back buzzer operation possible OFF: Answer-back buzzer not operated
Hazard answer-back setup	ON		OFF		ON: Hazard answer-back buzzer operation possible OFF: Hazard answer-back buzzer not operated
Automatic locking setup	ON		OFF		Not supported by North American specifications
Ans.-back Buzzer	Yes		No		Yes: Vehicle equipped with answer-back buzzer No: Vehicle not equipped with answer-back buzzer
Auto locking	Yes		No		Not supported by North American specifications

Contents	Item to confirm		REMARKS
Door open warning (prevention of battery run-out)	Yes	No	Yes: Door interlocked room light goes off when on for 10 minutes consecutively when door is open. No: Room light remains illuminated until door is closed.
A/C ECM setting	Yes	No	Set models with auto A/C to YES.
P/W ECM setting	Yes	No	Not supported by North American specifications
Center display failure	Yes	No	Yes: Navigation display equipped vehicles No: Vehicles not equipped with Navigation displays
Wiper deicer	Yes	No	Yes: Vehicle equipped with wiper deicer No: Vehicle not equipped with wiper deicer
Rear fog light setting	Yes	No	Not supported by North American specifications
Factory initial setting	Factory	Market	Do not change to the factory mode. Set to market when using normally.

6. REGISTRATION BODY INTEGRATED UNIT (EQUIPMENT SETTING)


CAUTION:

Body integrated unit is core of LAN system, and also can select the function of all vehicle system control. It is possible to control the original functions of vehicle when registrations of body integrated unit and function setting are corresponded to vehicle equipment.


If registrations and function setting are different from vehicle equipment, vehicle system does not operate normally and diagnosis cannot be performed correctly. Pay attention to following item.

- Be sure to correspond registrations and function settings to vehicle equipment.
- Do not change the settings of vehicle improperly.
- Confirm key illumination does not blink or "Factory initial setting" of body integrated unit registrations is "Market". If "Factory initial setting" is set to "Factory", key illumination blinks when ignition key is turned ON, to notify that the settings are unconfirmed.
- Key illumination does not blink with ignition switch turned to ON and go off with door closed.
- Be sure to register immobilizer if body integrated unit is replaced with a new part. (models with immobilizer)
- Make a registration of immobilizer when the parts related to immobilizer have been replaced. Refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

- 1) Turn the ignition switch to OFF.
- 2) Connect the Subaru Select Monitor to the data link connector.

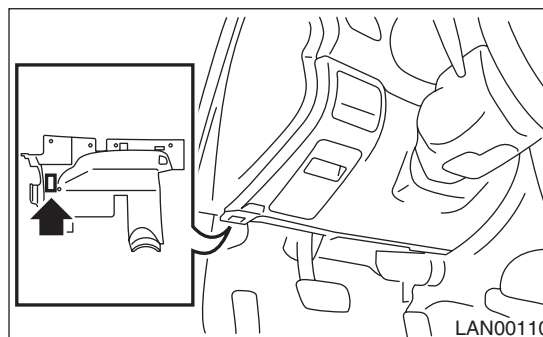

- 3) Turn the ignition switch to ON and Subaru Select Monitor to ON.

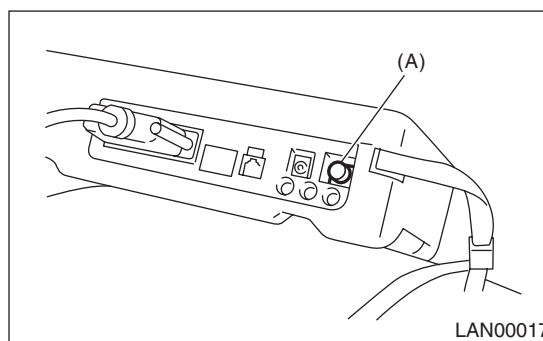

(A) Power switch

- 4) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 5) On the «Each System Check» display screen, select the {Integ. Unit mode} and then select the «ECM customizing».
- 6) Change the setting with UP/DOWN key and press the [YES] key.

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

List of body integrated unit registration item

NOTE:

Setting is different depending on the grade of vehicle.

Data	Initial setting	Registration	REMARKS
A/C ECM setting	OFF	ON	Illumination control does not operate if A/C ECM setting is set to "OFF" in case of model with auto A/C.
		OFF	If A/C ECM setting is set to "ON" in case of model without auto A/C, illumination change to night illumination and it is difficult to be recognized.
P/W ECM setting	OFF	ON	Set to "OFF".
		OFF	
Center display failure	OFF	ON	If center display failure is set to OFF, diagnosis for navigation display cannot be performed.
		OFF	
Wiper deicer setting	OFF	ON	ON signal does not output with operation of wiper deicer switch if wiper deicer is set to "OFF" in models with a wiper deicer.
		OFF	
Rear fog light setting	OFF	ON	Set to "OFF".
		OFF	
Factory initial setting (Reset of body integrated unit)	Factory	Factory (Reset)	If Factory initial setting is set to "Factory", registrations of items above is changed to "OFF". After setting, be sure to set to "Market".
		Market (Settlement)	

CAUTION:

- It is possible to control the original functions of vehicle when registrations of body integrated unit and function setting are corresponded to vehicle equipment.
- When body integrated unit is a new part or "Factory" mode, key illumination blinks to show equipment settings have not been completed.
- Be sure not to change Factory initial setting except installation of new body integrated unit.

NOTE:

"Factory" mode:

- Body integrated unit has not been set yet. It can be recognized by key illumination blinking with ignition switch turned to ON.
- All replacement body integrated units are set to Factory mode. When replacing a body integrated unit, be sure to perform the registration operation.

"Market" mode:

Each settings have been set. It can be recognized by key illumination coming on in concocting with room light and going off with ignition switch turned to ON.

7) Perform the Factory setting. On the «ECM customizing» display screen of Subaru Select Monitor, select the {Factory initial setting} and press the [YES] key.

8) Change the mode from Factory to Market.

9) Change to the immobilizer cartridge, and register the immobilizer key. (models with immobilizer)

10) Perform the registration according to the procedures of the IMMOBILIZER REGISTRATION OPERATION MANUAL.

11) When key registration is completed, "Do you want to register remote engine start?" is displayed. Perform registration only for equipped models.

12) Perform the function setting (ECM customizing).

<Ref. to LAN(diag)-22, FUNCTION SETTING (ECM CUSTOMIZING), OPERATION, Subaru Select Monitor.>

NOTE:

For details concerning the operation procedures, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

7. CLEAR MEMORY MODE

- 1) On the «Main Menu» screen, select {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
- 3) Press the [YES] key after the information of body integrated unit type is displayed.
- 4) On the «Integ. Unit mode failure diag» display screen, select {Clear Memory} and press the [YES] key.

Display	Contents to be monitored
Clear Memory?	Clear function of DTC and freeze frame data

- 5) When “Done” is shown on the display screen, turn the ignition switch to OFF.

NOTE:

For details concerning the operation procedures, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

8. FREEZE FRAME DATA

NOTE:

- Data stored at the time of trouble occurrence is shown on the display.
- Freeze frame data will be memorized maximum to 20.
- If freeze frame data is not stored in memory correctly (caused by low power supply of body integrated unit), DTC will be displayed with “?” on the head of it in the Subaru Select Monitor display. This shows it may be an unreliable reading.

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

9. FUNCTION SETTING (ECM CUSTOMIZING)

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
 - 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
 - 3) On the «Integ. Unit mode failure diag» display screen, select the {ECM customizing} and press the [YES] key.
 - 4) Change the setting with UP/DOWN key and press the [YES] key.
- List of function setting item (ECM customizing)

Data	Initial setting value	Customize setting	REMARKS	Destination Specifications
Off delay time	Normal		Delay time below can be selected by setting.	
			After door closed	
			After key unlock	
		OFF	0 seconds	
		Short	3 seconds	
		Normal	5 seconds	
		Long	8 seconds	
Auto lock time	30 seconds	0 — 60 seconds	Workable when Auto locking is set to “ON” and Automatic locking setup is “ON”. Time can be changed by 10 seconds: 0 (OFF) — 60 (maximum).	Not supported by North American specifications
Rr defogger op. mode	15 min.	15 min.	Wiper de-icer stops in 15 minutes automatically after switch is turned to ON.	
		Continuous	The wiper de-icer activates for 15 minutes and turns inactive for 2 minutes repeatedly until the switch is turned OFF.	
Wiper deicer op. mode	15 min.	15 min.	Wiper de-icer stops in 15 minutes automatically after switch is turned to ON.	
		Continuous	The wiper de-icer activates for 15 minutes and turns inactive for 2 minutes repeatedly until the switch is turned OFF.	
Security Alarm Setup	ON	ON	Security alarm (hazard, horn or siren) in active condition	
		OFF	Security alarm in inactive condition	
Impact Sensor Setup	OFF	ON	Enabled when the Impact Sensor Setup is set to “ON”. Impact sensor function becomes activated.	
		OFF	Impact sensor in inactive condition (Set Impact Sensor Setup of model without impact sensor to “OFF”.)	
Alarm monitor delay setting	ON		After the keyless lock operation, the alarm monitor starts after the following delay time has passed.	
		ON	Delay time is 30 seconds.	
		OFF	Delay time is 0 seconds.	
Lockout prevention	ON	ON	Lockout prevention in inactive condition (Lockout prevention does not operate if safety knob is locked by hand.)	
		OFF	Lockout prevention in inactive condition	
Impact Sensor	OFF	ON	Vehicle is controlled in impact sensor equipped mode. (Make sure to set models without the impact sensor to “OFF”. When the impact sensor is set to ON, hazard, the horn or siren will operate after doors are locked by the keyless entry system operation (Alarm monitor start).)	Set to “ON” when an optional impact sensor is installed.
		OFF	Vehicle is controlled in no impact sensor mode.	
Siren setting	OFF	ON	Siren sounds when alarm operates. (Set siren setting to “OFF” in model without siren. Horn does not sound if siren setting is set to ON.)	Set to “ON” when an optional siren is installed.
		OFF	Horn sounds when alarm operates.	

Subaru Select Monitor

LAN SYSTEM (DIAGNOSTICS)

Data	Initial setting value	Customize setting	REMARKS	Destination Specifications
Answer-back buzzer setup	ON	ON	Workable when answer-back buzzer setup is set to "ON". When lock/unlock is selected by keyless entry system operated, hazard answer-back buzzer operates.	
		OFF	When lock/unlock is selected by keyless entry system operated, answer-back buzzer does not sound.	
Hazard answer-back setup	ON	ON	Workable when hazard answer-back setup is set to "ON" When lock/unlock is selected by keyless entry system operated, hazard answer-back buzzer operates.	
		OFF	When lock/unlock is selected by keyless entry system operated, hazard answer-back does not operate.	
Automatic locking setup	ON	ON	Workable when Automatic locking setup is set to "ON" Automatic locking operates.	Not supported by North American specifications
		OFF	Automatic locking does not operate.	
Ans.-back Buzzer	ON	ON	Vehicle is controlled in answer-back buzzer equipped mode.	Not supported by North American specifications
		OFF	Vehicle is controlled in answer-back buzzer non-equipped mode. (Set Ans.-back Buzzer to OFF for models without an answer back buzzer.)	
Auto locking	ON	ON	Vehicle is controlled in auto locking equipped mode.	Not supported by North American specifications
		OFF	Vehicle is controlled in auto locking non-equipped mode. (Set Auto locking to OFF for models without auto locking.)	
Initial Keyless Setting	—	—	—	
		Execution	Settings of keyless entry system are initialized. (Auto-lock time: 30 sec., Answer-back buzzer setup: ON, Hazard answer-back setup: ON, Automatic locking setup: ON, Ans.-back Buzzer: ON)	
Initial button setting	—	—	—	
		Execution	Settings of each function are initialized. (Off delay time: Normal, Rr defogger op. mode: 15 min., Wiper deicer op. mode: 15 min., Lockout prevention: ON)	
Initial Security setting	—	—	—	Not supported by North American specifications
		Execution	Settings of security system are initialized. (Security Alarm Setup: OFF, Impact Sensor Setup: OFF, Alarm monitor delay setting: ON, Siren setting: OFF)	
Passive arming	OFF	ON	Enabled when passive arming is set to "ON."	
		OFF		
Door open warning (prevention of battery run-out)	OFF	ON	If detecting door open for 30 minutes, room light, key illumination and door warning light are turned off to prevent battery run-out.	
		OFF	Room light, key illumination and door warning light is not turned off.	

5) After setting, make sure that vehicle equipment matches the changed settings in the {Current Data Display & Save}.

CAUTION:

- The above settings most match the actual vehicle equipment for proper operation.
- Do not change settings other than the above while setting the functions.
- Be sure not to change Factory initial setting except installation of new body integrated unit.

NOTE:

For details concerning the operation procedures, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

10.FUNCTION CHECK


In order to check the body integrated unit function, inspect the body integrated unit and actuator using Subaru Select Monitor without operating switches.

1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.

2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.

3) On the «Integ. Unit mode failure diag» display screen, select {Function Check} and press the [YES] key.

4) Select the item to be operated on the «Function Check» display screen with «UP/Down key» and press the [YES] key.

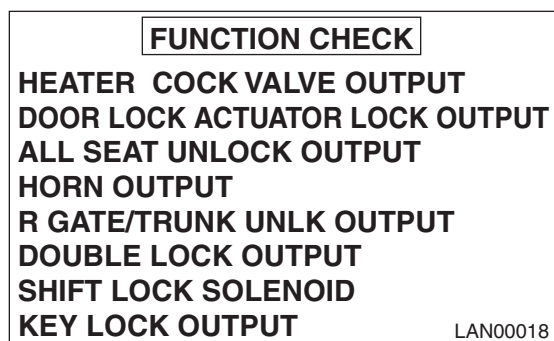

5) Pressing [YES] starts, [NO] cancels the operation and [YES] returns to the System Operation Check Mode display screen.

NOTE:

If not equipped (based on area or condition), process will not go on.

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. WITHOUT SUBARU SELECT MONITOR

NOTE:

Use the Subaru Select Monitor; DTCs cannot be read without it.

2. WITH SUBARU SELECT MONITOR

For details concerning the DTC read procedure, refer to "Subaru Select Monitor". <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>

8. Clear Memory Mode

A: OPERATION

1. WITHOUT SUBARU SELECT MONITOR

NOTE:

Use the Subaru Select Monitor for the Clear Memory Mode.

2. WITH SUBARU SELECT MONITOR

For details concerning DTC clear operation, refer to "Subaru Select Monitor". <Ref. to LAN(diag)-21, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>

9. Read Current Data

A: OPERATION

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
 - 2) On the «System Selection Menu» display screen, select the {Integ. unit mode} and press the [YES] key.
 - 3) On the «Integ. unit mode failure diag» display screen, select the {Current Data Display & Save} and press the [YES] key.
 - 4) On the «Data Display Menu» screen, select the {12 Data Display} and press the [YES] key.
 - 5) Using the scroll key, scroll the display screen up or down until the desired data is shown.
- <Ref. to LAN(diag)-13, DISPLAY OF ANALOG DATA, OPERATION, Subaru Select Monitor.> <Ref. to LAN(diag)-14, DISPLAY OF ON/OFF DATA, OPERATION, Subaru Select Monitor.> <Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>

10.Function Setting (Customize)

A: OPERATION

1. WITH SUBARU SELECT MONITOR

For detailed procedures of function setting (ECM customizing), refer to "SUBARU SELECT MONITOR". <Ref. to LAN(diag)-22, FUNCTION SETTING (ECM CUSTOMIZING), OPERATION, Subaru Select Monitor.>

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

11.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Diagnosis content	Note
None	Communication for Initializing Impossible	Open or short in Subaru Select Monitor communication line	<Ref. to LAN(diag)-32, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
None	Diagnostic Trouble Code (DTC) Is Not Stored	Internal error of combination meter	<Ref. to LAN(diag)-34, DIAGNOSTIC TROUBLE CODE (DTC) IS NOT STORED, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0100	Integ. Unit System Error	Body integrated unit internal error	<Ref. to LAN(diag)-35, DTC B0100 INTEG. UNIT SYSTEM ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0101	Batt P/Supply Malfunction Cont.	Open or short in battery power supply control circuit	<Ref. to LAN(diag)-36, DTC B0101 BATT P/SUPPLY MALFUNCTION CONT., Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0102	Batt P/Supply Malfunction Cont.	Open or short of battery power supply backup circuit	<Ref. to LAN(diag)-38, DTC B0102 BATT P/SUPPLY MALFUNCTION CONT., Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0103	Ignition Power Failure	Open or short in IGN power supply circuit	<Ref. to LAN(diag)-40, DTC B0103 IGNITION POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0104	ACC Power Failure	Open or short in ACC power supply circuit	<Ref. to LAN(diag)-42, DTC B0104 ACC POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0105	Key interlock circuit abnormal	Ground short of key interlock circuit	<Ref. to LAN(diag)-44, DTC B0105 KEY INTERLOCK CIRCUIT ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0106	Shift Lock Circuit Failure	Ground short of shift lock circuit	<Ref. to LAN(diag)-46, DTC B0106 SHIFT LOCK CIRCUIT FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0201	CAN-HS Counter Abnormal	Malfunction of high-speed CAN communication	<Ref. to LAN(diag)-48, DTC B0201 CAN-HS COUNTER ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0202	CAN-HS Bus Off	Any unit is cut communication.	<Ref. to LAN(diag)-52, DTC B0202 CAN-HS BUS OFF, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0211	CAN-HS ECM Data Abnormal	Received error data from ECM.	<Ref. to LAN(diag)-56, DTC B0211 CAN-HS ECM DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0212	CAN-HS TCM Data Abnormal	Received error data from TCM.	<Ref. to LAN(diag)-58, DTC B0212 CAN-HS TCM DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0213	CAN-HS VDC/ABS Data Abnormal	Received error data from VDC/ABS unit.	<Ref. to LAN(diag)-59, DTC B0213 CAN-HS VDC/ABS DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0221	CAN-HS ECM No-receive Data	Not received error data from ECM.	<Ref. to LAN(diag)-61, DTC B0221 CAN-HS ECM NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0222	CAN-HS TCM No-receive Data	Not received error data from TCM.	<Ref. to LAN(diag)-65, DTC B0222 CAN-HS TCM NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0223	CAN-HS VDC/ABS No-receive Data	Not received error data from VDC/ABS unit.	<Ref. to LAN(diag)-67, DTC B0223 CAN-HS VDC/ABS NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

DTC	Item	Diagnosis content	Note
B0300	CAN-LS Malfunction	Open or short in CAN-LS circuit, on each side or both sides.	<Ref. to LAN(diag)-70, DTC B0300 CAN-LS MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0301	CAN-LS Counter Abnormal	Malfunction of CAN-LS communication	<Ref. to LAN(diag)-73, DTC B0301 CAN-LS COUNTER ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0302	CAN-LS Bus Off	Any unit is cut communication.	<Ref. to LAN(diag)-76, DTC B0302 CAN-LS BUS OFF, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0311	CAN-LS Meter Unit Data Abnormal	Received error data from meter.	<Ref. to LAN(diag)-79, DTC B0311 CAN-LS METER UNIT DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0313	CAN-LS Monitor Data Abnormal	Received error data from monitor.	<Ref. to LAN(diag)-80, DTC B0313 CAN-LS MONITOR DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0321	CAN-LS Meter No-receive Data	Not received error data from meter.	<Ref. to LAN(diag)-81, DTC B0321 CAN-LS METER NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B0401	M Collation NG	Malfunction related immobilizer	<Ref. to IM(diag)-14, List of Diagnostic Trouble Code (DTC).>
B0402	Immobilizer Key Collation NG	Malfunction related immobilizer	<Ref. to IM(diag)-14, List of Diagnostic Trouble Code (DTC).>
B0403	E/G Request NG	Malfunction related immobilizer	<Ref. to IM(diag)-14, List of Diagnostic Trouble Code (DTC).>
B0500	Keyless UART Com. Malfunction	Open or short circuit in keyless UART circuit	<Ref. to LAN(diag)-83, DTC B0500 KEYLESS UART COM. MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

1. DTC TABLE

NOTE:

When more than two DTC codes are recorded, referring to their combination will make it easy to identify the possible cause. Refer to the list for typical examples.

DTC to Check	Diagnostic Code that was displayed.					Probable cause
	BODY INTE-GRATED UNIT	ECM	TCM	VDC/ABSCM	Combina-tion meter display	
B0100 <Ref. to LAN(diag)-35, DTC B0100 INTEG. UNIT SYS-TEM ERROR, Diagnostic Proce-dure with Diagnostic Trouble Code (DTC).>	B0100	P0600	P1718	—	Er IU	There could be a problem in the body integrated unit.
B0221 <Ref. to LAN(diag)-56, DTC B0211 CAN-HS ECM DATA ABNORMAL, Diagnostic Proce-dure with Diagnostic Trouble Code (DTC).>	B0221	—	P1718	C0057	Er HC	It is possible that the ECM is faulty.
B0222 <Ref. to LAN(diag)-58, DTC B0212 CAN-HS TCM DATA ABNORMAL, Diagnostic Proce-dure with Diagnostic Trouble Code (DTC).>	B0222	P0600	—	C0057	Er HC	It is possible that the TCM is faulty.
B0223 <Ref. to LAN(diag)-59, DTC B0213 CAN-HS VDC/ABS DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0223	P0600	P1718	—	Er HC	It is possible that the VDC/ABSCM is faulty.
B0321 <Ref. to LAN(diag)-81, DTC B0321 CAN-LS METER NO-RECEIVE DATA, Diagnostic Pro-cedure with Diagnostic Trouble Code (DTC).>	B0321	—	—	—	—	It is possible that the combi-nation meter is faulty.
B0313 <Ref. to LAN(diag)-80, DTC B0313 CAN-LS MONITOR DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	B0313	—	—	—	—	It is possible that the navi-gation monitor is faulty.
B0500 <Ref. to LAN(diag)-83, DTC B0500 KEYLESS UART COM. MALFUNCTION, Diagnos-tic Procedure with Diagnostic Trouble Code (DTC).>	B0500	—	—	—	—	It is possible that the key-less entry module is faulty.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

12.Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: COMMUNICATION FOR INITIALIZING IMPOSSIBLE

NOTE:

- DTC is displayed in the sequence of the amount of counter numbers.
- When more than two DTCs are displayed, perform the diagnosis of top one.


DIAGNOSIS:

Subaru Select Monitor communication line is open or shorted.

TROUBLE SYMPTOM:

Not communicable with Subaru Select Monitor.

WIRING DIAGRAM:

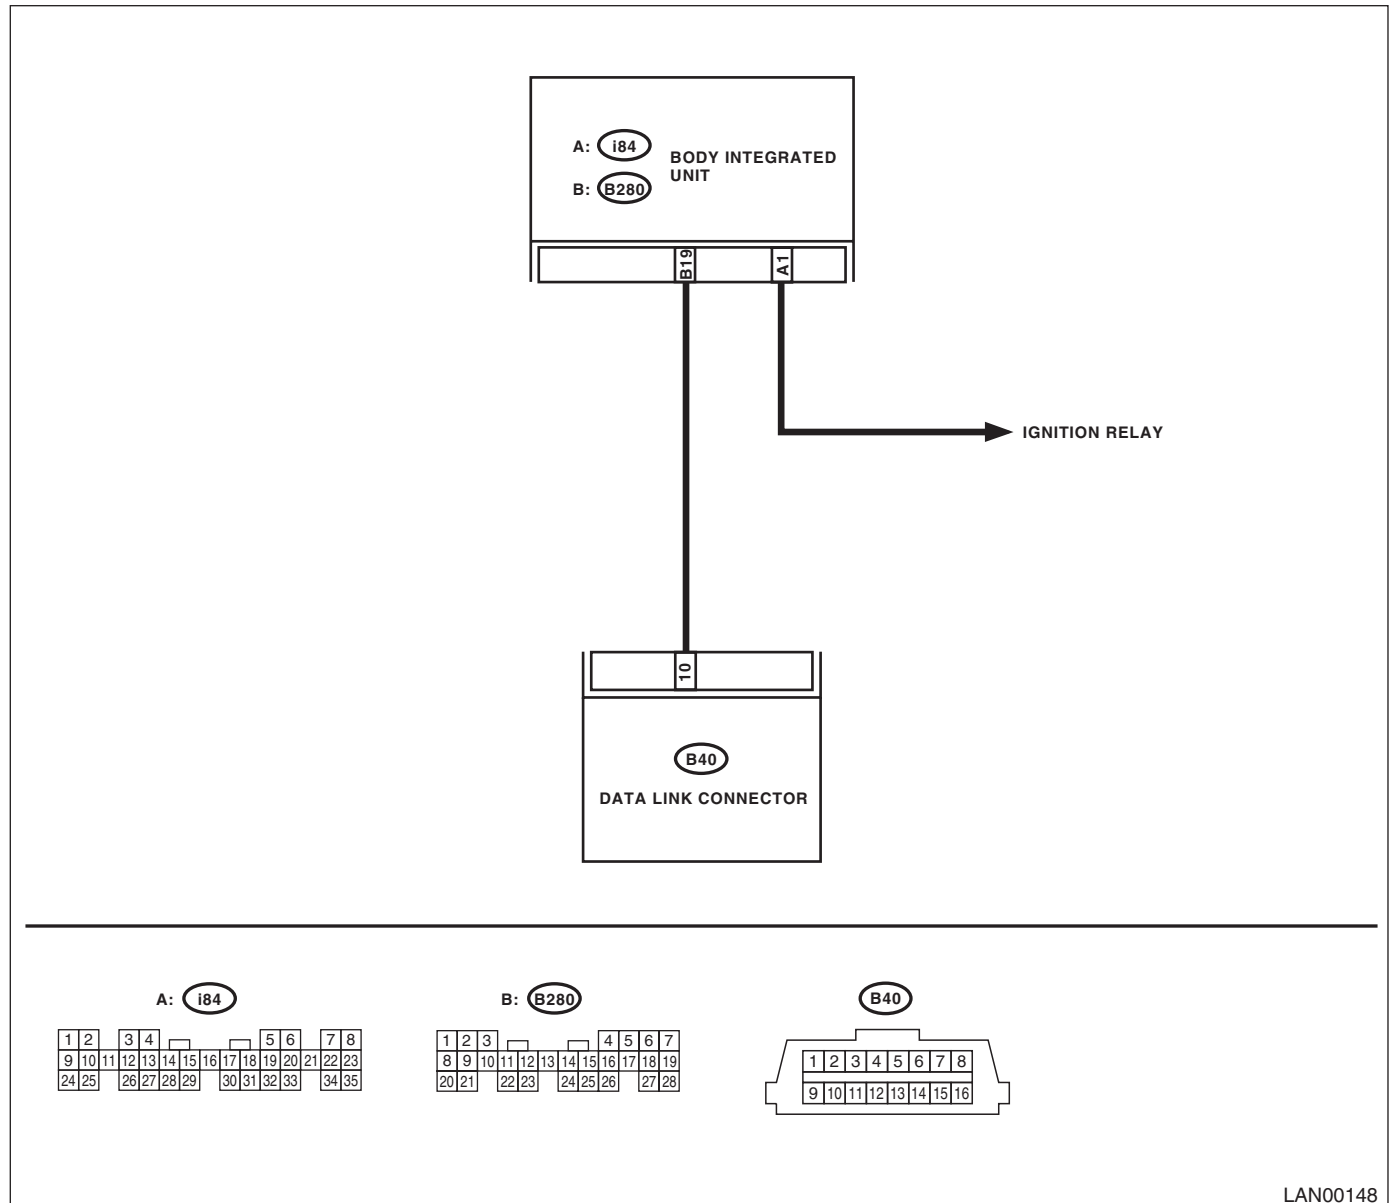

LAN00148

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No	
1	CHECK IGNITION SWITCH.	Is the ignition switch ON?	Go to step 2.	Turn the ignition switch to ON, and select Integ. Unit mode using Subaru Select Monitor.
2	CHECK BATTERY. 1) Turn the ignition switch to OFF. 2) Measure the battery voltage.	Is the voltage 11 V or more?	Go to step 3.	Charge or replace the battery.
3	CHECK BATTERY TERMINAL.	Is there poor contact at the battery terminal?	Repair or tighten the battery terminal.	Go to step 4.
4	CHECK COMMUNICATION OF SUBARU SELECT MONITOR. 1) Turn the ignition switch to ON. 2) Using the Subaru Select Monitor, check whether communication to other systems can be executed normally.	Are system and model year displayed?	Go to step 7.	Go to step 5.
5	CHECK COMMUNICATION OF SUBARU SELECT MONITOR. 1) Turn the ignition switch to OFF. 2) Disconnect the body integrated unit connector. 3) Turn the ignition switch to ON. 4) Check whether communication to other systems can be executed normally.	Are system and model year displayed?	Go to step 7.	Go to step 6.
6	CHECK HARNESS CONNECTOR BETWEEN EACH CONTROL UNIT AND SUBARU SELECT MONITOR. 1) Turn the ignition switch to ON. 2) Disconnect the body integrated unit connector. 3) Measure the resistance between data link connector and chassis ground. Connector & terminal (B40) No. 10 — Chassis ground:	Is the resistance 1 MΩ or more?	Go to step 7.	Repair the harness and connector between each control unit and Subaru Select Monitor.
7	CHECK OUTPUT SIGNAL TO BODY INTEGRATED UNIT. 1) Turn the ignition switch to ON. 2) Measure the voltage between body integrated unit and chassis ground. Connector & terminal (B40) No. 10 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 8.	Repair the harness and connector between each control unit and Subaru Select Monitor.
8	CHECK HARNESS CONNECTOR BETWEEN BODY INTEGRATED UNIT AND DATA LINK CONNECTOR. Measure the resistance between body integrated unit and data link connector. Connector & terminal (B40) No. 10 — (B280) No. 19:	Is resistance less than 1 Ω?	Go to step 9.	Repair the harness and connector between body integrated unit and Subaru Select Monitor.
9	CHECK INSTALLATION OF BODY INTEGRATED UNIT CONNECTOR. Turn the ignition switch to OFF.	Is the body integrated unit connector inserted into body integrated unit until the clamp locks onto it?	Go to step 10.	Insert the body integrated unit connector into body integrated unit.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
10 CHECK POWER SUPPLY CIRCUIT. 1) Turn the ignition switch to ON (engine OFF). 2) Measure the ignition voltage between body integrated unit connector and chassis ground. Connector & terminal (i84) No. 1 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 11.	Repair the open circuit of harness between body integrated unit and battery.
11 CHECK HARNESS CONNECTOR BETWEEN BODY INTEGRATED UNIT AND CHASSIS GROUND. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from body integrated unit. 3) Measure the resistance of harness between the body integrated unit and chassis ground. Connector & terminal (B280) No. 19 — Chassis ground:	Is the resistance 1 MΩ or more?	Go to step 12.	Repair the poor contact of harness between body integrated unit and ground.
12 CHECK POOR CONTACT OF CONNECTORS.	Is there poor contact at control unit ground and Subaru Select Monitor?	Repair the poor contact of connector.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>

CAUTION:

When replacing body integrated unit on the model with immobilizer system, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.

B: DIAGNOSTIC TROUBLE CODE (DTC) IS NOT STORED

DIAGNOSIS:

Defective combination meter

TROUBLE SYMPTOM:

- Communication error display in odometer/trip meter is not cleared.
- “No trouble code” is displayed on Subaru Select Monitor.

NOTE:

If DTC is not displayed on Subaru Select Monitor, LAN communication system should be OK.

Step	Check	Yes	No
1 CHECK COMMUNICATION ERROR DISPLAY WITH COMBINATION METER. Turn the ignition switch to ON.	Is communication error displayed?	Inspect the DTC.	Go to step 2.
2 CHECK COMBINATION METER. Perform the self-diagnosis of combination meter.	Is combination meter OK?	Go to step 3.	Replace the combination meter. <Ref. to IDI-14, Combination Meter.>
3 CHECK THE BODY INTEGRATED UNIT. 1) Display the current data of ECM using Subaru Select Monitor. 2) Check data of “body integrated unit data received”.	Is “Yes” displayed?	Go to step 4.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
4 CHECK THE BODY INTEGRATED UNIT. 1) Display the current data of ECM using Subaru Select Monitor. 2) Check data of “body Integrated unit counter update”.	Is “Yes” displayed?	Repair the poor contact of connector.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

C: DTC B0100 INTEG. UNIT SYSTEM ERROR

DTC DETECTING CONDITION:

System error in body integrated unit

TROUBLE SYMPTOM:

- Check light comes on in the combination meter, and displays communication error display “Er IU”.
- LAN communication immobilizer function may not be executed normally.

Step	Check	Yes	No
1 CHECK ALL DTCS.	Is DTC concerning ECM displayed?	Go to step 2.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
2 CHECK DTC CONCERNING ECM.	Is output DTC on ECM concerning CAN communication failure?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Perform the diagnosis according to DTC concerning ECM.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

D: DTC B0101 BATT P/SUPPLY MALFUNCTION CONT.

DTC DETECTING CONDITION:

Battery power supply control circuit is open or shorted.


TROUBLE SYMPTOM:

No malfunction occurs because the back-up power supply is activated.

NOTE:

When B0102 BATT p/supply (backup) malfunction is output at the same time, all the function of body integrated unit may not operate.

WIRING DIAGRAM:

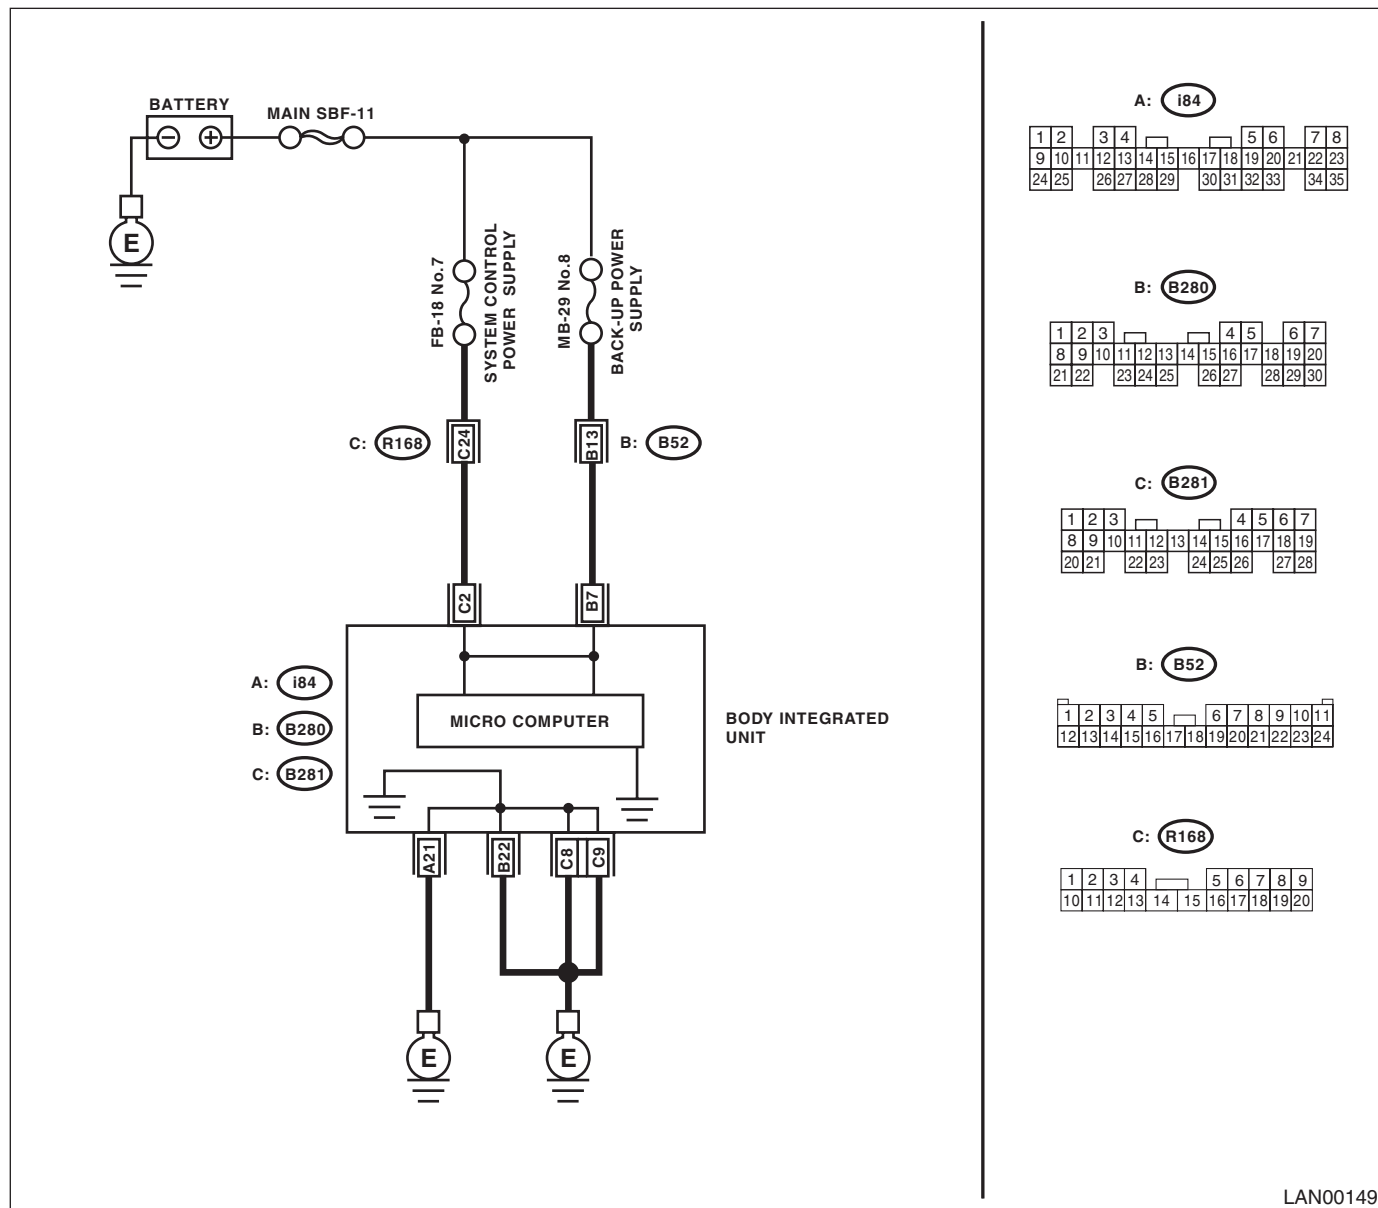

LAN00149

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove the fuse (No. 7).	Is the fuse blown out?	Replace the fuse (No. 7). If the replaced fuse has blown out easily, repair the short circuit of harness between fuse (No. 7) and body integrated unit.	Go to step 2.
2 CONTINUITY CHECK OF WIRING HARNESS. 1) Disconnect the connector (B281) from body integrated unit. 2) Measure the voltage between body integrated unit connector and chassis ground. Connector & terminal (B281) No. 2 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 3.	Repair the harness for open or shorted circuit between body integrated unit and fuse.
3 CHECK POOR CONTACT OF CONNECTORS.	Is there poor contact in body integrated unit connector?	Repair the poor contact of connector.	Go to step 4.
4 CHECK BODY INTEGRATED UNIT HARNESS. 1) Connect all connectors. 2) Perform the Clear Memory Mode. 3) Read DTC.	Is the same DTC displayed?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Temporary poor contact occurs.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

E: DTC B0102 BATT P/SUPPLY MALFUNCTION CONT.

DTC DETECTING CONDITION:

Battery power supply backup circuit is open or shorted.


TROUBLE SYMPTOM:

- Engine malfunction indicator light may illuminates.
- Keyless entry, room light and key illumination do not operate.
- “En IU” may display in combination meter.

NOTE:

When some B0101 BATT p/supply malfunction cont. are output at the same time, all function of body integrated unit may not function.

WIRING DIAGRAM:

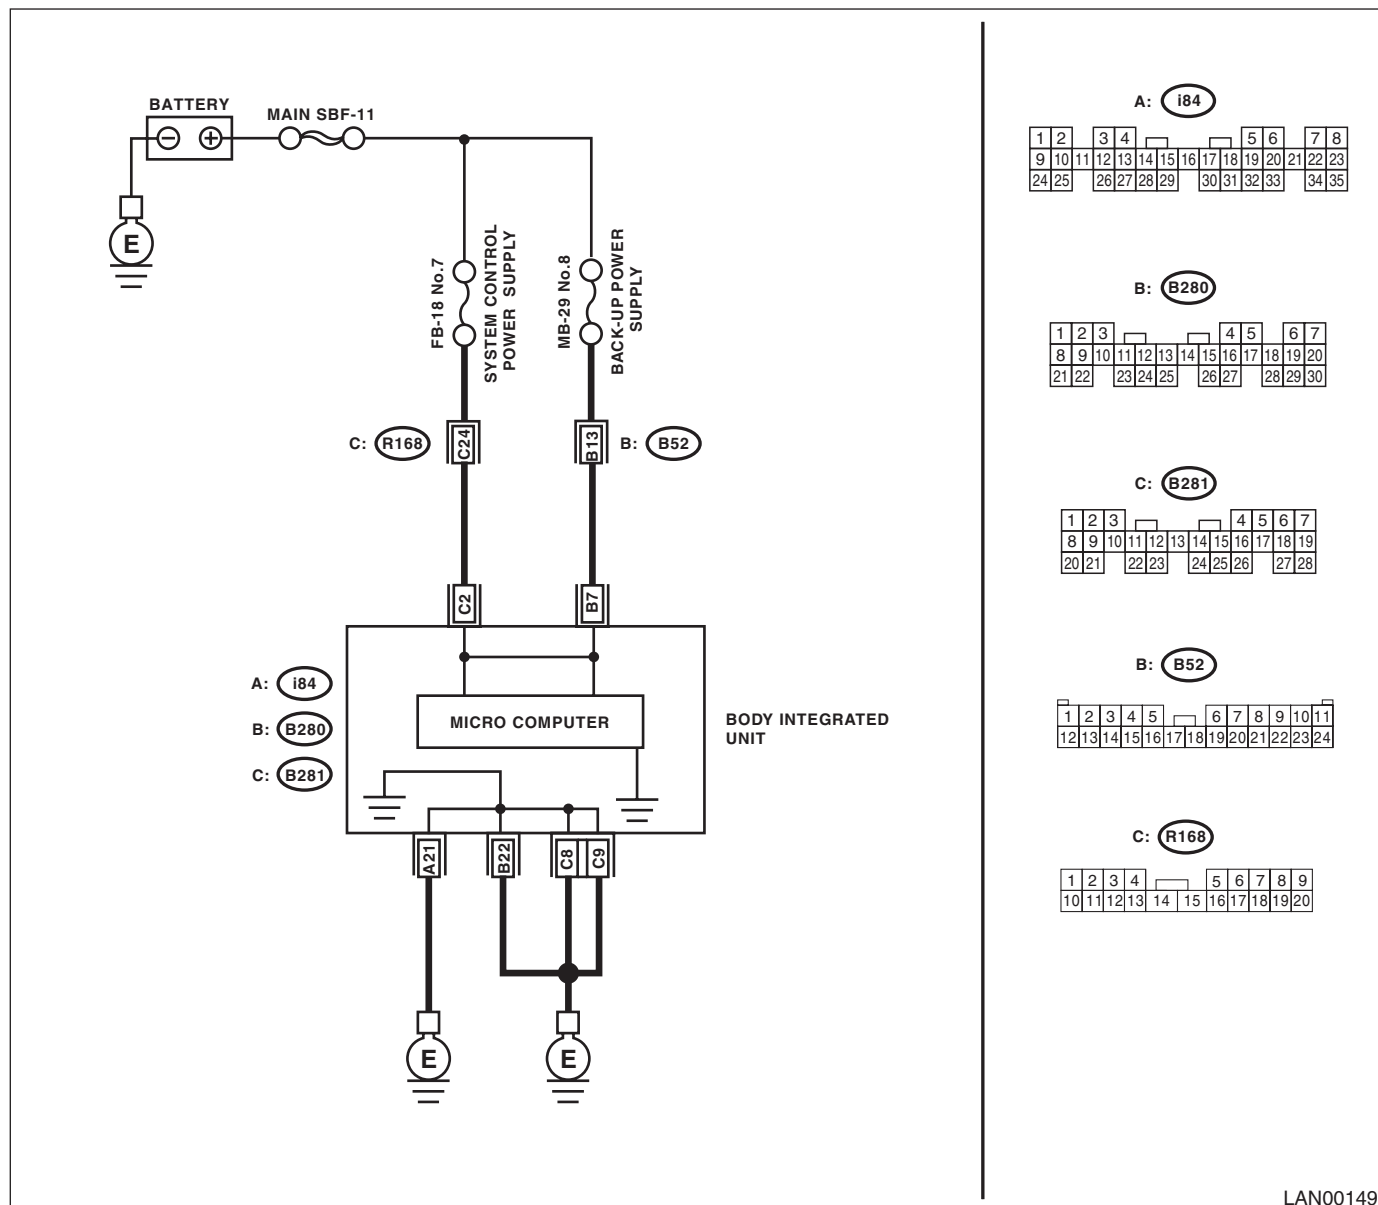

LAN00149


Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove fuse (No. 8).	Is the fuse blown out?	Replace fuse (No. 8). If the replaced fuse has blown out easily, repair the short circuit of harness between fuse (No. 8) and body integrated unit.	Go to step 2.
2 CONTINUITY CHECK OF WIRING HARNESS. 1) Disconnect the connector (B280) from body integrated unit. 2) Measure the voltage between body integrated unit connector and chassis ground. Connector & terminal (B280) No. 7 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 3.	Repair the harness for open or shorted circuit between body integrated unit and fuse.
3 CHECK POOR CONTACT OF CONNECTORS.	Is there poor contact in body integrated unit connector?	Repair the poor contact of connector.	Go to step 4.
4 CHECK BODY INTEGRATED UNIT HARNESS. 1) Connect all connectors. 2) Perform the Clear Memory Mode. 3) Read DTC.	Is the same DTC displayed?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Temporary poor contact occurs.

LAN SYSTEM (DIAGNOSTICS)

WIRING DIAGRAM:

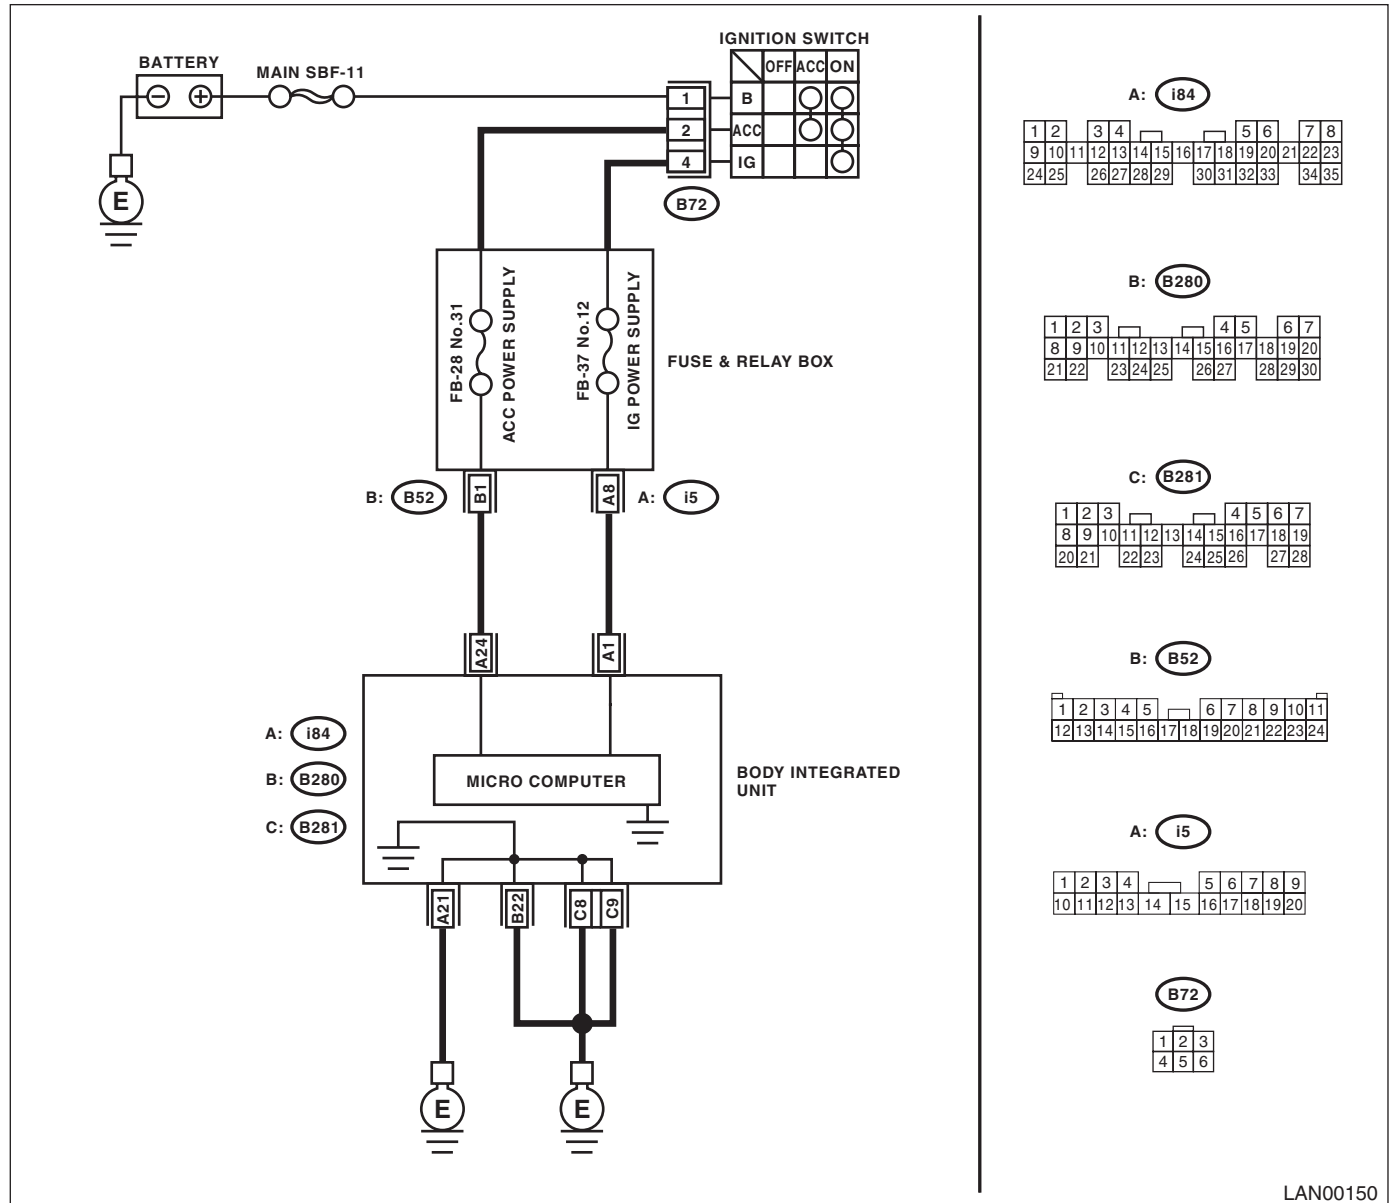

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove the fuse (No. 12).	Is the fuse blown out?	Replace fuse (No. 12). If the replaced fuse has blown out easily, repair the short circuit of harness between fuse (No. 12) and body integrated unit.	Go to step 2.
2 CONTINUITY CHECK OF WIRING HARNESS. 1) Disconnect the connector (i84) from body integrated unit. 2) Turn the ignition switch to ON. 3) Measure the voltage between body integrated unit connector and chassis ground. Connector & terminal (i84) No. 1 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 3.	Repair the harness for open or shorted circuit between body integrated unit and fuse.
3 CHECK POOR CONTACT IN CONNECTOR.	Is there poor contact in body integrated unit connector?	Repair the poor contact of connector.	Go to step 4.
4 CHECK BODY INTEGRATED UNIT HARNESS. 1) Connect all connectors. 2) Perform the Clear Memory Mode. 3) Read DTC.	Is the same DTC displayed?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Temporary poor contact occurs.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

G: DTC B0104 ACC POWER FAILURE


DTC DETECTING CONDITION:

ACC power supply circuit is open or shorted.

TROUBLE SYMPTOM:

Rear wiper may not operate at ACC position.

WIRING DIAGRAM:

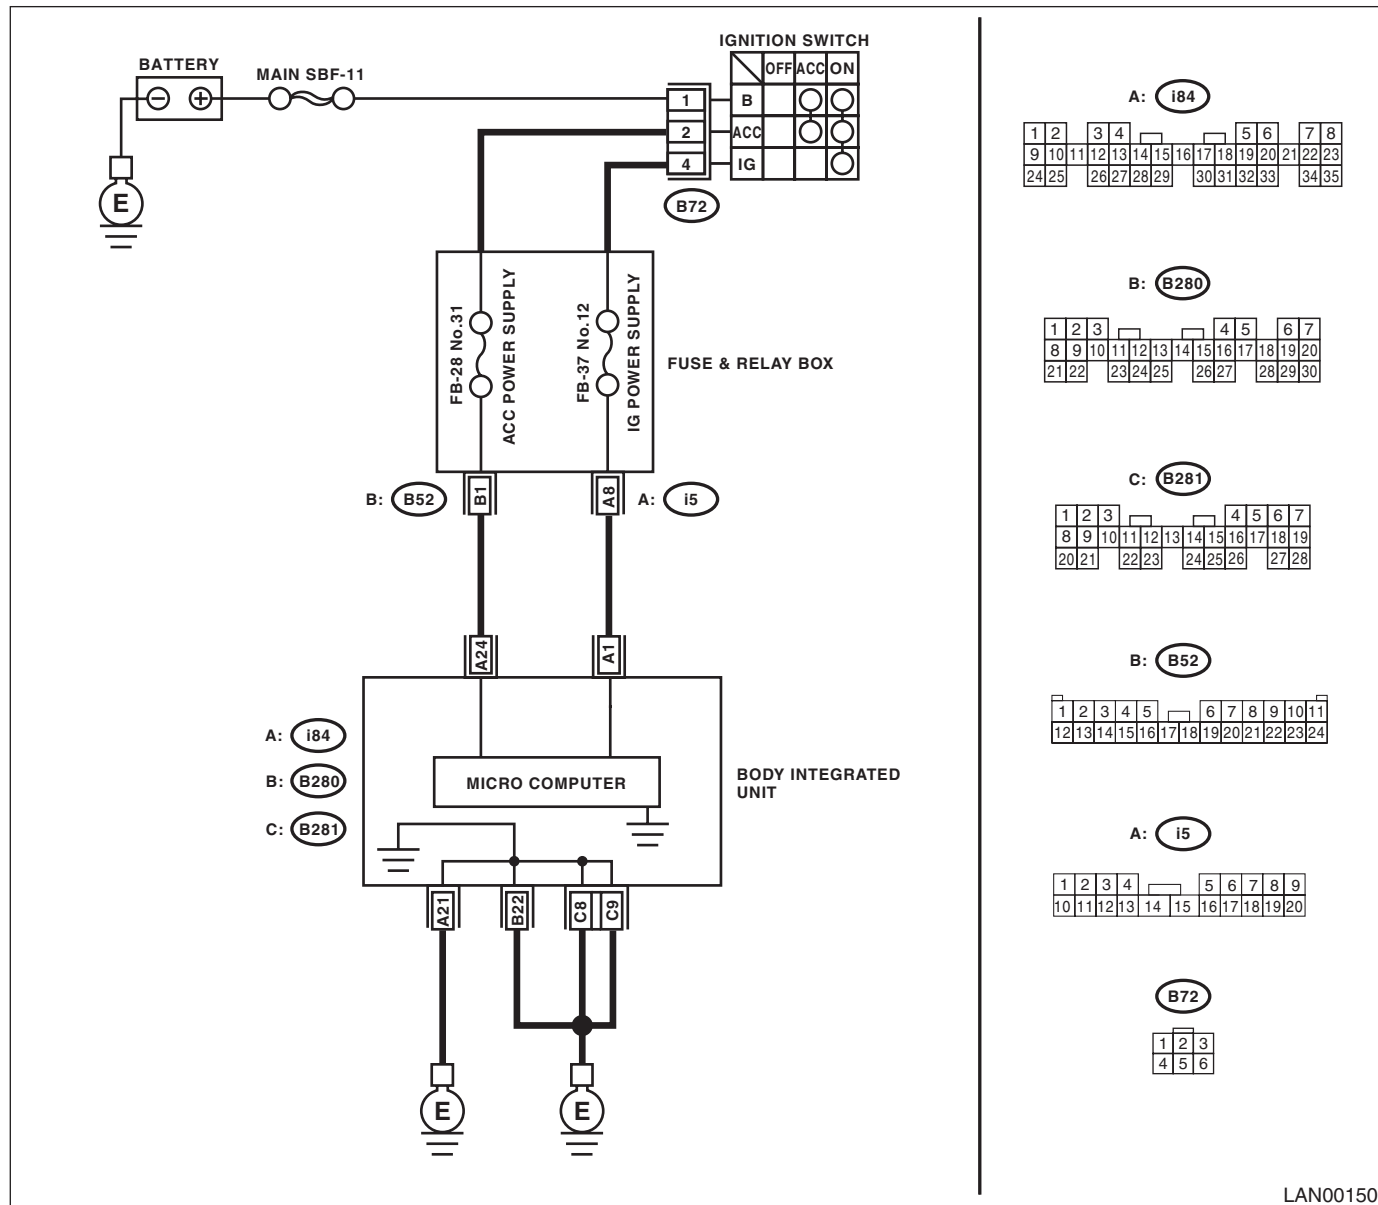

LAN00150

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK FUSE. 1) Turn the ignition switch to OFF. 2) Remove fuse (No. 31).	Is the fuse blown out?	Replace fuse (No. 31). If the replaced fuse has blown out easily, repair the short circuit of harness between fuse (No. 31) and body integrated unit.	Go to step 2.
2 CONTINUITY CHECK OF WIRING HARNESS. 1) Disconnect the connector (i84) from body integrated unit. 2) Turn the ignition switch to ON. 3) Measure the voltage between body integrated unit connector and chassis ground. Connector & terminal (i84) No. 24 (+) — Chassis ground (-):	Is the voltage 10 V or more?	Go to step 3.	Repair the harness for open or shorted circuit between body integrated unit and fuse.
3 CHECK POOR CONTACT IN CONNECTOR.	Is there poor contact in body integrated unit connector?	Repair the poor contact of connector.	Go to step 4.
4 CHECK BODY INTEGRATED UNIT HARNESS. 1) Connect all connectors. 2) Perform the Clear Memory Mode. 3) Read DTC.	Is DTC displayed?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Temporary poor contact occurs.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

H: DTC B0105 KEY INTERLOCK CIRCUIT ABNORMAL



DTC DETECTING CONDITION:

Key interlock circuit is shorted to ground.

TROUBLE SYMPTOM:

- No input of key interlock power supply
- Key interlock does not release or remain locked.

WIRING DIAGRAM:

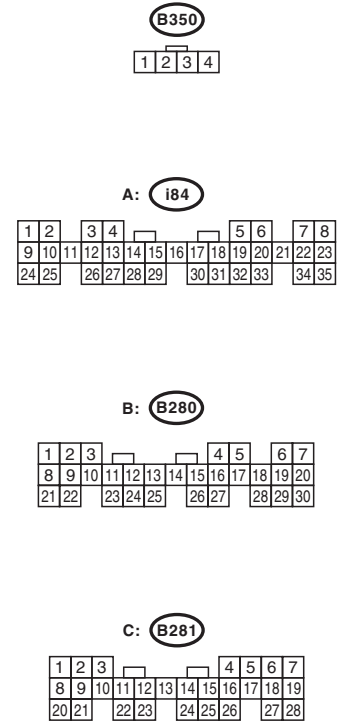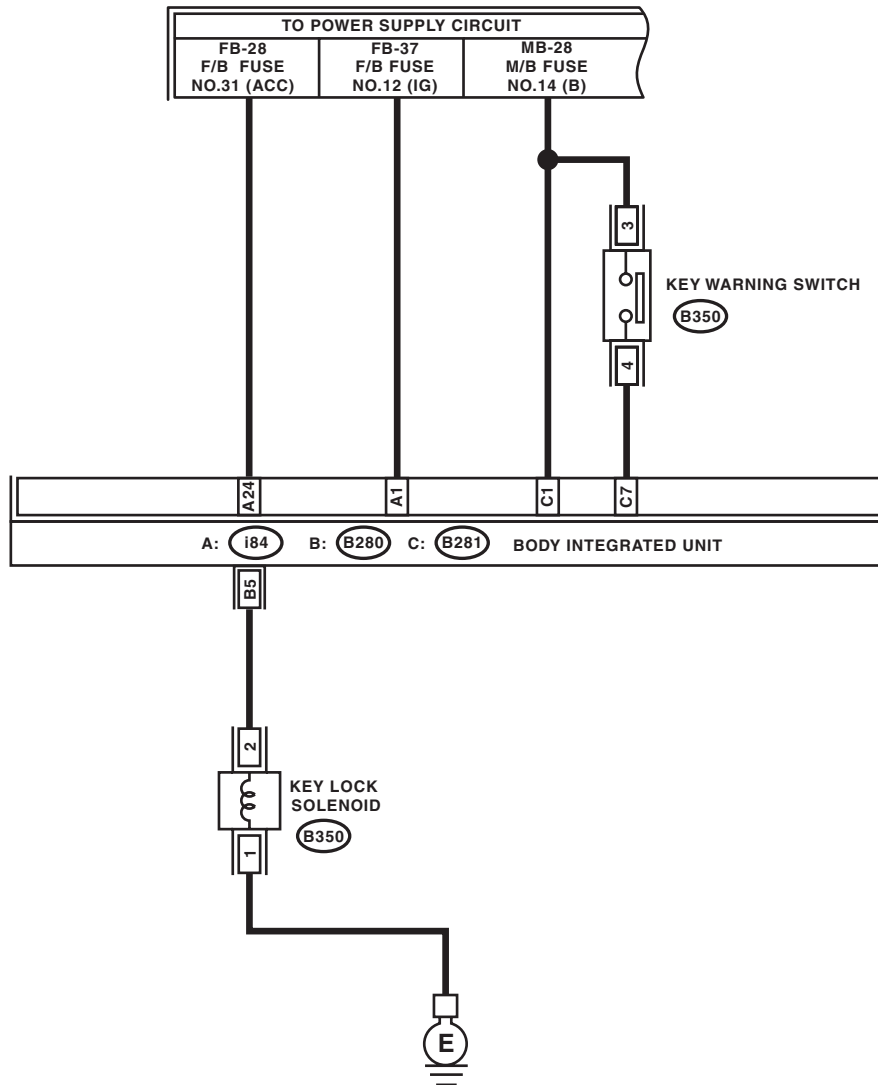

LAN00169

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
1	CHECK KEY LOCK SOLENOID. 1) Disconnect the connector of the key lock solenoid. 2) Measure the internal resistance of key lock solenoid. Connector & terminal (B350) No. 1 — No. 2:	Is the resistance between 10 — 30 Ω ?	Go to step 2.	Replace the key lock solenoid.
2	CHECK GROUND CIRCUIT. 1) Disconnect the connector of the key lock solenoid. 2) Measure the resistance between the key lock solenoid connector and chassis ground. Connector & terminal (B350) No. 1 — Chassis ground:	Is resistance less than 10 Ω ?	Go to step 3.	Check the key lock solenoid ground circuit for open circuit or for proper installation, and repair the ground circuit if faulty.
3	CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and the key lock solenoid connector (B350). 2) Measure the resistance between body integrated unit connector and chassis ground. Connector & terminal (B280) No. 5 — Chassis ground:	Is the resistance 1 M Ω or more?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Repair the short circuit of harness or replace harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

I: DTC B0106 SHIFT LOCK CIRCUIT FAILURE


DTC DETECTING CONDITION:

Shift lock circuit is shorted to ground.

TROUBLE SYMPTOM:

Shift lock does not be released or remain locked.

WIRING DIAGRAM:

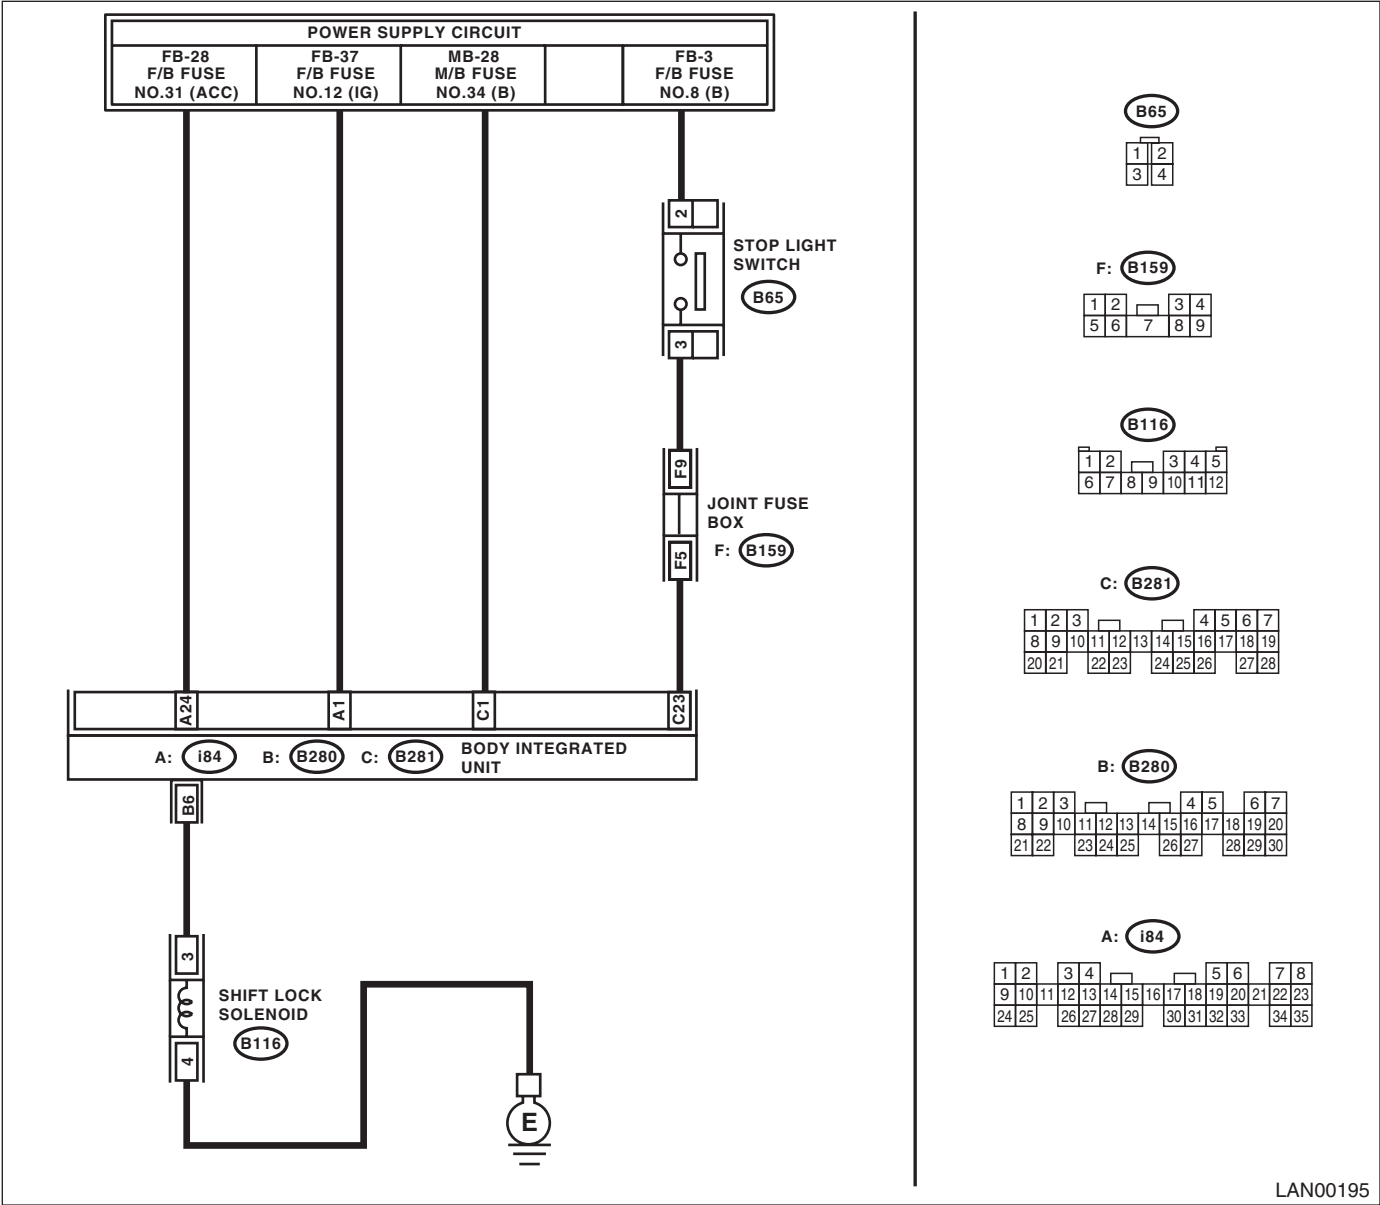

LAN00195

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280). 2) Measure the resistance between body integrated unit connector and chassis ground. Connector & terminal (B280) No. 6 — Chassis ground:	Is the resistance between 10 and 30 Ω ?	Go to step 5.	Go to step 2.
2 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280). 2) Disconnect the shift lock solenoid connector. 3) Measure the resistance between body integrated unit connector and shift lock solenoid connector. Connector & terminal (B280) No. 6 — (B116) No. 3:	Is resistance less than 10 Ω ?	Go to step 3.	Repair or replace the open or short circuit of harness.
3 CHECK SHIFT LOCK SOLENOID. 1) Disconnect the shift lock solenoid connector. 2) Measure the internal resistance of shift lock solenoid. Connector & terminal (B116) No. 3 — No. 4:	Is the resistance between 10 and 30 Ω ?	Go to step 4.	Replace the shift lock solenoid.
4 CHECKING THE GROUND CIRCUIT. 1) Disconnect the shift lock solenoid connector. 2) Measure the resistance between the shield connector and chassis ground. Connector & terminal (B116) No. 4 — Chassis ground:	Is resistance less than 10 Ω ?	Temporary poor contact occurs. Check the connection of each terminal and repair when necessary.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
5 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and shift lock solenoid connector (B116). 2) Measure the resistance between body integrated unit connector (B280) and chassis ground. Connector & terminal (B280) No. 6 — Chassis ground:	Is the resistance 1 M Ω or more?	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>	Repair the short circuit of harness or replace harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

J: DTC B0201 CAN-HS COUNTER ABNORMAL


DTC DETECTING CONDITION:

High speed CAN communication of body integrated unit which monitor the error data and non-received data are faulty.

TROUBLE SYMPTOM:

- "Er HC" is displayed in odo/trip meter.
- Malfunction indicator light illuminates.

WIRING DIAGRAM:

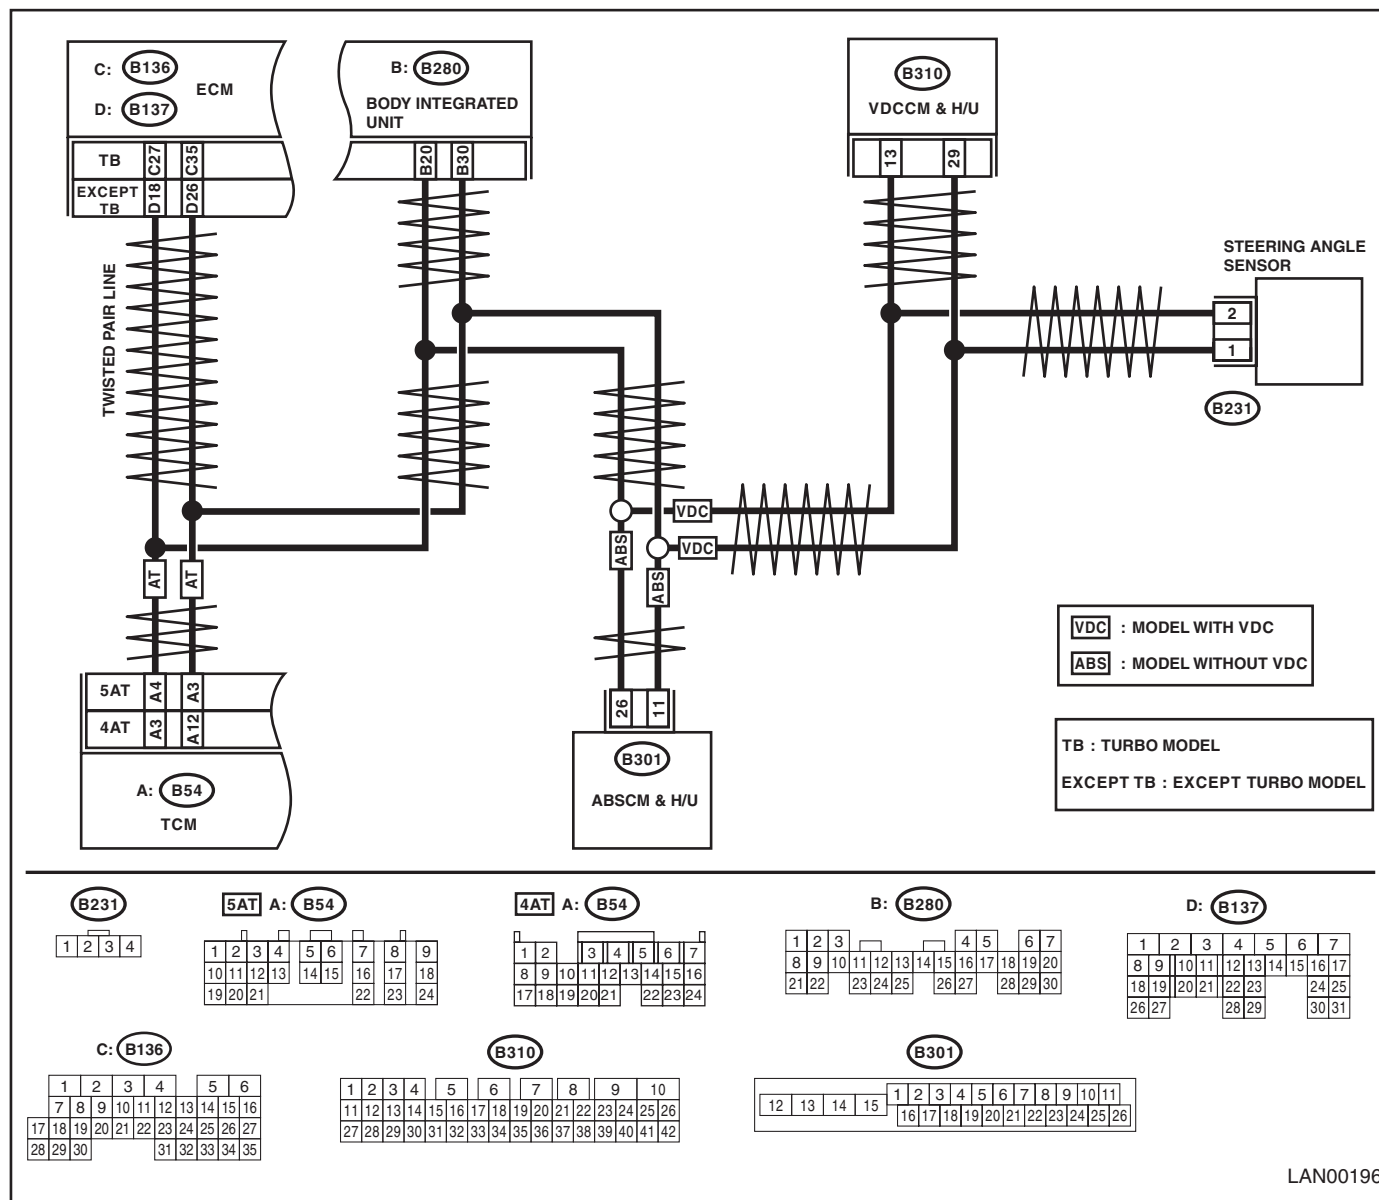

LAN00196

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

	Step	Check	Yes	No
1	CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280). 2) Connect the tester to vehicle side connector, and measure the resistance. Connector & terminal (B280) No. 20 — No. 30:	Is the resistance between 55 and 65 Ω ?	Go to step 2.	Go to step 4.
2	CHECK HARNESS. 1) Disconnect the TCM connector (B54). 2) Connect the tester to vehicle side connector, and measure the resistance. Connector & terminal (B54) No. 3 — No. 4:	Is the resistance between 55 and 65 Ω ?	Go to step 3.	Go to step 4.
3	CHECK HARNESS. 1) Disconnect the steering angle sensor connector (B231). 2) Connect the tester to vehicle side connector, and measure the resistance. Connector & terminal (B231) No. 1 — No. 2:	Is the resistance between 55 and 65 Ω ?	Go to step 11.	Go to step 4.
4	CHECK HARNESS.	Is the measured resistance 115 — 125 Ω when connecting the tester to vehicle side connector?	Go to step 7.	Go to step 5.
5	CHECK HARNESS.	Is the measured resistance less than 10 Ω when connecting the tester to vehicle side connector?	Repair or replace the short circuit of measured related harness.	Go to step 6.
6	CHECK HARNESS.	Is the measured resistance more than 30 M Ω when connecting the tester to vehicle side connector?	Repair or replace the open circuit of measured related harness.	Go to step 11.
7	CHECK HARNESS. 1) Disconnect the VDCCM connector. 2) Connect the tester to vehicle side harness, and measure the resistance. Connector & terminal (B310) No. 20 — No. 34: (B301) No. 11 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 8.	Go to step 9.
8	CHECK CONTROL MODULE. Connect the tester to the VDC/ABSCM terminal, and measure the resistance. Connector & terminal (B310) No. 20 — No. 34: (B301) No. 11 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 9.	Replace the VDC/ABSCM. <Ref. to VDC-16, REPLACEMENT, Steering Angle Sensor.>
9	CHECK HARNESS. 1) Connect the VDC/ABSCM connector. 2) Disconnect the connector from ECM. 3) Connect the tester to vehicle side harness, and measure the resistance between terminals. Connector & terminal Turbo model: (B136) No. 27 — No. 35: All models excluding turbo model: (B137) No. 18 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 10.	Repair or replace the open circuit of main wiring harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
10 CHECK CONTROL MODULE. Connect the tester to ECM terminal, and measure the resistance. Connector & terminal Turbo model: (B136) No. 27 — No. 35: All models excluding turbo model: (B137) No. 18 — No. 26:	Is the resistance between 115 — 125 Ω ?	Repair or replace the open circuit of main wiring harness.	Replace the ECM. <Ref. to FU(H4SO)-36, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, REMOVAL, Engine Control Module (ECM).>
11 CHECK HARNESS. 1) Connect the control module connectors except body integrated unit. 2) Connect the tester to vehicle side harness. 3) Turn the ignition switch to ON, and measure the terminal voltage. Connector & terminal (B280) No. 20 — Chassis ground:	Is the voltage 6 V or more?	Go to step 12.	Go to step 13.
12 CHECK CONTROL MODULE. Disconnect each control module connector one by one with the tester connected to vehicle side harness.	Is there any module for which the voltage has changed to less than 6 V?	Replace the module that has become less than 6V.	Repair or replace the short circuit of the harness.
13 CHECK HARNESS. 1) Connect the control module connectors except body integrated unit connector. 2) Connect the tester between vehicle side harness and chassis ground, and measure the resistance. Connector & terminal (B280) No. 20 — Chassis ground: (B280) No. 30 — Chassis ground:	Is the resistance 1 M Ω or more?	Go to step 14.	Repair or replace the short circuit of the harness.
14 CHECK CONTROL MODULE. Disconnect each control module connector one by one with the tester connected to vehicle side harness.	Are there any modules for which the resistance has become more than 10 Ω ?	Replace modules which has changed to more than 10 Ω .	Go to step 15.
15 CHECK CONTROL MODULE. 1) Connect all the control module connectors. 2) Connect the Subaru Select Monitor and perform the clear memory. 3) Disconnect the TCM connector (B54). 4) Turn the ignition switch to ON and read the DTC of the body integrated unit. <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC B0201 displayed?	Go to step 16.	Replace the TCM. <Ref. to 5AT-56, REMOVAL, Transmission Control Module (TCM).> <Ref. to 4AT-62, REMOVAL, Transmission Control Module (TCM).>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
16 CHECK CONTROL MODULE. 1) Connect the TCM control module connector. 2) Using the Subaru Select Monitor, perform the clear memory. 3) Disconnect the steering angle sensor connector (B231). 4) Turn the ignition switch to ON and read the DTC of the body integrated unit. <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC B0201 displayed?	Go to step 17.	Replace the steering angle sensor. <Ref. to VDC-16, REPLACEMENT, Steering Angle Sensor.>
17 CHECK CONTROL MODULE. 1) Connect all the control module connectors. 2) Check the data of "body integrated unit data received" on the current data display of ECM using Subaru Select Monitor.	Is the "Yes" displayed?	Go to step 18.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>
18 CHECK CONTROL MODULE. Check the data of "body integrated unit counter update" on the data display of ECM.	Is the "Yes" displayed?	Replace the ECM. <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

K: DTC B0202 CAN-HS BUS OFF


DTC DETECTING CONDITION:

- Find the unit or CAN line in which trouble occurs, and repair and replace it.
- Not received data and error data may be detected at the same time.

TROUBLE SYMPTOM:

"Er HC" is displayed in odo/trip meter.

WIRING DIAGRAM:

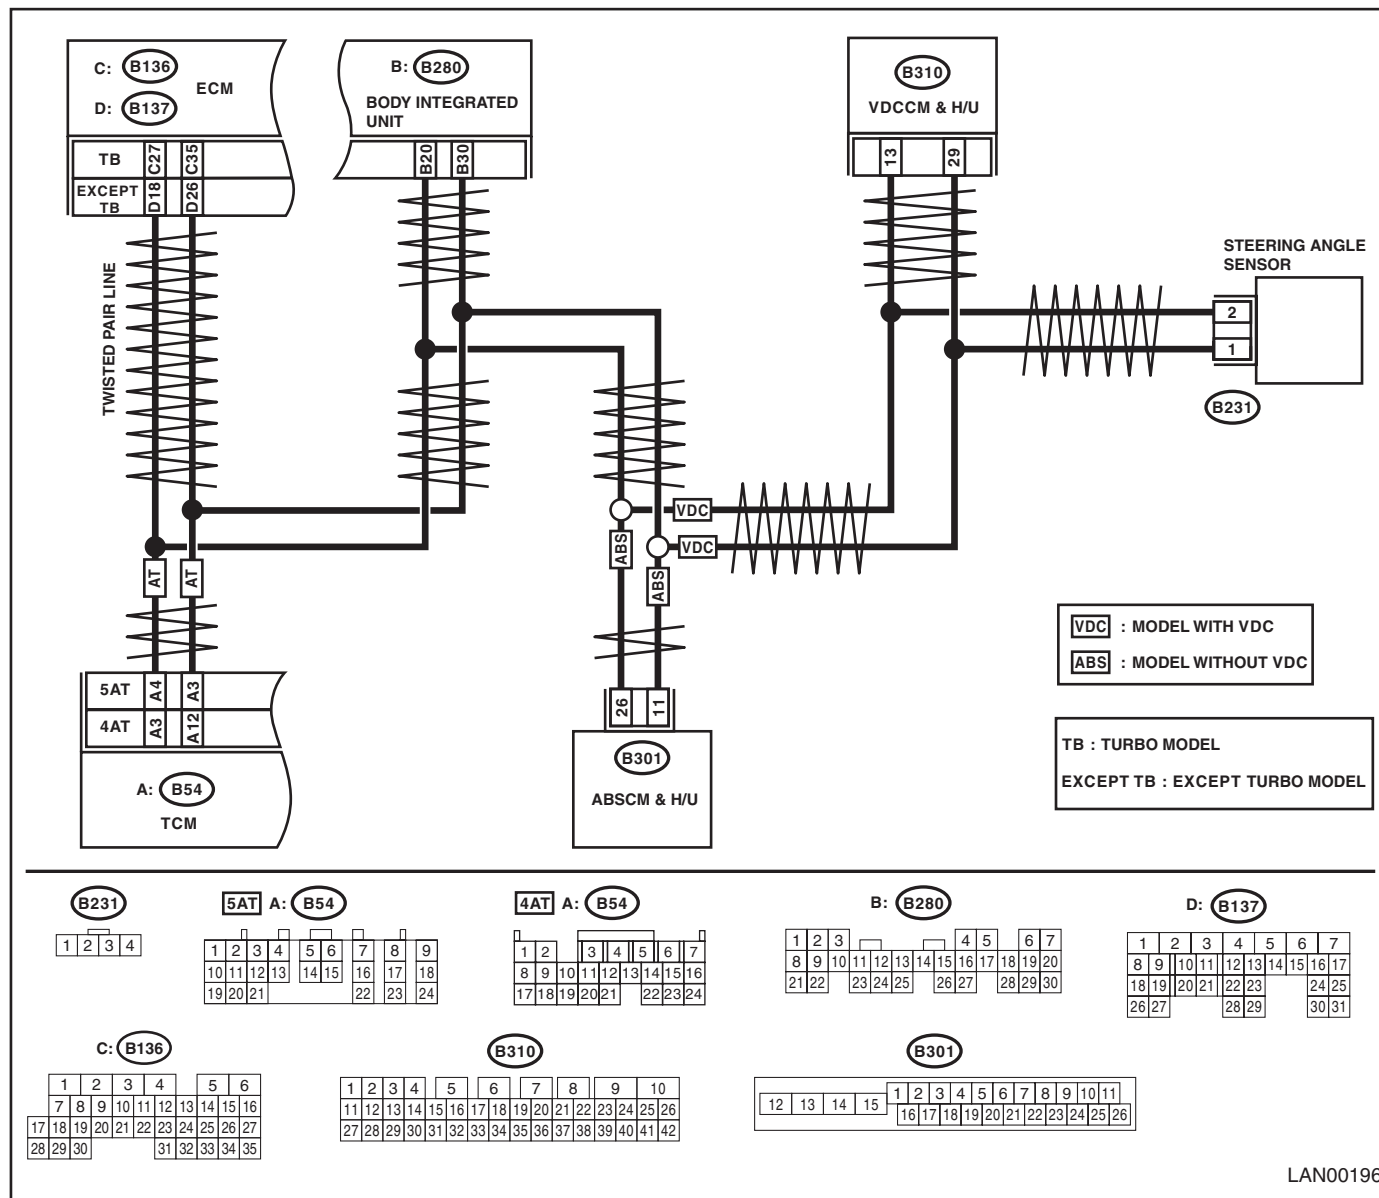

LAN00196

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280). 2) Connect the tester to vehicle side connector, and measure the resistance. Connector & terminal (B280) No. 20 — No. 30:	Is the resistance between 55 and 65 Ω ?	Go to step 2.	Go to step 4.
2 CHECK HARNESS. 1) Disconnect the TCM connector (B54). 2) Connect the tester to vehicle side connector, and measure the resistance. Connector & terminal (B54) No. 3 — No. 4:	Is the resistance between 55 and 65 Ω ?	Go to step 3.	Go to step 4.
3 CHECK HARNESS. 1) Disconnect the steering angle sensor connector (B231). 2) Connect the tester to vehicle side connector, and measure the resistance. Connector & terminal (B231) No. 1 — No. 2:	Is the resistance between 55 and 65 Ω ?	Go to step 11.	Go to step 4.
4 CHECK HARNESS.	Is the measured resistance 115 — 125 Ω when connecting the tester to vehicle side connector?	Go to step 7.	Go to step 5.
5 CHECK HARNESS.	Is the measured resistance less than 10 Ω when connecting the tester to vehicle side connector?	Repair or replace the short circuit of measured related harness.	Go to step 6.
6 CHECK HARNESS.	Is the measured resistance more than 30 M Ω when connecting the tester to vehicle side connector?	Repair or replace the open circuit of measured related harness.	Go to step 11.
7 CHECK HARNESS. 1) Disconnect the VDCCM connector. 2) Connect the tester to vehicle side harness, and measure the resistance. Connector & terminal (B310) No. 20 — No. 34: (B301) No. 11 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 8.	Go to step 9.
8 CHECK CONTROL MODULE. Connect the tester to the VDC/ABSCM terminal, and measure the resistance. Connector & terminal (B310) No. 20 — No. 34: (B301) No. 11 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 15.	Replace the VDCCM. <Ref. to VDC-7, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
9 CHECK HARNESS. 1) Connect the VDCCM connector. 2) Disconnect the connector from ECM. 3) Connect the tester to vehicle side harness, and measure the resistance between terminals. Connector & terminal Turbo model: (B136) No. 27 — No. 35: All models excluding turbo model: (B137) No. 18 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 10.	Repair or replace the open circuit of main wiring harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
10 CHECK CONTROL MODULE. Connect the tester to ECM terminal, and measure the resistance. Connector & terminal Turbo model: (B136) No. 27 — No. 35: All models excluding turbo model: (B137) No. 18 — No. 26:	Is the resistance between 115 — 125 Ω ?	Go to step 11.	Replace the ECM. <Ref. to FU(H4DOTC)-38, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>
11 CHECK HARNESS. 1) Connect the control module connectors except body integrated unit. 2) Connect the tester to vehicle side harness. 3) Turn the ignition switch to ON, and measure the terminal voltage. Connector & terminal (B280) No. 20 — Chassis ground:	Is the voltage 6 V or more?	Go to step 12.	Go to step 13.
12 CHECK CONTROL MODULE. Disconnect each control module connector one by one with the tester connected to vehicle side harness.	Is there any module for which the voltage has changed to less than 6 V?	Replace the module that has become less than 6 V.	Repair or replace the short circuit of the harness.
13 CHECK HARNESS. 1) Connect the control module connectors except body integrated unit connector. 2) Connect the tester between vehicle side harness and chassis ground, and measure the resistance. Connector & terminal (B280) No. 20 — Chassis ground: (B280) No. 30 — Chassis ground:	Is the resistance 1 M Ω or more?	Go to step 14.	Repair or replace the short circuit of the harness.
14 CHECK CONTROL MODULE. Disconnect each control module connector one by one with the tester connected to vehicle side harness.	Are there any modules for which the resistance has become more than 10 Ω ?	10 Replace the module which its resistance changes to more than 10 Ω .	Repair or replace the short circuit of the harness.
15 CHECK CONTROL MODULE. 1) Connect all the control module connectors. 2) Connect the Subaru Select Monitor and perform the clear memory. 3) Disconnect the TCM connector (B54). 4) Turn the ignition switch to ON and read the DTC of body integrated unit. <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC B0201 displayed?	Go to step 16.	Replace the TCM. <Ref. to 5AT-56, REMOVAL, Transmission Control Module (TCM).>
16 CHECK CONTROL MODULE. 1) Connect the TCM control module connector. 2) Using the Subaru Select Monitor, perform the clear memory. 3) Disconnect the steering angle sensor connector (B231). 4) Turn the ignition switch to ON and read the DTC of the body integrated unit. <Ref. to LAN(diag)-12, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC B0201 displayed?	Go to step 17.	Replace the steering angle sensor. <Ref. to VDC-16, REPLACEMENT, Steering Angle Sensor.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
17 CHECK CONTROL MODULE. 1) Connect all the control module connectors. 2) Check the data of "body integrated unit data received" on the current data display of ECM using Subaru Select Monitor.	Is the "Yes" displayed?	Go to step 18.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>
18 CHECK CONTROL MODULE. Check the data of "body integrated unit counter update" on the data display of ECM.	Is the "Yes" displayed?	Replace the ECM. <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

L: DTC B0211 CAN-HS ECM DATA ABNORMAL


DTC DETECTING CONDITION:

Defective data from ECM.

TROUBLE SYMPTOM:

“Er HC” or “Er EG” is displayed in odo/trip meter.

WIRING DIAGRAM:

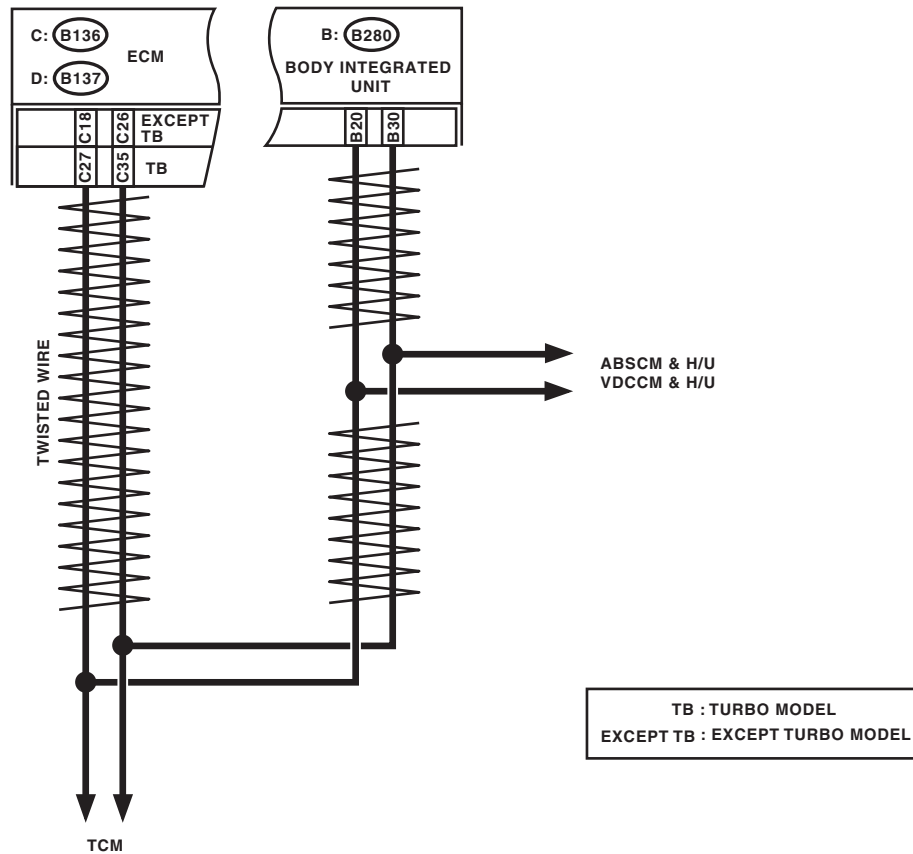

B: B280

1	2	3		4	5	6	7
8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31

D: B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

LAN00197

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
1	CHECK ECM. Read the DTC of ECM using the Subaru Select Monitor.	Is DTC other than "CAN communication" displayed?	Perform the diagnosis according to DTC.	Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

M: DTC B0212 CAN-HS TCM DATA ABNORMAL


DTC DETECTING CONDITION:

TCM has error, harness between the main harness splice and TCM is open or shorted, connectors are not connected securely, or the terminal has poor crimping.

TROUBLE SYMPTOM:

- SPORT indicator light blinks.
- “Er HC” or “Er tC” is displayed in odo/trip meter.

WIRING DIAGRAM:

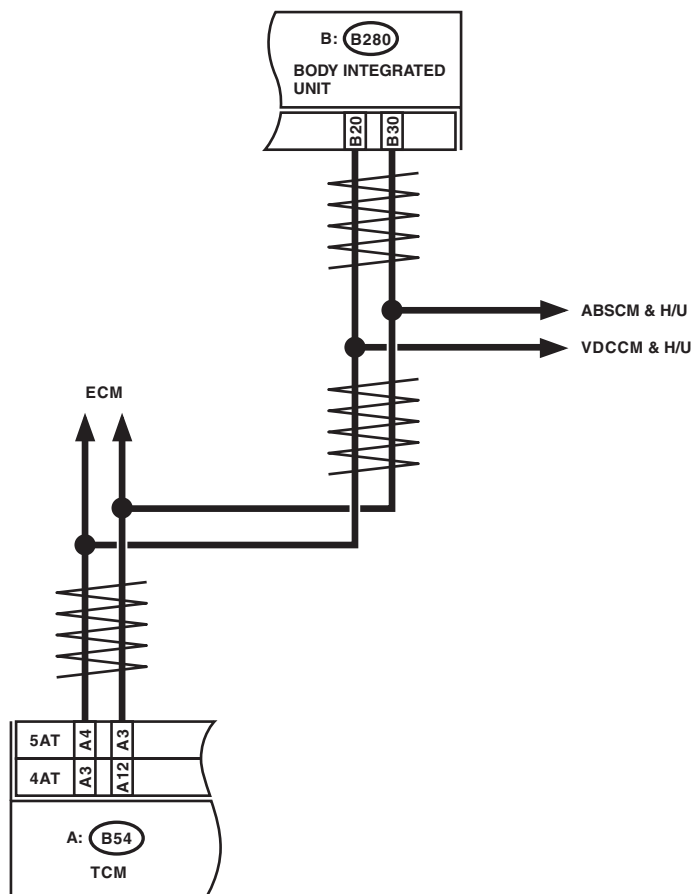

LAN00029

Step	Check	Yes	No
1	CHECK TCM. Read the DTC of the TCM using Subaru Select Monitor. <Ref. to 4AT(diag)-14, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> <Ref. to 5AT(diag)-16, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC other than “CAN communication” displayed?	Perform the diagnosis according to DTC.
			Replace the TCM. <Ref. to 4AT-62, Transmission Control Module (TCM).> <Ref. to 5AT-56, Transmission Control Module (TCM).>

N: DTC B0213 CAN-HS VDC/ABS DATA ABNORMAL


DTC DETECTING CONDITION:

VDC/ABSCM itself is malfunctioning, the main harness is open or shorted, the connector is not connected properly, or the terminal is crimped poorly.

TROUBLE SYMPTOM:

- ABS warning light and VDC warning light come on.
- “Er HC” or “Er Ab” is displayed in odo/trip meter.

WIRING DIAGRAM:

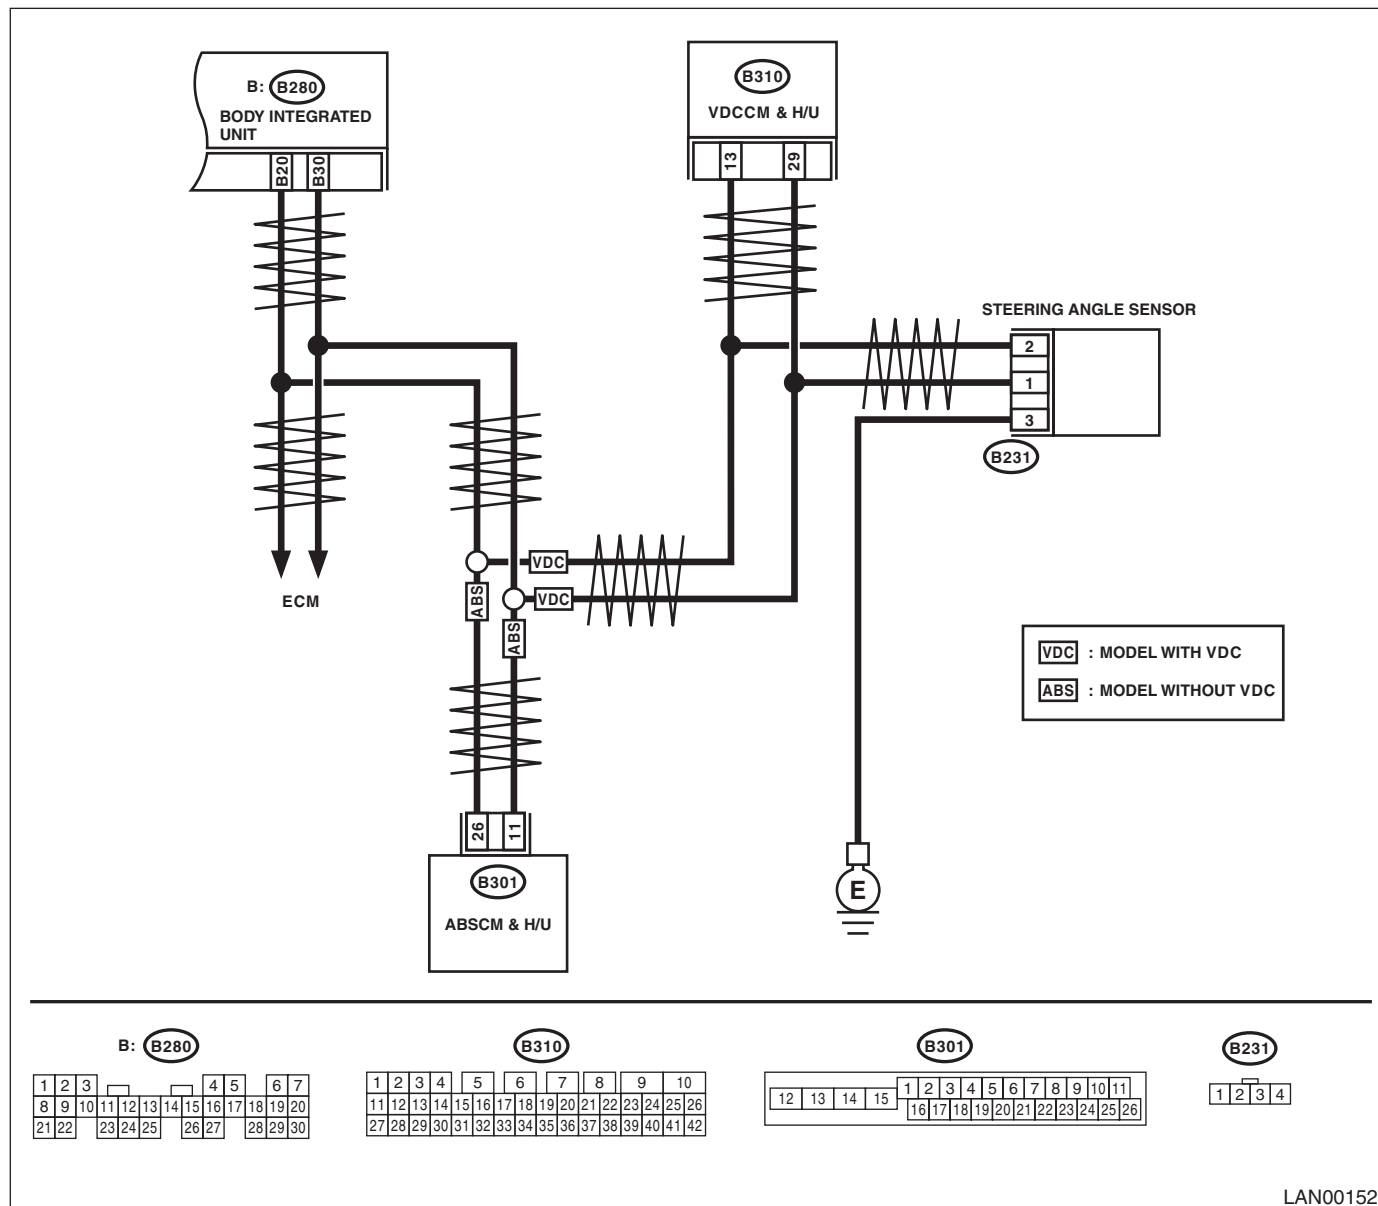

LAN00152

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step		Check	Yes	No
1	CHECK VDC/ABSCM. Read the DTC of VDC/ABSCM using the Subaru Select Monitor.	Is DTC other than "CAN communication" displayed?	Perform the diagnosis according to DTC.	Replace the VDC/ABSCM. <Ref. to ABS-6, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).> <Ref. to VDC-7, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

O: DTC B0221 CAN-HS ECM NO-RECEIVE DATA


DTC DETECTING CONDITION:

Defective ECM. (If error is in the main harness, DTC P0600 Serial Communication Link is input simultaneously.)

TROUBLE SYMPTOM:

- Malfunction indicator light illuminates.
- "Er HC" is displayed in odo/trip meter.

WIRING DIAGRAM:

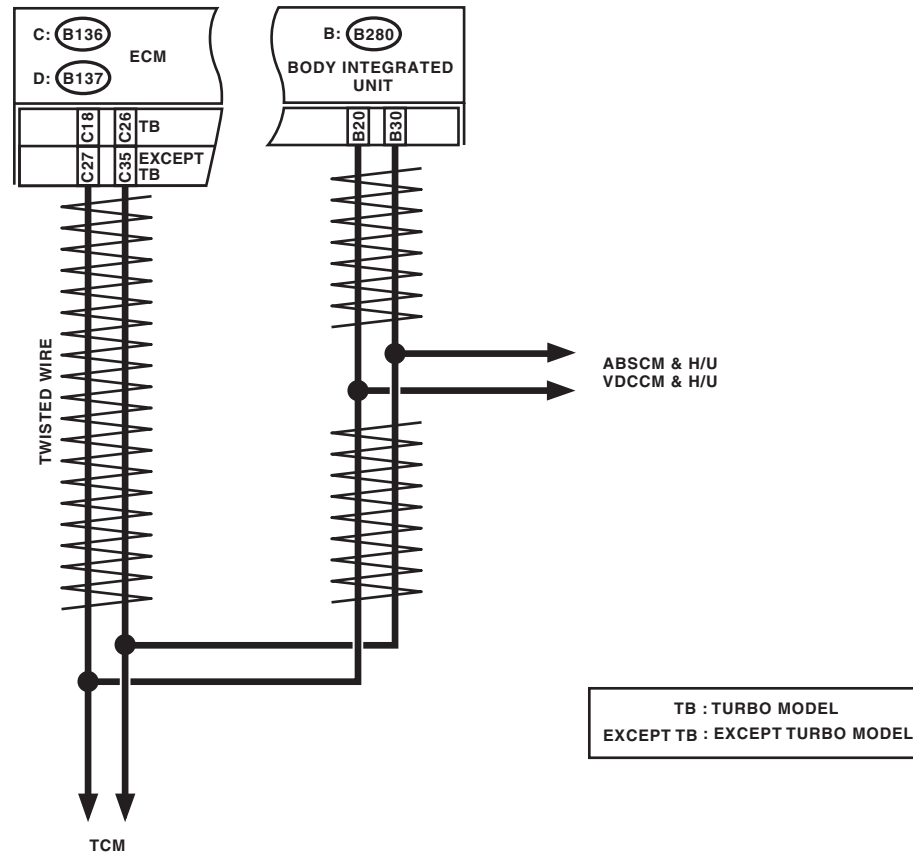

B: (B280)

1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25
26	27	28	29	30	31	32	33	34
35	36	37	38	39	40	41	42	43

D: (B137)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: (B136)

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36

LAN00258

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280). 2) Measure the resistance between harness connectors. Connector & terminal (B280) No. 20 — No. 30:	Is the resistance 55 — 65 Ω ? (Specification 60 Ω)	Read the DTC of ECM. Perform the diagnosis according to the DTC. <Ref. to EN(H4SO)(diag)-26, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.> <Ref. to EN(H4DOTC)(diag)-24, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.> <Ref. to EN(H6DO)(diag)-27, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>	Go to step 2.
2 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280). 2) Measure the resistance between harness connectors. Connector & terminal (B280) No. 20 — No. 30:	Is the resistance 115 — 125 Ω ? (End resistance or main wiring harness is open.)	Go to step 3.	When $\infty\Omega$, a line related to the body integrated unit is open. Repair the open circuit of harness or replace harness.
3 CHECK HARNESS. 1) Disconnect the ECM connector (B136 or B137). 2) Measure the resistance between harness connector terminals. Connector & terminal Turbo model: (B137) No. 18 — No. 26: All models excluding turbo model: (B136) No. 27 — No. 35:	Is the resistance 115 — 125 Ω ? (End resistance specification 120 Ω)	Go to step 4.	Go to step 5.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
4 CHECK ECM. 1) Disconnect the ECM connector (B136 or B137). 2) Measure the resistance between ECM terminals. Connector & terminal Turbo model: (B137) No. 18 — No. 26: All models excluding turbo model: (B136) No. 27 — No. 35:	Is the resistance between 115 and 125 Ω ?	Read the DTC of ECM. Perform the diagnosis according to the DTC. <Ref. to EN(H4SO)(diag)-26, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.> <Ref. to EN(H4DOTC)(diag)-24, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.> <Ref. to EN(H6DO)(diag)-27, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>	End resistance is open. Replace the ECM. <Ref. to FU(H4SO)-36, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-38, Engine Control Module (ECM).> <Ref. to FU(H6DO)-33, Engine Control Module (ECM).>
5 CHECK HARNESS. 1) Disconnect the ECM connector (B136 or B137). 2) Measure the resistance between harness connector and chassis ground. Connector & terminal Turbo model (B137) No. 18 — Chassis ground: (B137) No. 26 — Chassis ground: All models excluding turbo model (B136) No. 27 — Chassis ground: (B136) No. 35 — Chassis ground:	Is resistance less than 10 Ω ?	Repair the short circuit of harness or replace harness.	Go to step 6.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
6 CHECK HARNESS. 1) Disconnect the body integrated unit (B280), ECM (B136 or B137), TCM (B54), ABS (B301)/VDC (B310) CU connectors. 2) Measure the voltage between harness connector and chassis ground while turning the ignition switch to ON. Connector & terminal (B280) No. 20 (+) — Chassis ground (-): (B280) No. 30 (+) — Chassis ground (-):	Is the voltage 6 V or more?	Repair or replace the short circuit of the harness.	Read the DTC of ECM. Perform the diagnosis according to the DTC. <Ref. to EN(H4SO)(diag)-26, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.> <Ref. to EN(H4DOTC)(diag)-24, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.> <Ref. to EN(H6DO)(diag)-27, READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>

P: DTC B0222 CAN-HS TCM NO-RECEIVE DATA


DTC DETECTING CONDITION:

TCM has error, harness between the main harness splice and TCM is open or shorted, connectors are not connected securely, or the terminal has poor crimping.

TROUBLE SYMPTOM:

- Malfunction indicator light illuminates.
- "Er HC" is displayed in odo/trip meter.

WIRING DIAGRAM:

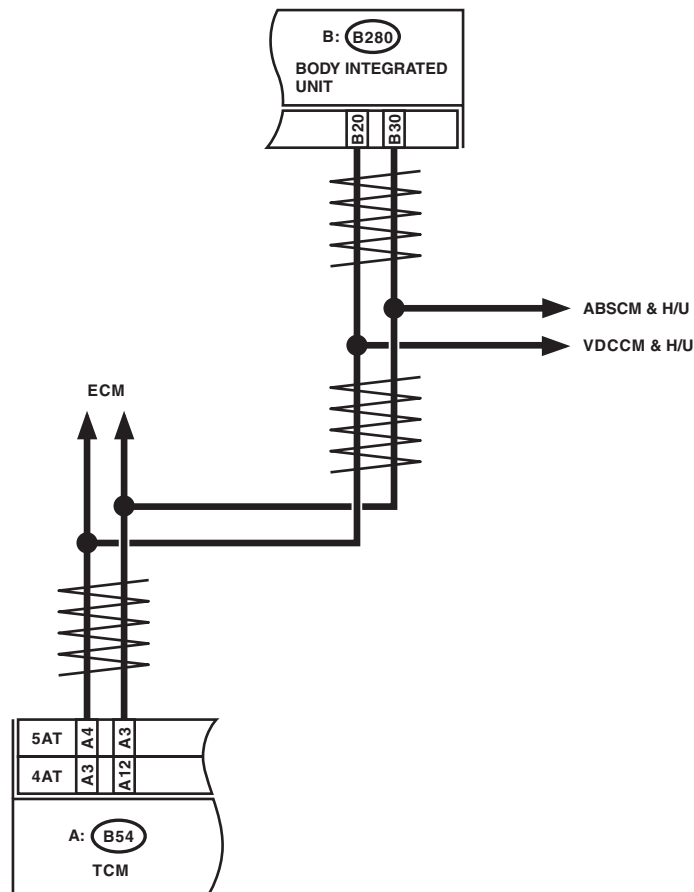

B: (B280)

1	2	3				4	5	6	7
8	9	10	11	12	13	14	15	16	17
18	19	20	21	22	23	24	25	26	27
28	29	30							

5AT A: (B54)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21				22	23	24

4AT A: (B54)

1	2		3	4	5	6	7
8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24							

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK HARNESS. 1) Disconnect the TCM connector (B54). 2) Measure the resistance between harness connector terminals. Connector & terminal 4AT model (B54) No. 3 — No. 12: 5AT model (B54) No. 3 — No. 4:	Is the resistance $\infty \Omega$?	Open circuit in related lines of TCM. Repair the open circuit of harness or replace harness.	Go to step 2.
2 CHECK TCM. Read the DTC of the TCM using Subaru Select Monitor. <Ref. to 4AT(diag)-14, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> <Ref. to 5AT(diag)-16, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is DTC other than “Serial Communication Link” displayed?	Perform the diagnosis according to DTC.	Replace the TCM. <Ref. to 4AT-62, Transmission Control Module (TCM).> <Ref. to 5AT-56, Transmission Control Module (TCM).>

Q: DTC B0223 CAN-HS VDC/ABS NO-RECEIVE DATA


DTC DETECTING CONDITION:

Defective VDC/ABSCM. (If error is in the main harness, DTC P0600 High-speed CAN circuit is input at the same time.)

TROUBLE SYMPTOM:

- ABS warning light and VDC warning light come on.
- "Er HC" is displayed in odo/trip meter.

WIRING DIAGRAM:

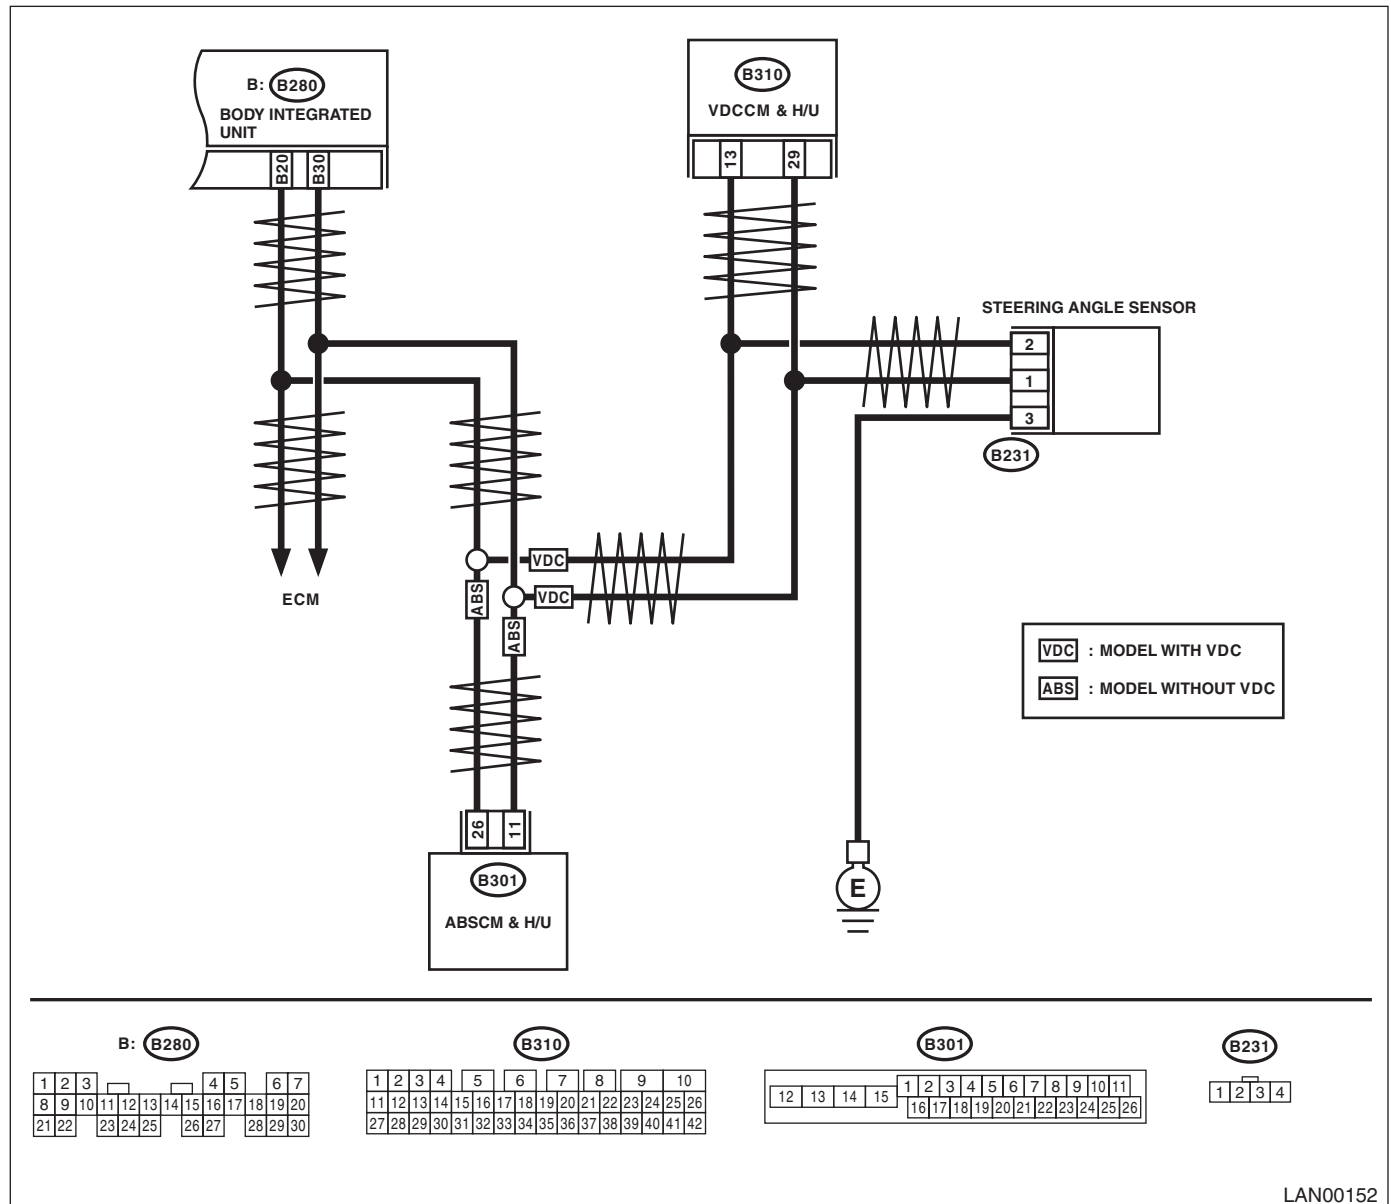

LAN00152

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
1 CHECK HARNESS. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between harness connector terminals. Connector & terminal (B280) No. 20 — No. 30:	Is the resistance between 55 and 65 Ω ?	Read the DTC of the VDC/ABSCM, and perform the diagnosis according to the DTC. <Ref. to ABS(diag)-15, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> <Ref. to VDC(diag)-17, OPERATION, Subaru Select Monitor.>	Go to step 2.
2 CHECK HARNESS. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between harness connector terminals. Connector & terminal (B280) No. 20 — No. 30:	Is the resistance between 115 and 125 Ω ?	Go to step 5.	Go to step 3.
3 CHECK HARNESS. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between harness connector terminal and chassis ground. Connector & terminal (B280) No. 20 — Chassis ground: (B280) No. 30 — Chassis ground:	Is the resistance $\infty \Omega$?	Open circuit in related line of body integrated unit. Repair the open circuit of harness or replace harness.	Go to step 4.
4 CHECK HARNESS. 1) Disconnect the harness connector of body integrated unit. 2) Measure the voltage between harness connector terminal and chassis ground. (Ignition switch ON) Connector & terminal (B280) No. 20 (+) — Chassis ground (-): (B280) No. 30 (+) — Chassis ground (-):	Is the voltage 6 V or more?	Repair the short circuit of harness or replace harness.	Go to step 5.
5 CHECK END RESISTANCE. 1) Disconnect the VDC/ABSCM harness connector. 2) Connect a tester and measure the resistance between VDC/ABSCM terminals. Connector & terminal ABS (B301) No. 11 — No. 26: VDC (B310) No. 13 — No. 29:	Is the resistance between 115 and 125 Ω ?	Go to step 6.	End resistance is open. Replace the VDC/ABSCM. <Ref. to ABS-6, ABS Control Module and Hydraulic Control Unit (ABSCM&H/U).> <Ref. to VDC-7, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)


Step	Check	Yes	No
6 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and VDC/ABSCM connector (ABS:B301, VDC:B310). 2) Measure the resistance between harness connector terminals. Connector & terminal ABS <i>(B301) No. 11 — (B280) No. 30:</i> <i>(B301) No. 26 — (B280) No. 20:</i> VDC <i>(B310) No. 13 — (B280) No. 20:</i> <i>(B310) No. 29 — (B280) No. 30:</i>	Is resistance less than 10 Ω?	Go to step 7.	Main wiring harness is open. Repair the open circuit of harness or replace harness.
7 CHECK VDC/ABSCM. 1) Connect all connectors. 2) Read the DTC of VDC/ABSCM using the Subaru Select Monitor.	Is DTC other than "CAN communication" displayed?	Perform the diagnosis according to DTC of VDC/ABSCM.	Temporary poor contact occurs. Check the connection of connectors and terminals.

LAN SYSTEM (DIAGNOSTICS)

DTC DETECTING CONDITION:

TROUBLE SYMPTOM:

WIRING DIAGRAM:

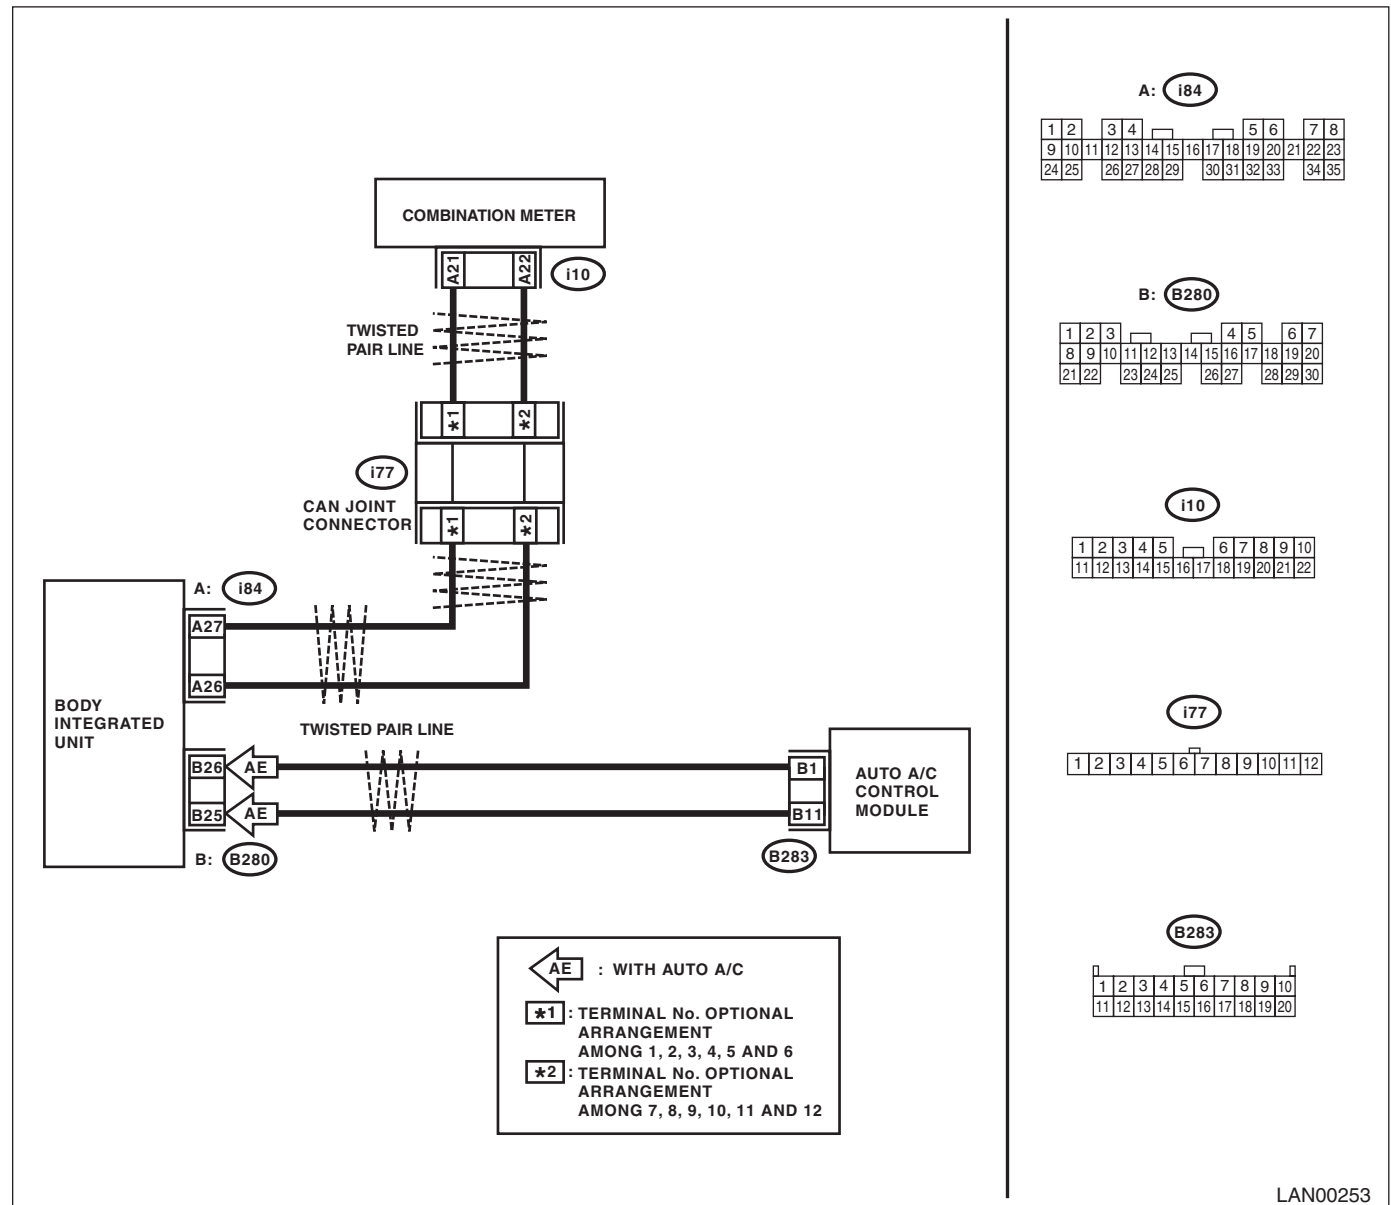

	Step	Check	Yes	No
1	CHECK DTC. Read the DTC of body integrated unit using Subaru Select Monitor.	Is there any DTC other than B0300?	Perform the diagnosis according to other DTC.	Go to step 2.
2	CHECK DTC. Check the DTC displayed in the body integrated unit.	Is the DTC displayed currently malfunctioning?	Check the connection of harness connector. Go to step 3.	Go to step 3.
3	CHECK DTC. Turn the ignition switch to OFF and read the DTC again.	Is B0300 currently malfunctioning?	Go to step 4.	Temporary poor contact occurs.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
4 CHECK CURRENT DATA. Connect the Subaru Select Monitor and display current data of the body integrated unit (auto A/C fail).	Is OK displayed?	Go to step 5.	Perform auto A/C self-diagnosis. <Ref. to AC(diag)-9, OPERATION, Diagnostic Chart for Self-diagnosis.>
5 CHECK AUTO A/C ECM. 1) Turn the ignition switch to OFF. 2) Disconnect the auto A/C ECM connector (B283). 3) Turn the ignition switch to ON and read the DTC.	Does B0300 disappear?	Go to step 6.	Go to step 7.
6 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and auto A/C control module connector (B283). 2) Check for open and short circuits between body integrated unit connector and auto A/C control module connector. Connector & terminal (B283) No. 1 — (B280) No. 26: (B283) No. 11 — (B280) No. 25:	Is the harness in normal condition?	Replace the auto A/C ECM. <Ref. to AC-32, REMOVAL, Control Unit (Auto A/C Model).>	Repair or replace the open or short circuit of harness.
7 CHECK CURRENT DATA. Connect the Subaru Select Monitor and display current data of the body integrated unit (meter fail).	Is OK displayed?	Go to step 8.	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
8 CHECK COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Disconnect the combination meter connector. 3) Turn the ignition switch to ON.	Is B0300 detected?	Go to step 10.	Go to step 9.
9 CHECK HARNESS. 1) Disconnect the combination meter connector (i10). 2) Check for open and short circuits between the body integrated unit and combination meter connectors. Connector & terminal (i10) No. 21 — (i84) No. 27: (i10) No. 22 — (i84) No. 26:	Is the harness in normal condition?	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>	Repair or replace the open or short circuit of harness.
10 CHECK HARNESS. 1) Disconnect the CAN junction connector (i77) and the body integrated unit connector (i84). 2) Measure the resistance between connector terminals. Connector & terminal (i84) No. 27 — (i77) No. 2: (i84) No. 26 — (i77) No. 8: NOTE: The junction connector of i77 is in user defined alignment.	Is the resistance less than 10 Ω ?	Go to step 11.	Repair the short circuit of harness or replace harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
11 CHECK HARNESS. 1) Disconnect the combination meter connector. 2) Measure the resistance between the junction connector and the combination meter connector. Connector & terminal <i>(i10) No. 21 — (i77) No. 1:</i> <i>(i10) No. 22 — (i77) No. 7:</i>	Is the resistance less than 10 Ω ?	Go to step 12.	Repair the open circuit of harness or replace harness.
12 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and auto A/C control module connector (B283). 2) Measure the resistance between body integrated unit connector and auto A/C control module connector. Connector & terminal <i>(B283) No. 1 — (B280) No. 26:</i> <i>(B283) No. 11 — (B280) No. 25:</i>	Is the resistance less than 10 Ω ?	Go to step 13.	Repair the open circuit of harness or replace harness.
13 CHECK HARNESS. 1) Connect the junction connector. 2) Measure the resistance between body integrated unit connector and chassis ground. Connector & terminal <i>(B280) No. 25 — Chassis ground:</i> <i>(B280) No. 26 — Chassis ground:</i> <i>(i84) No. 26 — Chassis ground:</i> <i>(i84) No. 27 — Chassis ground:</i>	Is the resistance less than 10 Ω ?	Repair the short circuit of harness or replace harness.	Go to step 14.
14 CHECK HARNESS. 1) Turn the ignition switch to ON. 2) Measure the voltage between body integrated unit connector and chassis ground. Connector & terminal <i>(B280) No. 25 (+) — Chassis ground (-):</i> <i>(B280) No. 26 (+) — Chassis ground (-):</i> <i>(i84) No. 26 (+) — Chassis ground (-):</i> <i>(i84) No. 27 (+) — Chassis ground (-):</i>	Is the voltage 6 V or more?	Repair the short circuit of harness or replace harness.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

S: DTC B0301 CAN-LS COUNTER ABNORMAL

DTC DETECTING CONDITION:

Find the unit in which trouble occurs and open or short CAN line, and repair and replace them.

(Free running counter error may be detected at the same time from the unit in which the malfunction occurs.)

TROUBLE SYMPTOM:

"Er LC" is displayed in odo/trip meter.

Step	Check	Yes	No
1 CHECK DTC. Read the DTC of body integrated unit using Subaru Select Monitor.	Is there any DTC other than B0301?	Perform the diagnosis according to other DTC.	Go to step 2.
2 CHECK DTC. Check the DTC displayed in the body integrated unit.	Is the DTC displayed currently malfunctioning?	Check the connection of harness connector. Go to step 3.	Go to step 3.
3 CHECK DTC. Turn the ignition switch to OFF and read the DTC again.	Is B0301 currently malfunctioning?	Go to step 4.	Temporary poor contact occurs.
4 CHECK CURRENT DATA. Connect the Subaru Select Monitor and display current data of the body integrated unit (auto A/C fail).	Is OK displayed?	Go to step 5.	Perform auto A/C self-diagnosis. <Ref. to AC(diag)-9, OPERATION, Diagnostic Chart for Self-diagnosis.>
5 CHECK AUTO A/C ECM. 1) Turn the ignition switch to OFF. 2) Disconnect the auto A/C ECM connector. 3) Turn the ignition switch to ON.	Does the communications error display disappear?	Go to step 6.	Go to step 7.
6 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and auto A/C control module connector (B283). 2) Check for open and short circuits between body integrated unit connector and auto A/C control module connector. Connector & terminal (B283) No. 11 — (B280) No. 26: (B283) No. 1 — (B280) No. 25:	Is the harness in normal condition?	Replace the auto A/C ECM. <Ref. to AC-32, REMOVAL, Control Unit (Auto A/C Model).>	Repair or replace the open or short circuit of harness.
7 CHECK CURRENT DATA. Connect the Subaru Select Monitor and display current data of the body integrated unit (meter fail).	Is OK displayed?	Go to step 8.	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
8 CHECK COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Disconnect the combination meter connector. 3) Turn the ignition switch to ON.	Is B0301 detected?	Go to step 9.	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
9 CHECK HARNESS. 1) Disconnect the combination meter connector (i10). 2) Check for open and short circuits between the body integrated unit and combination meter connectors. Connector & terminal (i10) No. 21 — (i84) No. 27: (i10) No. 22 — (i84) No. 26:	Is the harness in normal condition?	Go to step 10.	Repair or replace the open or short circuit of harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
10 CHECK CURRENT DATA. Check the current data of the body integrated unit (center display fail).	Is OK displayed?	Go to step 11.	Repair or replace the center display. <Ref. to ET-16, REMOVAL, Navigation Display.>
11 CHECK CENTER DISPLAY. 1) Turn the ignition switch to OFF. 2) Disconnect the center display connector. 3) Turn the ignition switch to ON.	Does B0300 disappear?	Go to step 12.	Go to step 13.
12 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and the center display connector (i90 or i103). 2) Check for open and short circuits between the body integrated unit connector and the center display connector. Connector & terminal Model with navigation <i>(i90) No. 6 — (i84) No. 26:</i> <i>(i90) No. 14 — (i84) No. 27:</i> Model without navigation <i>(i103) No. 2 — (i84) No. 26:</i> <i>(i103) No. 4 — (i84) No. 27:</i>	Is the harness in normal condition?	Replace the center display. <Ref. to ET-16, REMOVAL, Navigation Display.>	Repair or replace the open or short circuit of harness.
13 CHECK COMBINATION METER. 1) Display the current data of body integrated unit using Subaru Select Monitor. 2) Display the door switch in analog data. 3) Read the display of data and combination meter when each door is opened/closed.	Do the body integrated unit data indicator and combination meter indicator change according to operation?	Go to step 14.	Go to step 16.
14 CHECK AUTO A/C CONTROL MODULE. 1) Display the current data of body integrated unit using Subaru Select Monitor. 2) Display the number of blower fan levels in the analog data. 3) Read the data display when the number of blower fan levels is changed on air conditioner control part.	Does the data display change?	Go to step 15.	Go to step 17.
15 CHECK AUTO A/C CONTROL MODULE HARNESS. 1) Disconnect the auto A/C control module connector. 2) Disconnect the body integrated unit connector. 3) Measure the resistance between the body integrated unit and auto A/C control module harness. Connector & terminal <i>(B280) No. 26 — (B283) No. 1:</i> <i>(B280) No. 25 — (B283) No. 11:</i>	Is the resistance less than 10 Ω ?	Go to step 17.	Repair the open circuit of harness or replace harness.
16 CHECK COMBINATION METER HARNESS. 1) Disconnect the combination meter connector. 2) Disconnect the body integrated unit connector. 3) Measure the resistance between the body integrated unit and combination meter connector. Connector & terminal <i>(i84) No. 27 — (i10) No. 21:</i> <i>(i84) No. 26 — (i10) No. 22:</i>	Is the resistance less than 10 Ω ?	Go to step 18.	Repair the open circuit of harness or replace harness.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
17 CHECK AUTO A/C CONTROL MODULE. Perform auto A/C control module self-diagnosis. <Ref. to AC(diag)-12, A/C CONTROL SYSTEM SELF-DIAGNOSIS, OPERATION, Diagnostic Chart for Self-diagnosis.>	Is the self-diagnosis OK?	Go to step 18.	Replace the auto A/C control module. <Ref. to AC-32, REMOVAL, Control Unit (Auto A/C Model).>
18 CHECK COMBINATION METER. Perform self-diagnosis for the combination meter system. <Ref. to IDI-3, SELF-DIAGNOSIS, INSPECTION, Combination Meter System.>	Is the self-diagnosis OK?	Go to step 19.	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
19 CHECK THE BODY INTEGRATED UNIT. Read the data of "body integrated unit data received" on ECM data display using Subaru Select Monitor.	Is "Yes" displayed?	Go to step 20.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>
20 CHECK THE BODY INTEGRATED UNIT. Read the data of "body integrated unit counter update" on ECM data display using Subaru Select Monitor.	Is "Yes" displayed?	Temporary poor contact occurs. Check the connection of connector.	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

T: DTC B0302 CAN-LS BUS OFF


DTC DETECTING CONDITION:

Because of a lot of error data occurred, some units have been disconnected not to affect other units. Communication failure from the unit in which error is occurred is input at the same time.

TROUBLE SYMPTOM:

"Er LC" is displayed in odo/trip meter.

WIRING DIAGRAM:

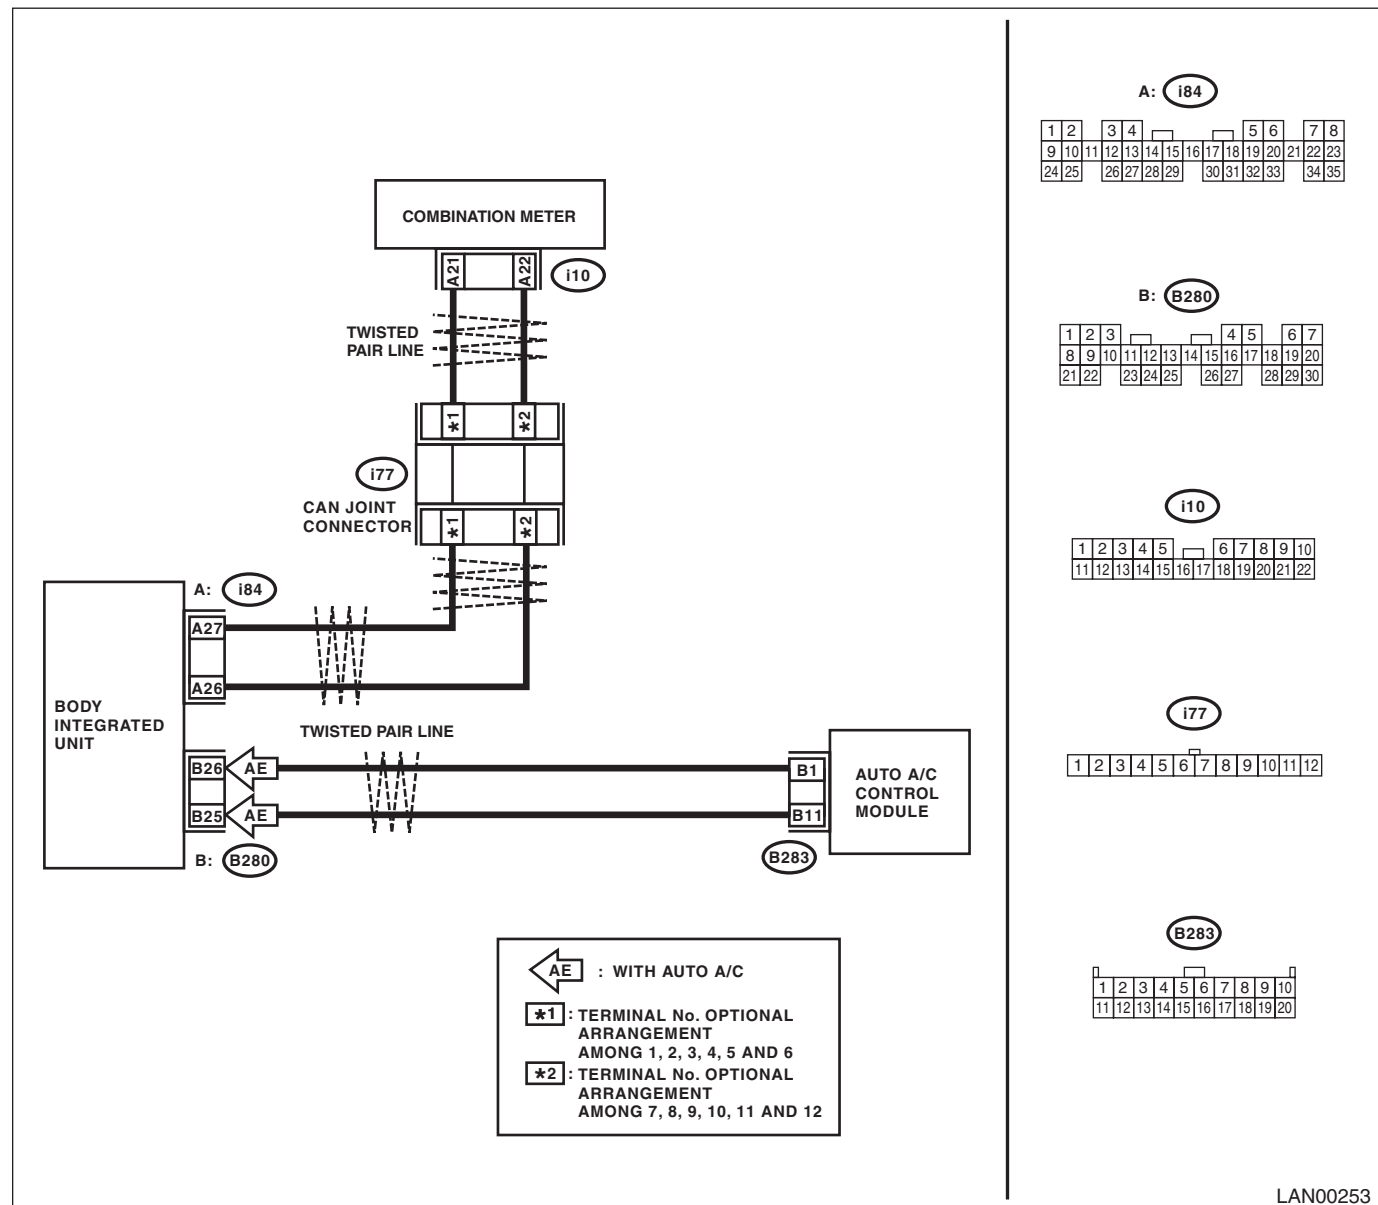

LAN00253

Step	Check	Yes	No
1	CHECK DTC. Read the DTC of body integrated unit using Subaru Select Monitor.	Is there any DTC other than B0302?	Perform the diagnosis according to other DTC.
2	CHECK DTC. Check the DTC displayed in the body integrated unit.	Is the DTC displayed currently malfunctioning?	Check the connection of harness connector. Go to step 3.
3	CHECK DTC. Turn the ignition switch to OFF and read the DTC again.	Is B0302 currently malfunctioning?	Go to step 4.
			Temporary poor contact occurs.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
4 CHECK CURRENT DATA. Connect the Subaru Select Monitor and display current data of the body integrated unit (auto A/C fail).	Is OK displayed?	Go to step 5.	Perform auto A/C self-diagnosis. <Ref. to AC(diag)-9, OPERATION, Diagnostic Chart for Self-diagnosis.>
5 CHECK AUTO A/C ECM. 1) Turn the ignition switch to OFF. 2) Disconnect the auto A/C ECM connector. 3) Turn the ignition switch to ON.	Does B0302 disappear?	Go to step 6.	Go to step 7.
6 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and auto A/C control module connector (B283). 2) Check for open and short circuits between body integrated unit connector and auto A/C control module connector. Connector & terminal (B283) No. 1 — (B280) No. 26: (B283) No. 11 — (B280) No. 25:	Is the harness in normal condition?	Replace the auto A/C ECM. <Ref. to AC-32, REMOVAL, Control Unit (Auto A/C Model).>	Repair or replace the open or short circuit of harness.
7 CHECK CURRENT DATA. Connect the Subaru Select Monitor and display current data of the body integrated unit (meter fail).	Is OK displayed?	Go to step 8.	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
8 CHECK COMBINATION METER. 1) Turn the ignition switch to OFF. 2) Disconnect the combination meter connector. 3) Turn the ignition switch to ON.	Is B0302 detected?	Go to step 9.	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>
9 CHECK HARNESS. 1) Disconnect the combination meter connector (i10). 2) Check for open and short circuits between the body integrated unit and combination meter connectors. Connector & terminal (i10) No. 21 — (i84) No. 27: (i10) No. 22 — (i84) No. 26:	Is the harness in normal condition?	Go to step 10.	Repair or replace the open or short circuit of harness.
10 CHECK CURRENT DATA. Check the current data of the body integrated unit (center display fail).	Is OK displayed?	Go to step 11.	Repair or replace the center display. <Ref. to ET-16, REMOVAL, Navigation Display.>
11 CHECK CENTER DISPLAY. 1) Turn the ignition switch to OFF. 2) Disconnect the center display connector. 3) Turn the ignition switch to ON.	Does B0302 disappear?	Go to step 12.	Go to step 13.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
12 CHECK HARNESS. 1) Disconnect the body integrated unit connector (B280) and the center display connector (i90 or i103). 2) Check for open and short circuits between the body integrated unit connector and the center display connector. Connector & terminal Model with navigation <i>(i90) No. 6 — (i84) No. 26:</i> <i>(i90) No. 14 — (i84) No. 27:</i> Model without navigation <i>(i103) No. 2 — (i84) No. 26:</i> <i>(i103) No. 4 — (i84) No. 27:</i>	Is the harness in normal condition?	Replace the center display. <Ref. to ET-16, REMOVAL, Navigation Display.>	Repair or replace the open or short circuit of harness.
13 CHECK COMBINATION METER. 1) Display the current data of body integrated unit using Subaru Select Monitor. 2) Display the door switch in analog data. 3) Read the display of data and combination meter when each door is opened/closed.	Do the body integrated unit data indicator and combination meter indicator change according to operation?	Go to step 14.	Go to step 15.
14 CHECK AUTO A/C CONTROL MODULE HARNESS. 1) Disconnect the auto A/C control module connector. 2) Disconnect the body integrated unit connector. 3) Measure the resistance between the body integrated unit and auto A/C control module harness. Connector & terminal <i>(B280) No. 26 — (B283) No. 1:</i> <i>(B280) No. 25 — (B283) No. 11:</i>	Is the resistance less than 10 Ω ?	Go to step 15.	Repair the open circuit of harness or replace harness.
15 CHECK COMBINATION METER HARNESS. 1) Disconnect the combination meter connector. 2) Disconnect the body integrated unit connector. 3) Measure the resistance between the body integrated unit and combination meter connector. Connector & terminal <i>(i84) No. 27 — (i10) No. 21:</i> <i>(i84) No. 26 — (i10) No. 22:</i>	Is the resistance less than 10 Ω ?	Go to step 16.	Repair the open circuit of harness or replace harness.
16 CHECK AUTO A/C CONTROL MODULE. Perform auto A/C control module self-diagnosis. <Ref. to AC(diag)-12, A/C CONTROL SYSTEM SELF-DIAGNOSIS, OPERATION, Diagnostic Chart for Self-diagnosis.>	Is the self-diagnosis OK?	Go to step 17.	Replace the auto A/C control module. <Ref. to AC-32, REMOVAL, Control Unit (Auto A/C Model).>
17 CHECK COMBINATION METER. Perform self-diagnosis for the combination meter system. <Ref. to IDI-3, SELF-DIAGNOSIS, INSPECTION, Combination Meter System.>	Is the self-diagnosis OK?	Replace the body integrated unit. <Ref. to SL-55, REMOVAL, Body Integrated Unit.>	Replace the combination meter. <Ref. to IDI-14, REMOVAL, Combination Meter.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

U: DTC B0311 CAN-LS METER UNIT DATA ABNORMAL


DTC DETECTING CONDITION:

Combination meter has error, the harness between main harness splice and combination meter is open or shorted, the connector is not connected properly, or the terminal has poor crimping.

TROUBLE SYMPTOM:

"Er Lc" is displayed in odo/trip meter.

WIRING DIAGRAM:

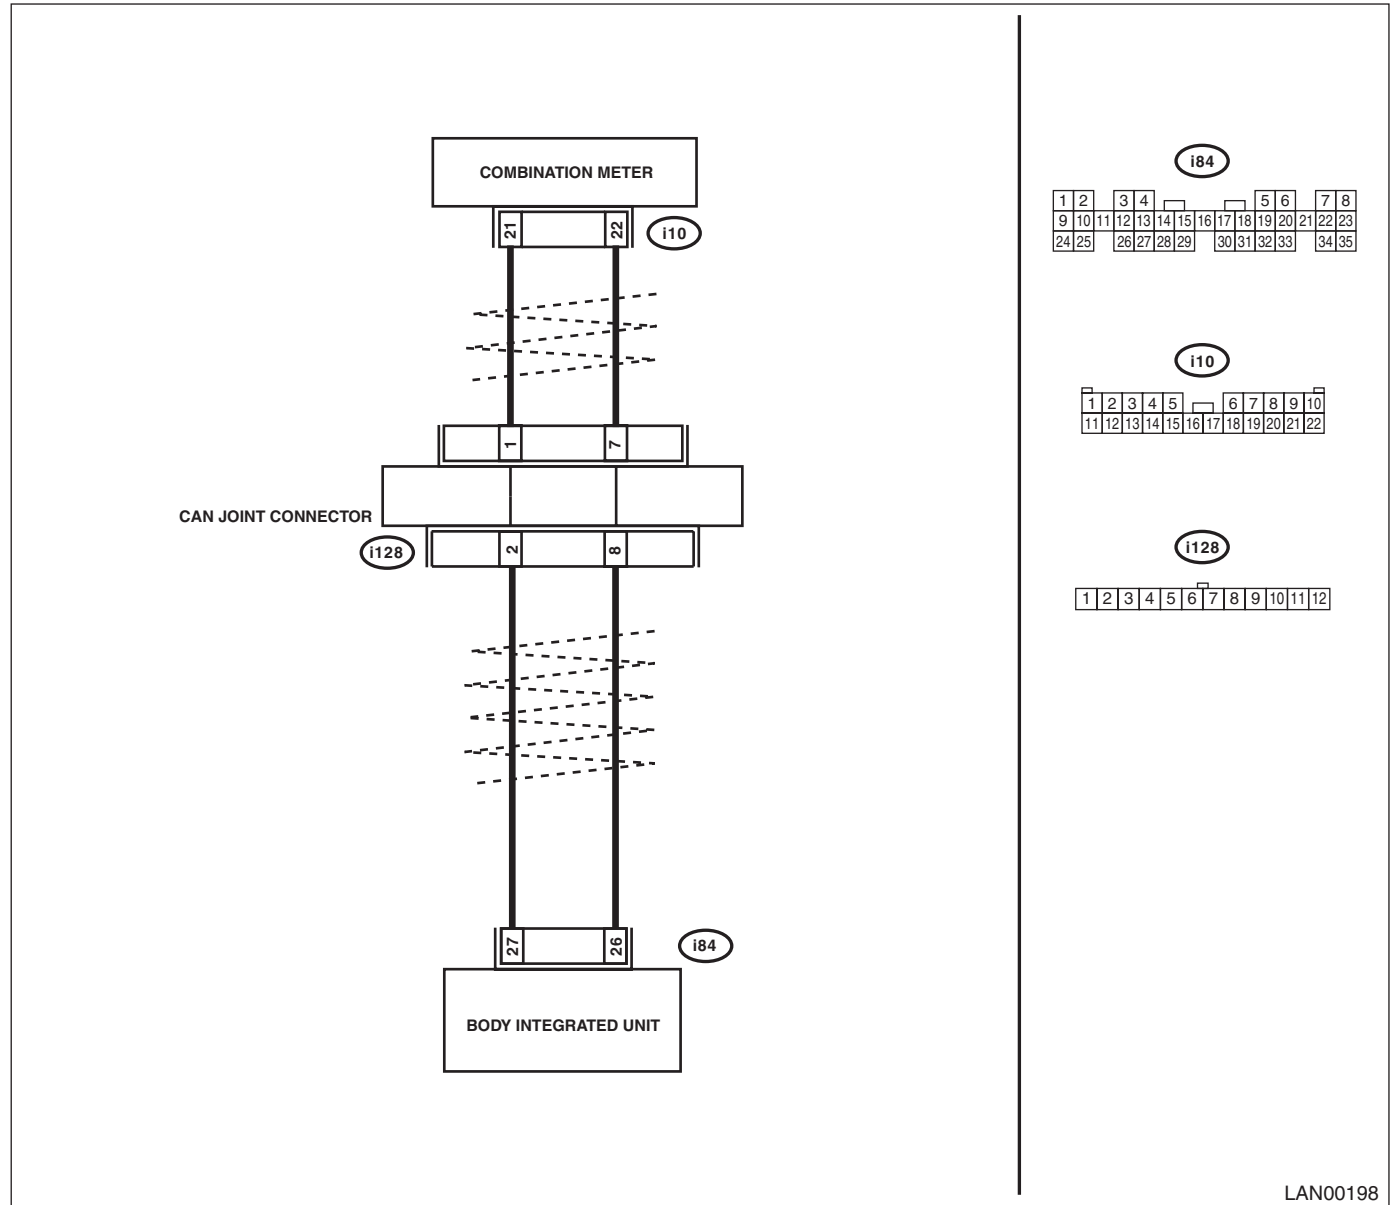

LAN00198

Step	Check	Yes	No
1 CHECK COMBINATION METER. Perform self-diagnosis of the combination meter. <Ref. to IDI-3, SELF-DIAGNOSIS, INSPECTION, Combination Meter System.>	Is the self-diagnosis OK?	Read the DTC again, and then perform the diagnosis according to DTC displayed on the top.	Replace the combination meter. <Ref. to IDI-14, Combination Meter.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

V: DTC B0313 CAN-LS MONITOR DATA ABNORMAL

 
 
 

DTC DETECTING CONDITION:

Center display unit error, or harness between the main harness splice and center display unit is open or shorted, the connector is not connected securely and the terminal has poor crimping.

TROUBLE SYMPTOM:

“Er LC” is displayed in odo/trip meter.

WIRING DIAGRAM:

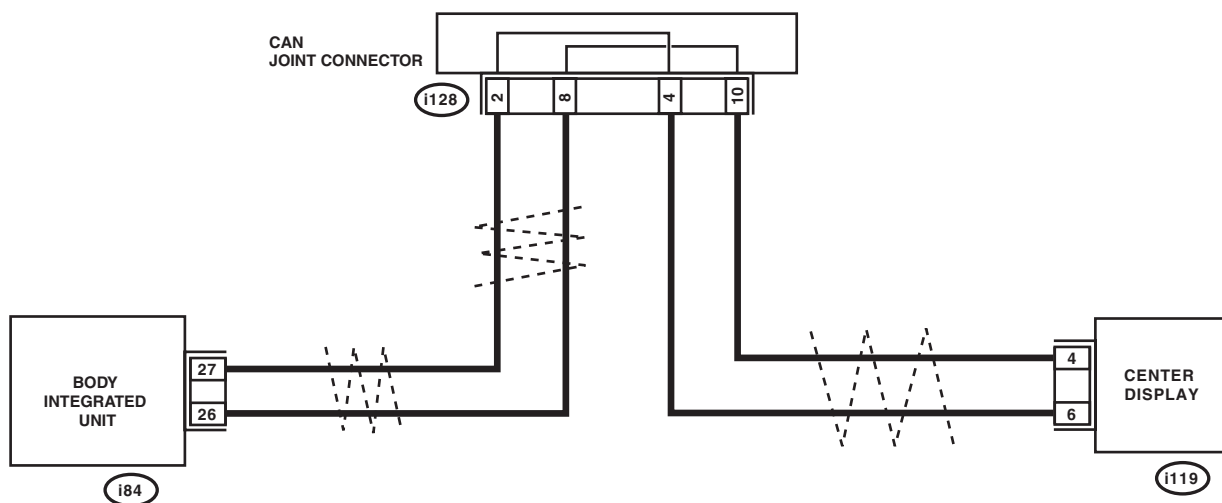

LAN00200

Step	Check	Yes	No
1 CHECK CENTER DISPLAY. 1) Display the current data of body integrated unit using Subaru Select Monitor. 2) Read the center display fail display.	Is the center display fail OK?	Go to step 2.	Replace the center display.
2 CHECK NAVIGATION. 1) Display the current data of body integrated unit using Subaru Select Monitor. 2) Read the NAVI fail display.	Is the NAVI fail OK?	Replace the center display.	Repair the navigation unit.

W: DTC B0321 CAN-LS METER NO-RECEIVE DATA


DTC DETECTING CONDITION:

Combination meter unit error, or harness between the main harness splice and combination meter unit is open or shorted, the connector is not connected properly and the terminal has poor crimping.

TROUBLE SYMPTOM:

Fail mode occurs because the data is not received from combination meter unit.

WIRING DIAGRAM:

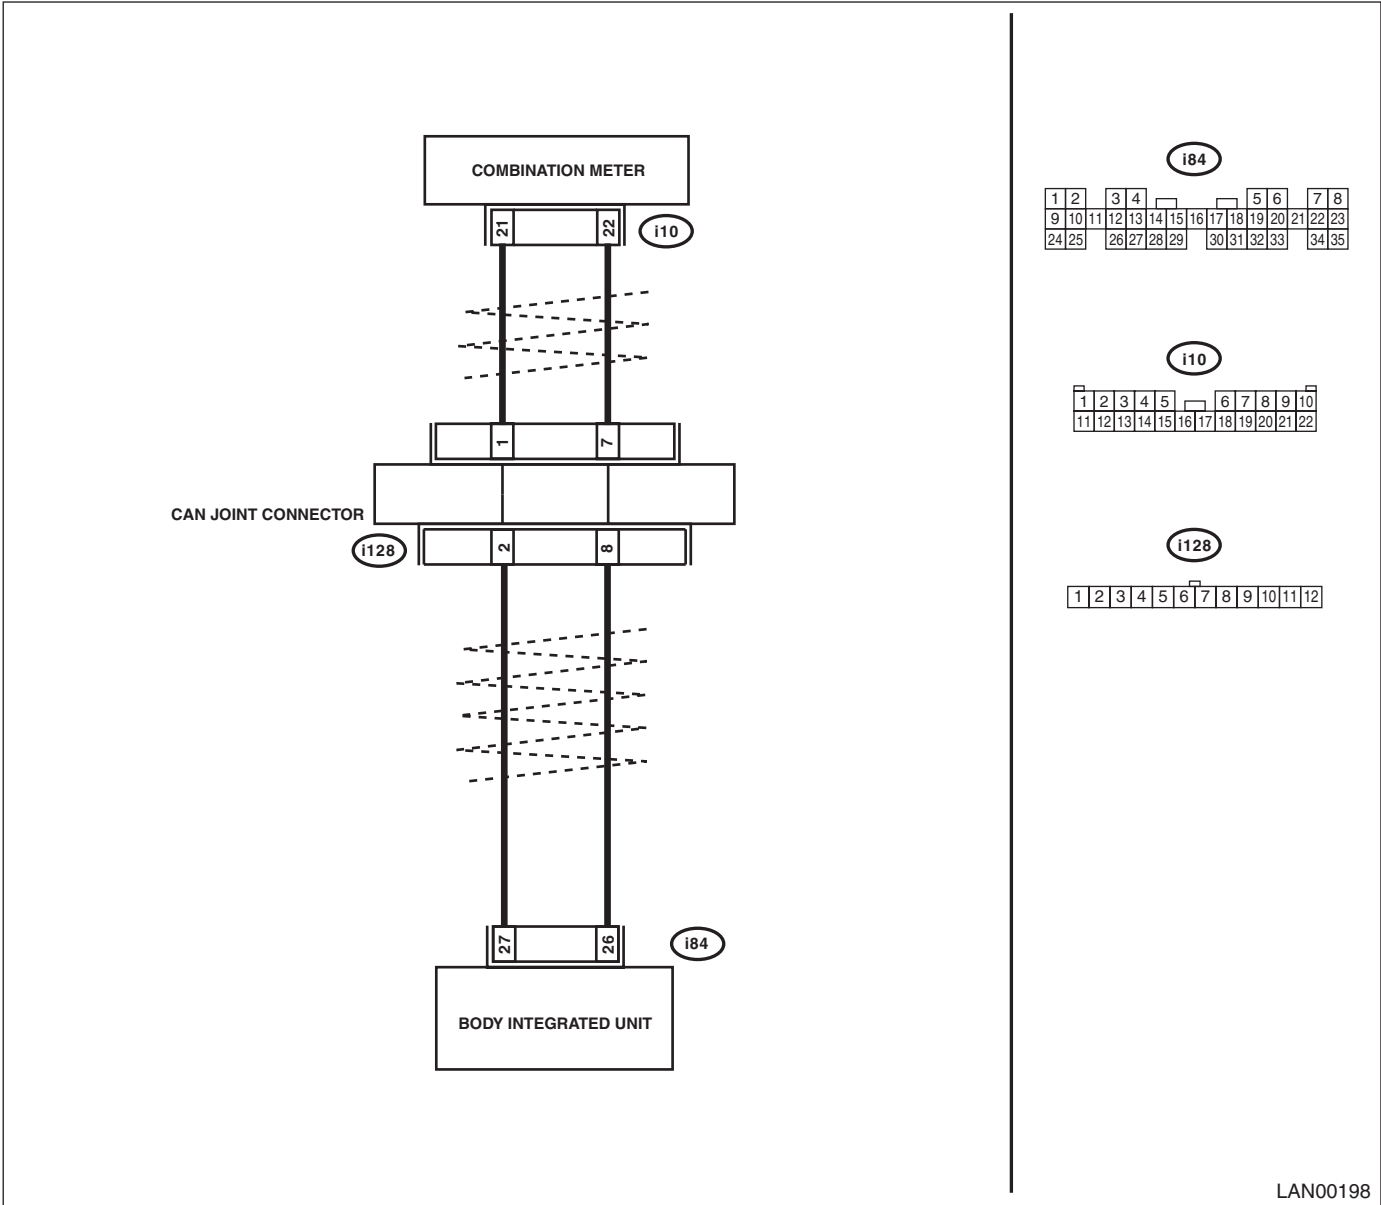

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

	Step	Check	Yes	No
1	CHECK COMMUNICATION LINE. 1) Warm up the engine. 2) Compare the data of body integrated unit and combination meter using Subaru Select Monitor. Check item: • Engine speed • All door switches • P Switch	Is the data displayed same?	Go to step 2.	Perform self-diagnosis of the combination meter. <Ref. to IDI-3, SELF-DIAGNOSIS, INSPECTION, Combination Meter System.>
2	CHECK HARNESS. 1) Disconnect the body integrated unit and combination meter connector. 2) Measure the resistance between harness connectors. Connector & terminal <i>(i10) No. 21 — (i84) No. 27:</i> <i>(i10) No. 26 — (i84) No. 26:</i>	Is resistance less than 10 Ω?	Go to step 4.	Go to step 3.
3	CHECK HARNESS. 1) Disconnect the CAN joint connector (i77) with the connector of the unit disconnected. 2) Measure the resistance between harness connectors. Connector & terminal <i>(i10) No. 21 — (i128) No. 1:</i> <i>(i10) No. 26 — (i128) No. 7:</i> <i>(i84) No. 27 — (i128) No. 2:</i> <i>(i84) No. 26 — (i128) No. 8:</i>	Is resistance less than 10 Ω?	Go to step 4.	Repair or replace the open circuit of harness.
4	CHECK HARNESS. Measure the resistance between harness connector (i77) and chassis ground. Connector & terminal <i>(i128) No. 1 — Chassis ground:</i> <i>(i128) No. 7 — Chassis ground:</i> <i>(i128) No. 2 — Chassis ground:</i> <i>(i128) No. 8 — Chassis ground:</i>	Is resistance less than 10 Ω?	Repair the short circuit of harness or replace harness.	Go to step 5.
5	CHECK HARNESS. 1) Turn the ignition switch to ON. 2) Measure the voltage between harness connector (i77) and chassis ground. Connector & terminal <i>(i128) No. 1 (+) — Chassis ground (-):</i> <i>(i128) No. 7 (+) — Chassis ground (-):</i> <i>(i128) No. 2 (+) — Chassis ground (-):</i> <i>(i128) No. 8 (+) — Chassis ground (-):</i>	Is the voltage 6 V or more?	Repair the short circuit of harness or replace harness.	Go to step 6.
6	CHECK COMBINATION METER. Perform self-diagnosis of the combination meter. <Ref. to IDI-3, SELF-DIAGNOSIS, INSPECTION, Combination Meter System.>	Is the self-diagnosis OK?	Temporary poor contact occurs.	Check the connection of connector. Replace the combination meter. <Ref. to IDI-14, Combination Meter.>

X: DTC B0500 KEYLESS UART COM. MALFUNCTION


DTC DETECTING CONDITION:

UART between keyless control unit and body integrated unit is open or shorted, the connector is not connected properly, or the terminal is crimped improperly.

TROUBLE SYMPTOM:

Door lock does not operate with keyless.

WIRING DIAGRAM:

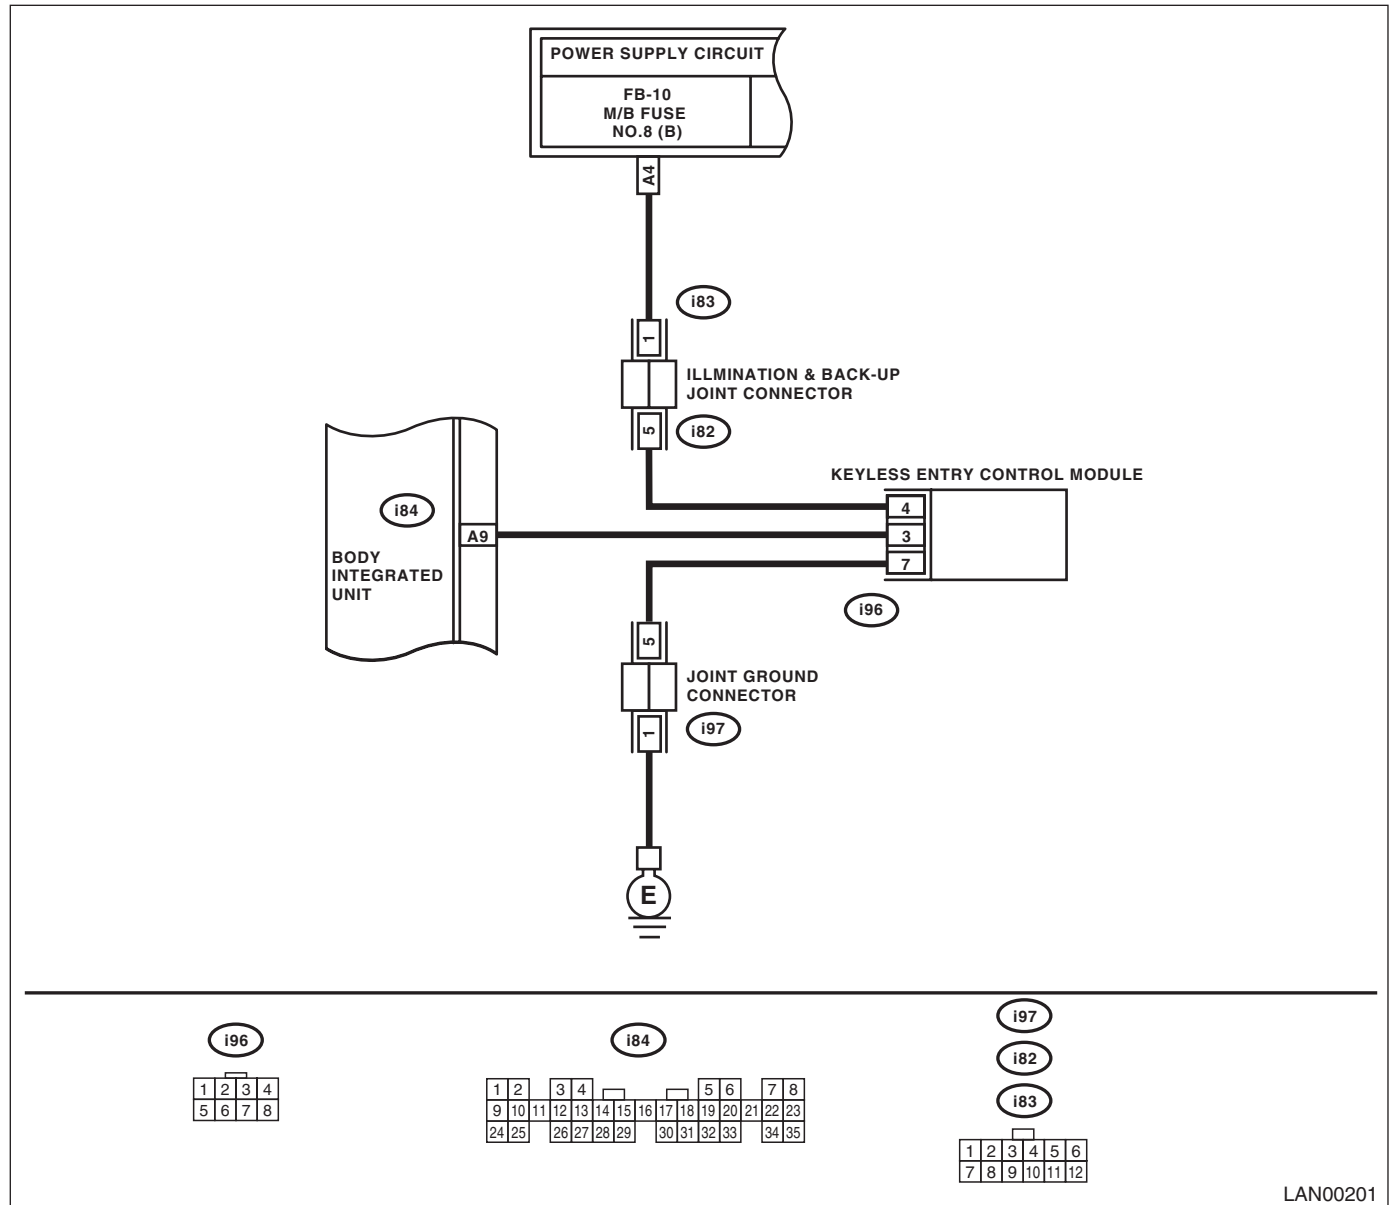

LAN00201

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

	Step	Check	Yes	No
1	CHECK HARNESS. 1) Disconnect the body integrated unit connector (i84) and keyless entry control module connector (i96). 2) Measure the resistance between harnesses. Connector & terminal (i84) No. 9 — (i96) No. 3:	Is resistance less than 10 Ω ?	Go to step 2.	Repair the open circuit of harness or replace harness.
2	CHECK HARNESS. Measure the resistance between harness connector and chassis ground. Connector & terminal (i84) No. 9 — Chassis ground:	Is the resistance less than 1 M Ω ?	Repair the short circuit of harness or replace harness.	Go to step 3.
3	CHECK HARNESS. 1) Turn the ignition switch to ON. 2) Measure the voltage between harness connector and chassis ground. Connector & terminal (i84) No. 9 (+) — Chassis ground (-):	Is the voltage 6 V or more?	Repair the short circuit of harness or replace harness.	Go to step 4.
4	OPERATION CHECK. Check the door lock operation when the doors LOCK/UNLOCK using manual LOCK switch.	Does it operate on switch operation?	Go to step 5.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
5	OPERATION CHECK. 1) Disconnect the key warning switch connector (B350). 2) Close all the doors, and then perform the LOCK/UNLOCK operation on keyless entry operation.	Does it operate?	Check key warning switch.	Replace the keyless entry control module. <Ref. to SL-53, Keyless Entry Control Module.>

13.General Diagnostic Table

A: INSPECTION

Read the DTC or inspect and diagnose the following data in the current data display using Subaru Select Monitor.

1. LAN SYSTEM

Item	Operation	Specifications		Note
		YES	NO	
Diagnostic code	DTC is not displayed when inspecting all DTCs.	DTC is not displayed.	Perform the diagnosis according to DTC.	—
Engine coolant temperature	Check the current data display of ECM, TCM and body integrated unit. Three data value are the same.	Same values	Inspect LAN system.	If engine coolant temperature sensor is not OK, inspect the sensor circuit.
R defogger SW	It turns to ON when pressing switch. (Low-speed CAN is OK)	Turns to ON.	Inspect rear defogger switch.	Rear defogger switch is connected with Low-speed CAN.
R defogger output	When switch input, it is output.	Output	Replace the body integrated unit.	If not operating with output, check the rear defogger relay.
Door lock SW	When locked with door lock switch, it turns to ON.	Turns to ON.	Inspect door lock switch.	The door lock switch is connected to the Low-speed CAN.
Door lock actuator	When locked with door lock switch, it is output.	Output	Replace the body integrated unit.	—

General Diagnostic Table

LAN SYSTEM (DIAGNOSTICS)

2. BODY INTEGRATED UNIT

Item	Operation	Specifications		Note
		YES	NO	
Illumination VR power supply	Operate the illumination volume, illumination light is controlled according to the change of voltage on data display.	Illumination light is controlled with changing of data.	Inspect the illumination volume.	—
Fuel level resistance	Check the fuel level resistance and fuel level resistance 2. Both resistances are same.	Same values	Inspect the body integrated unit.	Compare the input and output values of body integrated unit.
R wiper SW input	When rear wiper SW to ON, data display turns to ON.	Turns to ON.	Inspect the rear wiper switch.	—
R wiper output	When rear wiper switch to ON, output signal turns to ON.	Turns to ON.	Replace the body integrated unit.	If not operate with output turned to ON, check the rear wiper motor.
Keyless Entry	Keyless entry LOCK/UNLOCK the doors.	Operate	Inspect the keyless antenna.	If the antenna is OK, replace the body integrated unit.
Brake Switch	When brake pedal is depressed, it turns to ON.	Turns to ON.	Inspect the brake switch.	—
Shift Lock Solenoid	The shift lock releases when depressing the brake pedal.	Released	Inspect the shift lock.	—
Body integrated unit registration function setting	Does Vehicle equipment correspond to setting values?	Correspondence	Reconfigure the values according to vehicle equipment.	—
Customize	When changing customize setting, the registration completes correctly.	Registered	Inspect the body integrated unit.	—
Manual mode	Switch the shift (UP/DOWN) on Manual mode. Indicator is changed in 1 — 2.	Change	Inspect the shift lever.	—
Function check	Each checking item operate correctly. (Except for not equipped)	Operate	Inspect for non-functional actuator.	—
Security	After locking with keyless entry system and open the door, the security system operates and the horn sounds.	Horn sounds. (Security system operates.)	Inspect the security system.	—

WIRING SYSTEM SECTION

WIRING SYSTEM

WI

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

WIRING SYSTEM



	Page
1. Basic Diagnostic Procedure	3
2. Working Precautions	14
3. Power Supply Circuit	15
4. Ground Circuit	22
5. Engine Electrical System	32
6. Radiator Fan System	73
7. Charging System	75
8. Starter System	76
9. AT Control System	78
10. AT Shift Lock Control System	94
11. Anti-lock Brake System	95
12. Vehicle Dynamics Control System	97
13. TPM Control System	100
14. Air Conditioning System	101
15. Power Seat System	108
16. Airbag System	109
17. Seat Belt Warning System	113
18. Occupant Detection System	114
19. Seat Heater System	115
20. Headlight System	116
21. Front Fog Light System	119
22. Back-up Light System	120
23. Stop Light System	121
24. Clearance Light and Illumination Light System	122
25. Turn Signal Light and Hazard Light System	127
26. Interior Light System	129
27. Front Wiper and Washer System	133
28. Rear Wiper and Washer System	134
29. Wiper Deicer System	135
30. Audio System	136
31. Front Accessory Power Supply Socket System	138
32. Rear Accessory Power Supply Socket System	139
33. Navigation System	140
34. OP Connector System	142
35. Horn System	143
36. Power Window System	144
37. Remote Control Mirror System	148
38. Rear Defogger System	149
39. Combination Meter System	150
40. Speedmeter System	154
41. Clock System	155
42. Fuel Gauge System	156
43. Coolant Temperature System	157

44.	Oil Pressure Warning Light System	158
45.	Parking Brake / Brake Fluid Level Warning Light System	159
46.	Sunroof Control System	160
47.	Security System	162
48.	Immobilizer System	165
49.	Keyless Entry System	166
50.	Cruise Control System	170
51.	CAN Communication System	176
52.	Harness Components Location	178
53.	Front Wiring Harness	180
54.	Bulkhead Wiring Harness (In Engine Compartment)	182
55.	Bulkhead Wiring Harness (In Compartment)	184
56.	Engine Wiring Harness and Transmission Cord	187
57.	Instrument Panel Wiring Harness	193
58.	Rear Wiring Harness	195
59.	Door Cord	201
60.	Rear Wiring Harness and Trunk Lid Cord	203
61.	Rear Wiring Harness and Rear Gate Cord	205
62.	Harness Repair Kit	207

General Description

LIGHTING SYSTEM

1. General Description

A: SPECIFICATION

Headlight	Halogen type low beam	12 V — 55 W
	Halogen type high beam	12 V — 60 W
Front turn signal, parking, front side marker light		12 V — 27/8 W
Front fog light	OUTBACK	12 V — 51 W
	Except for OUTBACK	12 V — 55 W
Side turn signal light		12 V — 2.7 W (LED)
Rear combination light	Stop/tail light	12 V — 21/5 W
	Turn signal light	12 V — 21 W
	Wagon Rear side marker light	12 V — 5 W
Back-up light	Sedan	12 V — 16 W
	Wagon	12 V — 16 W
License plate light		12 V — 5 W
High-mounted stop light	Sedan	12 V — 21 W
	Wagon	12 V — 1.3 W (LED)
Room light		12 V — 8 W
Spot map light		12 V — 8 W
Luggage room light		12 V — 13 W
Trunk room light		12 V — 5 W
Glove box light		12 V — 1.4 W
Door step light		12 V — 3.5 W

B: CAUTION

- Before removing or installing parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.
- The airbag system wiring harness is routed near electrical parts and switches. Airbag system wiring harnesses and connectors are yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.

2. Headlight and Tail Light System

A: WIRING DIAGRAM

1. HALOGEN TYPE HEADLIGHT

<Ref. to WI-116, WIRING DIAGRAM, Headlight System.>

2. CLEARANCE LIGHT AND ILLUMINATION LIGHT

<Ref. to WI-122, WIRING DIAGRAM, Clearance Light and Illumination Light System.>


B: INSPECTION

1. HEADLIGHT SWITCH

<Ref. to LI-9, INSPECTION, Combination Switch (Light).>

2. HEADLIGHT RELAY


Measure the headlight relay resistance between terminals when connecting terminal No. 4 to the battery positive terminal and terminal No. 3 to the battery ground terminal.

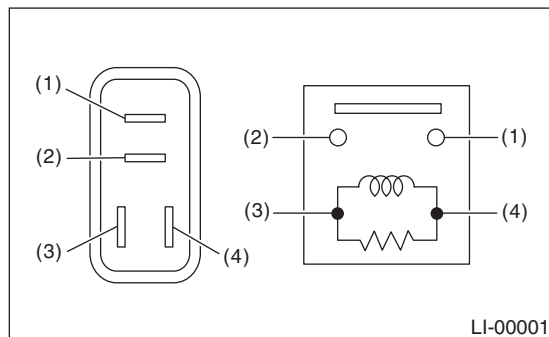

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 M Ω or more

3. TAIL AND ILLUMINATION RELAY

Measure the resistance between the tail and illumination relay terminals when connecting terminal No. 4 to the battery positive terminal and terminal No. 3 to the battery ground terminal.

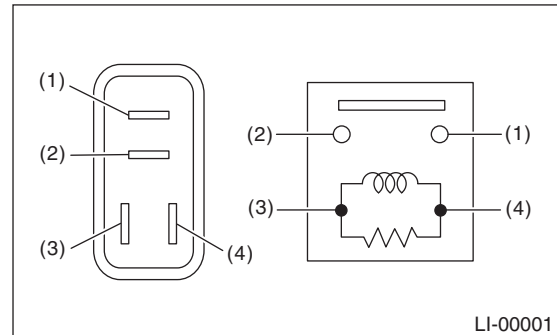

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 M Ω or more

3. Front Fog Light System

A: WIRING DIAGRAM

1. FRONT FOG LIGHT

<Ref. to WI-119, WIRING DIAGRAM, Front Fog Light System.>

B: INSPECTION


1. FRONT FOG LIGHT SWITCH

Measure the resistance between front fog light switch terminals.

<Ref. to LI-9, INSPECTION, Combination Switch (Light).>

2. FRONT FOG LIGHT RELAY

Connect terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal, and measure the front fog light relay resistance between terminals.

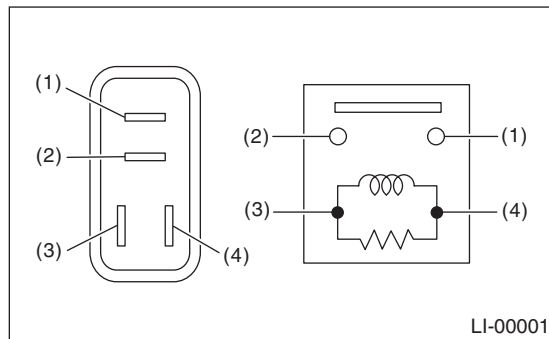

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 M Ω or more

4. Turn Signal Light and Hazard Light System

A: WIRING DIAGRAM

1. TURN SIGNAL LIGHT AND HAZARD LIGHT

<Ref. to WI-127, WIRING DIAGRAM, Turn Signal Light and Hazard Light System.>


B: INSPECTION

1. TURN SIGNAL SWITCH

<Ref. to LI-9, INSPECTION, Combination Switch (Light).>

2. HAZARD SWITCH


Measure the resistance between hazard switch terminals.

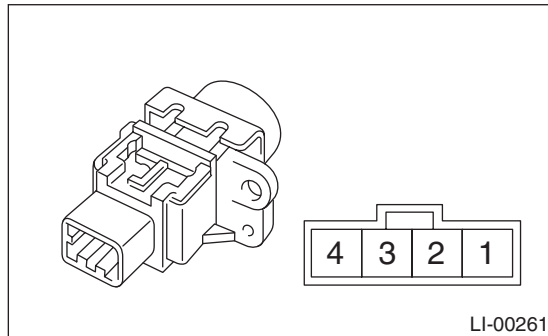

Switch position	Terminal No.	Standard
OFF	2 and 3	1 MΩ or more
ON		Less than 1 Ω

3. TURN SIGNAL AND HAZARD MODULE

Connect the battery and turn signal light bulb to the module. The module is properly functioning if it blinks when power is supplied to the circuit.

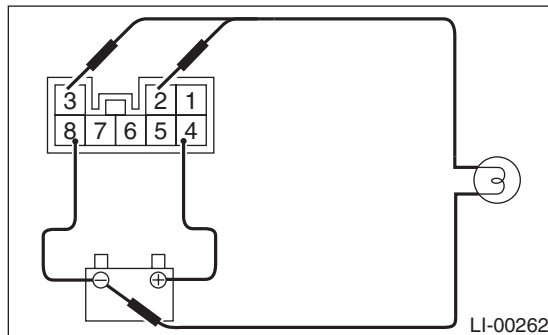

Back-up Light System

LIGHTING SYSTEM

5. Back-up Light System

A: WIRING DIAGRAM


1. BACK-UP LIGHT

<Ref. to WI-120, WIRING DIAGRAM, Back-up Light System.>

B: INSPECTION

1. BACK-UP LIGHT SWITCH (MT MODEL)


Measure the resistance between the back-up light switch terminals.

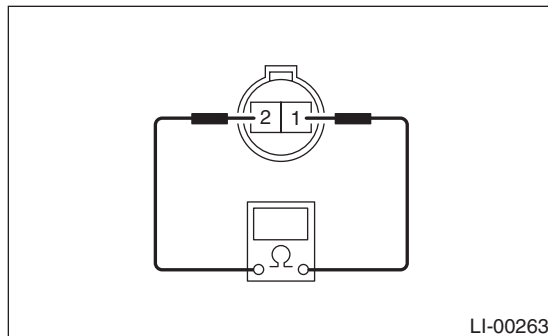

Switch position	Terminal No.	Standard
When shift lever is set in reverse position	1 and 2	Less than 1 Ω
Other positions		1 M Ω or more

2. INHIBITOR SWITCH (4AT MODEL)


Measure the resistance between the inhibitor switch terminals.

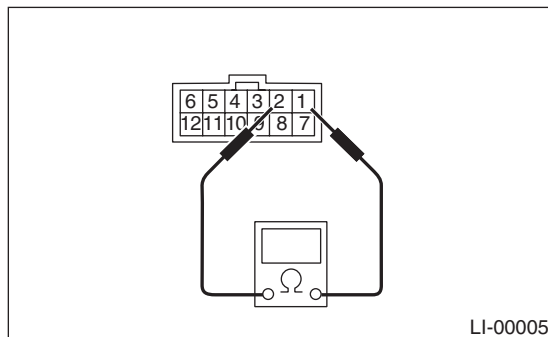

Switch position	Terminal No.	Standard
When the selector lever is in the "R" range	1 and 2	Less than 1 Ω
Other positions		1 M Ω or more

3. BACK-UP LIGHT RELAY (5AT MODEL)

Measure the resistance between headlight relay terminals when connecting terminal No. 4 to the battery positive terminal and terminal No. 3 to the battery ground terminal.

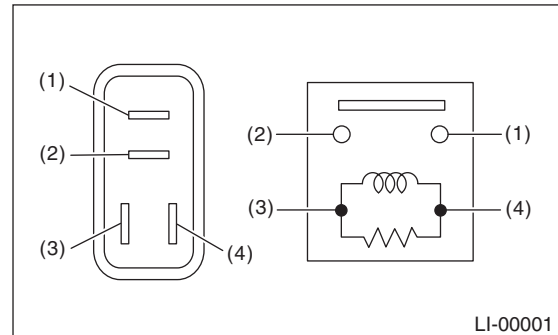

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 M Ω or more

NOTE:

Checks other than the back-up light relay. <Ref. to 4AT-46, INSPECTION, Inhibitor Switch.>

6. Stop Light System

A: WIRING DIAGRAM


1. STOP LIGHT

<Ref. to WI-121, WIRING DIAGRAM, Stop Light System.>

B: INSPECTION

1. STOP LIGHT SWITCH

Measure the resistance between stop light switch terminals.

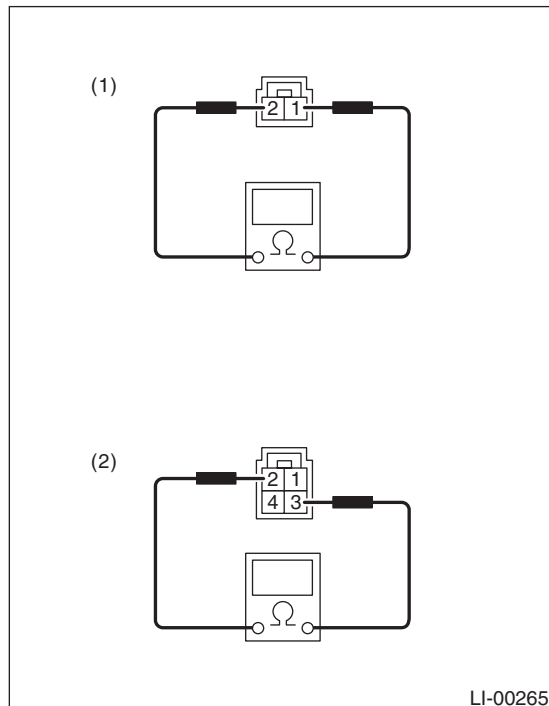

(1) Models without cruise control

(2) Models with cruise control

Switch position	Terminal No.	Standard
When brake pedal is depressed	Models without cruise control: 1 and 2	Less than 1 Ω
When brake pedal is released	Models with cruise control: 2 and 3	1 M Ω or more

Room Light System

LIGHTING SYSTEM

7. Room Light System

A: WIRING DIAGRAM


1. ROOM LIGHT

<Ref. to WI-129, WIRING DIAGRAM, Interior Light System.>

B: INSPECTION

1. DOOR SWITCH


Measure the resistance between door switch terminals.

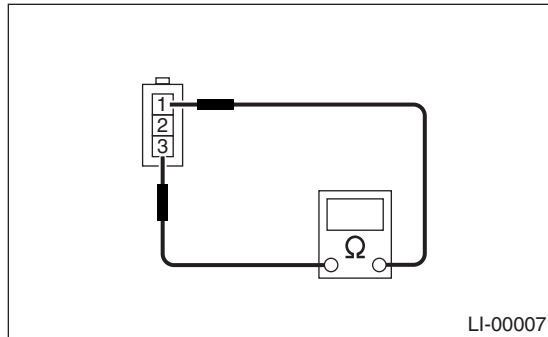

Switch position	Terminal No.	Standard
When door is opened	1 and 3	Less than 1 Ω
When door is closed		1 M Ω or more

2. REAR GATE LATCH SWITCH


Measure the resistance between rear gate latch switch terminals.

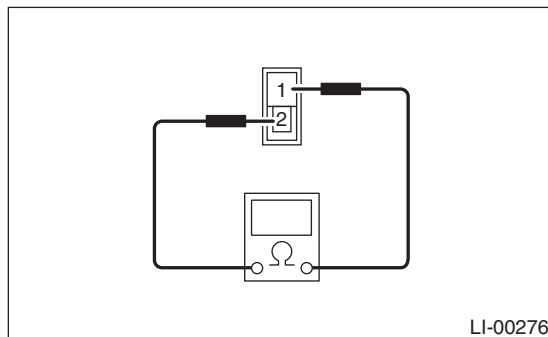

Switch position	Terminal No.	Standard
When rear gate is opened	1 and 2	Less than 1 Ω
When rear gate is closed		1 M Ω or more

3. TRUNK ROOM LIGHT SWITCH

Measure the resistance between the trunk room light switch terminals.

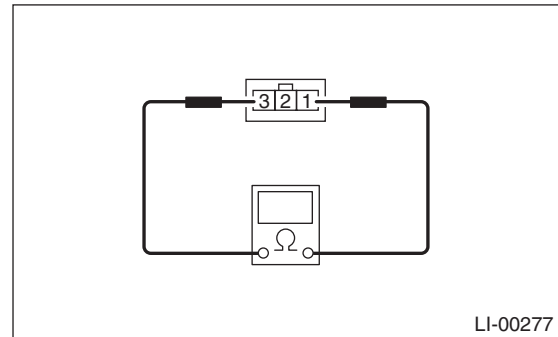


Switch position	Terminal No.	Standard
When trunk lid is opened	1 and 3	Less than 1 Ω
When trunk lid is closed		1 M Ω or more


8. Combination Switch (Light)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column covers (upper and lower).

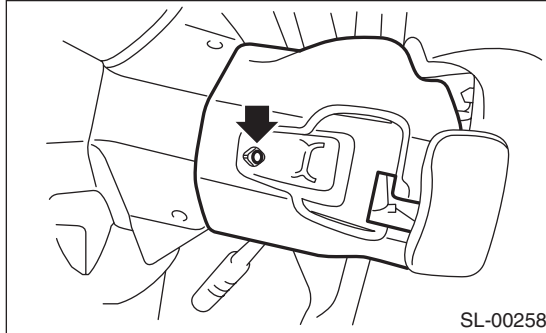

- 3) Disconnect the connector from combination switch.
- 4) Remove the screws which secure the switch, then remove the combination switch.

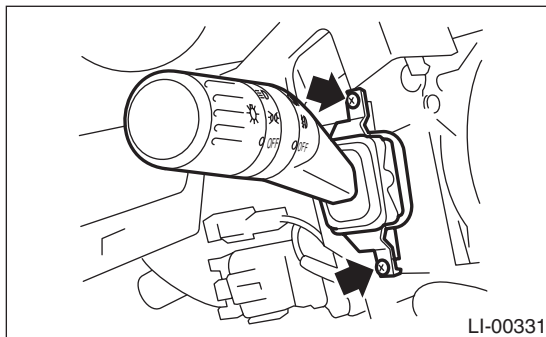


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between combination switch terminals.

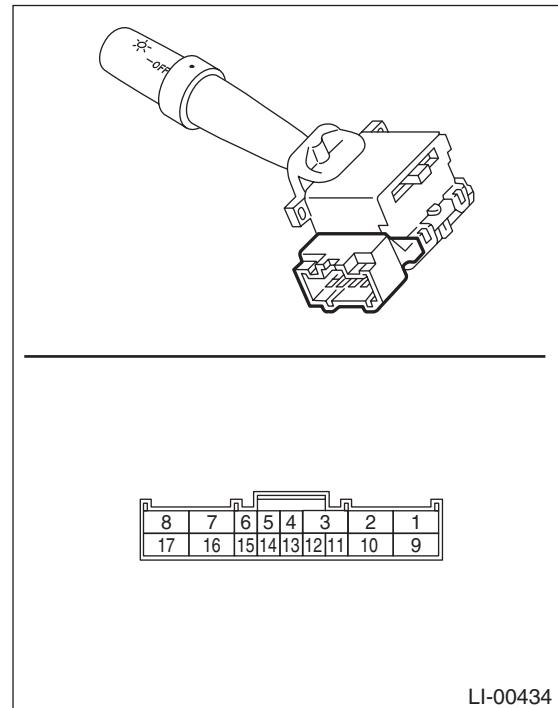

1. LIGHTING SWITCH

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
Tail	14 and 16	Less than 1 Ω
Head	13, 14 and 16	Less than 1 Ω

2. DIMMER & PASSING SWITCH

Switch position	Terminal No.	Standard
Passing	7, 8 and 16	Less than 1 Ω
Low beam	17 and 16	Less than 1 Ω
High beam	7 and 16	Less than 1 Ω

3. TURN SIGNAL SWITCH

Switch position	Terminal No.	Standard
Left	1 and 2	Less than 1 Ω
Neutral	—	1 MΩ or more
Right	2 and 3	Less than 1 Ω

4. FRONT FOG LIGHT

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	10 and 11	Less than 1 Ω


Combination Base Switch Assembly

LIGHTING SYSTEM


9. Combination Base Switch Assembly

A: REMOVAL

- 1) Remove the driver's airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>
- 2) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 3) Remove the screws and remove the steering column lower cover.

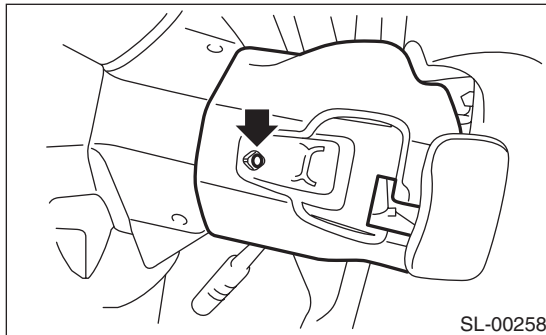

- 4) Remove the combination switch. <Ref. to LI-9, REMOVAL, Combination Switch (Light).> <Ref. to WW-6, REMOVAL, Combination Switch (Wiper).>
- 5) Remove the four screws and remove the roll connector.
- 6) Remove the three screws.

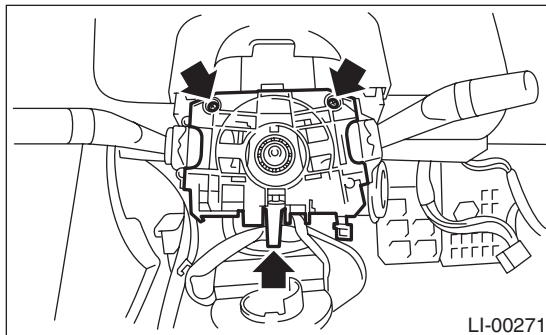

- 7) Disconnect the connector and remove the combination base switch assembly.

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Before installing the steering wheel, be sure to adjust the direction of roll connector with steering. <Ref. to AB-26, ADJUSTMENT, Roll Connector.>


C: INSPECTION

1. COMBINATION BASE SWITCH ASSEMBLY

Inspect the combination base switch assembly and roll connector for cracks or deformation. If any damage is found, replace with a new part.

2. PARKING SWITCH

Measure the resistance between parking switch terminals.

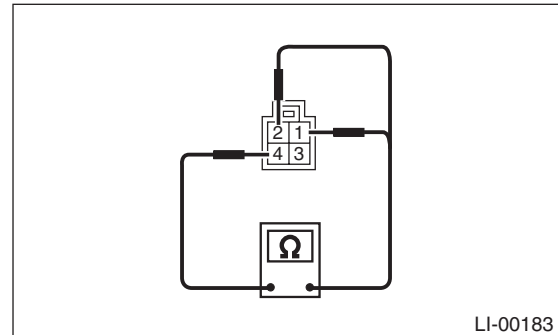


Switch position	Terminal No.	Standard
OFF	2 and 4	Less than 1 Ω
ON	1 and 4	Less than 1 Ω


10. Headlight Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct. (When removing the headlight RH).

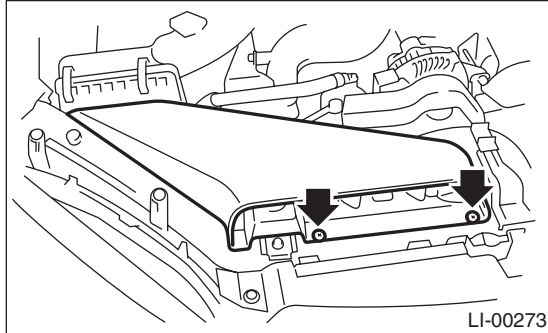

- 3) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 4) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 5) Disconnect harness connectors.
- 6) Remove the 5 bolts, disengage 1 clip, then detach the headlight assembly.

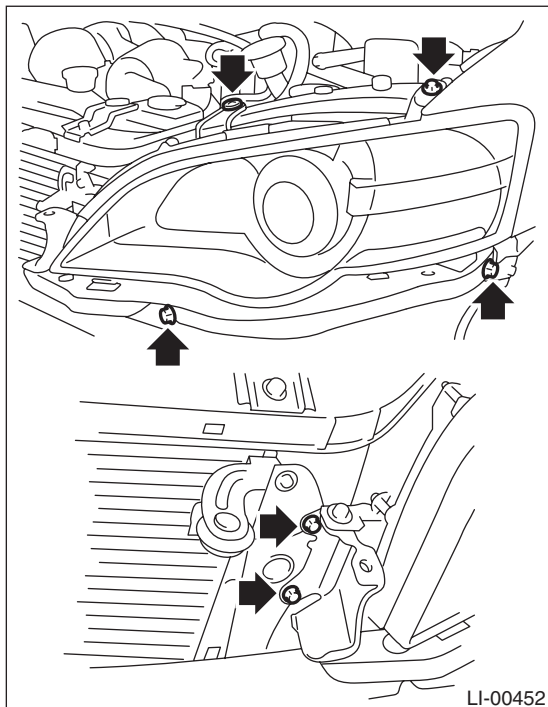

B: INSTALLATION

Install in the reverse order of removal.

C: ADJUSTMENT

1. HEADLIGHT AIMING

NOTE:

Aiming of this headlight can be adjusted only in the vertical direction. It cannot be adjusted in the horizontal direction.

CAUTION:

Turn off the light before adjusting the headlight beam level. If the light is necessary to check aiming, do not turn on for more than two minutes.

NOTE:


Before checking the headlight beam level, be sure of the following:

- The area around the headlight has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

- 1) Bounce the vehicle several times to normalize the suspension.
- 2) Make certain that someone is seated in the driver's seat.
- 3) Turn the headlights on and then adjust the low beam pattern.


NOTE:

Adjust the headlight beam level by turning the adjusting screw (A).

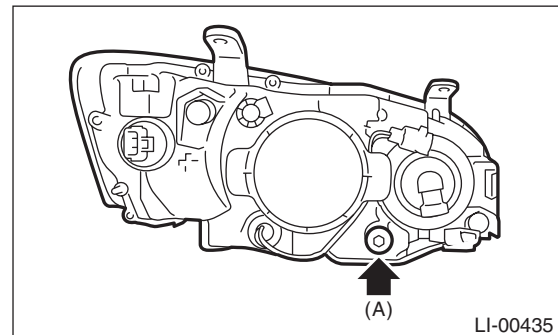

Headlight Assembly

LIGHTING SYSTEM

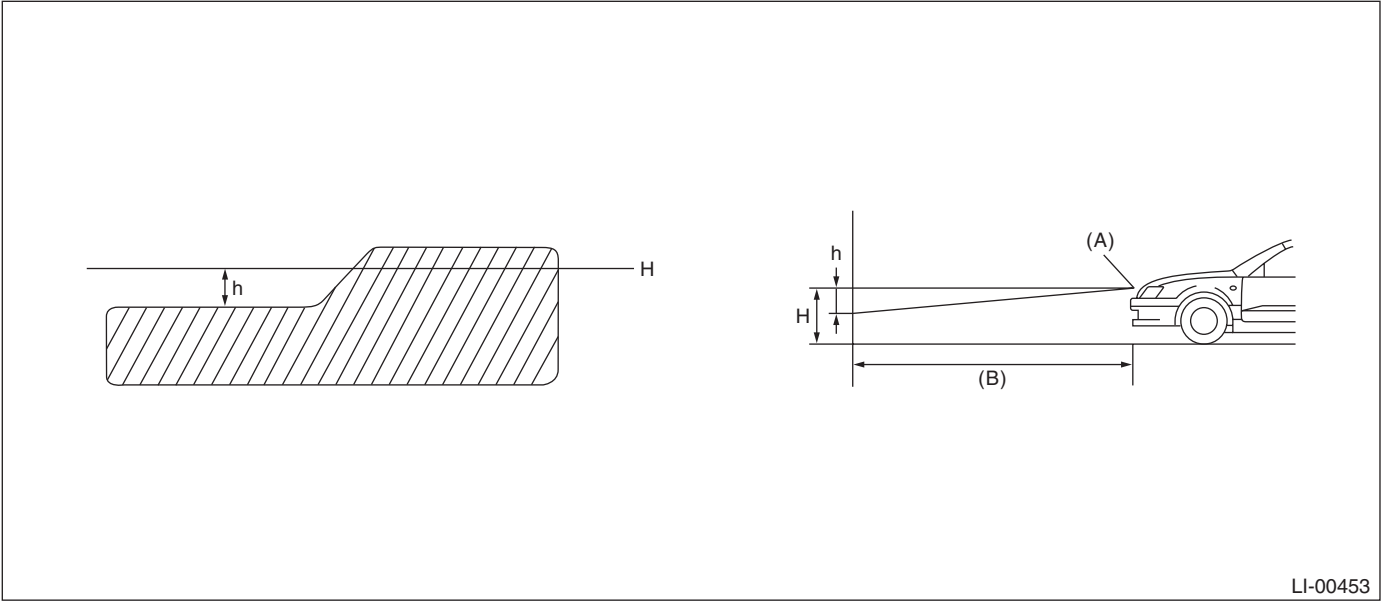

LI-00453

(A) Bulb center marking (B) 3 m (10 ft)

H mm (in)				h mm (in) at 3 m (10 ft)
Sedan		Wagon		
Except for OUTBACK	OUTBACK	Except for OUTBACK	OUTBACK	
640 (25.20)	707 (27.83)	637 (25.08)	707 (27.83)	21 (0.83)

11. Headlight Bulb

A: REMOVAL


1. HIGH BEAM AND LOW BEAM

CAUTION:


- Because the halogen bulb operates at a high temperature, dirt and oil on the bulb surface reduces the bulb's service life. Hold the flange portion when replacing the bulb. Never touch the glass portion.

- Do not leave the headlight without a bulb for a long time. Dust, moisture, etc. entering the headlight may affect its performance.


- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct. (When removing the headlight bulb RH).

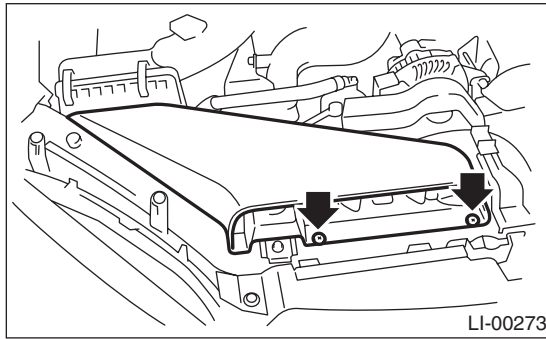

- 3) Remove the battery cover. (When removing the headlight bulb LH)
- 4) Tilt the washer tank filler neck. (When removing the headlight bulb LH)
- 5) Disconnect the harness connector.
- 6) Remove the bulb assembly (A) then remove the high beam. To remove the low beam, remove the back cover (B), and then go to Step 7.

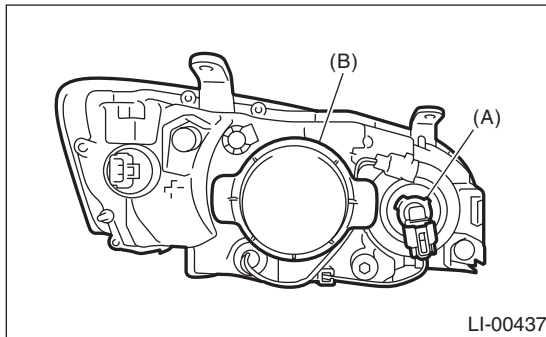

- 7) Remove the light bulb retaining spring (A) to remove bulb.

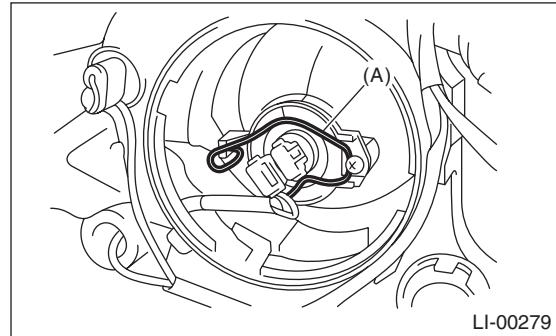

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

12.Front Turn Signal Light Bulb

A: REMOVAL

1) When removing the turn signal light bulb, fully turn the steering wheels to opposite direction from the turn signal light bulb to remove.

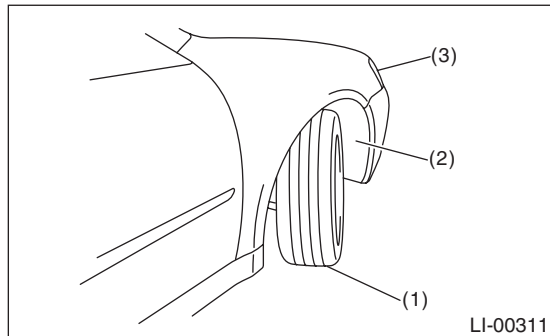


(1) Turn the steering wheel fully.

(2) Mud guard

(3) Front turn signal light

2) Turn the mud guard inward.

3) Turn socket (A) from the wheel arch, and remove the front turn signal light bulb.

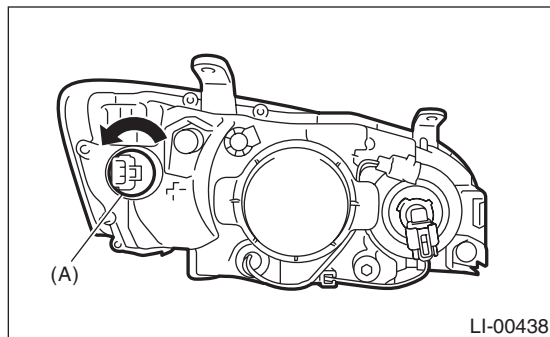

CAUTION:

ON the 5AT model, the turn signal light bulb LH cannot be removed from the wheel arch. Remove the bulb from the engine compartment, by removing the battery.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.

2) Check the bulb specification.

<Ref. to LI-2, SPECIFICATION, General Description.>

3) If NG, replace the bulb with a new part.

13. Parking Light Bulb

A: SPECIFICATION

The parking light bulb is integrated into the front turn signal light bulb as a unit; therefore, refer to "Front Turn Signal Light Bulb" for the removal procedure. <Ref. to LI-14, REMOVAL, Front Turn Signal Light Bulb.>

14.Front Side Marker Light Bulb

A: SPECIFICATION


The front side marker light bulb is integrated into the front turn signal light bulb as a unit; therefore, refer to “Front Turn Signal Light Bulb” for the removal procedures. <Ref. to LI-14, REMOVAL, Front Turn Signal Light Bulb.>

15. Front Fog Light Assembly


A: REMOVAL

1. EXCEPT FOR OUTBACK MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the front fog light cover (A).

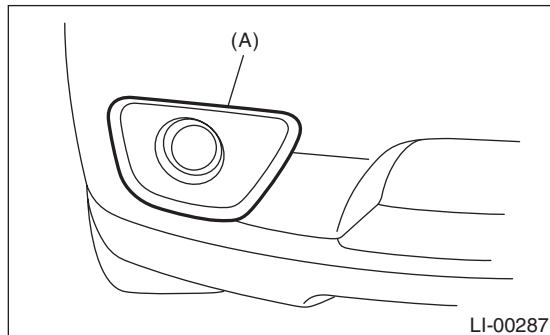

- 3) Disengage the two clips, and then turn over the lower mud guard.

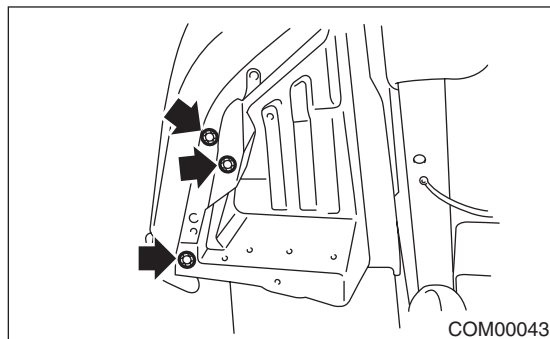


- 4) Disconnect the harness connector.
- 5) Remove the mounting bolts, then detach the fog light assembly by pulling it out.

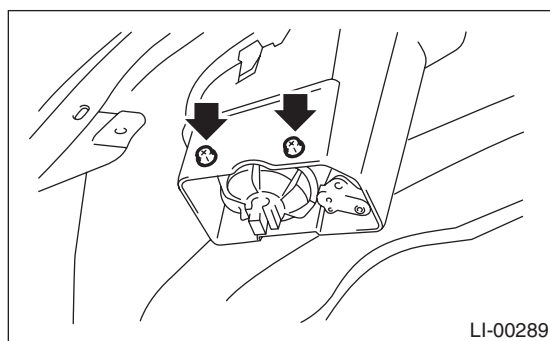


2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Disengage the two clips, and then turn over the lower mud guard.

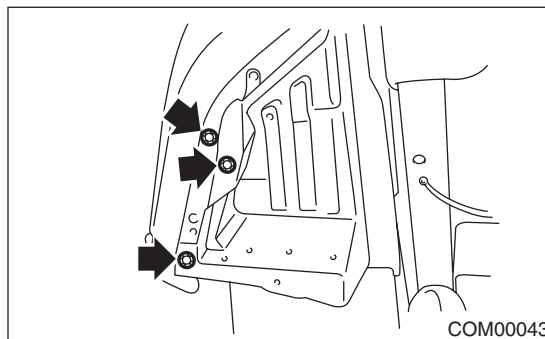

- 3) Disconnect the harness connector.
- 4) Remove the mounting nuts and clips, and detach the fog light assembly by pulling it out.

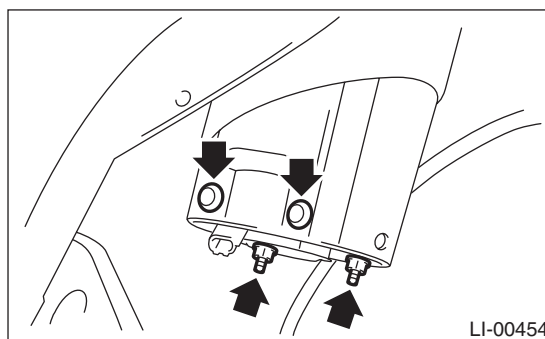

B: INSTALLATION

Install in the reverse order of removal.

Front Fog Light Assembly

LIGHTING SYSTEM

C: ADJUSTMENT

1. FOG LIGHT AIMING

NOTE:

Before checking the fog light beam level, be sure of the following:

- The area around the fog light has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

1) Bounce the vehicle several times to normalize the suspension.


2) Make certain that someone is seated in the driver's seat.

3) Adjust the fog light pattern by inserting a Philips screwdriver to the aiming screw hole.



NOTE:

Perform the adjustment after removing the front fog light cover.

Except for OUTBACK model

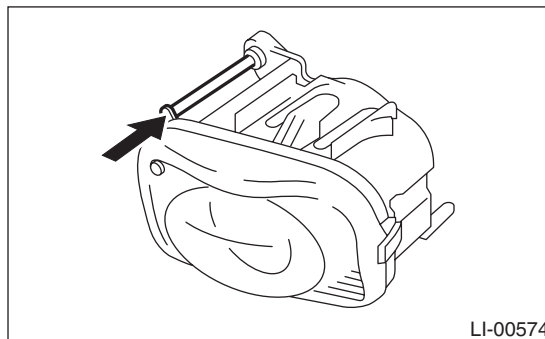

OUTBACK model

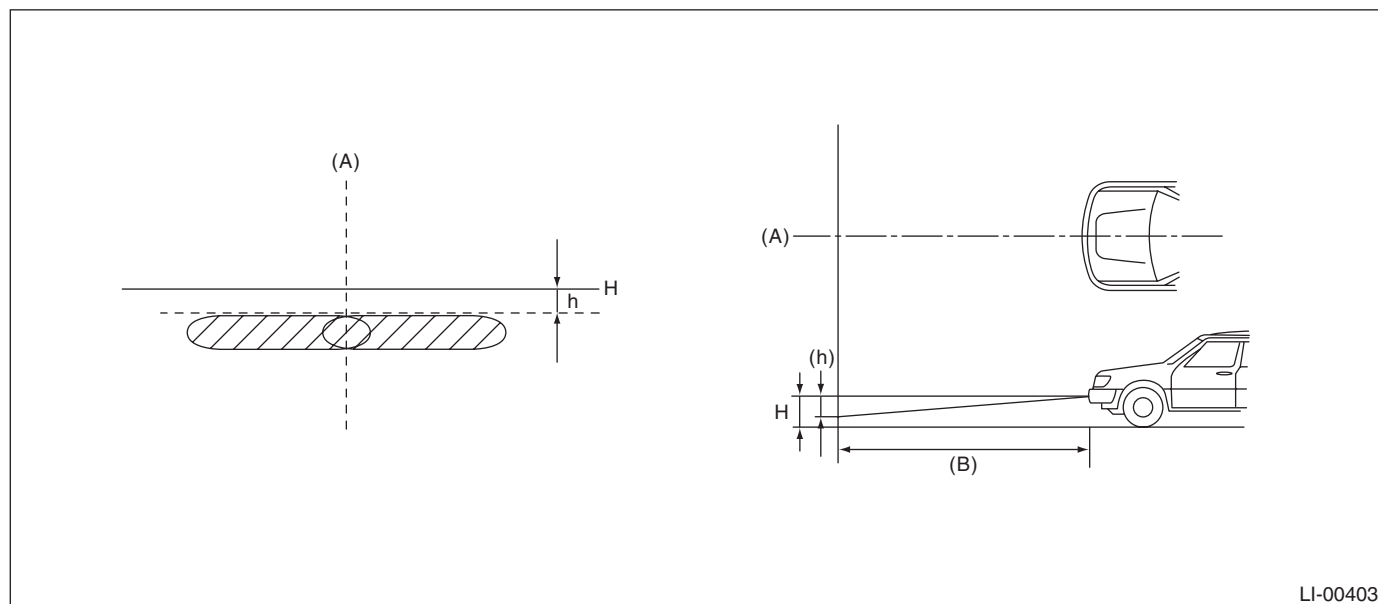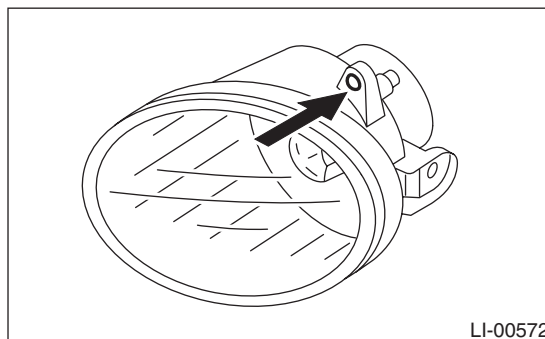

(A) Vehicle center

(H) Height of fog light center

(h) 40 mm (1.58 in)


(B) 3 m (10 ft)

Height of fog light center (H) mm (in)			
Sedan		Wagon	
Except for OUTBACK	OUTBACK	Except for OUTBACK	OUTBACK
330 (12.99)	423 (16.65)	328 (12.91)	423 (16.65)


16.Front Fog Light Bulb

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disengage the two clips, and then turn over the lower mud guard.

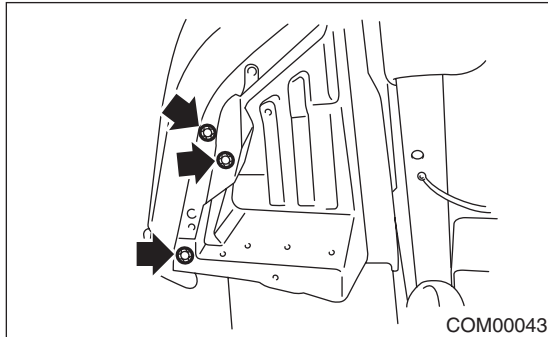

- 3) Disconnect the harness connector.
- 4) Remove the back cover.

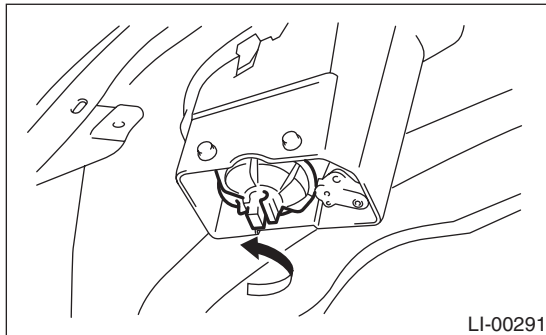

- 5) Remove the spring retainer then detach the fog light bulb.

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

17.Side Turn Signal Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the scalp cap. <Ref. to GW-19, REPLACEMENT, Scalp Cap.>
- 3) Remove the mirror. <Ref. to GW-22, REPLACEMENT, Outer Mirror.>
- 4) Disconnect the harness connector, remove the 3 mounting screws and then remove the side turn signal light assembly.

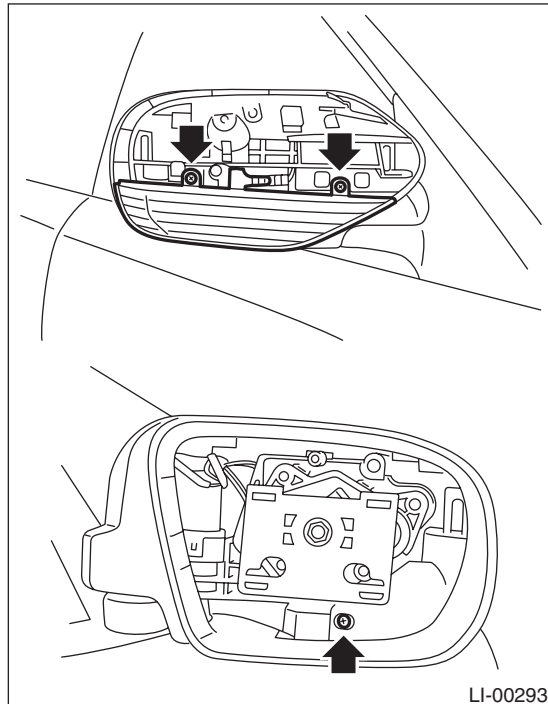

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Install the side turn signal light assembly and check that it blinks normally.
- 2) If it does not blink normally, replace the side turn signal light assembly with a new part.

NOTE:


Since LED (Light Emitting Diode) is used for the side turn signal light, replace the side turn signal light assembly if the LED burns out.

18. Rear Combination Light Assembly


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim. <Ref. to EI-68, REMOVAL, Trunk Room Trim.>
- 3) Remove the four nuts, and then detach the rear combination light after disconnecting the connector.

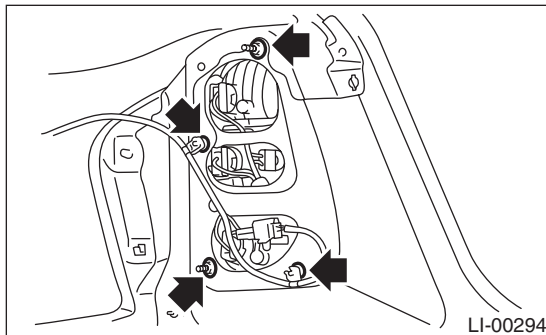

- 4) Remove the two bolts, and then detach the rear combination light by pulling it to the rear side of vehicle.

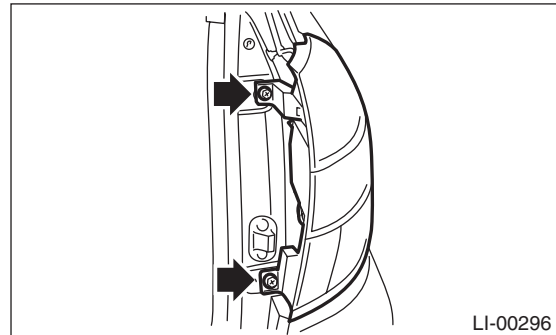


- 5) After turning the sockets of the tail/stop light bulbs and rear turn signal light bulbs, remove the rear combination light.

B: INSTALLATION


Install in the reverse order of removal.

2. WAGON MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clip.

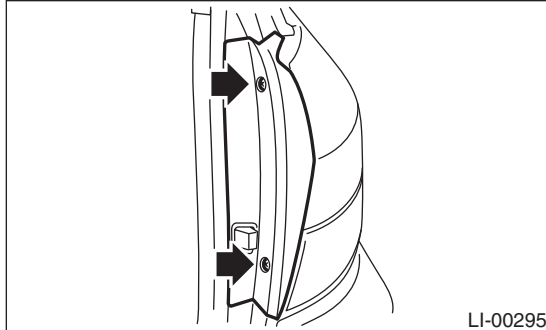

- 3) While pressing the section (A), insert your finger or a flat-tip screwdriver wrapped with tape into the clearance (B) to remove claws in the order of (C), (D), (E), and remove the rear combination cover.

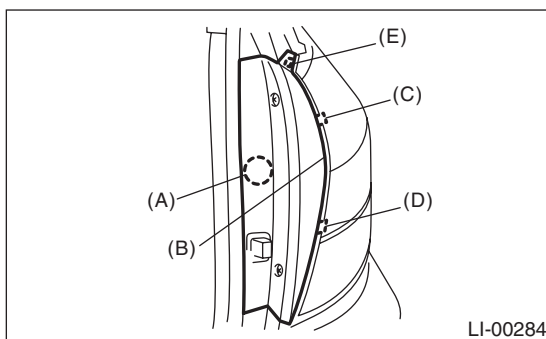


19. Tail/Stop Light Bulb

A: REMOVAL


1. SEDAN MODEL

- 1) Remove the trunk side trim cover.
- 2) Turn the socket and remove the bulb.

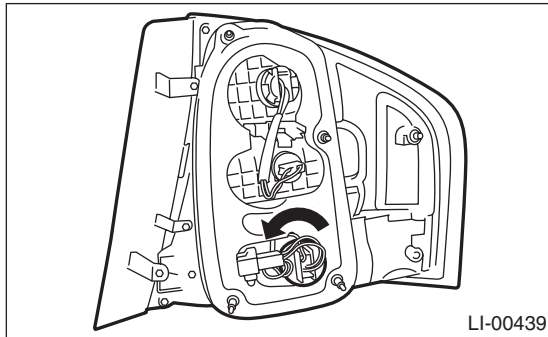

2. WAGON MODEL

- 1) Remove the rear combination light assembly.
<Ref. to LI-21, WAGON MODEL, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

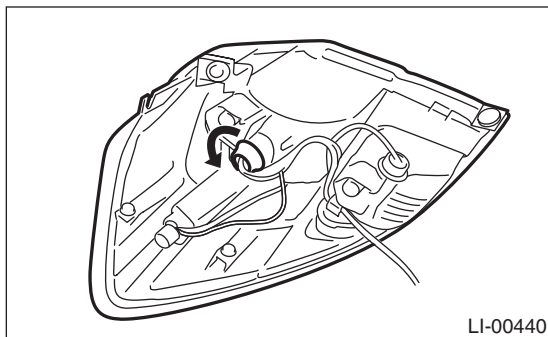

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

20.Rear Turn Signal Light Bulb

A: REMOVAL


1. SEDAN MODEL

- 1) Remove the trunk side trim cover.
- 2) Turn the socket and remove the bulb.

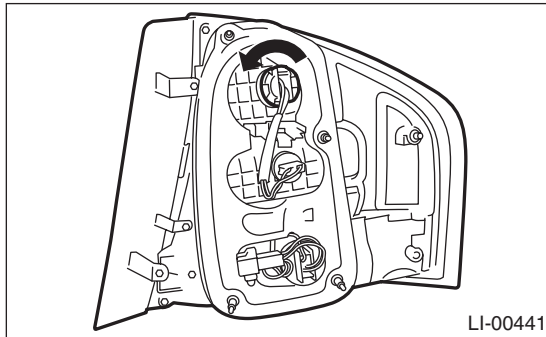

2. WAGON MODEL

- 1) Remove the rear combination light assembly.
<Ref. to LI-21, WAGON MODEL, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

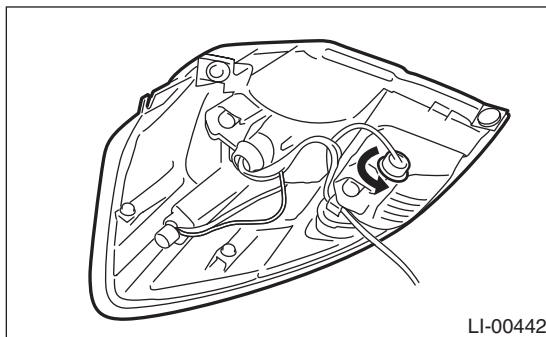

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

21.Rear Side Marker Light Bulb

A: REMOVAL


1. SEDAN MODEL

A bulb is not equipped on the sedan model, since it is a reflex reflector type.

2. WAGON MODEL

1) Remove the rear combination light assembly.
<Ref. to LI-21, WAGON MODEL, REMOVAL, Rear Combination Light Assembly.>

2) Turn the socket and remove the bulb.

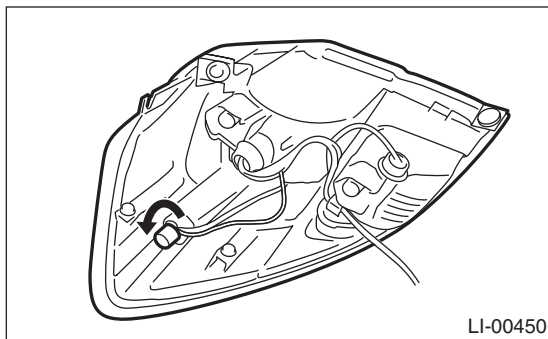

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1) Visually check the bulb for blow out.

2) Check the bulb specification.

<Ref. to LI-2, SPECIFICATION, General Description.>

3) If NG, replace the bulb with a new part.

22.Back-up Light Assembly

A: REMOVAL

1. SEDAN MODEL


Remove the rear combination light. <Ref. to LI-21, REMOVAL, Rear Combination Light Assembly.>

2. WAGON MODEL

1) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>

2) Disconnect the harness connector and remove the rear gate garnish. <Ref. to EI-73, REMOVAL, Rear Gate Garnish.>

3) Remove the attachment nuts and remove the back-up light assembly.

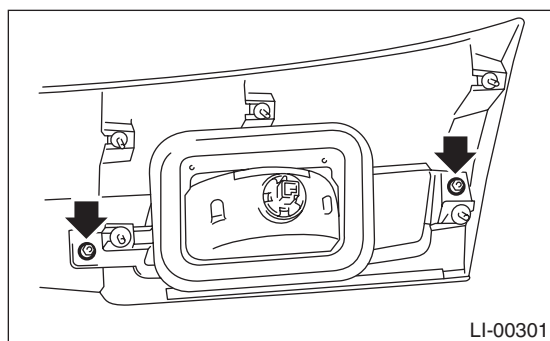

B: INSTALLATION


Install in the reverse order of removal.

23.Back-up Light Bulb

A: REMOVAL


1. SEDAN MODEL

- 1) Remove the trunk side trim cover.
- 2) Turn the socket and remove the bulb.

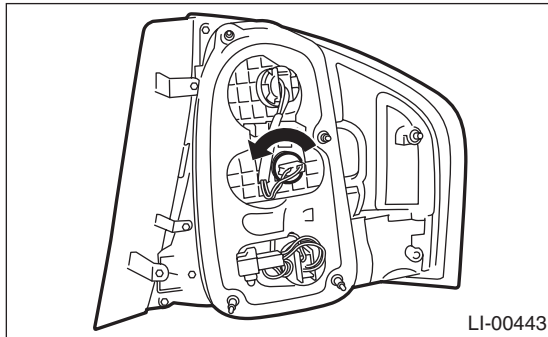

2. WAGON MODEL

- 1) Remove the bulb inspection cover of the rear gate trim.
- 2) Turn the socket and remove the bulb.

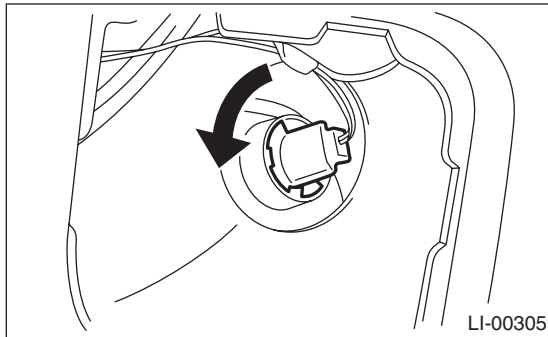

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

24. License Plate Light Assembly

A: REMOVAL

1. SEDAN MODEL

- 1) Remove the trunk lid garnish. <Ref. to EI-72, REMOVAL, Trunk Lid Garnish.>
- 2) Remove the trunk lid trim. <Ref. to EI-68, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>
- 3) Turn and remove the bulb socket (A). Disengage clip (B) and remove the license plate light assembly.

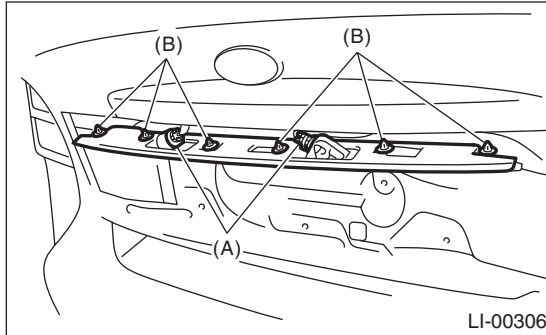

B: INSTALLATION


Install in the reverse order of removal.

25. License Plate Light

A: REMOVAL

1. SEDAN MODEL


- 1) Remove the trunk lid trim. <Ref. to EI-68, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>
- 2) Turn and remove the bulb socket (A).

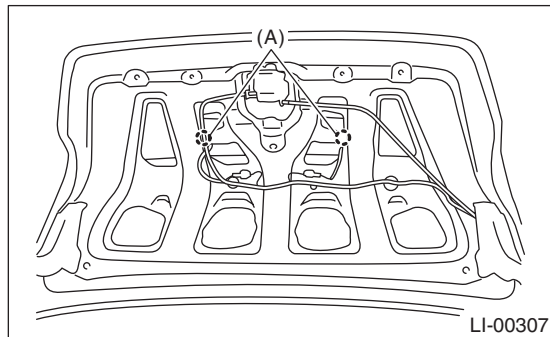

- 3) Remove the bulb.

2. WAGON MODEL

- 1) Remove the license plate light mounting screw (A) and then remove the lens (B).

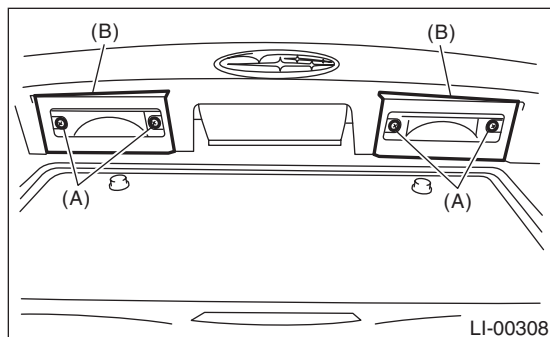

- 2) Remove the bulb.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

26.High-mounted Stop Light


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Push the high-mounted stop light towards the rear of the vehicle (1), raise the rear end (2) and remove the clips to remove the stop light

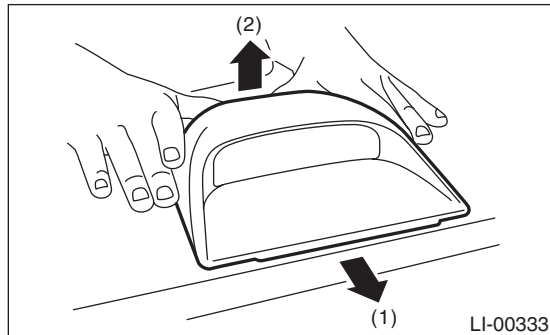


- 3) Remove the harness from the clamp.

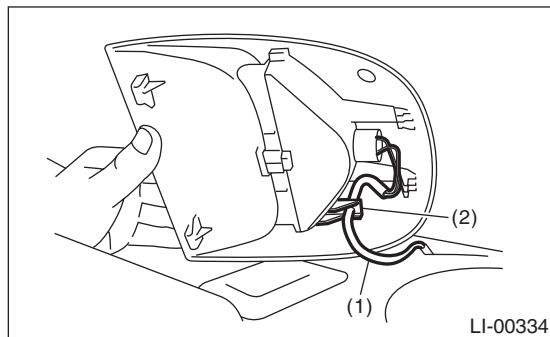


- (1) Harness
- (2) Clamp

- 4) Disengage two claws (A), pull out the high-mounted stop light from the cover and remove claw (B).

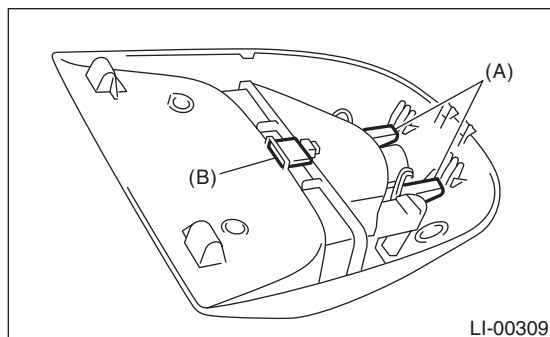


- 5) Disengage the three claws and remove lens (A).

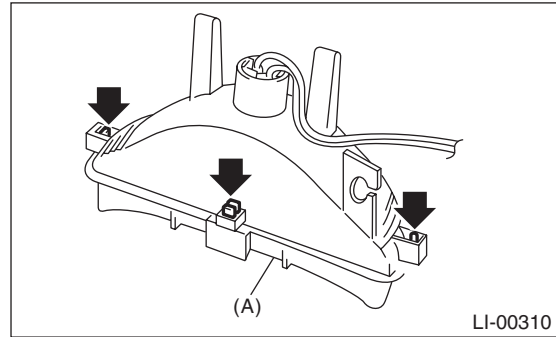

- 6) Remove the bulb.

2. WAGON MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof spoiler. <Ref. to EI-40, REMOVAL, Roof Spoiler.>
- 3) Remove the nuts (A), then detach the high-mounted stop light.

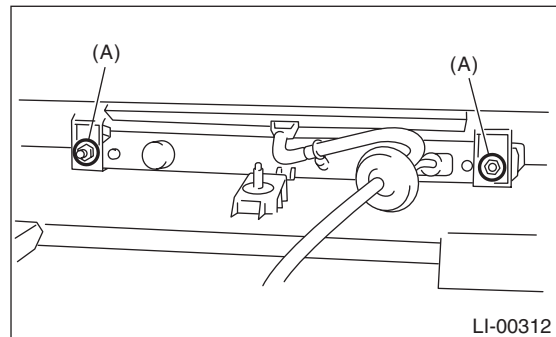

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SEDAN MODEL

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. WAGON MODEL

- 1) Install the high-mounted stop light to test if it illuminates normally.
- 2) If the high-mounted stop light does not illuminate, replace it with a new part.


NOTE:

Since LED (Light Emitting Diodes) is used for the high-mounted stop light of the wagon model, replace the high-mounted stop light as an assembly when the LED burns out.


27. Spot Map Light

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and spot map light mounting screws (B).

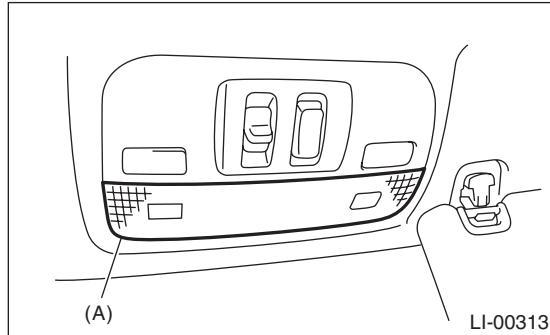

- Models with sunroof

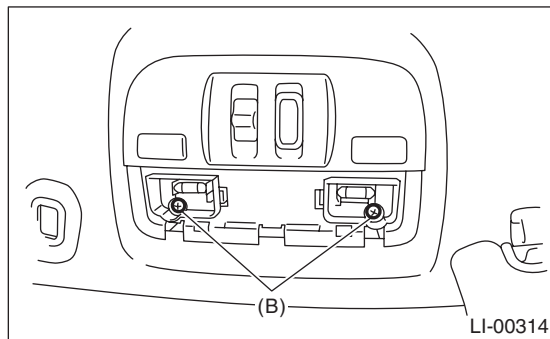

- Models without sunroof

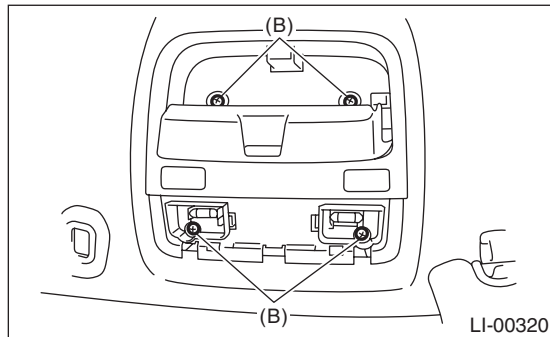

- 3) Disconnect the harness connectors and remove the spot map light.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SPOT MAP LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. SPOT MAP LIGHT SWITCH



Measure the resistance between spot map light switch terminals.

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	1 and 2	18±5.4 Ω

28.Room Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and mounting screws (B).

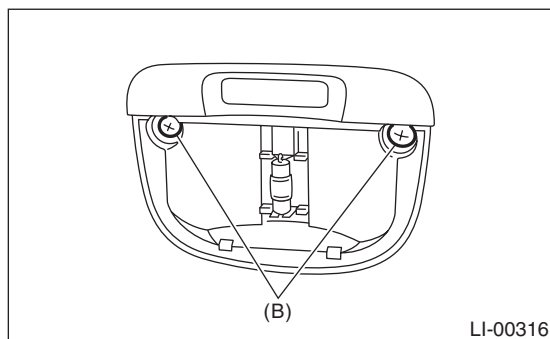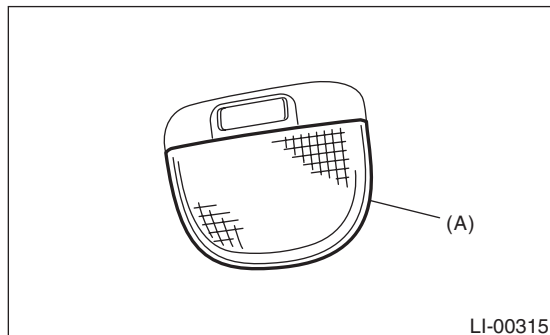

- 3) Disconnect the harness connector and remove the room light.

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

1. ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. ROOM LIGHT SWITCH

Measure the resistance between room light switch terminals.

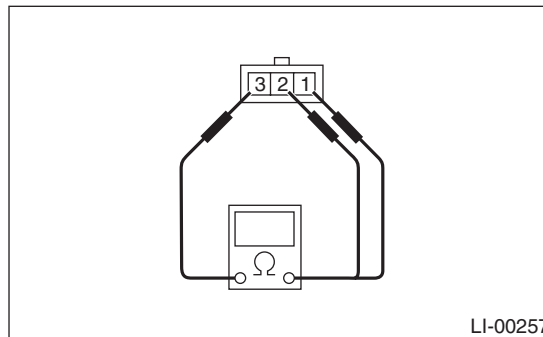


Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	1 and 3	1.5±0.5 Ω
DOOR	2 and 3	1.5±0.5 Ω

29.Luggage Room Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the luggage room light body (A).

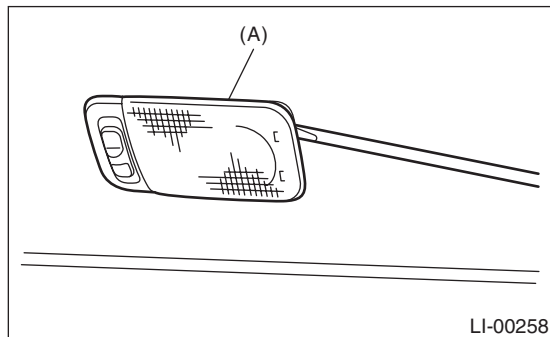

- 3) Disconnect the harness connector and remove the lens.

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

1. LUGGAGE ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. LUGGAGE ROOM LIGHT SWITCH

Measure the resistance between luggage room light switch terminals.

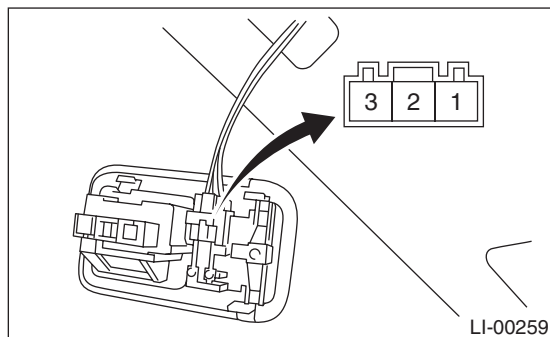


Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	1 and 2	1.5±0.5 Ω
DOOR	2 and 3	1.5±0.5 Ω


30.Trunk Room Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Turn the trunk room light counterclockwise 60° to remove it and disconnect the harness connector.

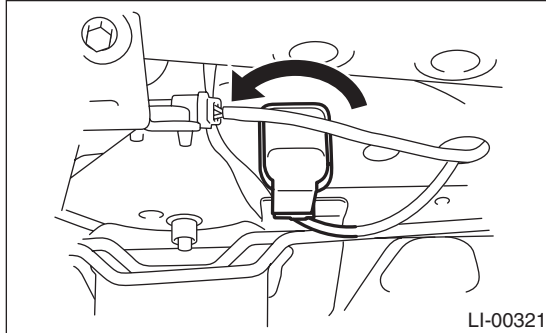

- 3) Remove bulb (A).

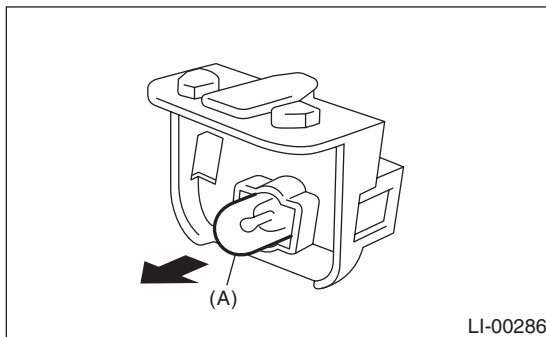

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

1. TRUNK ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. TRUNK LID SWITCH (TRUNK ROOM LIGHT SWITCH)

Measure the resistance between trunk lid switch terminals.

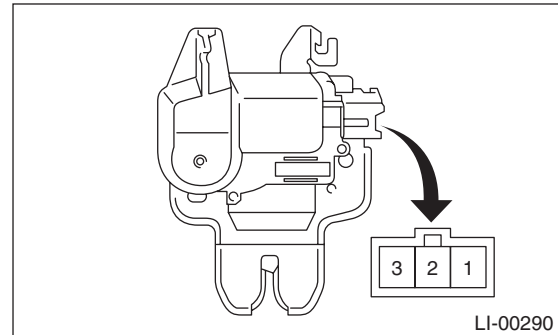


Trunk lid position	Terminal No.	Standard
Close	1 and 3	1 MΩ or more
Open		1.5±0.5 Ω

31. Glove Box Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Disconnect the harness connector.
- 4) Remove the glove box light.

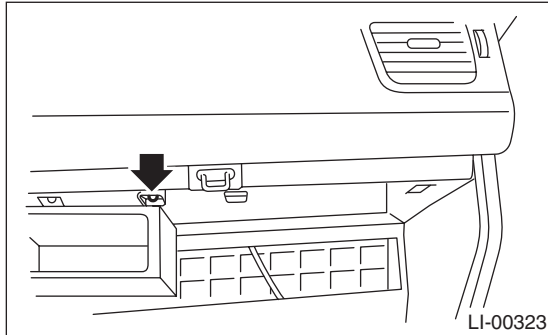

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.


32. Door Step Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove lens (A), and then remove the door step light bulb.

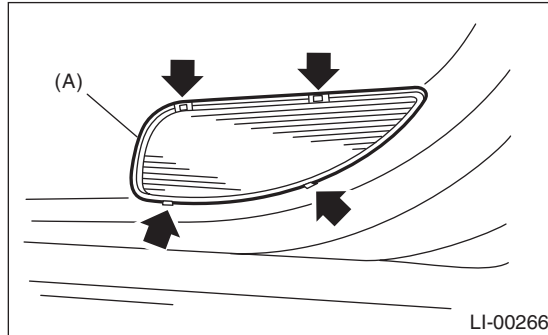

- 3) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 4) Disconnect the harness connector.
- 5) Remove the mounting screw from the rear side of trim and remove the door step light.

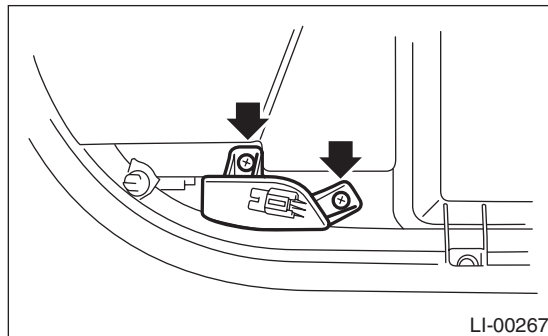

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.


33. Ignition Switch Illumination

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screws, and detach the upper column cover and lower column cover.

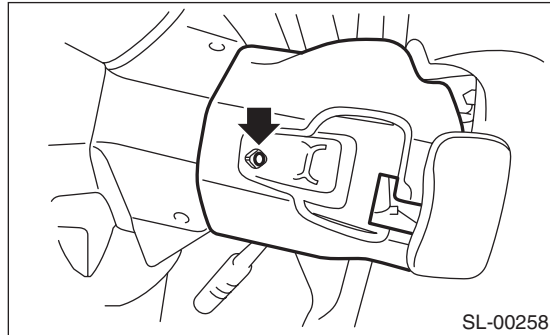

- 3) Disconnect the ignition switch illumination connector (A).
- 4) Turn the ignition switch illumination connector to the left and disconnect it.

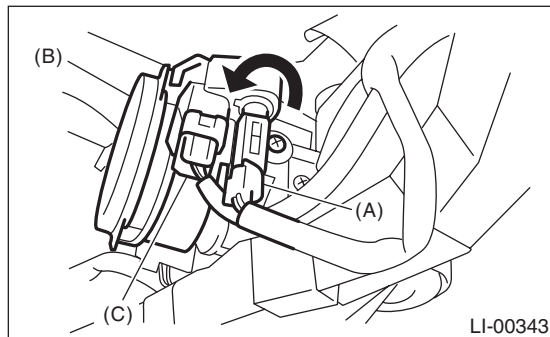

- (A) Ignition switch illumination connector
(B) Ignition switch illumination
(C) Immobilizer antenna connector

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Step	Check	Yes	No
1 CHECK THE IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal.	Go to step 2.
2 CHECK THE IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?	Check the function setting of body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the ignition switch illumination circuit. <Ref. to SL-22, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>

WIPER AND WASHER SYSTEMS



	Page
1. General Description	2
2. Wiper and Washer System	5
3. Combination Switch (Wiper)	6
4. Wiper Blade	10
5. Washer Tank and Motor	13
6. Front Wiper Arm	14
7. Front Wiper Motor and Link	15
8. Front Washer Nozzle	16
9. Rear Wiper Arm	17
10. Rear Wiper Motor	18
11. Rear Washer	19

Basic Diagnostic Procedure

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	CHECK WARNING LIGHT. Check whether the airbag warning light in the combination meter is lit.	Does the airbag warning light illuminate?	Go to step 2.	Perform the diagnosis according to phenomenon of the problem.
2	READ DTC. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to the data link connector. 3) Turn the ignition switch to ON, and the Subaru Select Monitor power switch to ON. 4) Read the DTC. <Ref. to OD(diag)-19, OPERATION, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of the Subaru Select Monitor cannot be executed normally, check the communication circuit. <Ref. to AB(diag)-31, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, INSPECTION, Subaru Select Monitor.> 5) Record all DTCs and freeze frame data.	Is DTC displayed?	Go to step 3.	Go to "Airbag Warning Light Failure". <Ref. to AB(diag)-38, Airbag Warning Light Failure.>
3	PERFORM DIAGNOSIS. 1) Determine the possible cause from "List of Diagnostic Trouble Code." <Ref. to OD(diag)-24, List of Diagnostic Trouble Code (DTC).> 2) Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". 3) Repair the trouble cause. 4) Perform Clear Memory Mode. <Ref. to OD(diag)-21, Clear Memory Mode.> 5) Perform Inspection Mode. <Ref. to OD(diag)-20, Inspection Mode.> 6) Read any other DTCs displayed.	Is DTC displayed?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.

Check List for Interview

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

2. Check List for Interview

A: CHECK

Customer's Name		Inspector's Name	
Date vehicle brought in	/ /	Registration No.	
Odometer reading	km miles	V.I.N.	
Date problem occurred	/ /	Registration year	/ /
Weather	☐ Fine ☐ Cloudy ☐ Rainy ☐ Snowy ☐ Others:		
Temperature	°C (°F)		
Road condition	☐ Level road ☐ Uphill ☐ Downhill ☐ Rough road ☐ Others:		
Vehicle operation	☐ Driving (☐ Constant speed ☐ Acceleration ☐ Deceleration) ☐ Steering wheel turn ☐ Others: ☐ Starting ☐ Idling		
Details of problem			
Airbag warning light operation	☐ Normal (After turning the ignition switch to ON, illuminates for 6 seconds then goes off.) ☐ Remains ON ☐ Remains OFF		
Passenger's airbag ON/OFF indicator does not operate.	☐ Normal (After turning the ignition switch to ON, illuminates for 6 seconds then goes off for 2 seconds; Lights ON (adult) or OFF (children/unoccupied).) ☐ Both remain ON ☐ Both remain OFF		
DTC output	☐ Normal code ☐ DTC: (Code:)		

General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

3. General Description

A: CAUTION

1) If the seat cushion cover is removed or replaced, make sure to perform passenger detection system adjustment after installing the seat to the vehicle. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

Failure to do so may cause improper operation of the passenger detection system.

2) The passenger detection system (passenger seat only) control unit and the passenger detection sensor are fixed to the seat cushion frame. Never remove the passenger detection control unit or the pressure sensor from the seat cushion frame.

3) Do not replace the seat cushion pad by itself. Always replace the seat cushion pad and frame assembly as a set. The seat cushion pad and cushion frame are adjusted as a set at the time of manufacture. If cushion pads and cushion frames are combined from those of other vehicles or other sets, the passenger detection system may not operate properly.

4) If the seat cushion cover is removed, make sure to replace the hang wire on the seat cushion side with a new wire.

5) Never connect the battery in reverse polarity.

Occupant detection system may be destroyed instantly.

6) Do not disconnect the battery terminals while the engine is running.

A large counter electromotive force will be generated in the generator, and this voltage may damage electronic parts such as occupant detection control module.

7) Before disconnecting the connectors of each sensor and control module, be sure to turn the ignition switch to OFF and wait for 20 seconds or more.

Occupant detection control module may be damaged.

8) All passenger detection system parts are precision components. Do not drop them.

CAUTION:

- The airbag system wiring harnesses and connectors are all yellow in color. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the occupant detection system.
- Refer to “Airbag System” when repairing the occupant detection system. <Ref. to AB(diag)-4, CAUTION, General Description.>

B: INSPECTION

Measure the battery voltage and check electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

Fluid level: Between the upper level and lower level

C: PREPARATION TOOL


CAUTION:

To measure the voltage and resistance of airbag system and occupant detection system components, be sure to use the specified test harness.

General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)


1. SPECIAL TOOL

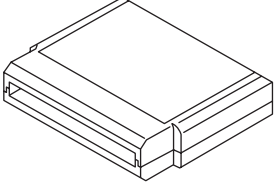
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18482AA010	18482AA010	CARTRIDGE	Troubleshooting for the electrical system.
 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for the electrical system.

General Description


OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

• TEST HARNESS D

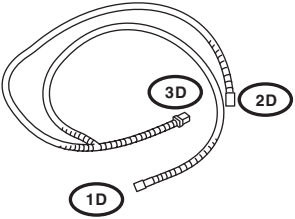ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG060	98299AG060	TEST HARNESS D	Used when measuring the voltage and resistance of the front seat belt buckle switch.

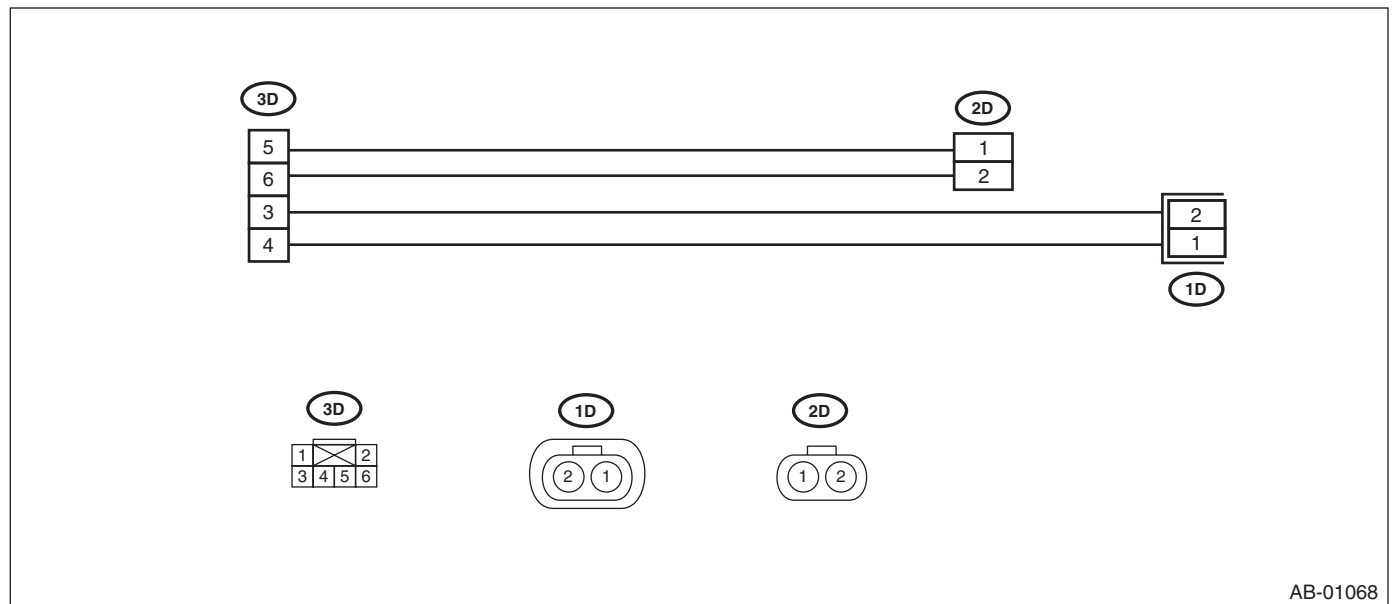


• TEST HARNESS U

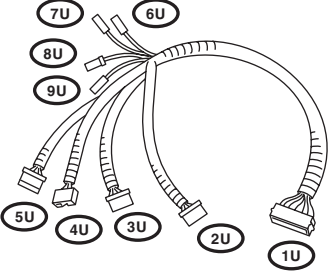ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG000	98299AG000	TEST HARNESS U	Used when measuring voltage and resistance of airbag control module.

General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

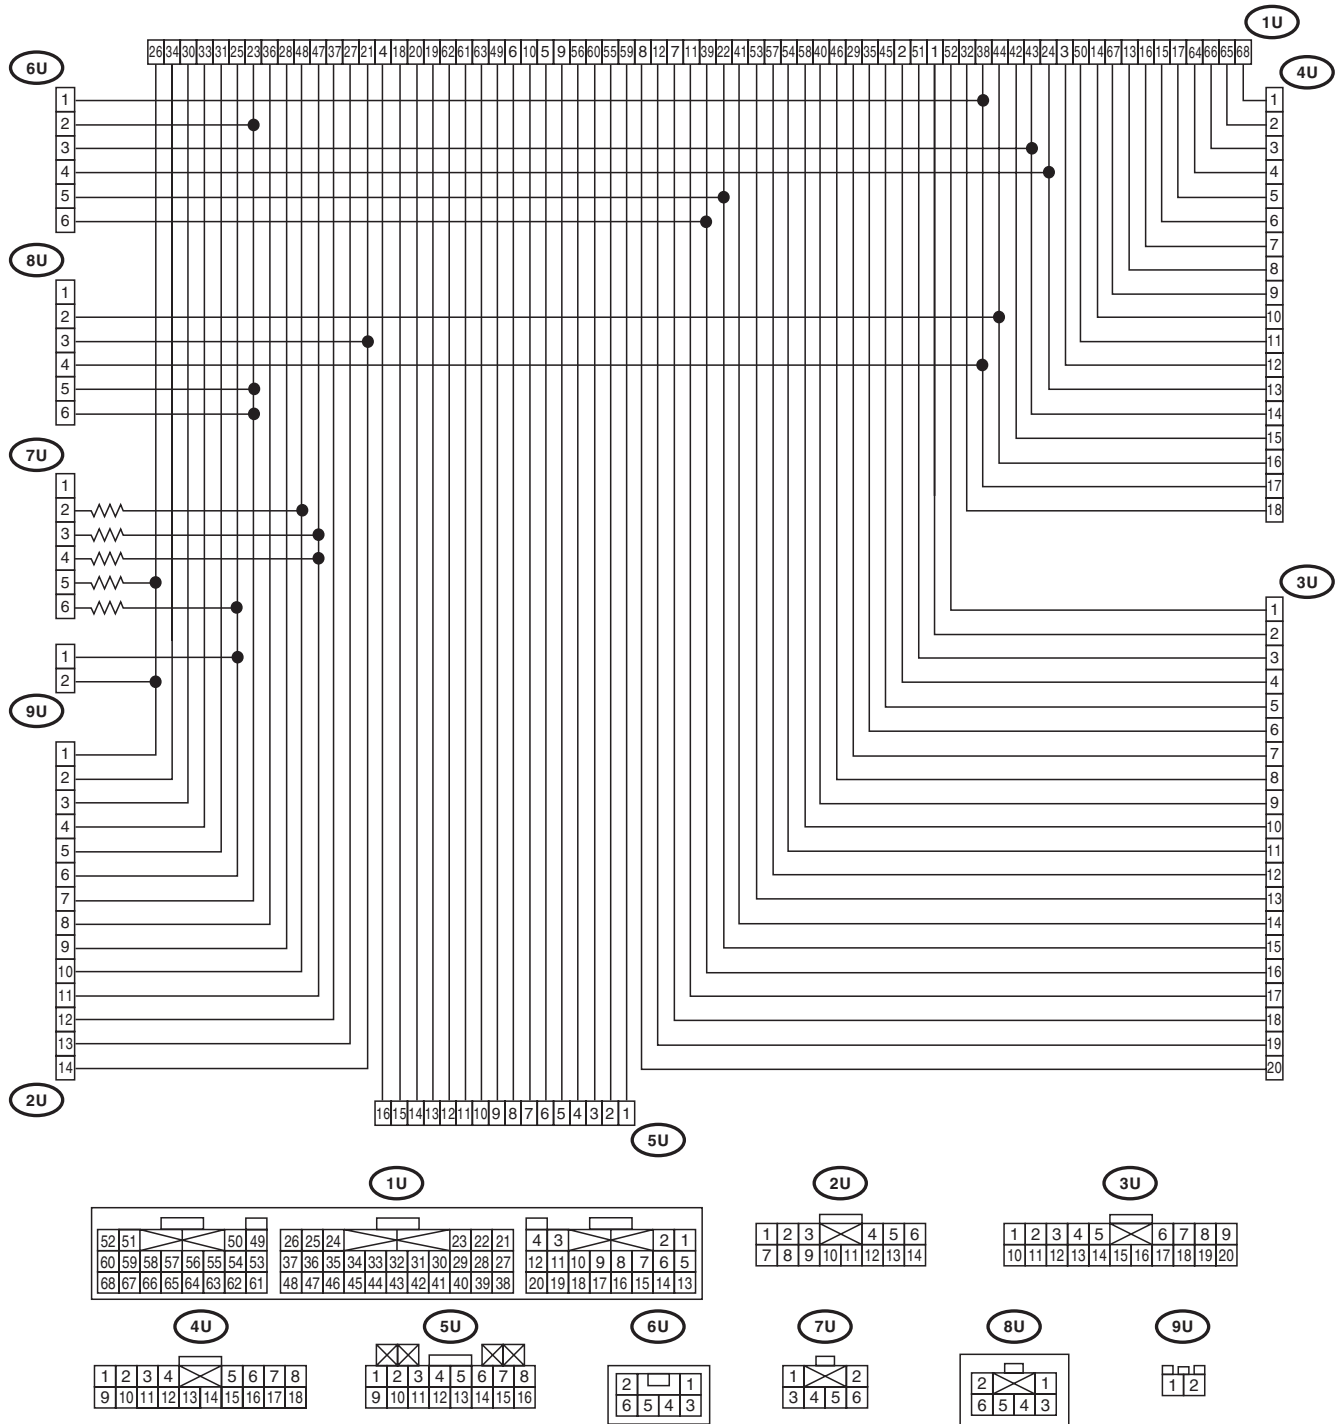



AB-00930

General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

• TEST HARNESS Y

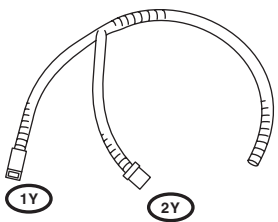
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG040	28299AG040	TEST HARNESS Y	Used for diagnosing the seat belt buckle switch.

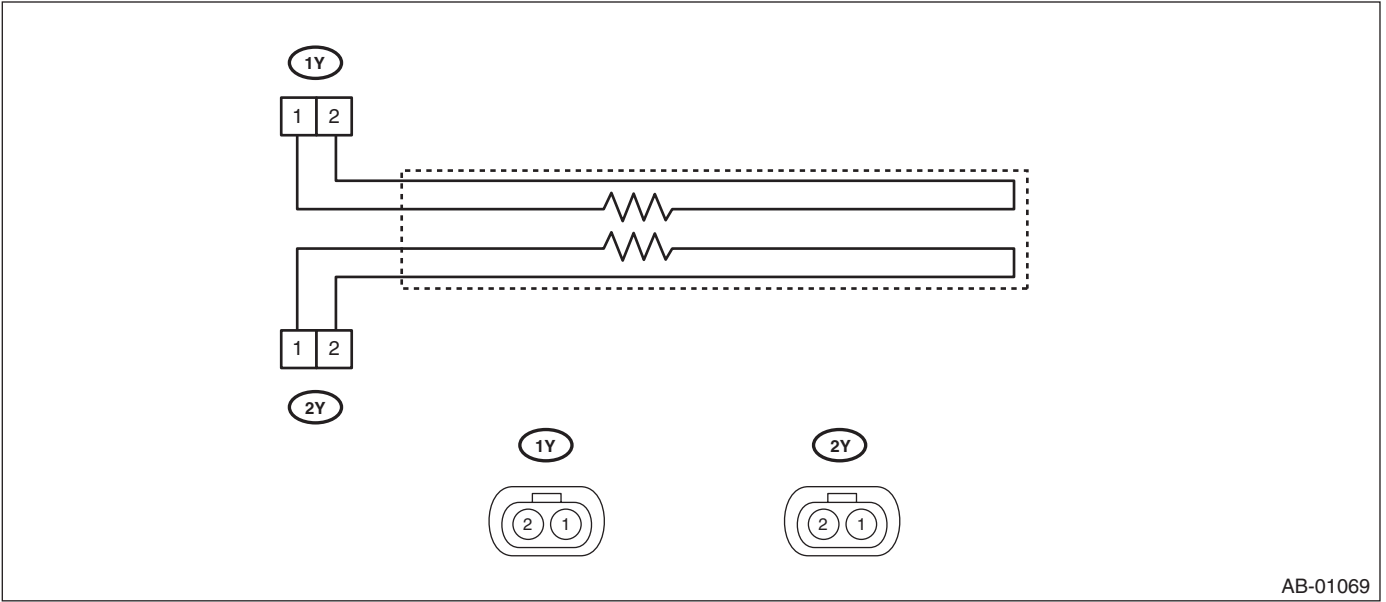


General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

• TEST HARNESS AB

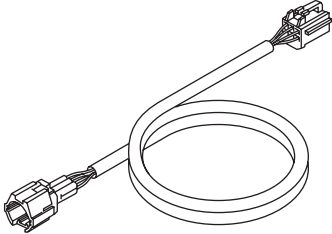
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA000	98299XA000	TEST HARNESS AB	Used when measuring voltage and resistance of occupant detection system.

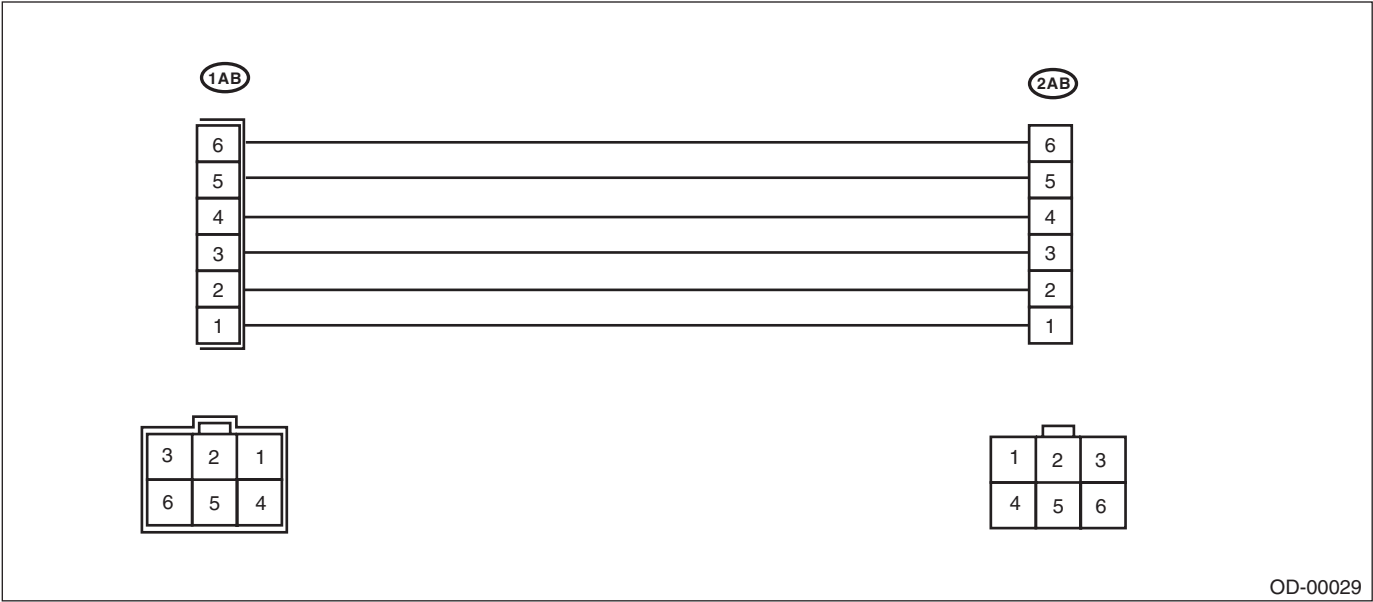


General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

- TEST HARNESS AE

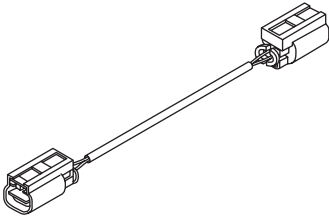
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA030	98299XA030	TEST HARNESS AE	TEST HARNESS Y ADAPTER HARNESS Used for diagnosing the seat belt buckle switch.

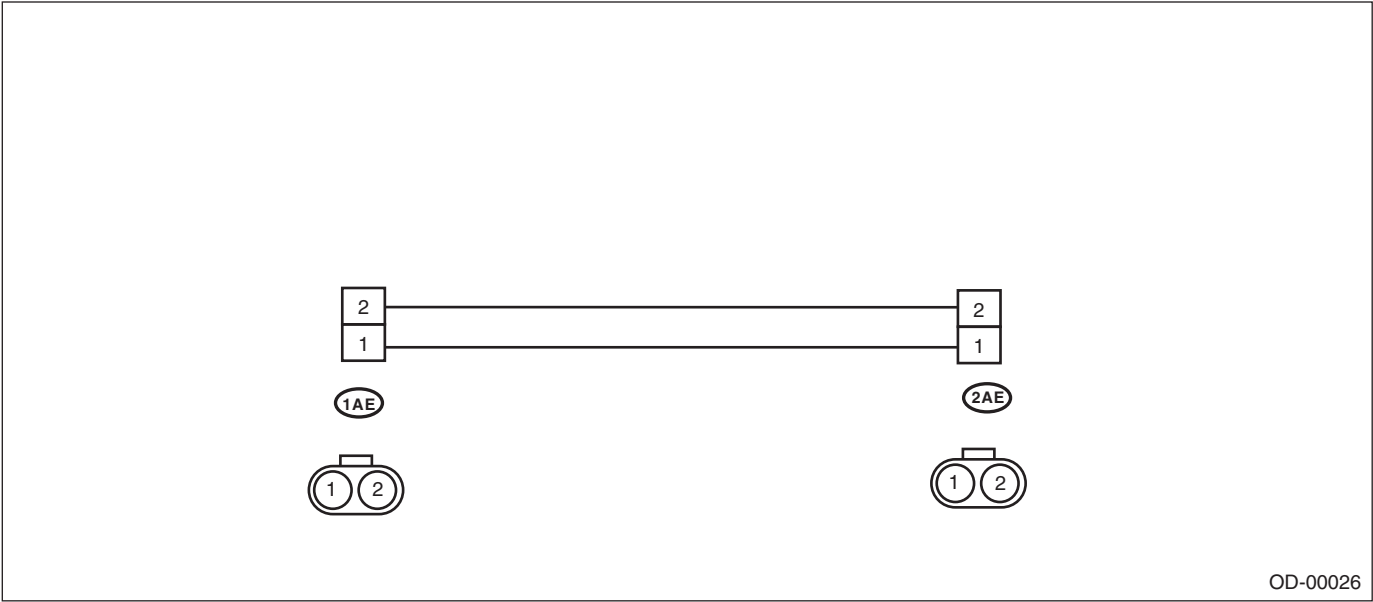


General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

• TEST HARNESS AC

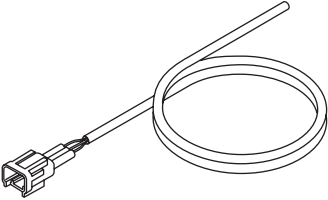
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA010	98299XA010	TEST HARNESS AC	Used for diagnosing the seat belt tension sensor.

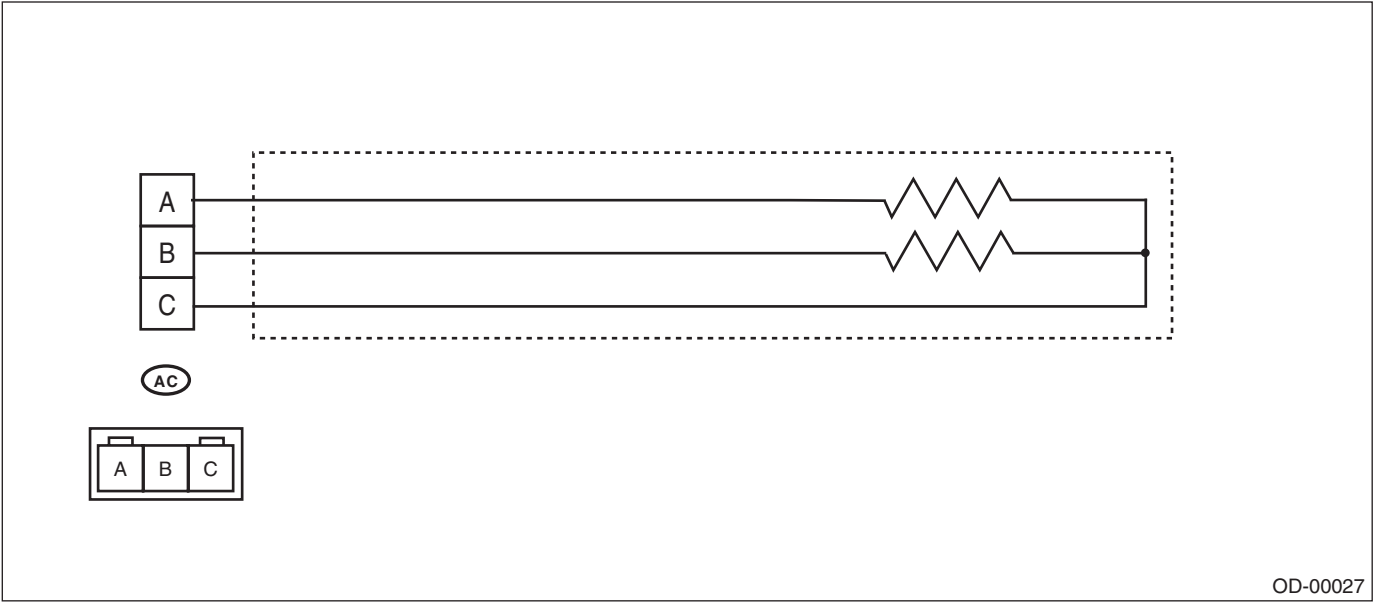


General Description

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

• TEST HARNESS AD

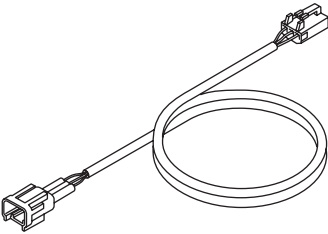ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299XA020	98299XA020	TEST HARNESS AD	Used when measuring voltage and resistance of the seat belt tension sensor.

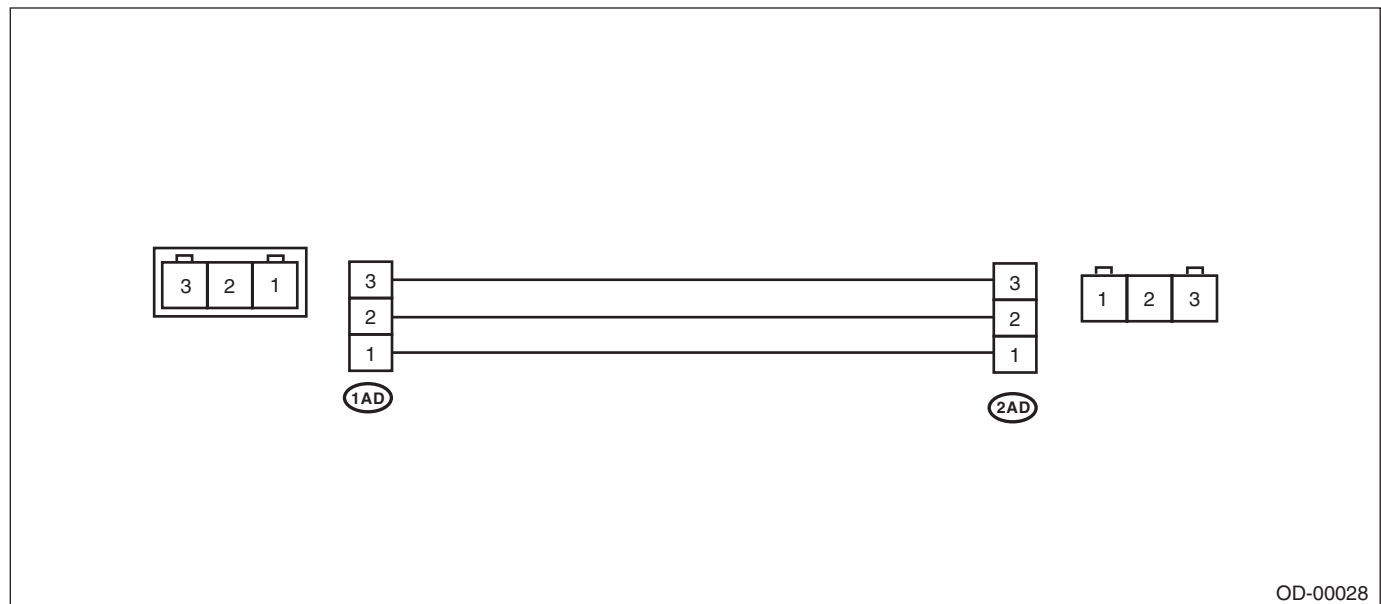

2. GENERAL TOOL


TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.

Electrical Component Location





OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

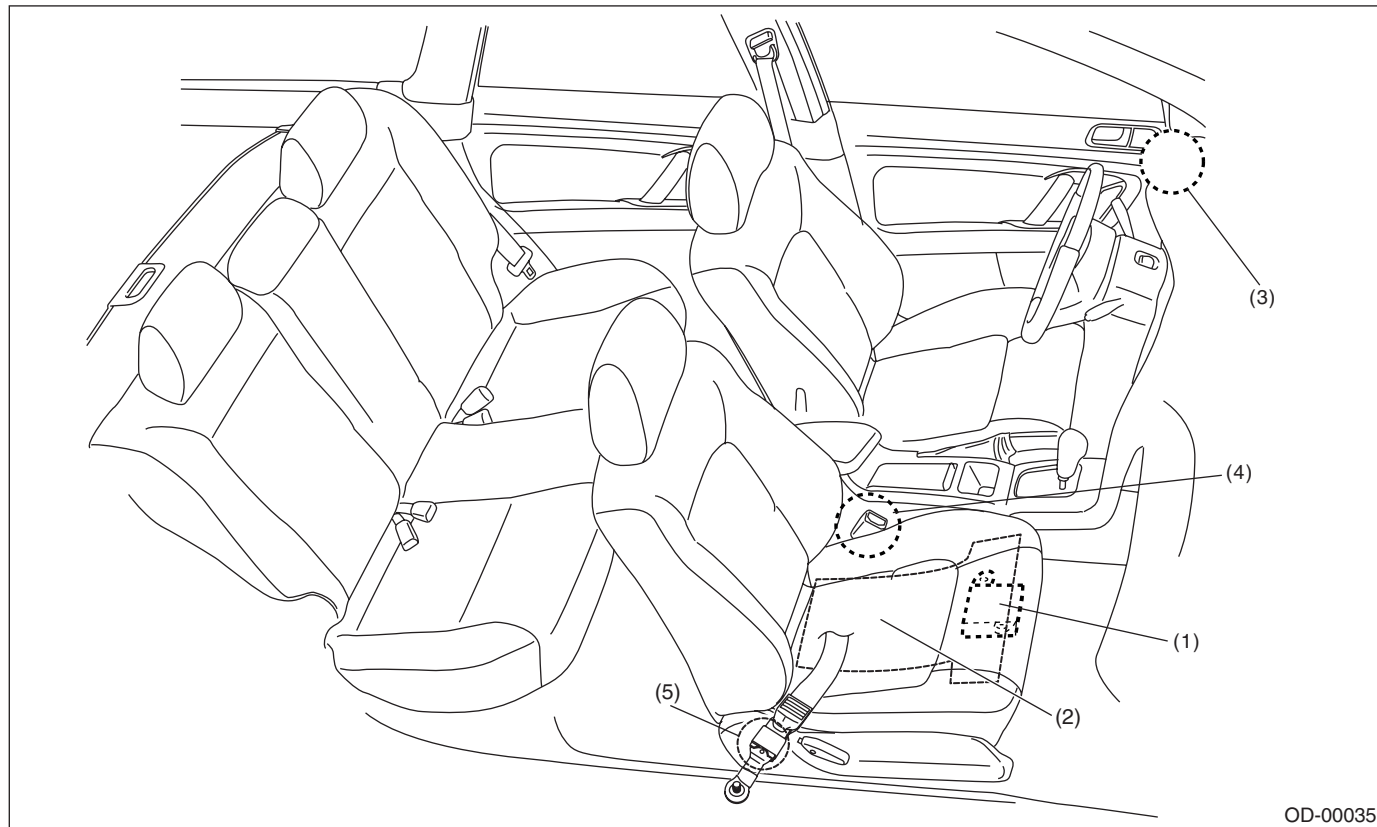

- | | | |
|---------------------------------------|--|------------------------------|
| (1) Occupant detection control module | (3) Airbag ON/OFF indicator light (Map lamp) | (5) Seat belt tension sensor |
| (2) Occupant detection sensor | (4) Buckle switch (Passenger's seat) | |

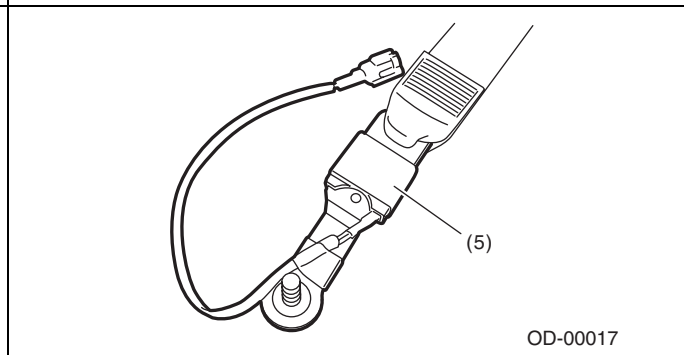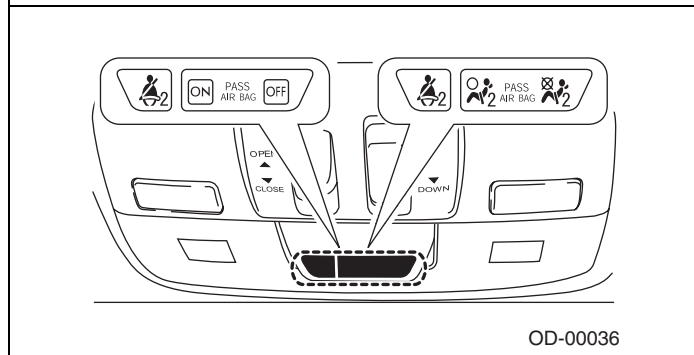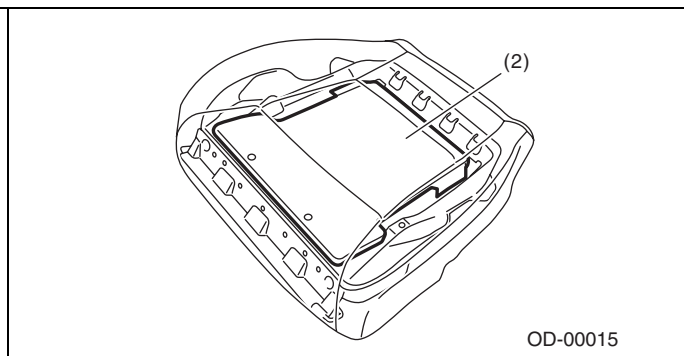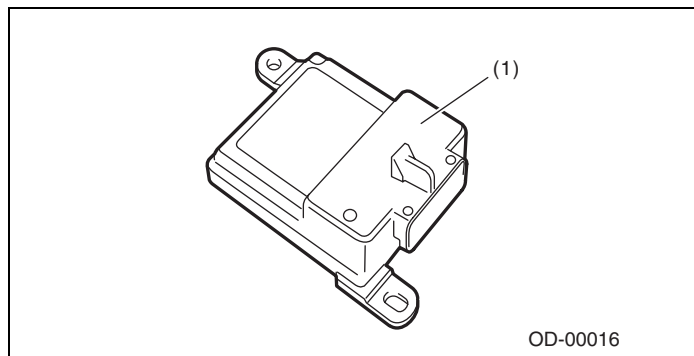


5. Airbag Connector

A: PROCEDURE

1. BUCKLE SWITCH

1) How to disconnect:

- (1) Move the slide lock (A) in the direction of arrow.
- (2) While holding the slide lock (A) in the open position, disconnect the connector.

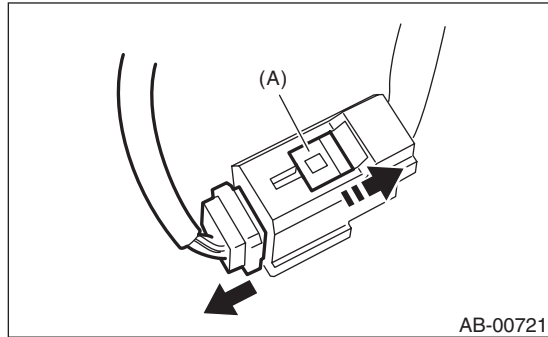


CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect:

Holding the connector (A), and push it in carefully until a clicking sound is heard.

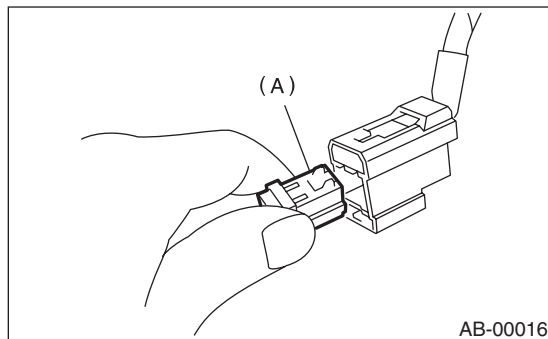

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it lightly to make sure that it is locked.

6. Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

CAUTION:

Never remove the occupant detection control module, occupant detection sensor or seat frame because they are integrated into one unit.

Terminal name		Terminal No.	Input/Output value	Remarks
IG – power supply		9	9 — 16 V	When ignition switch ON
Airbag control module communication	(COM)	10	Open collector terminal	Communication line
Airbag control module communication	(GND)	5	0 V	Ground
Belt tension sensor	(Vcc)	4	0 — 5 V	Belt tension sensor power supply
	(Vout)	16	0.5 — 4.5 V	Sensor output voltage
	(GND)	14	0 V	Sensor ground
Occupant detection sensor	(Vcc)	6	0 — 5 V	Pressure sensor power supply
	(Vout)	7	0.5 — 4.5 V	Sensor output voltage
	(GND)	15	0 V	Sensor ground
Buckle switch		1	0 — IG voltage	Ignition voltage when switch ON
Buckle switch	(GND)	2	0 V	Switch ground

B: WIRING DIAGRAM

Refer to the electrical wiring diagram. <Ref. to WI-113, WIRING DIAGRAM, Seat Belt Warning System.>

7. Subaru Select Monitor

A: OPERATION

1. READ DIAGNOSTIC TROUBLE CODE (DTC)

When malfunction of the airbag system and the occupant detection system occur, the DTC stored in airbag control module will be read out.

Refer to the DTC readout of the airbag system (diagnosis). <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>

NOTE:

- For details concerning the operation procedures, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.
- For details concerning DTCs, refer to the “List of Diagnostic Trouble Code (Airbag system, Occupant detection system).” <Ref. to AB(diag)-43, List of Diagnostic Trouble Code (DTC).> <Ref. to OD(diag)-24, List of Diagnostic Trouble Code (DTC).>

2. DISPLAY OF STATUS INFORMATION

Check the operating condition of each sensor in the event of a malfunction in the seat belt buckle switch and seat position sensor, or when the seat belt buckle switch and seat position sensor have been replaced.

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Airbag System} and press the [YES] key.
- 3) On the «Airbag System» display screen, select the {Status Data} and press the [YES] key.

The following table is for support data.

Contents	Display Contents
Seat position sensor LH	Front position ^{*1} /Rear position ^{*2} /Other ^{*3} /Initial Setting ^{*3} /— ^{*5}
Seat position sensor RH	— ^{*5}
Seat belt buckle switch LH	Buckled ^{*6} /Unbuckled ^{*7} /Other ^{*8} /Initial Setting ^{*4} /— ^{*9}
Seat belt buckle switch RH	Buckled ^{*6} /Unbuckled ^{*7} /Other ^{*8} /Initial Setting ^{*4} /— ^{*9}
Passenger's airbag control status	ON ^{*10} /OFF ^{*11} /Initial Setting ^{*4}

^{*1}: The seat position is forward.

^{*2}: The seat position is rearward.

^{*3}: Displayed when data other than before and behind the seat, such as the breakdown etc, is input.

^{*4}: Displayed in the initial condition.

^{*5}: Seat position sensor not supported

^{*6}: Seat belt fastened

^{*7}: Seat belt not fastened

^{*8}: Displayed when data other than belt fastened / not fastened is entered. (Such as fault data, etc.)

^{*9}: Seat belt buckle switch not supported

^{*10}: Passenger's seat airbag operation status

^{*11}: Passenger's seat airbag non-operation status

NOTE:

For details concerning the operation procedures, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

3. CLEAR MEMORY MODE

Clear the DTC stored in the airbag control module after repairing the airbag system and occupant detection system. (After the breakdown is recovered, the breakdown code for completed recoveries are read out when the next breakdown occurs if the memory clear work is not performed.)

- 1) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Airbag System} and press the [YES] key.
- 3) On the {Airbag System} menu screen, select the {Clear Memory} and press the [YES] key.
- 4) When the “Clear Memory?” is shown on the screen, press the [YES] key.
- 5) When Done is displayed, turn the Subaru Select Monitor and the ignition switch OFF.

NOTE:

For details concerning the operation procedures, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

4. SYSTEM CALIBRATION (REZEROING)

NOTE:

When replacing the occupant detection system, or removing and disassembling the passenger's seat, always perform the system calibration after installing a seat in the vehicle.

CAUTION:


When the trouble occurs in the system during calibration process, “Occupant detection calibration failure” is detected in the DTC 2A of the airbag system and the airbag warning light lights. In this case, after turning the ignition switch to OFF once, redo the system calibration (Rezeroing), or after clearing the cause of the failure, perform the system calibration again.

- 1) Park empty vehicle on a level surface.
- 2) On the «Main Menu» display screen, select {Each System Check} and press the [YES] key.
- 3) On the «System Selection Menu» display screen, select the {Occupant Detection System} and press the [YES] key.
- 4) On the Occupant Detection System display screen, select the {Zero Point Adjustment} and press the [YES] key.

- 5) “See service manual. And check vehicle condition for successfully completing the rezeroing.” is displayed. Check the following to adjust the condition of the vehicle.

- Adjust the seat backrest to be fully upright. (For models with power seats, press the power seat button until the backrest comes to a stop.)
- Adjust the seat slide position all the way back. (For models with power seats, press the power seat button until the seat slide does not move any further.)
- Do not place anything on the top of the seat cushion.
- Sit on the seat cushion to smooth the seat surface.
- Check that the passenger's seat belt is not inserted into the buckle, not tense or not stuck.
- Check that ambient temperature is in a range from 0 to 40°C.

- 6) When the «Re-zeroing Adjust the passenger seat to the condition shown in service manual» is displayed, slide the passenger seat all the way to the back, check that the backrest is adjusted to all the way up, and press the [YES] key.

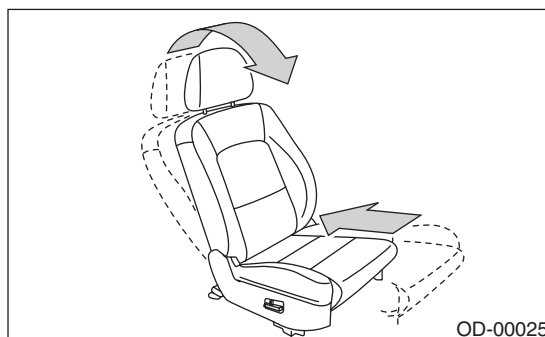

OD-00025

- 7) When the «Re-zeroing Unbuckle the Passenger seatbelt Continue: YES, Quit: NO» is displayed, make sure the passenger's seatbelt is disconnected from the buckle and press the [YES] key.

- 8) When the «Re-zeroing Empty the passenger seat Continue: YES, Quit: NO» is displayed, make sure that the passenger's seat is empty, airbag OFF indicator illuminates and airbag ON indicator does not illuminate, and press the [YES] key.

NOTE:

- After pressing the [YES] key, «Now processing Wait for a while. Do not touch or give impact to vehicle and seat» is displayed. Do not touch or rock the vehicle while the message is displayed.
- During the system calibration process, if the «Re-zeroing is unsuccessful See service manual Press YES to END» is displayed, go to step 10).
- 9) When the re-zeroing is ended normally, the «Re-zeroing is successfully completed Press YES to END» is displayed. Press the [YES] key and turn the ignition switch to OFF to finish the diagnosis.

10) During the system calibration process, if «Re-zeroing is unsuccessful See service manual Press YES to END» is displayed, turn the ignition switch to OFF once and turn it to ON again, then read the DTC of the airbag system. <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>

When DTC is input, fix the fault and then perform the system calibration. When DTC is not input, check the seat and vehicle status and then perform the system calibration again. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

NOTE:

When the re-zeroing is unsuccessful, there could be occupant detection system failure or improper seat and vehicle status. When the airbag warning light illuminates, read the DTC of the airbag system, and perform the diagnosis while referring to “List of Diagnostic Trouble Code.” <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> <Ref. to AB(diag)-43, LIST, List of Diagnostic Trouble Code (DTC).>

B: INSPECTION

1. COMMUNICATION FOR INITIALIZING IMPOSSIBLE

DETECTING CONDITION:

Defective harness connector

TROUBLE SUMPTOM:

Communication is impossible between the airbag control module and the Subaru Select Monitor.

Refer to “Initial Communication Impossible” in the DTC of the airbag system (diagnosis). <Ref. to AB(diag)-31, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, INSPECTION, Subaru Select Monitor.>

2. WITHOUT DTC

DETECTING CONDITION:

- Defective combination meter
- Open circuit of harness

TROUBLE SUMPTOM:

- Airbag warning light remains on.
- “NO TROUBLE CODE” will be displayed on the Subaru Select Monitor.

NOTE:

- For detailed operation procedures, refer to “Airbag Warning Light Failure”. <Ref. to AB(diag)-38, Airbag Warning Light Failure.>
- When the airbag warning light is OFF and “NO TROUBLE CODE” is displayed on Subaru Select Monitor, the system is operating properly.

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details on reading DTCs, refer to “Airbag System (Diagnosis) Subaru Select Monitor”. <Ref. to AB(diag)-29, Subaru Select Monitor.>

9. Inspection Mode

A: PROCEDURE

Recreate the condition by referring to the fault conditions described in the check list.

10. Clear Memory Mode

A: OPERATION

Clear the memory in the following steps after the malfunction is repaired.

For details to clear the DTC, refer to “Airbag System (Diagnosis) Subaru Select Monitor”. <Ref. to AB(diag)-29, Subaru Select Monitor.>


Airbag Warning Light Illumination Pattern

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

11. Airbag Warning Light Illumination Pattern

A: INSPECTION

Turn the ignition switch to ON, and confirm that the airbag warning light remains on for approx. 6 seconds then turns off. (With ignition left ON)

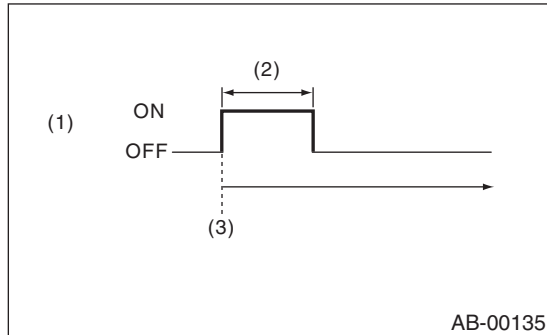


- (1) Airbag warning light
- (2) Approx. 6 sec.
- (3) Ignition switch ON

Passenger's Airbag ON/OFF Indicator Light Illumination Pattern

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

12.Passenger's Airbag ON/OFF Indicator Light Illumination Pattern

A: INSPECTION

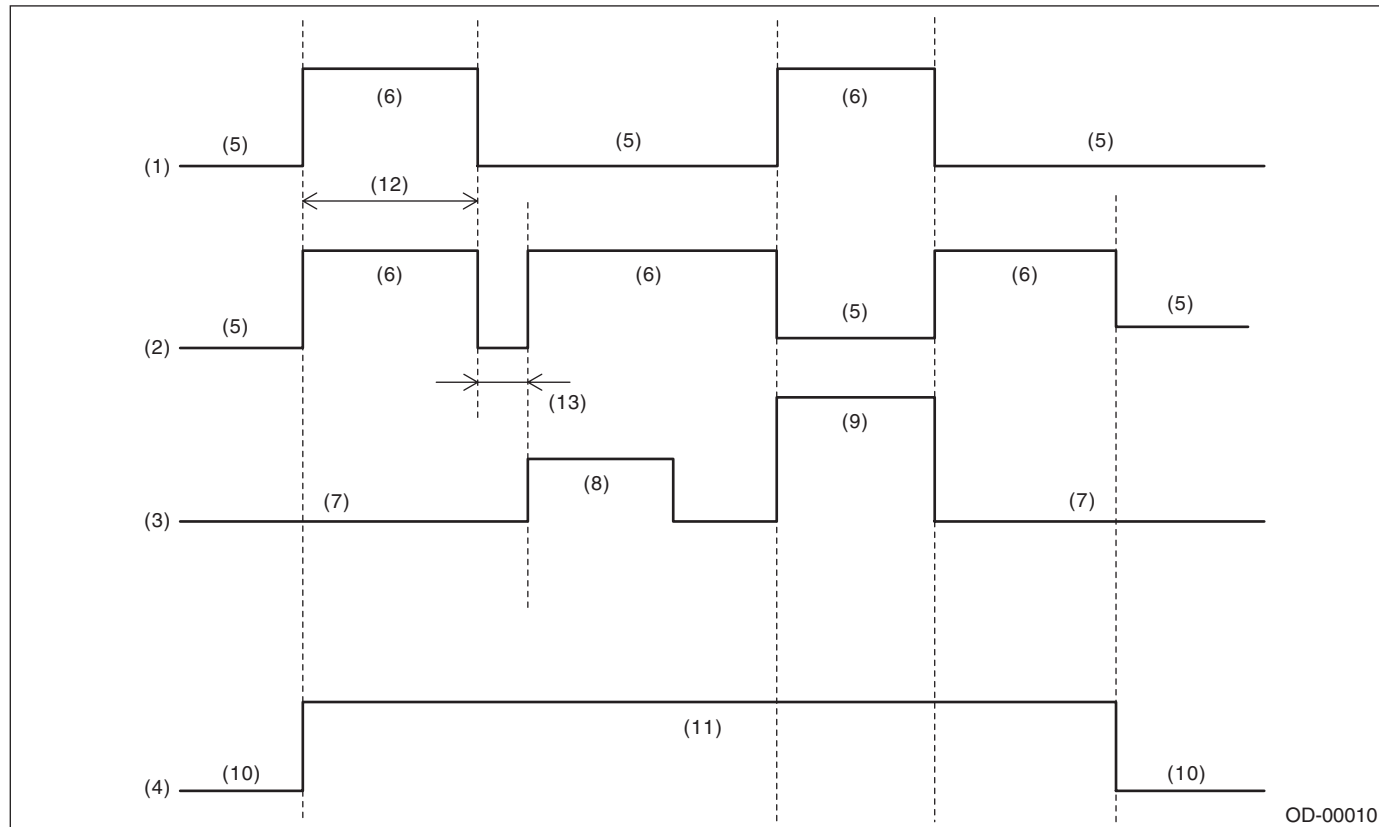

OD-00010

- | | | |
|--|---------------------|---------------------|
| (1) Passenger's airbag ON indicator light | (4) Ignition switch | (9) Adult |
| (2) Passenger's airbag OFF indicator light | (5) Light OFF | (10) OFF |
| (3) Occupant seating | (6) Light ON | (11) ON |
| | (7) Empty | (12) Approx. 6 sec. |
| | (8) Child | (13) Approx. 2 sec. |

List of Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

13. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Display	Diagnosis content	Reference
2A	ODS Calibration Error	System calibration (Rezeroing) was not completed normally.	<Ref. to OD(diag)-25, DTC 2A ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2B	ODS System Wrong Parts	• Wrong airbag control module was installed. • Wrong occupant detection system was installed. • Occupant detection system is faulty.	<Ref. to OD(diag)-25, DTC 2B ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2C	Belt Tension Sensor Failure	• Passenger's seat belt tension sensor is faulty. • Airbag main harness circuit is open or shorted. • Occupant detection system is faulty. • Occupant detection harness is faulty.	<Ref. to OD(diag)-26, DTC 2C BELT TENSION SENSOR FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
27	ODS Communication Error	• Occupant detection control module and airbag control module communication is faulty. • Airbag rear harness circuit is open, shorted or shorted to ground, or shorted to power supply. • Occupant detection harness is faulty. • Occupant detection system is faulty. • Airbag control module is faulty.	<Ref. to OD(diag)-28, DTC 27 ODS COMMUNICATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
29	ODS Failure	• Occupant detection sensor is faulty. • Occupant detection control module is faulty. • Occupant detection harness is faulty. • Fuse No. 25 (in joint box) is blown.	<Ref. to OD(diag)-28, DTC 29 ODS FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
37	Buckle Switch RH Failure	• Passenger's buckle switch circuit is open, shorted or shorted to ground. • Occupant detection system is faulty. • Occupant detection harness is faulty.	<Ref. to OD(diag)-29, DTC 37 BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

14. Diagnostic Procedure with Diagnostic Trouble Code (DTC)

A: DTC 2A ODS CALIBRATION ERROR

DTC DETECTING CONDITION:

System calibration (Rezeroing) was not completed properly.

Step	Check	Yes	No
1 PERFORM RE-ZEROING. Perform system calibration using the Subaru Select Monitor. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>	Did the system calibration complete properly?	Finish the diagnosis.	Follow the system calibration procedures. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

B: DTC 2B ODS SYSTEM WRONG PARTS

DTC DETECTING CONDITION:

- Wrong airbag control module is installed.
- Wrong occupant detection system is installed.

Step	Check	Yes	No
1 CHECK OCCUPANT DETECTION SYSTEM. 1) Turn ignition switch OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Replace the passenger's seat frame assembly. <Ref. to SE-9, REMOVAL, Front Seat.> <Ref. to SE-15, PASSENGER'S SEAT, DISASSEMBLY, Front Seat.> 3) Connect the ground cable to battery. 4) Connect Subaru Select Monitor to the vehicle and perform the system calibration. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>	Did the system calibration complete properly?	Finish the diagnosis.	Go to step 2.
2 CHECK AIRBAG CONTROL SYSTEM. 1) Turn ignition switch OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Replace the airbag control module. <Ref. to AB-23, REMOVAL, Airbag Control Module.> 3) Connect the ground cable to battery. 4) Connect Subaru Select Monitor to the vehicle and perform the system calibration. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>	Did the system calibration complete properly?	Finish the diagnosis.	Check between the occupant detection control module and airbag control module.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)


OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

C: DTC 2C BELT TENSION SENSOR FAILURE

DTC DETECTING CONDITION:

- Passenger's seat belt tension sensor is faulty.
- Airbag main harness circuit is open or shorted.
- Occupant detection control module is faulty.

WIRING DIAGRAM:

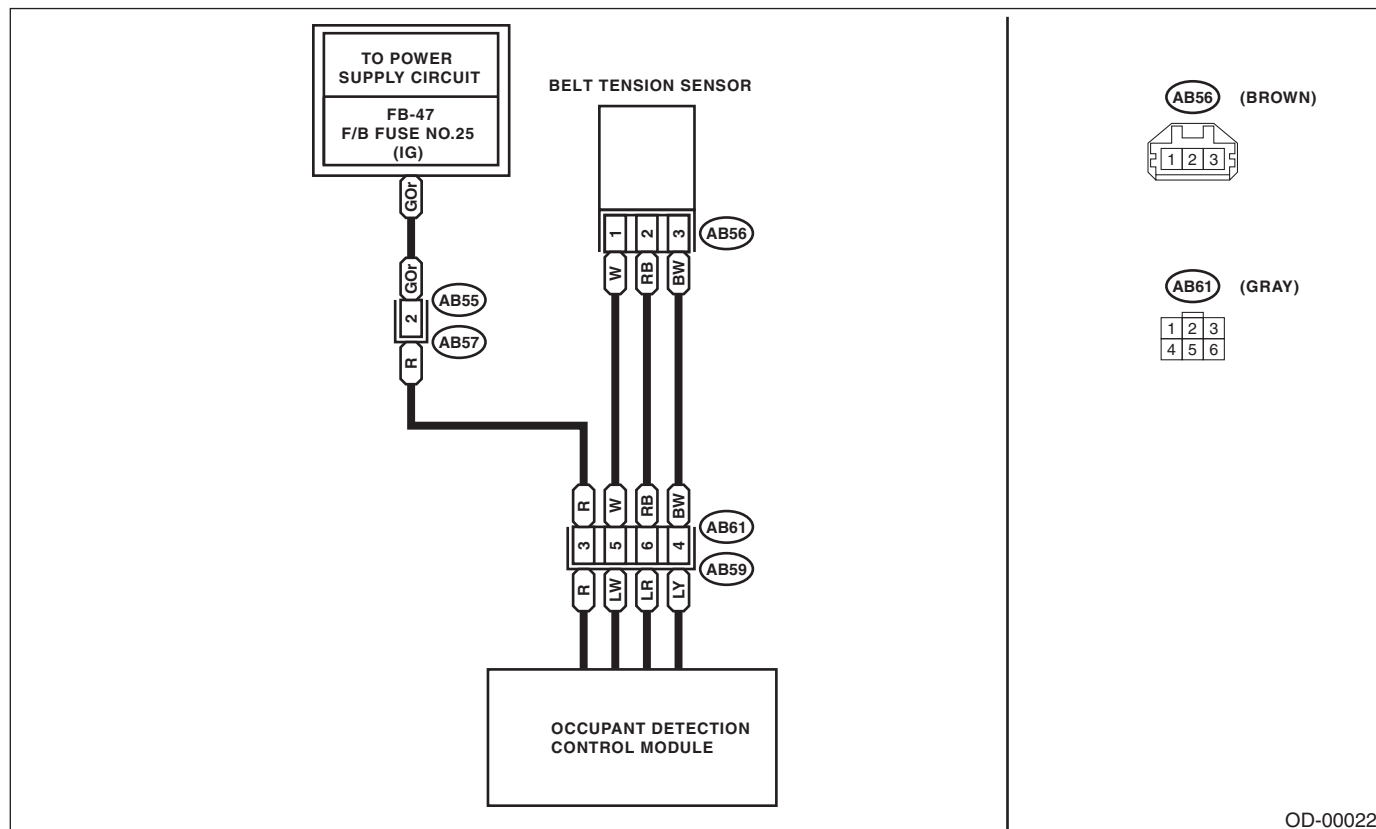

OD-00022

Step	Check	Yes	No
1 CHECK POOR CONTACT OF CONNECTORS. Check for poor contact of the connectors between the occupant detection control module and belt tension sensor.	Is there poor contact?	Reconnect the connector. If the fault is not fixed, replace the airbag harness.	Go to step 2.
2 CHECK THE BELT TENSION SENSOR. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the belt tension sensor connector (AB56) from the airbag harness. 3) Connect the test harness AC to the connector (AB56). 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for approximately 6 seconds and go off?	Replace the seat belt outer. <Ref. to SB-10, OUTER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>	Go to step 3.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

Step	Check	Yes	No
3 CHECK AIRBAG HARNESS. 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds. 2) Disconnect the test harness AC from the belt tension sensor connector (AB56). 3) Connect the test harness AD (1AD) to the connector (AB56). 4) Disconnect the airbag harness connector (AB61), and connect connector (1AB) of test harness AB. 5) Measure the resistance between test harness terminals. Connector & terminal (2AB) No. 5 — (2AD) No. 1: (2AB) No. 4 — (2AD) No. 3: (2AB) No. 6 — (2AD) No. 2:	Is the resistance less than 10 Ω ?	Go to step 4.	Replace the airbag harness along with chassis harness.
4 CHECK AIRBAG HARNESS. Measure the resistance between test harness terminals, and between test harness terminal and chassis ground. Connector & terminal (2AB) No. 4 — (2AD) No. 1: (2AB) No. 4 — (2AD) No. 2: (2AB) No. 4 — chassis ground: (2AB) No. 5 — (2AD) No. 2: (2AB) No. 5 — chassis ground:	Is the resistance more than 1 M Ω ?	Go to step 5.	Replace the airbag harness along with chassis harness.
5 CHECK AIRBAG HARNESS. 1) Connect the battery ground terminal and turn the ignition switch to ON. 2) Measure the voltage between test harness and chassis ground. Connector & terminal (2AD) No. 1 — chassis ground: (2AD) No. 3 — chassis ground:	Is the voltage less than 1 V?	Replace the airbag harness along with chassis harness.	Check the seat harness, and if any fault is found, replace the seat harness. If no fault is found in the seat harness, replace the seat cushion frame assembly. <Ref. to SE-15, DISASSEMBLY, Front Seat.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

D: DTC 27 ODS COMMUNICATION ERROR

Perform the diagnosis following diagnostic procedures for the airbag system. <Ref. to AB(diag)-67, DTC 27 ODS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>

E: DTC 29 ODS FAILURE

DTC DETECTING CONDITION:

- Occupant detection sensor is faulty.
- Occupant detection control module is faulty.
- Occupant detection harness is faulty.
- Rear airbag harness is faulty.
- Fuse No. 25 (in joint box) is blown.

Step	Check	Yes	No
1 CHECK POOR CONTACT OF CONNECTORS. Check for poor contact of the connectors between the occupant detection control module and airbag control module.	Is there poor contact?	Reconnect the connector. If the fault is not fixed, replace the airbag harness.	Go to step 2.
2 CHECK DIAGNOSTIC TROUBLE CODE (DTC). READ DIAGNOSTIC TROUBLE CODE (DTC) FOR THE AIRBAG SYSTEM.	Is "2C Belt Tension Sensor failure or 37 Buckle Switch failure" displayed in the diagnostics code?	Perform the diagnosis according to each DTC.	Check the seat harness, and if any fault is found, replace the seat harness. If the fault is not fixed, replace the occupant detection system. <Ref. to SE-15, PASSENGER'S SEAT, DIS-ASSEMBLY, Front Seat.>

Diagnostic Procedure with Diagnostic Trouble Code (DTC)


OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

F: DTC 37 BUCKLE SWITCH RH FAILURE

DTC DETECTING CONDITION:

- Passenger's buckle switch circuit is open, shorted or shorted to ground.
- Seat harness circuit is open, shorted or shorted to ground.
- Occupant detection control module is faulty.

WIRING DIAGRAM:

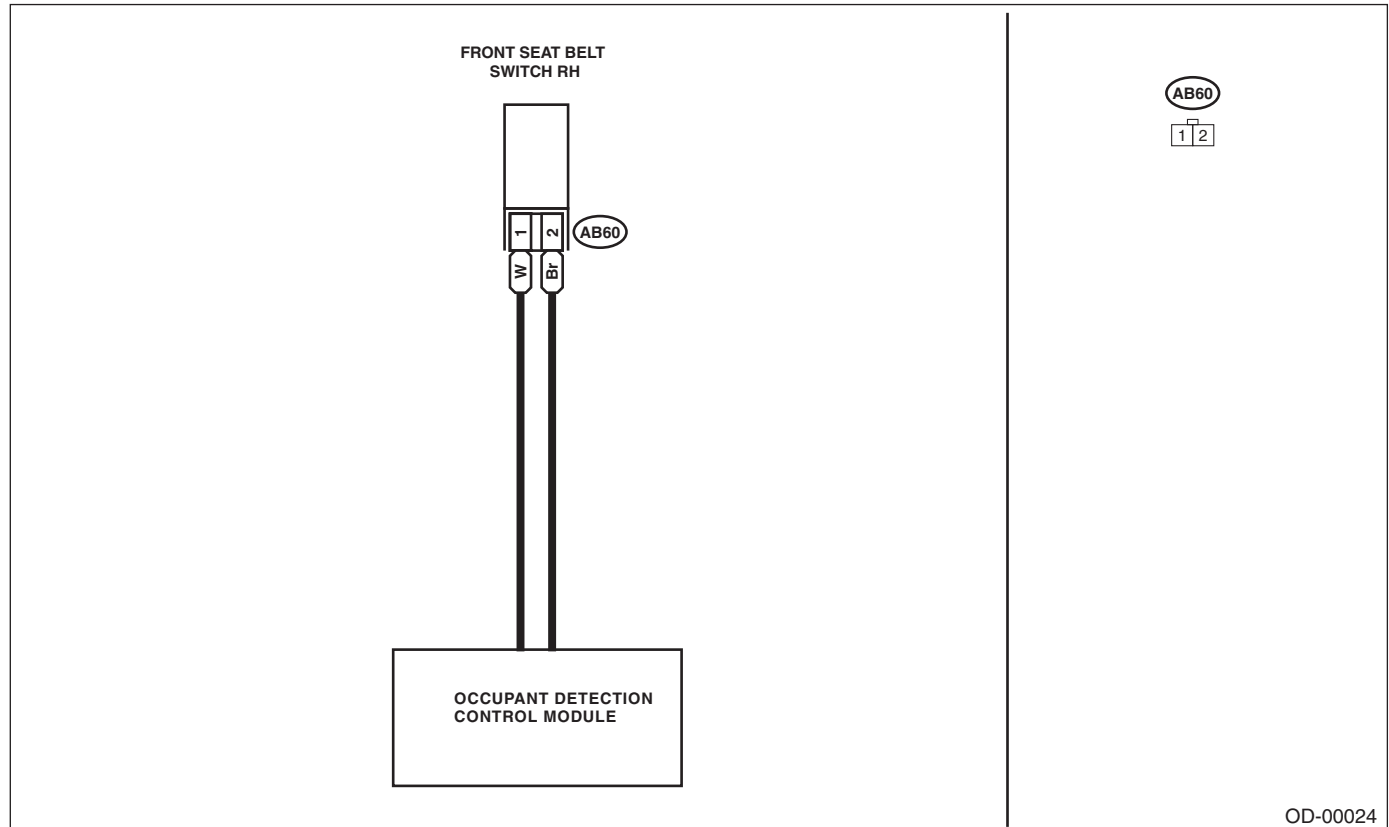

Step	Check	Yes	No
1 CHECK POOR CONTACT OF CONNECTORS. Check for poor contact of the connectors between the occupant detection control module and buckle switch.	Is there poor contact?	Reconnect the connector. If the fault is not fixed, replace the airbag harness.	Go to step 2.
2 CHECK THE BUCKLE SWITCH. 1) Turn the ignition switch to OFF, disconnect the battery ground terminal, and wait for 20 seconds. 2) Disconnect the buckle switch connector (AB60). 3) Connect the test harness AE1 and test harness connector Y to the buckle switch connector (AB60). 4) Connect the battery ground terminal and turn the ignition switch to ON.	Does the airbag warning light illuminate for 6 seconds and go off?	Replace the buckle switch. <Ref. to SB-10, INNER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>	Check the seat harness, and if any fault is found, replace the seat harness. If the fault is not fixed, replace the occupant detection system.

Diagnostic Procedure with Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

SEAT BELT SYSTEM

SB

	Page
1. General Description	2
2. Pretensioner Connector	6
3. Inspection Locations After a Collision	7
4. Seat Belt Warning System	8
5. Front Seat Belt	10
6. Rear Seat Belt	13


General Description

SEAT BELT SYSTEM

1. General Description

A: COMPONENT

1. FRONT SEAT BELT

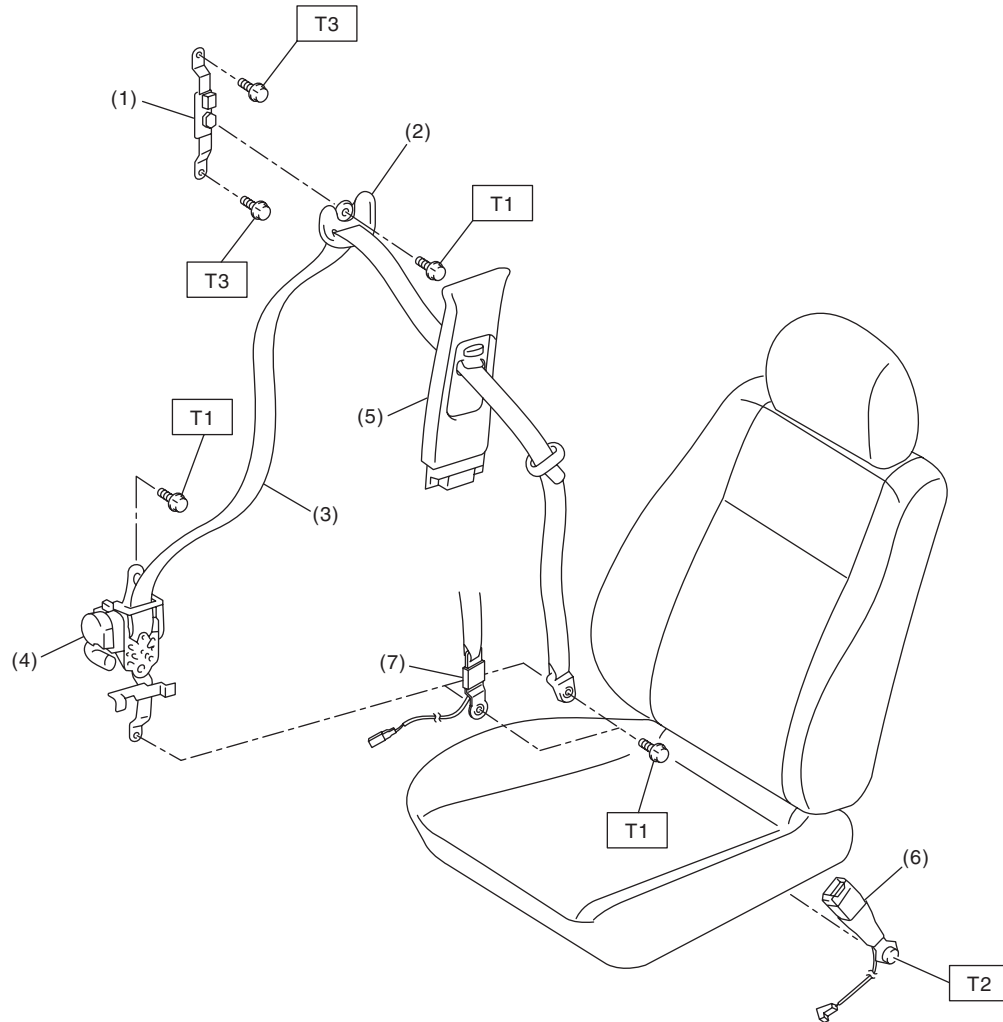

SB-00321

- | | |
|----------------------------|--|
| (1) Adjustable anchor ASSY | (5) Center pillar upper trim |
| (2) Shoulder anchor | (6) Inner seat belt ASSY |
| (3) Outer seat belt ASSY | (7) Belt tension sensor (Passengers side only) |
| (4) Seat belt retractor | |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 30 (3.1, 22)

T2: 38 (3.9, 28)

T3: 53 (5.4, 39)

2. REAR SEAT BELT (SEDAN MODEL)

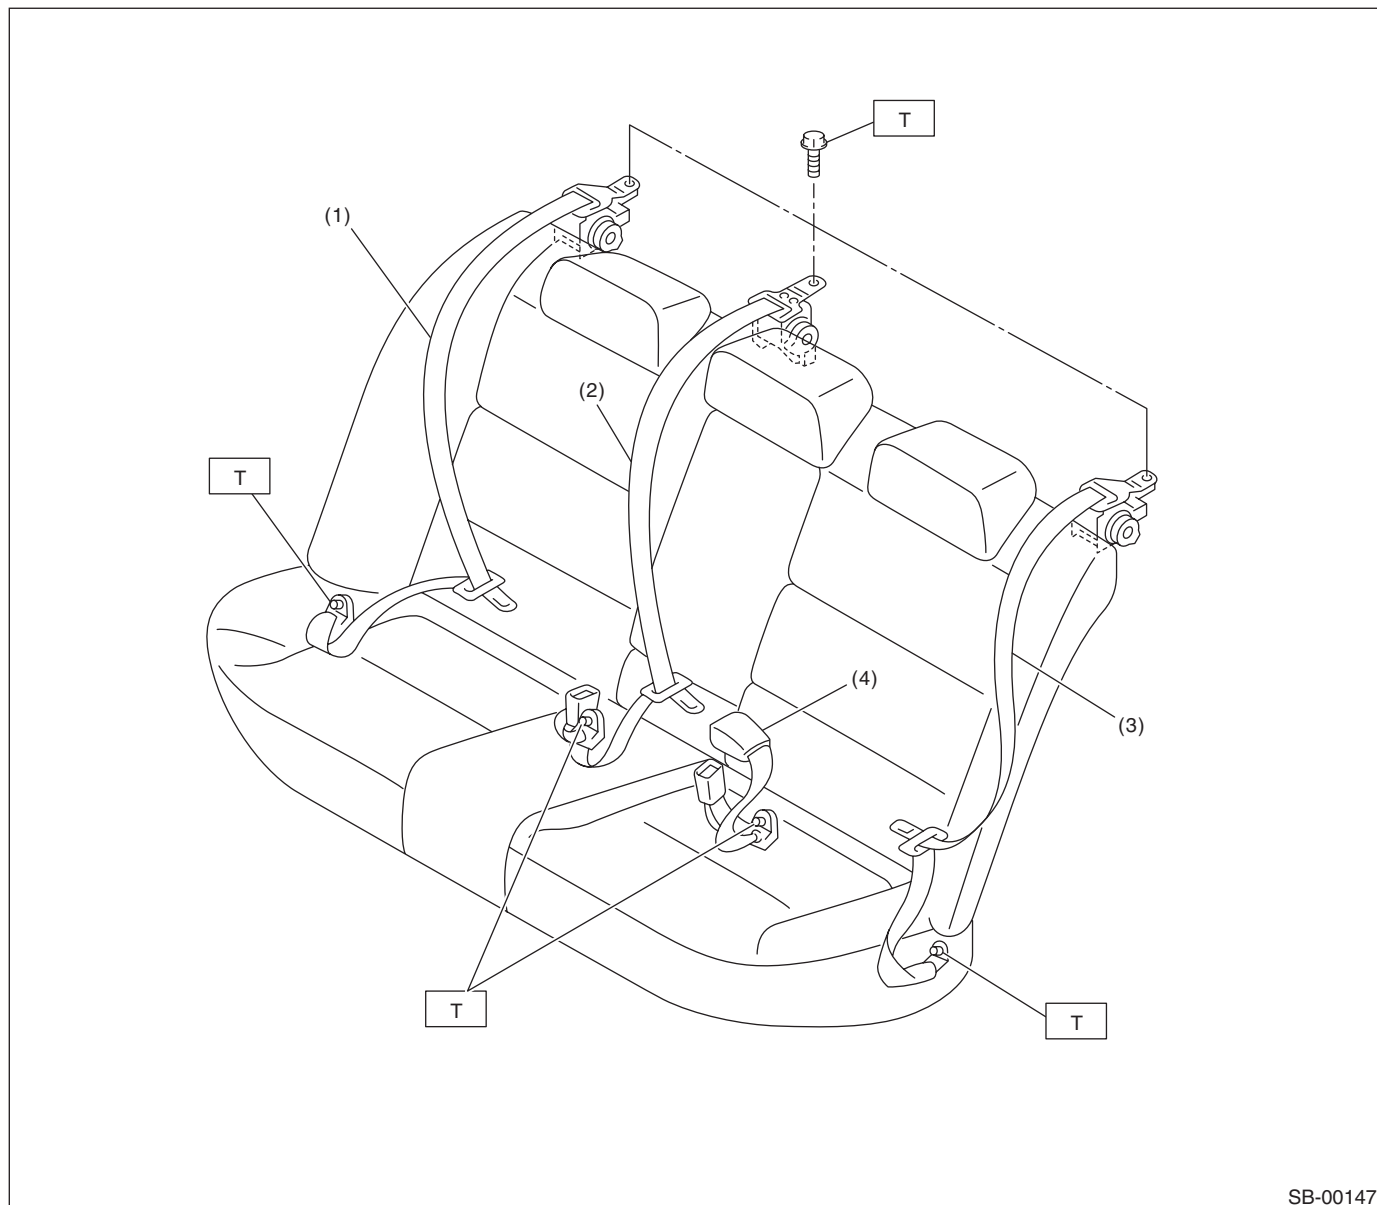

SB-00147

- | | |
|------------------------------------|------------------------------|
| (1) Outer seat belt RH ASSY | (3) Outer seat belt LH ASSY |
| (2) Shoulder seat belt center ASSY | (4) Center seat belt LH ASSY |


Tightening torque: N·m (kgf-m, ft-lb)

T: 30 (3.1, 22)

General Description

SEAT BELT SYSTEM

3. REAR SEAT BELT (WAGON MODEL)

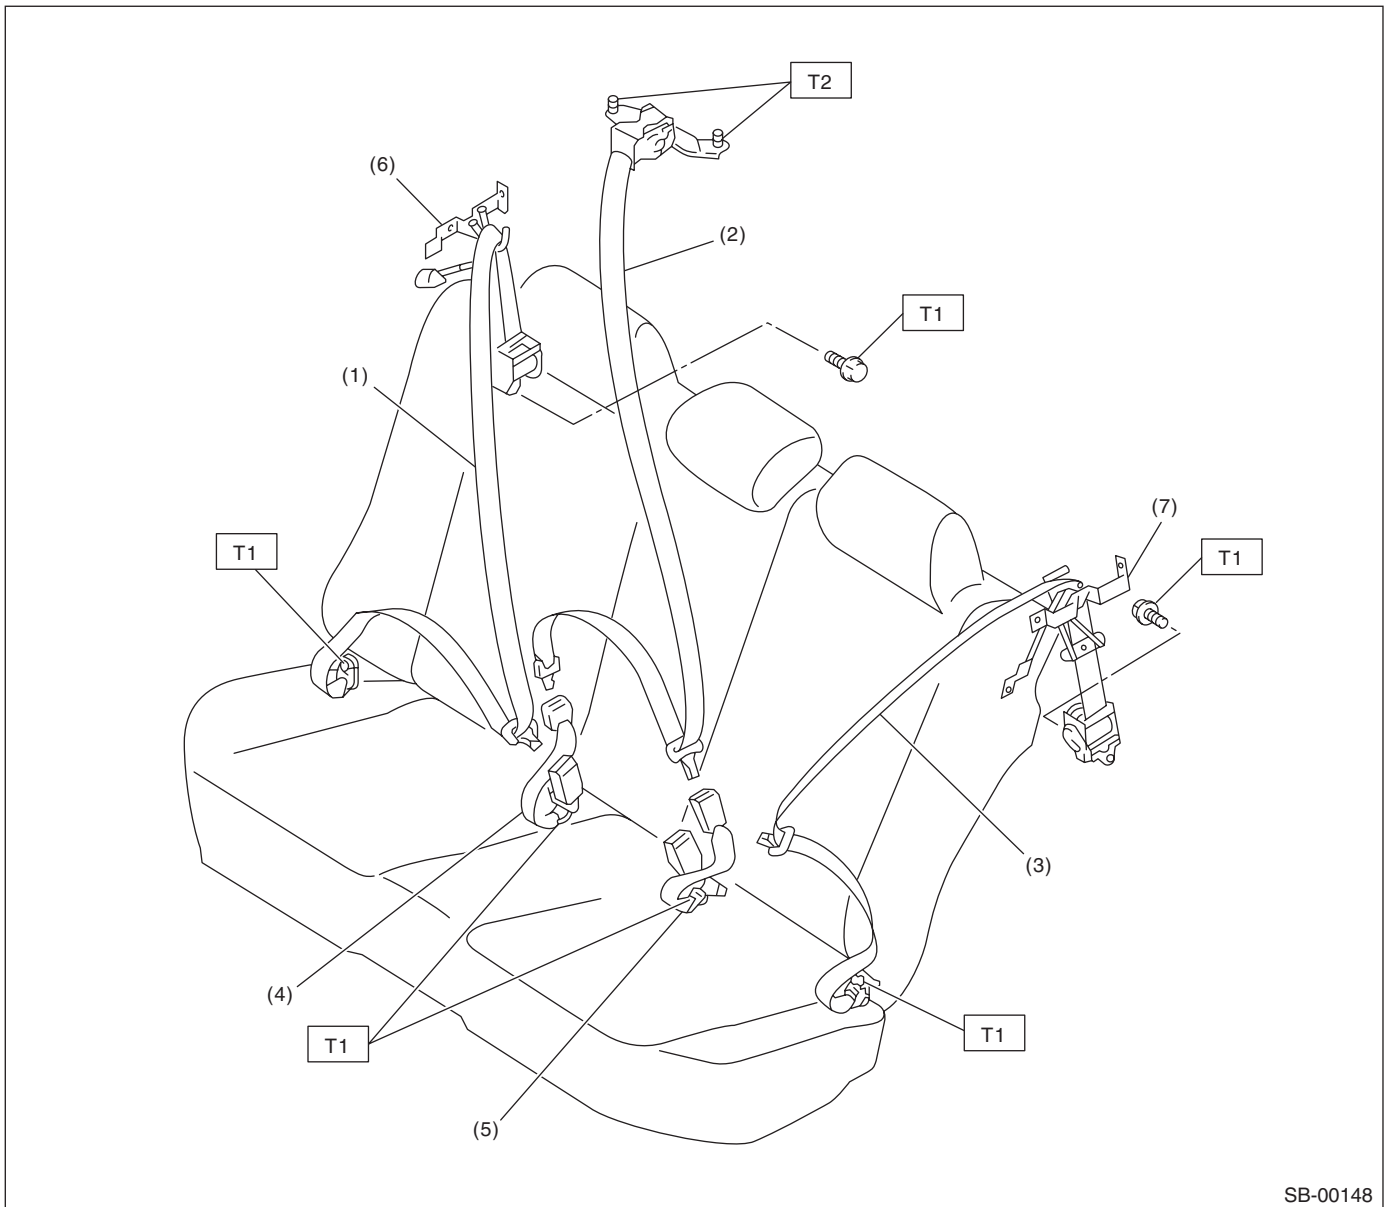

- | | |
|------------------------------------|------------------------------|
| (1) Outer seat belt RH ASSY | (5) Center seat belt LH ASSY |
| (2) Shoulder seat belt center ASSY | (6) Outer belt guide RH |
| (3) Outer seat belt LH ASSY | (7) Outer belt guide LH |
| (4) Center seat belt RH ASSY | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 30 (3.1, 22)

T2: 53 (5.4, 39.1)

B: CAUTION

- Before starting the work, turn the ignition switch to OFF, disconnect the battery ground cable and wait for 20 seconds or more.
- The pretensioner system has a backup power source. The pretensioner might deploy if you do not wait for 20 seconds or more before starting work.
- Do not drop or apply any impact to the pretensioner.
- If oil, grease or water gets on the pretensioner, wipe it off immediately with a dry cloth.
- Do not expose the pretensioner to high temperature or flame.
- Do not allow current to flow through or voltage to reach the pretensioner. Do not use a circuit tester to check resistance of the pretensioner.
- Do not disassemble or attempt to repair the pretensioner. If it is dented, cracked or deformed, replace it with a new part.
- Do not use the airbag or pretensioner parts from other vehicles. Always perform any replacement with new parts.
- When handling a seat belt with deployed pretensioner, wear gloves and goggles. Wash your hands afterwards.
- Do not reuse a seat belt with deployed pretensioner.
- If material from the airbag enters the eyes or contacts skin during deployment, wash it away with clean water, and then consult a doctor.

C: PREPARATION TOOL**1. GENERAL TOOL**

TOOL NAME	REMARKS
TORX® T50	Used for removing and installing the inner seat belt assembly.

2. Pretensioner Connector

A: PROCEDURE

Refer to airbag connectors in the airbag section.
<Ref. to AB-11, PROCEDURE, Airbag Connector.>

3. Inspection Locations After a Collision

A: INSPECTION

Check for the following, and replace with new parts if necessary.

- Center pillar lower trim is discolored or cracked.
- Wiring harness and connector are damaged.

Seat Belt Warning System

SEAT BELT SYSTEM

4. Seat Belt Warning System

A: WIRING DIAGRAM

<Ref. to WI-113, WIRING DIAGRAM, Seat Belt Warning System.>

B: INSPECTION

TROUBLE SYMPTOM:

- Driver's side seat belt warning light does not turn on or off.
- Warning buzzer does not beep.

Step	Check	Yes	No
1 CHECK BODY INTEGRATED UNIT. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. (Engine OFF) 3) Turn the Subaru Select Monitor power to ON. 4) Read the data of the driver's seat belt switch using the Subaru Select Monitor. <Ref. to LAN(diag)-12, OPERATION, Subaru Select Monitor.>	Is the seat belt switch display OFF?	Go to step 2.	Go to step 6.
2 CHECK SEAT BELT WARNING LIGHT. Read the data of driver's seat belt warning light using the Subaru Select Monitor.	Is the seat belt warning light display ON?	Go to step 3.	Check the harness between combination meter and body integrated unit.
3 CHECK BODY INTEGRATED UNIT. 1) Connect the driver's seat belt. 2) Read the data of driver's seat belt switch using Subaru Select Monitor.	Is the seat belt switch display ON?	Go to step 4.	Go to step 6.
4 CHECK SEAT BELT WARNING LIGHT. Read the data of driver's seat belt warning light using the Subaru Select Monitor.	Is the seat belt warning light display OFF? Also, is the seat belt warning light in the combination meter gone off?	Go to step 5.	Check the harness between ignition switch and body integrated unit.
5 CHECK SEAT BELT WARNING BUZZER. 1) Connect the driver's seat belt. 2) Turn the ignition switch to ON.	Does the buzzer beep?	Go to step 6.	Replace the body integrated unit.
6 CHECK DRIVER'S SEAT BELT BUCKLE SWITCH. 1) Insert the tongue plate to the driver's seat belt buckle. 2) Measure the voltage between connector (R8) and chassis ground. Connector & terminal (R8) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 7.	Repair the harness between driver's seat buckle switch and chassis ground.
7 CHECK DRIVER'S SEAT BELT BUCKLE SWITCH. 1) Disconnect connector (R8) from driver's seat inner belt. 2) Measure the resistance between connector (R8) terminals and chassis ground. Connector & terminal (R8) No. 1 — Chassis ground: (R8) No. 3 — Chassis ground:	Is the resistance more than 1 MΩ?	Go to step 8.	Replace the driver's seat inner belt. <Ref. to SB-10, Front Seat Belt.>
8 CHECK BODY HARNESS. Measure the voltage between connector (R167) and chassis ground. Connector & terminal (R167) No. 11 (+) — Chassis ground (-):	Is the voltage more than 10 V? Also, does the seat belt warning light come on?	Go to step 9.	Repair or replace the driver's seat inner belt and body harness.

Seat Belt Warning System

SEAT BELT SYSTEM


Step	Check	Yes	No
9 CHECK BODY INTEGRATED UNIT. Measure the voltage between connector (i84) and chassis ground. Connector & terminal (i84) No. 4 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 10.	Check the body integrated unit.
10 CHECK COMBINATION METER. Measure the voltage between connector (R167) and chassis ground. Connector & terminal (R167) No. 20 (+) — Chassis ground (-):	Is the voltage more than 10 V? Also, does the seat belt warning light come on?	Go to step 11.	Replace the body integrated unit.
11 CHECK COMBINATION METER. Measure the voltage between connector (i10) and chassis ground. Connector & terminal (i10) No. 9 (+) — Chassis ground (-):	Is the voltage more than 10 V? Also, does the seat belt warning light come on?	Go to step 12.	Check the combination meter.
12 CHECK SEAT BELT WARNING SYSTEM. 1) Disconnect the driver's seat belt. 2) Turn the ignition switch to ON.	Does the seat belt warning buzzer beep and warning light blink for 6 seconds after turning the ignition switch to ON?	Go to step 13.	Replace the body integrated unit.
13 CHECK SEAT BELT WARNING SYSTEM. Wait for 6 seconds from the step 12 condition (seat belt warning buzzer beeps and warning light blinks).	Does the seat belt warning light repeat illuminating/blink-ing every 15 seconds, and the warning buzzer beep?	Go to step 14.	Replace the body integrated unit.
14 CHECK SEAT BELT WARNING SYSTEM. Connect the driver's seat belt buckle in the step 13 condition (seat belt warning light repeat illuminating/blink-ing every 15 seconds, and warning buzzer beeps).	Does the seat belt warning light go off and the buzzer stop?	Go to step 15.	Replace the body integrated unit.
15 CHECK SEAT BELT WARNING SYSTEM. Disconnect the driver's seat belt.	Does the seat belt warning light repeat illuminating/ blink-ing every 15 seconds?	Go to step 16.	Replace the body integrated unit.
16 CHECK SEAT BELT WARNING SYSTEM. 1) Lift-up the vehicle. NOTE: Raise all wheels off the floor. 2) Start the engine, and set the vehicle speed to more than 15 km/h (9 MPH). NOTE: When there is a speed difference between front and rear wheels, the ABS or VDC warning may light, but this does not indicate a malfunction. When diagnosis is complete, perform clear memory for ABS or VDC. <Ref. to ABS(diag)-15, Subaru Select Monitor.> or <Ref. to VDC(diag)-17, Subaru Select Monitor.>	Does the seat belt warning light repeat illuminating/ blink-ing every 15 seconds?	Go to step 17.	Replace the body integrated unit.
17 CHECK SEAT BELT WARNING SYSTEM. Connect the driver's seat belt in the step 16 condition.	Does the seat belt warning light go off and the buzzer stop?	Go to step 18.	Replace the body integrated unit.
18 SEAT BELT WARNING SYSTEM. Disconnect the driver's seat belt in the step 17 condition.	Does the seat belt warning light repeat illuminating/ blink-ing every 15 seconds?	Go to step 19.	Replace the body integrated unit.
19 CHECK SEAT BELT WARNING SYSTEM. Connect the driver's seat belt.	Does the seat belt warning light go off and the buzzer stop?	Temporary poor contact.	Replace the body integrated unit.

5. Front Seat Belt


A: REMOVAL

1. OUTER SEAT BELT ASSEMBLY


- 1) Fold the backrest all the way forward, and then move the front seat all the way forward.
- 2) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds.
- 3) Remove the center pillar lower trim. <Ref. to EI-59, REMOVAL, Lower Inner Trim.>
- 4) Remove the center pillar upper trim. <Ref. to EI-60, REMOVAL, Upper Inner Trim.>
- 5) Remove the bolt, then remove the center pillar inner protector lower.
- 6) Remove the bolt, and then remove the shoulder anchor.

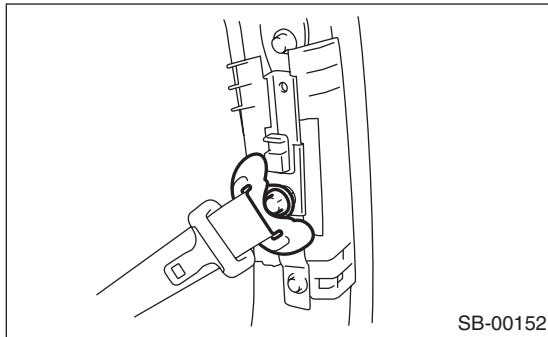

- 7) Remove the bolt, and then remove the adjustable anchor assembly.

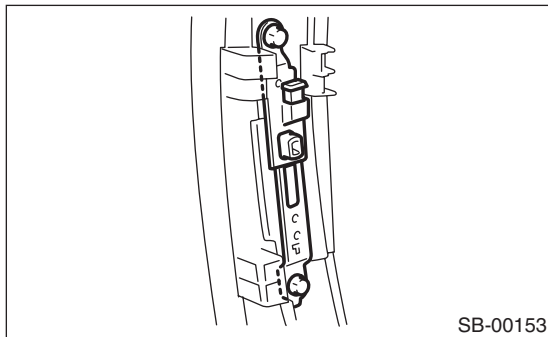


- 8) Disconnect the pretensioner connector (A), remove the bolt, and remove the seat belt retractor.

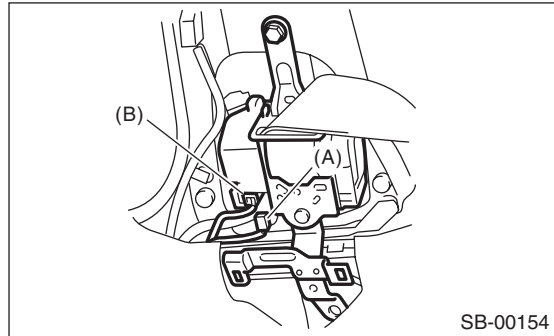

NOTE:

Disconnect the tension reducer connector (B) for the seat belt retractor with a tension reducer function.

- 9) On the passenger's side, disconnect the connector of the belt tension sensor.

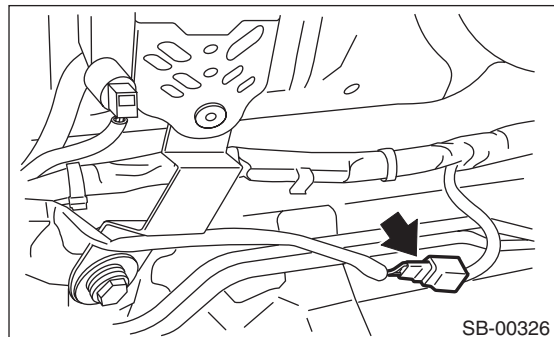


CAUTION:

- Do not drop or subject the pretensioner to any impact.
- Since the pretensioner and bracket are integrated as a unit, do not disassemble them.

2. INNER SEAT BELT ASSEMBLY

- 1) Turn the ignition switch to OFF, disconnect the battery ground cable, and wait more than 20 seconds.
- 2) Remove the four bolts in the slide rail LH and RH.
- 3) Disconnect the seat belt warning light connector under the seat.
- 4) Remove the harness clips from slide rail.

5) Remove the TORX® bolt, and then remove the inner seat belt assembly.

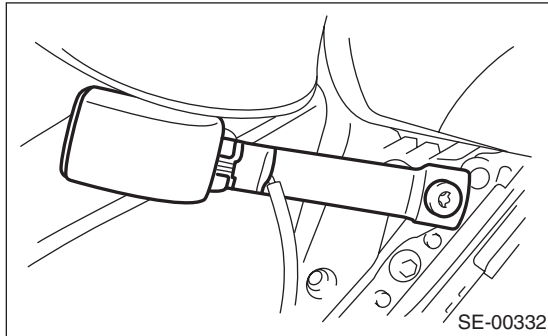

B: INSTALLATION

1. OUTER SEAT BELT ASSEMBLY

Install in the reverse order of removal.

CAUTION:

- The parts of driver and passenger sides are not the same. Before installation, make sure that the correct part is used.
- Be careful not to twist the seat belts during installation.

Tightening torque:

<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>

2. INNER SEAT BELT ASSEMBLY


Install in the reverse order of removal.

CAUTION:


- After the driver's and passenger's inner seat belt assembly installation, check that the seat belt buckle switch operates normally using the Subaru Select Monitor in {Status Data} of "Airbag System". <Ref. to AB(diag)-30, DISPLAY OF STATUS INFORMATION, OPERATION, Subaru Select Monitor.> Improper buckle switch operation may cause airbag system malfunction.

- Inner seat belt assembly harness (1) must be routed securely as shown in the figure, as it can affect the performance of the seat position sensor and occupant detection system.

- Driver's seat

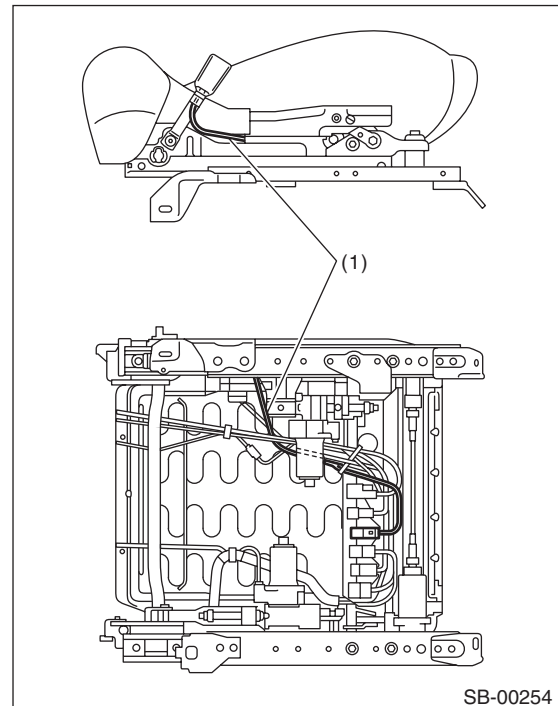

- Passenger's seat

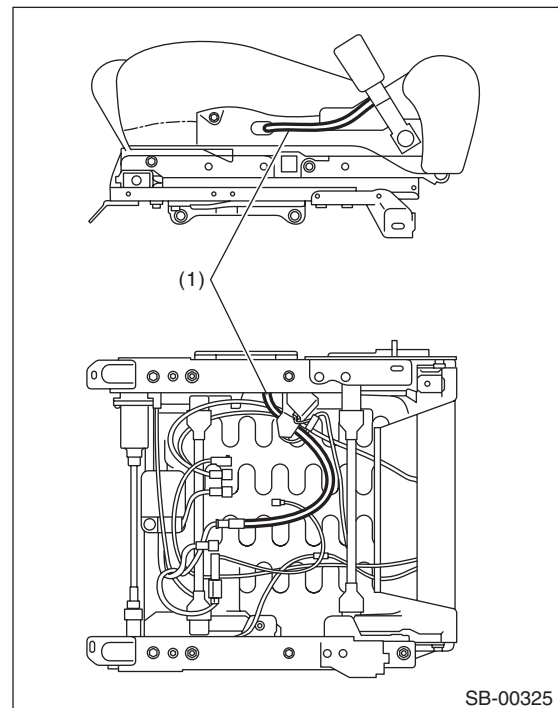

Tightening torque:

<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>

C: INSPECTION

1. OUTER SEAT BELT ASSEMBLY

Check for the following, and replace with new parts if necessary.

- Pretensioner is cracked or deformed.
- The belt tension sensor is cracked. Or deformed.
- Seat belt is slackened, bent or worn. Seat belt is abnormally wound or extended.

2. INNER SEAT BELT ASSEMBLY

Check for the following, and replace with new parts if necessary.


- Inner seat belt assembly is deformed or damaged.
- Seat belt buckle cannot be engaged properly.

6. Rear Seat Belt


A: REMOVAL

1. OUTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (SEDAN MODEL)

- 1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the seat belt lower anchor bolt.

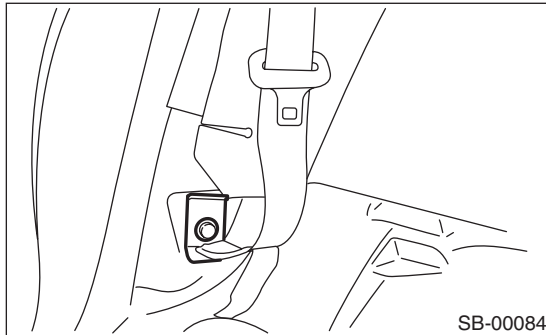


- 3) Remove the rear quarter trim. <Ref. to EI-61, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolts, and then detach the outer seat belt assembly.

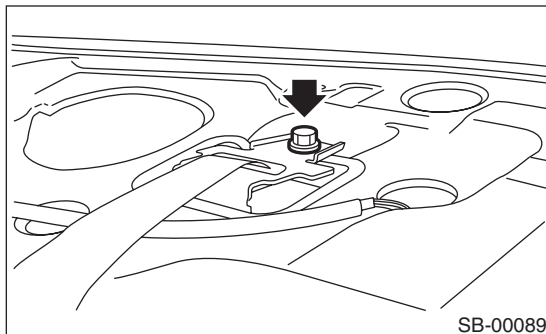


2. SHOULDER SEAT BELT CENTER ASSEMBLY (SEDAN MODEL)

- 1) Remove the rear seat cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the seat belt lower anchor bolt.

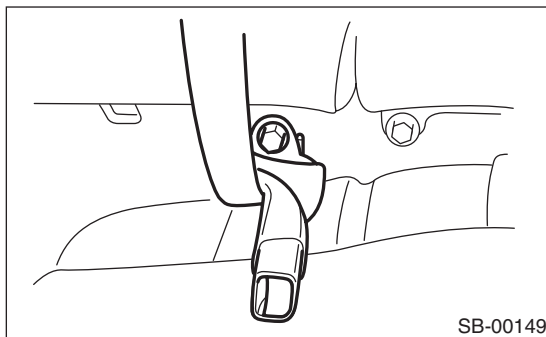


- 3) Remove the rear quarter trim. <Ref. to EI-61, REMOVAL, Rear Quarter Trim.>
- 4) Remove the rear shelf trim. <Ref. to EI-67, REMOVAL, Rear Shelf Trim.>

- 5) Remove the bolts, then remove the shoulder seat belt assembly.

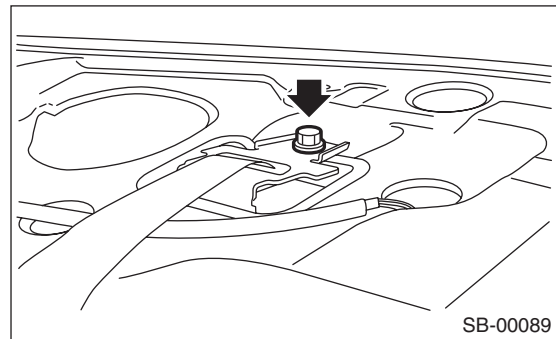


3. CENTER SEAT BELT LH ASSEMBLY (SEDAN MODEL)

- 1) Remove the rear seat cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the bolts, then remove the center seat belt LH assembly.

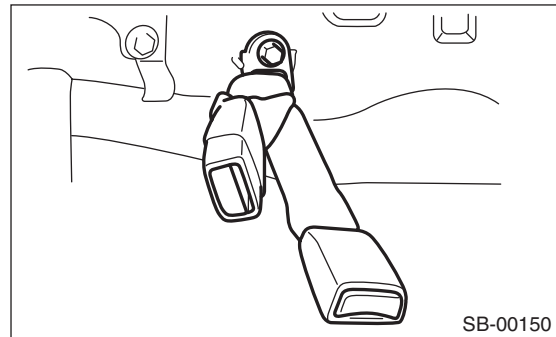

4. OUTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (WAGON MODEL)


- 1) Remove the luggage floor box. <Ref. to EI-71, REMOVAL, Luggage Floor Box.>
- 2) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-17, (SEDAN MODEL), REMOVAL, Rear Seat.>
- 3) Remove the rear quarter lower trim. <Ref. to EI-61, WAGON MODEL, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolt to remove outer seat belt retractor.

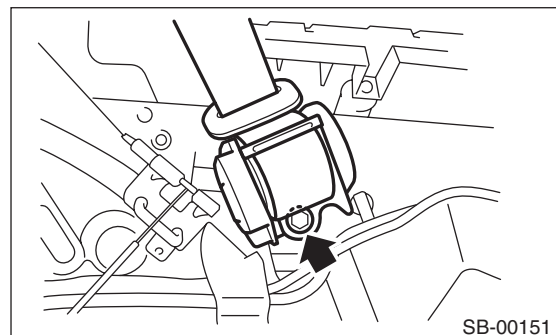

Rear Seat Belt


SEAT BELT SYSTEM

5) Remove the bolt to remove the outer seat belt guide.

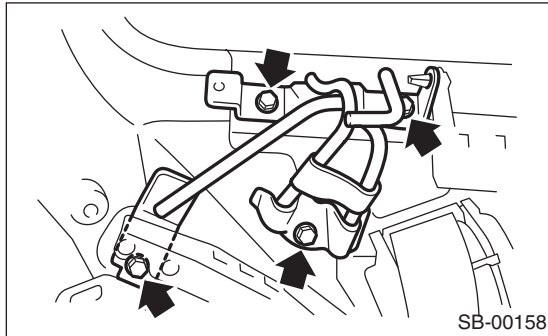


5. SHOULDER SEAT BELT CENTER ASSEMBLY (WAGON MODEL)

- 1) Remove the quarter rear pillar trim. <Ref. to EI-61, WAGON MODEL, REMOVAL, Rear Quarter Trim.>
- 2) Remove the cover (A) from roof trim, and then insert it to the inside of roof trim.

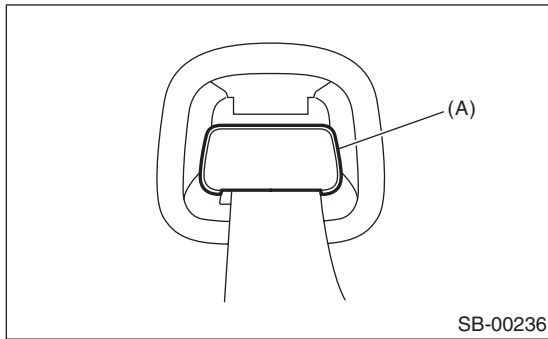


3) Remove the clips, and then lower the roof trim end.

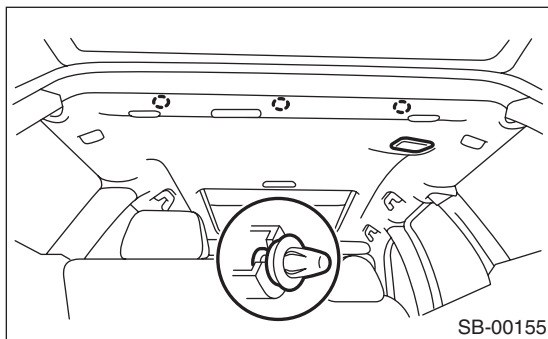

CAUTION:


When removing the roof trim clip, do not pull the roof trim end backward with excessive force, otherwise roof trim may be damaged.

4) Remove the bolt to remove the seat belt retractor.

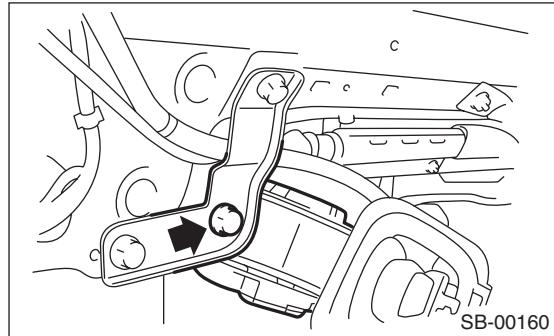

6. CENTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (WAGON MODEL)

- 1) Remove the rear seat cushion. <Ref. to SE-17, (SEDAN MODEL), REMOVAL, Rear Seat.>
- 2) Remove the bolts, then remove the center seat belt assembly.

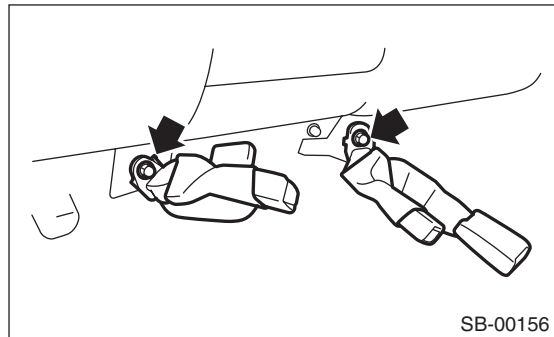


B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts are smoothly extended and wound.
- After seat belt guide installation, make sure that the seat belts are wound.

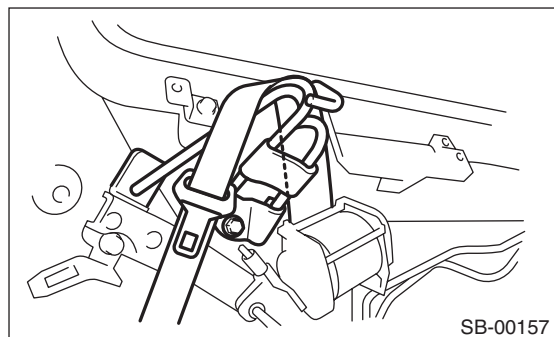

C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn. Seat belt is abnormally wound or extended.
- Inner belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.

Rear Seat Belt

SEAT BELT SYSTEM

LIGHTING SYSTEM

LI

	Page
1. General Description	2
2. Headlight and Tail Light System	3
3. Front Fog Light System	4
4. Turn Signal Light and Hazard Light System	5
5. Back-up Light System	6
6. Stop Light System	7
7. Room Light System	8
8. Combination Switch (Light)	9
9. Combination Base Switch Assembly	10
10. Headlight Assembly	11
11. Headlight Bulb	13
12. Front Turn Signal Light Bulb	14
13. Parking Light Bulb	15
14. Front Side Marker Light Bulb	16
15. Front Fog Light Assembly	17
16. Front Fog Light Bulb	19
17. Side Turn Signal Light Assembly	20
18. Rear Combination Light Assembly	21
19. Tail/Stop Light Bulb	22
20. Rear Turn Signal Light Bulb	23
21. Rear Side Marker Light Bulb	24
22. Back-up Light Assembly	25
23. Back-up Light Bulb	26
24. License Plate Light Assembly	27
25. License Plate Light	28
26. High-mounted Stop Light	29
27. Spot Map Light	30
28. Room Light	31
29. Luggage Room Light	32
30. Trunk Room Light	33
31. Glove Box Light	34
32. Door Step Light	35
33. Ignition Switch Illumination	36


General Description

SEATS

1. General Description

A: COMPONENT

1. FRONT SEAT LH (MANUAL SEAT)

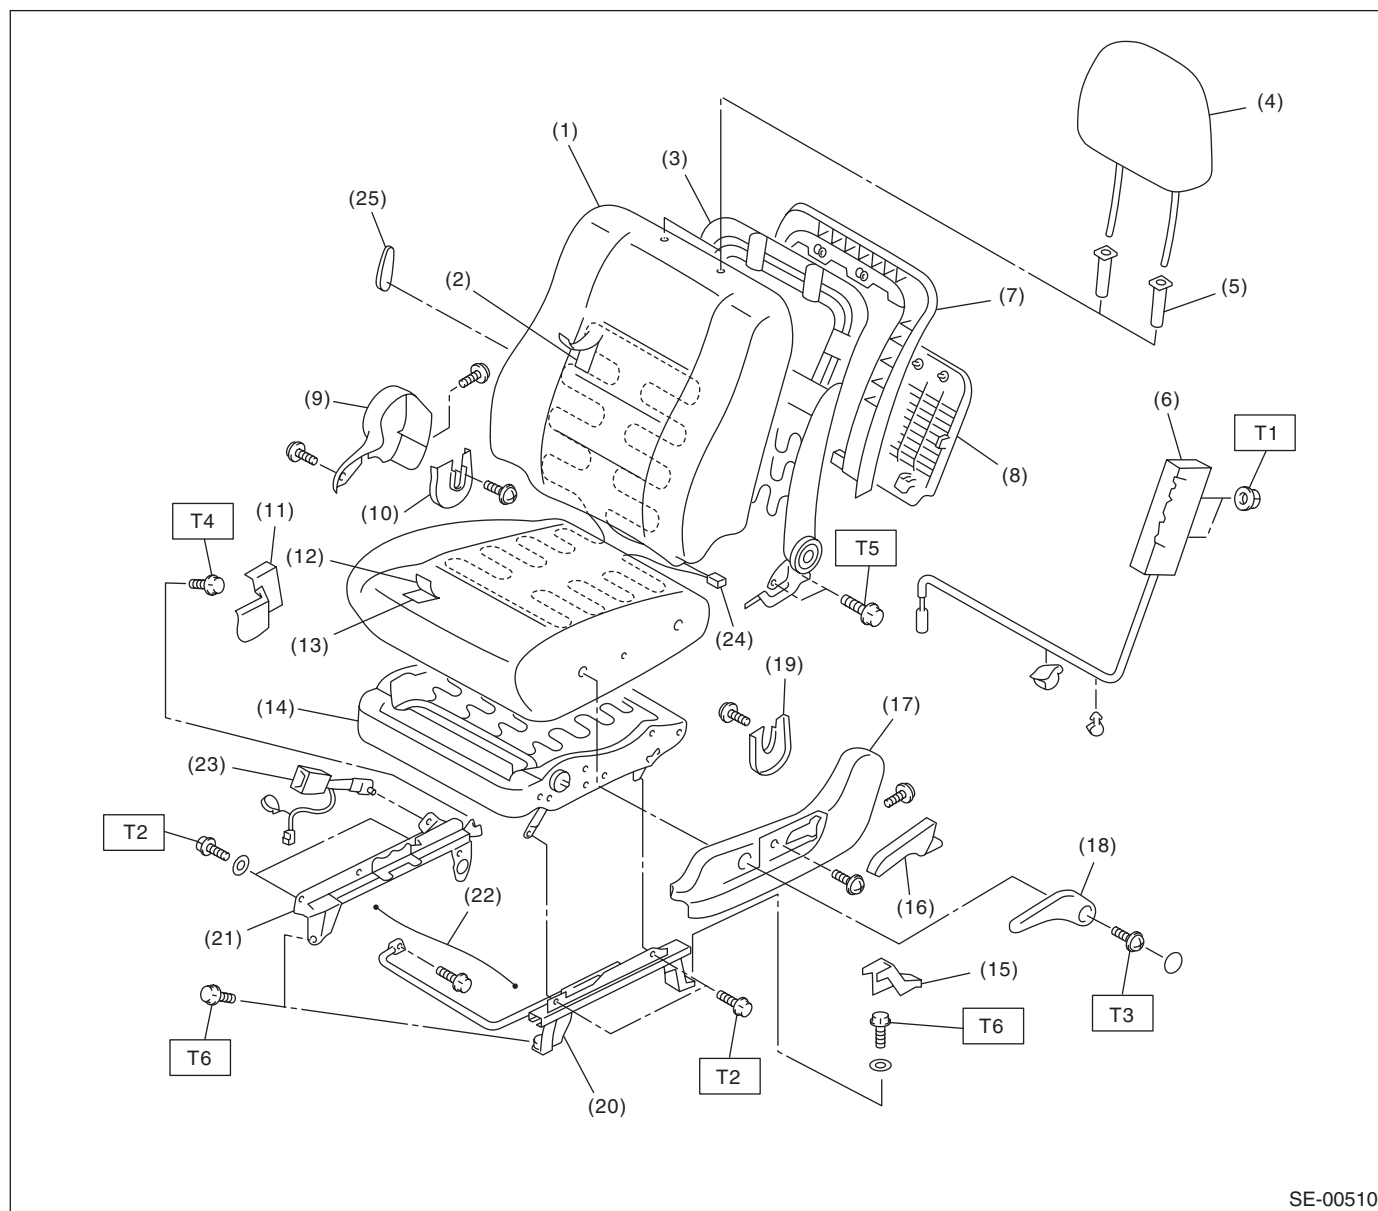

SE-00510

(1) Backrest cover	(12) Seat cushion cover	(23) Inner seat belt ASSY
(2) Backrest pad	(13) Seat cushion pad	(24) Seat heater unit
(3) Backrest frame ASSY	(14) Seat cushion frame ASSY	(25) Lumber support lever
(4) Headrest ASSY	(15) Rear bolt cover outside	
(5) Headrest lock bushing	(16) Reclining lever	
(6) Side airbag module	(17) Seat side cover outside	
(7) Cover frame	(18) Lifter lever	
(8) Backrest back cover	(19) Hinge inner cover LH	
(9) Seat side cover inside	(20) Outer slide rail	
(10) Hinge inner cover RH	(21) Inner slide rail	
(11) Rear bolt cover inside	(22) Connecting wire	

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.43)

T2: 10 (1.02, 7.38)


T3: 22 (2.24, 16.2)

T4: 30 (3.06, 22.1)

T5: 52 (5.30, 38.4)

T6: 53 (5.40, 39.1)

2. FRONT SEAT LH (POWER SEAT)

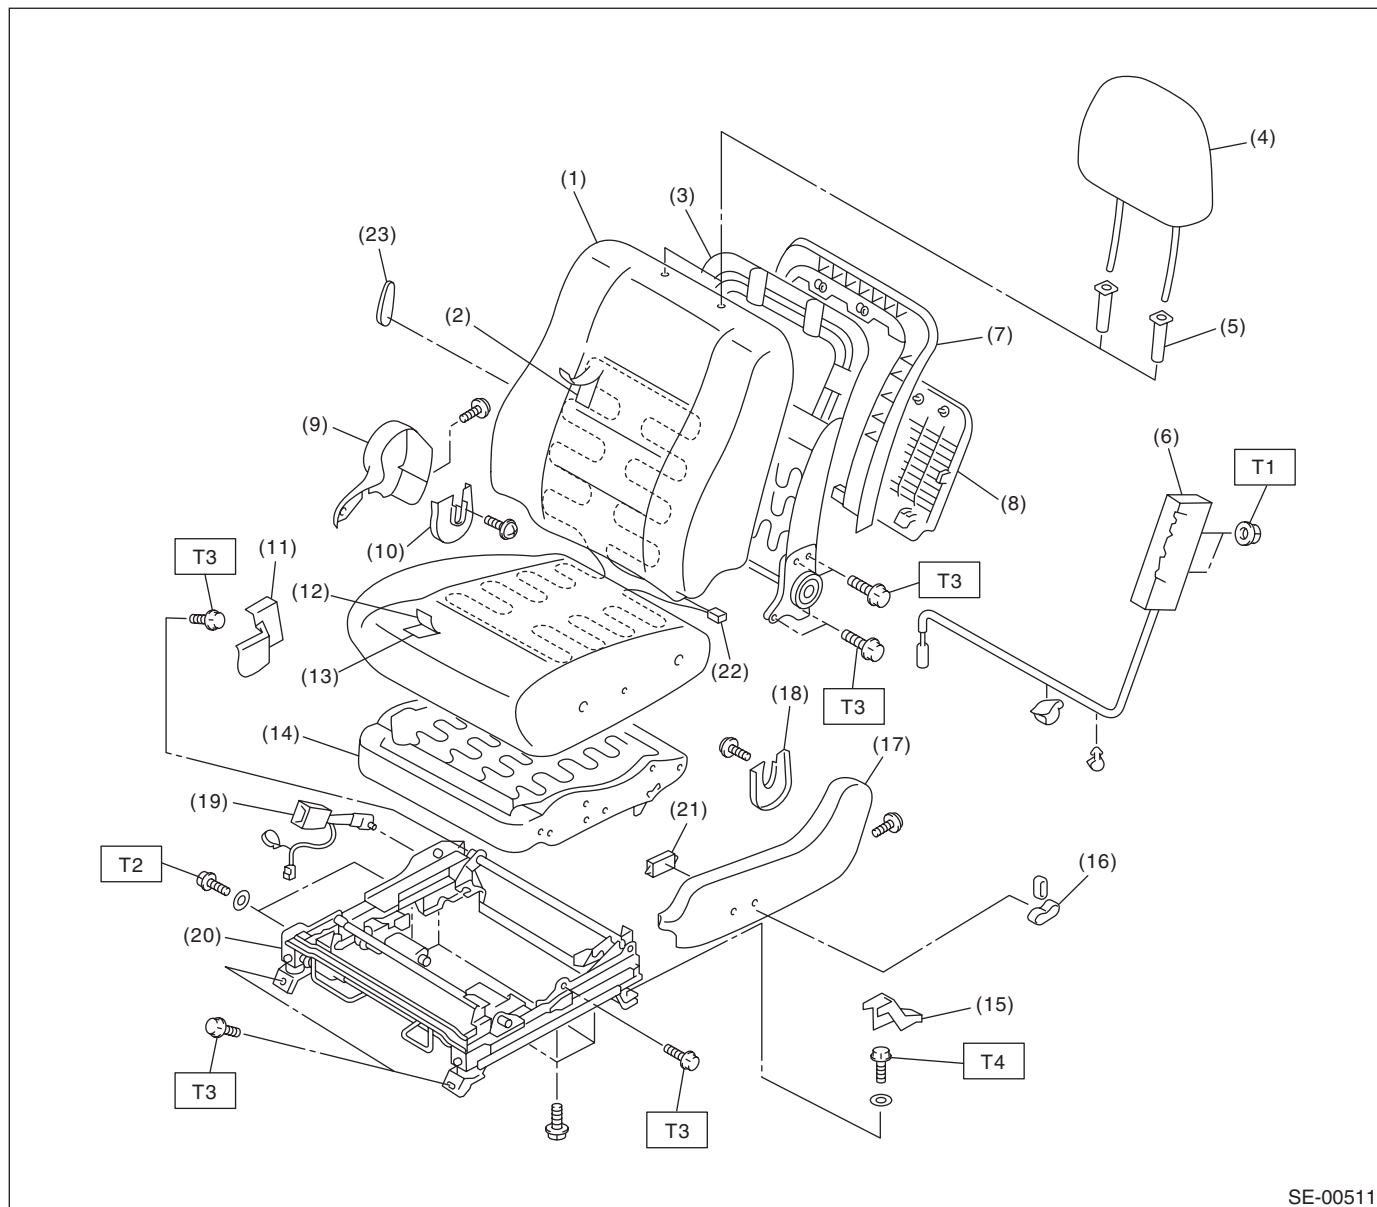

SE-00511

- | | | |
|----------------------------|------------------------------|-----------------------------|
| (1) Backrest cover | (11) Rear bolt cover inside | (21) Power seat switch unit |
| (2) Backrest pad | (12) Seat cushion cover | (22) Seat heater unit |
| (3) Backrest frame ASSY | (13) Seat cushion pad | (23) Lumbar support lever |
| (4) Headrest ASSY | (14) Seat cushion frame ASSY | |
| (5) Headrest lock bushing | (15) Rear bolt cover outside | |
| (6) Side airbag module | (16) Power seat switch knob | |
| (7) Cover frame | (17) Seat side cover outside | |
| (8) Backrest back cover | (18) Hinge inner cover LH | |
| (9) Seat side cover inside | (19) Inner seat belt ASSY | |
| (10) Hinge inner cover RH | (20) Slide rail ASSY | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.43)

T2: 22 (2.24, 16.2)


T3: 52 (5.30, 38.4)

T4: 53 (5.40, 39.1)

General Description

SEATS

3. FRONT SEAT RH (MANUAL SEAT)

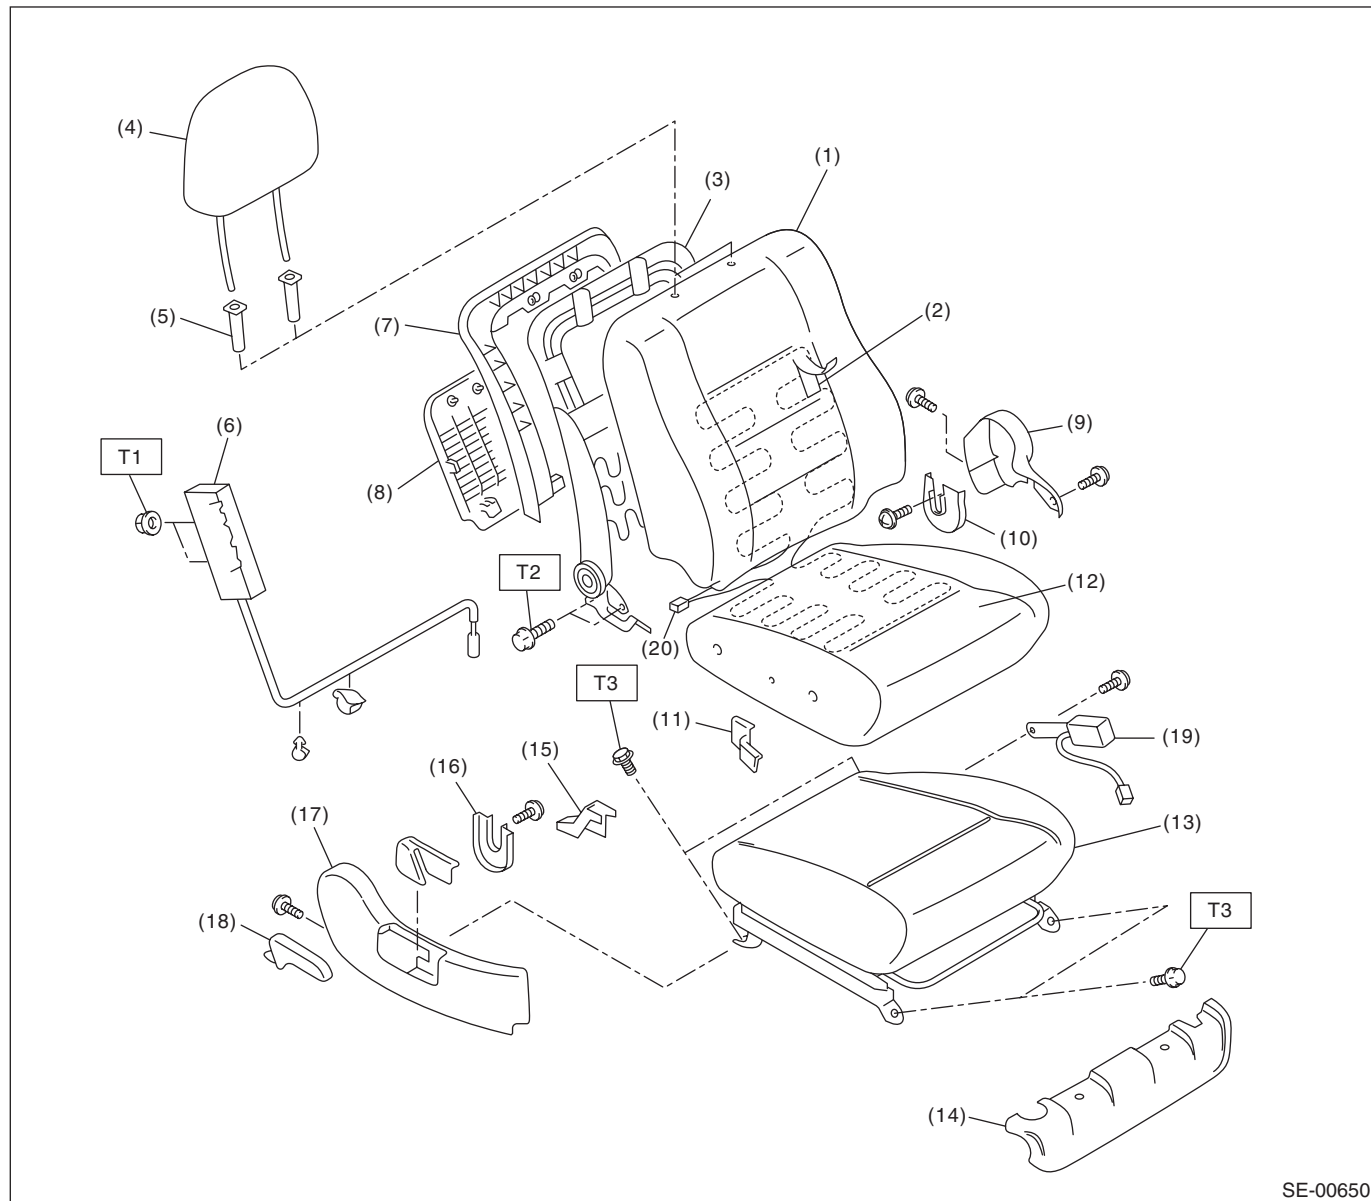

SE-00650

- | | | |
|---------------------------|--------------------------------------|---------------------------|
| (1) Backrest cover | (10) Hinge inner cover LH | (19) Inner seat belt ASSY |
| (2) Backrest pad | (11) Rear bolt cover inside | (20) Seat heater unit |
| (3) Backrest frame ASSY | (12) Seat cushion cover | |
| (4) Headrest ASSY | (13) Seat cushion pad and frame ASSY | |
| (5) Headrest lock bushing | (14) Front bolt cover | |
| (6) Side airbag module | (15) Rear bolt cover outside | |
| (7) Cover frame | (16) Hinge inner cover RH | |
| (8) Backrest back cover | (17) Seat side cover outside | |
| (9) Seat cover inside | (18) Reclining lever | |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.43)

T2: 52 (5.30, 38.4)

T3: 53 (5.40, 39.1)

4. FRONT SEAT RH (POWER SEAT)

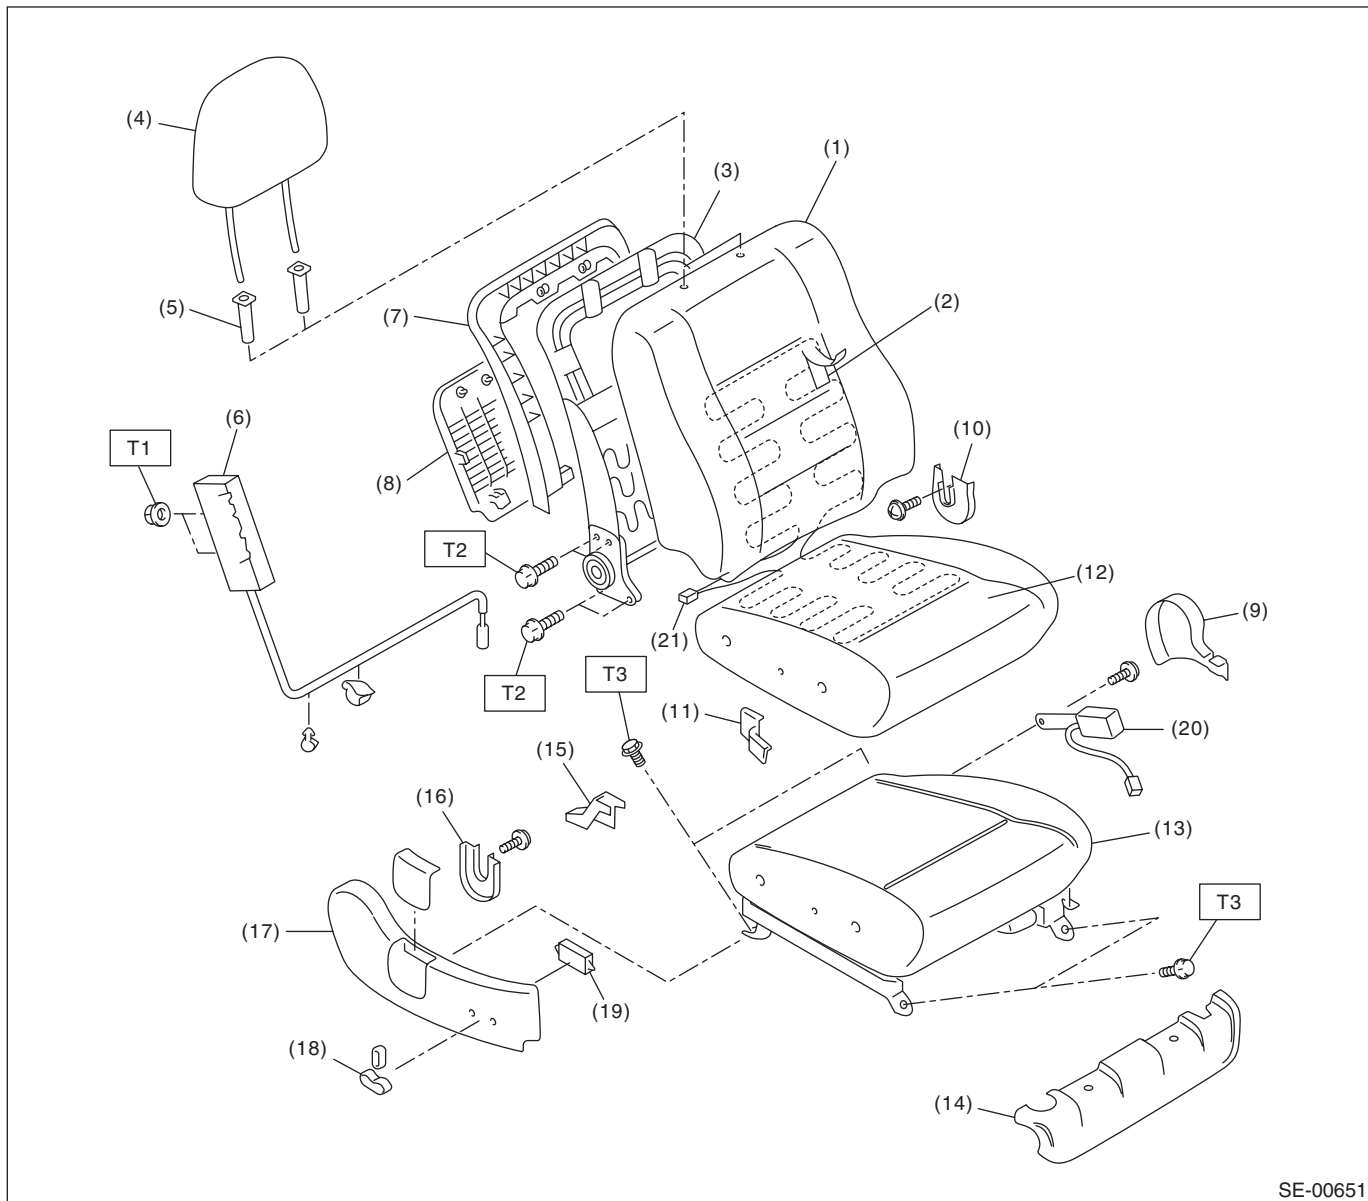

SE-00651

- | | | |
|----------------------------|--------------------------------------|-----------------------------|
| (1) Backrest cover | (10) Hinge inner cover LH | (19) Power seat switch unit |
| (2) Backrest pad | (11) Rear bolt cover inside | (20) Inner seat belt ASSY |
| (3) Backrest frame ASSY | (12) Seat cushion cover | (21) Seat heater unit |
| (4) Headrest ASSY | (13) Seat cushion pad and frame ASSY | |
| (5) Headrest lock bushing | (14) Front bolt cover | |
| (6) Side airbag module | (15) Rear bolt cover outside | |
| (7) Cover frame | (16) Hinge inner cover RH | |
| (8) Backrest back cover | (17) Seat side cover outside | |
| (9) Seat side cover inside | (18) Power seat switch knob | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.43)


T2: 52 (5.30, 38.4)

T3: 53 (5.40, 39.1)

General Description

SEATS

5. REAR SEAT (SEDAN MODEL)

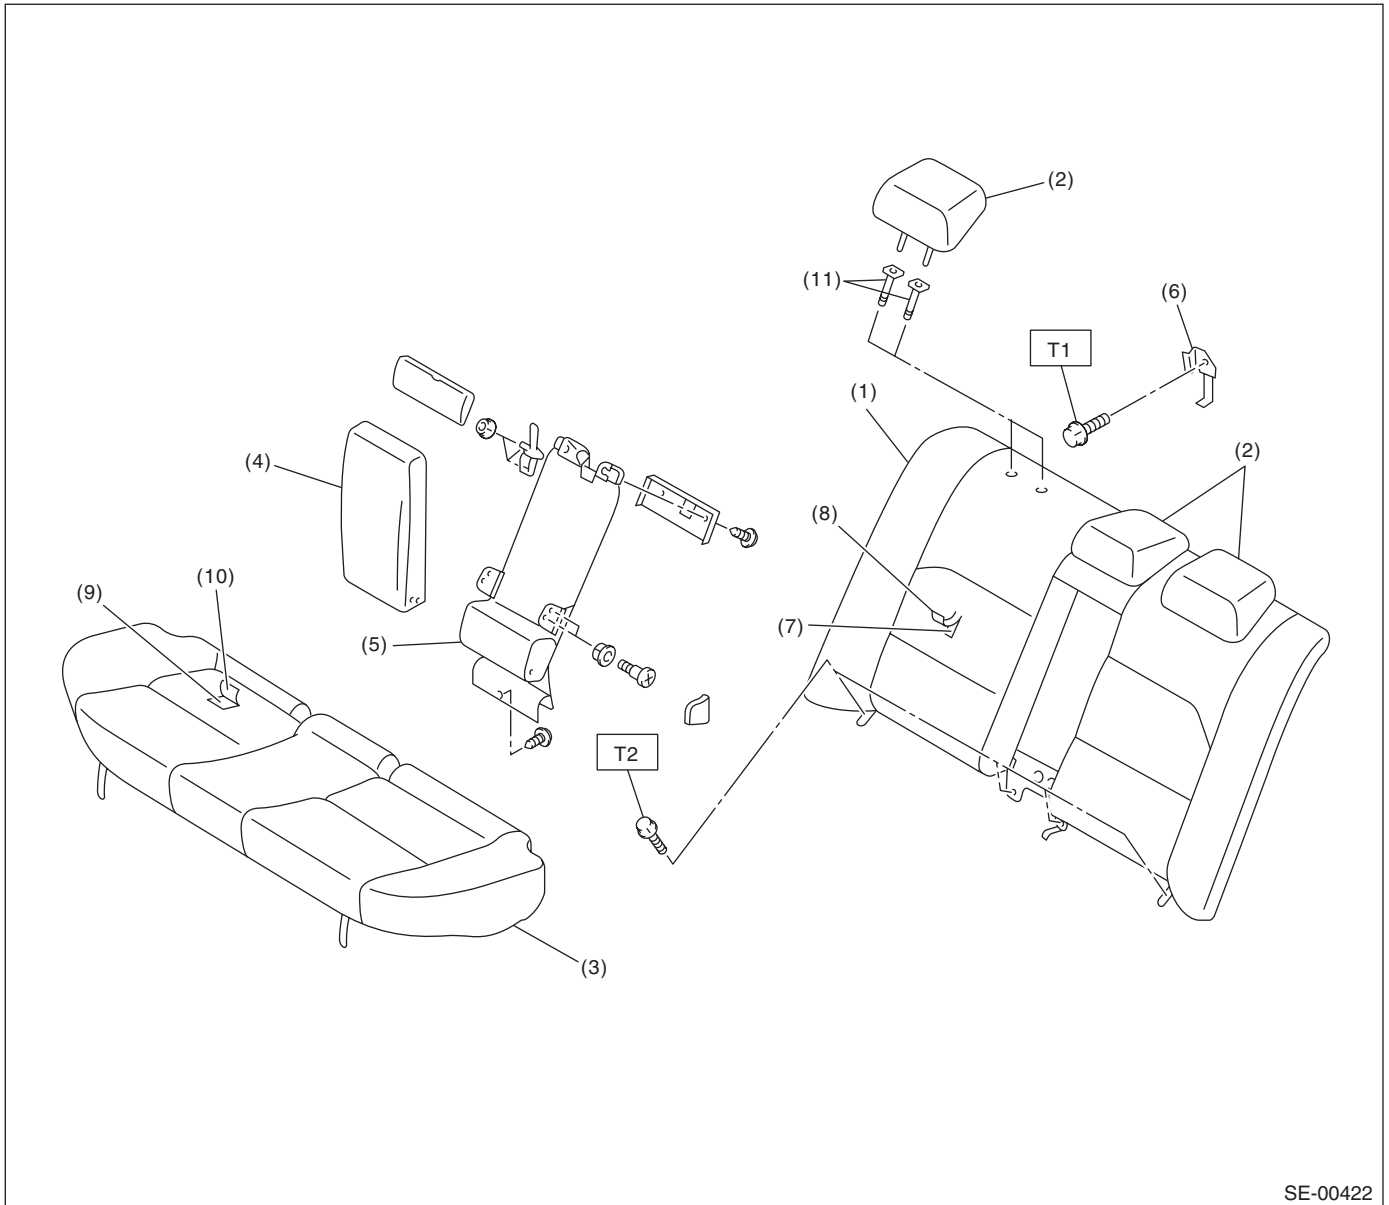

SE-00422

- | | |
|--------------------------|-----------------------------------|
| (1) Backrest | (6) Hook |
| (2) Headrest | (7) Backrest pad assembly |
| (3) Cushion | (8) Backrest cover assembly |
| (4) Armrest | (9) Rear pad & cushion frame ASSY |
| (5) Center through frame | (10) Rear cushion cover |


- (11) Headrest bushing

Tightening torque: N·m (kgf-m, ft-lb)

T1: 10 (1.02, 7.38)

T2: 24.5 (2.5, 18.1)

6. REAR SEAT (WAGON MODEL)

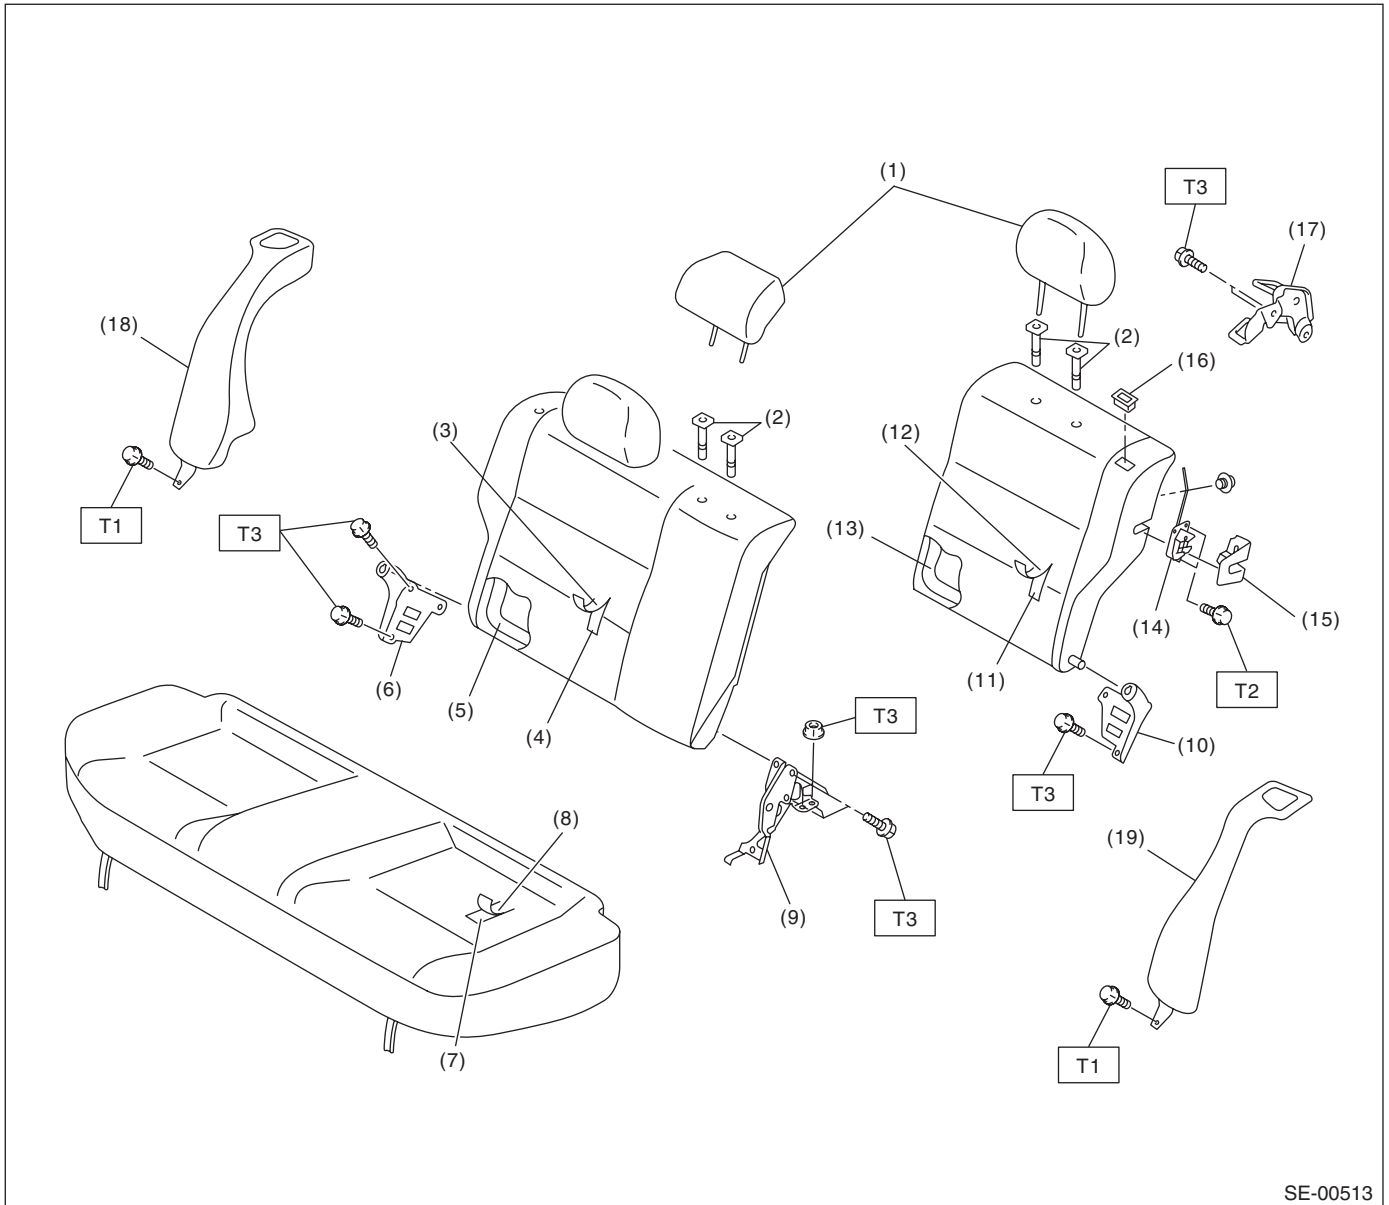

SE-00513

- | | |
|------------------------|--------------------------------|
| (1) Headrest | (9) Hinge ASSY center |
| (2) Headrest bushing | (10) Hinge ASSY LH |
| (3) Backrest cover RH | (11) Backrest pad LH |
| (4) Backrest pad RH | (12) Backrest cover LH |
| (5) Backrest frame RH | (13) Backrest frame LH |
| (6) Hinge ASSY RH | (14) Seat back latch |
| (7) Seat cushion pad | (15) Seat backrest latch cover |
| (8) Seat cushion cover | (16) Holder & button |

- | |
|---------------------------|
| (17) Striker |
| (18) Backrest shoulder RH |
| (19) Backrest shoulder LH |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 13.7 (1.40, 10.1)

T2: 17 (1.73, 12.3)

T3: 22 (2.24, 16.2)

General Description

SEATS

B: CAUTION

- If the seat cushion cover is removed or replaced, make sure to perform passenger detection system adjustment after installing the seat to the vehicle. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

Failure to do so may cause improper operation of the passenger detection system.

- The passenger detection system (passenger seat only) control unit and the passenger detection sensor are fixed to the seat cushion frame. Never remove the passenger detection control unit or the pressure sensor from the seat cushion frame.
- Do not replace the seat cushion pad by itself. Always replace the seat cushion pad and frame assembly as a set. The seat cushion pad and cushion frame are adjusted as a set at the time of manufacture. If cushion pads and cushion frames are combined from those of other vehicles or other sets, the passenger detection system may not operate properly.
- If the seat cushion cover is removed, make sure to replace the hang wire on the seat cushion side with a new wire.
- When removing the front seat from a side airbag loaded vehicle, follow cautions given in the airbag section. <Ref. to AB-6, CAUTION, General Description.>

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Long nose plier	Used for removing the hog ring.
Hog ring pliers	Used for installing the hog ring.
TORX® T50	Used for removing and installing the inner seat belt assembly.

2. Front Seat

A: REMOVAL

CAUTION:

The airbag system is fitted with a backup power source. After disconnecting the battery ground cable, the airbag may deploy if you do not wait for 20 seconds before starting the service of airbag system.

1. DRIVER'S SEAT

- 1) Remove the headrest.
- 2) Tilt the backrest forward, and move the seat forward.
- 3) Remove the rear bolt cover, and remove the two bolts at the rear side of the slide rail.
- 4) Move the seat towards the rear, and remove the two bolts at the front side of the slide rail.
- 5) Disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
- 6) Disconnect the connector under the seat.
 - Seat belt buckle switch connector
 - Seat position sensor connector
 - Side airbag connector
 - Seat heater connector (model with seat heater)
 - Power seat connector (model with power seats)
- 7) Remove the seat from vehicle.

2. PASSENGER'S SEAT

CAUTION:

Refer to "CAUTION" of "General Description" before starting the work. <Ref. to SE-8, CAUTION, General Description.>


- 1) Remove the headrest.
- 2) Tilt the backrest forward, and move the seat forward.
- 3) Remove the rear bolt cover, and then remove the rear side of slide rail.
- 4) Move the seat backward, remove the front bolt cover, and then remove the bolt at the front side of slide rail.
- 5) Disconnect the ground cable from battery, and wait for more than 20 seconds before starting work.
- 6) Disconnect all the connectors of connector holder in the backside of seat cushion.
 - Harness connector of occupant detection control module
 - Side airbag connector
 - Power seat connector (model with power seats)
 - Seat heater connector (model with seat heater)
- 7) Remove the seat from vehicle.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Tighten the slide rail installing bolt gradually in several steps to the specified torque in the order as shown in the figure.

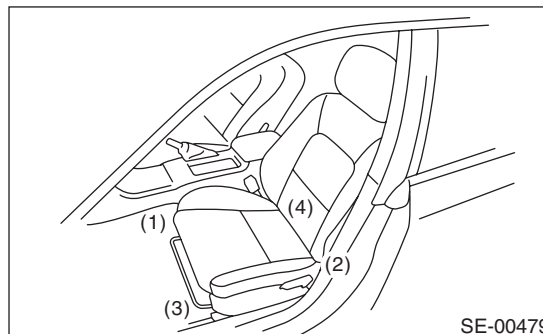

CAUTION:

After installing the driver's seat, use the Subaru Select Monitor to confirm that the seat position sensor LH is operating properly. <Ref. to AB(diag)-30, DISPLAY OF STATUS INFORMATION, OPERATION, Subaru Select Monitor.>

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SE-2, COMPONENT, General Description.>

C: DISASSEMBLY

1. DRIVER'S SEAT

MANUAL SEAT


- 1) Remove the seat from vehicle. <Ref. to SE-9, REMOVAL, Front Seat.>
- 2) Remove the seat lifter cover using a flat tip screwdriver and loosen the inner bolt to remove the seat lifter lever.

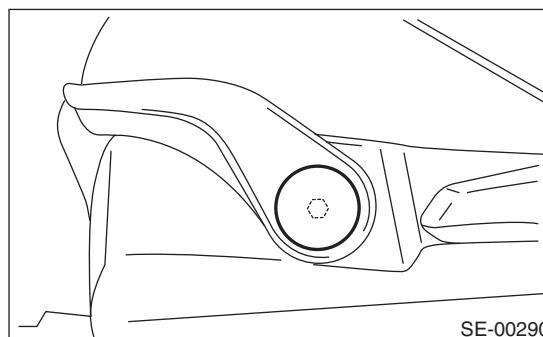


Front Seat

SEATS


3) Remove hook (A) and detach the reclining lever cover.

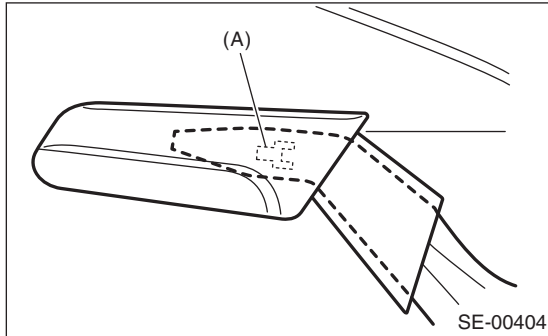


4) Remove screws (A) and clips (B), and then detach the seat side cover outside.

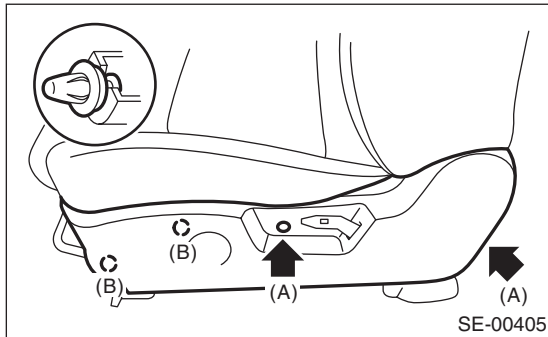


5) Loosen the screws to detach the seat side cover inside.

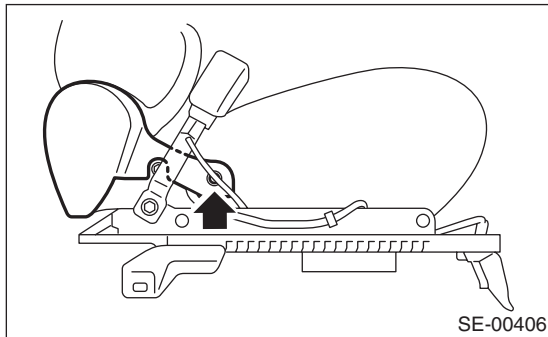


6) Remove the TORX® bolt, and then remove the inner seat belt assembly.

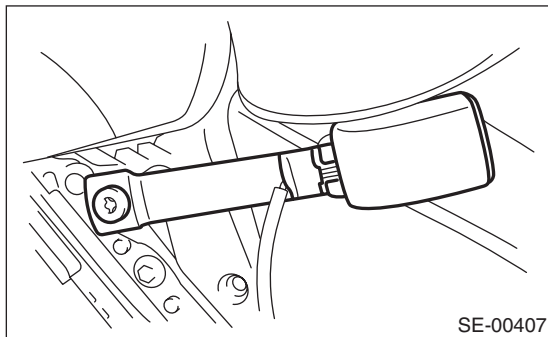


7) Remove the two bolts from the reclining hinge on each left and right side.

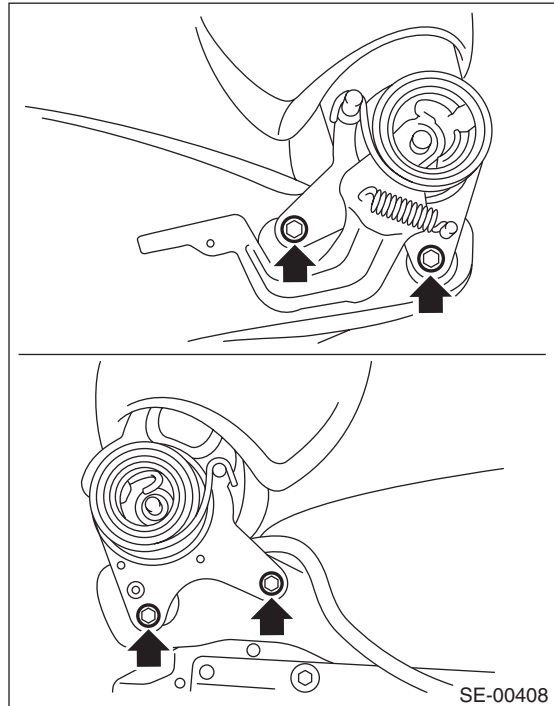


8) Remove the clips and hooks, and then detach the backrest back cover.

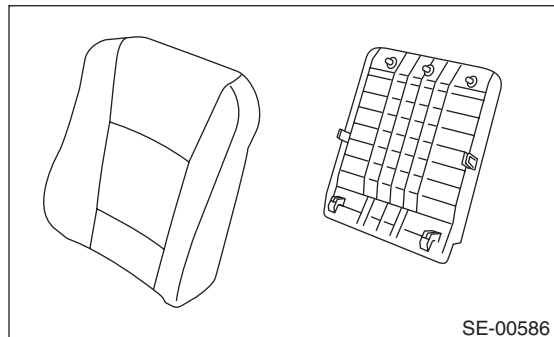

9) Remove the lock clip, and then remove the lumbar support lever.

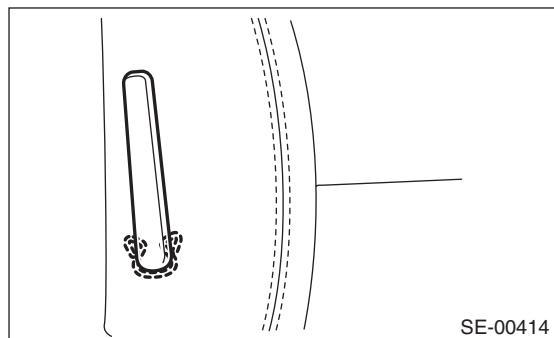


10) Remove the hooks and hog rings at the rear side of backrest.

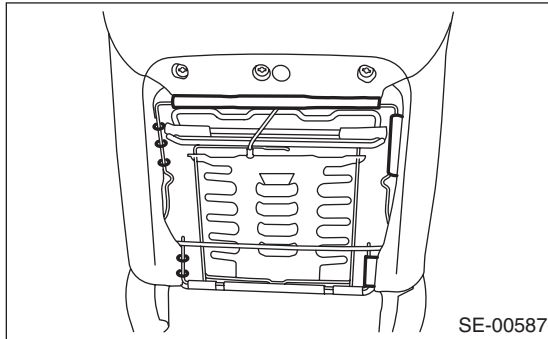


11) Remove the headrest lock bushing.

NOTE:


Push outside to remove it from the inside of seat.

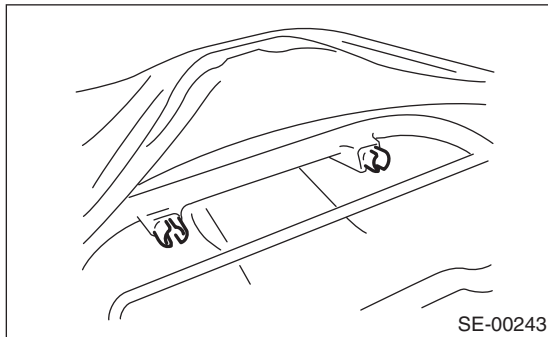

12) Remove the hog rings.

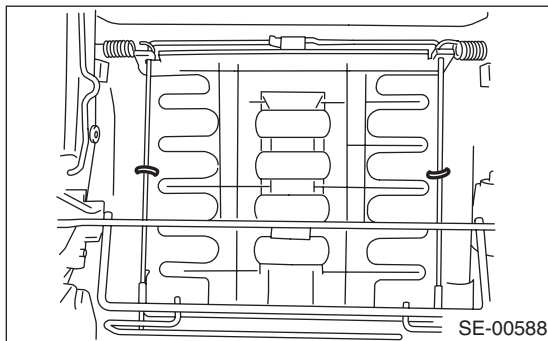


13) Remove the cover frame (A).

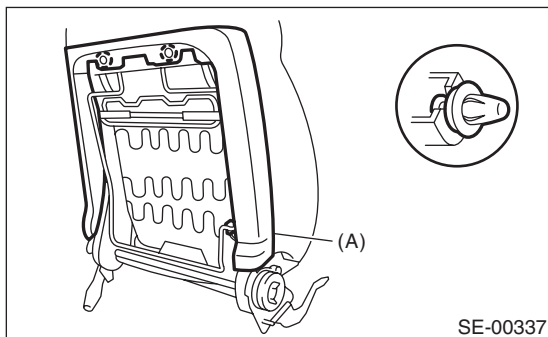


14) Pull out the backrest frame assembly.


15) Remove the side airbag module.

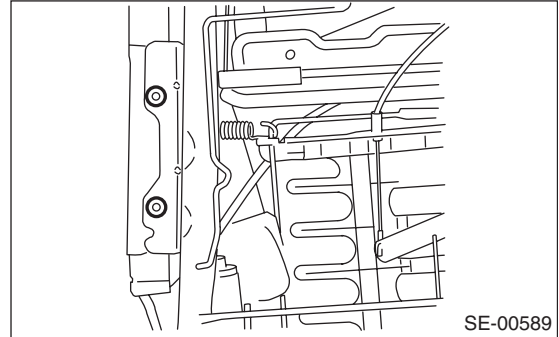


16) Remove the hog rings (A) on the surface side of backrest, and then remove the backrest cover from backrest.

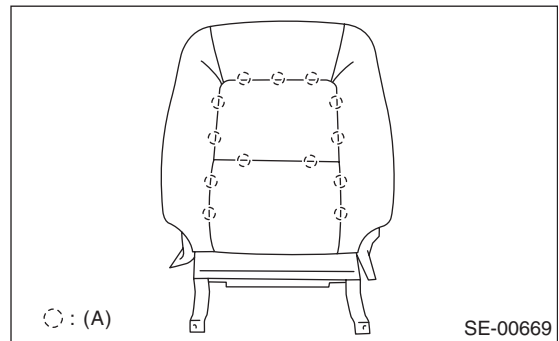

17) Remove the bolt (A) and hook (B) on left and right side, and then remove the seat cushion frame from seat rail assembly.

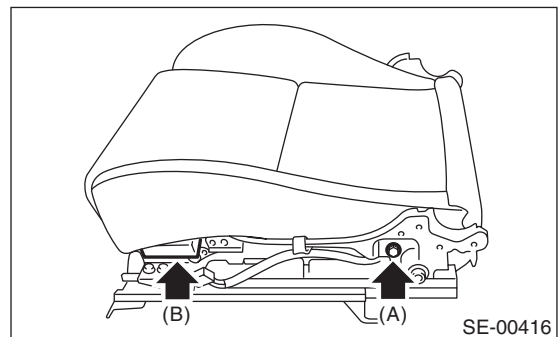


18) Remove the hooks (A), and then remove the seat cushion from seat cushion frame.

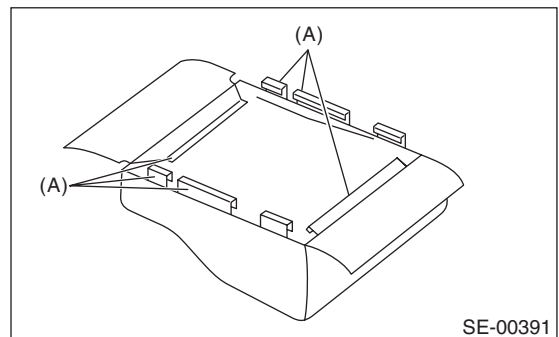


Front Seat

SEATS


19) Remove the hog rings (A), and then remove the seat cushion cover from seat cushion pad.

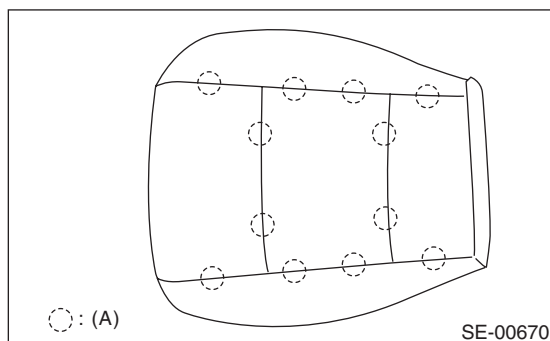

20) Remove the bolt of the sliding adjustment bar and connecting wire.

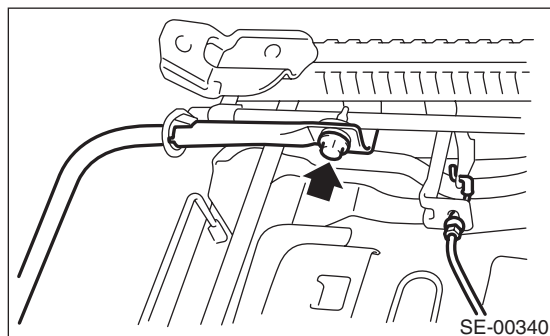


21) Remove the bolts, then remove the slide rail.

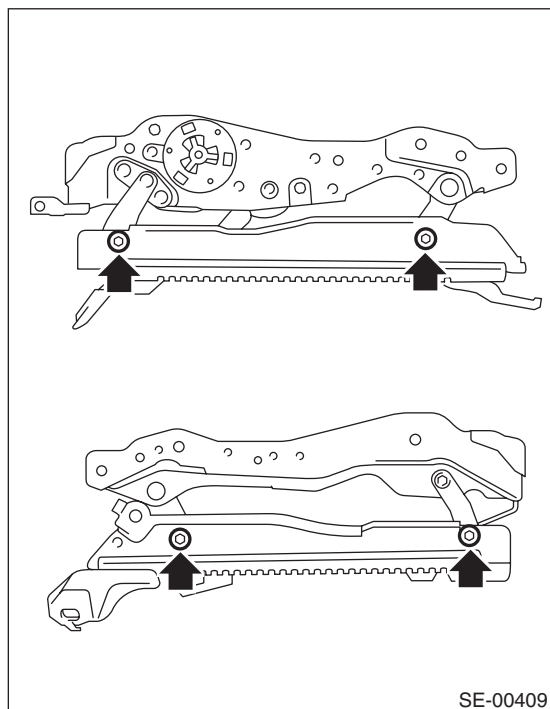

Power seat

1) Remove the seat from vehicle. <Ref. to SE-9, DRIVER'S SEAT, REMOVAL, Front Seat.>


2) Remove the clip (A) and straps (B) on the back of seat cushion.

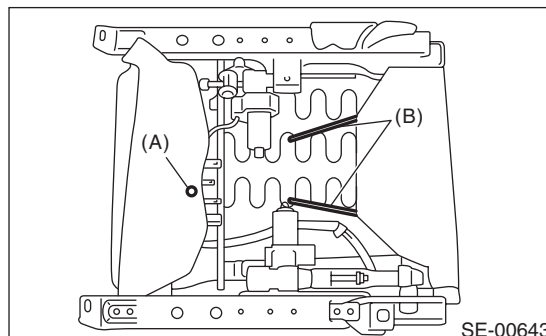


3) Disconnect the following connectors from the backside of seat cushion.

- Side airbag
- Seat position sensor
- Seat heater
- Power seat
- Seat belt


4) Remove the screw (A) and clips (B), and then disconnect the seat switch connector to remove seat side cover outside.

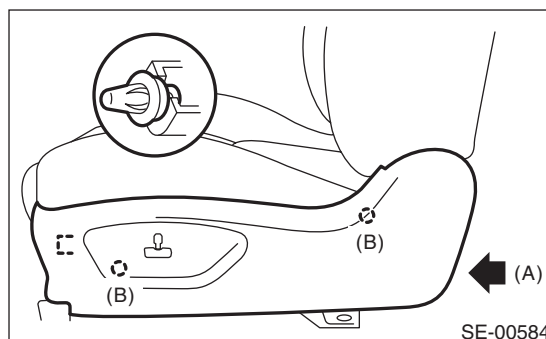


5) Remove the TORX® bolt, and then remove the inner seat belt assembly.

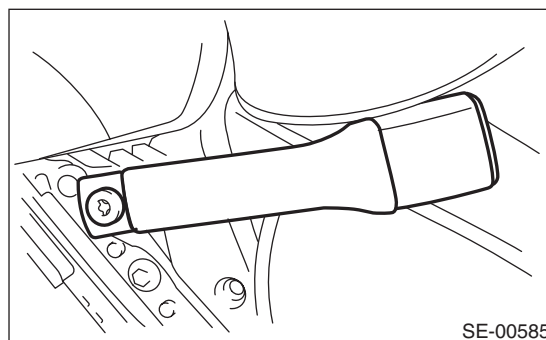


6) Remove the screw (A) and clip (B), and then remove the seat side cover inside.

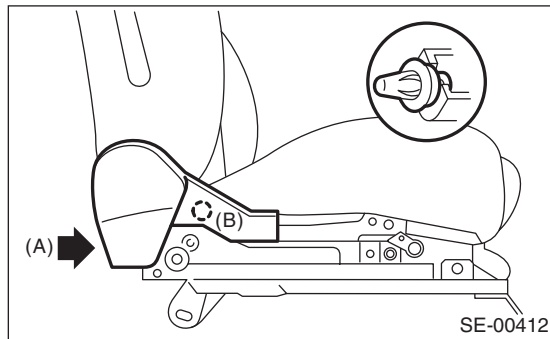


7) Remove the two bolts from the reclining hinge on each left and right side.

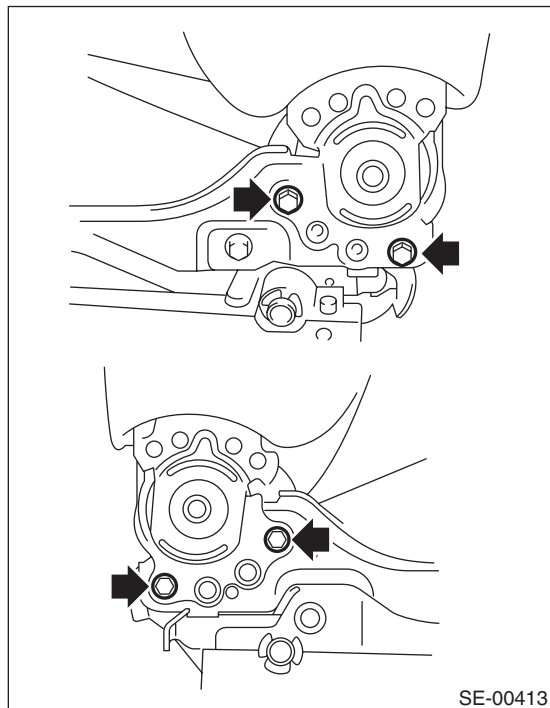


8) Remove the clips and hooks, and then detach the backrest back cover.

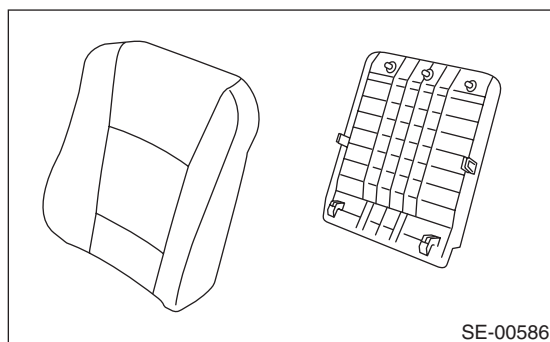

9) Remove the lock clip, and then remove the lumbar support lever.

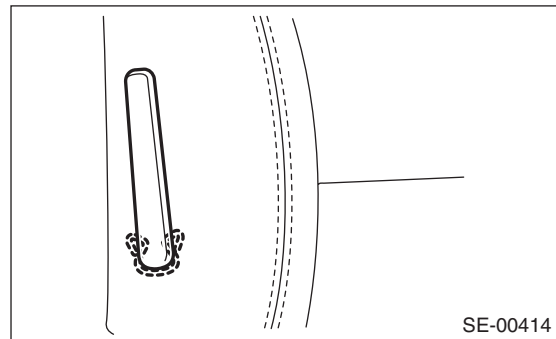


10) Remove the hooks and hog rings at the rear side of backrest.

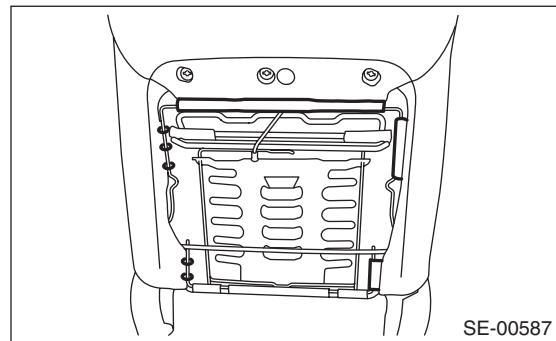


11) Remove the headrest lock bushing.

NOTE:

Push outside to remove it from the inside of seat.

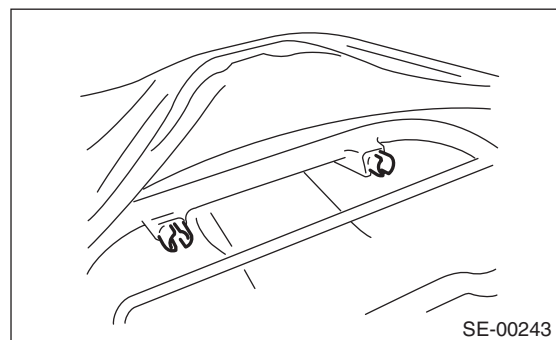


12) Remove the hog rings.

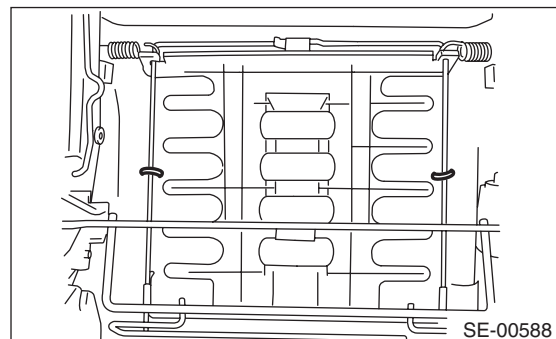

Front Seat


SEATS

13) Remove the cover frame (A).

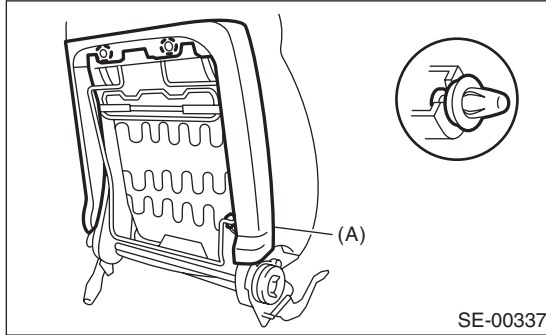


14) Pull out the backrest frame assembly.


15) Remove the side airbag module.

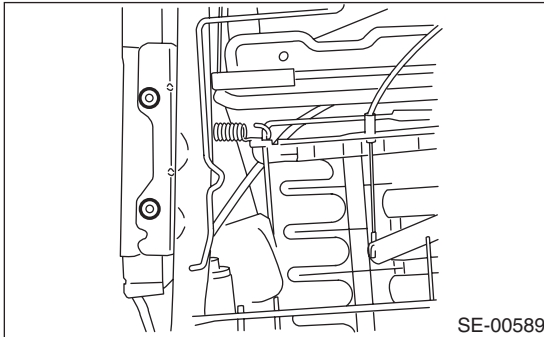


16) Remove the two bolts on each left and right side, and then remove the reclining motor assembly.

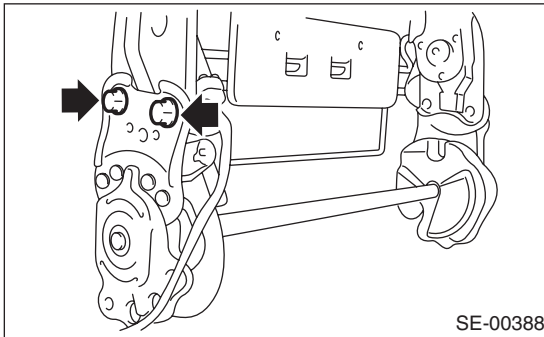


17) Remove the hog rings (A) on the surface side of backrest, and then remove the backrest cover from backrest.

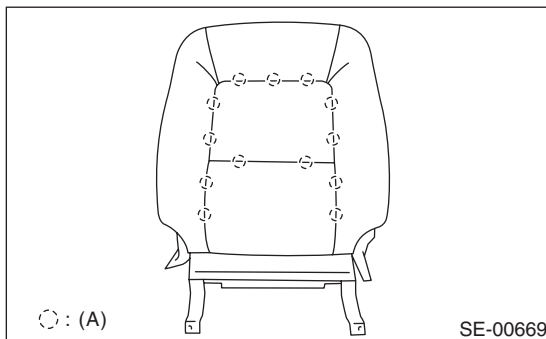


18) Remove the bolt (A) and hook (B) on left and right side, and then remove the seat cushion frame from seat rail assembly.

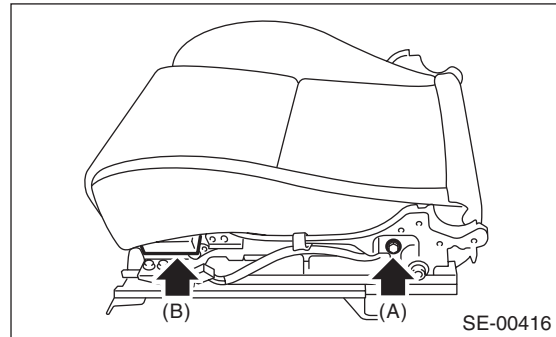

19) Remove the hooks (A), and then remove the seat cushion from seat cushion frame.

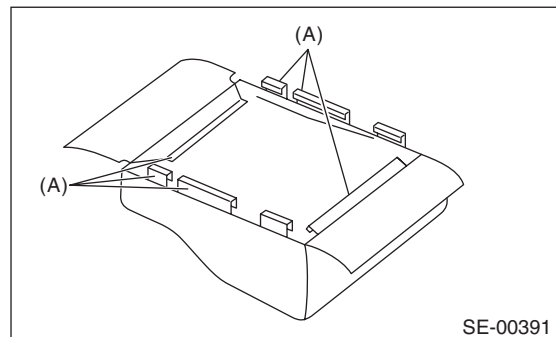

20) Remove the hog rings (A), and then remove the seat cushion cover from seat cushion pad.

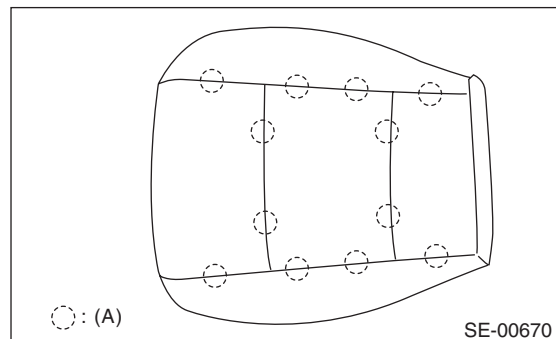

2. PASSENGER'S SEAT

CAUTION:

• If the seat cushion cover is removed or replaced, make sure to perform passenger detection system adjustment after installing the seat to the vehicle. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

Failure to do so may cause improper activation of passenger's airbag.

• The passenger detection system (passenger seat only) control unit, passenger detection sensor, seat cushion pad and seat cushion frame are considered as a single seat cushion pad and frame assembly. Never remove the passenger detection control unit or the pressure sensor from the seat cushion frame.


• If the seat cushion cover is removed, make sure to replace the hang wire on the seat cushion side with a new wire.

1) Remove the seat from vehicle. <Ref. to SE-9, PASSENGER'S SEAT, REMOVAL, Front Seat.>

2) Refer to the disassembly procedures for the driver's seat.

NOTE:

The back side of the seat cushion is affixed by a hook (A) and hog ring (B).

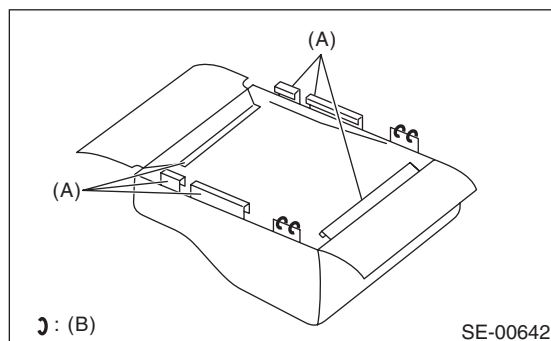

D: ASSEMBLY

CAUTION:

When the backrest cover is not installed securely, the side airbag module may not be deployed properly, therefore keep strictly to the following procedure.

• Be careful not to stain or damage the backrest cover during assembly.

• The back rest cover of the side airbag module are to be tightened and fixed together with the attachment nuts for the side airbag module assembly.

• Always use new hog rings.

• Secure the hog ring using hog ring pliers.

• Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

1. DRIVER'S SEAT

NOTE:


• When installing the inner seat belt assembly, follow the procedure described in the seat belt section. <Ref. to SB-11, INNER SEAT BELT ASSEMBLY, INSTALLATION, Front Seat Belt.>

• Install the backrest assembly and seat cushion assembly in the following procedure.

1) Temporarily tighten the four reclining hinge bolts.

2) Place the backrest in the most upright position.

3) Tighten the reclining hinge bolts in the order of (1) through (4), in two or three steps by gradually increasing the torque until they reach the specified torque.

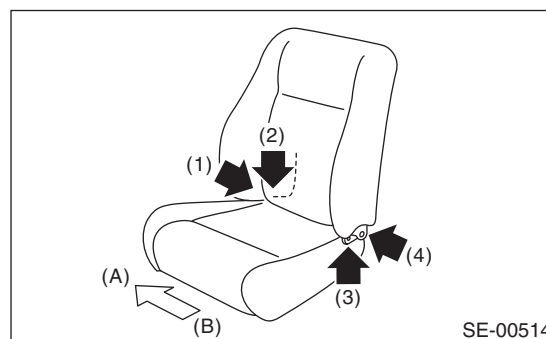

(A) Vehicle inside

(B) Vehicle outside

4) Assemble in the reverse order of disassembly.

2. PASSENGER'S SEAT

CAUTION:

Make sure to adhere to the following rules when assembling the passenger seat. Improper work procedures can cause the passenger detection system to not operate properly.

- If the seat cushion cover is removed or replaced, make sure to perform passenger detection system adjustment after installing the seat to the vehicle. <Ref. to OD(diag)-17, SYSTEM CALIBRATION (REZEROING), OPERATION, Subaru Select Monitor.>

Failure to do so may cause improper activation of passenger's airbag.


- The passenger detection system (passenger seat only) control unit, passenger detection sensor, seat cushion pad and seat cushion frame are considered as a single seat cushion pad and frame assembly. Never remove the passenger detection control unit or the pressure sensor from the seat cushion frame.
- If the seat cushion cover is removed, make sure to replace the hang wire on the seat cushion side with a new wire.
- Make sure to install the hog rings/clips to the specified locations. Do not reuse hog rings.

Assemble in the reverse order of disassembly.


1) Assemble the seat cushion in the reverse order of disassembly.

2) Assemble the backrest in the reverse order of disassembly.

3) When installing the backrest assembly to the seat cushion assembly, fill the gap in the front side of slide rail LH and in the rear side of slide rail RH with cloth etc. in order to stabilize the seat cushion assembly.

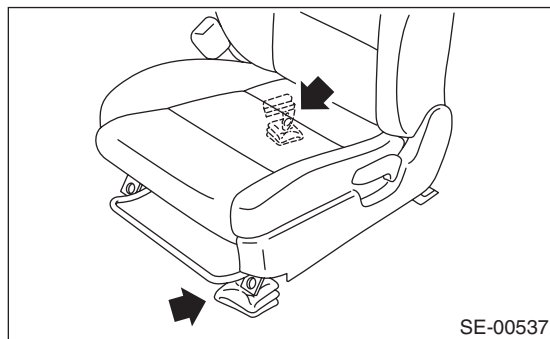

4) Temporarily tighten the reclining hinge bolts in the order of (1) through (4) to an extent that the seat backrest assembly is not held securely.

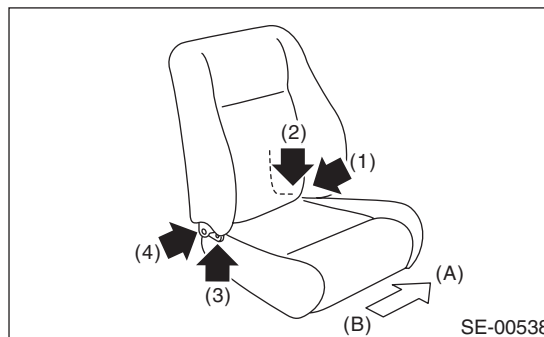

(A) Vehicle inside

(B) Vehicle outside

5) Use the reclining lever to place the backrest in the most upright position, and check the first lock position of recliner.

6) Hold the seat cushion assembly securely, and tighten the reclining hinge bolts in the order described above until they reach the specified torque.

CAUTION:

Do not touch the backrest assembly when tightening the reclining hinge bolts.

7) Assemble each harness, inner belt assembly and each cover in the reverse order of removal.

Tightening torque:

Refer to "**COMPONENT**" of "**General Description**". <Ref. to SE-2, **COMPONENT**, **General Description**.>

E: INSPECTION

Check that no tear or fray on the backrest cover and seat cushion cover.

NOTE:


If the door side of the backrest cover is torn or frayed, the side airbag may not be deployed properly. In this case, replace the backrest cover.

3. Rear Seat


A: REMOVAL

1. (SEDAN MODEL)


1) Remove the two hooks while lifting up the rear seat cushion.

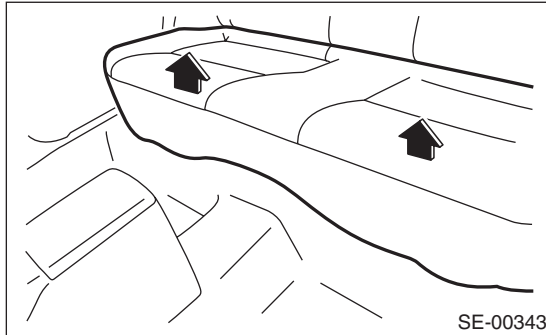


2) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

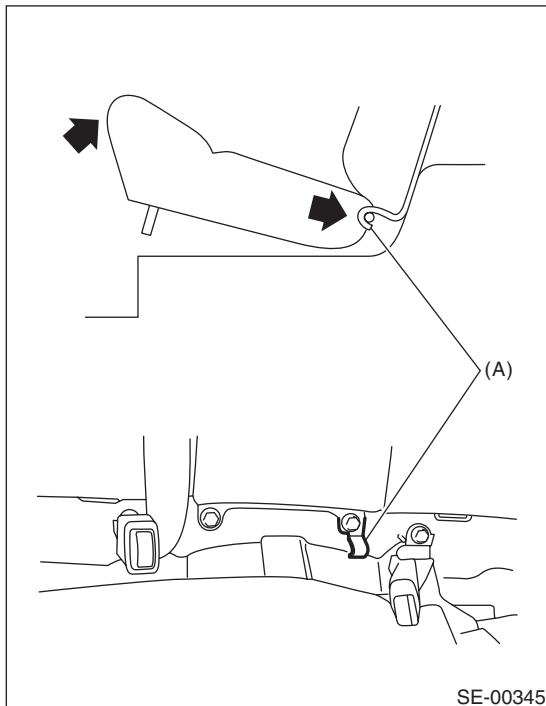


3) Remove the lower anchor bolt of the rear center seat belt.

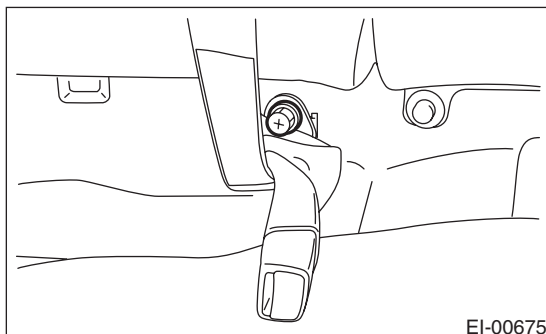

4) Remove the bolts which secure the bottom of the backrest.

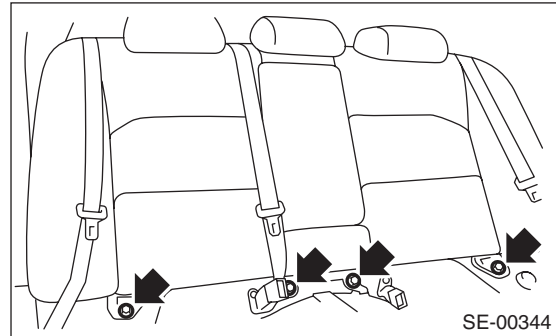


5) Lift the backrest up, detach the backrest side anchor from the body side hook (A), and remove from the vehicle.

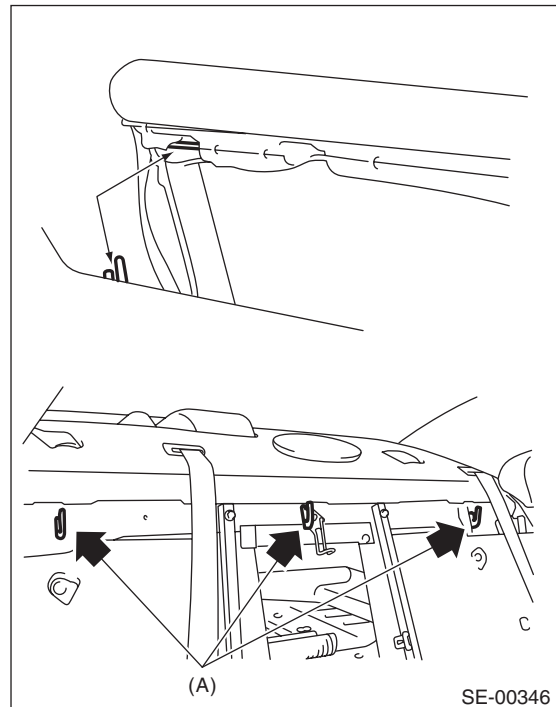

2. (WAGON MODEL)

1) Disconnect the ground cable from battery.


2) Remove the two hooks while lifting up the rear seat cushion.

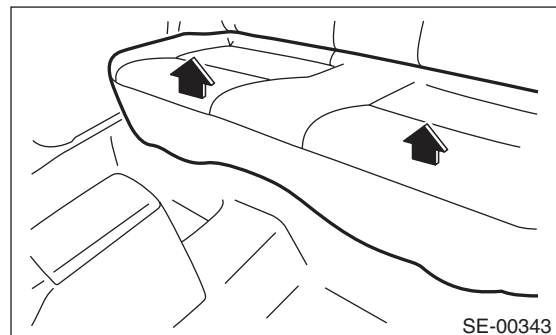

Rear Seat

SEATS


3) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

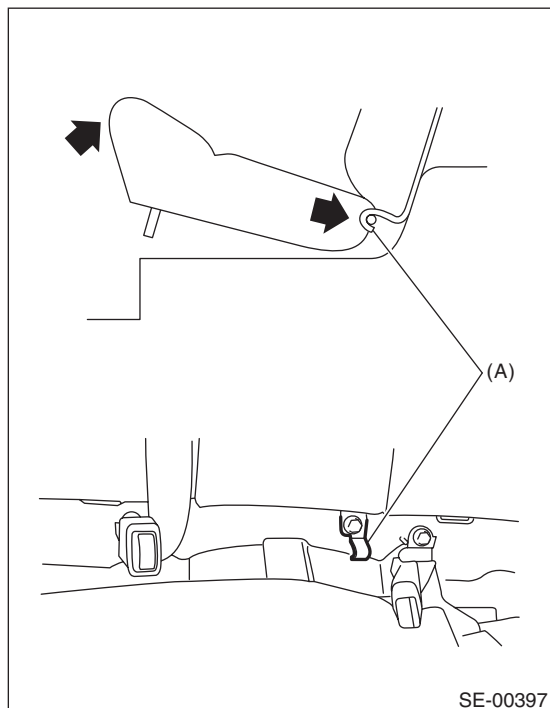


4) Remove the headrest, and then tilt the backrest forward.

5) Remove the luggage floor box. <Ref. to EI-71, REMOVAL, Luggage Floor Box.>

6) Remove the hinge assembly center bolts.

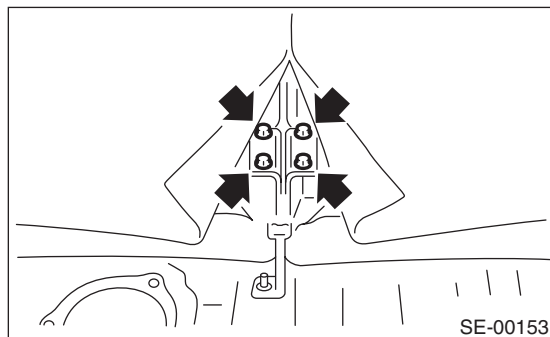


7) Remove the backrest from hinge assembly LH (hinge assembly RH).

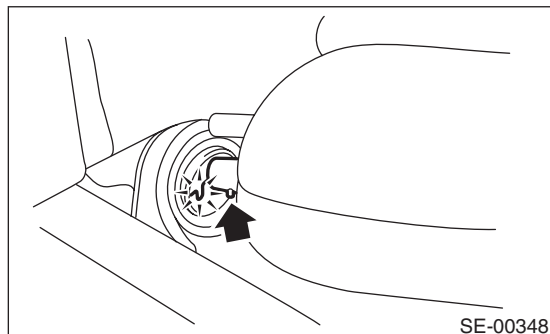


NOTE:


The backrest cannot be detached while the hinge assembly side and the backrest pin are not aligned.
8) Remove the lower anchor bolt (A) of the outer seat belt and backrest shoulder bolt (B).

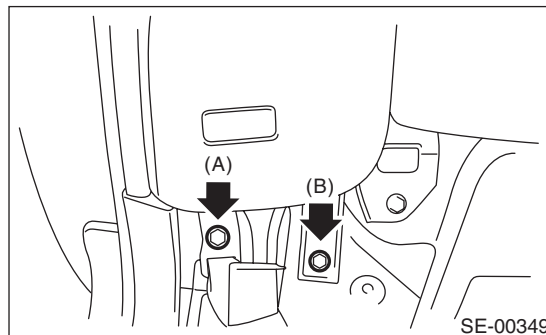

9) Remove the backrest shoulder with lifting it up.

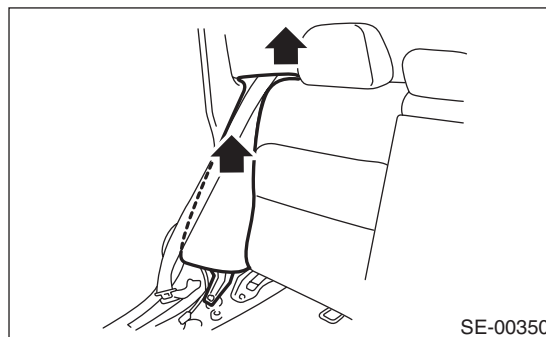

10) Remove the belt cover (A) from the backrest shoulder, then pull the seat belt out.

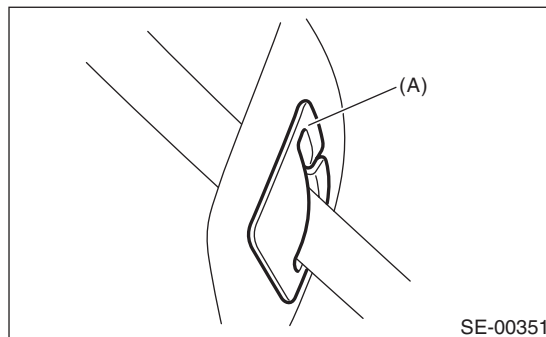

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- After installing the backrest, make sure that each seat belt operates normally.
- Make sure that they are properly secured on each hook on the vehicle side.


Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-2, COMPONENT, General Description.>


C: DISASSEMBLY

1. (SEDAN MODEL)


- 1) Remove the rear seat. <Ref. to SE-17, (SEDAN MODEL), REMOVAL, Rear Seat.>
- 2) Remove the headrest.
- 3) Remove the nuts, then detach the trunk through assembly.

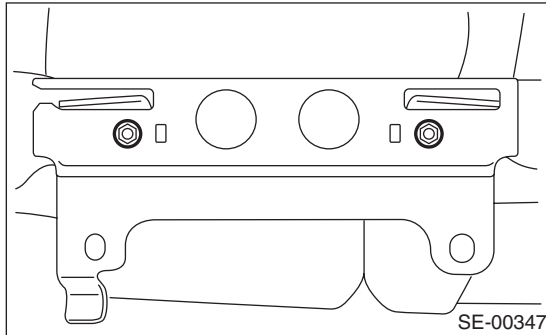


- 4) Remove the hog rings (A) on the rear side of the backrest.

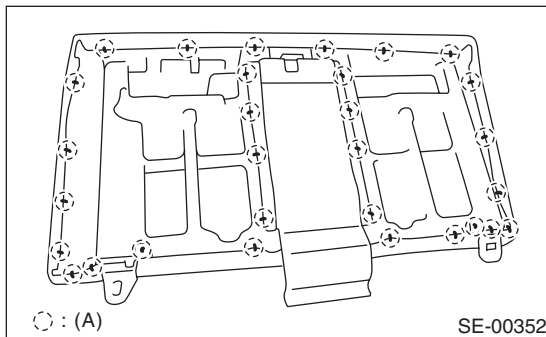


- 5) Remove the hog rings (A) on the front side of the backrest.

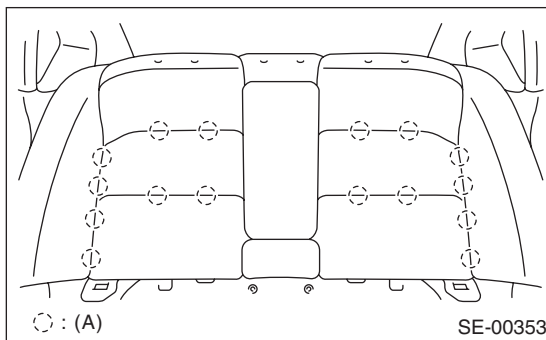


- 6) Remove the armrest hinge covers on both sides, and loosen the screws to remove the armrests.

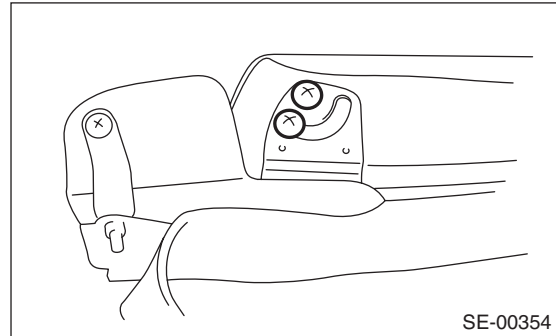


- 7) Remove the hook, and then detach the center through cover.

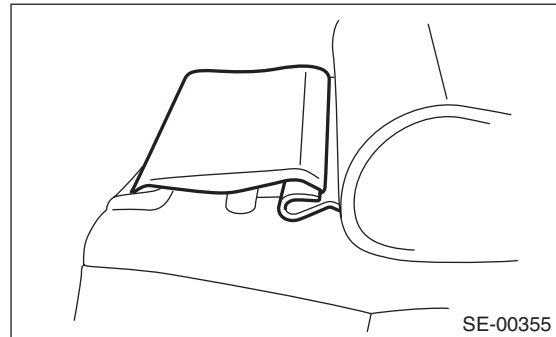

- 8) Remove the hook, and then remove the armrest cover.

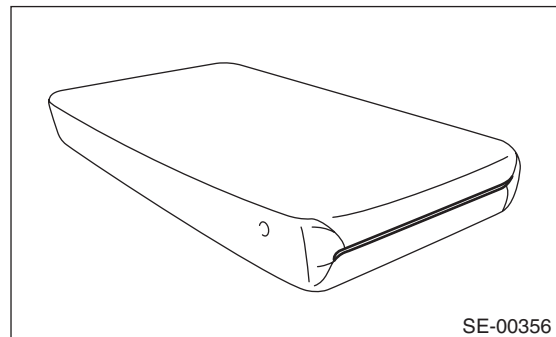


- 9) Remove the hook and hog ring, and then remove the headrest cover.

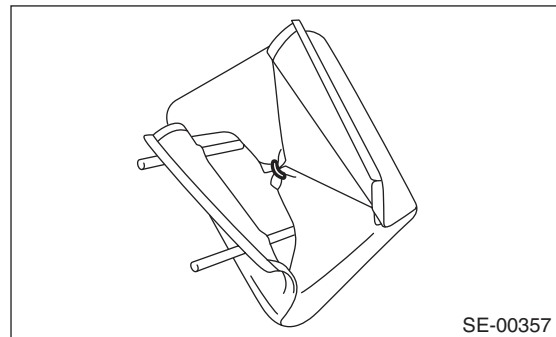


Rear Seat

SEATS

10) Remove the hog rings (A) on the rear side of the seat cushion.

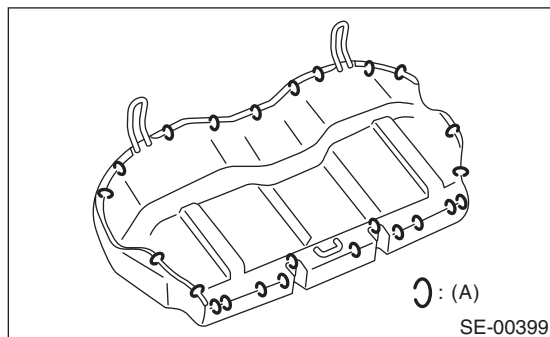


11) Remove the hog rings (A), then remove the seat cushion cover.

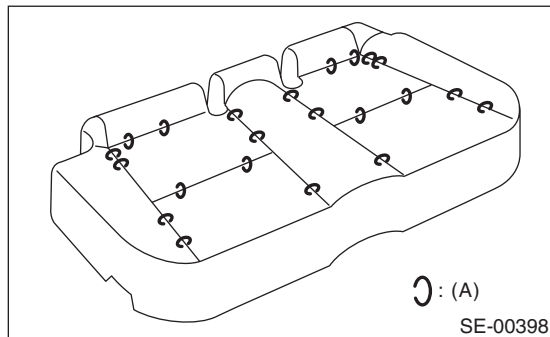


2. (WAGON MODEL)

1) Remove the rear seat. <Ref. to SE-17, (WAGON MODEL), REMOVAL, Rear Seat.>


2) Remove the hooks at the bottom of backrest assembly LH, and then turn over the backrest cover to remove the hog rings (A) and hooks (B).

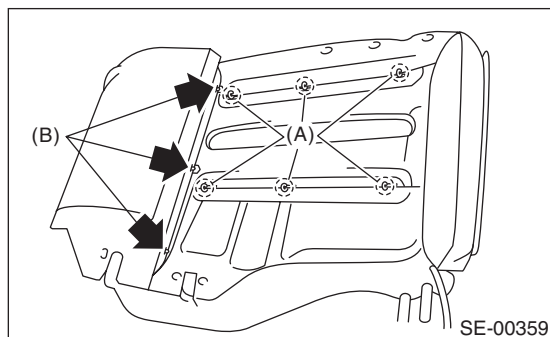


3) Remove the hog rings (A) on the front side of backrest, and then remove the backrest cover.

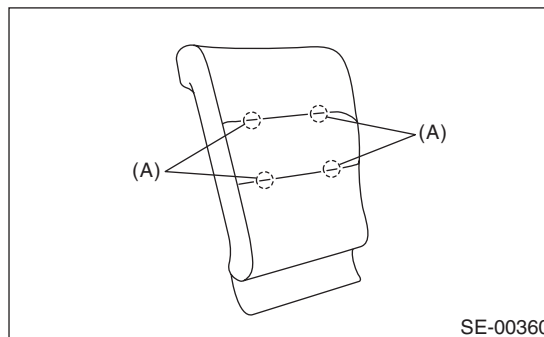

4) Remove the bolts, and then remove the backrest latch.

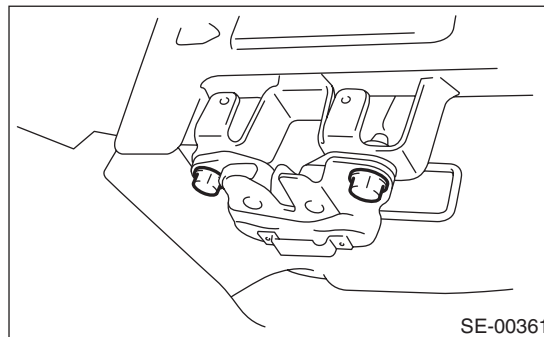

5) Loosen the screws to remove the armrest from backrest assembly RH.

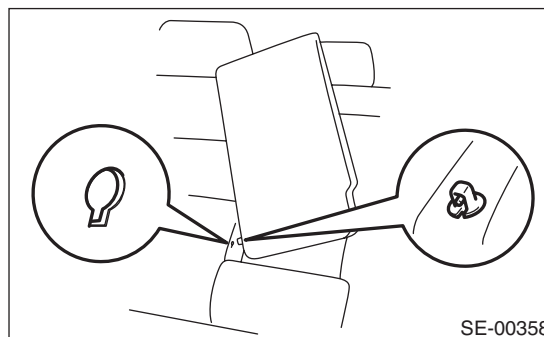


NOTE:


The armrests cannot be detached while the backrest assembly RH and armrest side pin positions are not aligned.

6) After this operation, refer to the step 2) to disassemble the backrest assembly RH.


7) Remove the hook, and then remove the armrest cover.

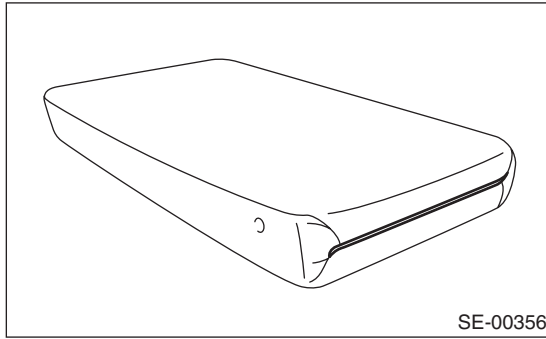


8) Remove the hook and hog ring, and then remove the headrest cover.

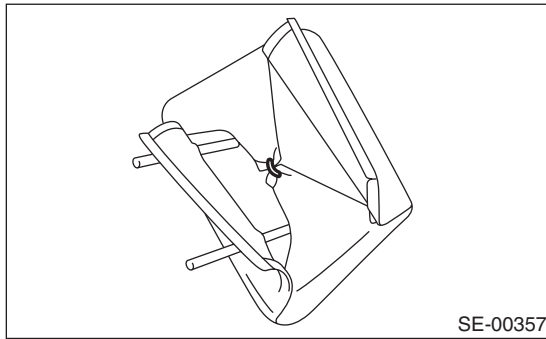

9) Remove the hog rings (A) on the rear side of the seat cushion.

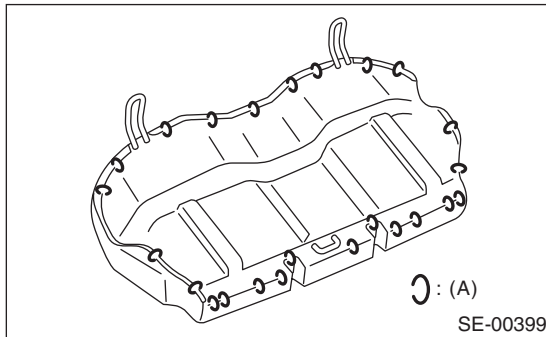

10) Remove the hog rings (A), then remove the seat cushion cover.

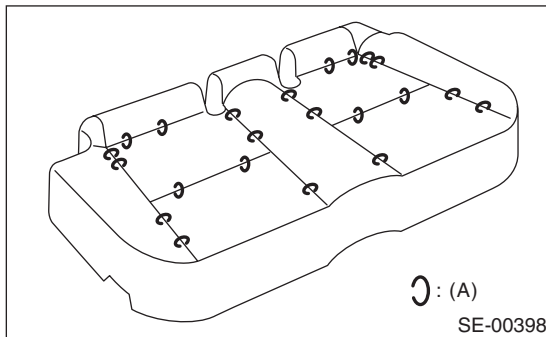

D: ASSEMBLY

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

CAUTION:

- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

E: INSPECTION


Check that no tear or fray on the seat cover.

4. Seat Heater System

A: REMOVAL

1. SEAT HEATER UNIT

- 1) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 2) Remove the backrest cover of front seat and seat cushion cover. <Ref. to SE-9, DISASSEMBLY, Front Seat.>
- 3) Remove the hog rings, and then remove the seat heater unit.

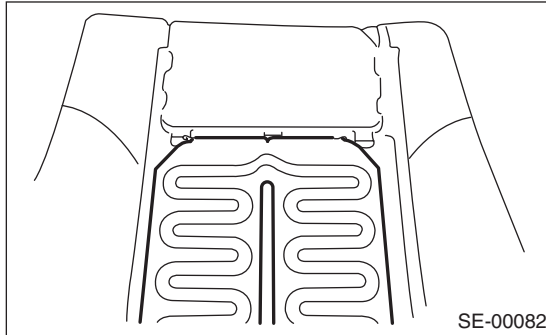

2. SEAT HEATER SWITCH

- 1) Remove the console box. <Ref. to EI-52, REMOVAL, Console Box.>
- 2) Remove the seat heater switch from the console box.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. WIRING DIAGRAM

<Ref. to WI-108, WIRING DIAGRAM, Power Seat System.>

2. SEAT HEATER UNIT


Disconnect the seat heater unit connector, and check the continuity between terminals of connector.

Connector & terminal

No. 1 — No. 3:


No. 1 — No. 4:

No. 3 — No. 4:

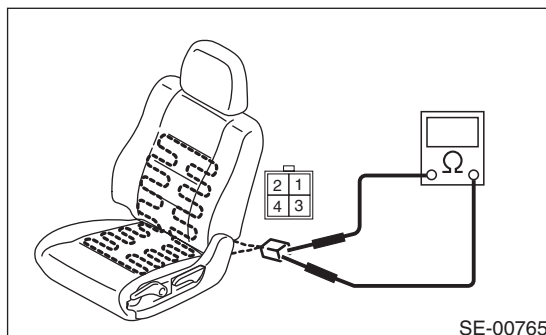

If no continuity exists, replace the seat heater unit with a new part.

3. SEAT HEATER SWITCH

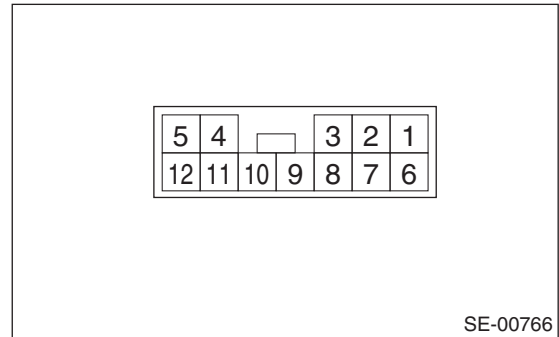

• CHECK THERMISTOR OUTPUT VOLTAGE

- 1) Connect the battery to the connector.

Connector terminals No. 11 (+):

- 2) Measure the voltage between connector and chassis ground.

Connector & terminal:

LHD side seat

(C2) No. 2 (+) — Chassis ground (–):

RHD side seat

(C2) No. 4 (+) — Chassis ground (–):

If voltage is not 1.5 V or more, replace the seat heater switch.

• CHECK SWITCH OUTPUT VOLTAGE

- 1) Connect the battery to the connector.

Connector terminals No. 11 (+):

- 2) Measure the voltage between connector and chassis ground when turning the switch to other than OFF position.

Connector & terminal:

LHD side seat

(C2) No. 10 (+) — Chassis ground (–):

RHD side seat

(C2) No. 5 (+) — Chassis ground (–):

If voltage does not change from 10 V or more to zero, replace the seat heater switch.

SECURITY AND LOCKS

SL

	Page
1. General Description	2
2. Door Lock Control System	7
3. Keyless Entry System	10
4. Security System	25
5. Front Inner Remote	34
6. Front Outer Handle	35
7. Front Door Latch and Door Lock Actuator Assembly	36
8. Front Door Lock Actuator	37
9. Rear Inner Remote	38
10. Rear Outer Handle	39
11. Rear Door Latch and Door Lock Actuator Assembly	40
12. Rear Door Lock Actuator	41
13. Rear Gate Outer Handle	42
14. Rear Gate Latch Assembly	43
15. Trunk Lid Lock Assembly	44
16. Trunk Lid Release Handle	45
17. Front Hood Lock Assembly	46
18. Remote Openers	47
19. Ignition Key Lock	49
20. Key Lock Cylinders	50
21. Security Control Unit	51
22. Impact Sensor	52
23. Keyless Entry Control Module	53
24. Keyless Buzzer	54
25. Body Integrated Unit	55
26. Transmitter	56
27. Immobilizer Control Module	57
28. Immobilizer Antenna	58


General Description

SECURITY AND LOCKS

1. General Description

A: COMPONENT

1. DOOR LOCK ASSEMBLY

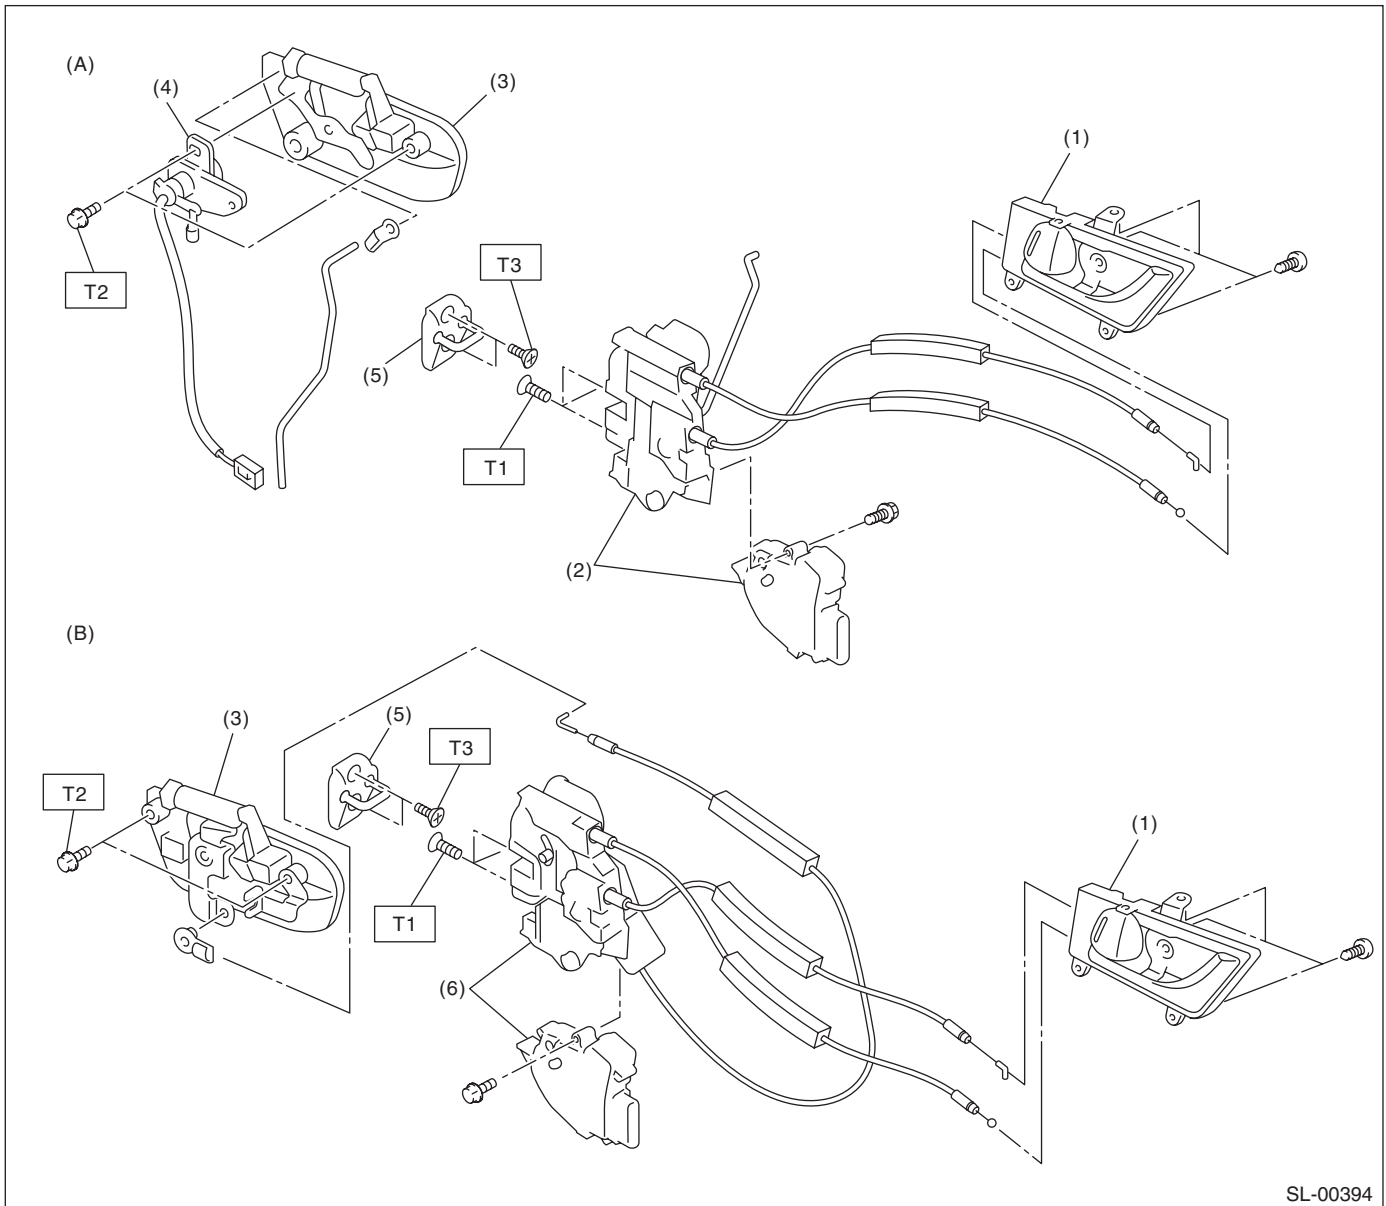

SL-00394

(A) Front

(B) Rear

(1) Inner remote ASSY

(2) Front door latch and door lock actuator ASSY

(3) Door outer handle

(4) Key cylinder (switch)

(5) Striker

(6) Rear door latch and door lock actuator ASSY


Tightening torque: N·m (kgf-m, ft-lb)

T1: 6.5 (0.66, 4.8)

T2: 7.5 (0.76, 5.5)

T3: 18 (1.8, 13.3)

2. TRUNK LID AND REAR GATE LOCK

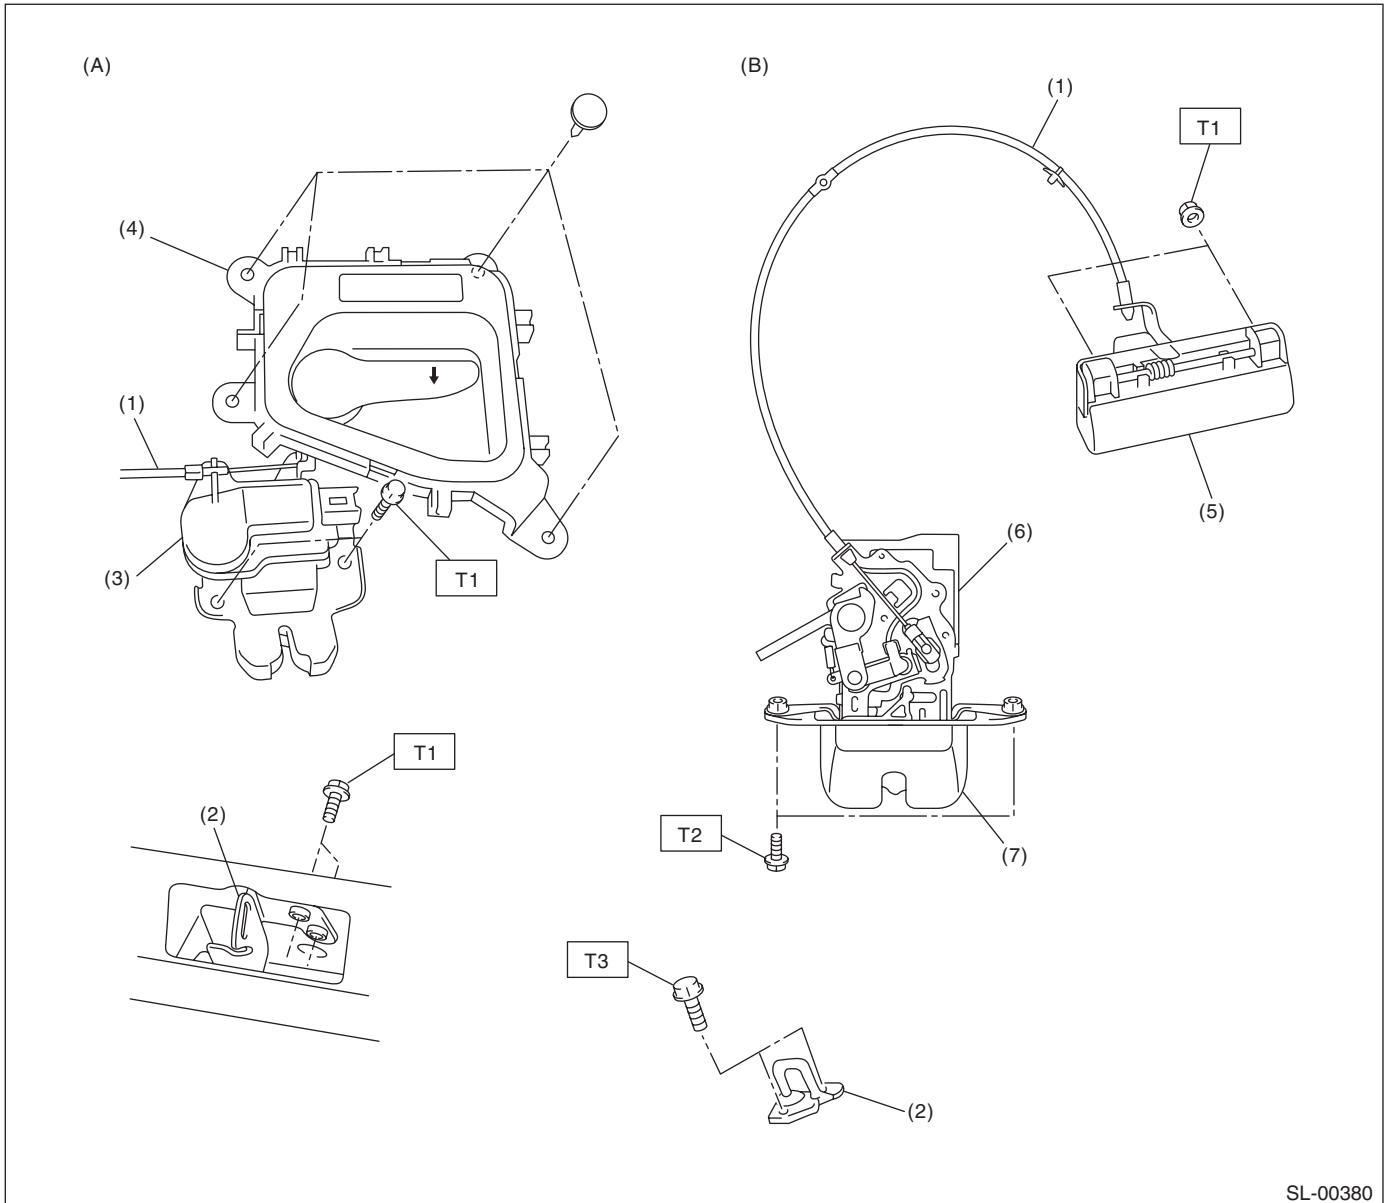

SL-00380

(A) Trunk

(B) Rear Gate

- | | |
|------------------------------|----------------------------|
| (1) Cable | (5) Rear gate outer handle |
| (2) Striker | (6) Rear gate actuator |
| (3) Trunk lid lock ASSY | (7) Rear gate latch |
| (4) Trunk lid release handle | |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)


T2: 18 (1.8, 13.3)

T3: 25 (2.5, 18.4)

General Description

SECURITY AND LOCKS

3. FRONT HOOD LOCK AND REMOTE OPENERS

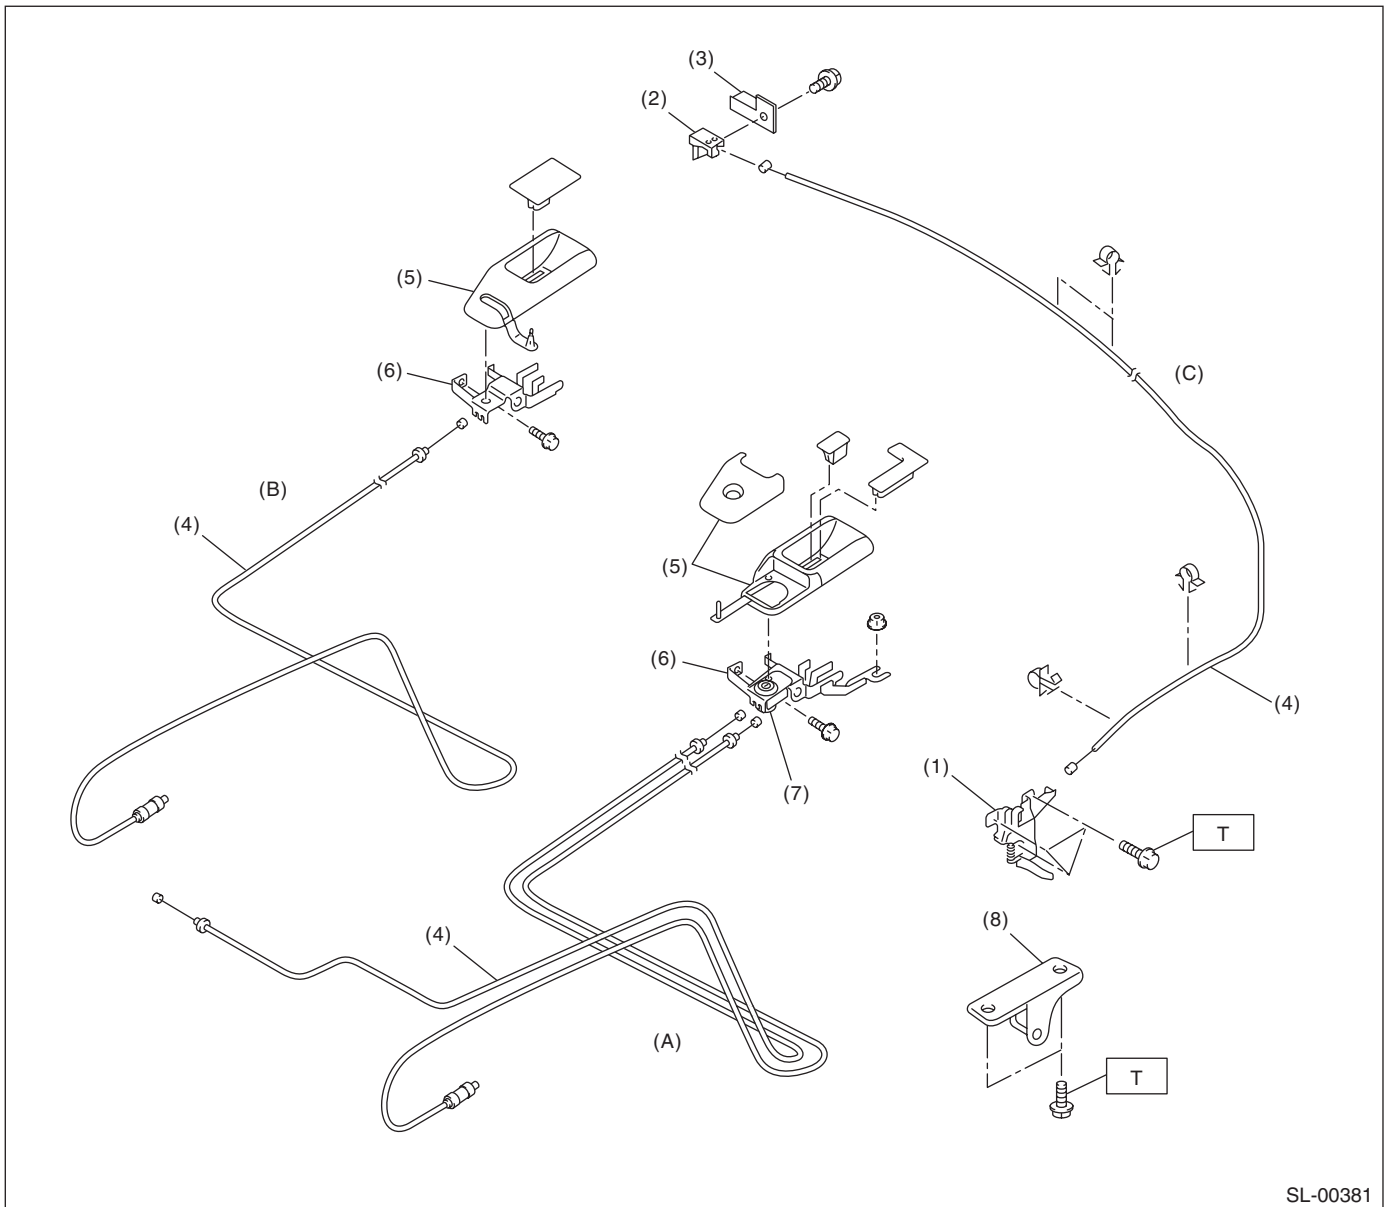

(A) Sedan model

(B) Wagon model

(C) Hood

(1) Front hood lock ASSY

(2) Lever ASSY

(3) Lever ASSY bracket

(4) Cable

(5) Cover

(6) Pull handle ASSY


(7) Key cylinder

(8) Striker

Tightening torque: N·m (kgf-m, ft-lb)

T: 33 (3.36, 24.2)


4. IMMOBILIZER SYSTEM

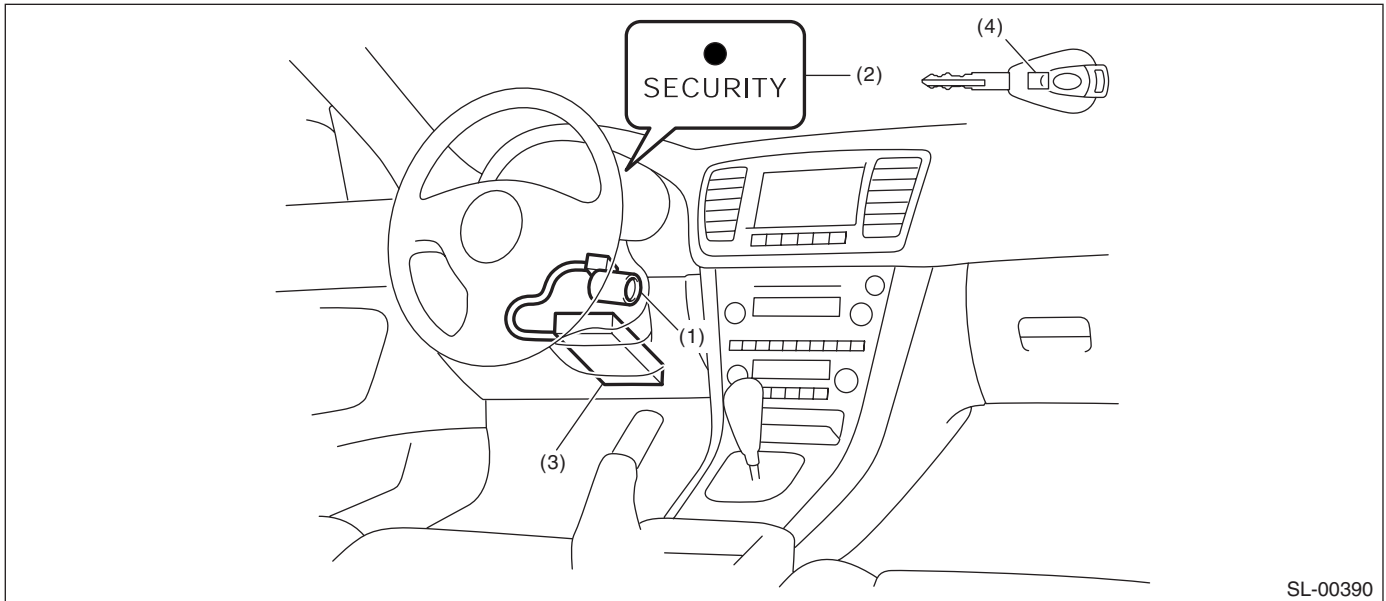

SL-00390

- | | | |
|---|--------------------------|-----------------|
| (1) Antenna | (3) Body integrated unit | (4) Transponder |
| (2) Security indicator light (LED bulb) | | |

5. KEYLESS ENTRY SYSTEM

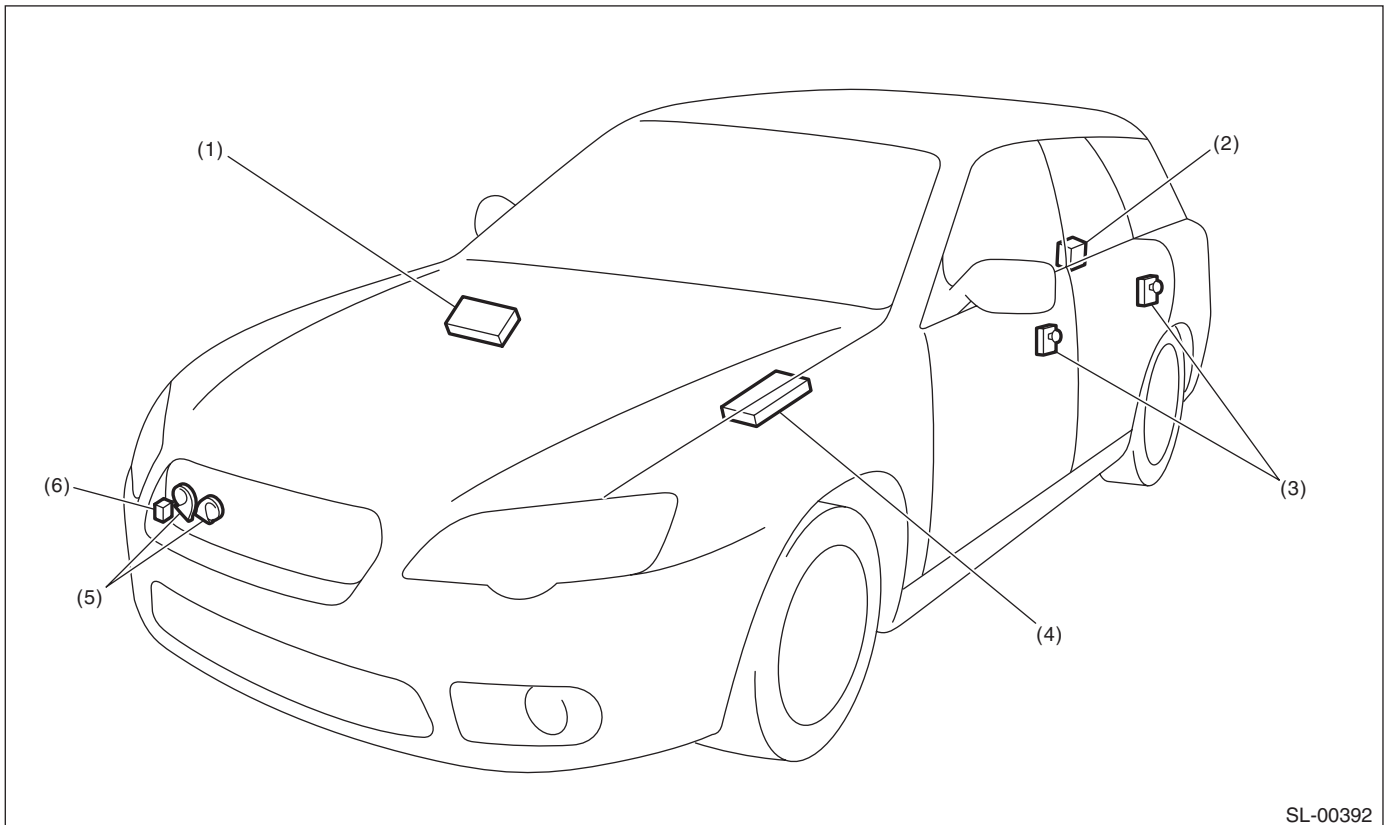

SL-00392

- | | | |
|--|--------------------------|--------------------|
| (1) Keyless entry control module | (3) Door switch | (5) Horn |
| (2) Rear gate latch switch (Wagon model) | (4) Body integrated unit | (6) Keyless buzzer |

General Description


SECURITY AND LOCKS

B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When repairing the audio, control module, etc. which are provided with memory functions, record the memory contents before disconnecting the ground cable from battery. Otherwise, these contents are erased upon disconnection.
- Reassemble the parts in the reverse order of disassembly unless otherwise indicated.
- Adjust the parts to the specifications described in this manual if so designated.
- Connect the connectors securely during reassembly.
- After reassembly, make sure all the functional parts operate smoothly.
- The airbag system wiring harness is routed near electrical parts and switches.
- Airbag system wiring harnesses and connectors are yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the ignition key cylinder.

C: PREPARATION TOOL

1. SPECIAL TOOL

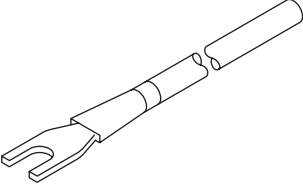ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-925580000	925580000	PULLER	Used for removing trim clip

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Drill	Used for replacing ignition key lock.
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.

2. Door Lock Control System

A: WIRING DIAGRAM

1. DOOR LOCK CONTROL

<Ref. to WI-166, WIRING DIAGRAM, Keyless Entry System.>

B: INSPECTION

1. SYMPTOM CHART

Symptom	Repair order	Reference
The door lock control system does not operate.	1. Check the fuse.	<Ref. to SL-7, CHECK FUSE, INSPECTION, Door Lock Control System.>
	2. Check the power supply and ground circuit for body integrated unit.	<Ref. to SL-8, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Door Lock Control System.>
	3. Check the door lock switch and the circuit.	<Ref. to SL-8, CHECK DOOR LOCK SWITCH., INSPECTION, Door Lock Control System.>
	4. Check the door lock actuator and the circuit.	<Ref. to SL-9, CHECK DOOR LOCK ACTUATOR AND CIRCUIT, INSPECTION, Door Lock Control System.>
The door lock switch does not operate.	Check the door lock switch.	<Ref. to SL-8, CHECK DOOR LOCK SWITCH., INSPECTION, Door Lock Control System.>
A specific door lock actuator does not operate.	Check the door lock actuator and circuit.	<Ref. to SL-9, CHECK DOOR LOCK ACTUATOR AND CIRCUIT, INSPECTION, Door Lock Control System.>

2. CHECK FUSE

Step	Check	Yes	No
1 CHECK FUSE. Remove and visually check the fuse No. 3 (in the fuse & relay box) and No. 7 (in the fuse & relay box).	Is the fuse blown out?	Replace the fuse with a new part.	Check the power supply and ground circuit. <Ref. to SL-8, CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Door Lock Control System.>

Door Lock Control System

SECURITY AND LOCKS

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Step	Check	Yes	No
1 CHECK POWER SUPPLY. 1) Disconnect the harness connector of body integrated unit. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal <i>(i84) No. 34 (+) — Chassis ground (-):</i> <i>(B281) No. 2 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 2.	Check the harness for open or short circuit between body integrated unit and fuse.
2 CHECK GROUND CIRCUIT. Measure the resistance between harness connector terminal and chassis ground. Connector & terminal <i>(B280) No. 22 — Chassis ground:</i> <i>(B281) No. 8, 9 — Chassis ground:</i>	Is the resistance less than 10 Ω ?	The power supply and ground circuit are OK.	Repair the harness.

4. CHECK DOOR LOCK SWITCH.

Step	Check	Yes	No
1 CHECK DOOR LOCK SWITCH. Check the input from door lock switch to body integrated unit using Subaru Select Monitor. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the input to body integrated unit by operating the door lock switch.	Is the normal input signal displayed when the door lock switch is moved to LOCK/UNLOCK?	The door lock switch is OK.	Go to step 2.
2 CHECK DOOR LOCK SWITCH CIRCUIT. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between the harness connector terminal and chassis ground when moving the door lock switch to LOCK. Connector & terminal <i>(i84) No. 15 — Chassis ground:</i>	Is the resistance less than 10 Ω ?	Go to step 3.	Go to step 4.
3 CHECK DOOR LOCK SWITCH CIRCUIT. Measure the resistance between the harness connector terminal and chassis ground when the door lock switch is moved to UNLOCK. Connector & terminal <i>(i84) No. 29 — Chassis ground:</i>	Is the resistance less than 10 Ω ?	The door lock switch is OK.	Go to step 4.
4 CHECK DOOR LOCK SWITCH. 1) Disconnect the door lock switch harness connector. 2) Measure the resistance between the door lock switch terminals when moving the door lock switch to LOCK. Connector & terminal Driver's side: <i>(D7) No. 4 — No. 7:</i> Passenger's side: <i>(D125) No. 4 — No. 3:</i>	Is the resistance less than 1 Ω ?	Go to step 5.	Replace the door lock switch.

Step	Check	Yes	No
5 CHECK DOOR LOCK SWITCH. Measure the resistance between the door lock switch terminals when moving the door lock switch to UNLOCK. Connector & terminal Driver's side: (D7) No. 5 — No. 7: Passenger's side: (D125) No. 1 — No. 3:	Is the resistance less than 1 Ω ?	Check the harness for open circuits or shorts between the body integrated unit and the door lock switch.	Replace the door lock switch.

5. CHECK DOOR LOCK ACTUATOR AND CIRCUIT

Step	Check	Yes	No
1 CHECK OUTPUT SIGNAL. Measure the voltage between the harness connector terminal and chassis ground of body integrated unit when moving the door lock switch to LOCK. Connector & terminal (i84) No. 7 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
2 CHECK OUTPUT SIGNAL. Measure the voltage between the harness connector terminal and chassis ground of body integrated unit when moving the door lock switch to UNLOCK. Connector & terminal Driver's side: (i84) No. 23 (+) — Chassis ground (-): Except for driver's side: (i84) No. 8 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
3 CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL. Measure the voltage between the harness connector terminal of the power window main switch and chassis ground when moving the door lock switch to LOCK. Connector & terminal (D7) No. 4 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 4.	Replace the power window main switch. <Ref. to GW-9, Power Window Control Switch.>
4 CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL. Measure the voltage between the harness connector terminal of power window main switch and chassis ground when moving the door lock switch to UNLOCK. Connector & terminal (D7) No. 5 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 5.	Replace the power window main switch. <Ref. to GW-9, Power Window Control Switch.>
5 CHECK DOOR LOCK ACTUATOR. Check the door lock actuator. • Front door lock actuator <Ref. to SL-37, Front Door Lock Actuator.> • Rear door lock actuator <Ref. to SL-41, Rear Door Lock Actuator.> • Rear gate latch lock actuator <Ref. to SL-43, Rear Gate Latch Assembly.>	Is the door lock actuator OK?	Check the harness for open or short circuits between body integrated unit and door lock actuator.	Replace the door lock actuator.

Keyless Entry System

SECURITY AND LOCKS

3. Keyless Entry System


A: WIRING DIAGRAM

1. KEYLESS ENTRY

<Ref. to WI-166, WIRING DIAGRAM, Keyless Entry System.>


B: ELECTRICAL SPECIFICATION

1. KEYLESS ENTRY CONTROL MODULE

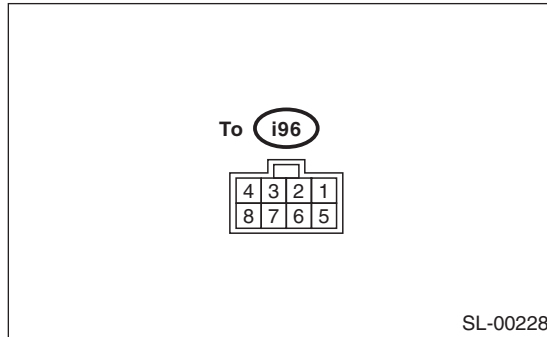

Remarks	Terminal No.	Measuring condition
Body integrated unit	3 (OUTPUT)	Battery voltage cannot be measured because of digital signal.
Power supply (Backup)	4	Battery voltage is constantly present.
Ground	7	0 V is constantly present.

2. BODY INTEGRATED UNIT

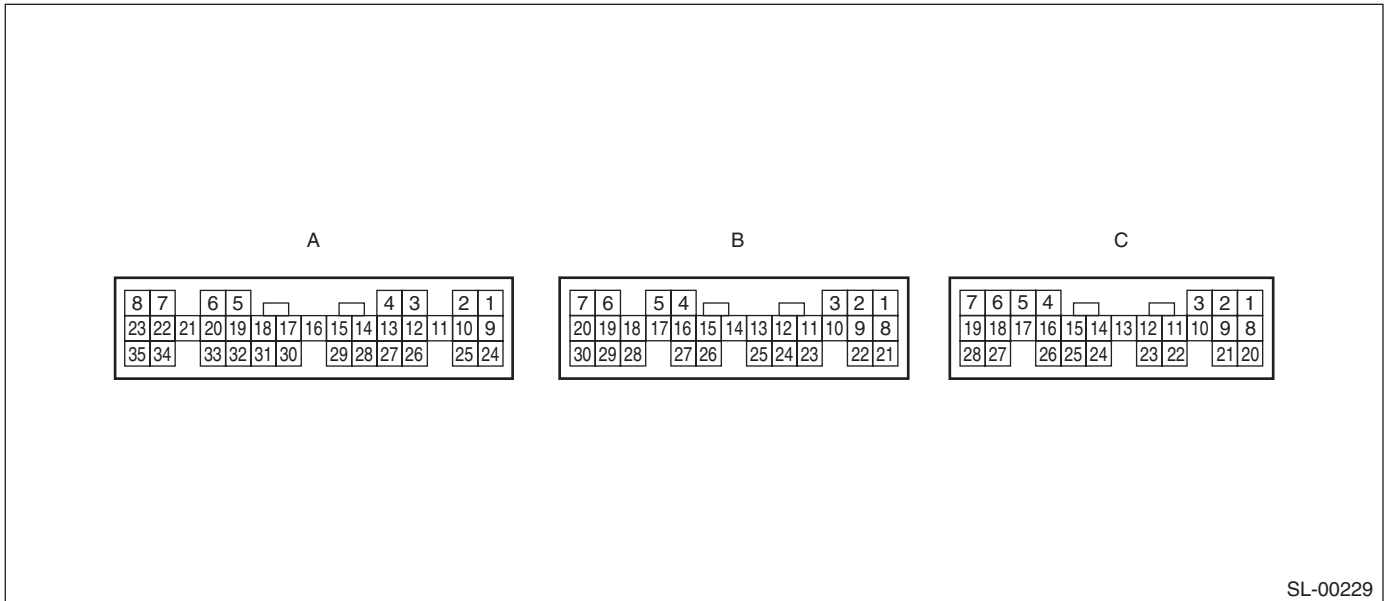

SL-00229

Remarks	Terminal No.	Measuring condition
Ignition switch (ON)	A1 (INPUT)	Battery voltage is present when ignition switch is turned to ON.
Keyless buzzer	A6 (INPUT)	0 V is present when pressing the LOCK or UNLOCK button of transmitter.
Driver's side front door lock actuator	A7 (OUTPUT)	Battery voltage is present when pressing the transmitter LOCK button.
Door and rear gate lock actuator	A8 (OUTPUT)	Battery voltage is present when pressing the transmitter UNLOCK button.
Keyless entry control module	A9 (INPUT)	Communication line (Cannot be measured because of digital signal)
Trunk lid switch or rear gate latch switch	A17 (INPUT)	0 V is present when opening the trunk lid or rear gate.
Rear door switch RH	A18 (INPUT)	0 V is present when opening the rear door RH.
Front door switch RH	A19 (INPUT)	0 V is present when opening the front door RH.
Ground	A21	0 V is constantly present.
Trunk lid actuator	A22 (OUTPUT)	Battery voltage is present when pressing the TRUNK button of the transmitter.
Driver's side front door lock actuator	A23 (OUTPUT)	Battery voltage is present when pressing the transmitter UNLOCK button.
Driver's side power window main switch (door lock switch) Passenger's side door lock switch	A15	0 V is present when pressing the door lock switch to the LOCK side.
	A29	0 V is present when pressing the door lock switch to the UNLOCK side.
Rear door switch LH	A31 (INPUT)	0 V is present when opening the rear door LH.
Front door switch LH	A32 (INPUT)	0 V is present when opening the front door LH.
Power supply	A34	Battery voltage is constantly present.
Room light	B3 (INPUT)	0 V is present when pressing the UNLOCK button of keyless transmitter. 0 V is present when opening the door.
Power supply	B7	Battery voltage is constantly present.
Horn circuit	B11 (INPUT)	0 V is present when pressing the panic button of transmitter
Turn signal & hazard circuit	B12 (OUTPUT)	0 V is present when pressing the LOCK or UNLOCK button of transmitter.
Ground	B22	0 V is constantly present.
Power supply	C1	Battery voltage is constantly present.
Power supply	C2	Battery voltage is constantly present.
Key warning switch	C7 (INPUT)	Battery voltage is present when inserting the key into ignition switch.
Ground	C8	0 V is constantly present.
Ground	C9	0 V is constantly present.

Keyless Entry System

SECURITY AND LOCKS

C: INSPECTION

1. SYMPTOM CHART

Symptom	Repair order	Reference
None of the functions of the keyless entry system operate.	1. Check the transmitter battery.	<Ref. to SL-14, CHECK KEYLESS TRANSMITTER BATTERY AND FUNCTION, INSPECTION, Keyless Entry System.>
	2. Check the fuse.	<Ref. to SL-15, CHECK FUSE, INSPECTION, Keyless Entry System.>
	3. Check the keyless entry control module.	<Ref. to SL-15, CHECK KEYLESS ENTRY CONTROL MODULE, INSPECTION, Keyless Entry System.>
	4. Check the power supply and ground circuit for body integrated unit.	<Ref. to SL-16, CHECK BODY INTEGRATED UNIT POWER SUPPLY AND GROUND CIRCUIT., INSPECTION, Keyless Entry System.>
	5. Check the key warning switch.	<Ref. to SL-18, CHECK KEY WARNING SWITCH, INSPECTION, Keyless Entry System.>
	6. Check the door switch.	<Ref. to SL-17, CHECK DOOR SWITCH, INSPECTION, Keyless Entry System.>
	7. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
The keyless transmitter cannot be registered.	1. Check the key warning switch.	<Ref. to SL-18, CHECK KEY WARNING SWITCH, INSPECTION, Keyless Entry System.>
	2. Check the door lock switch signal.	<Ref. to SL-21, CHECK DOOR LOCK SWITCH., INSPECTION, Keyless Entry System.>
	3. Check the ignition switch.	<Ref. to SL-24, CHECK IGNITION SWITCH., INSPECTION, Keyless Entry System.>
	4. Check the door switch.	<Ref. to SL-17, CHECK DOOR SWITCH, INSPECTION, Keyless Entry System.>
	5. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
Door lock or unlock does not operate. NOTE: If the door lock control system does not operate when using the door lock switch, check the door lock control system. <Ref. to SL-7, INSPECTION, Door Lock Control System.>	1. Check the transmitter battery.	<Ref. to SL-14, CHECK KEYLESS TRANSMITTER BATTERY AND FUNCTION, INSPECTION, Keyless Entry System.>
	2. Check the keyless entry control module.	<Ref. to SL-15, CHECK KEYLESS ENTRY CONTROL MODULE, INSPECTION, Keyless Entry System.>
	3. Check the key warning switch.	<Ref. to SL-18, CHECK KEY WARNING SWITCH, INSPECTION, Keyless Entry System.>
	4. Check the door switch.	<Ref. to SL-17, CHECK DOOR SWITCH, INSPECTION, Keyless Entry System.>
	5. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>

Keyless Entry System

SECURITY AND LOCKS

Symptom	Repair order	Reference
The panic alarm does not operate.	1. Check the keyless transmitter battery and function.	<Ref. to SL-14, CHECK KEYLESS TRANSMITTER BATTERY AND FUNCTION, INSPECTION, Keyless Entry System.>
	2. Check the horn operation.	<Ref. to SL-22, CHECK HORN OPERATION., INSPECTION, Keyless Entry System.>
	3. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
Trunk lid unlock does not operate. (Sedan model)	1. Check the transmitter battery.	<Ref. to SL-14, CHECK KEYLESS TRANSMITTER BATTERY AND FUNCTION, INSPECTION, Keyless Entry System.>
	2. Check the keyless entry control module.	<Ref. to SL-15, CHECK KEYLESS ENTRY CONTROL MODULE, INSPECTION, Keyless Entry System.>
	3. Check the key warning switch.	<Ref. to SL-18, CHECK KEY WARNING SWITCH, INSPECTION, Keyless Entry System.>
	4. Check the trunk lid lock actuator.	<Ref. to SL-20, CHECK TRUNK LID LOCK ACTUATOR, INSPECTION, Keyless Entry System.>
	5. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
Buzzer and hazard light do not operate.	1. Check the buzzer operation.	<Ref. to SL-23, CHECK KEYLESS BUZZER, INSPECTION, Keyless Entry System.>
	2. Check the hazard light operation.	<Ref. to SL-19, CHECK HAZARD LIGHT OPERATION, INSPECTION, Keyless Entry System.>
	3. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
Room light does not operate.	1. Check the room light operation.	<Ref. to SL-18, CHECK ROOM LIGHT OPERATION, INSPECTION, Keyless Entry System.>
	2. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
Ignition switch illumination does not operate.	1. Check the ignition switch illumination.	<Ref. to SL-22, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>
	2. Check the body integrated unit.	<Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>

Keyless Entry System

SECURITY AND LOCKS

2. CHECK KEYLESS TRANSMITTER BATTERY AND FUNCTION

Step	Check	Yes	No
1 CHECK KEYLESS TRANSMITTER BATTERY. 1) Remove the battery from the transmitter. <Ref. to SL-56, REMOVAL, Transmitter.> 2) Check the battery voltage. <Ref. to SL-56, INSPECTION, Transmitter.>	Is the voltage more than 2.5 V?	Go to step 2.	Replace the transmitter battery. <Ref. to SL-56, Transmitter.>
2 CHECK KEYLESS TRANSMITTER. Register the keyless transmitter which operates normally on other vehicles to the inspection target vehicle. <Ref. to SL-56, REGISTRATION OF KEYLESS TRANSMITTER WITH SUBARU SELECT MONITOR, REPLACEMENT, Transmitter.> 1) Close all the doors and rear gate of inspection target vehicle. 2) Using the keyless transmitter, lock and unlock the doors and rear gate of vehicle.	Is the inspection target vehicle operates lock and unlock normally?	Go to step 3.	Due to vehicle malfunction, continue the keyless entry system diagnosis.
3 CHECK KEYLESS TRANSMITTER. Register the keyless transmitter of inspection target vehicle to the another vehicle which the keyless system operates normally. <Ref. to SL-56, REGISTRATION OF KEYLESS TRANSMITTER WITH SUBARU SELECT MONITOR, REPLACEMENT, Transmitter.>	Is the keyless transmitter registered correctly?	Go to step 4.	Replace the keyless transmitter. <Ref. to SL-56, REGISTRATION OF KEYLESS TRANSMITTER WITH SUBARU SELECT MONITOR, REPLACEMENT, Transmitter.>
4 CHECK KEYLESS TRANSMITTER. Check the registered keyless transmitter. 1) Close all the doors and rear gate of the vehicle which operates keyless system normally. 2) Using the keyless transmitter, lock and unlock the doors and rear gate of vehicle.	Does the vehicle operates lock and unlock normally?	The keyless transmitter is OK.	Replace the keyless transmitter. <Ref. to SL-56, REGISTRATION OF KEYLESS TRANSMITTER WITH SUBARU SELECT MONITOR, REPLACEMENT, Transmitter.>

CAUTION:

Be sure to reset the keyless transmitter of other vehicle which is registered to the inspection target vehicle, and the vehicle to which the keyless transmitter is registered for inspection, to the condition before performing the inspection. (Register the keyless transmitter again.)

3. CHECK FUSE

Step	Check	Yes	No
1 CHECK FUSE. Remove and visually check the fuse No. 3 (in the fuse & relay box) and No. 7 (in the fuse & relay box).	Is the fuse blown out?	Replace the fuse with a new part.	Check the power supply and ground circuit. <Ref. to SL-16, CHECK BODY INTEGRATED UNIT POWER SUPPLY AND GROUND CIRCUIT., INSPECTION, Keyless Entry System.>

4. CHECK KEYLESS ENTRY CONTROL MODULE

Step	Check	Yes	No
1 CHECK DIAGNOSTIC TROUBLE CODE (DTC). 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Diagnostic Trouble Code}. 5) Check that the DTC is displayed.	Is DTC B0500 "Keyless UART com. Malfunction" displayed?	Go to step 2.	Keyless entry control module is normal.
2 CHECK POWER SUPPLY. 1) Disconnect the keyless entry control module harness connector. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal <i>(i96) No. 4 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open circuits and shorts between the keyless entry control module and fuse.
3 CHECK GROUND CIRCUIT. Measure the resistance between harness connector terminal and chassis ground. Connector & terminal <i>(i96) No. 7 — Chassis ground:</i>	Is the resistance less than 10 Ω?	Go to step 4.	Repair the harness.
4 CHECK KEYLESS ENTRY CONTROL MODULE CIRCUIT. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between harness connector terminals. Connector & terminal <i>(i84) No. 9 — (i96) No. 3:</i>	Is the resistance less than 10 Ω?	Replace the keyless entry control module. <Ref. to SL-53, Keyless Entry Control Module.>	Repair the harness.

Keyless Entry System

SECURITY AND LOCKS

5. CHECK BODY INTEGRATED UNIT POWER SUPPLY AND GROUND CIRCUIT.

Step	Check	Yes	No
1 CHECK POWER SUPPLY OF BODY INTEGRATED UNIT. 1) Disconnect the harness connector of body integrated unit. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B280) No. 7 (+) — Chassis ground (-): (B281) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Check the harness for open or short between body integrated unit and fuse.
2 CHECK BODY INTEGRATED UNIT GROUND CIRCUIT. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between harness connector terminal and chassis ground. Connector & terminal (B280) No. 22 — Chassis ground: (B281) No. 8 — Chassis ground: (B281) No. 9 — Chassis ground:	Is the resistance less than 10 Ω ?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Repair the harness.

6. CHECK DOOR SWITCH

Step	Check	Yes	No
1 CHECK DOOR SWITCH CIRCUIT. Measure the voltage between the body integrated unit harness connector terminal and chassis ground. Connector & terminal Front door RH: (i84) No. 32 (+) — Chassis ground (-): Front door LH: (i84) No. 19 (+) — Chassis ground (-): Rear door RH: (i84) No. 18 (+) — Chassis ground (-): Rear door LH: (i84) No. 31 (+) — Chassis ground (-): Rear gate: (i84) No. 17 (+) — Chassis ground (-):	Is the voltage 0 V when each door or rear gate is opened?	Go to step 2.	Go to step 3.
2 CHECK DOOR SWITCH CIRCUIT. Measure the voltage between the body integrated unit harness connector terminal and chassis ground. Connector & terminal Front door RH: (i84) No. 32 (+) — Chassis ground (-): Front door LH: (i84) No. 19 (+) — Chassis ground (-): Rear door RH: (i84) No. 18 (+) — Chassis ground (-): Rear door LH: (i84) No. 31 (+) — Chassis ground (-): Rear gate: (i84) No. 17 (+) — Chassis ground (-):	Is the voltage more than 10 V when each door or rear gate is closed?	The door switch is OK.	Go to step 3.
3 CHECK DOOR SWITCH. 1) Disconnect the door switch harness connector. 2) Measure the resistance between door switch terminals. Connector & terminal (R12) Front RH door switch: (R9) Front LH door switch: (R16) Rear RH door switch: (R22) Rear LH door switch: No. 1 — No. 3: Rear gate latch switch (Wagon model): (D46) No. 1 — No. 2:	Is the resistance more than 1 M Ω when door switch is pushed?	Go to step 4.	Replace the door switch.
4 CHECK DOOR SWITCH. Measure the resistance between door switch terminals. Connector & terminal (R12) Front RH door switch: (R9) Front LH door switch: (R16) Rear RH door switch: (R22) Rear LH door switch: No. 1 — No. 3: Rear gate latch switch (Wagon model): (D46) No. 1 — No. 2:	Is the resistance less than 1 Ω when door switch is released?	Check the harness for open or short between body integrated unit and door switch.	Replace the door switch.

Keyless Entry System

SECURITY AND LOCKS

7. CHECK KEY WARNING SWITCH

Step	Check	Yes	No
1 CHECK FUSE. Remove and visually check the fuse No. 14 (in the main fuse box).	Is the fuse blown out?	Replace the fuse with a new part.	Go to step 2.
2 CHECK KEY WARNING SWITCH CIRCUIT. 1) Disconnect the harness connector of body integrated unit. 2) Insert the key into ignition switch. (LOCK position) 3) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B281) No. 7 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Go to step 4.
3 CHECK KEY WARNING SWITCH CIRCUIT. 1) Remove the key from ignition switch. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B281) No. 7 (+) — Chassis ground (-):	Is the voltage 0 V?	The key warning switch is OK.	Go to step 4.
4 CHECK KEY WARNING SWITCH. 1) Disconnect the key warning switch harness connector. 2) Insert the key into ignition switch. (LOCK position) 3) Measure the resistance between key warning switch terminals. Connector & terminal (B350) No. 3 — No. 4:	Is the resistance less than 1 Ω ?	Go to step 5.	Replace the key warning switch.
5 CHECK KEY WARNING SWITCH. 1) Remove the key from ignition switch. 2) Measure the resistance between key warning switch terminals. Connector & terminal (B350) No. 3 — No. 4:	Is the resistance more than 1 M Ω ?	Check the following: • Harness for open circuits and shorts between the key warning switch and fuse • Harness for open or short between the body integrated unit and key warning switch	Replace the key warning switch.

8. CHECK ROOM LIGHT OPERATION

Step	Check	Yes	No
1 CHECK ROOM LIGHT OPERATION. Make sure the room light illuminates when the room light switch is turned to ON.	Does the room light illuminate?	Go to step 2.	Check the room light circuit.
2 CHECK HARNESS BETWEEN ROOM LIGHT AND BODY INTEGRATED UNIT. 1) Disconnect the body integrated unit harness connector and room light harness connector. 2) Measure the resistance between the body integrated unit harness connector terminal and room light harness connector terminal. Connector & terminal (B280) No. 3 — (R52) No. 2:	Is the resistance less than 10 Ω ?	The room light operation circuit is OK.	Check the harness for open or short between body integrated unit and room light.

9. CHECK HAZARD LIGHT OPERATION

Step	Check	Yes	No
1 CHECK HAZARD LIGHT OPERATION. Make sure the hazard light blinks when hazard switch is turned to ON.	Does the hazard light blink?	Go to step 2.	Check the hazard light circuit.
2 CHECK OUTPUT TO HAZARD LIGHT. 1) Turn the ignition switch to OFF. 2) Disconnect the key warning switch harness connector. 3) Connect the Subaru Select Monitor to the data link connector. 4) Turn the ignition switch to ON. 5) Select {Integ. unit} from main menu. 6) Select {ECM customizing}. 7) Check {Hazard answer-back setup}, and then switch to ON setting if necessary. 8) Select the {Current Data Display & Save}. 9) When operate the LOCK/UNLOCK button of transmitter, check the hazard output signal of body integrated unit.	Is output signal is present when operating the transmitter LOCK/UNLOCK button?	Go to step 3.	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
3 CHECK CIRCUIT OF HAZARD LIGHT. 1) Disconnect the harness connector of body integrated unit. 2) Disconnect the turn signal and hazard unit harness connector. 3) Measure the resistance between harness connector terminals. Connector & terminal (B280) No. 12 — (B32) No. 8:	Is the resistance less than 10 Ω ?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Repair the harness.

Keyless Entry System

SECURITY AND LOCKS

10.CHECK TRUNK LID LOCK ACTUATOR

Step	Check	Yes	No
1 CHECK TRUNK LID LOCK ACTUATOR. 1) Turn the ignition switch to OFF. 2) Disconnect the key warning switch harness connector. 3) Connect the Subaru Select Monitor to the data link connector. 4) Turn the ignition switch to ON. 5) Select {Integ. unit} from main menu. 6) Select the {Current Data Display & Save}. 7) When operating the TRUNK button of the transmitter, check the trunk unlock output signal of the body integrated unit.	Is an output signal present when operating the transmitter TRUNK button?	Go to step 2.	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
2 CHECK THE CIRCUIT OF TRUNK LID ACTUATOR. 1) Disconnect the harness connector of body integrated unit. 2) Disconnect the trunk lid actuator harness connector. 3) Measure the resistance between harness connectors. Connector & terminal (i84) No. 22 — (R186) No. 2:	Is the resistance less than 10 Ω ?	Go to step 3.	Repair the harness.
3 CHECK THE GROUND CIRCUIT OF TRUNK LID ACTUATOR. 1) Disconnect the trunk lid actuator harness connector. 2) Measure the resistance between harness connector terminal and chassis ground. Connector & terminal (R186) No. 1 — Chassis ground:	Is the resistance less than 10 Ω ?	Check the trunk lid lock actuator. <Ref. to SL-44, Trunk Lid Lock Assembly.>	Repair the harness.

11.CHECK DOOR LOCK SWITCH.

Step	Check	Yes	No
1 CHECK DOOR LOCK SWITCH. Check the input signal from door lock switch to body integrated unit using Subaru Select Monitor. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the input signal to body integrated unit by operating the door lock switch.	Is the normal input signal displayed when the door lock switch is moved to LOCK/UNLOCK?	The door lock switch is OK.	Go to step 2.
2 CHECK DOOR LOCK SWITCH CIRCUIT. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between the harness connector terminal and chassis ground when moving the door lock switch to LOCK. Connector & terminal (i84) No. 15 — Chassis ground:	Is the resistance less than 10 Ω ?	Go to step 3.	Go to step 4.
3 CHECK DOOR LOCK SWITCH CIRCUIT. Measure the resistance between the harness connector terminal and chassis ground when the door lock switch is moved to UNLOCK. Connector & terminal (i84) No. 29 — Chassis ground:	Is the resistance less than 10 Ω ?	The door lock switch is OK.	Go to step 4.
4 CHECK DOOR LOCK SWITCH. 1) Disconnect the door lock switch harness connector. 2) Measure the resistance between the door lock switch terminals when moving the door lock switch to LOCK. Connector & terminal Driver's side: (D7) No. 4 — No. 7: Passenger's side: (D125) No. 4 — No. 3:	Is the resistance less than 1 Ω ?	Go to step 5.	Replace the door lock switch.
5 CHECK DOOR LOCK SWITCH. Measure the resistance between the door lock switch terminals when moving the door lock switch to UNLOCK. Connector & terminal Driver's side: (D7) No. 5 — No. 7: Passenger's side: (D125) No. 1 — No. 3:	Is the resistance less than 1 Ω ?	Check the harness for open circuits or shorts between the body integrated unit and the door lock switch.	Replace the door lock switch.

Keyless Entry System

SECURITY AND LOCKS

12.CHECK IGNITION SWITCH ILLUMINATION

Step	Check	Yes	No
1 CHECK FUSE. Remove and visually check the fuse No. 14 (in the main fuse box).	Is the fuse blown out?	Replace the fuse with a new part.	Go to step 2.
2 CHECK POWER SUPPLY. 1) Disconnect the ignition switch illumination harness connector. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B224) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open circuits and shorts between the ignition switch illumination and fuse.
3 CHECK IGNITION SWITCH ILLUMINATION CIRCUIT. 1) Disconnect the harness connector of body integrated unit and ignition switch illumination harness connector. 2) Measure the resistance between body integrated unit harness connector terminal and ignition switch illumination harness connector terminal. Connector & terminal (B280) No. 4 — (B224) No. 1:	Is the resistance less than 10 Ω ?	Replace the ignition switch illumination bulb with a new part. <Ref. to LI-36, REMOVAL, Ignition Switch Illumination.>	Check the harness for open circuits and shorts between the body integrated unit and ignition switch illumination.

13.CHECK HORN OPERATION.

Step	Check	Yes	No
1 CHECK HORN OPERATION. Make sure the horn sounds when the horn switch is pushed.	Does the horn sound?	Go to step 2.	Check the horn circuit.
2 CHECK HORN OPERATION. 1) Disconnect the harness connector of body integrated unit. 2) Connect the harness connector terminal to ground using a suitable lead wire. Connector & terminal (B280) No. 11 (+) — Chassis ground (-):	Does the horn sound?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the harness for open circuits and/or shorts between the body integrated unit and horn relay.

14.CHECK KEYLESS BUZZER

Step	Check	Yes	No
1 CHECK KEYLESS BUZZER SOUND. 1) Using the Subaru Select Monitor, set the keyless buzzer sound to ON. 2) Operate the LOCK/UNLOCK button of the transmitter and check whether the keyless buzzer sounds or not.	Does the keyless buzzer sound?	Keyless buzzer is normal.	Go to step 2.
2 CHECK FOR POWER SUPPLY OF KEYLESS BUZZER. 1) Turn the ignition switch to OFF. 2) Disconnect the keyless buzzer harness connector. 3) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (F102) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open circuits and shorts between the keyless buzzer and fuse.
3 CHECK FOR GROUND CIRCUIT OF KEYLESS BUZZER. 1) Disconnect the harness connector of body integrated unit. 2) Measure the resistance between harness connector terminals. Connector & terminal (i84) No. 6 — (F102) No. 1:	Is the resistance less than 10 Ω ?	Go to step 4.	Repair the harness.
4 CHECK KEYLESS BUZZER. 1) Remove the keyless buzzer. 2) Install the keyless buzzer to another vehicle which operates keyless buzzer normally, check the buzzer sounds.	Does the keyless buzzer sound?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.> <Ref. to GW-9, Power Window Control Switch.>	Replace the keyless buzzer.

Keyless Entry System

SECURITY AND LOCKS

15.CHECK IGNITION SWITCH.

Step	Check	Yes	No
1 CHECK FUSIBLE LINK. Remove the fusible link main SBF and SBF-6 (in main fuse box), and visually check.	Is the fusible link blown out?	Replace the fusible link main SBF or SBF-6. If the replaced fusible link has blown out easily, repair the short circuit between the fusible link and the ignition switch.	Go to step 2.
2 CHECK FOR POWER SUPPLY OF IGNITION SWITCH. 1) Disconnect the ignition switch harness connector. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B72) No. 3 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open circuits and shorts between the ignition switch and fusible link.
3 CHECK IGNITION SWITCH. 1) Insert the ignition key into ignition switch, and turn the each position. 2) Measure the resistance between ignition switch terminals. Connector & terminal No. 3 — No. 4 (ACC position): No. 3 — No. 4 — No. 6 — No. 1 (ON position): No. 3 — No. 6 — No. 1 — No. 2 (ST position):	Is the resistance less than 1 Ω when turning the ignition key to each position?	Ignition switch is normal.	Replace the ignition switch with a new part. <Ref. to SL-49, REPLACEMENT, Ignition Key Lock.>

CAUTION:


When the ignition key lock is replaced, all ignition keys also must be registered. (Refer to the “IMMOBILIZER TEACHING OPERATION MANUAL”.)

4. Security System

A: WIRING DIAGRAM

<Ref. to WI-162, WIRING DIAGRAM, Security System.>

B: ELECTRICAL SPECIFICATION

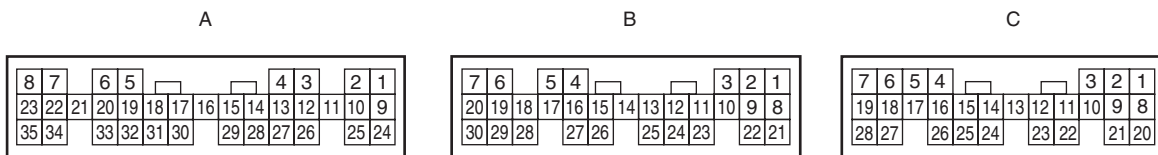

SL-00229

Remarks	Terminal No.	Measuring condition
Ignition switch	A1 (INPUT)	Battery voltage is present when ignition switch is turned to ON.
Door key cylinder switch	A3	0 V is present when door key cylinder is moved to the LOCK side.
Keyless entry control module	A9 (INPUT)	Communication line (Cannot be measured because of digital signal)
Door key cylinder switch	A12	0 V is present when door key cylinder is moved to UNLOCK side.
Trunk lid switch or rear gate latch switch	A17 (INPUT)	0 V is present when opening the trunk lid or rear gate.
Rear door switch RH	A18 (INPUT)	0 V is present when opening the rear door RH.
Front door switch LH	A19 (INPUT)	0 V is present when opening the front door LH.
Rear door switch LH	A31 (INPUT)	0 V is present when opening the rear door LH.
Front door switch RH	A32 (INPUT)	0 V is present when opening the front door RH.
Security indicator light	A33 (INPUT)	Battery voltage is present when the alarm operation is activated.
Horn relay	B11 (OUTPUT)	Battery voltage is present when the alarm operation is activated.
Turn signal & hazard circuit	B12 (OUTPUT)	Battery voltage is present when the alarm operation is activated.
Ground	B22	0 V is constantly present.
Power supply	C2	Battery voltage is constantly present.
Impact sensor	C5	When not applying vibration to the impact sensor, it repeats displaying the 0 V and battery voltage in every 45 milliseconds.
Ground	C8	0 V is constantly present.
Ground	C9	0 V is constantly present.

Security System

SECURITY AND LOCKS

C: INSPECTION

1. BASIC DIAGNOSTIC PROCEDURE

Step	Check	Yes	No
1 INITIAL CHECK. Check keyless entry system.	Does the keyless entry system operate normally?	Go to step 2.	Check keyless entry system. <Ref. to SL-12, INSPECTION, Keyless Entry System.>
2 CHECK SECURITY ON/OFF SETTING. 1) Remove the key from ignition switch, and then close all doors. 2) Press the UNLOCK button of the keyless transmitter. 3) Check the security indicator light blinking patterns.	Is the security indicator light blinking patterns as follows? • Model with immobilizer: Blinks in every 3 seconds • Model without immobilizer: Always OFF	Go to step 3.	Check the security indicator light circuit. <Ref. to SL-31, CHECK SECURITY INDICATOR LIGHT CIRCUIT., INSPECTION, Security System.>
3 CHECK SECURITY ON/OFF SETTING. 1) Press the LOCK button of the transmitter. 2) Check the security indicator light blinking patterns.	Is the security indicator light blinking patterns as follows? • When monitoring lag is set to 0 seconds: Blinks twice within 0.5 seconds at 2 seconds intervals. • When monitoring lag is set to 30 seconds: Blinks three times within 1 second in 0.4 seconds intervals.	Go to step 6.	Go to step 4.
4 CHANGE THE SETTING OF SECURITY SYSTEM. Change the setting of security system to ON. <Ref. to SL-28, SECURITY SYSTEM ON/OFF SETTING, INSPECTION, Security System.>	Is setting change completed correctly?	Go to step 5.	• Check the ignition switch circuit. <Ref. to SL-32, CHECK IGNITION SWITCH CIRCUIT, INSPECTION, Security System.> • Check the door lock switch circuit. <Ref. to SL-21, CHECK DOOR LOCK SWITCH., INSPECTION, Keyless Entry System.>
5 CHECK THE SETTING CHANGE OF SECURITY SYSTEM. 1) Remove the key from ignition switch, and then close all doors. 2) Press the LOCK button of the transmitter. 3) Check the security indicator light blinking patterns.	Is the security indicator light blinking patterns as follows? • When monitoring lag is set to 0 seconds: Blinks twice within 0.5 seconds at 2 seconds intervals. • When monitoring lag is set to 30 seconds: Blinks three times within 1 second in 0.4 seconds intervals.	Go to step 6.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
6 CHECK SECURITY SYSTEM OPERATION. Press the LOCK button of keyless transmitter, and wait for 30 seconds.	Is the blinking pattern of security indicator light blink twice within 0.5 seconds in 2 second cycles?	Go to step 7.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>

Security System

SECURITY AND LOCKS

Step	Check	Yes	No
7 CHECK SECURITY SYSTEM CANCEL OPERATION. Insert the key to the door key cylinder to unlock.	Is the security indicator light blinking patterns as follows? • Model with immobilizer: Blinks in every 3 seconds • Model without immobilizer: Always OFF	Press the LOCK button of keyless transmitter, and wait for 30 seconds. Go to step 8.	Check the door key cylinder circuit. <Ref. to SL-33, CHECK DOOR KEY CYLINDER SWITCH AND CIRCUIT, INSPECTION, Security System.>
8 CHECK SECURITY ALARM OPERATION. 1) Unlock all doors using the door lock switch on driver's door. 2) Open any door, trunk or rear gate.	Does the security alarm operate when opening any door, trunk or rear gate?	Go to step 9.	• Check the door switch. <Ref. to SL-29, CHECK DOOR SWITCH, INSPECTION, Security System.> • Check the trunk lid switch or rear gate latch switch. <Ref. to SL-30, CHECK TRUNK LID SWITCH (SEDAN) OR REAR GATE LATCH SWITCH (WAGON), INSPECTION, Security System.>
9 CHECK SECURITY ALARM OPERATION. Check the security alarm operation.	Does all security alarm operate? • Horn sounds • Hazard light blinks • Security indicator light blinks	Go to step 10.	• Check the horn. <Ref. to SL-31, CHECK HORN, INSPECTION, Security System.> • Check the hazard light. <Ref. to SL-32, CHECK HAZARD LIGHT OPERATION, INSPECTION, Security System.>
10 CHECK SECURITY ALARM CANCEL OPERATION. Press any button of transmitter while operating security alarm. Or turn the ignition switch to OFF→ON three times.	Does all security alarm stop? • Horn • Hazard light	Go to step 11.	Check the ignition switch circuit. <Ref. to SL-32, CHECK IGNITION SWITCH CIRCUIT, INSPECTION, Security System.>
11 CHECK SECURITY SYSTEM CONDITION MEMORY. Check that the system function properly when the battery is not connected temporally. <Ref. to SL-28, CHECK SECURITY SYSTEM CONDITION MEMORY, INSPECTION, Security System.>	Does the system function properly when the battery is not connected temporally?	Go to step 12.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>
12 CHECK IMPACT SENSOR. Check the sensitivity of impact sensor. <Ref. to SL-52, CHECK IMPACT SENSOR, ADJUSTMENT, Impact Sensor.>	Is the sensibility set properly?	Press the UNLOCK button of keyless transmitter, and finish the diagnosis.	Adjust the sensibility. <Ref. to SL-52, IMPACT SENSITIVITY ADJUSTMENT, ADJUSTMENT, Impact Sensor.>

CAUTION:

- **Siren YES/NO setting**

The {Siren YES/NO} setting of the item {Unit customization} of the Subaru Select Monitor always shall be set to “NO”. If it is set to “YES”, the horn of the security alarm will not sound.

NOTE:

Check the function setting of body integrated unit if any of the following symptoms appear. <Ref. to LAN(di-ag)-2, Basic Diagnostic Procedure.>

- The horn does not sound even when the security system operates.
- The horn sounds when setting the security to ON using the keyless transmitter.

2. CHECK SECURITY SYSTEM CONDITION MEMORY

- 1) Remove the key from ignition switch.
- 2) Close all the doors, trunk lid and rear gate.
- 3) Open the front hood.
- 4) Press the LOCK button of transmitter, and then wait until the security indicator light flashes twice for 0.5 sec at intervals of 2 seconds.
- 5) Disconnect the ground cable from battery.
- 6) Connect the ground cable to battery.
- 7) Check that the security indicator light blinks twice within 0.5 seconds at 2 seconds intervals. When it does not blink, replace the body integrated unit.

3. SECURITY SYSTEM ON/OFF SETTING

- 1) Close all doors, trunk lid and rear gate, and sit down on the driver seat. Press the UNLOCK button of the keyless transmitter.
- 2) Turn the ignition switch to ON.
- 3) Push the centralized door lock switch down and open the driver's side door at the same time, and hold in this condition for 10 seconds.
- 4) If the security system is ON, it will turn OFF. If OFF, it will turn ON.

4. CHECK DOOR SWITCH

Step	Check	Yes	No
1 CHECK INPUT FROM EACH DOOR SWITCH. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the door switch input to the body integrated unit when opening the each door (front RH and LH, rear RH and LH).	Is the input signal detected when opening the each door (front RH and LH, rear RH and LH)?	The door switch circuit is OK.	When the input signal cannot be detected in some door switch, Go to step 2.
2 CHECK DOOR SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Disconnect the harness connector of faulty door switch. 4) Measure the resistance between harness connector terminals. Connector & terminal <i>(i84) No. 19 — (R12) No. 1: (front door LH)</i> <i>(i84) No. 32 — (R9) No. 1: (front door RH)</i> <i>(i84) No. 31 — (R22) No. 1: (rear door LH)</i> <i>(i84) No. 18 — (R16) No. 1: (rear door RH)</i>	Is the resistance less than 10 Ω ?	Go to step 3.	Repair the harness.
3 CHECK GROUND CIRCUIT OF DOOR SWITCH. 1) Disconnect the harness connector of faulty door switch. 2) Measure the resistance of harness connector and chassis ground. Connector & terminal <i>(R9) No. 3 — Chassis ground: (front door LH)</i> <i>(R12) No. 3 — Chassis ground: (front door RH)</i> <i>(R22) No. 3 — Chassis ground: (rear door LH)</i> <i>(R16) No. 3 — Chassis ground: (rear door RH)</i>	Is the resistance less than 10 Ω ?	Go to step 4.	Repair the harness.
4 CHECK DOOR SWITCH. 1) Disconnect the harness connector of faulty door switch. 2) Measure the resistance between door switch terminals. Terminals No. 1 — No. 3:	Is the resistance more than 1 M Ω when door switch is pushed?	Go to step 5.	Replace the door switch.
5 CHECK DOOR SWITCH. Measure the resistance between door switch terminals. Terminals No. 1 — No. 3:	Is the resistance less than 1 Ω when door switch is released?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Replace the door switch.

Security System

SECURITY AND LOCKS

5. CHECK TRUNK LID SWITCH (SEDAN) OR REAR GATE LATCH SWITCH (WAGON)

Step	Check	Yes	No
1 CHECK INPUT FROM TRUNK LID SWITCH OR REAR GATE LATCH SWITCH. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the input signal to the body integrated unit when opening the trunk lid or rear gate.	Is the input signal present when opening the trunk lid or rear gate?	The trunk lid switch or rear gate latch switch circuit is OK.	Go to step 2.
2 CHECK CIRCUIT FOR TRUNK LID SWITCH OR REAR GATE LATCH SWITCH. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Disconnect the harness connector of the trunk lid switch or the rear gate latch switch. 4) Measure the resistance between harness connector terminals. Connector & terminal <i>(i84) No. 17 — (D46) No. 2: (Wagon model)</i> <i>(i84) No. 17 — (R186) No. 3: (Sedan model)</i>	Is the resistance less than 10 Ω ?	Go to step 3.	Repair the harness.
3 CHECK GROUND CIRCUIT FOR TRUNK LID SWITCH OR REAR GATE LATCH SWITCH. 1) Disconnect the harness connector of the trunk lid switch or the rear gate latch switch. 2) Measure the resistance between harness connector terminal and chassis ground. Connector & terminal <i>(D46) No. 1 — Chassis ground: (Wagon model)</i> <i>(R186) No. 1 — Chassis ground: (Sedan model)</i>	Is the resistance less than 10 Ω ?	Go to step 4.	Repair the harness.
4 CHECK TRUNK LID SWITCH OR REAR GATE LATCH SWITCH. 1) Disconnect the harness connector of the trunk lid switch or the rear gate latch switch. 2) Measure the resistance between switch terminals. Terminals <i>No. 1 — No. 2: (Wagon model)</i> <i>No. 1 — No. 3: (Sedan model)</i>	Is the resistance more than 1 M Ω when switch is pushed?	Go to step 5.	Replace the trunk lid switch or the rear gate latch switch.
5 CHECK TRUNK LID SWITCH OR REAR GATE LATCH SWITCH. Measure the resistance between switch terminals. Terminals <i>No. 1 — No. 2: (Wagon model)</i> <i>No. 1 — No. 3: (Sedan model)</i>	Is the resistance less than 1 Ω when switch is released?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Replace the trunk lid switch or the rear gate latch switch.

6. CHECK SECURITY INDICATOR LIGHT CIRCUIT.

Step	Check	Yes	No
1 CHECK SECURITY INDICATOR LIGHT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Connect the resistor (100 Ω) between the body integrated unit harness connector terminal (i84) No. 33 and chassis ground. Connector & terminal (i84) No. 33 — Chassis ground:	Does the security indicator light illuminate?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Go to step 2.
2 CHECK POWER SUPPLY FOR SECURITY INDICATOR LIGHT. 1) Disconnect the connector from combination meter. 2) Measure the voltage between the combination meter harness connector terminal and chassis ground. Connector & terminal (i10) No. 1, 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Check the harness for open or short circuits between combination meter and fuse.
3 CHECK SECURITY INDICATOR LIGHT CIRCUIT. Measure the resistance between the combination meter harness connector terminal and the security control unit harness connector terminal. Connector & terminal (i10) No. 17 — (i84) No. 33:	Is the resistance less than 10 Ω ?	Replace the combination meter. <Ref. to IDI-14, Combination Meter.>	Check the harness for open or short circuits between the combination meter and body integrated unit.

7. CHECK HORN

Step	Check	Yes	No
1 CHECK HORN OPERATION. Check the horn sounds when the horn switch is pushed.	Does the horn sound?	Go to step 2.	Check the horn circuit.
2 CHECK OUTPUT TO HORN RELAY. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select {Function Check}. 5) Select {Horn Output} and execute	Does the horn sound?	Horn circuit is OK.	Go to step 3.
3 CHECK HORN RELAY CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Disconnect the main fuse box harness connector (B186). 4) Measure the resistance between harness connector terminals. Connector & terminal (B280) No. 11 — (B186) No. 1:	Is the resistance less than 10 Ω ?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Repair the harness.

Security System

SECURITY AND LOCKS

8. CHECK HAZARD LIGHT OPERATION

Step	Check	Yes	No
1 CHECK HAZARD LIGHT OPERATION. Make sure the hazard light blinks when hazard switch is turned to ON.	Does the hazard light blink?	Go to step 2.	Check the hazard light circuit.
2 CHECK OUTPUT TO HAZARD LIGHT. 1) Turn the ignition switch to OFF. 2) Disconnect the key warning switch harness connector. 3) Connect the Subaru Select Monitor to the data link connector. 4) Turn the ignition switch to ON. 5) Select {Integ. unit} from main menu. 6) Select {ECM customizing}. 7) Check the {Hazard answer-back setup}, and then switch to ON setting. 8) Select the {Current Data Display & Save}. 9) Check the hazard output signal of body integrated unit when operating the LOCK/UNLOCK button of transmitter.	Is output signal is present when operating the transmitter LOCK/UNLOCK button?	Go to step 3.	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>
3 CHECK CIRCUIT OF HAZARD LIGHT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Disconnect the turn signal and hazard unit harness connector. 4) Measure the resistance between harness connector terminals. Connector & terminal (B280) No. 12 — (B32) No. 8:	Is the resistance less than 10 Ω ?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Repair the harness.

9. CHECK IGNITION SWITCH CIRCUIT

Step	Check	Yes	No
1 CHECK IGNITION SWITCH VOLTAGE. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the {BATT voltage} and {IG power supply}.	Is the {IG power supply} within ± 1 V against {BATT voltage}?	The ignition switch input circuit is OK.	Go to step 2.
2 CHECK IGNITION SWITCH CIRCUIT. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Turn the ignition switch to ON. 4) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (i84) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Check the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the harness for open or short circuit between the body integrated unit and fuse.


10.CHECK DOOR KEY CYLINDER SWITCH AND CIRCUIT

Step	Check	Yes	No
1 CHECK DOOR KEY CYLINDER SWITCH CIRCUIT. Measure the resistance between the harness connector terminal and chassis ground when moving the door key cylinder switch to UNLOCK. Connector & terminal (i84) No. 12 — Chassis ground:	Is the resistance less than 10 Ω ?	Door key cylinder switch is OK.	Go to step 2.
2 CHECK DOOR KEY CYLINDER SWITCH. 1) Disconnect the door key cylinder switch harness connector. 2) Measure the resistance between door key cylinder switch terminals when turning the door key cylinder switch to LOCK. Terminals No. 1 — No. 2:	Is the resistance less than 1 Ω ?	Go to step 3.	Replace the door key cylinder switch.
3 CHECK DOOR KEY CYLINDER SWITCH. Measure the resistance between the door key cylinder switch terminals when turning the door key cylinder switch to UNLOCK. Terminals No. 2 — No. 3:	Is the resistance less than 1 Ω ?	Check the harness for open or short circuits between the body integrated unit and the door key cylinder switch.	Replace the door key cylinder switch.

5. Front Inner Remote

A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 2) Remove the back cover (1) of inner remote.
- 3) Remove the cable (2).
- 4) Remove the cable end ball (3).
- 5) Remove the screws (4), and remove the inner remote.

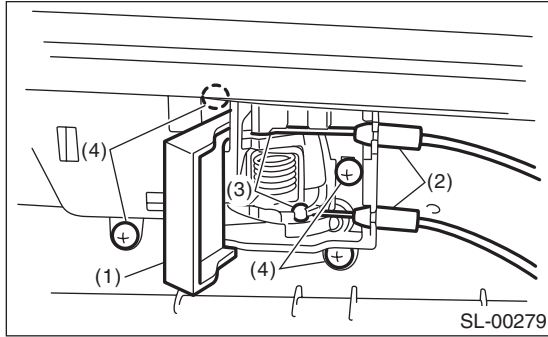

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the inner remote works correctly after installation.


C: INSPECTION

- 1) Check the cable of the door opener and door lock for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the front door latch and door lock actuator assembly.
- 2) Check the handle and cable for smooth operation.

6. Front Outer Handle

A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Remove the door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from the front inner remote. <Ref. to SL-34, REMOVAL, Front Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 5) Remove the rod clamps (1).
- 6) Remove bolts (2), then remove the front outer handle.

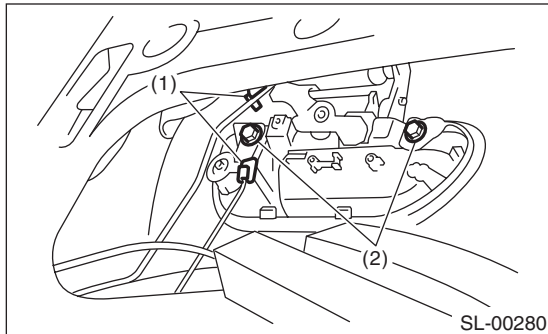

CAUTION:

Do not apply excessive force to remove the handle from the door panel. The door panel may become deformed.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure that the outer handle works correctly after installation.


C: INSPECTION

- 1) Check the rod for deformation.
- 2) Check the lever and rod for smooth operation.

7. Front Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from the front inner remote. <Ref. to SL-34, REMOVAL, Front Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 5) Remove the front door glass. <Ref. to GW-12, REMOVAL, Front Door Glass.>
- 6) Remove the rear sash. <Ref. to GW-17, REMOVAL, Front Regulator and Motor Assembly.>
- 7) Open the handle rod cover of the latch assembly.
- 8) Remove the three screws.

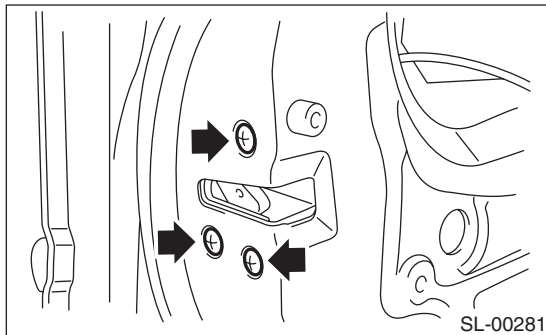

- 9) Remove the front door latch & door lock actuator assembly, and disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the lock works correctly after installation.


C: INSPECTION

- 1) Check the rod and cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the front door latch and door lock actuator assembly.
- 2) Check the lever, rod and cable for smooth operation.

8. Front Door Lock Actuator

A: REMOVAL

- 1) Remove the front door latch and door lock actuator assembly. <Ref. to SL-36, REMOVAL, Front Door Latch and Door Lock Actuator Assembly.>
- 2) Remove the pawl of front door latch security cover, and then remove the cover.
- 3) Remove the screw from front door latch and door lock actuator, and then remove the door lock actuator.

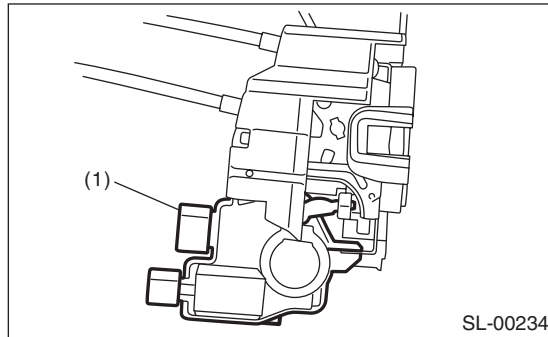

(1) Front door lock actuator

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

If defective, replace the door lock actuator.

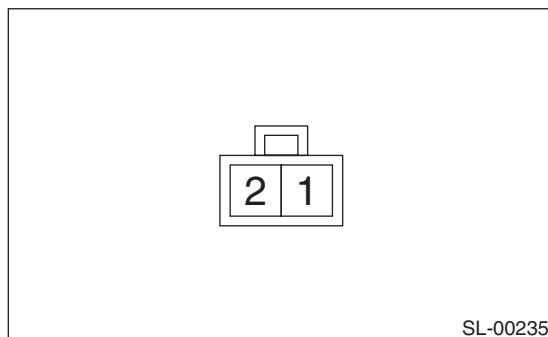


Terminal No.	Actuator operation
No. 2 (+) and No. 1 (-)	Unlock → Lock
No. 1 (+) and No. 2 (-)	Lock → Unlock

9. Rear Inner Remote

A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 2) Remove the back cover (1) of inner remote.
- 3) Remove the cable (2).
- 4) Remove the cable end ball (3).
- 5) Remove screws (4), and remove the inner remote handle.

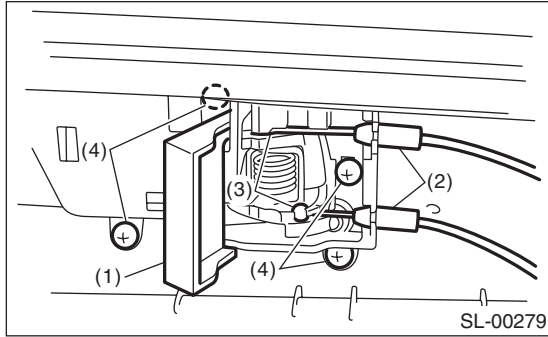

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the inner remote works correctly after installation.


C: INSPECTION

- 1) Check the cable of the door opener and door lock for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check the handle and cable for smooth operation.
- 3) Check the child safety lock for correct operations.

10. Rear Outer Handle

A: REMOVAL

- 1) Raise the rear door glass to the top position.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-23, REMOVAL, Rear Sealing Cover.>
- 4) Remove the rear door latch assembly. <Ref. to SL-40, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 5) Pull out the cable from the cable clamp (1) of the outer handle.
- 6) Remove two bolts.

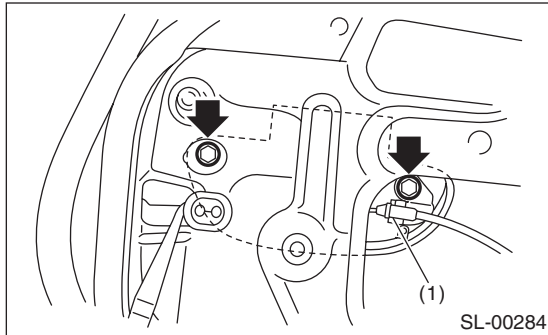

- 7) Remove the rear outer handle.

CAUTION:

Do not apply excessive force to remove the handle from the door panel. The door panel may become deformed.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure that the outer handle works correctly after installation.


C: INSPECTION

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check the handle and cable for smooth operation.

11. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-48, REMOVAL, Door Trim.>
- 3) Remove the cable from rear inner remote. <Ref. to SL-38, REMOVAL, Rear Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-23, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-24, REMOVAL, Rear Door Glass.>
- 6) Remove the rear sash. <Ref. to GW-26, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Pull out the cable from the cable clamp of the outer handle.
- 8) Remove the three screws.

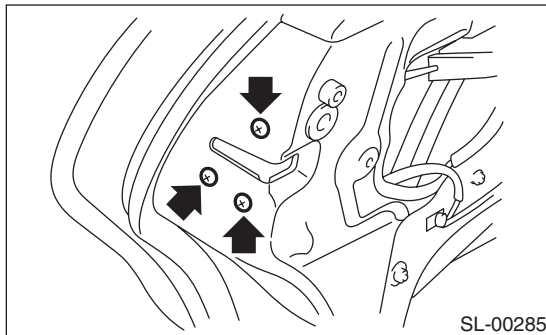

- 9) Disconnect the connectors, and then remove the rear door latch and door lock actuator assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the lock works correctly after installation.


C: INSPECTION

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check that the lever and cable operates smoothly.

12.Rear Door Lock Actuator

A: REMOVAL

- 1) Remove the rear door latch and door lock actuator assembly. <Ref. to SL-40, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 2) Remove the pawl of rear door latch security cover, and then remove the cover.
- 3) Remove the screw from the rear door latch and door lock actuator, and then remove the door lock actuator.

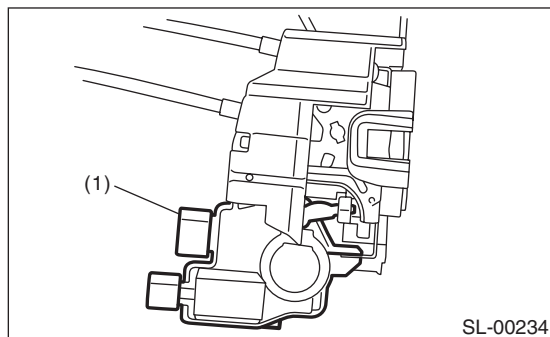

(1) Rear door lock actuator

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

If defective, replace the door lock actuator.

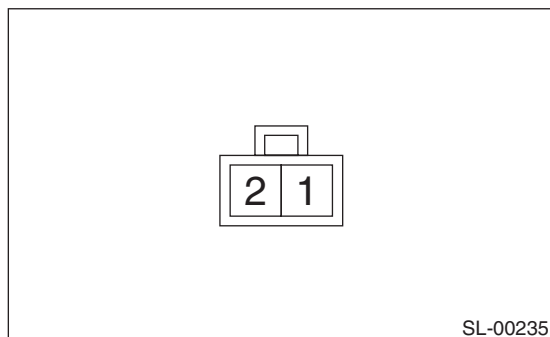


Terminal No.	Actuator operation
No. 2 (+) and No. 1 (-)	Unlock → Lock
No. 1 (+) and No. 2 (-)	Lock → Unlock

13. Rear Gate Outer Handle

A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate garnish. <Ref. to EI-73, REMOVAL, Rear Gate Garnish.>
- 3) Remove the two nuts, and take out the rear gate outer handle.
- 4) Remove cable (1) of the rear gate handle.

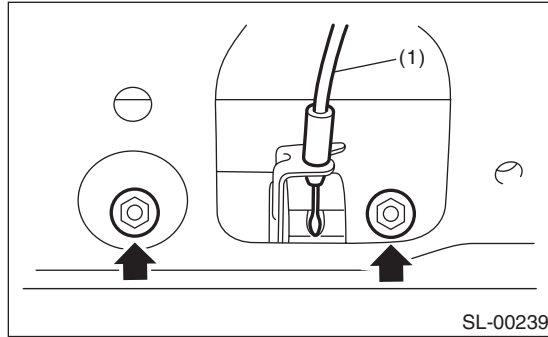

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure that the outer handle works correctly after installation.


C: INSPECTION

- 1) Check the cable of the rear gate handle for deformation.
- 2) Check the rear gate outer handle and cable of the rear gate handle for smooth operation.


14. Rear Gate Latch Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 3) Remove the two screws.

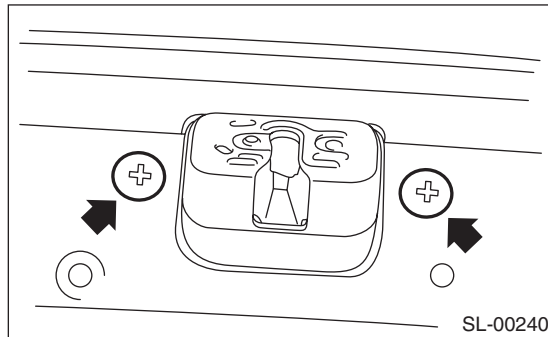

- 4) Disconnect connectors and cables of the rear gate handle.

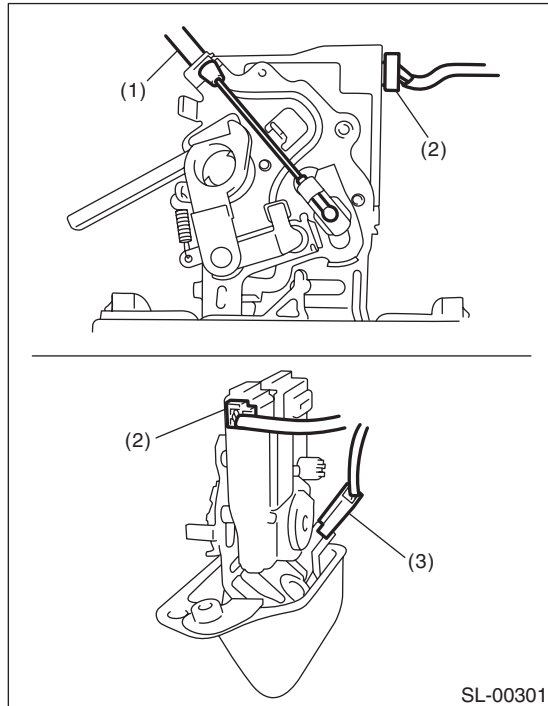

- (1) Cable
- (2) Rear gate lock actuator connector
- (3) Rear gate latch switch connector

- 5) Remove the rear gate latch assembly.

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Disconnect the rear gate lock actuator harness connector.
- 2) Connect the battery to rear gate lock actuator terminals.

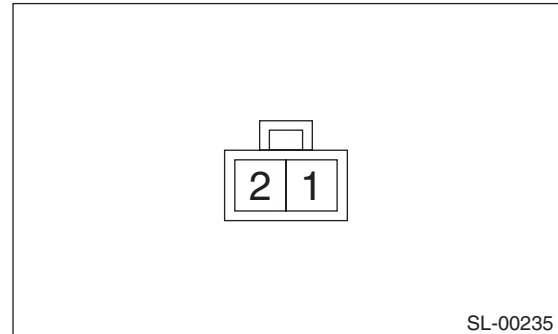

Terminal No.	Actuator operation
No. 2 (+) and No. 1 (-)	Unlock → Lock
No. 1 (+) and No. 2 (-)	Lock → Unlock


Replace the rear gate latch assembly if faulty.

- 3) Check the cable of the rear gate handle for deformation.
- 4) Check the lever and cable of the rear gate handle for smooth operation.

15.Trunk Lid Lock Assembly

A: REMOVAL

- 1) Remove the trunk lid release handle. <Ref. to SL-45, REMOVAL, Trunk Lid Release Handle.>
- 2) Disconnect the connectors and remove the cable of the trunk opener.
- 3) Remove the two bolts to remove the trunk lid lock assembly.

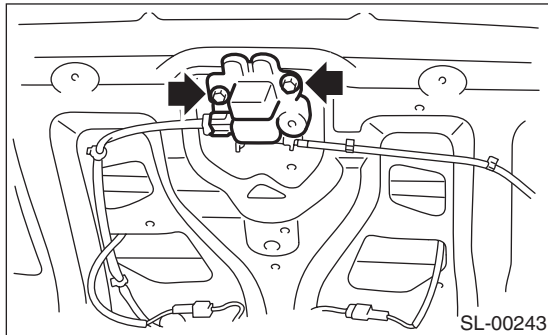

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- Apply grease to the movable part.
- Make sure the lock works correctly after installation.

C: INSPECTION

- 1) Disconnect the trunk lid actuator harness connector.
- 2) Connect the battery to the trunk lid actuator terminals.

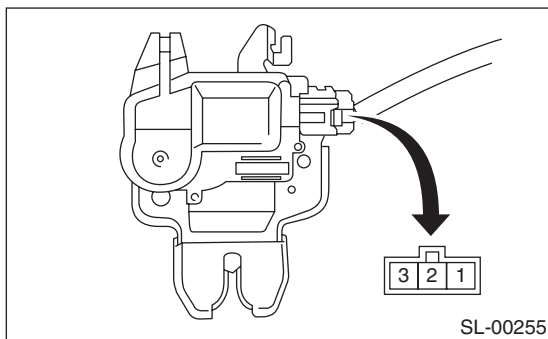

Terminal No.	Actuator operation
No. 2 (+) and No. 1 (-)	Lock → Unlock


If defective, replace the trunk lid actuator.

- 3) Check the striker for deformation or abnormal wear.
- 4) Check the safety lever for improper movement.
- 5) Check other levers and springs for rust formation or unsmooth movement.
- 6) Check the cable of the trunk opener for smooth operation.

16.Trunk Lid Release Handle


A: REMOVAL

1) Remove the cover (A).

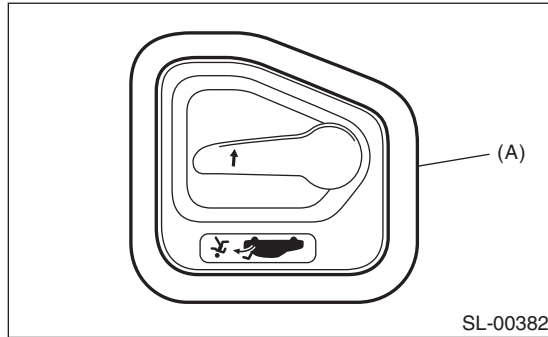

2) Remove the trunk lid trim. <Ref. to EI-68, REMOVAL, Trunk Room Trim.>

3) Remove the four clips to remove the trunk lid release handle.

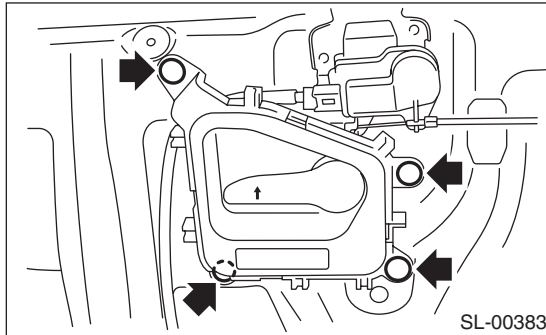

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

Make sure the lever works smoothly.

17.Front Hood Lock Assembly

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the bolts, and then detach the front hood lock assembly.
- 3) Remove the cable from lock assembly.

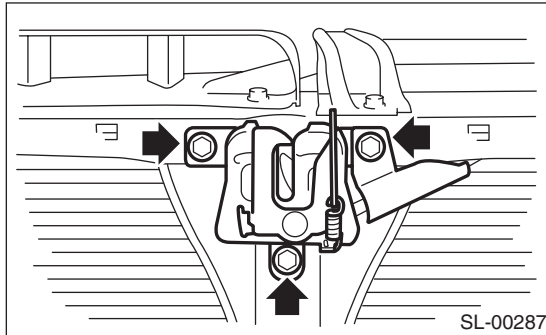

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- Apply grease to the movable part.
- Make sure the cable works correctly after installation.

C: ADJUSTMENT

Loosen the bolt, and adjust the lock assembly while moving it up and down.

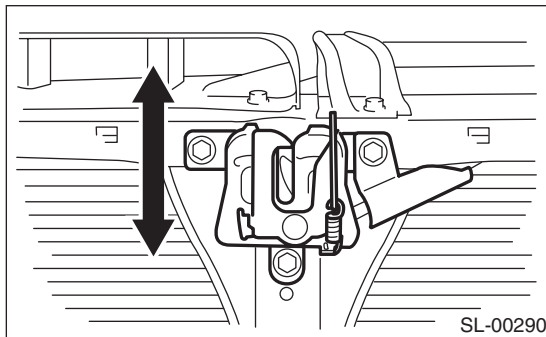

D: INSPECTION


- 1) Check the striker for deformation or abnormal wear.
- 2) Check the safety lever for improper movement.
- 3) Check other levers and springs for rust formation or unsmooth movement.

18.Remote Openers

A: REMOVAL

1. FRONT HOOD OPENER


- 1) Remove the cable from the front hood lock.
- 2) Remove the bolt, and then detach the opener lever.

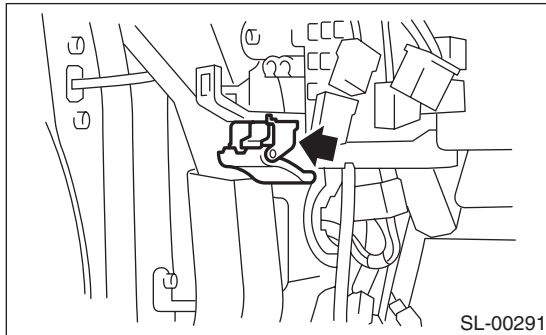

2. TRUNK LID OPENER

- 1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the center pillar lower trim, side sill cover, rear pillar lower trim and floor mat on the driver's side. Remove the clip holding the cable.
- 3) Remove the opener lever (1) and rear cover (2).
- 4) Remove the pin (3) and remove front cover (4).

- 5) Remove the bolt and nut, and remove the pull handle assembly (5).

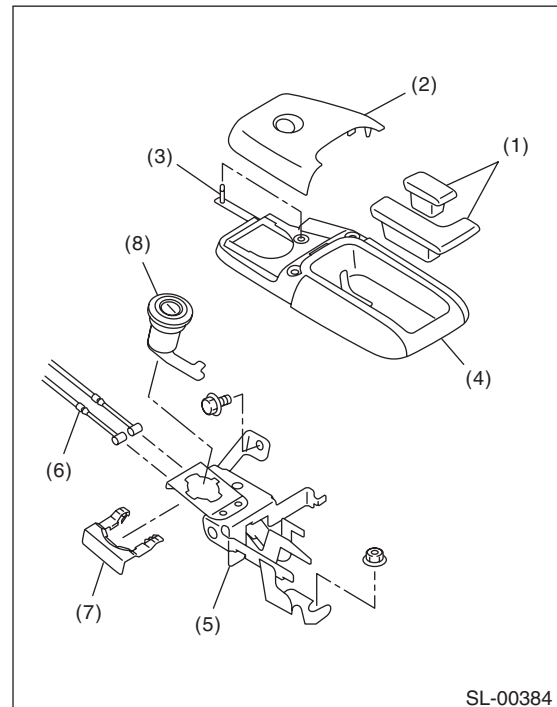

- (1) Opener lever
- (2) Rear cover
- (3) Pin
- (4) Front cover
- (5) Pull handle ASSY
- (6) Cable
- (7) Clamp
- (8) Key cylinder

- 6) Remove the cable from the pull handle assembly (5).
- 7) Remove clamp (7) to remove the key cylinder (8).

CAUTION:


Remove the key cylinder in the UNLOCK position.

- 8) Remove the trunk lid lock assembly from the trunk lid.

Remote Openers

SECURITY AND LOCKS

9) Remove the cable from the trunk lid lock assembly.

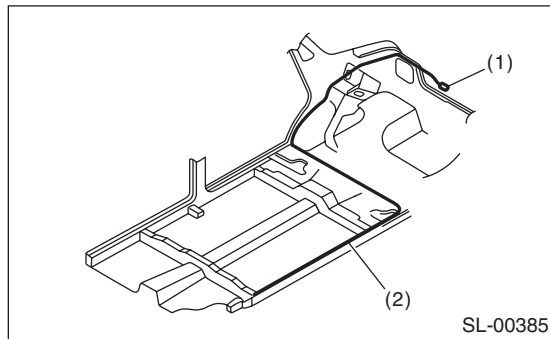

- (1) Trunk lid lock ASSY
- (2) Cable


3. FUEL FILLER FLAP LID OPENER

Sedan

<Ref. to SL-47, TRUNK LID OPENER, REMOVAL, Remote Openers.>

Wagon


- 1) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the center pillar lower trim, side sill cover, rear pillar lower trim and floor mat on the driver's side. Remove the clip holding the cable.
- 3) Remove the bolt and nut, and then detach the pull handle assembly.

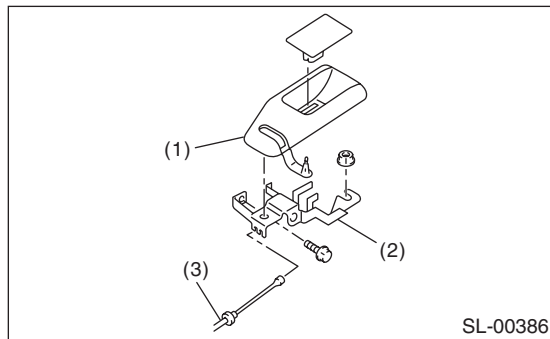

- (1) Cover
- (2) Pull handle ASSY
- (3) Cable

- 4) Remove the cable from pull handle assembly.
- 5) Remove the rear quarter trim RH. <Ref. to EI-61, REMOVAL, Rear Quarter Trim.>

6) Rotate the fuel lock inside the quarter panel to 90° and remove. (Either right or left turn)

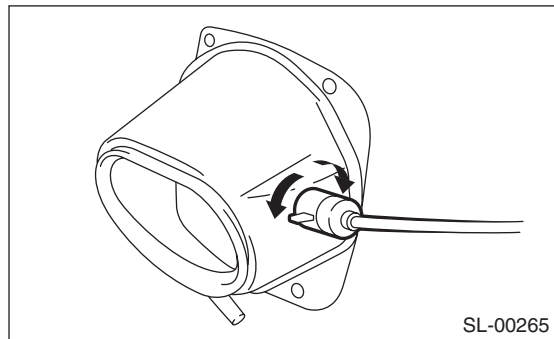

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Install the key cylinder to the trunk lid in the UN-LOCK position.


C: INSPECTION

Make sure the front hood, trunk lid and fuel filler flap lid open and close smoothly.


19. Ignition Key Lock

A: REPLACEMENT

- 1) Disconnect the ground cable from battery.
- 2) Remove the steering column. <Ref. to PS-17, REMOVAL, Tilt Steering Column.>
- 3) Secure the steering column in a vise. Remove the bolt with a drill.

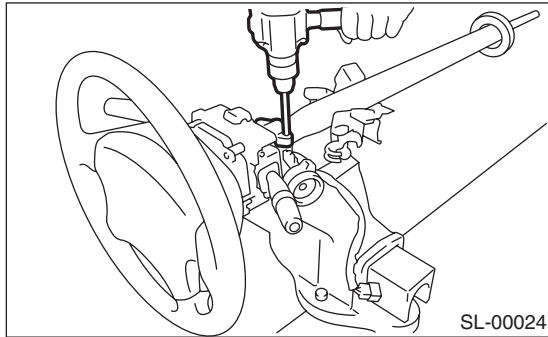


- 4) Remove the ignition key lock.
- 5) Using a new bolt, tighten the bolts all the way.

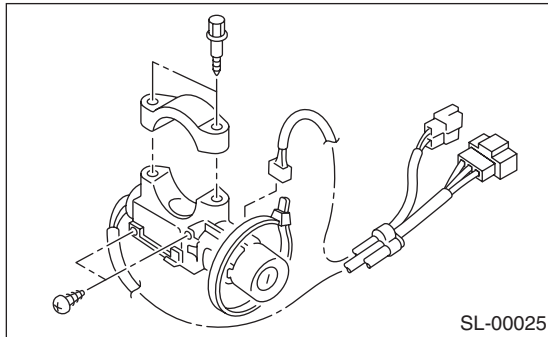

B: INSPECTION

- 1) Remove the instrument panel lower panel.
- 2) Remove the lower column cover.
- 3) Unfasten the fixing clip which secures harness, and then disconnect the connector of the ignition switch from body harness.
- 4) Turn the ignition key plate to each position and check the continuity between terminals of ignition connector.

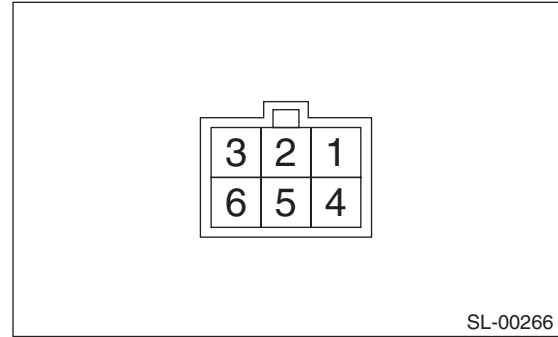


Switch position	Terminal No.	Standard
LOCK	—	—
ACC	No. 3 and No. 4	Less than 1 Ω
ON	No. 3, No. 1 and No. 4 No. 3 and No. 6	Less than 1 Ω
ST	No. 3 and No. 1 No. 3, No. 2 and No. 6	Less than 1 Ω

If NG, replace the ignition switch.

20.Key Lock Cylinders

A: REPLACEMENT

- 1) Raise the front door glass to the top position.
- 2) Remove the door trim. <Ref. to EI-48, REMOV-AL, Door Trim.>
- 3) Remove the sealing cover.
- 4) Remove the rod clamp and the bolt, then replace the key cylinder (1).

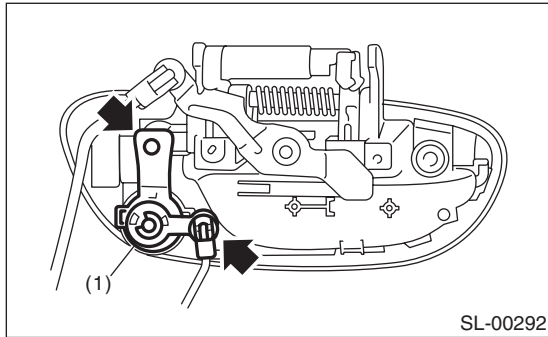

21.Security Control Unit

A: NOTE

The control of security system is carried out in body integrated unit.

B: REMOVAL

<Ref. to SL-55, REMOVAL, Body Integrated Unit.>

C: INSTALLATION

<Ref. to SL-55, INSTALLATION, Body Integrated Unit.>

22. Impact Sensor

A: REMOVAL

- 1) Remove the key from ignition switch.
- 2) Close all the doors, trunk lid and rear gate.
- 3) Press the UNLOCK button of the keyless transmitter.
- 4) Change the setting of impact sensor using Subaru Select Monitor.
- 5) Disconnect the ground cable from battery.
- 6) Remove the impact sensor.

B: INSTALLATION

- 1) Remove the key from ignition switch.
- 2) Close all the doors, trunk lid and rear gate.
- 3) Press the UNLOCK button of the keyless transmitter.
- 4) Disconnect the ground cable from battery.
- 5) Install the impact sensor.
- 6) Connect the ground cable to battery.
- 7) Change the setting of impact sensor using Subaru Select Monitor.

C: OPERATION

1. IMPACT SENSOR SETTING USING SUBARU SELECT MONITOR

- 1) Connect the Subaru Select Monitor to the data link connector.
- 2) Turn the ignition switch to ON.
- 3) Select {Integ. unit} from main menu.
- 4) Select {ECM customizing}.
- 5) Make a impact monitor setting.
 - When installing: ON
 - When removing: OFF
- 6) Make a impact monitor ON/OFF setting.
 - When installing: ON
 - When removing: OFF
- 7) Turn the ignition switch to OFF, and then remove the Subaru Select Monitor.

D: ADJUSTMENT

1. CHECK IMPACT SENSOR

- 1) Remove the key from ignition switch.
- 2) Close all the windows.
- 3) Close all the doors, trunk lid and rear gate. Leave open the front hood.
- 4) Press the LOCK button of the keyless transmitter from outside of vehicle.
- 5) Check that the security indicator light blinks twice within 0.5 seconds in 2 second cycles after 30 seconds.
- 6) Hit the windshield with your palm continuously and check the security alarm operates. Lift up the front hood approx. 12 cm (4.7 in) or more, and then drop it off to check the operation of security alarm.
- 7) If NG, adjust the impact sensitivity.

2. IMPACT SENSITIVITY ADJUSTMENT

- 1) Connect the Subaru Select Monitor to the data link connector.
- 2) Turn the ignition switch to ON.
- 3) Select {Impact Sensor} from the main menu.
- 4) Make a {Sensitivity Adjustment Mode}
 - Sensitivity can be adjusted in 11 levels (0 to 10).
 - Initial setting is 5.
 - Smaller number means more sensitive.
 - Larger number means less sensitive.
- 5) Turn the ignition switch to OFF, and then remove the Subaru Select Monitor.


NOTE:

- Set the sensor so as not to let the alarm on normal vibration (reclining to the door, hit the ball and etc.).
- Set the sensor to operate the alarm with hitting the door or window glass, etc. continuously like a mayhem by robbery.
- Ask the customer about parking situation for setting, because the alarm operate when the vibration not only the burglar but also the construction etc.

23. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Remove the screw, disconnect the connector and remove the keyless entry control module.

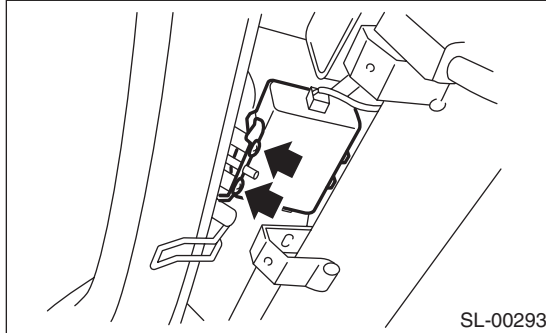

B: INSTALLATION

Install in the reverse order of removal.

24. Keyless Buzzer

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 3) Remove the keyless buzzer installed to the back side of the horn bracket.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Install the keyless buzzer to another vehicle which operates keyless buzzer normally, check the buzzer sounds. If NG, replace the keyless buzzer.

25.Body Integrated Unit

A: REMOVAL

NOTE:

- When replacing the body integrated unit, check the current setting and note it. <Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>
 - When replacing the body integrated unit, all immobilizer keys also must be replaced and registered again.
- 1) Disconnect the ground cable from battery.
 - 2) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
 - 3) Disconnect the connector of body integrated unit.

CAUTION:


Be careful to keep water and other foreign materials away from body integrated unit.

- 4) Remove the body integrated unit from the body integrated unit mounting bracket using a flat tip screwdriver.

CAUTION:

Be careful when removing the unit. Removing by force from the bracket will damage the unit.

- 5) Remove the clutch pedal stopper arm. (MT model) <Ref. to CL-23, REMOVAL, Clutch Pedal.>
- 6) Remove two mounting bolts for body integrated unit bracket, and remove the bracket.

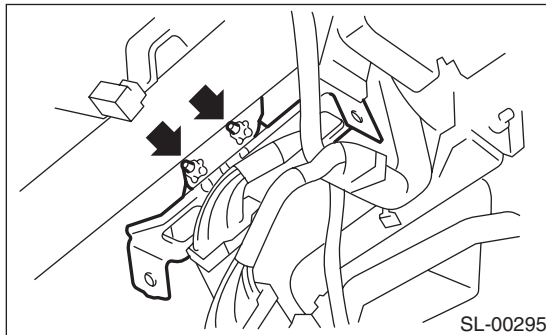

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- When the same body integrated unit is reinstalled in the same vehicle, it is not necessary to register the immobilizer again.
- Make sure that there are no differences from the contents of the current settings after installation. <Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>

26. Transmitter


A: REMOVAL

1. TRANSMITTER BATTERY

Remove the battery (1) from the transmitter.

NOTE:

To prevent static electricity damage to the transmitter printed circuit board, touch the steel area of building with hand to discharge static electricity carried on body or clothes before disassembling the transmitter.

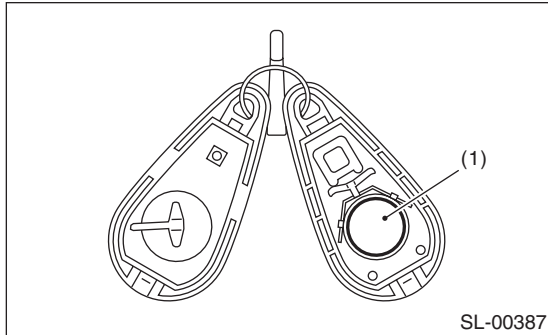

B: INSTALLATION

1. TRANSMITTER BATTERY

Install in the reverse order of removal.


C: INSPECTION

1. TRANSMITTER BATTERY

Measure the voltage between the keyless transmitter battery (+) terminal and (–) terminal.

NOTE:

Battery discharge occurs during the measurement. Complete the measurement within 5 seconds.

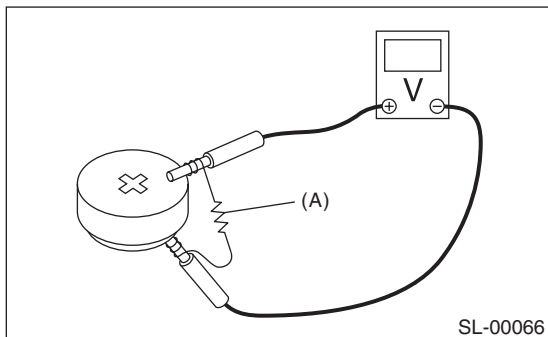

(A) Resistance (47 Ω)

Tester connection		Standard
(+)	(–)	
Battery Positive terminal	Battery Ground terminal	2.5 — 3.0 V

If NG, replace the battery. (Use CR2025 or equivalent.)

D: REPLACEMENT

1. REGISTRATION OF KEYLESS TRANSMITTER WITH SUBARU SELECT MONITOR

NOTE:

- A maximum of four keyless transmitter can be registered for each individual vehicle.
- When replacing or adding the keyless transmitter, new registration of transmitter is necessary.

1) Connect the Subaru Select Monitor to the vehicle.

2) Turn the ignition switch to ON.

3) From the «Main menu» on the Subaru Select Monitor, select the {2. Check individual system} → {7. Integrated unit mode} → {8. Transmitter ID registration}, and press the [YES] key.

4) Input the 8-digit ID number attached to the plastic bag of the transmitter, then press the [YES] key.

NOTE:

Press the [▲] key on the Subaru Select Monitor to increase the number, and the [▼] key to decrease. Press the [<] key to move to the digit in the left, and [>] to the right.

5) The ID number you have entered will be shown. Make sure that the ID number shown is the same as that of plastic bag.

6) Press the [YES] key if the ID number is correct. Press the [NO] key if incorrect, to return to the step 3) and try again.

7) «ID registration in process...» is displayed and registration starts.

8) «ID registration done » will be displayed when the registration process is done.

9) To exit, select «END:NO», and press the [NO] key to return to {8. Keyless transmitter ID registration}. If there are additional keyless transmitters to be registered, select «Next registration:YES», and press the [YES] key to return to the step 3).

NOTE:

- If the registration fails, «ID registration failed. Try again.» will be shown. Press the [YES] key to return to the {8. Transmitter ID registration}. And retry from the step 2).

- «END: NO» is shown on the Subaru Select Monitor when fourth keyless transmitter has been registered. Press the [NO] key to return to {8. Keyless transmitter ID registration}.

27. Immobilizer Control Module

A: NOTE

The control of immobilizer system is carried out in body integrated unit.

B: REMOVAL

<Ref. to SL-55, REMOVAL, Body Integrated Unit.>


C: INSTALLATION

Install in the reverse order of removal.


28. Immobilizer Antenna

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screws, and detach the upper column cover and lower column cover.

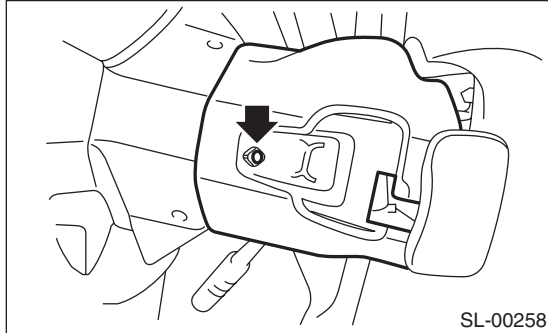

- 3) Remove the instrument panel lower cover. <Ref. to EI-50, REMOVAL, Instrument Panel Lower Cover.>
- 4) Disconnect the immobilizer antenna connector (A) and ignition switch lighting connector (B).
- 5) Loosen the screw and release the lock (D) at opposite side using flat-tip screwdriver (1), and then detach the immobilizer antenna (C).

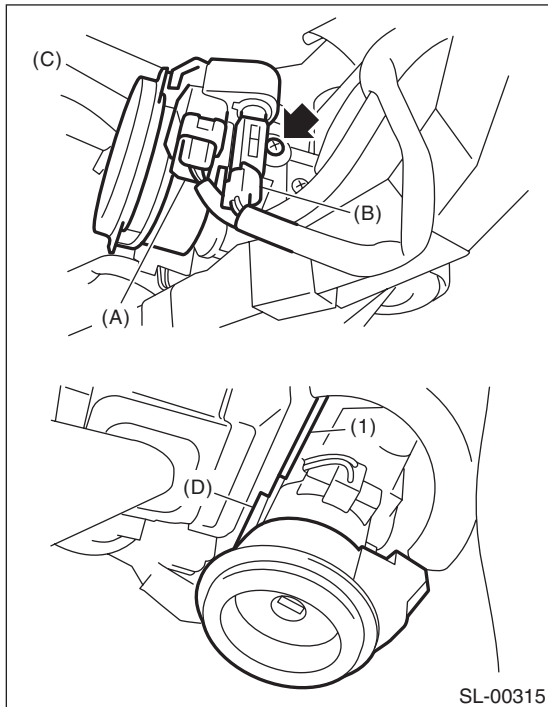

CAUTION:

Do not apply excessive force to remove the immobilizer antenna and lock. Otherwise they may be broken because those parts are the products made of a plastic.

B: INSTALLATION

Install in the reverse order of removal.

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

SR

	Page
1. General Description	2
2. Sunroof Control System	5
3. Glass Lid	6
4. Sunroof Assembly	9
5. Sunroof Motor	11
6. Sunroof Switch	14
7. Sunshade	15


General Description

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

1. General Description

A: COMPONENT

1. SEDAN MODEL

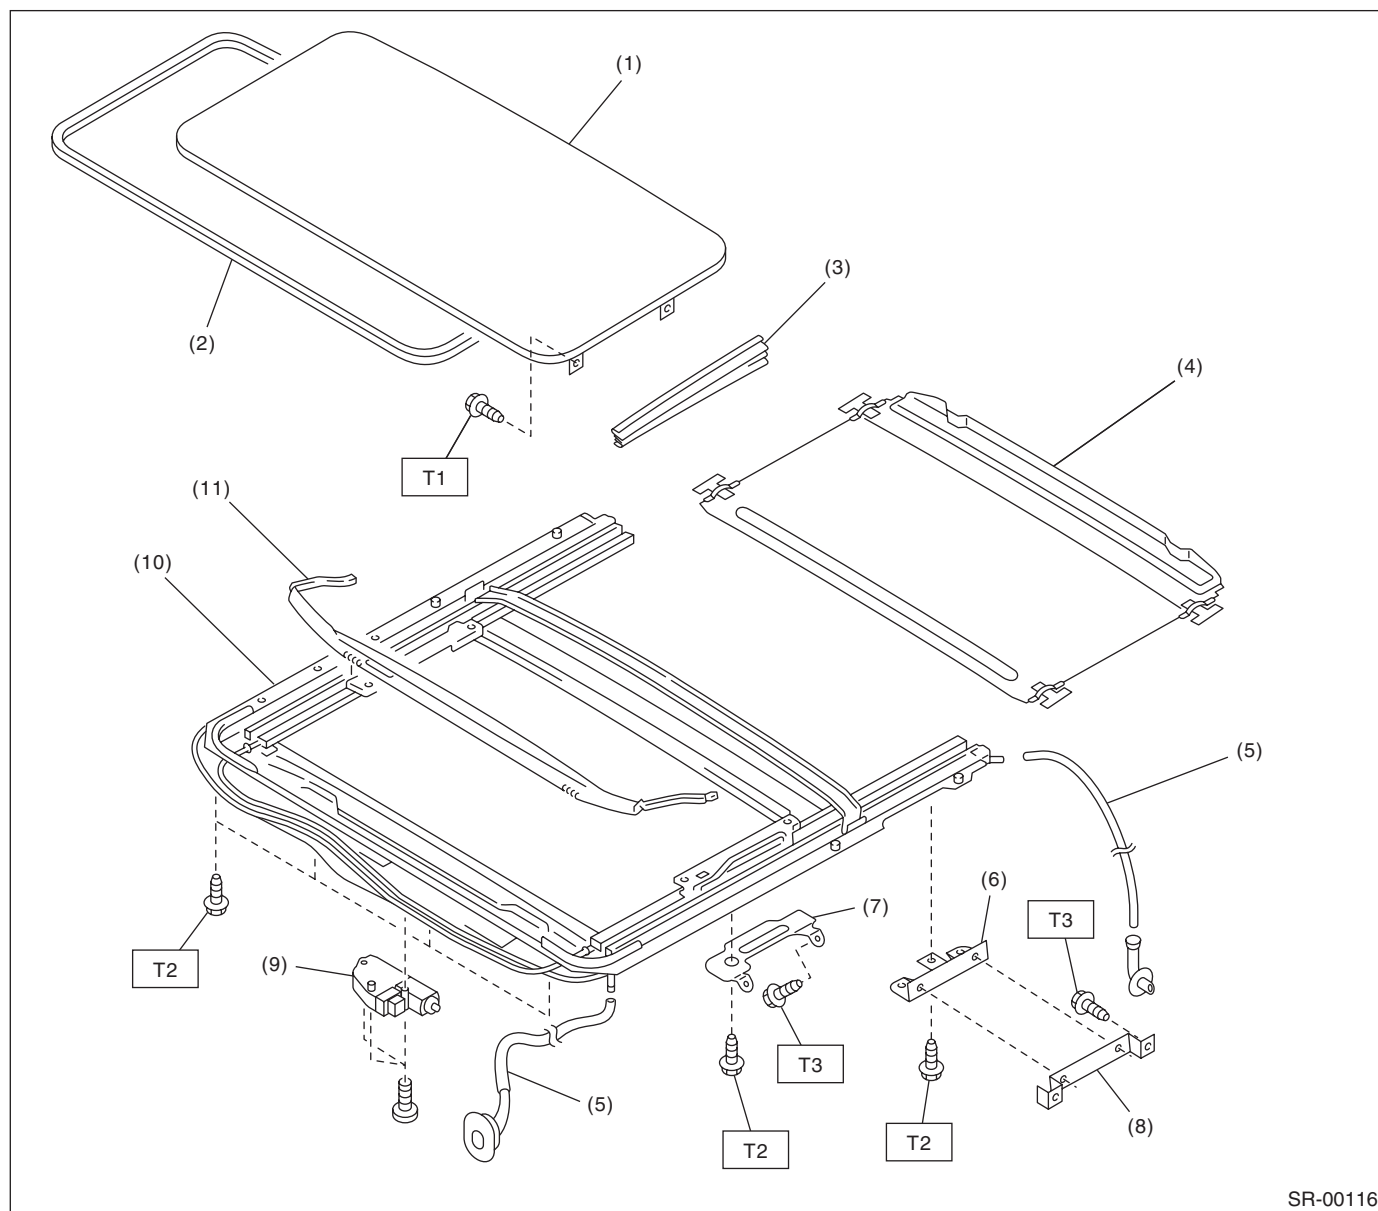

- | | |
|--------------------------------|---------------------------------|
| (1) Glass lid | (7) Assist rail bracket (Front) |
| (2) Weather strip | (8) Sunroof bracket (Rear) |
| (3) Cover | (9) Motor ASSY |
| (4) Sunshade | (10) Frame ASSY |
| (5) Drain tube | (11) Deflector |
| (6) Assist rail bracket (Rear) | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 4.5 (0.46, 3.3)


T2: 6.0 (0.61, 4.4)

T3: 7.5 (0.76, 5.3)

General Description

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

2. WAGON MODEL

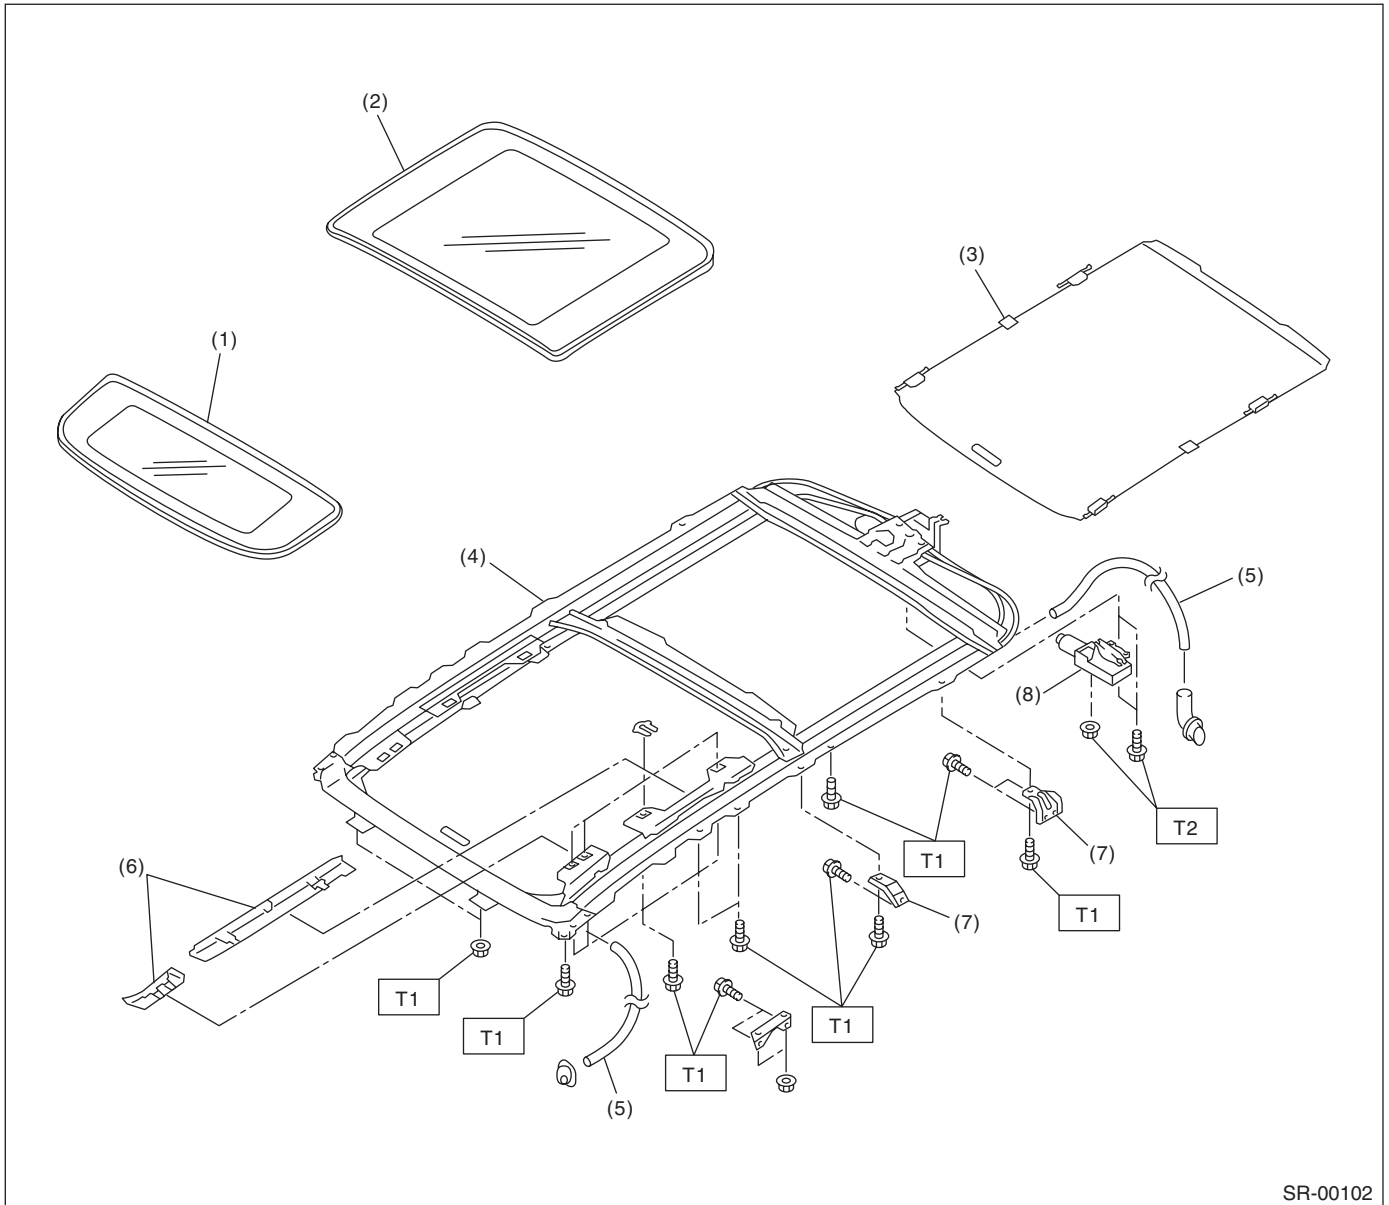

- | | |
|-----------------------|----------------------------|
| (1) Glass lid (Front) | (5) Drain tube |
| (2) Glass lid (Rear) | (6) Cover (Front and rear) |
| (3) Sunshade | (7) Frame bracket |
| (4) Frame ASSY | (8) Motor ASSY |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.3)

T2: 4.5 (0.46, 3.0)

General Description

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control unit, and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable in order to prevent memory deletion.
- Reassemble the parts in the reverse order of disassembly unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely for reassembly.
- After reassembly, make sure functional parts operate smoothly.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
TORX®T20	Used for removing and installing the sunroof motor, glass lid and sunshade. (Sedan model)

Sunroof Control System

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

2. Sunroof Control System

A: WIRING DIAGRAM

1. SUNROOF

<Ref. to WI-160, WIRING DIAGRAM, Sunroof Control System.>

B: INSPECTION

Symptom	Inspection order
Water leakage	1. Check roof panel and glass lid for improper or poor sealing. 2. Check drain tube for clogging. 3. Check sunroof frame seal and body for improper fit.
Booming noise, wind noise and other noise	1. Check glass lid and roof panel for improper clearance. 2. Check sunshade and roof trim for improper clearance.
Abnormal motor noise	1. Check installing part of motor for looseness. 2. Check gears and bearings for wear. 3. Check cable for wear. 4. Check cable pipe for deformities.
Failure of sunroof (Motor operates properly.)	1. Check guide rail for foreign particles. 2. Check guide rail for improper installation. 3. Check parts for mutual interference. 4. Check cable slider for improper clinching. 5. Check cable for improper installation.
Motor does not rotate or rotate improperly.	1. Check fuse for blown out. 2. Check switch for improper function. 3. Check motor for incorrect terminal voltage. 4. Check the relay for improper operation. 5. Check poor grounding system. 6. Check harness for open or short and terminals for poor connections.
Failure turn of glass lid	Check guide rail for foreign particles.

- Failure turn of glass lid while driving rough road.

Glass lid has auto-reverse function. When applied above specified force to the glass lid, the lid turns back and stops. When operating the glass lid (open or close) while driving the rough road, the lid judges vibration as a force and may causes failure turns. When the failure turn is occurred, need to perform the initialize operation with following procedure.

1. INITIALIZE OPERATION (SEDAN MODEL)

- 1) Tilt up the glass lid.
- 2) Release the switch once, and press the tilt up switch again for 15 seconds.
- 3) When the glass lid is raised a little and returned to tilt up position, release the switch for the moment. (Initialization of position detecting function)
- 4) Keep pressing the tilt up switch within 5 seconds from releasing the switch. The glass lid will tilt down → slides open → slides close automatically. (When more than 5 seconds pass, the position detecting function is cancelled.)
- 5) Initialize operation is completed.

2. INITIALIZE OPERATION (WAGON MODEL)

- 1) Apply force to the glass lid in the opening direction while the glass lid (rear) is closing, and make it reverse five times in a row.

However, in the following situation, the initialize operation is canceled.

- When the lid is fully closed once during one of the auto-reverse operations five times in a row.
- When the interval between the auto-reverse operations was more than 30 seconds once.

- 2) When the operation of glass lid shifts to brink operation*, fully close the lid by switch operation.

- 3) Initialize operation is completed.

* Brink operation: A condition where the glass lid only operates for only at the moment when the switch is pressed, even when the switch is held down.

Glass Lid

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

3. Glass Lid


A: REMOVAL

1. SEDAN MODEL

- 1) Completely close the glass lid, and then open the sunshade.
- 2) Remove the cover (A), and then remove the TORX® bolts (B).

CAUTION:


The thread locker is applied to the TORX® bolts, so use the new parts once they are removed.

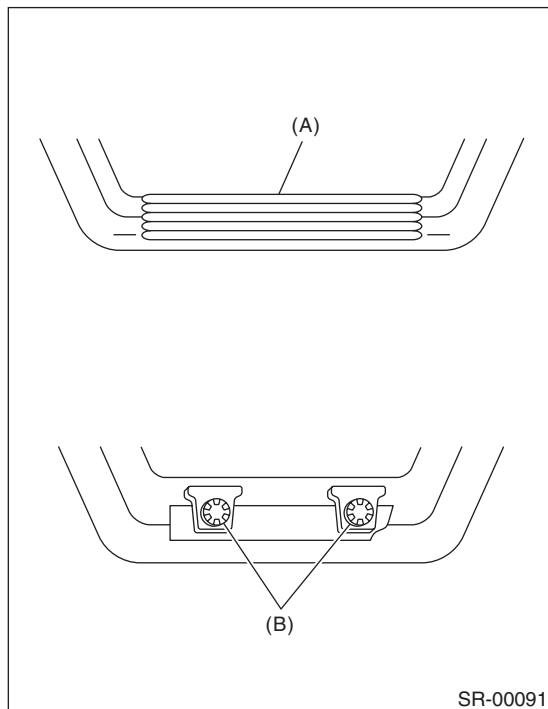

- 3) Remove the glass lid carefully.

2. WAGON MODEL (FRONT)


- 1) Open the sunshade.
- 2) Pull out the cover (A) towards the arrow mark, and remove the nuts (B).

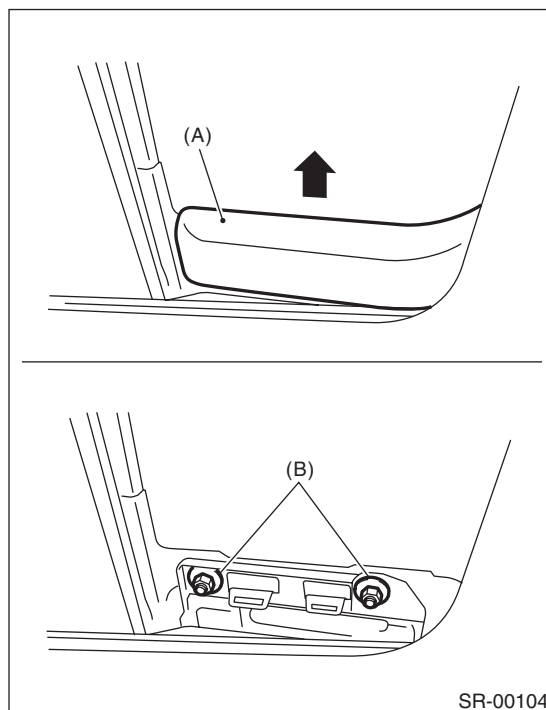

- 3) Remove the glass lid (front) carefully.

3. WAGON MODEL (REAR)

- 1) Tilt the glass lid (front) up, then open the sunshade.
- 2) Remove the cover (A), then remove the nuts (B).

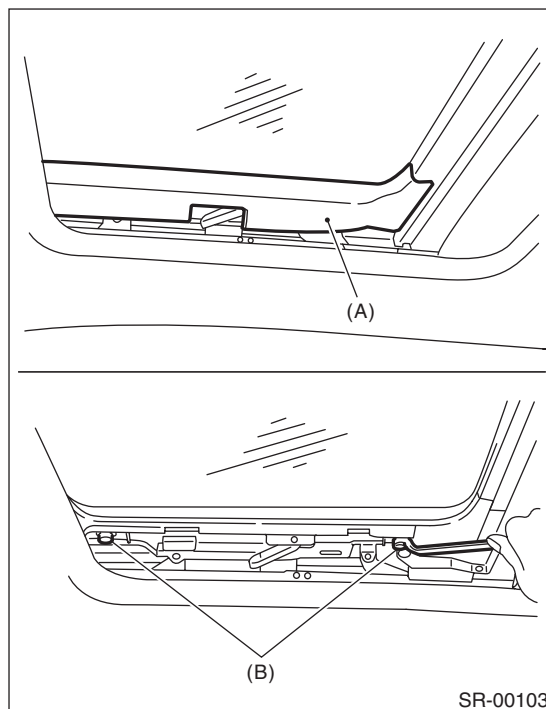

- 3) Remove the glass lid carefully.

Glass Lid

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

B: INSTALLATION

Install in the reverse order of removal.


C: ADJUSTMENT

1. SEDAN MODEL

Loosen the glass lid mounting TORX® bolts (A), and then adjust the height with moving the lid.

Difference in height between glass lid and roof panel L:

$2.0 \pm 1.0 \text{ mm } (0.079 \pm 0.039 \text{ in})$

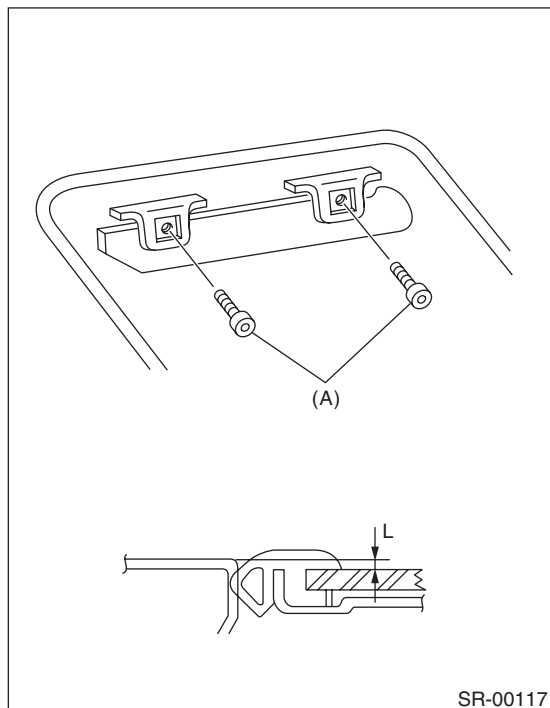


2. WAGON MODEL

Loosen the glass lid installation nuts, and adjust the height by adding (max: four pieces) or extracting (min: zero piece) shims (B) (standard: two pieces) between the glass lid (A) and body.

Difference in height between glass lid and roof panel L:

$2.0 \pm 1.0 \text{ mm } (0.079 \pm 0.039 \text{ in})$

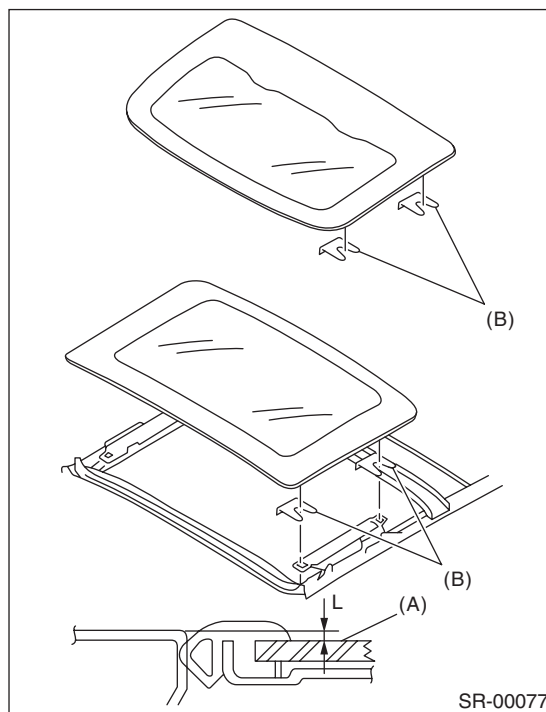

Glass Lid

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

D: FORCED DRIVE

If glass lid dose not operate or is not supplied with power, move the glass lid using the hexagon wrench *.

*: L shape universal purpose hexagon wrench

Sedan model: bolt width 4 mm (0.16 in)

Wagon model: bolt width 5 mm (0.20 in)


1. SEDAN MODEL

1) Remove the spot map light. <Ref. to LI-30, REMOVAL, Spot Map Light.>

2) Insert the hexagon wrench securely until it touches the motor shaft edge.


3) Turn the hexagon wrench, and move the glass lid.

- Turning right, the glass lid open.
- Turning left, the glass lid close.

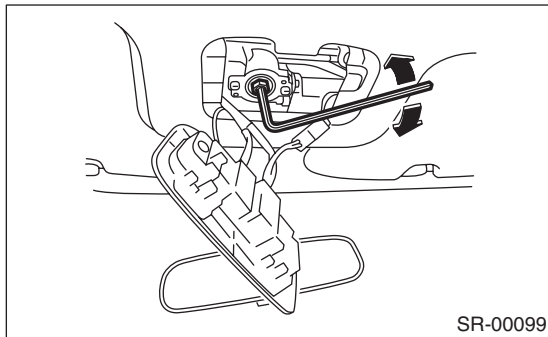

2. WAGON MODEL

1) Slide the slider (A) towards the rear of the vehicle (C), and remove the sun shade from the slider by raising the rod (B).

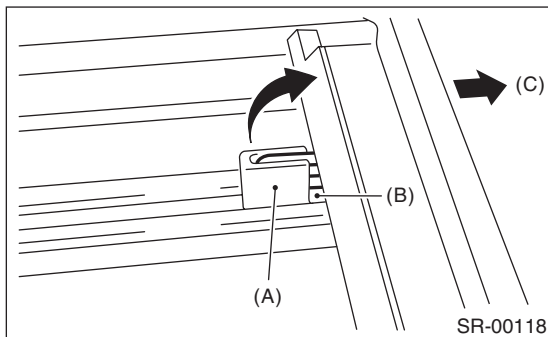


CAUTION:

Be careful not to damage the adjacent parts with the rod end when moving the glass lid with the hexagon wrench.


2) Slide the sunshade forward.

3) Remove the plug to the rear of the roof trim.

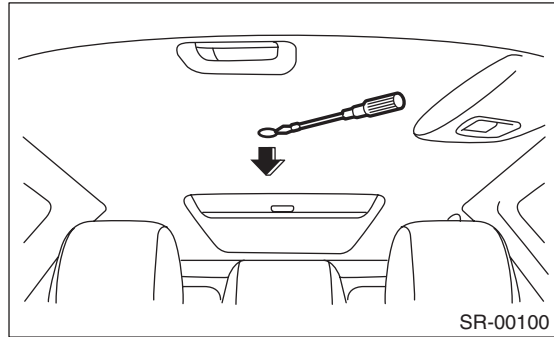

4) Insert the hexagon wrench securely until it touches the motor shaft edge.

5) Turn the wrench to right, and close the glass lid (front and rear).

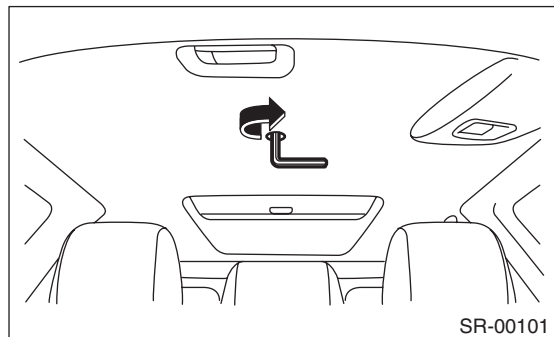

CAUTION:


After a forced operation, make sure to perform an initialize operation. <Ref. to SR-5, INSPECTION, Sunroof Control System.>

4. Sunroof Assembly


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof trim. <Ref. to EI-65, SEDAN MODEL, REMOVAL, Roof Trim.>
- 3) Disconnect the harness connector of sunroof motor.
- 4) Remove the glass lid. <Ref. to SR-6, SEDAN MODEL, REMOVAL, Glass Lid.>
- 5) Remove the drain tube from frame assembly.
- 6) Remove the assist rail bracket (front) (A) and sunroof bracket (rear) (B).

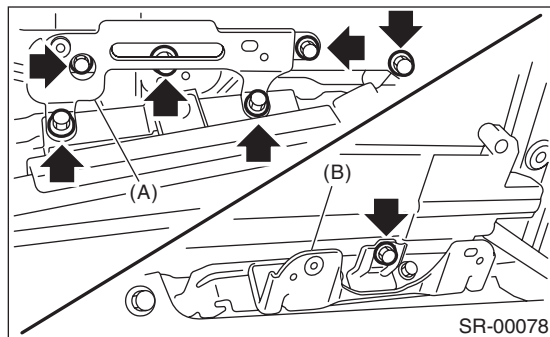


- 7) Remove the nuts, and then remove the frame assembly.

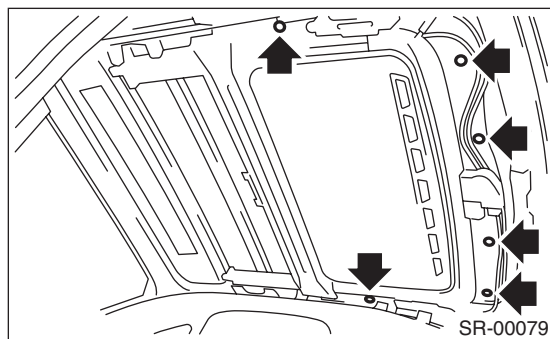


2. WAGON MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof trim. <Ref. to EI-65, WAGON MODEL, REMOVAL, Roof Trim.>
- 3) Disconnect the harness connector of the motor assembly.

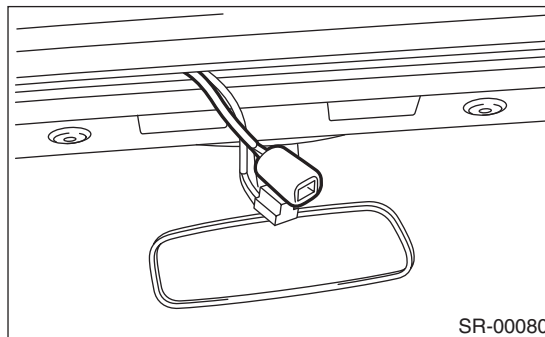

- 4) Remove the front and rear glass lid. <Ref. to SR-6, WAGON MODEL (FRONT), REMOVAL, Glass Lid.> <Ref. to SR-6, WAGON MODEL (REAR), REMOVAL, Glass Lid.>
- 5) Remove the attachment bolts (A) on the rear frame bracket of the frame assembly.

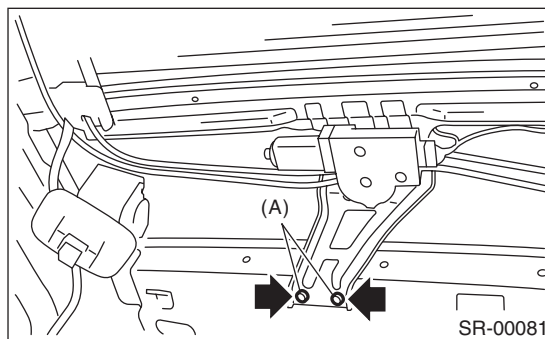


- 6) Remove the drain tube from frame assembly.
- 7) Remove the frame bracket (A).

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

8) Remove bolts (B) and nuts (C), then remove the frame assembly.

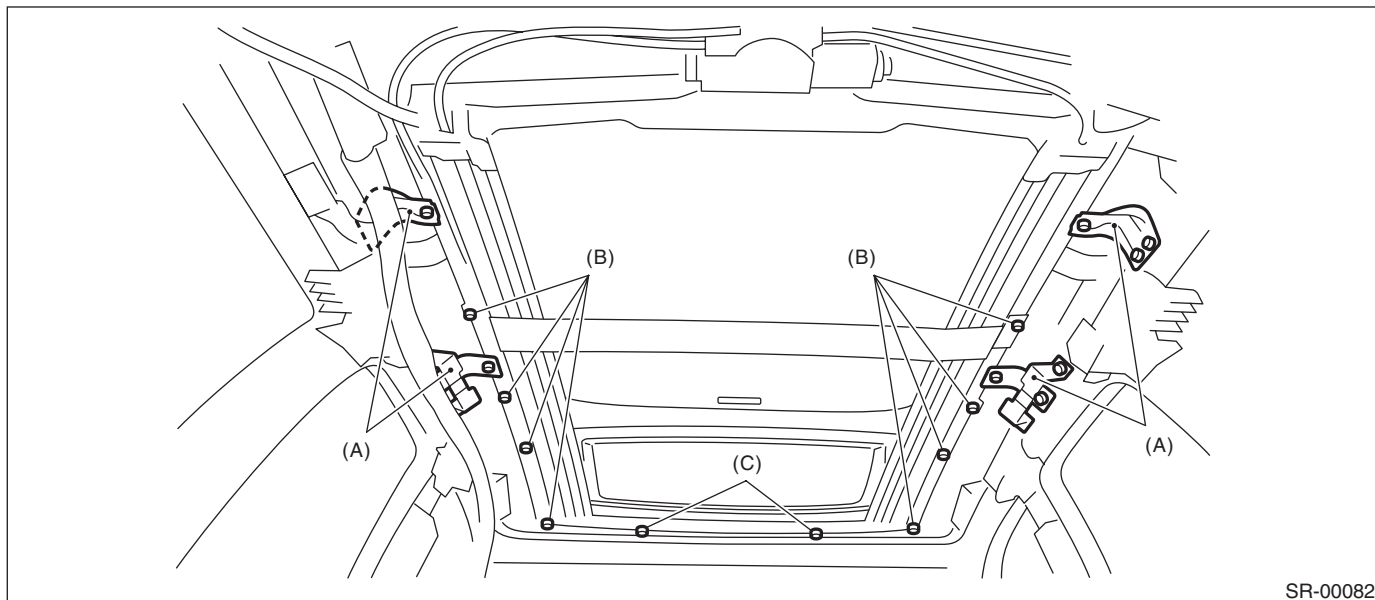

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:


Be careful not to snag the harness.

NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube, insert it securely into drain pipe.

Length A:

15 mm (0.59 in) or more

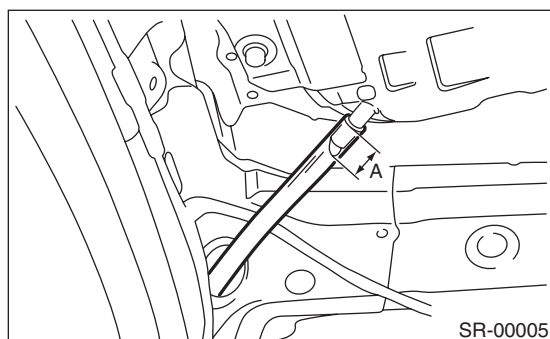

C: DISASSEMBLY

- 1) Remove the sunroof motor. <Ref. to SR-11, REMOVAL, Sunroof Motor.>
- 2) Remove the sunshade. <Ref. to SR-15, REMOVAL, Sunshade.>

D: ASSEMBLY

Assemble in the reverse order of disassembly.

5. Sunroof Motor


A: REMOVAL

CAUTION:

- When removing the clip, use great care not to damage the roof trim.
- Never rotate the sunroof motor after removing it.

1. SEDAN MODEL

- 1) Completely close the glass lid.
- 2) Disconnect the ground cable from battery.
- 3) Remove the spot map light. <Ref. to LI-30, REMOVAL, Spot Map Light.>
- 4) Disconnect the harness connector and remove the TORX® bolts, and then remove the motor assembly.

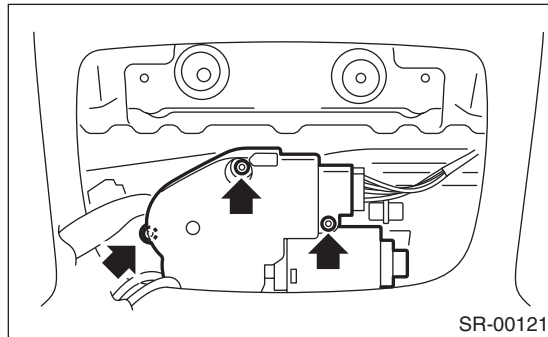


CAUTION:

When removing the motor assembly, secure the cable wires to prevent moves.


2. WAGON MODEL

- 1) Fully close the glass lid (front) and glass lid (rear).
- 2) Disconnect the ground cable from battery.
- 3) Remove the luggage room light. <Ref. to LI-32, ROOM LIGHT SWITCH, REMOVAL, Luggage Room Light.>
- 4) Remove the roof trim. <Ref. to EI-65, WAGON MODEL, REMOVAL, Roof Trim.>
- 5) Pass the seat belt tongue located on the center of the rear seat through the hole, and then pull it out to the opposite side of the trim.

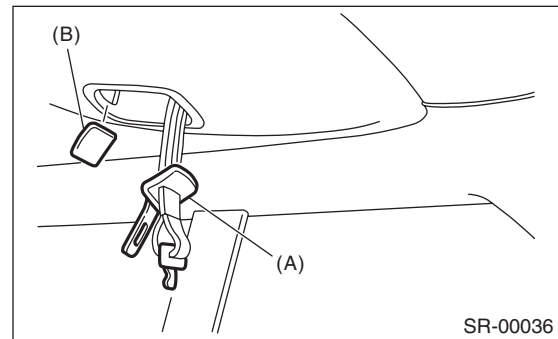

- (A) Tongue
(B) Cover

- 6) Remove the clips, and let the rear end of the roof trim hang.
- 7) Disconnect the harness connector (A), and then remove the motor assembly mounting bolts (B) and nut (C).

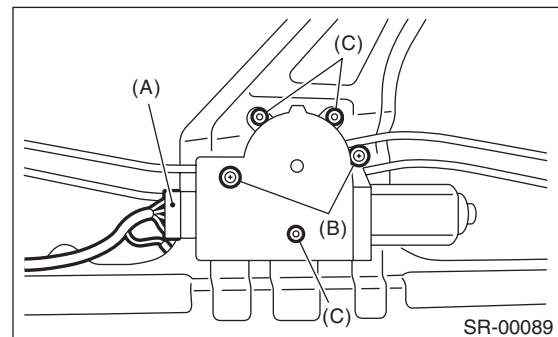

Sunroof Motor

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


B: INSTALLATION

CAUTION:

When installing the motor assembly, be careful not to move the sunroof cable.

1. SEDAN MODEL

1) Align the coulisse assembly and link assembly in the same position.

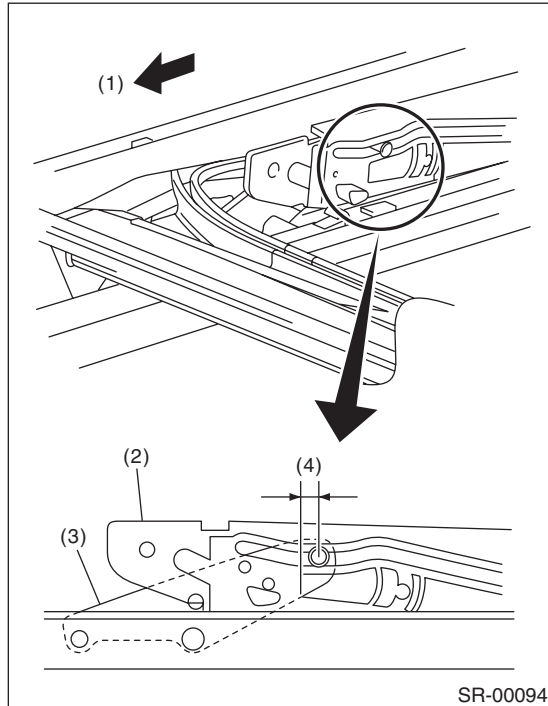

- (1) Front
- (2) Coulisse ASSY
- (3) Link ASSY
- (4) 4.7 mm (0.185 in)

2) Install the motor assembly.

3) Connect the harness connector of motor assembly, and then connect the battery ground cable to battery.

4) Perform the initialize operation of motor.

(1) Tilt up the glass lid.

(2) Release the switch once, and press the tilt up switch again for 15 seconds.

(3) When the glass lid is raised a little and on tilt up position, release the switch for the moment.

(4) Keep pressing the tilt up switch within 5 seconds from releasing the switch, glass lid automatically performs the tilts down → slides open → slides close operation, then the initialize operation is completed.


5) Check the operation of sunroof with following table.

Operation	Switch position
(1) Glass lid closes completely.	Close
(2) Glass lid tilt up to the top position.	Tilt up
(3) Glass lid closes completely.	Tilt down
(4) Glass lid opens completely.	Open
(5) Glass lid closes 150 mm (5.91 in) away from the completely closed position.	Close
(6) Glass lid closes completely.	Close

6) Install the trim in the reverse order of removal.

2. WAGON MODEL

Check that the wedge of the glass lid (front) bracket is in contact at the vehicle forward direction end. At this time, the lid is at the fully open position.

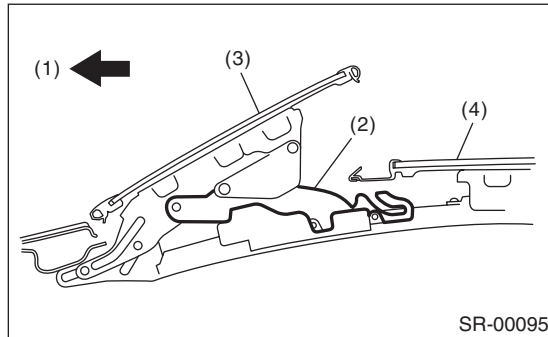

- (1) Front
- (2) Wedge
- (3) Glass lid (Front)
- (4) Glass lid (Rear)

- 1) Install the motor assembly.
- 2) After the installation of the motor assembly, check again that the wedge of glass lid (front) bracket part is in contact at the vehicle forward direction end.
- 3) Connect the harness connector of motor assembly, and then connect the battery ground cable to battery.
- 4) Perform the initialize operation of motor.
 - When replacing the motor, fully close the glass once and perform position initialization, because the movement of the glass lid will shift to brink operation.
 - When reusing the motor, operate the auto-reverse function five times in a row to shift to the brink operation, then perform the initialization of position.
- 5) Check the operation of sunroof with following table.

Operation	Switch position
(1) Glass lid (front) and glass lid (rear) closes completely.	Close
(2) Glass lid (front) tilts up to the ventilating position.	Open
(3) Glass lid (front) tilts up to top position, and glass lid (rear) opens to just before the completely open position.	Open
(4) Glass lid (rear) opens completely.	Open
(5) Glass lid (rear) closes at a position 150 mm (5.91 in) from rear end of the tilted up glass lid (front).	Close
(6) Glass lid (rear) closes completely, and glass lid (front) stops in the ventilating position.	Close
(7) Glass lid (front) lowers, and then glass lid (front) and glass lid (rear) closes completely.	Close

- 6) Install the trim in the reverse order of removal.



Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

6. Sunroof Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the spot map light lens (A) and sunroof switch mounting screws (B).

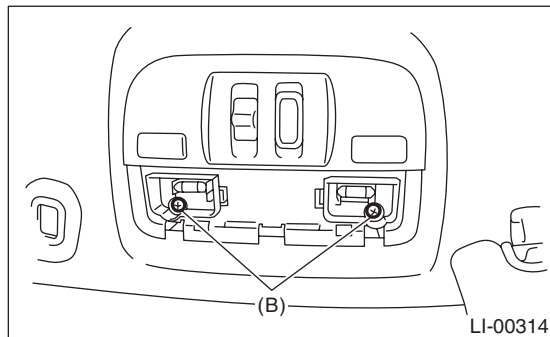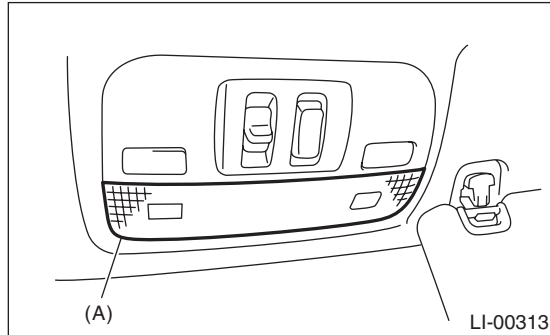

- 3) Disconnect the harness connector, and then remove the sunroof switch.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SEDAN MODEL


Measure the sunroof switch resistance.

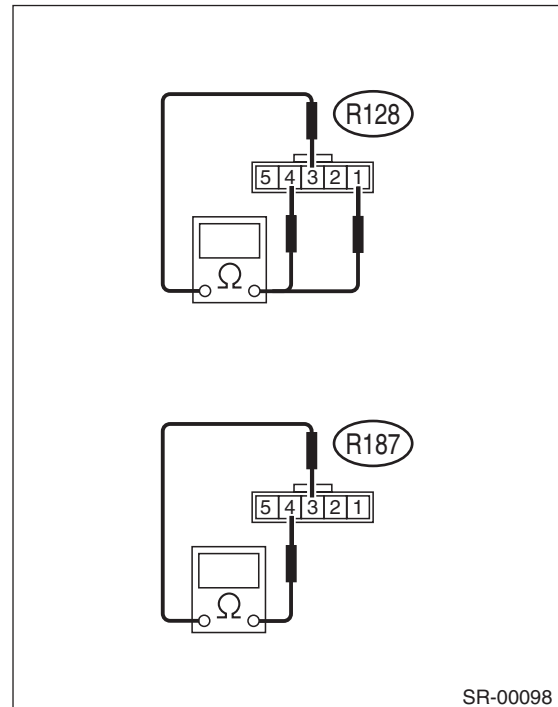

Switch position	Terminal No.	Standard	Connector No.
Open	1 and 3	Less than 1 Ω	R128
Close	3 and 4	Less than 1 Ω	
Tilt up	1 and 3	Less than 1 Ω	R187
Tilt down	3 and 4	Less than 1 Ω	

2. WAGON MODEL

Measure the sunroof switch resistance.

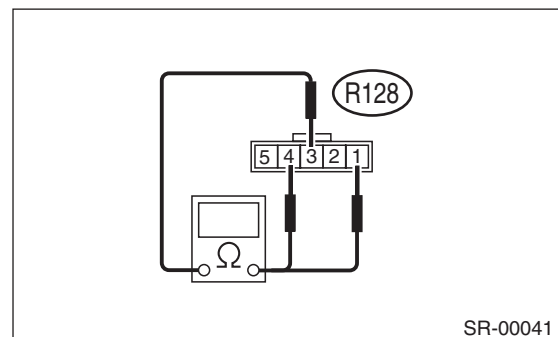

Switch position	Terminal No.	Standard
Open	1 and 3	Less than 1 Ω
Close	3 and 4	Less than 1 Ω

NOTE:


If glass lid dose not operate or is not supplied with power, move the glass lid using the hexagon wrench.
<Ref. to SR-8, FORCED DRIVE, Glass Lid.>

7. Sunshade


A: REMOVAL

1. SEDAN MODEL

- 1) Remove the glass lid. <Ref. to SR-6, SEDAN MODEL, REMOVAL, Glass Lid.>
- 2) Loosen the TORX® bolt to remove the front sunshade bracket.

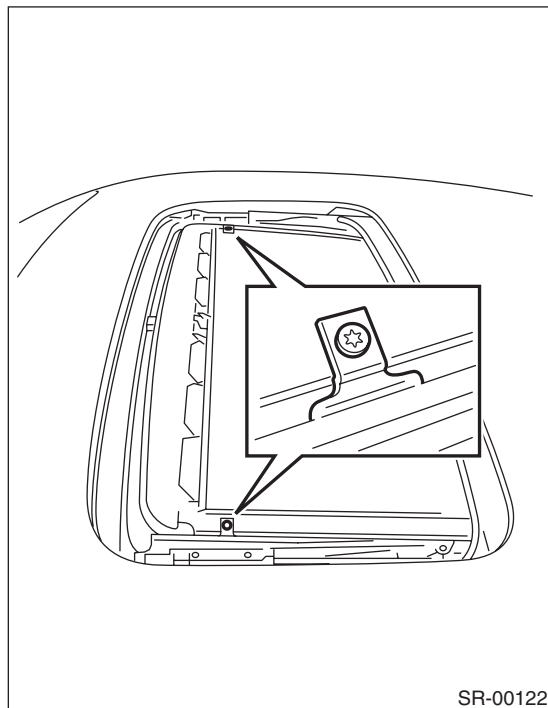


- 3) Pull the sunshade until the rear sunshade bracket comes into the sight, then loosen the TORX® bolts to remove the sunshade.

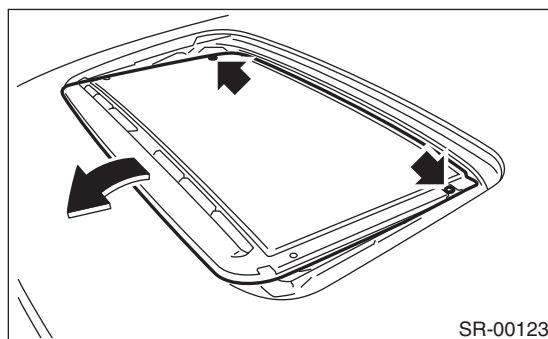


2. WAGON MODEL

- 1) Remove the frame assembly.
- 2) Remove the shade stopper (A) of the sunshade.

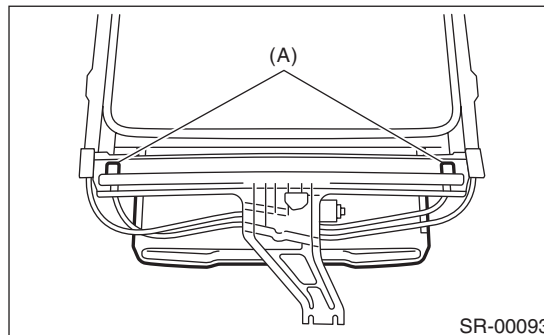

- 3) Pull out the sunshade (A) from the sunroof frame.

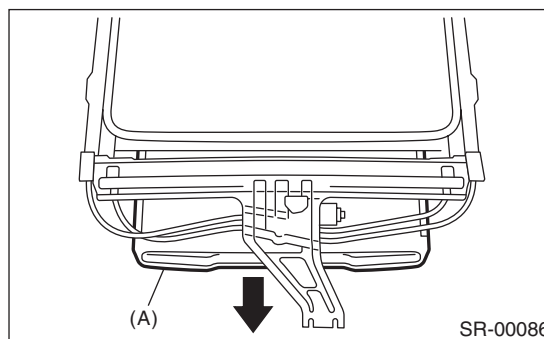


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

1) Attach a spring balance to sunshade edge using a cloth.

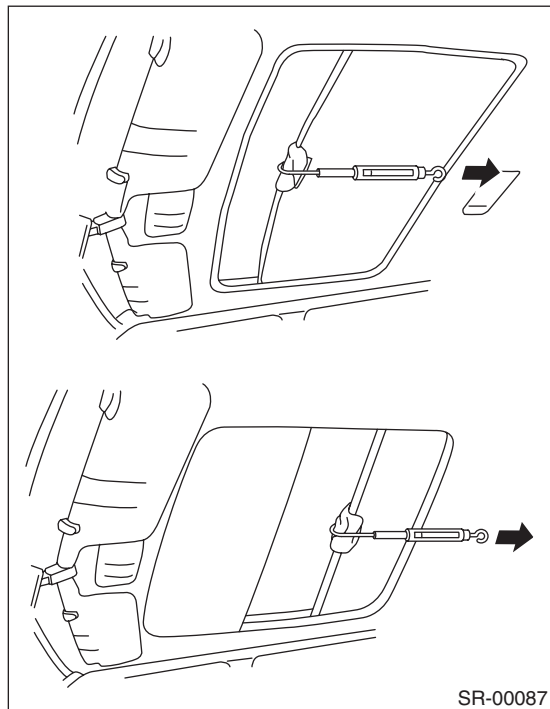

2) Pull the spring balance to measure moving load of the sunshade.

Moving load of sunshade:

Standard

18.0±5.0 N (1.8±0.5 kgf, 13±3.7 lbf)

NOTE:

Moving load is larger at the beginning of pulling a spring balance, so take a spring balance reading while sunshade sliding smoothly.

3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	24
3. Front Hood Grille	25
4. Front Under Cover	26
5. Floor Under Protector	27
6. Fuel Tank Protector	28
7. Mud Guard	29
8. Front Bumper	30
9. Rear Bumper	37
10. Cowl Panel	39
11. Roof Spoiler	40
12. Side Sill Spoiler	41
13. Side Protector	43
14. Side Garnish	45
15. Rear Quarter Protector	46
16. Roof Rail	47
17. Door Trim	48
18. Instrument Panel Lower Cover	50
19. Glove Box	51
20. Console Box	52
21. Center Console	53
22. Instrument Panel Assembly	55
23. Lower Inner Trim	59
24. Upper Inner Trim	60
25. Rear Quarter Trim	61
26. Sun Visor	63
27. Assist Grip	64
28. Roof Trim	65
29. Rear Gate Trim	66
30. Rear Shelf Trim	67
31. Trunk Room Trim	68
32. Floor Mat	70
33. Luggage Floor Box	71
34. Trunk Lid Garnish	72
35. Rear Gate Garnish	73
36. Heat Shield Cover	74
37. Ornament	75

General Description

WIPER AND WASHER SYSTEMS


1. General Description

A: SPECIFICATION

Front wiper motor	Input	12 V — 72 W or less
Rear wiper motor	Input	12 V — 42 W or less
Front washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less
Rear washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less

B: COMPONENT

1. FRONT WIPER

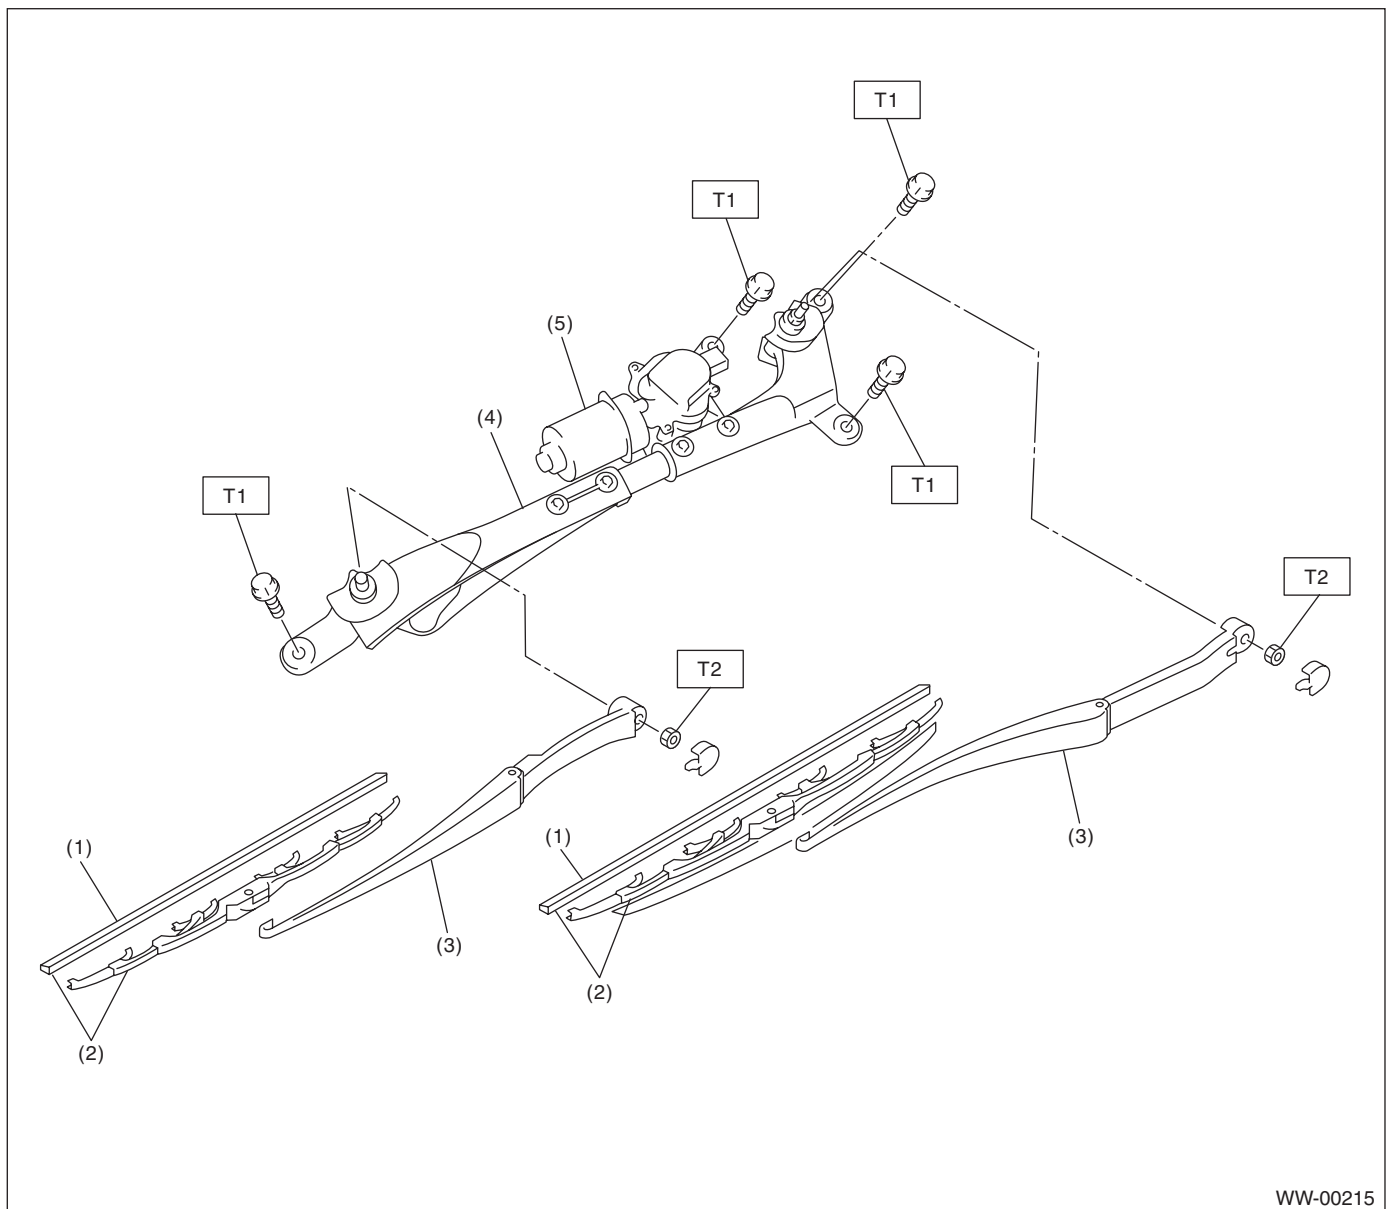

- (1) Wiper rubber
- (2) Wiper blade ASSY
- (3) Wiper arm


- (4) Wiper link ASSY
- (5) Wiper motor ASSY

Tightening torque: N·m (kgf·m, ft·lb)

T1: 6.0 (0.61, 4.4)

T2: 20 (2.0, 14.5)

2. REAR WIPER (WAGON MODEL)

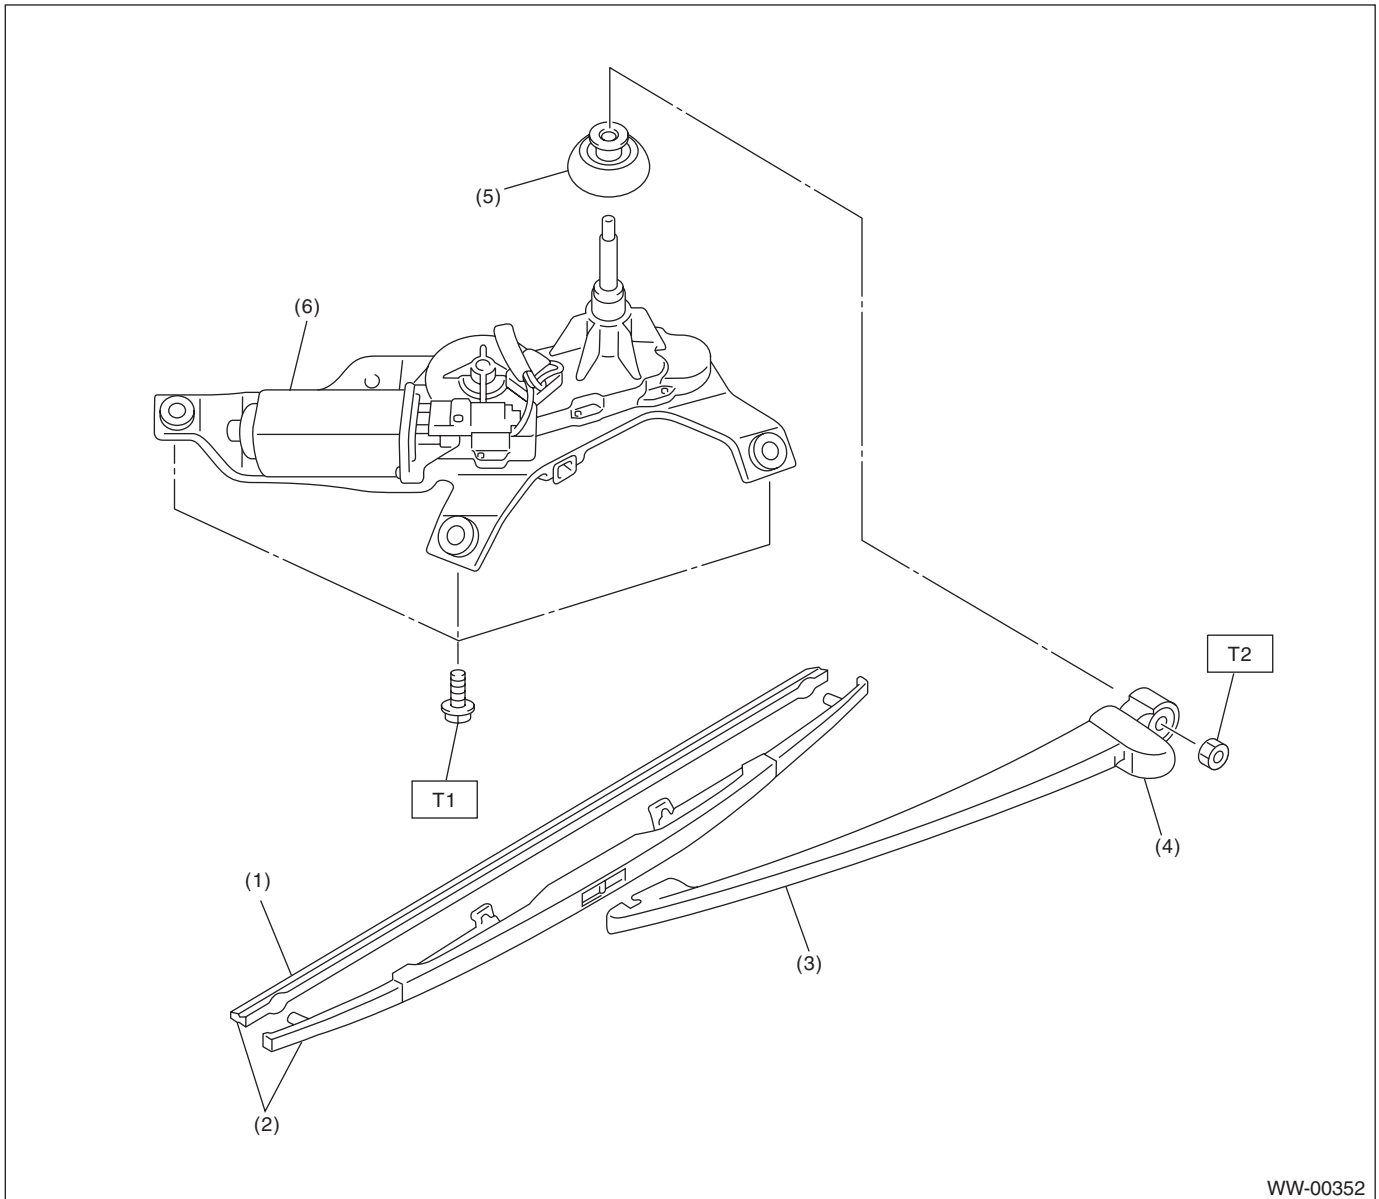

WW-00352

- | | |
|----------------------|----------------------|
| (1) Wiper rubber | (4) Wiper arm cover |
| (2) Wiper blade ASSY | (5) Cap |
| (3) Wiper arm | (6) Wiper motor ASSY |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.77, 6.0)

T2: 8.0 (0.82, 5.9)

General Description

WIPER AND WASHER SYSTEMS

3. WASHER TANK

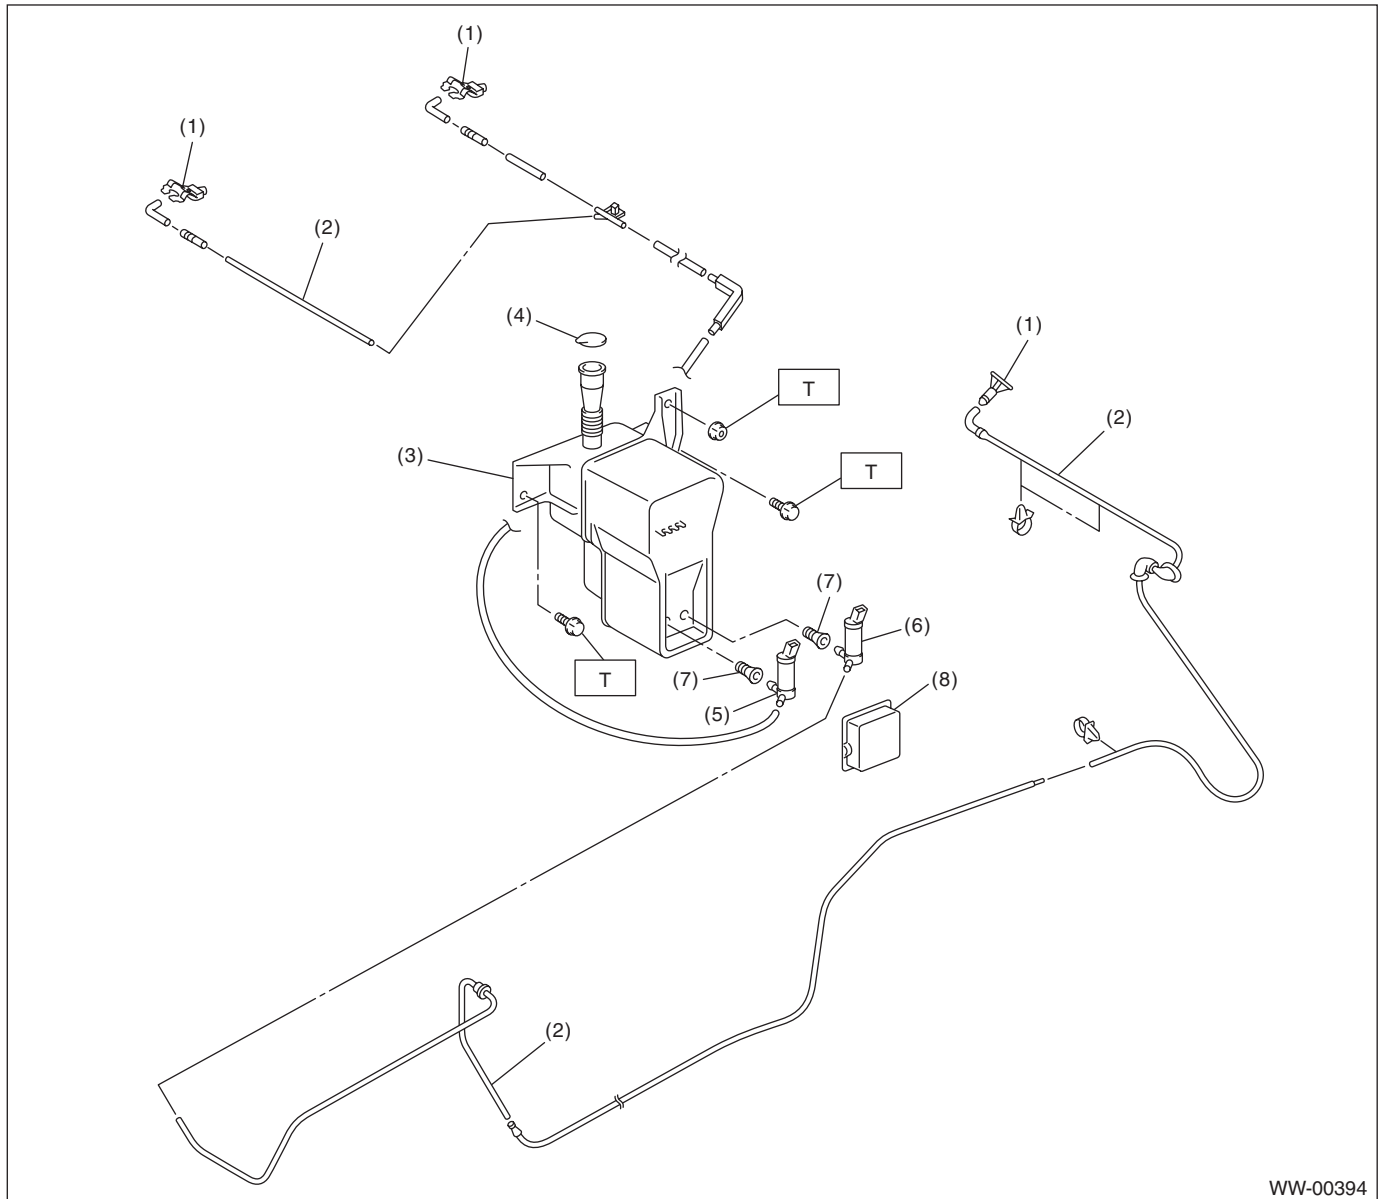

WW-00394

- | | |
|---------------------|------------------------|
| (1) Washer nozzle | (5) Front washer motor |
| (2) Washer hose | (6) Rear washer motor |
| (3) Washer tank | (7) Grommet |
| (4) Washer tank cap | (8) Washer motor cover |

Tightening torque: N·m (kgf-m, ft-lb)

T: 6.0 (0.61, 4.4)

C: CAUTION

- Connect the connectors and hoses securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.
- Be careful with the airbag system wiring harness which passes near electrical parts and switches.
- All airbag system wiring harness and connectors are colored yellow. Do not use a tester equipment on these circuits.
- Care must be taken when connecting the hoses to pipes so that there are no bends or blockage.
- If even a small amount of silicon oil or grease enters tank and washer fluid passages, an oil film will be formed on the glass and will cause the wiper to chatter and judder. Make sure that no oil comes into contact with the system.

2. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

<Ref. to WI-133, WIRING DIAGRAM, Front Wiper and Washer System.>

2. WIPER AND WASHER (REAR)

<Ref. to WI-134, WIRING DIAGRAM, Rear Wiper and Washer System.>

B: INSPECTION

Symptom	Repair order
Wiper and washers do not operate.	1. Wiper fuse (Front: F/B No. 30, Rear: F/B No. 23) 2. Combination switch 3. Wiper motor assembly 4. Wiring harness 5. Body integrated unit (rear wiper only)
Wipers do not operate in LO or HI.	1. Combination switch 2. Wiper motor assembly 3. Wiring harness
Wipers do not operate in INT.	1. Combination switch 2. Wiper motor assembly 3. Wiring harness 4. Body integrated unit (rear wiper only)
Washer motor does not operate.	1. Washer switch 2. Washer motor 3. Wiring harness
Wipers do not operate when washer switch is ON.	1. Wiper motor assembly 2. Wiring harness
Washer fluid spray does not operate properly.	1. Washer motor 2. Washer hose and nozzle


Combination Switch (Wiper)

WIPER AND WASHER SYSTEMS


3. Combination Switch (Wiper)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>
- 3) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 4) Remove the screws and remove the steering column covers (upper & lower).

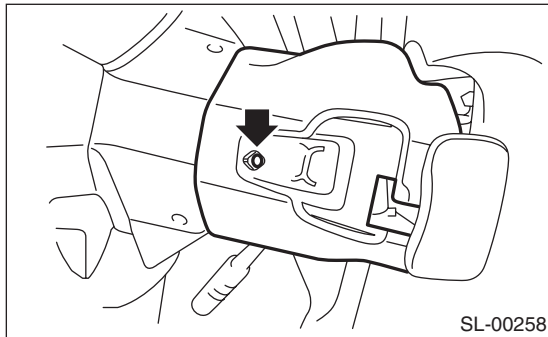

- 5) Disconnect the connector from the combination switch.
- 6) Remove the three screws, and pull out the combination base switch assembly.

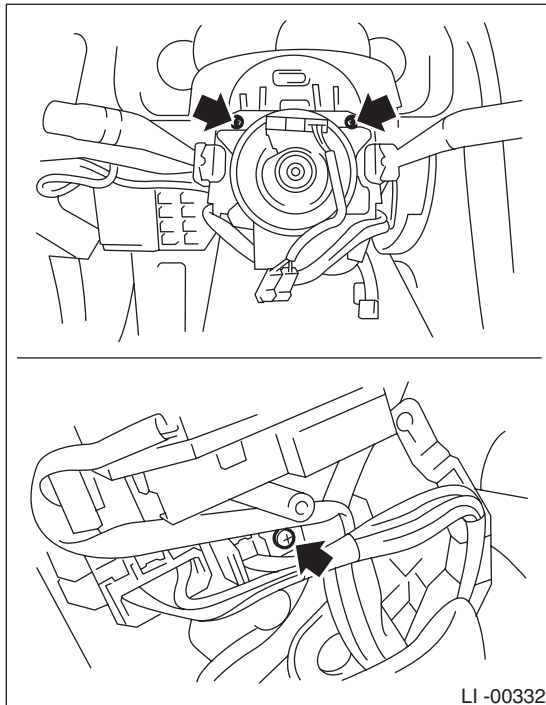

- 7) Remove the screws which secure the switch, then remove the combination switch.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. COMBINATION SWITCH

- 1) Inspect the continuity between each connector terminal.

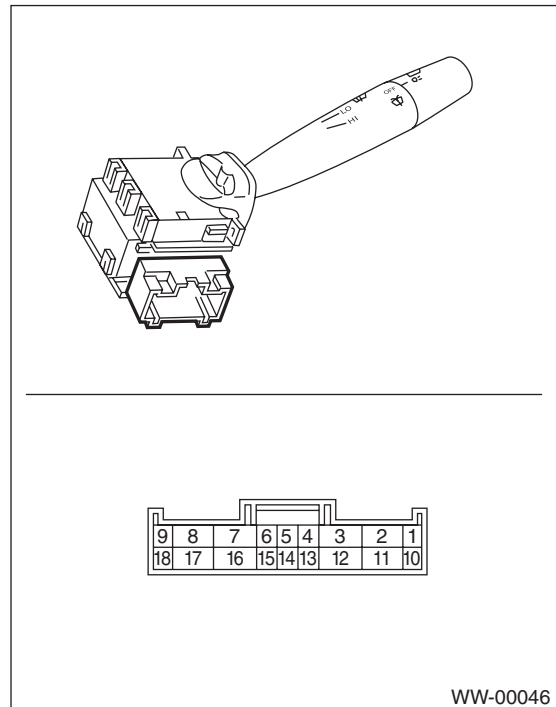

	Switch position	Terminal No.	Standard
Front	OFF	7 and 16	Less than 1 Ω
	INT	7 and 16	Less than 1 Ω
	LO	7 and 17	Less than 1 Ω
	HI	8 and 17	Less than 1 Ω
	Washer ON	2 and 11	Less than 1 Ω
Rear	Washer ON	2 and 12	Less than 1 Ω
	OFF	—	1 M Ω or more
	INT	2 and 13	Less than 1 Ω
	ON	2 and 10	Less than 1 Ω
	Washer ON	2 and 12 12 and 10 2 and 10	Less than 1 Ω

- 2) If continuity is not as specified, replace the switch.


2. FRONT WIPER

1) Check with Subaru Select Monitor

Step	Check	Yes	No
1 CHECK INPUT SIGNAL TO BODY INTEGRATED UNIT. When the front wiper switch is operated, check the input signal using the Subaru Select Monitor. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the input signal when the front wiper switch is set to LO or HI.	Is the input signal normal?	End.	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>

2) Check the intermittent operation (inspection of the wiper switch alone)

- (1) Set the voltage meter between connector terminal No. 7 (+) and No. 2 (-).
- (2) Connect the battery between connector terminal No. 7 (+) and No. 2 (-).
- (3) Turn the wiper switch to INT.
- (4) Connect the battery ground terminal to the connector terminal No. 16 for five seconds.
- (5) After connecting the battery ground terminal for five seconds in step (4), connect the battery positive terminal to the connector terminal No. 16 for five seconds.
- (6) After connecting the battery ground terminal and the battery positive terminal to the connector terminal No. 16 for five seconds each in step (4) and (5), connect the ground terminal to the connector terminal No. 16 again.
- (7) Perform the step (1) to (6) above at MIN and MAX position of the intermittent control switch. If operation is not as specification, replace the wiper switch assembly.

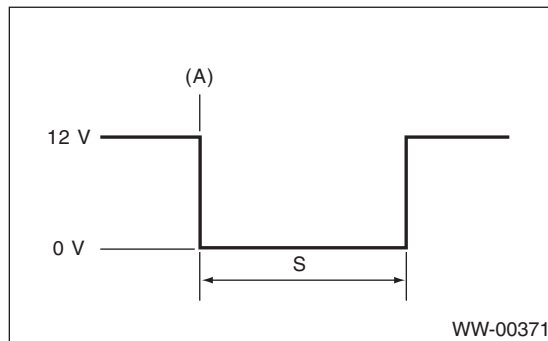

S: Intermittent down-time (sec.)

(A): Connect battery terminal to No. 16 in Step (4).

Intermittent stationary time specification

MIN: Approx. 2 seconds

MAX: Approx. 16 seconds

Combination Switch (Wiper)

WIPER AND WASHER SYSTEMS

3) Inspect the vehicle speed response (With the wiper switch installed on the vehicle)

(1) OPERATIONAL CHECK

Position the front wiper switch to INT, then measure the intermittent stationary time at each vehicle speed.

Switch position	Vehicle speed (km/h (MPH))	Intermittent stationary time (sec.)
MIN.	0 (0)	Approx. 4
	30 (19)	Approx. 1.5
	60 (37)	Approx. 1
MAX.	0 (0)	Approx. 21
	30 (19)	Approx. 19.5
	60 (37)	Approx. 18

If operation is not as specified, replace the switch.

(2) CHECK VEHICLE SPEED SIGNAL.

Raise the vehicle speed to more than 10 km/h (6 mph), then measure the voltage between the wiper switch connector and the chassis ground.

Terminals

No. 15 (+) — Chassis ground (-):

Check	Yes	No
Does the voltage repeat 12 V and 0 V?	Vehicle speed signal is normal.	Replace the wiper switch.

(3) CHECK THE VEHICLE SPEED SIGNAL HARNESS.

Measure the resistance between the wiper switch connector and the VDC control module.

Terminals

Wiper switch connector No. 15 — VDC control module No. 33:

Check	Yes	No
Is the resistance 0 Ω?	Replace the wiper switch.	Repair the harness.

3. REAR WIPER

1) Check with Subaru Select Monitor

Step	Check	Yes	No
1 CHECK INPUT OF REAR WIPER SWITCH. Check the input from body integrated unit using the Subaru Select Monitor. 1) Connect the Subaru Select Monitor to the data link connector. 2) Turn the ignition switch to ON. 3) Select {Integ. unit} from main menu. 4) Select the {Current Data Display & Save}. 5) Check the input of the rear wiper switch.	Is the input normal?	Go to step 2.	Check the rear wiper switch. <Ref. to WW-6, INSPECTION, Combination Switch (Wiper).>
2 CHECK OUTPUT OF BODY INTEGRATED UNIT. When the rear wiper switch is operated, check the output using the Subaru Select Monitor. 1) Turn the ignition switch to ON. 2) Operate the rear wiper switch and set to each position of ON and INT. 3) At this time, check the body integrated unit output.	When set to ON, is ON output continuous? When set to INT, is ON/OFF output repeated? (INT OFF time (when vehicle parked): 12 seconds)	Check the rear wiper motor. <Ref. to WW-18, INSPECTION, Rear Wiper Motor.>	Replace the body integrated unit. <Ref. to SL-55, Body Integrated Unit.>

Combination Switch (Wiper)

WIPER AND WASHER SYSTEMS

2) Check rear wiper motor circuit.

Step	Check	Yes	No
1 CHECK POWER SUPPLY CIRCUIT OF THE REAR WIPER MOTOR. 1) Disconnect the harness connector of the rear wiper motor. 2) Turn the ignition switch to ACC. 3) Measure the voltage between the rear wiper motor harness connector terminal and chassis ground. Connector & terminal (D43) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	- Check the fuse (No. 23 in fuse & relay box). - Check the fusible link (No. 6 in main fuse box).
2 CHECK GROUND CIRCUIT OF REAR WIPER MOTOR. 1) Turn the ignition switch to OFF. 2) Measure the resistance between the rear wiper motor harness connector terminal and chassis ground. Connector & terminal (D43) No. 3 — Chassis ground:	Is the resistance less than 10 Ω ?	Go to step 3.	Repair the open circuit of the rear wiper motor ground circuit.
3 CHECK HARNESS BETWEEN BODY INTEGRATED UNIT AND REAR WIPER MOTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the harness connector of body integrated unit. 3) Disconnect the harness connector of the rear wiper motor. 4) Measure the resistance between the harness connector terminals of the body integrated unit and rear wiper motor. Connector & terminal (B280) No. 1 — (D43) No. 2: (B280) No. 8 — (D43) No. 4:	Is the resistance less than 10 Ω ?	Go to step 4.	Repair the open circuit of the harness between body integrated unit and rear wiper motor.
4 CHECK OPERATION OF REAR WIPER MOTOR. 1) Remove the rear wiper motor. 2) Check the rear wiper motor. <Ref. to WW-18, INSPECTION, Rear Wiper Motor.>	Does the rear wiper motor rotate normally?	End.	Replace the rear wiper motor.

NOTE:

Rear wiper intermittent time (AT model only)

Select lever position (AT model only)	Vehicle speed (km/h (MPH))	Intermittent stopping time (sec.)
Rev.	—	Continuous operation
Except for reverse mode	80 — (50 —)	3
	50 — 80 (31 — 50)	6
	20 — 50 (12 — 31)	9
	0 — 20 (0 — 12)	12

4. Wiper Blade


A: REMOVAL

CAUTION:

When replacing the wiper blade, if standing up the wiper arm, be sure to stand up the driver's side wiper arm first, and then passenger's side wiper arm next. Also, when putting the wiper arms back, be sure to start with passenger's side first, then driver's side next. Doing this in the reverse order may result in the driver's side wiper blade hitting the passenger's side wiper arm and causing damage.


1. FRONT

While pushing the locking clip (A) up, pull out the blade to the direction of the arrow and remove it from the wiper arm.

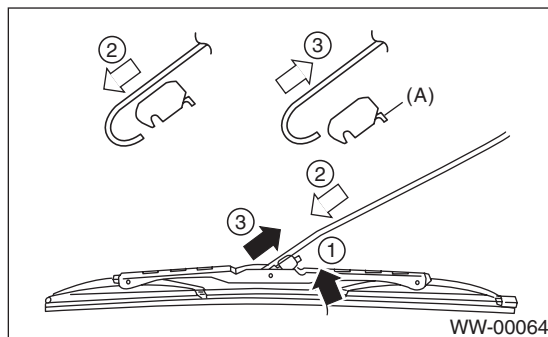

2. REAR

Turn the blade in the direction of arrow (A) and remove it from arm.

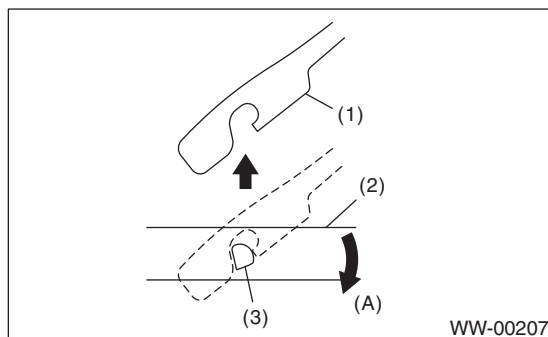

- (A) Turn the wiper blade.
- (1) Wiper arm
- (2) Wiper blade
- (3) Wiper blade attachment section


B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Confirm that the clip is locked securely.

C: DISASSEMBLY


1. FRONT

Pull side (A) of the wiper rubber stopper and remove the rubber from the blade assembly.

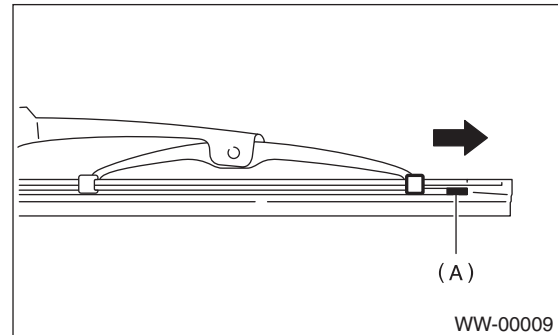

2. REAR


Pull the wiper rubber top slightly from stopper (A) and pull out completely.

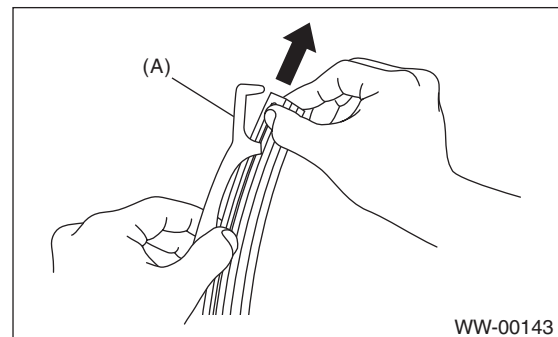


D: ASSEMBLY

1. FRONT


1) Insert the wiper rubber onto the blade so that the stopper is in the position shown in the figure.

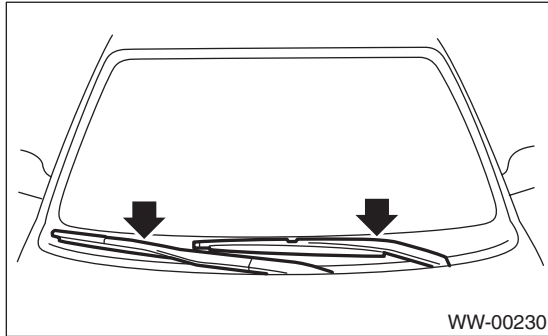

2) Make sure the wiper rubber is securely fastened to the pull stopper (A).

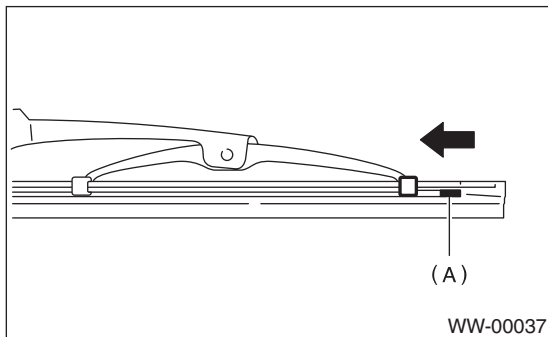


2. REAR

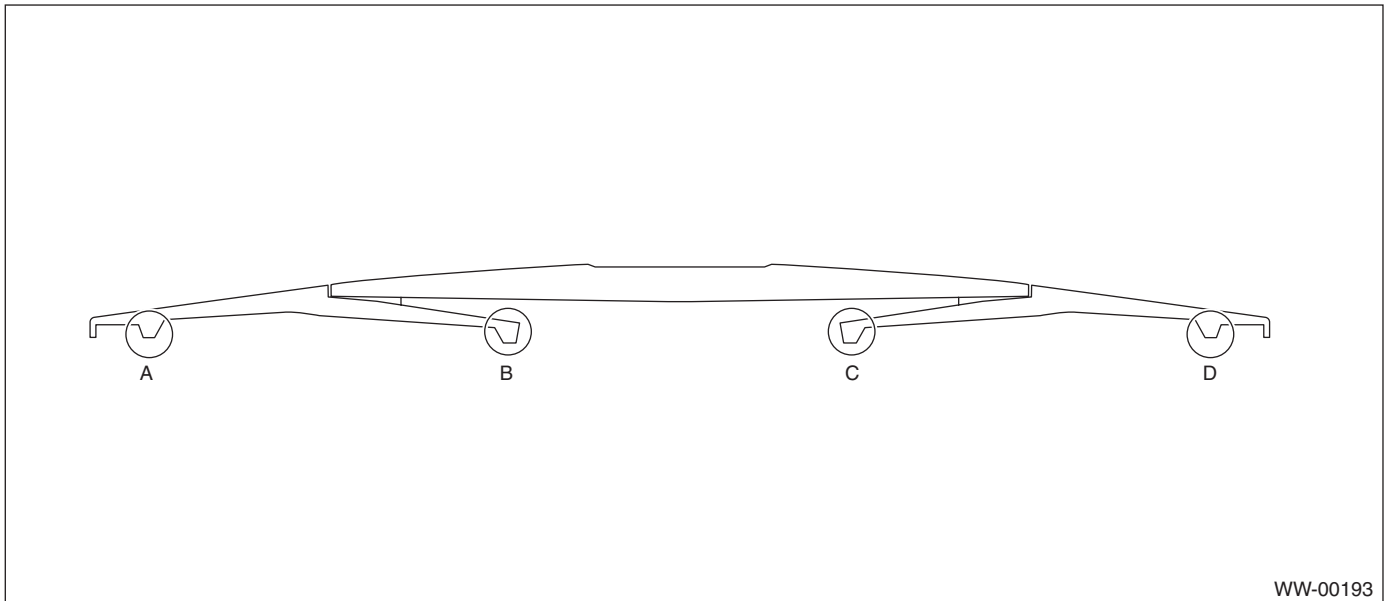


Wiper Blade

WIPER AND WASHER SYSTEMS


1) Insert the wiper rubber into claw B.

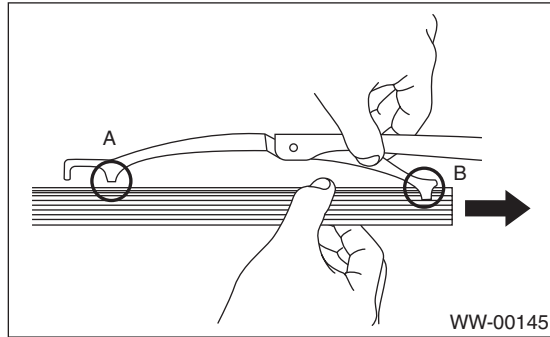

2) Insert the wiper rubber until its top end protrudes approx. 20 mm (0.79 in) from stopper D.

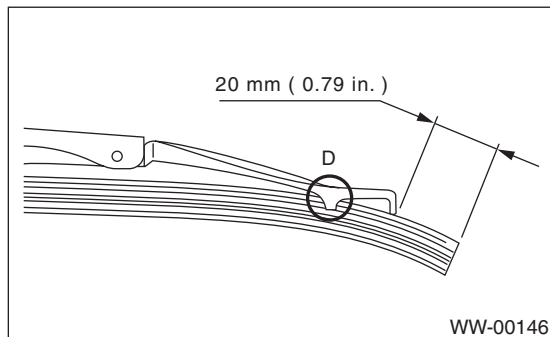

3) Insert the wiper rubber into claw A.

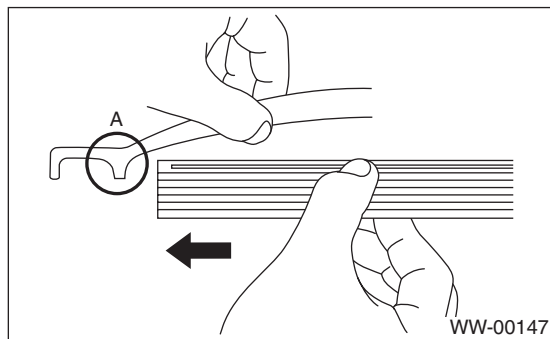

E: INSPECTION

1) When the wiper does not operate properly, inspect the following item.


- Make sure the movable part of wiper blade assembly moves smoothly.
- Make sure the wiper rubber is not deformed or damaged.

2) If damaged, replace with a new part.


5. Washer Tank and Motor

A: REMOVAL

- 1) Open the front hood.
- 2) Disconnect the ground cable from battery.
- 3) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 4) Remove the clip holding washer water supply tap.

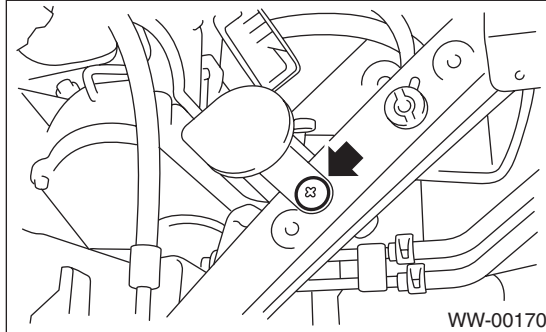

- 5) Remove the two bolts and one nut, hose, connector and washer motor cover, and then remove the washer tank.

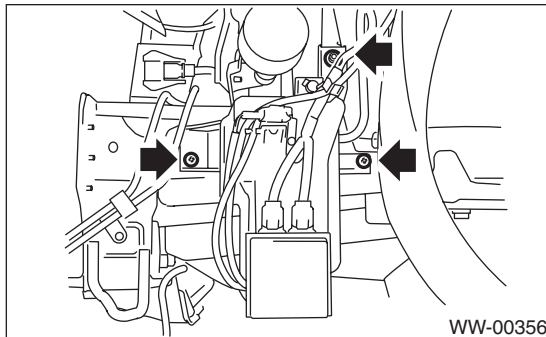

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

C: DISASSEMBLY

Pull out the washer motor from the tank.

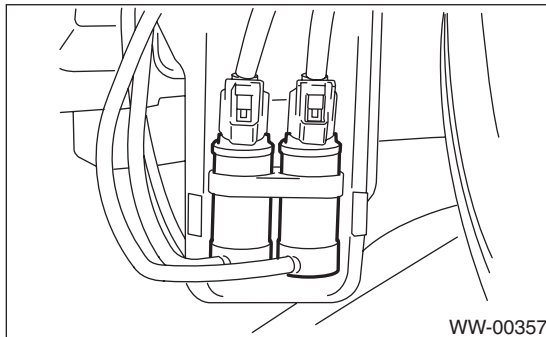


D: ASSEMBLY

- 1) Assemble in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure the motor operates.

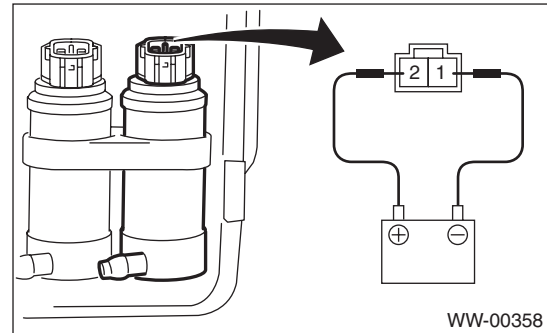


6. Front Wiper Arm

A: REMOVAL

CAUTION:


When standing up the wiper arm, be sure to stand up the driver's side wiper arm first, and then passenger's side wiper arm next. Also, when putting the wiper arms back, be sure to start with passenger's side first, then driver's side next. Doing this in the reverse order may cause the driver's side wiper blade to hit the passenger's side wiper arm and cause damage.

- 1) Open the front hood.
- 2) Remove the cap.
- 3) Remove the nut and remove the wiper arm.

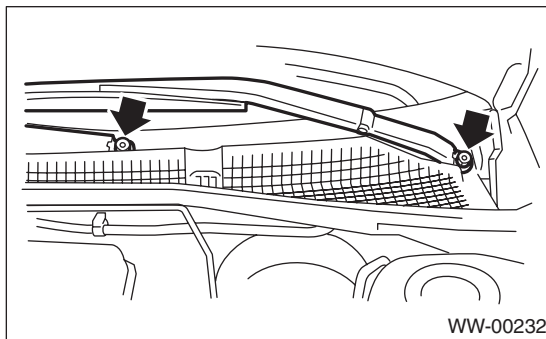


B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the wiper once.
- 3) Align the wiper blade to ceramic print point mark (A) of front window panel.

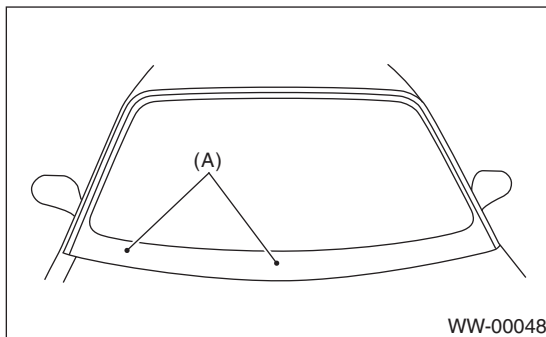

C: ADJUSTMENT

Operate the wiper once. Align the wiper blade to ceramic print point mark (A) of front window panel.

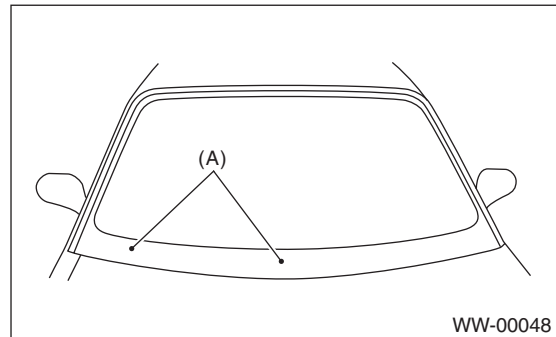

Tightening torque:


Refer to "COMPONENT" of "General Description".

<Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

7. Front Wiper Motor and Link

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cowl panel. <Ref. to EI-39, REMOVAL, Cowl Panel.>
- 3) Disconnect the connector of wiper motor assembly.
- 4) Remove the bolt, and then remove the wiper assembly.

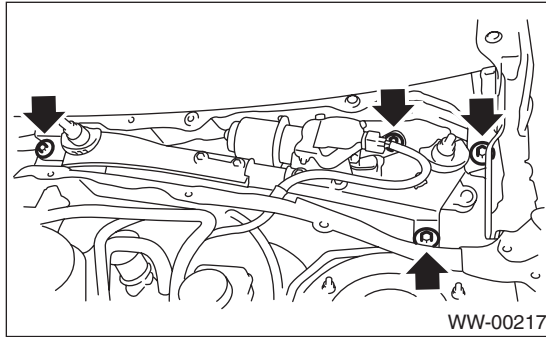

NOTE:

The wiper motor and wiper link is an assembly part and is not to be disassembled.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

Refer to "COMPONENT" of "General Description".


<Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

C: INSPECTION


- 1) When the battery is connected to the terminal of connectors, confirm that the wiper motor operates at low speed.

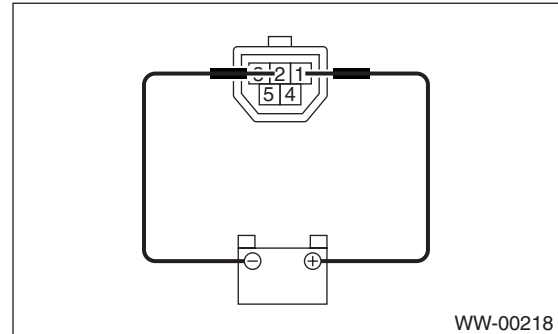


- 2) When the battery is connected to the terminal of connectors, confirm that the wiper motor operates at high speed.

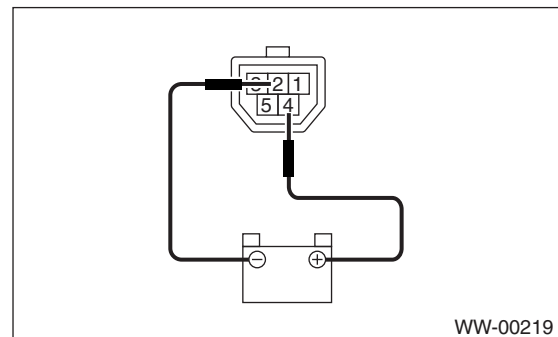

- 3) Connect the battery to the terminals to the connector, then run the wiper motor at low speed and disconnect the terminal in mid motion.

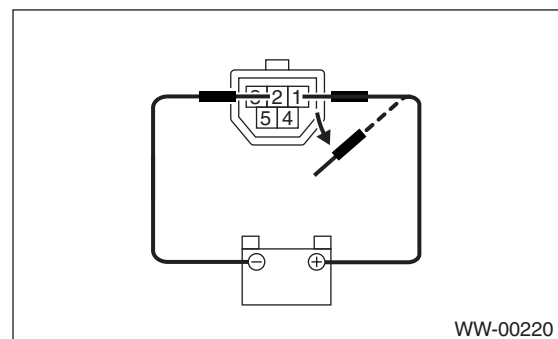


- 4) Connect the battery and confirm that the wiper motor stops at the automatic stop position after the wiper motor operates at low speed again.

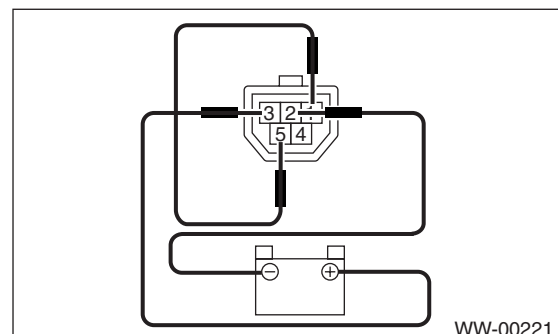

8. Front Washer Nozzle

A: REMOVAL

- 1) Remove the front hood insulator. <Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>
- 2) Hold the claw (A) of the washer nozzle towards the direction of the arrow, and remove the washer nozzle.

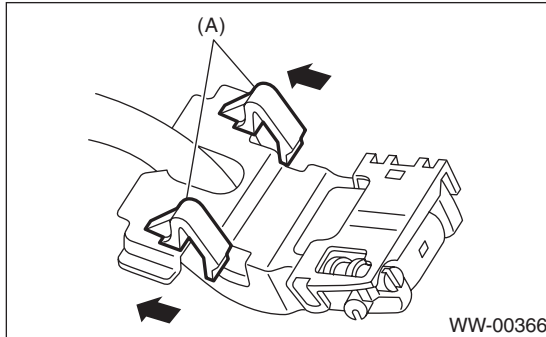

- 3) Remove the washer hose from the washer nozzle.

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the washer nozzle position. <Ref. to WW-16, ADJUSTMENT, Front Washer Nozzle.>

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

D: ADJUSTMENT

CAUTION:


Do not move the spray nozzle area directly to adjust. Doing so will damage the slit and cause improper spray.

- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is at a standstill, adjust the washer injection position as shown in the figure.

Spray position:


A: 250 mm (9.84 in)

B: 535 mm (21.06 in)

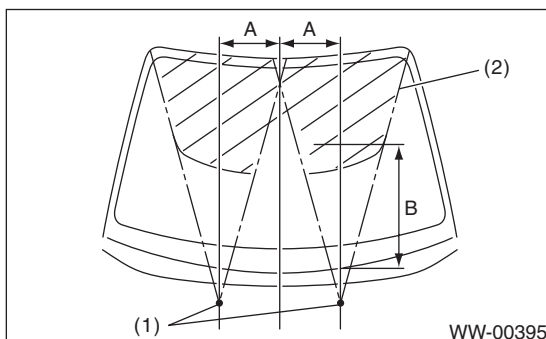

- (1) Nozzle
- (2) Spray area (shaded area)

- 3) Spray angle should be adjusted by rotating adjusting dial (A) with a flat tip screwdriver.

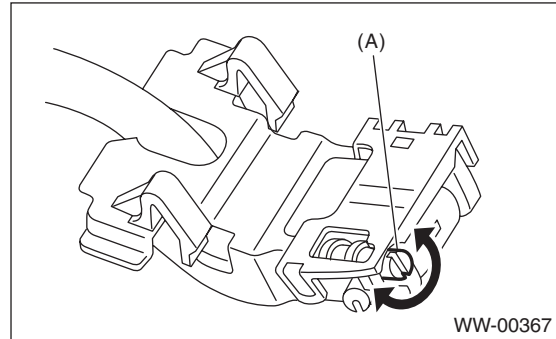


NOTE:

Adjusting dial will return to the original spray angle with 1 rotation.

9. Rear Wiper Arm


A: REMOVAL

- 1) Detach the wiper arm cover (A).
- 2) Remove the nut (B) to remove the wiper arm.

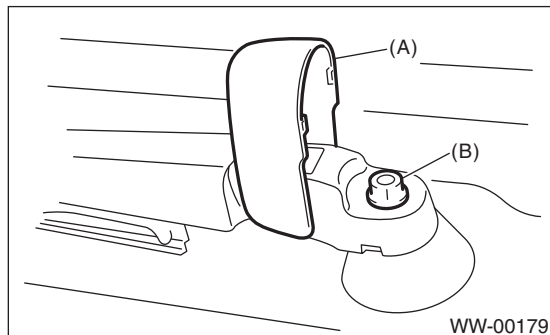

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade with the marking (A) of the glass.

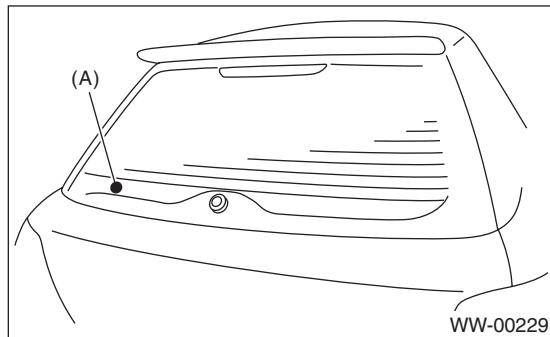


Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to WW-3, REAR WIPER (WAGON MODEL), COMPONENT, General Description.>

C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade with the marking (A) of the glass.

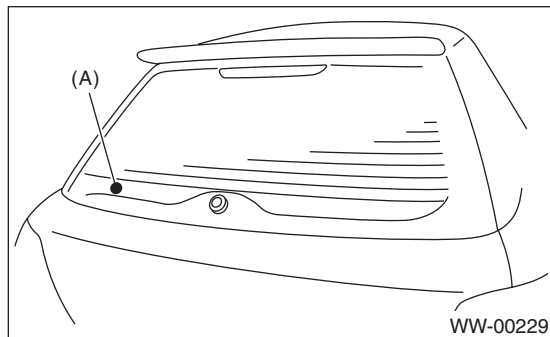


Rear Wiper Motor

WIPER AND WASHER SYSTEMS

10.Rear Wiper Motor


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear wiper arm. <Ref. to WW-17, REMOVAL, Rear Wiper Arm.>
- 3) Remove the rear gate lower trim. <Ref. to EI-66, REMOVAL, Rear Gate Trim.>
- 4) Disconnect the harness connector of wiper motor assembly.
- 5) Remove the bolts to remove wiper motor assembly (A).

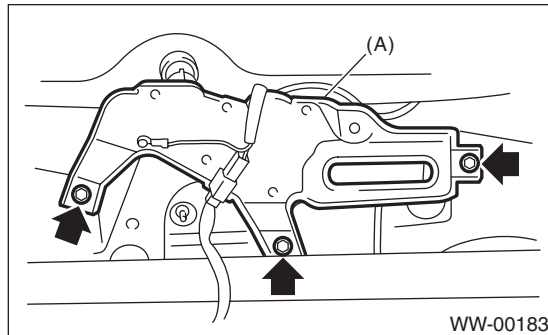

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Be sure that the pivot cap with the arrow mark facing up, as shown in the figure.

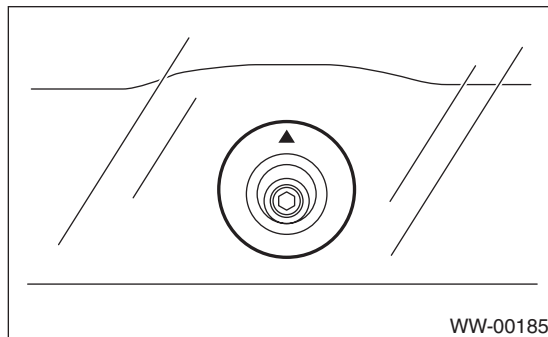


Tightening torque:

Refer to "COMPONENT" of "General Description".


<Ref. to WW-3, REAR WIPER (WAGON MODEL), COMPONENT, General Description.>

C: INSPECTION


- 1) Connect the battery to the wiper motor connector and confirm that wiper motor operates.

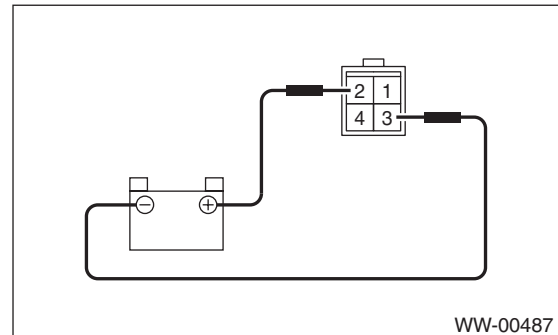

- 2) Connect the battery to the terminals to the connector, then run the wiper motor at low speed and disconnect the terminal in mid motion.

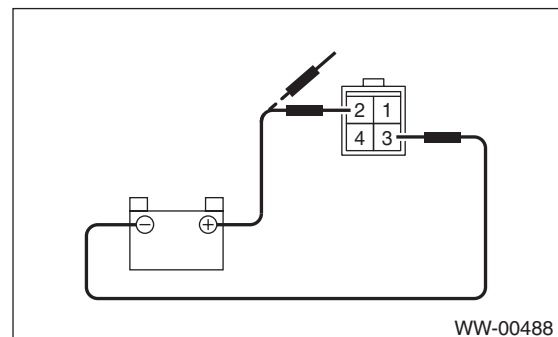


- 3) Connect the battery and confirm that the wiper motor stops at the automatic stop position after the wiper motor operates at low speed again.

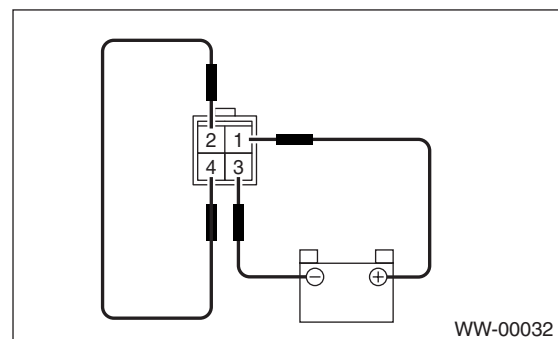

11.Rear Washer

A: REMOVAL

- 1) Detach the roof spoiler. <Ref. to EI-40, REMOVAL, Roof Spoiler.>
- 2) Remove the washer hose from washer nozzle.
- 3) Push the claw of the nozzle from the reverse side of roof spoiler with a flat tip screwdriver or equivalent, and remove the washer nozzle.

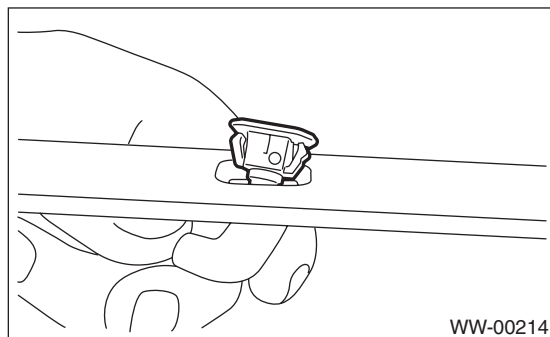

B: INSTALLATION


Install in the reverse order of removal.

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.
- While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.

NOTE:

Washer injection position can not be adjusted.

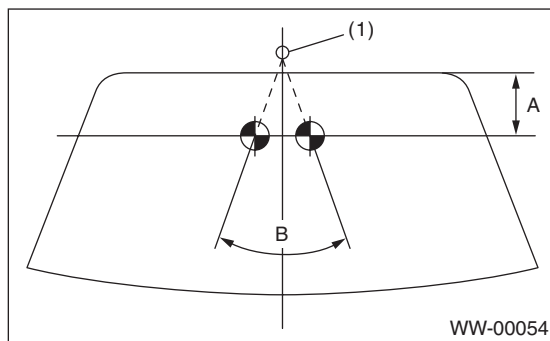

- (1) Nozzle
(A) 70 mm (2.76 in)
(B) 70°

Rear Washer

WIPER AND WASHER SYSTEMS

	Page
1. General Description	2
2. Audio System	3
3. Front Accessory Power Supply Socket System	4
4. Rear Accessory Power Supply Socket System	5
5. Navigation System	6
6. Audio	8
7. Front Speaker	9
8. Tweeter	10
9. Rear Speaker	11
10. Woofer	12
11. Antenna	13
12. Antenna Amplifier	14
13. Noise Suppressor	15
14. Navigation Display	16
15. GPS Antenna	17
16. Navigation Body	18
17. Front Accessory Power Supply Socket	19
18. Rear Accessory Power Supply Socket	20
19. Steering Satellite Switch	21