

2. Schedule

A: MAINTENANCE SCHEDULE 1

1. U.S.

- Other than U5 model

			Maintenance interval [Number of months or km (miles), whichever occurs first]																		Remarks
	Months		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks	
	x 1,000 km		4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192		
	x 1,000 miles		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
1	Engine oil	3.0 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	3.0 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3	Spark plug				R				R				R							R	2.5 L non-turbo model
									R											R	For 2.5 L turbo, 3.0 L model
4	Drive belt(s)				I				I				I		I	R					
5	Camshaft drive belt				I				I				I		I	R					
6	Fuel line				(I)				(I)				(I)		(I)					I	Note 1.
7	Air cleaner element				R				R				R		R					R	Note 2.
8	Cooling system				I				I				I		I					I	
9	Engine coolant				R				R				R		R					R	
10	Clutch system		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
11	Transmission oil				I				I				I		I					I	
12	ATF				I				I				I		I					I	Note 3.
13	Front and rear differential oil				I				I				I		I					I	
14	Brake line		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
15	Brake fluid				R				R				R		R					R	
16	Disc brake pad and disc		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
17	Parking brake		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
18	Suspension		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
19	Wheel bearing								(I)										(I)		
20	Axle boots and joints		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
21	Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note 4.	
22	Steering system (Power steering)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
23	A/C filter	Replace every 12 months or 15,000 km (9,300 miles).																	Note 5.		

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

Schedule

PERIODIC MAINTENANCE SERVICES

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.
4. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
5. When the A/C filter is installed.

• U5 model

		Maintenance interval [Number of months or km (miles), whichever occurs first]												Remarks
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	To be continued to the next table	Remarks
	× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120		
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75		
1	Engine oil		R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R		
3	Spark plug					R				R				
4	Drive belt(s)					I				I				
5	Camshaft drive belt					I				I				
6	Fuel line					(I)				(I)			Note 1.	
7	Air cleaner element					R				R			Note 2.	
8	Cooling system					I				I				
9	Engine coolant					R				R				
10	Clutch system		I		I		I		I	I	I			
11	Transmission oil					I				I				
12	ATF					I				I			Note 3.	
13	Front and rear differential oil					I				I				
14	Brake line		I		I		I		I	I	I			
15	Brake fluid				R				R					
16	Disc brake pad and disc		I		I		I		I	I	I			
17	Parking brake			I		I		I		I	I	I		
18	Suspension			I		I		I		I	I	I		
19	Wheel bearing									(I)				
20	Axle boots and joints			I		I		I		I	I	I		
21	Tire rotation		I	I	I	I	I	I	I	I	I	I	Note 4.	
22	Steering system (Power steering)			I		I		I		I	I	I		
23	A/C filter	Replace every 12 months or 15,000 km (9,300 miles).											Note 5.	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.
4. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
5. When the A/C filter is installed.

Schedule

PERIODIC MAINTENANCE SERVICES

		Maintenance interval [Number of months or km (miles), whichever occurs first]											
Months	Continued from the previous table	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	Remarks	
	× 1,000 km	132	144	156	168	180	192	204	216	228	240		
	× 1,000 miles	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150		
1	Engine oil	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R		
3	Spark plug		R				R				R		
4	Drive belt(s)	I		R				I					
5	Camshaft drive belt	I		R				I					
6	Fuel line	(I)					I			(I)	Note 1.		
7	Air cleaner element	R					R			R	Note 2.		
8	Cooling system	I					I			I			
9	Engine coolant	R					R			R			
10	Clutch system	I		I		I				I			
11	Transmission oil	I				I				I			
12	ATF	I				I				I	Note 3.		
13	Front and rear differential oil	I				I				I			
14	Brake line	I		I		I		I		I			
15	Brake fluid	R				R				R			
16	Disc brake pad and disc	I		I		I		I		I			
17	Parking brake	I		I		I		I		I			
18	Suspension	I		I		I		I		I			
19	Wheel bearing						(I)			(I)			
20	Axle boots and joints	I		I		I		I		I			
21	Tire rotation	I	I	I	I	I	I	I	I	I	I	Note 4.	
22	Steering system (Power steering)		I		I		I		I		I		
23	A/C filter	Replace every 12 months or 15,000 km (9,300 miles).										Note 5.	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it dose not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.
4. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
5. When the A/C filter is installed.

Schedule

PERIODIC MAINTENANCE SERVICES

2. CANADA

		Maintenance interval [Number of months or km (miles), whichever occurs first]																	
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks
	× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	3.0 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	3.0 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug				R				R				R					R	2.5 L non-turbo model
									R									R	For 2.5 L turbo, 3.0 L model
4	Drive belt(s)				I				I				I		I	R			
5	Camshaft drive belt				I				I				I		I	R			
6	Fuel line				(I)				(I)				(I)		(I)			I	Note 1.
7	Air cleaner element				R				R				R		R		R	Note 2.	
8	Cooling system				I				I				I		I		I		
9	Engine coolant				R				R				R		R		R		
10	Clutch system	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
11	Transmission oil			I				I				I		I			I		
12	ATF			I				I				I		I		I	Note 3.		
13	Front and rear differential oil			I				I				I		I		I			
14	Brake line		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
15	Brake fluid			R				R				R		R		R			
16	Disc brake pad and disc		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
17	Parking brake		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
18	Suspension		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
19	Wheel bearing							(I)									(I)		
20	Axle boots and joints		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
21	Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note 4.	
22	Steering system (Power steering)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
23	A/C filter	Replace every 12 months or 15,000 km (9,300 miles).															Note 5.		

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

- This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
- When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- ATF filter is maintenance free part. ATF filter needs replacement, when it has physically rust, damaged or ATF leaked.
- A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
- When the A/C filter is installed.

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
Transmission oil	15 months						R
	24,000 km						
	15,000 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
Front and rear differential oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Parking brake	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
A axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						