


9. Air Cleaner Element


A: REPLACEMENT

- 1) Disconnect the ground cable from battery.

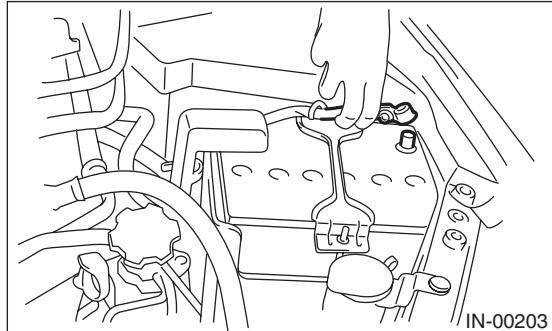


- 2) Disconnect the connector from mass air flow sensor.

- Non-turbo model

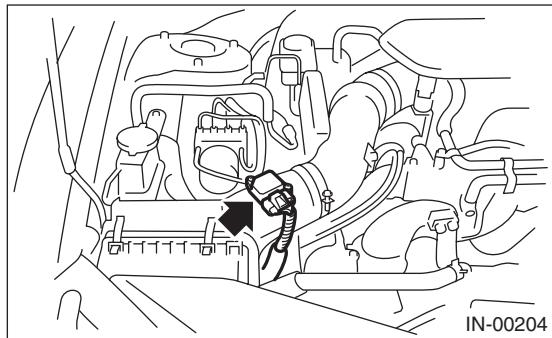


- Turbo model

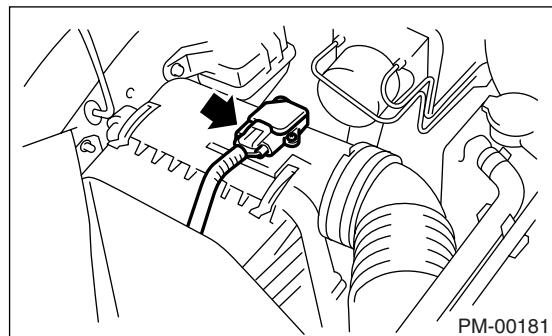


- 3) Loosen the clamps (A) which connect the air cleaner case to intake duct. (Turbo model)

- 4) Remove the clips (B) on air cleaner case.

- Non-turbo model

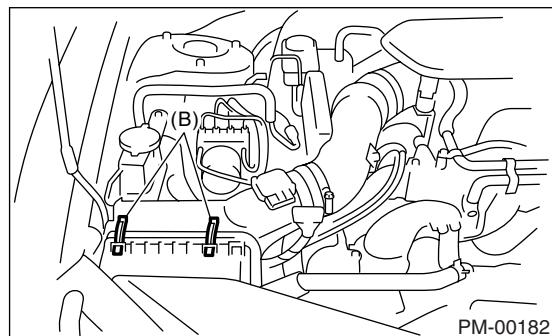


- Turbo model

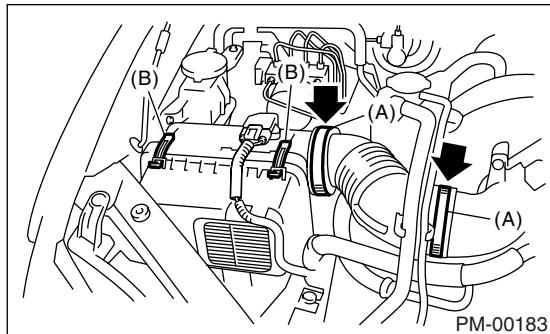

- 5) Remove the air cleaner case (rear).

- 6) Remove the air cleaner element.

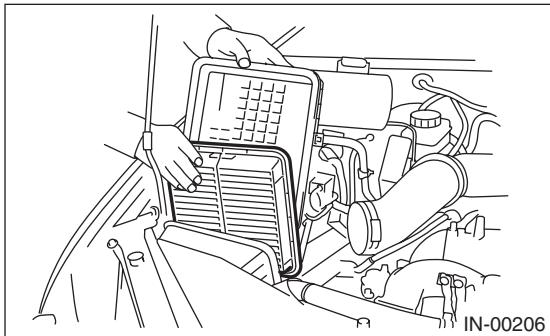


- 7) Install in the reverse order of removal.

CAUTION:

When replacing the air cleaner element, use SUBARU Genuine air cleaner element according to the engine type. Using other air cleaner element may affect engine performance.

NOTE:

- Fasten with a clip after inserting the lower tab of case.

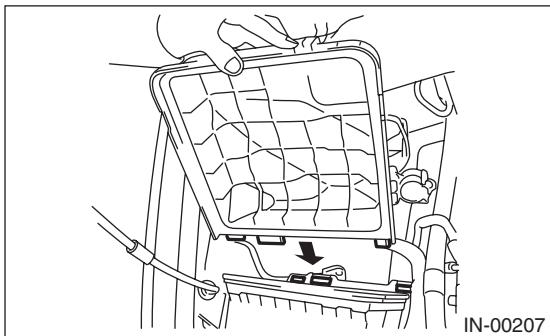

- Refer to "COMPONENT" for tightening torque.

2.5 L non-turbo model

<Ref. to IN(H4SO)-2, COMPONENT, General Description.>

2.5 L turbo model

<Ref. to IN(H4DOTC)-2, COMPONENT, General Description.>

3.0 L model

<Ref. to IN(H6DO)-2, COMPONENT, General Description.>