

Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

9. Fuel Sub Level Sensor

A: REMOVAL

Refer to the “FU” section for the removal procedures. <Ref. to FU(H4SO)-53, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

Refer to the “FU” section for the installation procedures. <Ref. to FU(H4SO)-54, INSTALLATION, Fuel Sub Level Sensor.>