

## EXHAUST


### 4. Rear Exhaust Pipe

#### A: REMOVAL

**CAUTION:**

Be careful not to burn yourself, because the exhaust pipe becomes extremely hot after running.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Separate the rear exhaust pipe from center exhaust pipe.

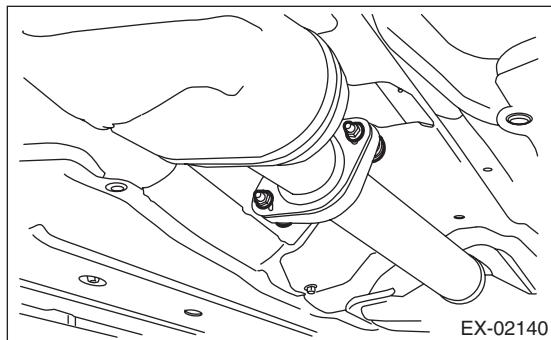


- 4) Separate the rear exhaust pipe from muffler.


**CAUTION:**

Be careful not to pull down the rear exhaust pipe.

- LH side

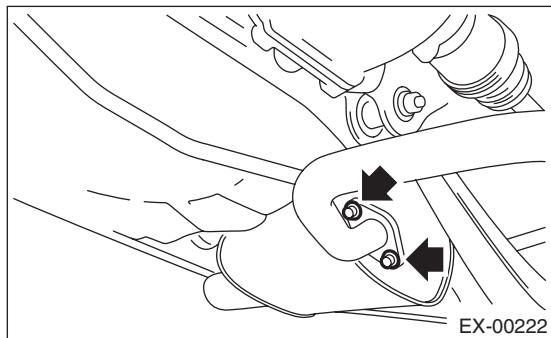


- RH side

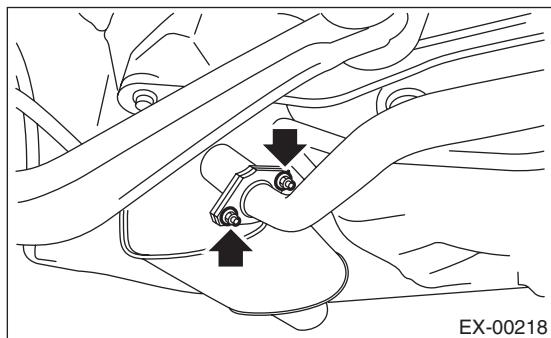

- 5) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 6) Remove the rear exhaust pipe bracket from cushion rubber.

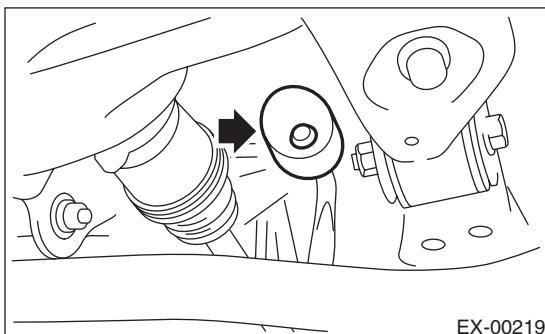


#### B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 2) Install the rear exhaust pipe bracket to cushion rubber.

**NOTE:**

After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

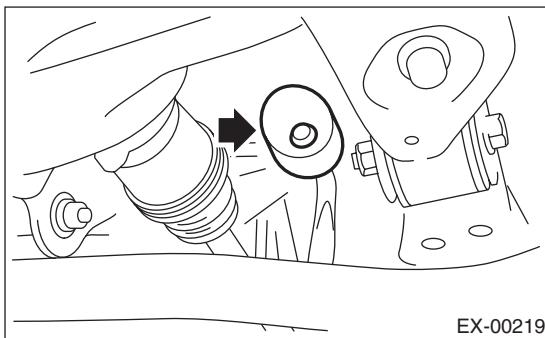

3) Install the rear exhaust pipe to muffler.


NOTE:

Use a new gasket and self-locking nut.


**Tightening torque:**

**48 N·m (4.9 kgf·m, 35.4 ft-lb)**

- LH side

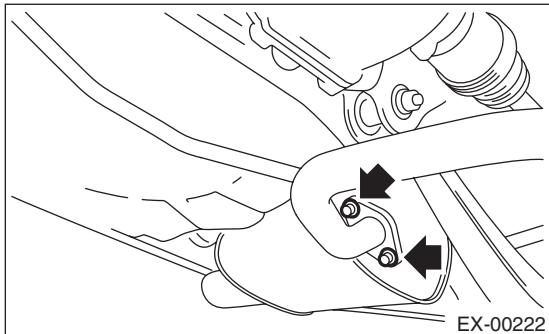


- RH side

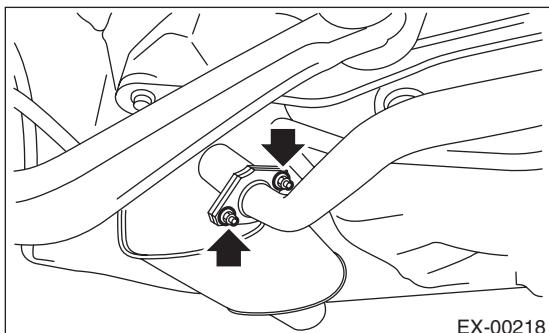

4) Install the rear exhaust pipe to center exhaust pipe.

**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.0 ft-lb)**

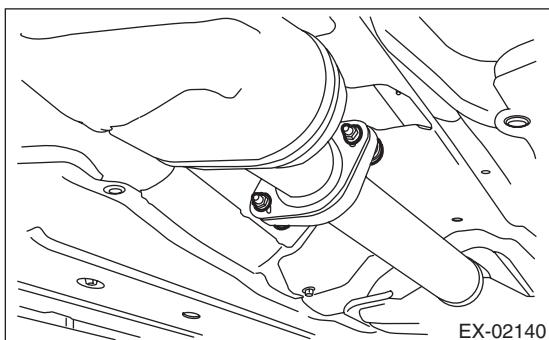

## C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.